



## SPECIFICATIONS

|                     |  |
|---------------------|--|
| <b>Power Supply</b> | 85 to 130 VAC /190 to 250 VAC input<br>4A/2A 50/60Hz input current<br>250 watts of output power  |
| <b>Compliance</b>   | FCC Part 15 Class A, EN 550022 Class A, EN 55024, EN 61000-3-2,<br>EN 61000-3-3<br>UL/CUL 60950, EN 60950, IEC 60950, AS/NZS 60950   |
| <b>Physical</b>     | Dimensions: 2.5-inch H x 4.2-inch W x 9.1-inch D<br>Operating Temperature: 0°C to 50°C<br>Storage Temperature: -20°C to 70°C<br>Relative Humidity: Up to 95 percent, noncondensing |

## INSTALLATION INSTRUCTIONS

1. Disconnect the power cord.



*Disconnect both power cords when installing redundant power supplies.*

2. Use a screwdriver to remove the cover plate (or existing power supply if the part is a replacement) from the appropriate power slot in the NetVanta 5305 base unit.
3. Slide the power supply into the appropriate slot until it is firmly positioned against the chassis.
4. Replace the screw in the front panel and tighten with a screwdriver.
5. Reconnect the power cord(s).
6. Complete the installation of the system as specified in the *NetVanta 5305 Hardware Installation Guide* provided on the *ADTRAN OS System Documentation CD*.



**Important:** For additional details on product features, specifications, installation, and safety, refer to the appropriate *Hardware Installation Guide* on the **ADTRAN OS System Documentation CD** shipped with the base unit and available online at [www.adtran.com](http://www.adtran.com).