

NETVANTA 4660

P/N 17004660F1

GETTING STARTED

The NetVanta 4660 is configured using the command line interface (CLI). Entering a question mark (?) at the command prompt displays contextual help and all commands available from that prompt.

ACCESS THE CLI

Access the AOS CLI using the **CONSOLE** port or a Telnet session. To establish a connection to the unit's **CONSOLE** port, you need the following items:

- PC with VT100 terminal emulation software
- Straight-through serial cable with a DB-9 (male) connector on one end and the appropriate interface for your terminal or PC communication port on the other end



There are many terminal emulation applications available on the web. PuTTY, SecureCRT, and HyperTerminal are a few examples.

1. Connect the DB-9 (male) connector of your serial cable to the **CONSOLE** port on the front panel of the unit.
2. Connect the other end of the serial cable to the terminal or PC.



Many PCs do not come with a standard serial port. A universal serial bus (USB) to serial adapter can be used instead. The drivers for the USB to serial adapter must be installed according to the manufacturer's instructions. If the USB to serial adapter is not properly installed on your PC, you will not be able to communicate with the AOS unit and you should seek support from the USB to serial adapter manufacturer.

3. Provide power to the unit as appropriate. Refer to the [NetVanta 4660/5660 Hardware Installation Guide](#) at <https://supportforums.adtran.com> for more details.
4. Once the unit is powered up, open a VT100 terminal session using the following settings: 9600 baud, 8 data bits, no parity bits, and 1 stop bit. Press **<Enter>** to activate the AOS CLI.
5. Enter **enable** at the **>** prompt. Enter the enable password when prompted. The default password is **password**.

You can also access the CLI from a Telnet client. In order to do this, you must know the IP address of the AOS device. If you do not know the unit's IP address, you must use the **CONSOLE** port to access the CLI. To access the CLI using a Telnet client, follow these steps:

1. Connect the unit to your PC, using an Ethernet cable connected to the **GIG 0/2** Gigabit Ethernet port on the front of the unit.
2. Open a Telnet client on your computer. You can access the Telnet client by navigating to **Start > Run** and entering **telnet 10.10.10.1** (Windows® XP). If you are running Windows Vista or later, you must install the Telnet client before you access it. To do this, navigate to **Start > Control Panel > Programs and Features > Turn Windows features on or off > Telnet Client Option** and select **OK**. **10.10.10.1** is the default unit IP address. If you have changed your unit's IP address, you will need to enter that address.
3. Log into the unit using the default password (**password**).
4. Enter **enable** at the **>** prompt and enter the enable password when prompted. The default password is **password**.

COMMON CLI COMMANDS

The following are common CLI commands and tips for getting started with the CLI.

- Entering a question mark (?) shows contextual help and options. For example, entering ? at the prompt will show all commands available from that prompt.
- To view interface statistics, enter **show interface** *<interface type>* *<interface number>*.
- To view the current configuration, enter **show running-config**.
- To view all the IP addresses currently configured, enter **show ip interface brief**.
- To view the AOS version, serial number, and other information, enter **show version**.
- To view the routing table, enter **show ip route**.
- To save the current configuration, enter **write**.

CONFIGURE THE UNIT'S IP ADDRESS



The configuration parameters used in the examples outlined in this document are for instructional purposes only. Replace all underlined entries (example) with your specific parameters to configure your application.

The NetVanta 4660 unit's IP address can be configured from either the Gigabit Ethernet subinterface (for a user network interface (UNI)) or the system management Ethernet virtual connection (EVC) (for a network-to-network interface (NNI)). The following steps assign an IP address and subnet mask for the **GIG 0/2.1** Gigabit Ethernet subinterface.

1. At the # prompt, enter **config terminal**.
2. At the (**config**)# prompt, enter **interface gig 0/2.1** to access the configuration parameters for the Gigabit Ethernet subinterface.
3. Enter **ip address 192.168.1.1 255.255.255.0** to assign an IP address to the Ethernet subinterface using a 24-bit subnet mask.
4. Enter **exit** to exit the Gigabit Ethernet subinterface commands and return to the Global Configuration mode.
5. Enter **ip route 0.0.0.0 0.0.0.0 192.168.1.254** to add a default route to the route table. **0.0.0.0** is the default route and the default subnet mask, and **192.168.1.254** is the next-hop IP address to which the AOS unit should send all of its traffic. You will need to enter the proper route, subnet mask, and gateway for your network. This information is typically provided by an Internet service provider (ISP) or local network administrator.
6. Enter **do write memory** to save the current configuration.

ENABLE TELNET USER LOGIN ACCESS

The following steps create a password of **adtran** for Telnet access. By default, Telnet access is enabled with a password of **password**.

1. Verify that the prompt of your unit displays **(config)#**.
2. Enter **line telnet 0 4** to change the configuration parameters for the Telnet sessions.
3. Enter **login** to require a password for Telnet access.
4. Enter **password adtran** to change the login password for the Telnet sessions.
5. Enter **exit** to return to the Global Configuration mode.
6. Verify that the prompt of your unit displays **(config)#**.
7. Enter **do write memory** to save the current configuration.

CONFIGURE YOUR APPLICATION

The applications you will need to configure vary by product and by network. Review the list of defaults for your unit before deciding what applications to configure. The following are some common applications that should be configured on startup. These instructions are all available on [ADTRAN's Support Community](#).

Layer2/Layer3 Carrier Ethernet Services in AOS	Configuring Port Forwarding in AOS
Configuring Ethernet OAM Using Y.1731	Configuring DHCP Server in AOS
Configuring Network Synchronization in AOS	Configuring Internet Access (Many to One NAT) with the Firewall Wizard in AOS
Network Monitoring in AOS	Configuring QoS in AOS



NOTE

Important: For additional details on product features, specifications, installation, and safety, refer to *NetVanta 4660/5660 Hardware Installation Guide* at <https://supportforums.adtran.com>.

NETVANTA 4660 DEFAULTS

Feature	Default Value
User Name	admin
Password	password
Enable Password	password
HTTP Server	Disabled
Event History	Enabled
IP Routing	Enabled

RESTORING FACTORY DEFAULTS

The factory default configuration can be restored by following these steps:

1. Access the unit's CLI and enter **enable** at the **>** prompt.
2. Enter **factory-default** at the **#** prompt. The device will warn the user that restoring the factory settings will erase the current startup configuration and reboot the unit.
3. When prompted to restore the factory default settings, enter **y** (yes).
4. Upon reboot, you will have to reconfigure the unit. Follow the steps outlined previously in this document to reconfigure the unit.