



BARSKA®

M16 ELECTRO SIGHT

Warning: Never attempt to look into the sun with this or any other optical enhancing device. Doing so may cause severe and permanent eye damage. Always follow safe firearm handling procedures when using or handling a firearm.

DESCRIPTION




The BARSKA M16 Electro Sight is constructed of high grade Alloys, it is built to withstand extreme shooting and is extremely reliable. It is easy to use and is fast and accurate. The M16 Electro Sight has an Illuminated Reticle with 7 settings, allowing you to adjust the intensity of the Reticle.

MOUNTING

Your M16 Electro Sight has a built in standard 5/8 mount. This mount will attach your sight to your firearm.

1. Loosen the clamp bolts on the mount. Turn counter clockwise.
2. Now place the mount on the rail of the the riflescope.
3. Tighten the bolts but make sure that you do not tighten them all the way.
4. Look through the sight and adjust it, by puling the sight forwards and backwards. Do this until the full field of view is in focus.
5. Once your able to see the entire field of view tighten the mount all the way.

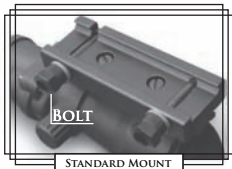

STANDARD MOUNT

BATTERY

The M16 Electro Sight comes equipped with 2 LR44 button cell batteries. Each battery has a voltage of 1.5 volts. The battery compartment is located on the mount and is directly under the eyepiece. (See example below)



LR44 CELL BATTERIES

Changing the Battery

When your M16 Electro Sight becomes dim or will not light at all:

1. Remove the battery compartment cap off, by twisting the cap counter clockwise.
2. Once the cap is off and the old batteries have been removed place the new batteries into the compartment positive (+) side up.
3. Replace the cap back on and turn clockwise. Ensure that you place the cap on tightly. This will help keep moisture out of the Electro Sight.



BATTERY COMPARTMENT

WINDAGE & ELEVATION

You can find the windage on the right side of the sight. This adjusts the horizontal axis of the sight.

The elevation is located on the top of the sight. This adjusts the vertical axis of the sight.

To access the windage and elevation turrets, remove the caps that cover the turrets. Turn counter clockwise to loosen the caps. Once the turrets are exposed, use a small coin to turn the turrets.

Elevation

Turn the turret counter clockwise to raise the reticle.
Turn the turret clockwise to lower the reticle.

Windage

Turn the turret counter clockwise to make the reticle move to the right. Turn the turret clockwise to make the reticle move to the left.



WINDAGE & ELEVATION TURRETS