

BT-370

Tips Installation:



1: Match the power pin connector



2: Connect power connector to BT-370




3: Press power button to power ON



4: Red LED light should light up like this

Without SATA HDD connected

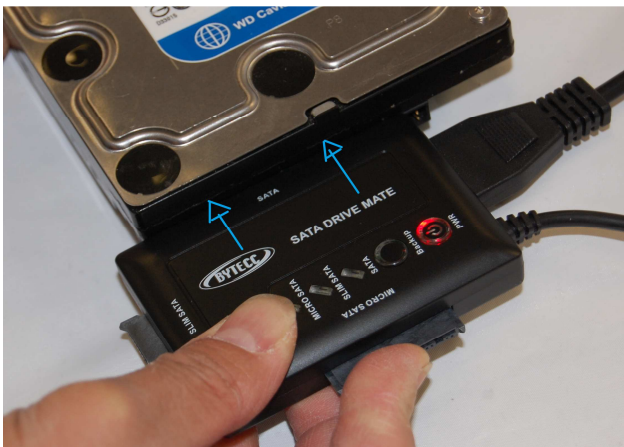

5: Connect BT-370 to HDD with Power still ON

