



---

# SOLO TV SOUND SYSTEM

## UNIVERSAL REMOTE CONTROL

---

Owner's Guide | Brugervejledning | Bedienungsanleitung | Guía de usuario | Notice d'utilisation  
Manuale di istruzioni | Felhasználói útmutató | Gebruiksaanwijzing | Podręcznik użytkownika  
Guia dos proprietários | Omistajan opas | Bruksanvisningen

តួអង្គប្រើប្រាស់ | 사용자 안내서 | 用户指南 | 使用者指南 | オーナーズガイド | دليل المالك

# SAFETY INFORMATION

## Please read this guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy its advanced features. Please save this guide for future reference.



**WARNING:**

- Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.



**CAUTION:** Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.



廢電池請回收

Please dispose of used batteries properly, following any local regulations. Do not incinerate.

Names and Contents of Toxic or Hazardous Substances or Elements						
Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	0	0	0	0	0
Metal parts	X	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0
0: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.						

©2012 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

**PROGRAMMING YOUR REMOTE** **4**

---

Introduction .....	4
To control your TV .....	4
To control a combination device .....	4

**CONTROLLING SYSTEM SOURCES** **5**

---

Turning the system on and off .....	5
Controlling the volume .....	5
Changing the source control mode .....	5
Watching TV .....	7
Watching a DVD or Blu-Ray™ disc .....	8
Navigating on-screen menus and guides .....	9
Using playback controls .....	10

**CARE AND MAINTENANCE** **11**

---

Troubleshooting .....	11
Replacing the remote batteries .....	11
Customer service .....	12
Limited warranty .....	12

# PROGRAMMING YOUR REMOTE

---

## Introduction

 
---

The Bose® Solo TV sound system universal remote can be programmed to control your TV, DVD or Blu-ray Disc™ player, cable/satellite box, and VCR. The universal remote can be programmed to control up to five audio/video devices (sources).

## To control your TV

---

1. Locate the TV section in the *Universal Remote Device Codes* book included with the universal remote.
2. Locate the device code(s) for your brand of TV and select a code from the list.
3. Press and hold the **Setup** button until all five source buttons light.

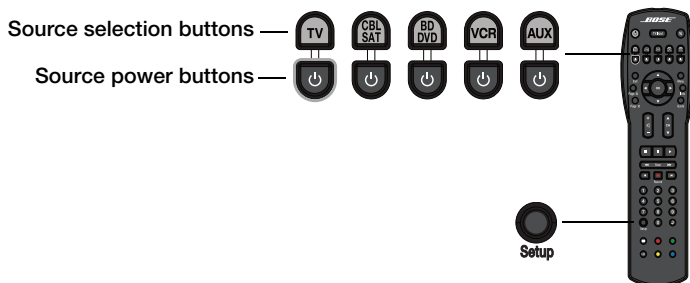

4. Press the **TV** selection button. Only this button will remain lit.
5. On the number keypad, enter the device code for your brand of TV. The **TV** selection button should blink twice and then turn off.

---

**Note:** If all five source buttons flash rapidly three times, the code was invalid. Go back to Step 1 and try another code.

---

6. Point the remote at your TV and press the TV power button. If your TV does not respond, go back to Step 1 and try another code.

**To control other devices,** follow the same procedure for each of your other devices, using the appropriate device code and source button for each one.

## To control a combination device

---

If you are programming the remote to control a combination device that has more than one source, such as a VCR/DVD unit, you can program the associated code for either source button. For convenience, you may want to program the code twice – once for the VCR button and once for the DVD button.

To find the right device code, first search the “COMBINATION” listings in the *Universal Remote Device Codes* book. If you cannot find a valid code there, then search the listings for individual device types (TV, CBL, VCR, DVD, etc.).

### Turning the system on and off

---

Press the system power button to turn your Bose® Solo TV sound system on or off.

System power

 


### Controlling the volume

---

Press the volume **+** or **-** to raise or lower the volume, respectively.

Press the mute button to silence or restore the system audio.

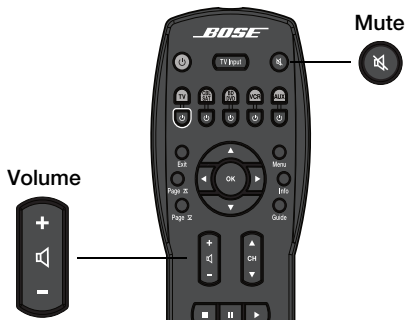


### Changing the source control mode

---

You can easily switch control from one source (device) to another by pressing the appropriate source button at the top of the remote. In addition to controlling the selected source, the remote will always control the basic speaker functions (on/off, volume, mute) of your Solo TV sound system.

To control a source:

1. Press the power button (  ) for the source you want to turn on.
2. Press the source selection button for the source you want to control. The source button will flash to verify your choice.

## CONTROLLING SYSTEM SOURCES

3. If necessary, Press the **TV Input** button to select the correct input on your TV.

You may need to press the **TV Input** button several times in order to select the correct TV input for the source you want to watch.

On some TVs, the **TV Input** button will display an onscreen menu. Put your Bose remote in the TV control mode to navigate and close this menu.

---

**Note:** To control your TV and other devices using the Bose remote, you must first program the remote with a device code for each device. See "Introduction" on page 4.

---



**TV Input**

Selects the input on your TV to the source you want to watch.



Puts the remote in TV control mode. Allows you to control TV functions, such as channel selection and menu navigation.



Puts the remote in control of your cable or satellite set top box. Allows you to control cable/satellite set-top box functions, such as channel selection and Electronic Program Guide navigation. If your cable/satellite box includes a Digital Video Recorder (DVR), the remote will control both cable/satellite and DVR functions.



Puts the remote in control of your Blu-ray Disc™, DVD or CD player. Allows you to control the functions in the player you are using.



Puts the remote in VCR control mode. Allows you to control VCR functions, such as play options and menu navigation.



Puts the remote in control of the additional device that does not have a dedicated remote source button. Allows you to control the functions of the source designated as the AUX source.



Source power buttons. Press to turn the corresponding source on or off.

# Watching TV

## To watch TV using your cable/satellite set-top box:

 
1. Press the **TV** power button to turn on your TV.




2. Press the TV Input button to select the correct input on your TV.



3. Press the **CBL-SAT** power button to turn on your cable/satellite set-top box.

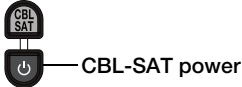


 4. Press the **CBL-SAT** source button to switch to cable/satellite mode.

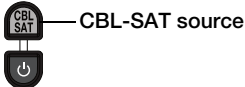

The **CBL-SAT** button flashes to verify that the remote is in the CBL-SAT mode.

 5. Select a channel:

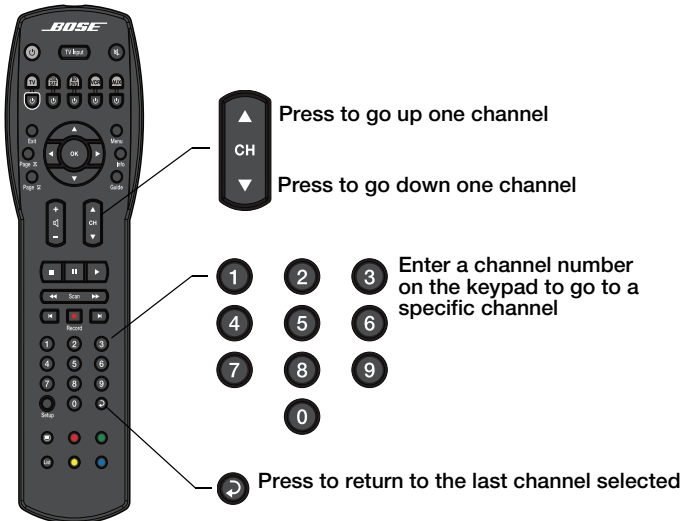

To view and search through program guides, see “Navigating on-screen menus and guides” on page 9.

### To watch TV using the tuner in your TV:

 
1. Press the **TV** power button to turn on your TV.



2. Press the TV Input button to select the correct input on your TV.



3. Press the **TV** source button to switch to the TV mode (the **TV** button will flash).



4. Select a channel.

### Watching a DVD or Blu-Ray™ disc

---

 
1. Press the **TV** power button to turn on your TV.




2. Press the TV Input button to select the correct input on your TV.



3. Press the **BD-DVD** power button to turn on your DVD player.



 4. Press the **BD-DVD** source button to switch to DVD mode.



The **BD-DVD** button flashes to verify that the remote is in the BD-DVD mode.


5. Use the remote to control playback functions and navigate disc or player menus. See “Using playback controls” on page 10 for a description of the playback buttons.



# Navigating on-screen menus and guides

 
The menu and program selection buttons will control only one source at a time. Select the source you want to use first.

**Note:** If some navigation functions are not working for a particular source, try programming a different device code into the remote.

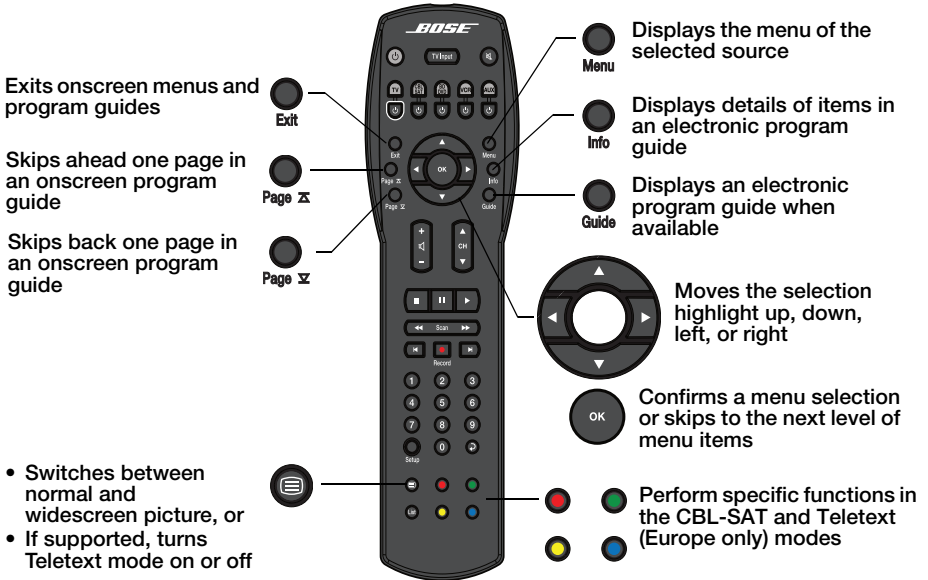

# Using playback controls

 The functionality of the source playback buttons may vary depending on the type and brand of your device. For more information, see the owner's guide that came with your device.

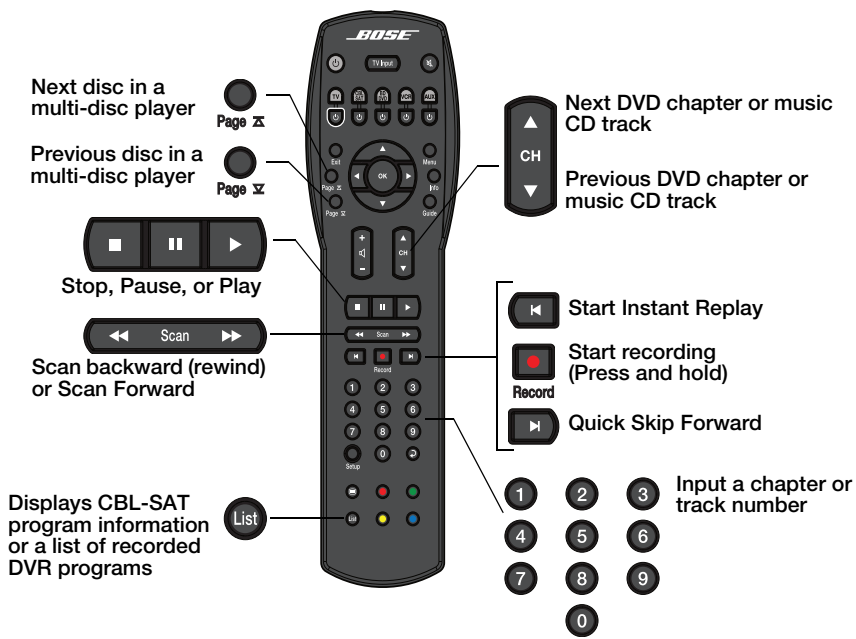


## Troubleshooting

Problem	What to do
Remote control is inconsistent or does not work	<ul style="list-style-type: none"> <li>• Check the batteries to be sure they are installed properly or need to be replaced. See “Replacing the remote batteries” on page 11.</li> <li>• Point the remote control at the device you want to control.</li> <li>• Check that the remote button for the selected source flashes when you press the volume button.</li> <li>• Check that the power indicator on the speaker array flashes when you press the remote volume or mute button.</li> <li>• There may be more than one device code for your brand of device. Find your device and brand in the <i>Universal Device Codes</i> book. Try programming another code, then check the device for improved functionality.</li> </ul>

## Replacing the remote batteries

Replace both batteries when the remote control stops operating or its range seems reduced. Alkaline batteries are recommended.

 1. Slide open the battery compartment cover on the back of the remote.

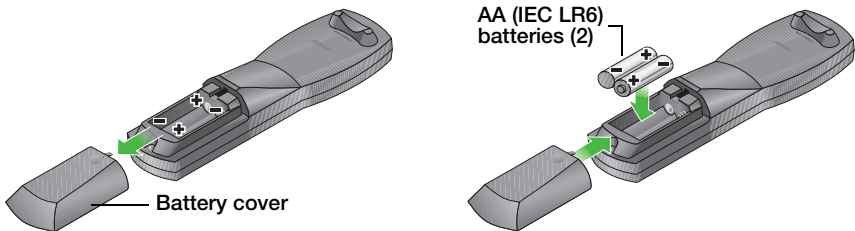

2. Remove both batteries.  
Be sure to dispose of the batteries according to the regulations in your area.
3. Insert two AA (IEC-LR6) 1.5V batteries, or the equivalent. Match the + and – symbols on the batteries with the + and – markings inside the compartment.
4. Slide the battery compartment cover back into place.

# Customer service

---

For additional help in solving problems, contact Bose® Customer Service. Refer to the contact information sheet included with the Bose Solo TV sound system.

## Limited warranty

---

Your Bose Solo TV sound system universal remote is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

### **What you must do to obtain Limited Warranty Service:**

Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit **Global.Bose.com/register** for Bose contact information in your country/region) for specific return and shipping instructions;
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.





354607-0010

***BOSE***<sup>®</sup>  
***Better sound through research***<sup>®</sup>

©2012 Bose Corporation, The Mountain,  
Framingham, MA 01701-9168 USA  
AM354607 Rev. 00