

JMA-5206/HS  
JMA-5210-4/6  
JMA-5220-7/9

---

**MARINE RADAR  
EQUIPMENT**

**INSTRUCTION  
MANUAL**



*Japan Radio Co., Ltd.*



---

---

# ◆◆◆PRECAUTIONS BEFORE OPERATION◆◆◆

## ■Cautions for high voltage

High voltages from hundreds volts to tens of thousands volts are to be applied to the electronic equipment such radio and radar devices. You do not face any danger during normal operation, but sufficient cares are required for maintenance, inspection and adjustment of their internal components. (Maintenance, check-up and adjustment of the inside of the equipment are prohibited except by maintenance specialists.)

High voltages of tens of thousands volts are so dangerous as to bring an instantaneous death from electric shock, but even voltages of hundred volts may sometimes lead to a death from electric shock. To prevent such an accident, make it a rule to turn off the power switch, discharge capacitors with a wire surely earthed on an end make sure that internal parts are no longer charged before you touch any parts inside these devices. At the time, wearing dry cotton gloves ensures you further to prevent such danger. It is also a necessary caution to put one of your hands in the pocket and not to use your both hands at the same time.

It is also important to select a stable foothold always to prevent additional injuries once you were shocked by electricity. If you were injured from electric shock, disinfect the burn sufficiently and get it taken care of promptly.

## ■What to do in case of electric shock

When finding a victim of electric shock, turn off the power source and earth the circuit immediately.

If it is impossible to turn off the circuit, move the victim away promptly using insulators such as dry wood plate and cloth without touching the victim directly.

In case of electric shock, breathing may stop suddenly if current flows to the respiration center in the brain. If the shock is not so strong, artificial respiration may recover breathing. When shocked by electricity, the victim will come to look very bad with weak pulse or without beating, resulting in unconsciousness and rigidity. In this case, it is necessary to perform an emergency measure immediately.

# ◆◆◆FIRST-AID TREATMENTS◆◆◆

## ☆First-aid treatments

As far as the victim of electric shock is not in dangerous condition, do not move him and practice artificial respiration on him immediately. Once started, it should be continued rhythmically.

- (1) Do not touch the victim confusedly as a result of the accident, but the rescuer may also get an electric shock.
- (2) Turn off the power source calmly and move the victim away quietly from the electric line.
- (3) Call a physician or ambulance immediately or ask someone to call a doctor.
- (4) Lay the victim on his back and loosen his necktie, clothes, belt, etc.
- (5)
  - a. Examine the victim's pulse.
  - b. Examine his heartbeat bringing your ear close to his heart.
  - c. Examine his breathing bringing the back of your hand or your face close to his face.
  - d. Check the size of the pupils of his eyes.
- (6) Open the victim's mouth and take out artificial teeth, cigarette or chewing gum if any. Keep his mouth open, stretch his tongue and insert a towel or the like in his mouth to prevent the tongue from suffocating. (If it is hard to open his mouth due to set teeth, open it with a screwdriver and insert a towel in this mouth.)
- (7) Then, wipe his mouth so that foaming mucus does not accumulate inside.

---


---

## ☆When pulse is beating but breathing has stopped

(Mouth-to-mouth respiration) Fig. 1

- (1) Tilt the victim's head back as far as this face looks back. (A pillow may be inserted his neck.)
- (2) Push his jaw upward to open his throat wide (to spread his airway).
- (3) Pinch the victim's nostrils and take a deep breath, block his mouth completely with yours and blow into his mouth strongly. Take a deep breath again and blow into his mouth. Continue this 10 to 15 times a minutes (blocking his nostrils).
- (4) Carefully watch that he has recovered his natural breathing and atop practicing artificial respiration.
- (5) If it is difficult to open the victim's mouth, insert a rubber or vinyl tube into one of his nostrils and blow into it blocking the other nostril and his mouth completely.
- (6) When the victim recovers consciousness, he may try to stand up suddenly, but let him lie calmly and serve him with a cup of hot coffee or tea and keep him warm and quiet. (Never give him alcoholic drinks.)

### Method of mouth-to-mouth respiration by raising head

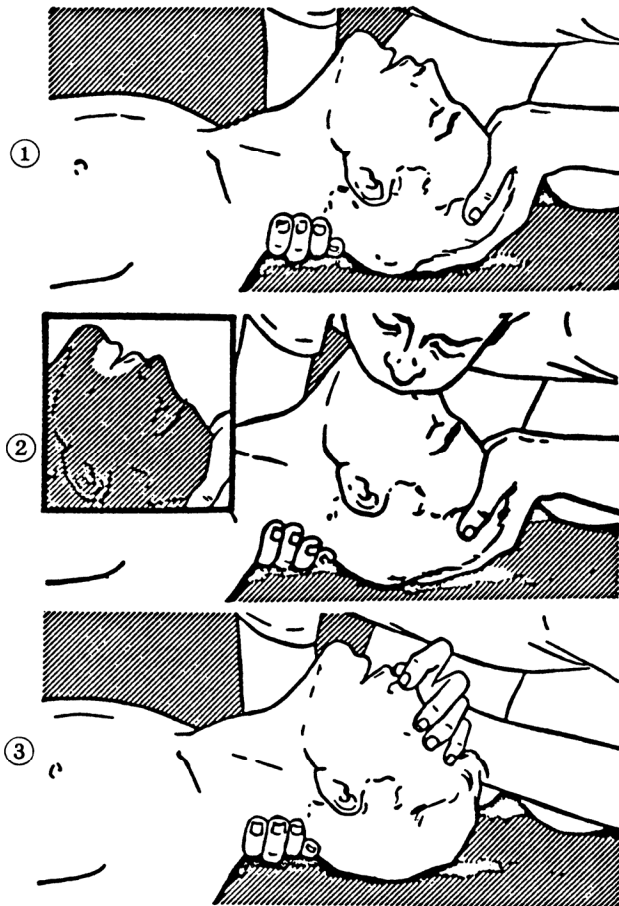

- (1) Raise the victim's head. Support his forehead with one of your hand and his neck with the other hand. →①  
When you tilt his head backward, the victim, in most cases, opens his mouth to the air. This makes mouth-to mouth respiration easy.
- (2) Cover his mouth as widely as possible with yours and press your cheek against his nose →②  
or, pinch his nostrils with your fingers to prevent air from leaking. →③
- (3) Blow into his lungs. Continue blowing into his mouth until his breast swells. Blow into his mouth as quickly as possible for the first 10 times.

Fig. 1 Mouth-to mouth respiration

## ☆When both pulse and breathing have stopped

Perform the (Cardiac massage) Fig. 2 and (Mouth-to-mouth respiration) Fig. 1

When no pulse has come not to be felt, his pupils are open and no heartbeat is heard, cardiac arrest is supposed to have occurred and artificial respiration must be performed.

- (1) Place your both hands, one hand on the other, on the lower one third area of his breastbone and compress his breast with your elbows applying your weight on his breast so that it is dented about 2cm (Repeat compressing his breast 50 times or so a minutes). (Cardiac massage)
- (2) In case of one rescuer,  
Repeat cardiac massages about 15 times and blow into his mouth 2 times quickly, and repeat this combination.  
In case of two rescuers,  
One person repeats cardiac massages 15 times while the other person blow into his mouth twice, and they shall repeat this combination. (Perform the cardiac massage and mouth-to-mouth respiration)
- (3) Examine his pupils and his pulse sometimes. When the both have returned to normal, stop the artificial respiration, serve him with a cup of hot coffee or tea and keep him warm and calm while watching him carefully. Commit the victim to a medical specialist depending on his condition. (Never give him alcoholic drinks.) To let him recover from the mental shock, it is necessary for persons concerned to understand his situations and the necessary treatment.

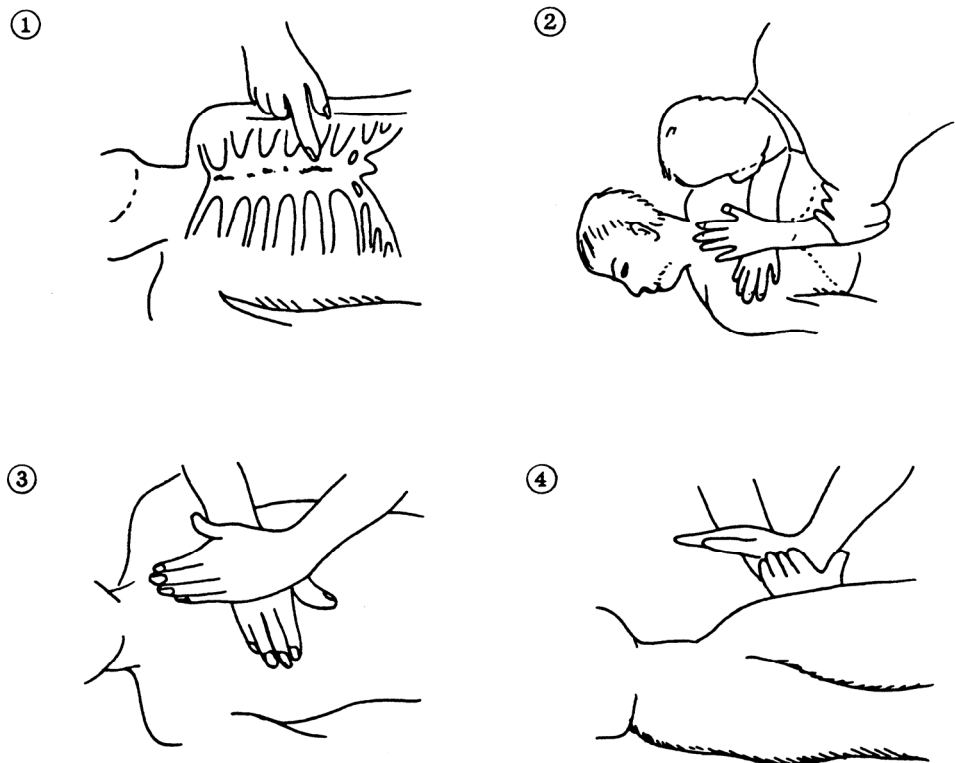


Fig. 2 Cardiac massage

# PREFACE

Thank you very much for purchasing the JRC marine radar equipment, JMA-5200 series.

This equipment is a marine radar equipment designed to obtain safe operation of marine ships.

This equipment consists of a radar signal transmitter-receiver unit, a LCD display unit and a scanner unit as its main units.




- Before operating the equipment, be sure to read this instruction manual carefully for correct operation.
- Maintain this instruction manual so that operators can refer to it at anytime.

Refer to this manual when any inconvenience or defect occurs.

# ●Before Operation●

## Pictorial Indication

Various pictorial indications are included in this manual and are shown on these equipment so that you can operate them safety and correctly and prevent any danger to you and/or to other persons and any damage to your property during operation. Such indications and their meanings are as follows.  
Please understand them before you read this manual:

	<b>DANGER</b>	This indication is shown where incorrect equipment operation due to negligence may cause death or serious injuries.
	<b>WARNING</b>	This indication is shown where any person is supposed to be in danger of being killed or seriously injured if this indication is neglected and these equipment are not operated correctly.
	<b>CAUTION</b>	This indication is shown where any person is supposed to be injured or any property damage is supposed to occur if this indication is neglected and these equipment are not operated correctly.

## Examples of Pictorial Indication



Electric Shock

The  $\triangle$  mark represents CAUTION (including DANGER and WARNING). Detailed contents of CAUTION (“Electric Shock” in the example on the left.) is shown in the mark.



Disassembling Prohibited



Prohibited

The  $\otimes$  mark represents prohibition. Detailed contents of the prohibited action (“Disassembling Prohibited” in the example on the left.) is shown in the mark.



Disconnect the power plug



Instruction

The  $\bullet$  mark represents instruction. Detailed contents of the instruction (“Disconnect the power plug “ in the example on the left.) is shown in the mark.

## Warning Label

There is a warning label on the top cover of the equipment.  
Do not try to remove, break or modify the label.



## ● PRECAUTIONS ●

# DANGER



**Never conduct inspection or repair work of equipment components.**

**Inspection or repair work by uncertified personnel may result in fire hazard or electrocution.**

**For inspection and repair work of equipment components, consult with our branch office, branch shop, sales office, or our distributor in your district.**



**When conducting maintenance, make sure to turn the main power off.**

**Failure to comply may result in electrocution.**



**Turn off the main power before cleaning the equipment. Especially when a rectifier is used, make sure to turn it off since voltage is still outputted from the rectifier even after the indicator and the radar are turned off. Failure to comply may result in equipment failure, or death or serious injury due to electric shock.**



**When conducting maintenance work on the antenna, make sure to turn its main power off.**

**Failure to comply may result in electrocution or injuries.**

# DANGER



**Make sure to turn off the antenna operation switch. Failure to comply may result in injuries caused by physical contact with the rotating antenna.**

# WARNING



**Never directly touch the internal components of the antenna, receiver/transceiver, or indicator. Direct contact with these high-voltage components may cause electrocution. For maintenance, inspection, or adjustment of equipment components, consult with our branch office, branch shop, sales office, or our distributor in your district.**

**To contact our sales department, branch offices, branch shops, and sales offices:**

**Please refer to the "Office List" at the end of the document.**



**Do not get close to the radiant section of the antenna. It is a rotating part, and it may cause injuries if it suddenly starts rotating and consequently hits the body. It is recommended that the radiant section be installed at a high place such as on the roof of the wheelhouse, on the flying bridge, on the trestle, or on the radar mast so that no one can get close to it. When any work must be done on the antenna, make sure to turn the antenna switch off.**

# WARNING



## About radiation from the antenna:

Never stare at the antenna from a distance closer than that specified below for each type of antenna when it is emitting radiation. Being within the specified distance from the center of the front face of the antenna may cause radiation exposure which could result in injuries (especially of the eyes).

NKE-2102/2252 ( radio-density : 10 W/m<sup>2</sup>): 0.6 m



Make sure to install the antenna at a place higher than human height.

Direct exposure to electromagnetic waves at close range will have adverse effects on the human body.



Direct exposure to electromagnetic waves at close range will have adverse effects on the human body. When it is necessary to get close to the antenna for maintenance or inspection purposes, make sure to turn the indicator power switch to "OFF" or "STBY."

Direct exposure to electromagnetic waves at close range will have adverse effects on the human body.



When conducting maintenance work, make sure to turn off the power and unplug the power connector J1 of the processor so that the power supply to the equipment is completely cut off.

Some equipment components can carry electrical current even after the power switch is turned off, and conducting maintenance work without unplugging the power connector may result in electrocution, equipment failure, or accidents.

# WARNING



When cleaning the display screen, do not wipe it too strongly with a dry cloth. Also, do not use gasoline or thinner to clean the screen. Failure to comply will result in damage to the screen surface.



Do not change MBS Level/Area unless absolutely necessary. Incorrect adjustment will result in deletion of nearby target images and thus collisions may occur resulting in death or serious injuries.



When disposing of used lithium batteries, be sure to insulate the batteries by attaching a piece of adhesive tape on the  $\oplus$  and  $\ominus$  terminals. Failure to comply may cause heat generation, explosion, or fire when the batteries get shorted out.

# CAUTION



Use the radar only as a navigation aid. The final navigation decision must always be made by the operator him/herself. Making the final navigation decision based only on the radar display may cause accidents such as collisions or running aground.

# CAUTION



Use ATA only as a navigation aid. The final navigation decision must always be made by the operator him/herself. Making the final navigation decision based only on ATA information may cause accidents.

ATA information such as vector, target numerical data, and alarms may contain some errors. Also, targets that are not detected by the radar cannot be acquired or tracked.

Making the final navigation decision based only on the radar display may cause accidents such as collisions or running aground.



A malfunction may occur if the power in the ship is instantaneously interrupted during operation of the radar. In this case, the power should be turned on again.



When using the [AUTO SEA] function, never set the suppression level too high canceling out all image noises from the sea surface at close range.

Detection of not only echoes from waves but also targets such as other ships or dangerous objects will become inhibited.

When using the [AUTO SEA] function, make sure to choose the most appropriate image noise suppression level.



When using the [AUTO RAIN] function, never set the suppression level too high canceling out all image noises from the rain or snow at close range.

Detection of not only echoes from the rain or snow but also targets such as other ships or dangerous objects will become inhibited.

When using the [AUTO RAIN] function, make sure to choose the most appropriate image noise suppression level.

# CAUTION



When setting a guard zone, make sure to properly adjust gain, sea-surface reflection suppression level, and rain/snow reflection suppression level so that the optimal target images are always on the radar screen. The guard zone alarm will not be activated for targets undetected by the radar, and it may result in accidents such as collisions.



The simulation function is used exclusively for deciding whether or not ATA is properly operating. Therefore, never use this function unless you wish to check ATA operations.

Note especially that, if this function is used during actual navigation, simulated targets are displayed and may become confused with other actual targets. Therefore, never use this function during actual navigation.



Optimal values have been set for VD LEVEL and CONSTANT; therefore, never change their values unless absolutely necessary. Failure to comply may result in accidents that would lower ATA performance.



Make sure to shut off the main power before replacing parts. Failure to comply may result in electrocution or equipment failure.



When replacing magnetrons, make sure to shut off the main power and let the equipment stand for more than 5 minutes to discharge the high-voltage circuit. Failure to comply may result in electrocution.

# CAUTION



**Make sure to take off your watch when your hand must get close to the magnetron.  
Failure to comply may result in damage to the watch since the magnetron is a strong magnet.**



**Make sure that two or more staff member work together when replacing the LCD. If only one person attempts to replace the LCD, he/she may drop it and become injured.**



**Do not directly touch the inverter circuit of the LCD display with a bare hand since high voltage temporarily remains in the circuit even after the main power is shut off.  
Failure to comply may result in electrocution.**



**Any adjustments must be made by specialized service personnel.  
Incorrect settings may result in unstable operation.**



**Do not make any adjustments during navigation. Failure to comply may result in adverse effects on the radar function which may lead to accidents or equipment failure.**



**Any adjustments must be made by specialized service personnel.  
Failure to comply may result in accidents or equipment failure.**



**Do not make any adjustments during navigation. Failure to comply may result in adverse effects on the radar function which may lead to accidents or equipment failure.**



# CAUTION



**Do not change the quantization level settings unless absolutely necessary. If set at an inappropriate value, the acquisition or tracking function of ATA deteriorates, and this may lead to accidents.**



# EQUIPMENT APPEARANCE



Scanner Unit Type NKE-2064/HS (4 feet)



Scanner Unit Type NKE-2102-4 (4 feet)



Scanner Unit Type NKE-2102-6 (6 feet)



Scanner Unit Type NKE-2252-7 (7 feet)



**Scanner Unit Type NKE-2252-9 (9 feet)**



**NDC-1340 Processor Unit (Desktop Type)**



**NWZ-164 Display Unit (Desktop Type)  
NCE-7699 Operation Unit (Desktop Type)**

**NCD-4340 Display Unit (Desktop Type)**

---

---

# CONTENTS

---

---

PREFACE.....	i
BEFORE OPERATION.....	ii
PRECAUTIONS.....	iii
EQUIPMENT APPEARANCE.....	xi
GLOSSARY.....	xx

## **1. GENERAL AND EQUIPMENT COMPOSITION**

1.1 FUNCTIONS.....	1-1
1.1.1 FUNCTION OF THIS SYSTEM.....	1-1
1.2 FEATURES.....	1-2
1.3 CONFIGURATION.....	1-4
1.4 EXTERIOR DRAWINGS.....	1-5
1.5 GENERAL SYSTEM DIAGRAMS.....	1-15

## **2. NAMES AND FUNCTIONS OF CONTROL PANEL KEYS AND FUNCTIONS OF SOFTWARE BUTTONS**

2.1 NAMES AND FUNCTIONS OF CONTROL PANEL KEYS.....	2-1
2.2 FUNCTIONS OF SOFTWARE BUTTONS.....	2-7

## **3. BASIC OPERATION**

3.1 FLOW OPERATION.....	3-1
3.1.1 POWER ON AND START THE SYSTEM.....	3-2
3.1.2 OBSERVE AND ADJUST VIDEO.....	3-3
3.1.3 ACQUIRE AND MEASURE DATA.....	3-3
3.1.4 END THE OPERATION AND STOP THE SYSTEM.....	3-4
3.2 MENU COMPOSITION.....	3-5
3.2.1 OVERVIEW OF MENU STRUCTURE.....	3-5
3.2.2 BASIC MENU OPERATION.....	3-6

3.3	PREPARATION .....	3-8
3.3.1	ADJUST DISPLAY BRILLIANCE.....	3-8
3.3.2	ADJUST CONTRAST .....	3-8
3.3.3	ADJUST OPERATION PANEL BRILLIANCE [PANEL].....	3-9
3.3.4	SWITCH DAY/NIGHT MODE [DAY/NIGHT].....	3-9
3.3.5	ADJUST BRILLIANCE OF INFORMATION ON RADAR DISPLAY (BRILLIANCE SETTING) .....	3-10
3.3.6	ADJUST SOUND VOLUME (BUZZER VOLUME) .....	3-11
3.3.7	RESET ALARM BUZZER [ALARM ACK] .....	3-11
3.3.8	SET DISPLAY COLOR.....	3-12
3.4	BASIC OPERATIONS .....	3-14
3.4.1	START TRANSMISSION [TX/PRF].....	3-14
3.4.2	STOP TRANSMISSION [STBY].....	3-14
3.4.3	CHANGE RANGE (OBSERVATION RANGE SCALE) [RANGE+/-].....	3-14
3.4.4	TUNE .....	3-15
3.4.5	CONTROL SENSITIVITY [GAIN/PL].....	3-15
3.4.6	SUPPRESS SEA CLUTTER [AUTO-SEA].....	3-16
3.4.7	SUPPRESS RAIN/SNOW CLUTTER [AUTO-RAIN].....	3-18
3.4.8	REJECT RADAR INTERFERENCE [IR] .....	3-20
3.4.9	HIDE/DISPLAY RANGE RINGS (RINGS).....	3-21
3.4.10	HIDE SHIP'S HEADING LINE (HL OFF).....	3-21
3.4.11	HIDE GRAPHICS INFORMATION ON RADAR DISPLAY (GRAPHIC DISPLAY) .....	3-22
3.5	GENERAL OPERATIONS .....	3-23
3.5.1	MOVE CROSS CURSOR MARK BY TRACKBALL.....	3-23
3.5.2	USE EBLs (ELECTRONIC BEARING LINES) [EBL1/2] .....	3-24
3.5.3	SET EBL OPERATION (EBL1 /2 SETTING) .....	3-26
3.5.4	DISPLAY VARIABLE RANGE MARKERS [VRM1/VRM2].....	3-29
3.5.5	DISPLAY PARALLEL INDEX LINES (PARALLEL INDEX LINE) .....	3-32
3.5.6	SWITCH BEARING DISPLAY MODE [AZI MODE] .....	3-40
3.5.7	SWITCH TRUE/RELATIVE MOTION DISPLAY MODE [TM/RM].....	3-41
3.5.8	MOVE OWN SHIP'S DISPLAY POSITION [OFF CENT].....	3-42
3.5.9	DISPLAY OTHER SHIPS' TRAILS [TRAILS] .....	3-43
3.5.10	SWITCH PULSE LENGTH (GAIN/PL) .....	3-46
3.5.11	EXPAND TARGETS (TARGET ENHANCE).....	3-47
3.5.12	USE VIDEO PROCESS (PROCESS) .....	3-48
3.5.13	ZOOM .....	3-49
3.5.14	USE MARKER [MOB] .....	3-50
3.5.15	MARKING [MARK].....	3-51

---

3.5.16	OPERATE EBL MANEUVER FUNCTION (EBL MANEUVER) .....	3-52
3.5.17	OPERATE MULTI-FUNCTION CONTROL [MULTI] .....	3-55
3.5.18	OPERATE USER KEY SWITCHES [USER KEY 1/2] .....	3-57
3.5.19	OPERATION OF GUARD ZONE [ATA GUARD ZONE] .....	3-59
3.5.20	RADAR ALARM (RADAR ALARM) .....	3-62
3.6	DISPLAY OWN SHIP'S TRACK .....	3-66
3.6.1	DISPLAY OWN SHIP'S TRACK (DISPLAY OWN TRACK) .....	3-66
3.6.2	SET OWN SHIP'S TRACK DATA STORAGE INTERVAL (OWN TRACK INTERVAL) .....	3-68
3.6.3	CLEAR OWN SHIP'S TRACK DATA (CLEAR OWN TRACK) .....	3-69
3.6.4	CANCEL STORING OF OWN SHIP'S TRACK DATA (OWN TRACK MEMORY) .....	3-70
3.7	DISPLAY CHARTS .....	3-71
3.7.1	DISPLAY COASTLINE ROM CARD PRODUCED BY JRC .....	3-71
3.7.2	DISPLAY ERC CARD .....	3-72
3.7.3	FILL CHARTS (FILL LAND AREA) .....	3-73
3.8	DISPLAY NAVIGATION INFORMATION .....	3-74
3.8.1	DISPLAY WAYPOINT MARKS (WAYPOINT DISPLAY) .....	3-74
3.8.2	DISPLAY NAVIGATION INFORMATION (NAV DISPLAY SETTING) .....	3-75
3.8.3	CREATE/EDIT NAVIGATION INFORMATION (EDIT USER MAP) .....	3-76
3.8.4	SET NAVIGATION INFORMATION (USER MAP SETTING) .....	3-82
3.8.5	SET AND DISPLAY GEODETIC SYSTEM .....	3-89
3.9	OPERATE PERFORMANCE MONITOR (PM DISPLAY) .....	3-91
3.9.1	OPERATION PROCEDURES .....	3-91
3.10	APPLIED OPERATIONS .....	3-97
3.10.1	SET RADAR SIGNAL PROCESSING (PROCESS SETTING) .....	3-97
3.10.2	SET RADAR TRAILS (RADAR TRAILS SETTING) .....	3-100
3.10.3	SET CURSOR (CURSOR SETTING) .....	3-104
3.10.4	SET SCREEN .....	3-105
3.10.5	SET SCANNER (TRX SETTING) .....	3-109
3.10.6	SET CHART DISPLAY (MAP SETTING) .....	3-111
3.10.7	SET LORAN C (LORAN C CORRECTION) .....	3-123
3.11	USE FUNCTION SWITCH [FUNC] .....	3-124
3.11.1	OPERATION PROCEDURES .....	3-124
3.11.2	FUNCTION SETTING MENU ITEMS .....	3-125
3.11.3	OVERVIEW OF FUNCTION OPERATIONS .....	3-126
3.11.4	OVERVIEW OF STORED FUNCTION SETTING DATA .....	3-129
3.11.5	PERSONAL INFORMATION (PIN SETTING) .....	3-130

3.12	USING CARD.....	3-133
3.12.1	SAVE IN AND TRANSFER TO CARD (MEM CAPA/COPY) .....	3-134
3.12.2	ERASE/INITIALIZE CARD MEMORY (CLR MEM INIT CARD).....	3-140

## **4. MEASUREMENT OF RANGE AND BEARING**

4.1	MEASUREMENT BY TRACKBALL .....	4-1
4.2	MEASUREMENT BY RANGE RINGS.....	4-2
4.3	MEASUREMENT BY EBLs AND VRMS .....	4-3
4.4	MEASUREMENT BETWEEN TWO OPTIONAL POINTS .....	4-5

## **5. HOW TO USE ATA/ARPA**

5.1	PREPARATION .....	5-2
5.1.1	COLLISION AVOIDANCE .....	5-3
5.1.2	DEFINITIONS OF SYMBOLS .....	5-6
5.1.3	SETTING COLLISION DECISION CRITERIA (CPA/TCPA LIMIT) ....	5-8
5.1.4	SETTING VECTORS (VECTOR TIME).....	5-9
5.1.5	SETTING CPA RING (CPA RING) .....	5-10
5.1.6	SETTING AUTOMATIC ACQUISITION KEY ASSIGNMENT (GZ ALARM KEY SETTING).....	5-11
5.2	ATA OPERATION .....	5-12
5.2.1	ACQUIRING TARGET.....	5-12
5.2.2	CANCELING UNWANTED TARGETS .....	5-14
5.2.3	DISPLAYING TARGET ID NO. (TARGET NUMBER DISPLAY).....	5-15
5.2.4	ATA/ARPA DATA DISPLAY .....	5-16
5.2.5	TARGET DATA DISPLAY .....	5-21
5.2.6	ALARM DISPLAY .....	5-25
5.2.7	ATA SIMULATION .....	5-29
5.2.8	SETTING ATA/ARPA TRACKS (ATA TRACK SETTING) .....	5-35

---

5.3	AIS OPERATION .....	5-42
5.3.1	INITIAL SETTING .....	5-43
5.3.2	SETTING AIS DISPLAY FUNCTION (AIS FUNCTION).....	5-45
5.3.3	ACTIVATING AIS TARGETS .....	5-46
5.3.4	DEACTIVATING AIS TARGETS .....	5-47
5.3.5	SETTING AIS SYMBOL DISPLAY FUNCTION (AIS SYMBOL DISPLAY).....	5-48
5.3.6	DISPLAYING NUMERIC DATA OF AIS TARGETS.....	5-49
5.3.7	SETTING ATA/ARPA SYMBOL DISPLAY FUNCTION (ATA SYMBOL DISPLAY) .....	5-51
5.3.8	SETTING AIS FILTER (AIS FILTER SETTING).....	5-52
5.3.9	DECIDING AIS TARGET AND ARPA TARGET AS THE SAME ONE (IDENTICAL DISTANCE) .....	5-55
5.3.10	CONDITIONS FOR DECIDING AIS TARGET TO BE LOST .....	5-57
5.3.11	DISPLAYING AIS SYMBOLS .....	5-58
5.3.12	AIS ALARM DISPLAY .....	5-59
5.3.13	RESTRICTIONS .....	5-60

## **6. TRUE AND FALSE ECHOES ON DISPLAY**

6.1	RADAR WAVE WITH THE HORIZON .....	6-2
6.2	STRENGTH OF REFLECTION FROM THE TARGET .....	6-4
6.3	SEA CLUTTERS.....	6-5
6.4	FALSE ECHOES .....	6-6
6.5	DISPLAY OF RADAR TRANSPONDER (SART) .....	6-9

## **7. MAINTENANCE**

7.1	ROUTINE MAINTENANCE.....	7-1
7.2	MAINTENANCE ON EACH UNIT .....	7-2

## **8. TROUBLE SHOOTING AND ADJUSTMENT**

8.1	PERFORMANCE CHECK .....	8-1
8.2	FAULT FINDING .....	8-21
8.3	TROUBLE SHOOTING.....	8-22
8.4	REPLACEMENT OF MAJOR PARTS.....	8-27
8.5	ADJUSTMENTS .....	8-34
8.6	SETTING .....	8-69

## **9. AFTER-SALES SERVICE**

## **10. DISPOSAL**

10.1	DISPOSAL OF THE UNIT .....	10-1
10.2	DISPOSAL OF USED BATTERIES .....	10-2
10.3	DISPOSAL OF USED MAGNETRON .....	10-3
10.4	DISPOSAL OF TR-TUBE .....	10-4

## **11. SPECIFICATIONS**

11.1	JMA-5206/HS TYPE RADAR .....	11-1
11.2	JMA-5210-4/6 TYPE RADAR .....	11-2
11.3	JMA-5220-7/9 TYPE RADAR .....	11-3
11.4	SCANNER (NKE-2062/HS) .....	11-4
11.5	SCANNER (NKE-2102) .....	11-5
11.6	SCANNER (NKE-2252-7/9) .....	11-6
11.7	DISPLAY UNIT(NCD-4340) .....	11-7
11.8	PROCESSOR UNIT(NDC-1340) .....	11-8
11.9	PLOTTER UNIT .....	11-10
11.10	ATA .....	11-12
11.11	KEYBOARD UNIT (NCE-7699) .....	11-13
11.12	INPUT ENABLE SIGNAL .....	11-14
11.13	OUTPUT ENABLE SIGNAL .....	11-15
11.14	STANDARD CONFIGURATION .....	11-16
11.15	EQUIPMENT DISTANCE BETWEEN INSTRUMENTS .....	11-17
11.16	OTHERS (OPTION) .....	11-18



---

---

## **APPENDIX**

FIGURE 1	JMA-5206/HS, JMA-5210-4/6, JMA-5220-7/9 BLOCK DIAGRAM
FIGURE 2	JMA-5206/HS INTERCONNECTION DIAGRAM
FIGURE 3	JMA-5210-4/6 INTERCONNECTION DIAGRAM
FIGURE 4	JMA-5220-7/9 INTERCONNECTION DIAGRAM
FIGURE 5	PRIMARY POWER SUPPLY DIAGRAM TYPE JMA5206/HS, JMA-5210-46,JMA-5220-7/9
FIGURE 6	PROCESSOR UNIT NDC-1340 NTERCONNECTION DIAGRAM
FIGURE 7	KEY BOARD UNIT, NCE-7699 INTER CONNECTION DIAGRAM
FIGURE 8	JMA-5200 ON-SCREEN CONTROLS

## **ENVIRONMENTAL PROTECTION**

NAMES & CONTENT OF TOXIC AND HAZARDOUS SUBSTANCES OR  
ELEMENTS

# GLOSSARY

---

---

This section describes the main terms used for this equipment and general related maritime terms.

<b>ARPA:</b> Automatic Radar Plotting Aid.	as scanned clockwise.
<b>AZI MODE (Azimuth Stabilization MODE):</b> Bearing display mode	<b>HL (Heading Line):</b> Ship's heading line
<b>Anti-clutter rain (FTC):</b> Rain/snow clutter suppression	<b>HUP (Head-Up):</b> Own ship's heading line is always pointed to the top center of the radar display.
<b>Anti-clutter sea (STC):</b> Sea clutter suppression	<b>IMO:</b> International Maritime Organization
<b>ATA:</b> Automatic Tracking Aid	<b>Interswitch:</b> A device to switch over two or more radar display units and two or more antennas.
<b>BCR:</b> Bow Crossing Range	<b>IR (Interference Rejector):</b> Radar interference rejector
<b>BCT:</b> Bow Crossing Time	<b>MRK (Mark):</b> Reflection plot
<b>BRG:</b> Bearing	<b>NM (Nautical Mile):</b> 1NM=1852m
<b>CPA (Closest Point of Approach):</b> The closest point of approach from own ship, which can be set by the observer.	<b>NSK (North Stabilization Kit):</b> True bearing unit
<b>COG (Course Over Ground):</b> Course relative to the ground.	<b>NUP (North-Up):</b> The north is always pointed to the top center of the radar display.
<b>CUP (Course-Up):</b> Own ship's course is pointed to the top center of the radar display.	<b>OWN TRACK:</b> Display function of own ship's track
<b>DRIFT:</b> The current velocity for manual correction or the current speed on the horizontal axis of the 2-axis log is displayed.	<b>PI:</b> Parallel index line
<b>EBL (Electronic Bearing Line):</b> An electronic bearing line originated from own ship's position.	<b>PIN:</b> Information set by the user (personal code)
<b>ENH (Enhance):</b> A target can be enlarged.	<b>PM (Performance Monitor):</b> An additional unit to monitor the transmitted power and the receiving sensitivity of radar equipment.
<b>Floating EBL (Floating Electronic Bearing Line):</b> Floating electronic bearing line originated from an arbitrary point.	<b>PROC (Process):</b> Target processing function
<b>GND:</b> Stabilization relative to the ground.	<b>PPI:</b> Plan Position Indicator
<b>GPS (Global Positioning System):</b> The position of a GPS receiver can be determined by the signals from GPS satellites.	<b>Relative Vector:</b> A target's movement predicted relative to own ship.
<b>Guard Zone:</b> Alarm ring against intrusion	<b>RR (Range Rings):</b> Fixed range ring
<b>HDG (Heading):</b> Own ship's heading bearing. The display ranges from 000 to 360 degrees	<b>RM (Relative Motion):</b> Relative motion presentation Own ship's position is fixed and other targets move relative to own ship.
	<b>S/X Band:</b> Radio frequency bands S: 3GHz band, X: 9 GHz band

---

---

**SCANNER:**

Antenna

**SEA:**

Sea clutter suppression

**SET:**

The current direction for manual correction or the current speed on the horizontal axis of the 2-axis log is displayed.

**SOG (Speed Over Ground):**

Speed relative to the ground.

**STAB (Stabilization):**

Stabilization

**TCPA (Time to Closest Point of Approach):**

The time to approach the closest point from own ship.

**TM (True Motion):**

True motion presentation

A presentation in which own ship and any other target move depending on their individual movements.

**TRAILS:**

Function of displaying tracks of other ships.

**TRIAL:**

Trial maneuvering

**True Vector:**

A target's true movement predicted as the result of entering own ship's direction and speed.

**VRM:**

Variable Range Marker

**WATER:**

Stabilization relative to the water



<b>1</b>	<b>GENERAL AND EQUIPMENT COMPOSITION</b>
<b>2</b>	<b>NAME AND FUNCTION OF CONTROL PANEL KEYS AND FUNCTION OF SOFTWARE BUTTONS</b>
<b>3</b>	<b>BASIC OPERATION</b>
<b>4</b>	<b>MEASUREMENT OF RANGE AND BEARING</b>
<b>5</b>	<b>OPERATION OF ARPA AND AIS</b>
<b>6</b>	<b>TRUE AND FALSE ECHOES ON DISPLAY</b>
<b>7</b>	<b>MAINTENANCE</b>
<b>8</b>	<b>COUNTERMEASURES FOR TROUBLE AND ADJUSTMENT</b>
<b>9</b>	<b>AFTER-SALES SERVICE</b>
<b>10</b>	<b>DISPOSAL</b>
<b>11</b>	<b>SPECIFICATION</b>
<b>APPENDIX</b>	

<b>1</b>
<b>2</b>
<b>3</b>
<b>4</b>
<b>5</b>
<b>6</b>
<b>7</b>
<b>8</b>
<b>9</b>
<b>10</b>
<b>11</b>
<b>APPENDIX APPENDIX</b>










# SECTION 1 GENERAL AND EQUIPMENT COMPOSITION

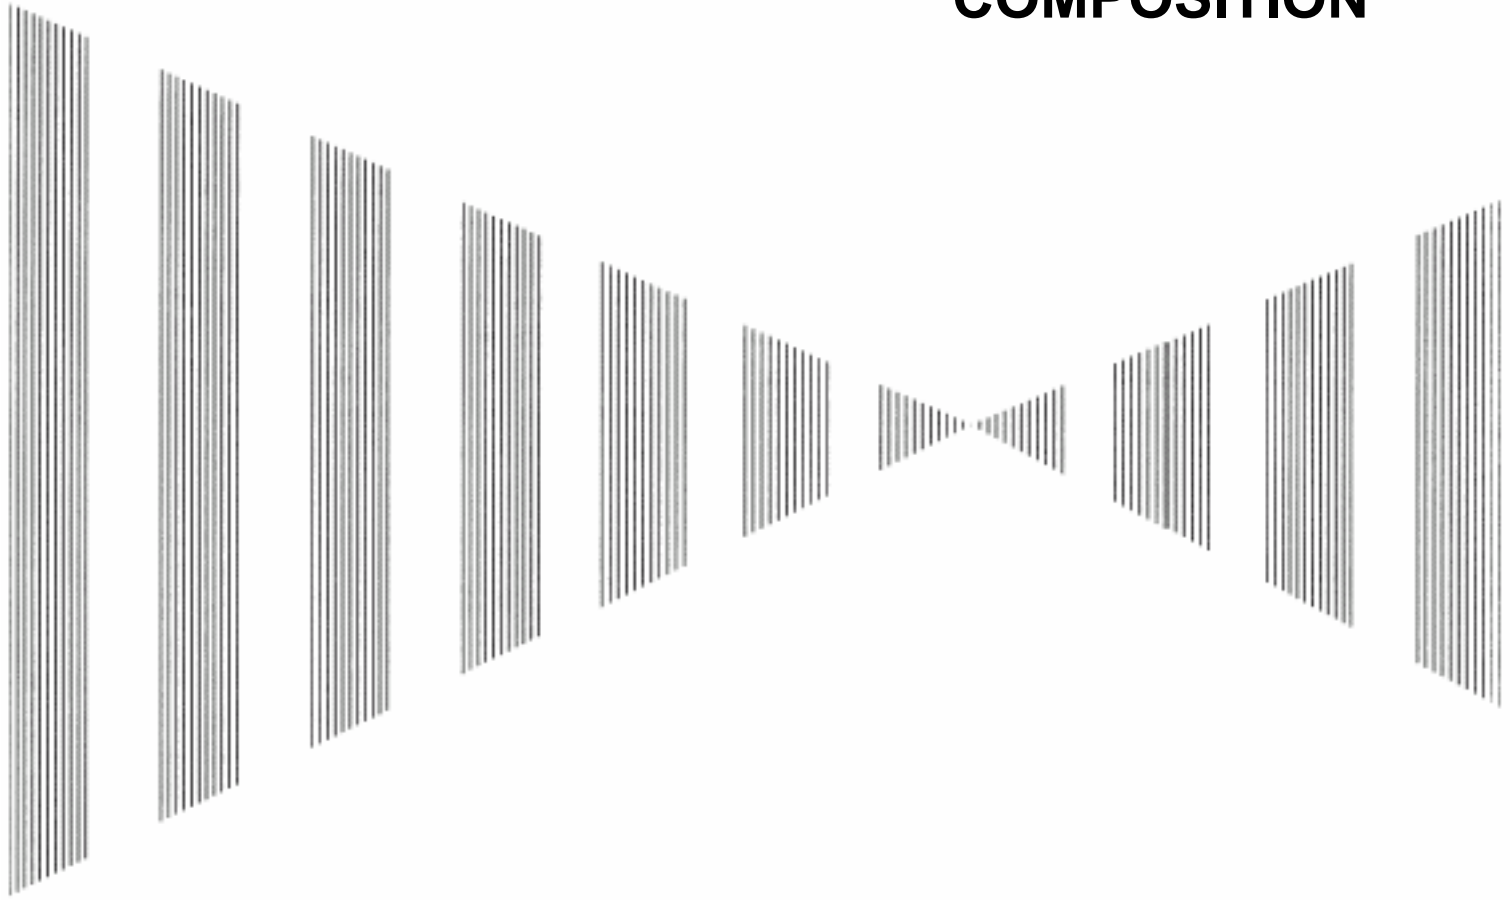

<b>1.1</b>	<b>Functions .....</b>	<b>1-1</b>
<b>1.1.1</b>	<b>Function of This System .....</b>	<b>1-1</b>
<b>1.2</b>	<b>Features .....</b>	<b>1-2</b>
<b>1.3</b>	<b>Configuration.....</b>	<b>1-4</b>
<b>1.4</b>	<b>Exterior Drawings .....</b>	<b>1-5</b>
<b>1.5</b>	<b>General System Diagrams.....</b>	<b>1-15</b>

---

# 1.1 FUNCTIONS

This equipment is a high-performance radar equipment consisting of a scanner unit, a transmitter-receiver unit and a high resolution color LCD display unit.

## 1.1.1 Function of This System

The JMA-5200 series is a color radar system designed to comply with the international standards of the IMO.

The main functions include:

- sensitivity adjustment
- sea clutter and rain/snow clutter suppression
- interference rejecter
- bearing and range measurement using a cursor, fixed/variable range markers, and electronic bearing line
- own track display
- NAV line and marker displays
- TM (True Motion) presentation
- self-diagnostic facilities
- radar performance monitoring (Performance Monitor)
- ATA functions (manual/automatic, target acquisition and tracking, vector and trail displays and alarm displays) (option)
- simple plotter functions (marker and line display, destination/route setting) (option)
-

# 1.2 FEATURES

## Realization of Easy-to-see Screen with High Resolution

The 15-inch color LCD with high resolution of  $1024 \times 768$  pixels can display radar images of 180 mm or more in diameter. Even short-range targets can also be displayed as high-resolution images.

## Target Detection by Latest Signal Processing Technology

The system employs the latest digital signal processing technology to eliminate undesired clutter from the radar video signals that are obtained from the receiver with a wide dynamic range, thus improving the target detection.

## Advanced Technology Based ATA Functions (Option)

The ARPA target acquisition and tracking performance is enhanced by the use of the fastest DSP and tracking algorithm. So stable operation in target tracking under clutter is ensured.

- Acquisition and tracking of 30 targets.
- Hazardous conditions are represented by shapes and colors of symbols as well as sounds.
- Tracks of up to 20 target ships can be stored with a maximum of 1,500 points for each of them, and displayed distinguished by using seven different colors.

## Overlay of Radar Images, Coastlines, and Own Ship's Track

As well as operator-created NAV lines, the data of coastlines, objects such as buoys, and own ship's tracks/ATA tracks, which is stored on the memory card can be superimpose-displayed with radar images and radar trails in all display modes including the head-up mode.

Use of the optional plotter function enables the creation/display of marks and lines and the settings of waypoints/courses.

## Easy Operation with GUI

All the radar functions can be easily controlled by simply using the trackball and two switches to operate the buttons shown on the radar display.

---

## **Improved Day/Night Mode**

Two types of background colors are available in each Day/Night mode (total 4 background colors). Each background color can be reproduced to be suited for the user's operating environment by simple key operation. The radar echoes and a variety of graphics can also be represented in different colors, ensuring easy-to-see displays.

## **Compact Design and Low Power Consumption**

Since an LCD has been implemented as the display device, the weight of the display is greatly reduced and the power consumption is lowered in comparison with the conventional radar equipment.

## **Self-diagnostic Program Incorporated**

The Self-diagnostic program always monitors all the functions of the system. If any function deteriorates, an alarm message will appear on the radar display and an alarm sounds at the same time. Even when the system is operating, the functionality test can be carried out. (except on some functions)

## **Performance Monitor (Option)**

The radar performance (transmitted output power and receiving sensitivity) can appear on the radar display.  
\* The PM unit (NJU-64) is needed separately.

## **Simplified Inter-switch Operation (Option)**

If an simplified inter-switch unit (option) is installed, up to two JMA-5200 radars can be switched over by performing simple operation.  
\* An simplified inter-switch option is required separately.

## **Various Functions**

- RADAR TRAILS (Other ship's track display)
- TM (True Motion) display
- Head-up/North-up/Course-up display
- Own ship's track display
- Guard Zone function

# 1.3 CONFIGURATION

## Scanners and Transmitted Output Powers

SCANNER TYPE		TRANSMITTED OUTPUT POWER	BAND
JMA-5206	4 FT SLOT ANTENNA	6 KW	X
JMA-5206HS	4 FT SLOT ANTENNA	6 KW	X
JMA-5210-4	4 FT SLOT ANTENNA	10 KW	X
JMA-5210-6	6 FT SLOT ANTENNA	10 KW	X
JMA-5220-7	7 FT SLOT ANTENNA	25 KW	X
JMA-5220-9	9 FT SLOT ANTENNA	25 KW	X

## Radar Configuration and Ship's Mains

RADAR MODEL	SCANNER UNIT	PM UNIT	DISPLAY UNIT	SHIP'S MAINS
JMA-5206	NKE-2062	-	NCD-4340	12/24/32V VDC #1
JMA-5206HS	NKE-2062HS	-	NCD-4340	24 VDC
JMA-5210-4	NKE-2102-4	NJU-64	NCD-4340	24 VDC
JMA-5210-6	NKE-2102-6	NJU-64	NCD-4340	24 VDC
JMA-5220-7	NKE-2252-7	NJU-64	NCD-4340	24 VDC
JMA-5220-9	NKE-2252-9	NJU-64	NCD-4340	24 VDC

### Notes:

- An optional rectifier is necessary for using Ship's Mains 100/110/115/200/220/230 VAC.
  - The display system NCD-4340 has a separate structure consisting of the following:
    - Monitor unit               NWZ-164
    - Processor unit            NDC-1340
    - Keyboard unit            NCE-7699
  - The ship with radar of IMO conformity must mount a PM unit.
- #1 When the ship's main is DC12, the maximum cable length between the display unit and scanner unit is 20 m.

---

# 1.4 EXTERIOR DRAWINGS

- Fig. 1.1 Exterior Drawing of Scanner Unit, Type NKE-2062
- Fig. 1.2 Exterior Drawing of Scanner Unit, Type NKE-2102-4
- Fig. 1.3 Exterior Drawing of Scanner Unit, Type NKE-2102-6
- Fig. 1.4 Exterior Drawing of Scanner Unit, Type NKE-2252-7
- Fig. 1.5 Exterior Drawing of Scanner Unit, Type NKE-2252-9
- Fig. 1.6 Exterior Drawing of Monitor Unit, Type NWZ-164
- Fig. 1.7 Exterior Drawing of Processor Unit, Type NDC-1340
- Fig. 1.8 Exterior Drawing of Keyboard Unit, Type NCE-7699
- Fig. 1.9 Exterior Drawing of NSK Unit, Type NCT-4106


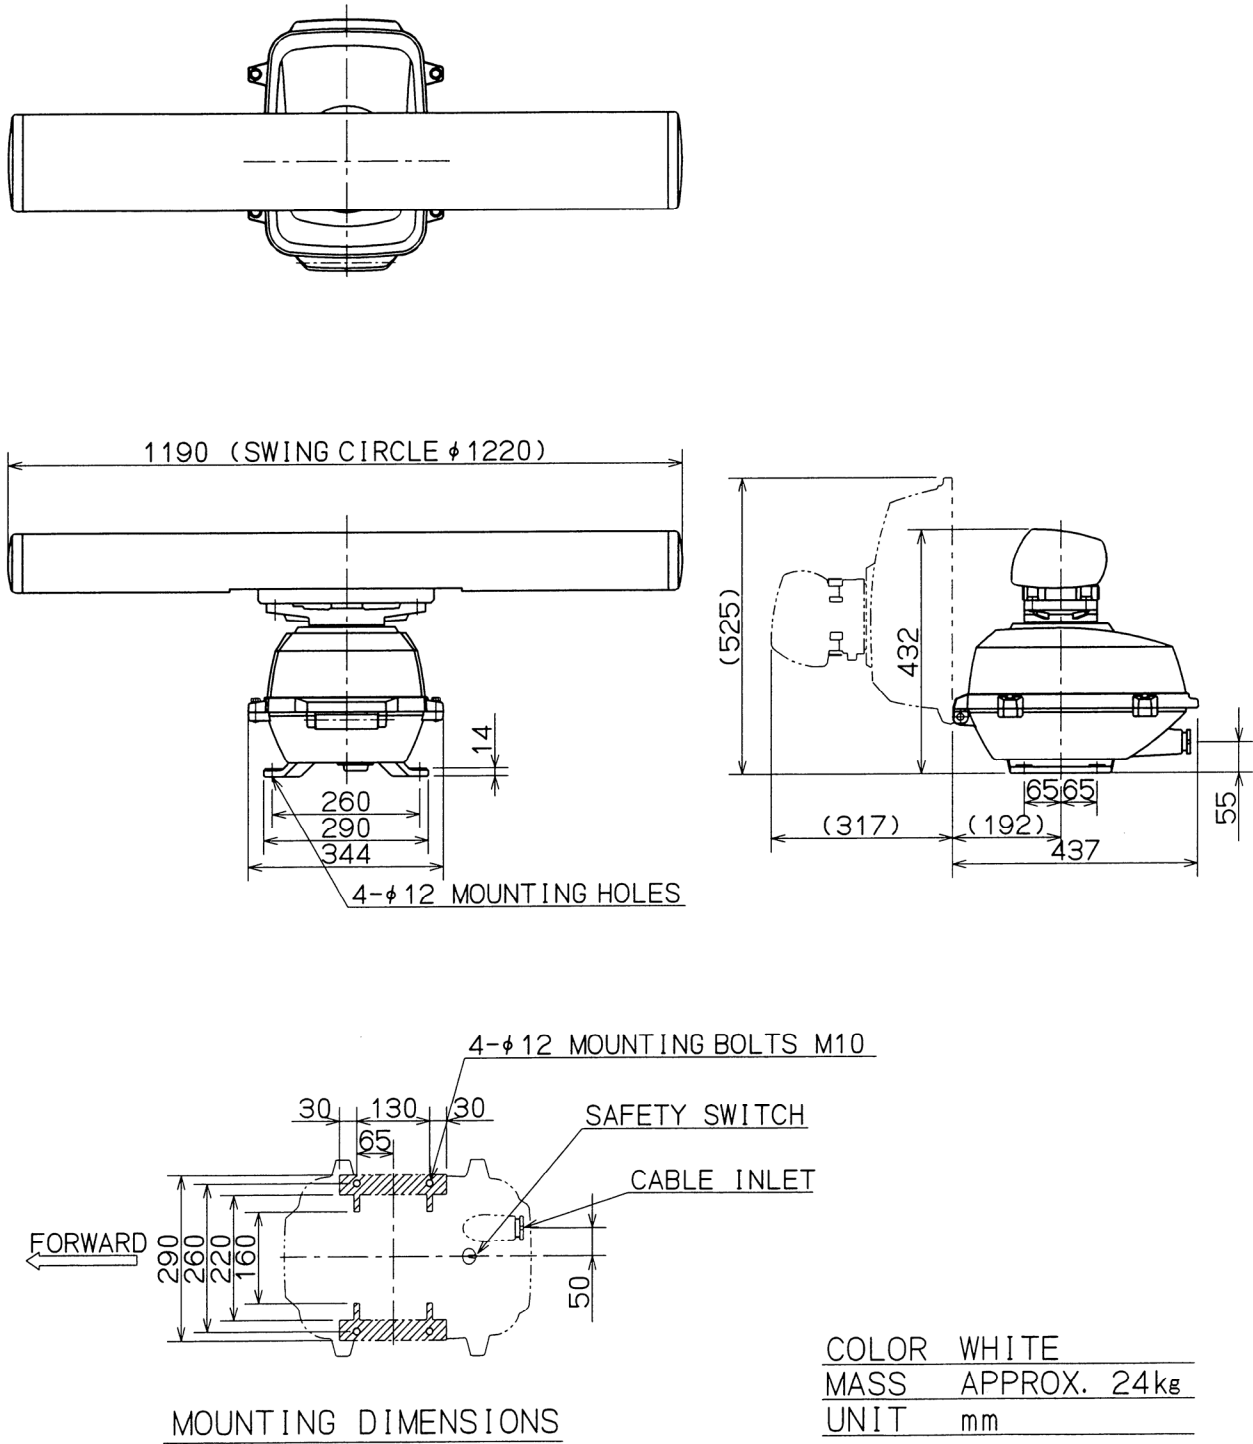


Fig. 1.1 Exterior Drawing of Scanner Unit, Type NKE-2062/HS

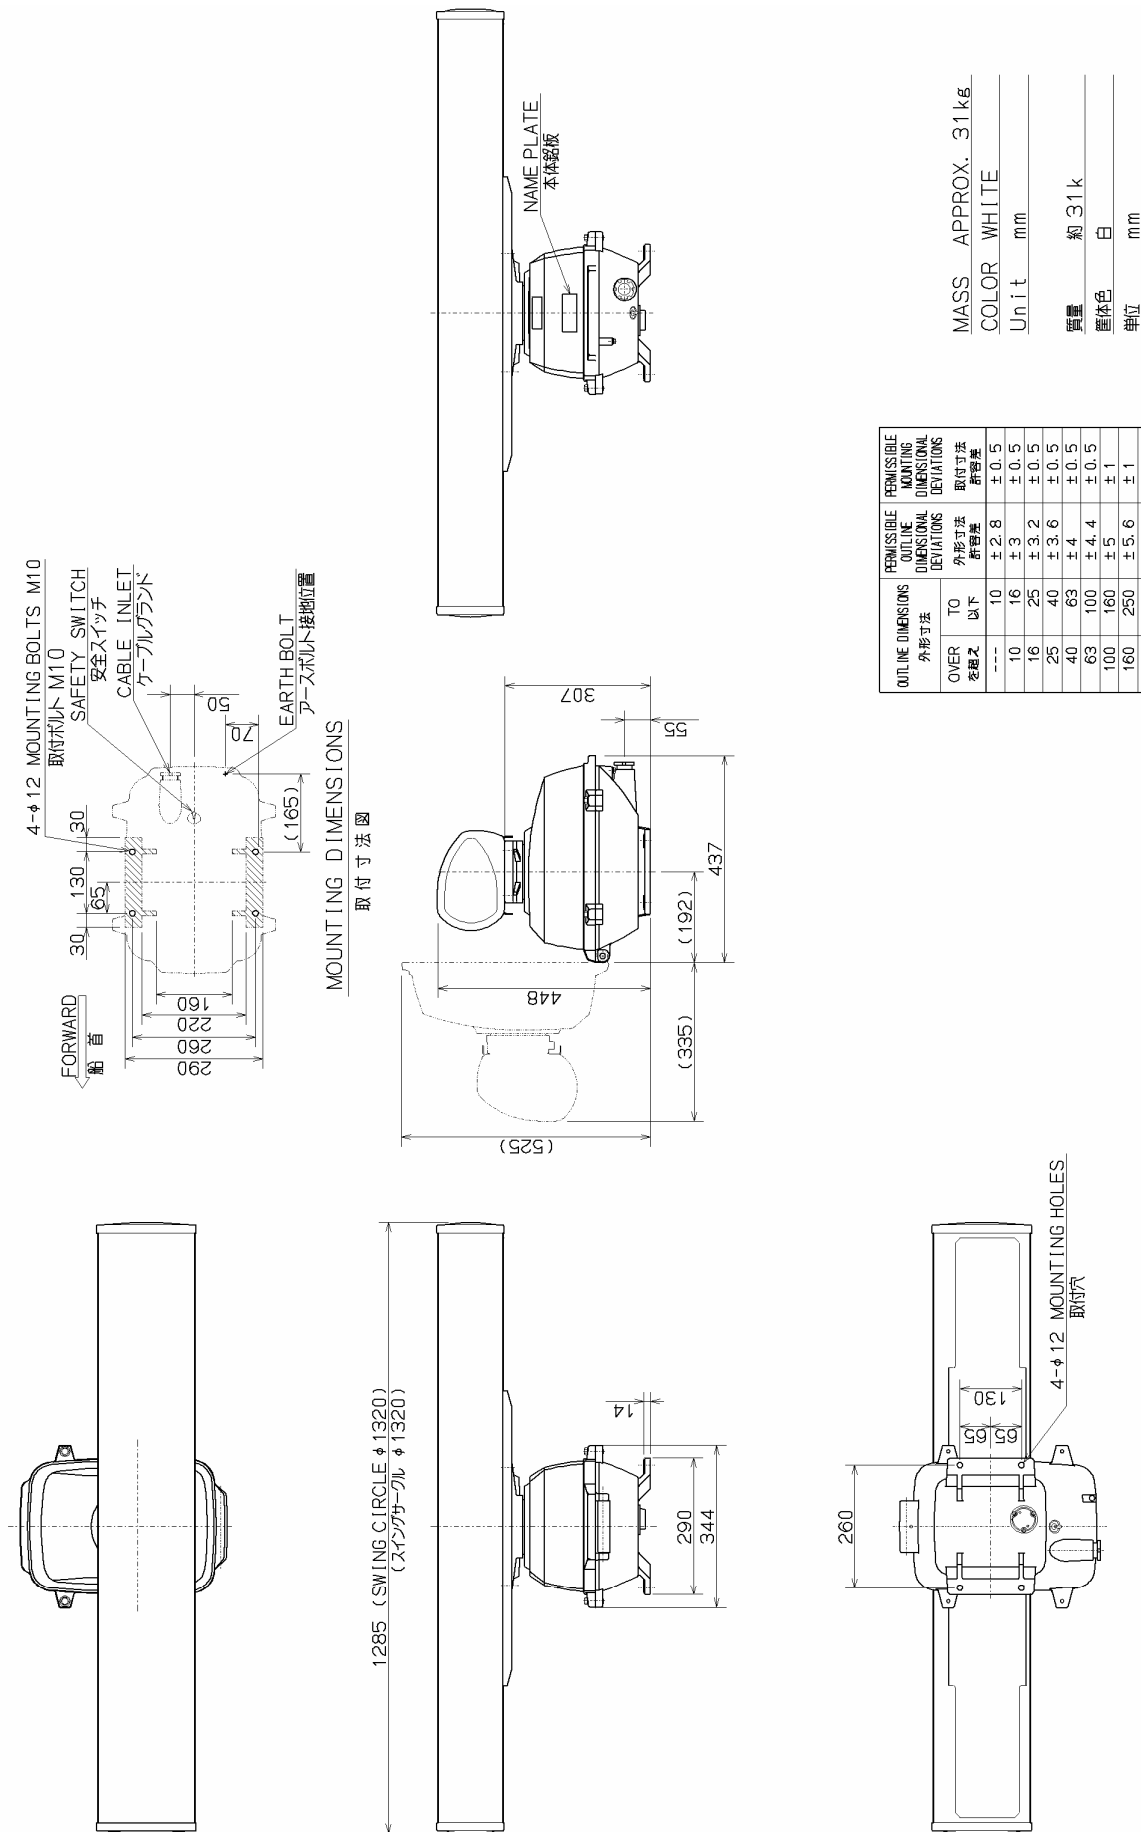

MASS APPROX. 31kg  
 COLOR WHITE  
 Unit mm  
 質量 約 31k  
 筐体色 白  
 単位 mm

OUTLINE DIMENSIONS 外形寸法		PERMISSIBLE MOUNTING DIMENSIONAL DEVIATIONS 取付寸法 許容差	
OVER を越え	TO 以下	外形寸法 許容差	取付寸法 許容差
---	10	±2.8	±0.5
10	16	±3	±0.5
16	25	±3.2	±0.5
25	40	±3.6	±0.5
40	63	±4	±0.5
63	100	±4.4	±0.5
100	160	±5	±1
160	250	±5.6	±1
250	400	±6	±2
400	630	±7	±2
630	1000	±8	±3
1000	1600	±9	±3
1600	2500	±10	±3

Fig. 1.2 Exterior Drawing of Scanner Unit, Type NKE-2102-4






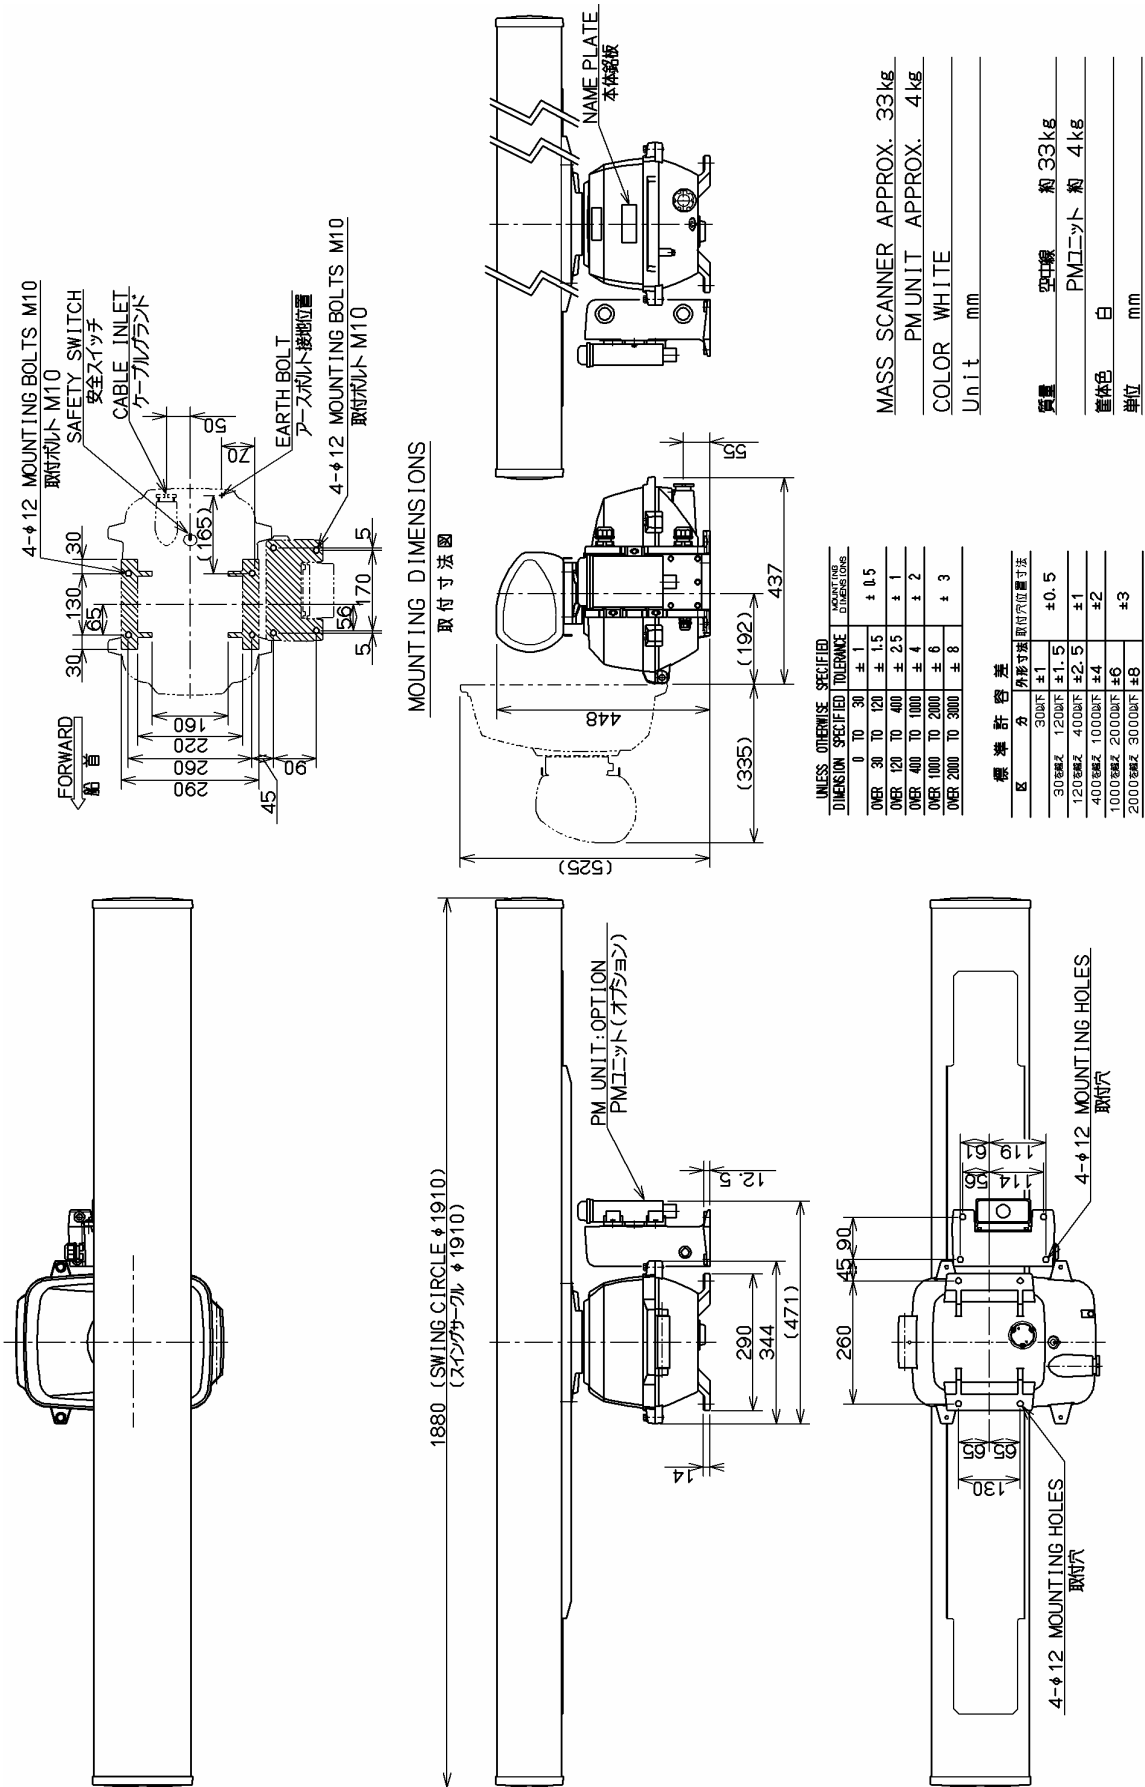


Fig. 1.3 Exterior Drawing of Scanner Unit, Type NKE-2102-6

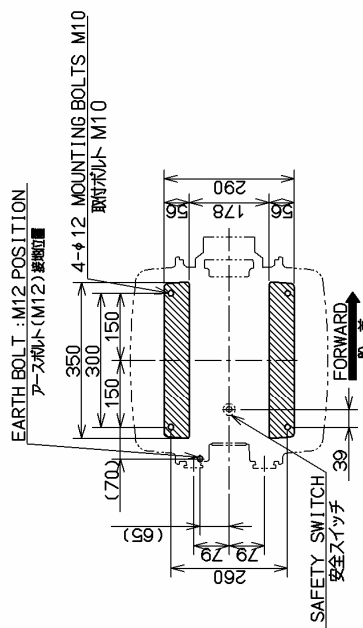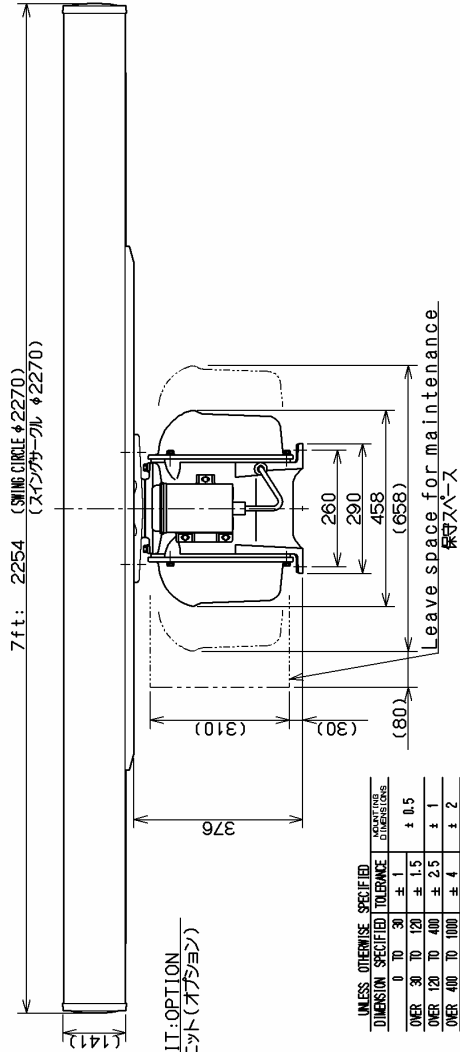


MOUNTING DIMENSIONS  
取付寸法図

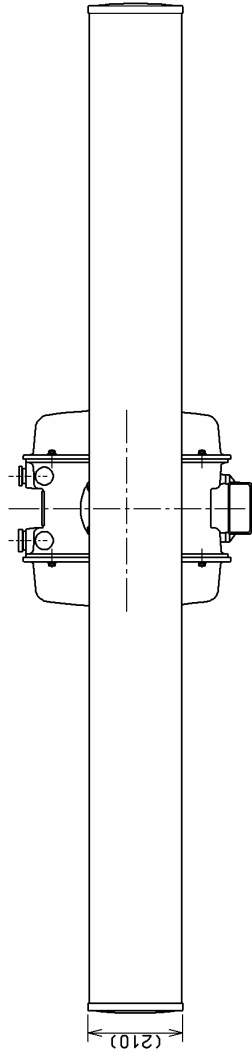

UNLESS OTHERWISE SPECIFIED		UNTIL THE DIMENSIONS
DIMENSION SPECIFIED TOLERANCE		
0 TO 30	± 1.5	± 0.5
OVER 30 TO 120	± 1.5	
OVER 120 TO 400	± 2.5	± 1
OVER 400 TO 1000	± 4	± 2
OVER 1000 TO 2000	± 6	
OVER 2000 TO 3000	± 8	± 3

標準許容差		取付寸法寸法
区	分	
30mm以下	±1	
30mm以上 120mm以下	±1.5	±0.5
120mm以上 400mm以下	±2.5	±1
400mm以上 1000mm以下	±4	±2
1000mm以上 2000mm以下	±6	
2000mm以上 3000mm以下	±8	±3

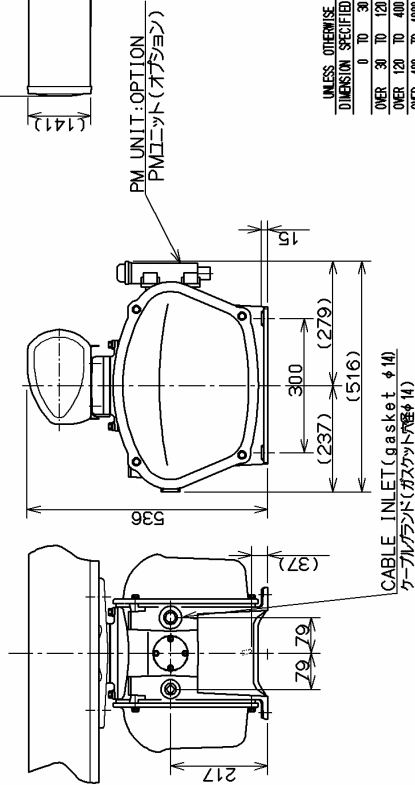


MASS APPROX. 54kg  
COLOR WHITE  
Unit mm  
質量 約 54kg  
管体色 白  
単位 mm

(注) ケーブルランド径は変更できません。  
NOTE: Diameter of cable gland is not able to change.

Fig. 1.4 Exterior Drawing of Scanner Unit, Type NKE-2252-7




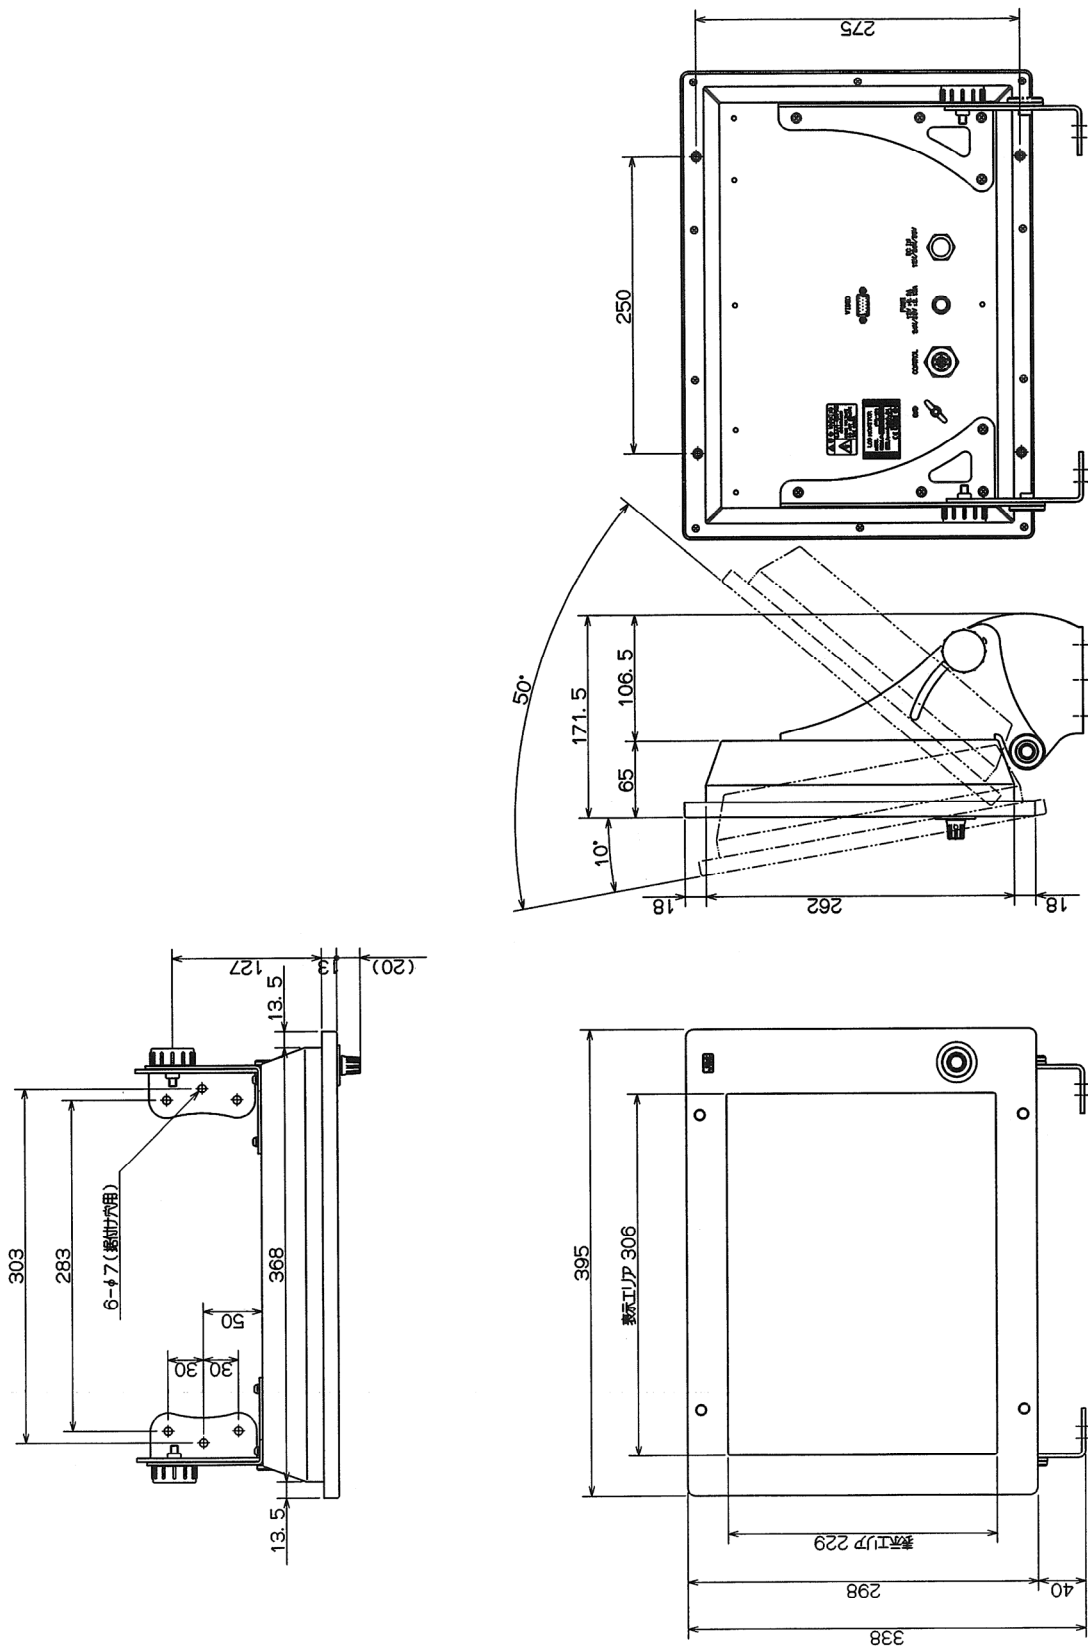

NWZ-164


Fig. 1.6 Exterior Drawing of Monitor Unit, Type NWZ-164

SCNDC5171

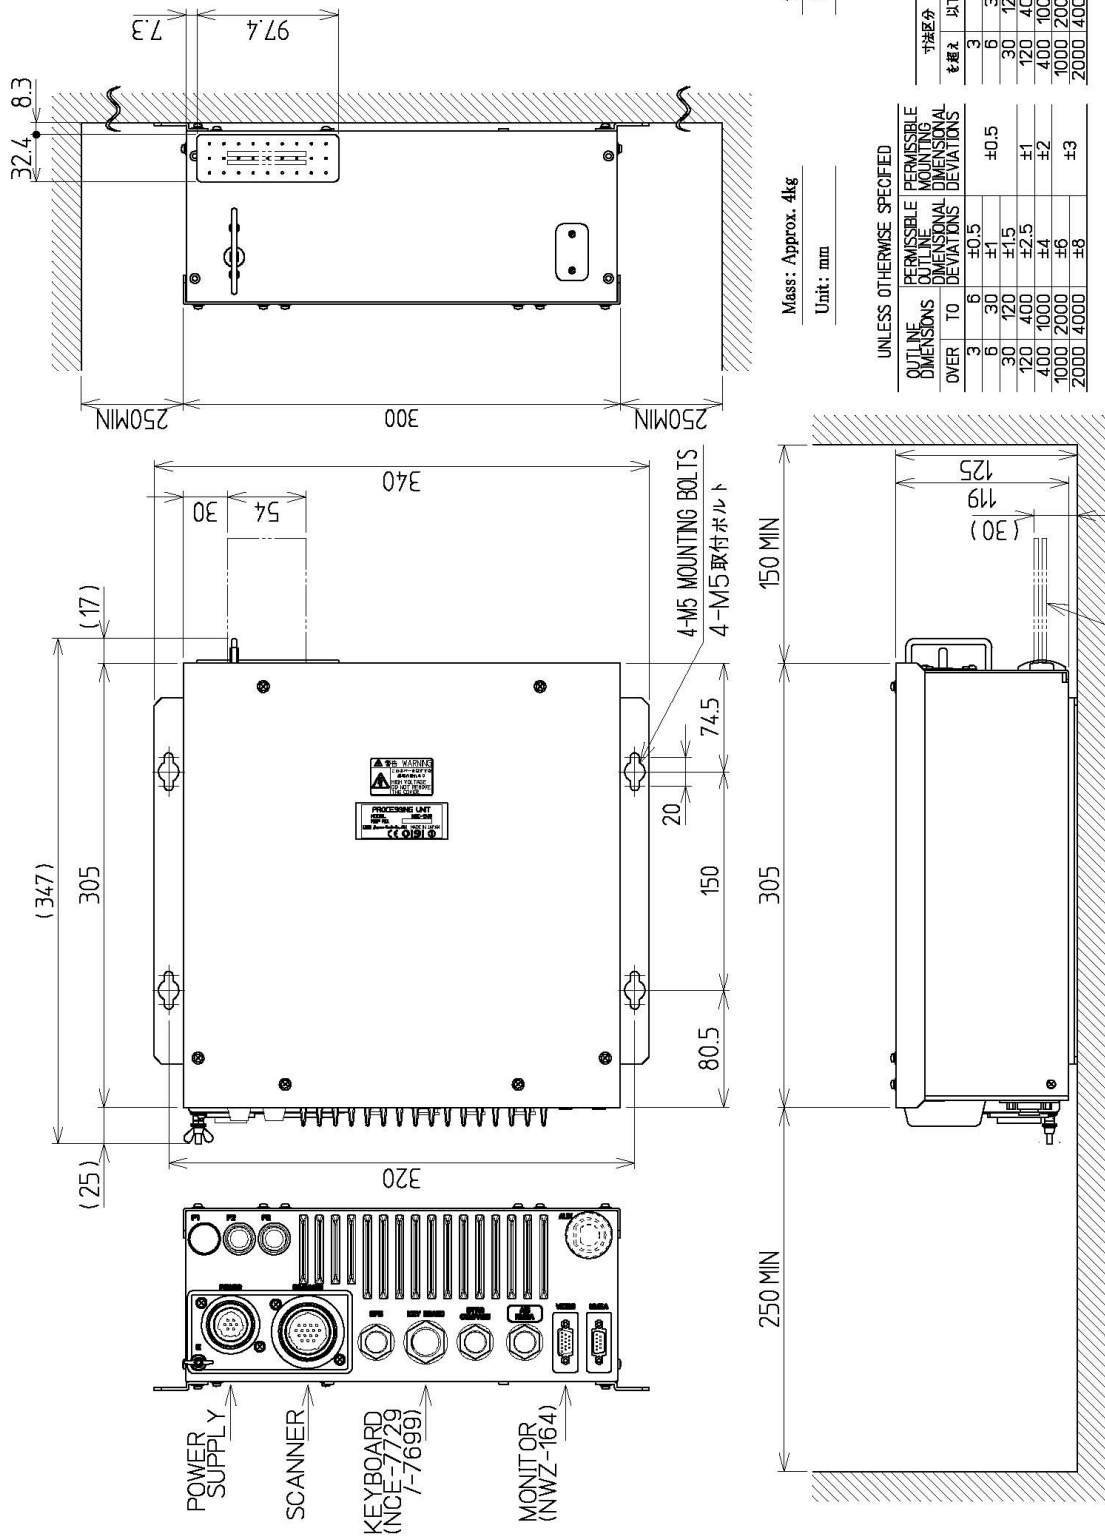

Display Unit Outline Drawing NCD-4340 (Processing Unit NDC-1340)  
指示機外形図NCD-4340(処理機NDC-1340)

Fig. 1.7 Exterior Drawing of Processor Unit, Type NDC-1340

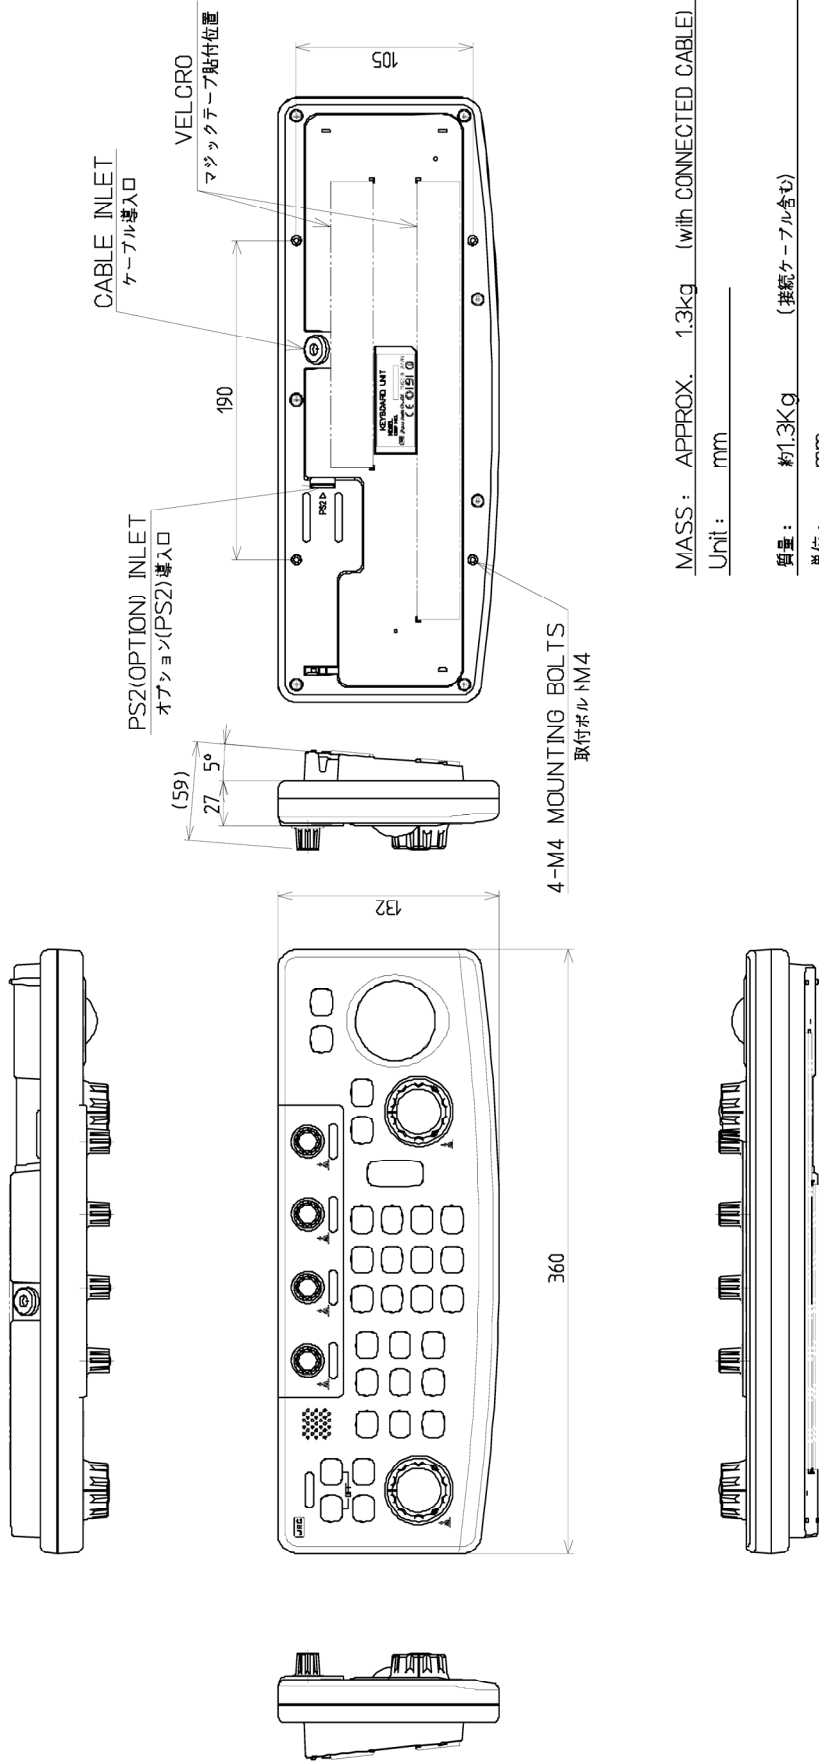

MASS: APPROX. 1.3kg (with CONNECTED CABLE)  
 Unit: mm

質量: 約1.3Kg (接続ケーブル含む)  
 単位: mm

UNLESS OTHERWISE SPECIFIED

DIMENSION SPECIFIED	TOLERANCE	DIMENSION SPECIFIED	TOLERANCE
0 TO 30	±1	OVER 30 TO 120	±1.5
OVER 30 TO 120	±1.5	OVER 120 TO 400	±2.5
OVER 120 TO 400	±2.5	OVER 400 TO 1000	±4
OVER 400 TO 1000	±4	OVER 1000 TO 2000	±6
OVER 1000 TO 2000	±6	OVER 2000 TO 3000	±8
OVER 2000 TO 3000	±8		

標準許容差

区	分	外寸寸法	取付内寸寸法
30 以下	±1		
30 を超え 120 以下	±1.5		±0.5
120 を超え 400 以下	±2.5		±1
400 を超え 1000 以下	±4		±2
1000 を超え 2000 以下	±6		±3
2000 を超え 3000 以下	±8		

Fig. 1.8 Exterior Drawing of Keyboard Unit, Type NCE-7699

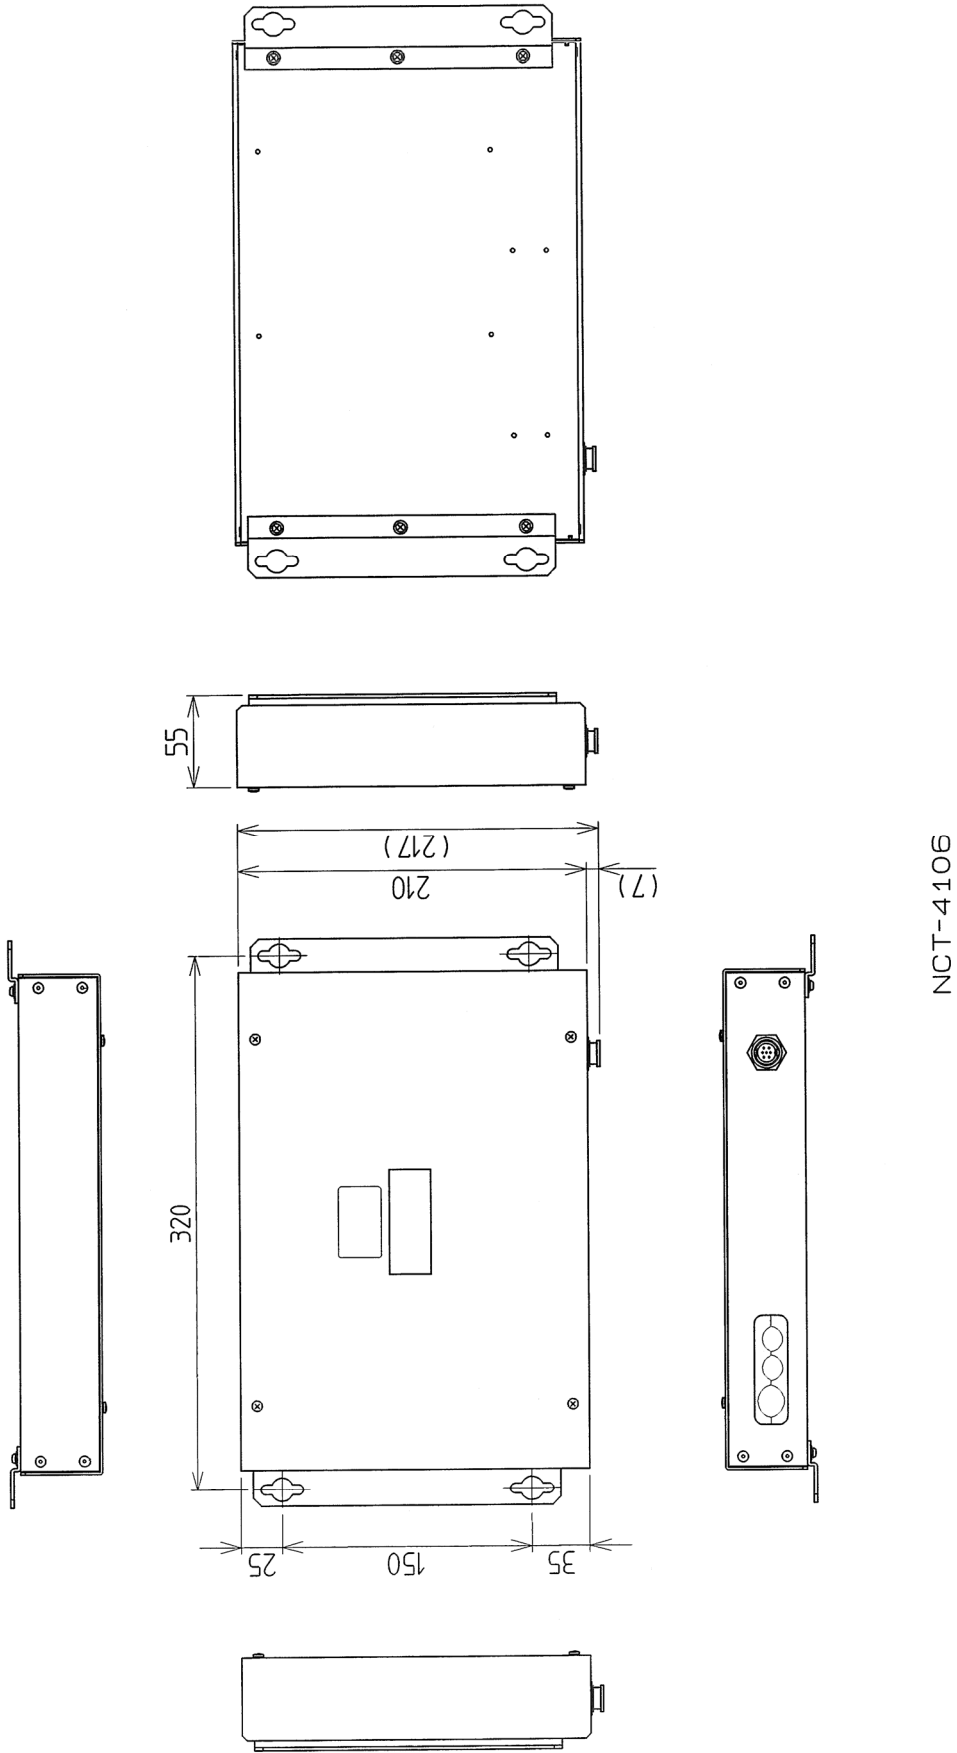


Fig. 1.9 Exterior Drawing of NSK Unit, Type NCT-4106

---

# **1.5** GENERAL SYSTEM DIAGRAMS

Fig. 1.10 General System Diagram of Radar, Type JMA-5206/HS

Fig. 1.11 General System Diagram of Radar, Type JMA-5210-4/6

Fig. 1.12 General System Diagram of Radar, Type JMA-5220-7/9



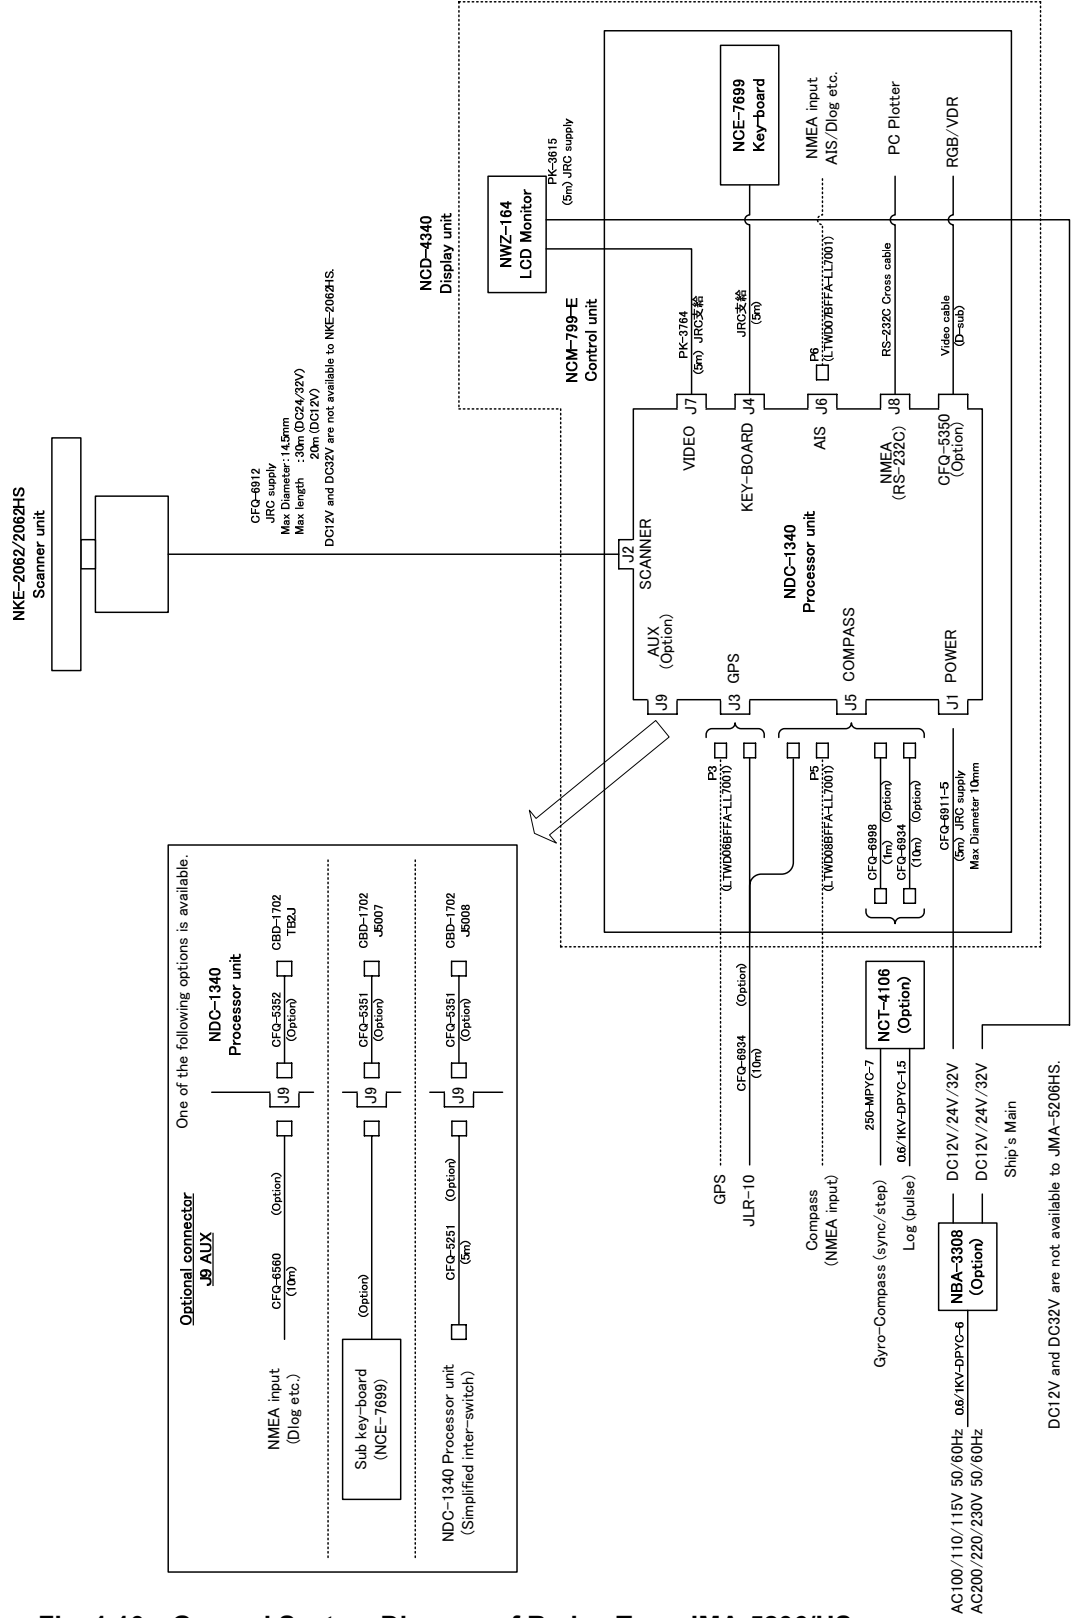


Fig. 1.10 General System Diagram of Radar, Type JMA-5206/HS

**Note:** Eliminating the interference on frequencies used for marine communications and navigation due to operation of the radar.  
 All cables of the radar are to be run away from the cables of radio equipment.  
 (Ex. Radiotelephone. Communications receiver and direction finder, etc.)  
 Especially inter-wiring cables between scanner unit and display unit of the radar should not be run parallel with the cables of radio equipment.




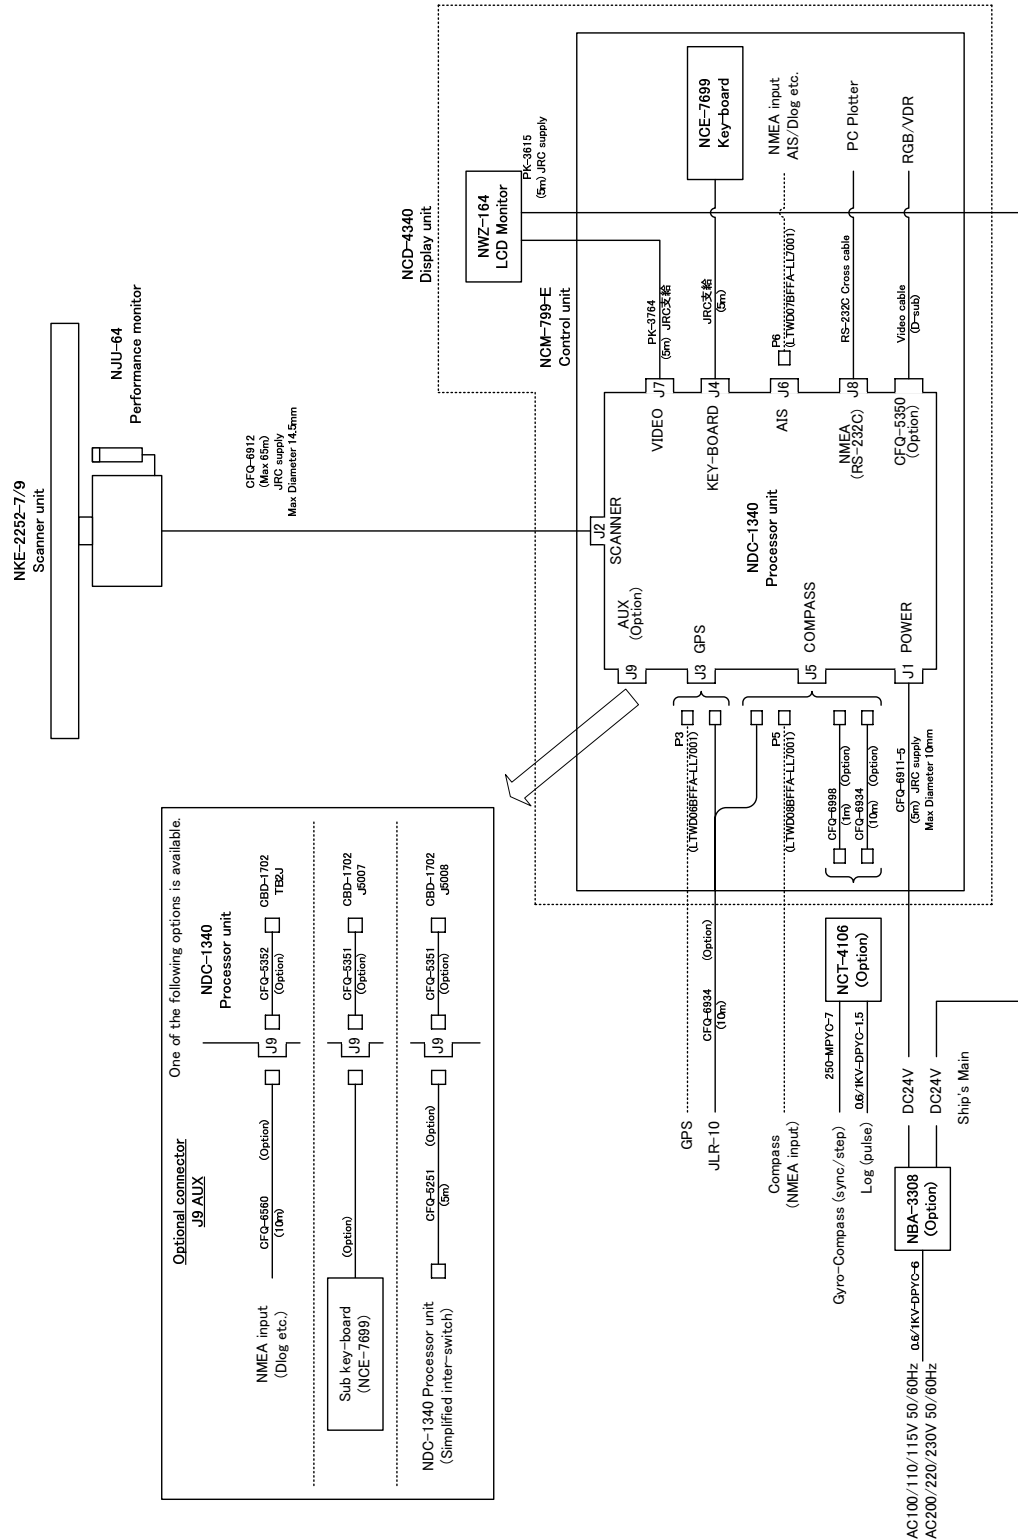


Fig. 1.12 General System Diagram of Radar, Type JMA-5220-7/9

**Note:** Eliminating the interference on frequencies used for marine communications and navigation due to operation of the radar.  
 All cables of the radar are to be run away from the cables of radio equipment.  
 (Ex. Radiotelephone. Communications receiver and direction finder, etc.)  
 Especially inter-wiring cables between scanner unit and display unit of the radar should not be run parallel with the cables of radio equipment.



# **SECTION 2 NAMES AND FUNCTIONS OF CONTROL PANEL KEYS AND FUNCTIONS OF SOFTWARE BUTTONS**

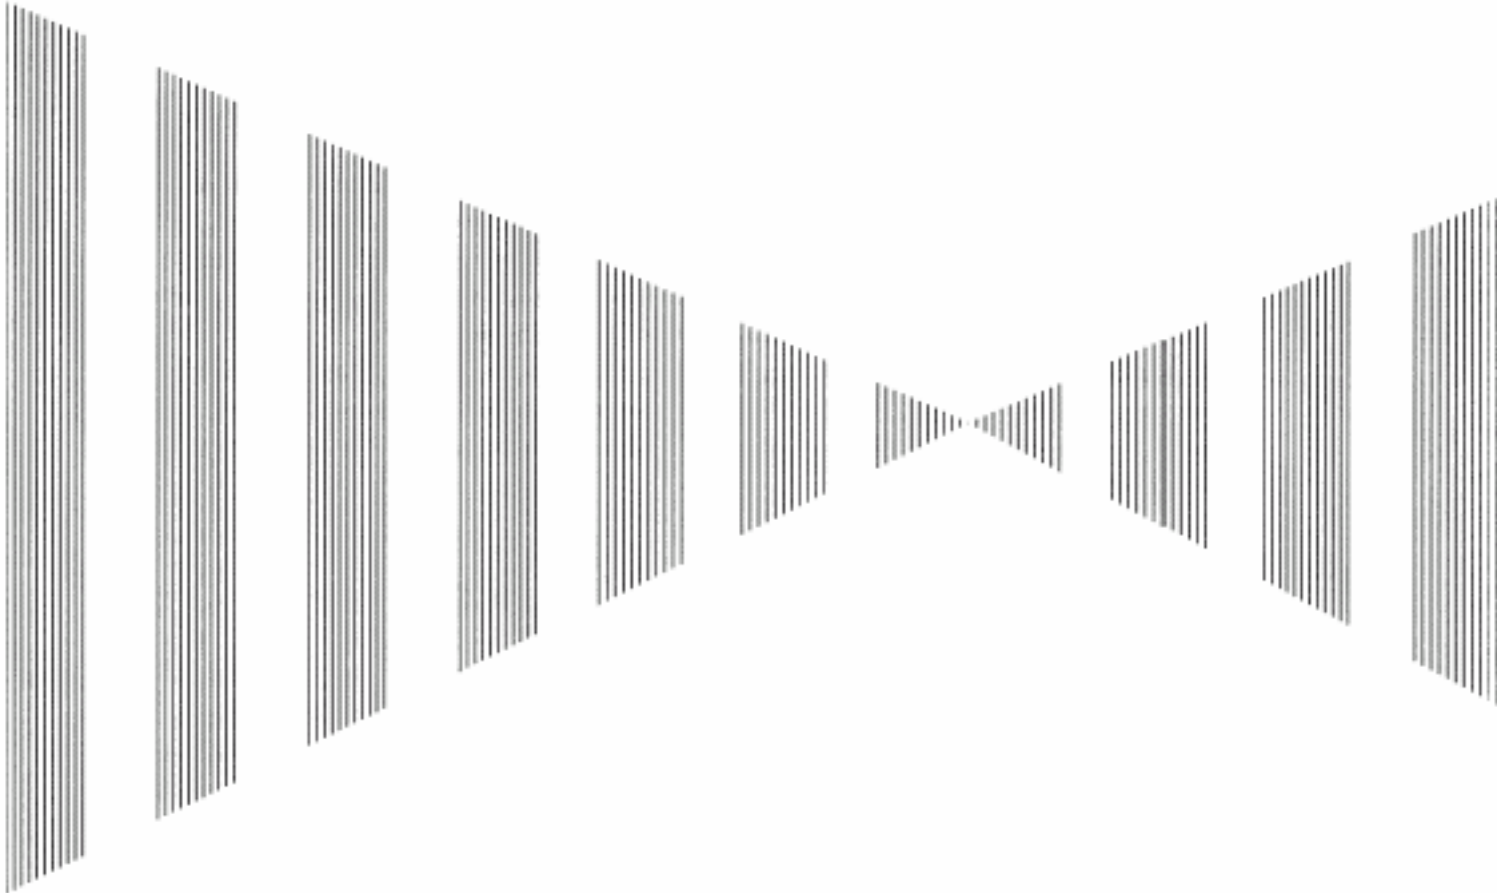


<b>2.1</b>	<b>NAMES AND FUNCTIONS OF CONTROL PANEL KEYS .....</b>	<b>2-1</b>
<b>2.2</b>	<b>FUNCTIONS OF SOFTWARE BUTTONS .....</b>	<b>2-7</b>



**Names and Functions of Control Panel Keys**

**2**

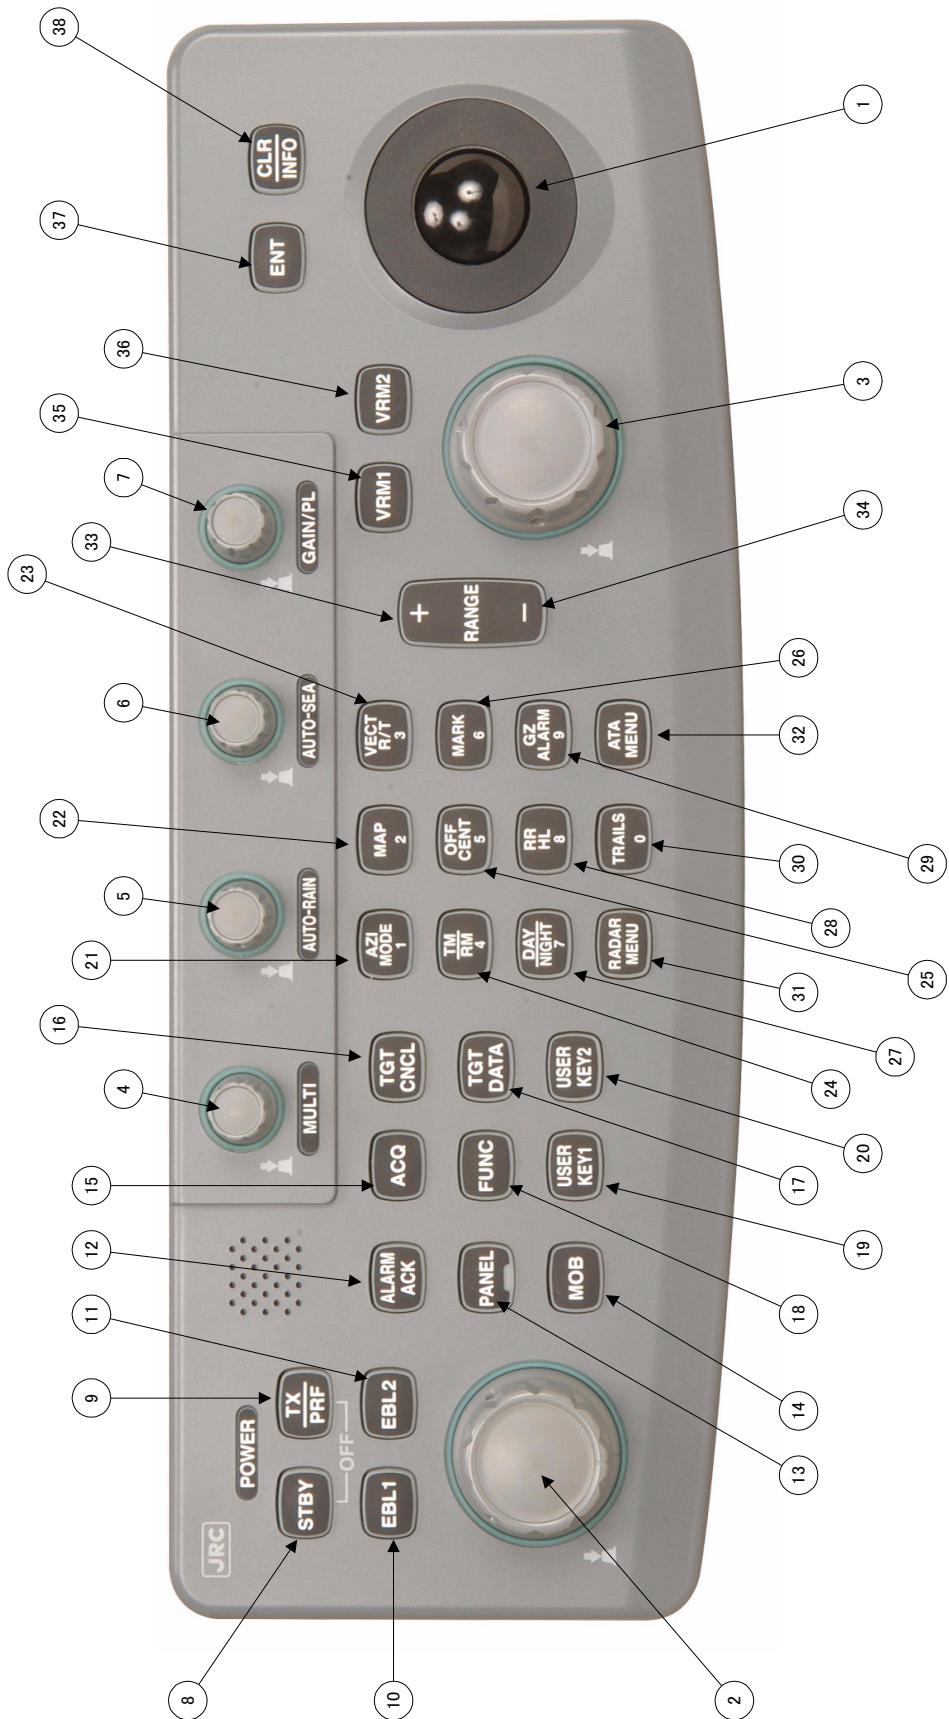

The following page describe name of buttons. The Sections and page numbers on the above indicate pages where operation procedures and detailed descriptions are provided.

- 
- ① **Trackball**

Use this trackball to move the cursor mark to an arbitrary point. The trackball can be used for setting in each mode.  
For example, use it to specify the center of a floating EBL or the off-center position.  
→For setting cursor, see section 3.10.3 on page 3-104.
  - ② **[EBL] (Electric Bearing Line) Control**

Rotates the bearing of an EBL.  
The selected EBL status switches back and forth between “center fixed” and “floating” each time the control is pressed.  
→See section 3.5.2 on page 3-24.
  - ③ **[VRM] (Variable Range Marker) Control**

Changes the range of a VRM.  
→See section 3.5.4 on page 3-29.
  - ④ **[MULTI] (Multi-function) Control**

Each time you press this control, you can change items registered in the multi-function control function.  
An item to switch to is shown put in parentheses in the lower left area of the screen. Give a long press of the control to open the setup screen for registering items. Give a long press of the control button again to close this setup screen.  
→See section 3.5.17 on page 3-55.
  - ⑤ **[AUTO-RAIN] (Rain/Snow Clutter Suppression) Control**

Suppresses the clutter echo from rain or snow.  
To heighten a suppressing effect, turn the control clockwise.  
The clutter suppression mode switches back and forth between **MANUAL** and **AUTO** each time the control is pressed.  
→See section 3.4.7 on page 3-18.
  - ⑥ **[AUTO-SEA] (Sea Clutter Suppression) Control**

Suppresses the clutter echo from the sea surface.  
To heighten a suppressing effect, turn the control clockwise.  
The clutter suppression mode switches back and forth between **MANUAL** and **AUTO** each time the control is pressed.  
→See section 3.4.6 on page 3-16.
  - ⑦ **[GAIN/PL] (Receiving Sensitivity/Pulse Width) Control**

Controls the radar’s receiving sensitivity.  
To get higher sensitivity, turn the control clockwise.  
To change the transmitter pulse width, press the control.  
→For sensitivity, see section 3.4.5 on page 3-15.  
→For pulse width, see section 3.5.10 on page 3-46.
  - ⑧ **[STBY] (Standby) Key**

Use this key to change the power-off state to the power-on state, or the transmission state to the standby state.  
To turn off the power, press the **[STBY]** key and **[TX/PRF]** key together.  
→See section 3.4.2 on page 3-14.
  - ⑨ **[TX/PRF] (Transmit/Transmitting Repetition Frequency) Key**

**PREHEAT** at the upper left of the radar display changes to **STANDBY** about three minutes after the power is turned on.  
Then, press this key to start transmission.  
To fine-tune the transmitting repetition frequency, press the key during transmission.



Use of this function with the interference rejection function heightens an interference suppressing effect.

→See section 3.4.1 on page 3-14.

### ⑩ **[EBL1] (Electric Bearing Line 1) Key**

Use this key to display and select EBL1.

Holding down the key for two seconds or more displays the menu for EBL1 setting.

→See section 3.5.2 on page 3-24.

→For EBL1 setting, see section 3.5.3 on page 3-26 onward.

### ⑪ **[EBL2] (Electric Bearing Line 2) Key**

Use this key to display and select EBL2.

Holding down the key for two seconds or more displays the menu for EBL2 setting.

→See section 3.5.2 on page 3-24.

→For EBL2 setting, see section 3.5.3 on page 3-26 onward.

### ⑫ **[ALARM ACK] (Alarm Acknowledgment) Key**

Use this key to acknowledge a failure, target's approach, or collision alarm.

Press the key to stop an audible alarm.

If more than one alarm has occurred, the key needs to be pressed the number of times equivalent to the number of alarms.

→See section 3.3.7 on page 3-11.

### ⑬ **[PANEL] (Operation Panel Brilliance) Key**

Controls the brilliance for the controls and Keys on the operation panel.

The brilliance changes cyclically each time the key is pressed.

→See section 3.3.3 on page 3-9.

### ⑭ **[MOB] (Marker) Key**

A marker is set to the latitude and longitude of the own ship's position at the point of pressing this key.

For example, use the key to store the own ship's position at the moment when somebody falls from the ship.

Holding down the key for two seconds or more erases the marker.

→See section 3.5.14 on page 3-50.

### ⑮ **[ACQ] (Manual Acquisition) Key**

Enables the manual ATA acquisition mode for the target on which the cursor sits.

→See section 5.2.1 on page 5-12.

### ⑯ **[TGT CNCL] (Tracking Target Cancel) Key**

Cancels the symbol and vector of a target under tracking, and stops tracking the target.

Holding down the key for two seconds or more erases all the acquisitions of ATA.

→See section 5.2.2 on page 5-14.

### ⑰ **[TGT DATA] (Target Data Setup) Key**

Use this key to view the numeric data of the ATA under tracking or the currently displayed AIS.

→See section 5.2.5 on page 5-21.


- 
- ⑱ **[FUNC] (Function Call) Key**  
 Calls predefined signal processing setting when pressed.  
 The selection changes in the following sequence each time the key is pressed:  
 Function Off → Function 1 → Function 2 → Function 3 → Function 4 →  
 Function Off  
 Holding down the key for two seconds or more displays the function setting menu.  
 →See section 3.11 on page 3-124.
- ⑲ **[USER KEY1] (User Registration 1) Key**  
 Directly displays a pre-registered menu position when pressed.  
 →See section 3.5.18 on page 3-57.
- ⑳ **[USER KEY2] (User Registration 2) Key**  
 Directly displays a pre-registered menu position when pressed.  
 →See section 3.5.18 on page 3-57.
- ㉑ **[AZI MODE] [1] (Bearing Mode Select/1) Key**  
 Selects the North-up (true bearing), Head-up (relative bearing), or Course-up bearing display mode.  
 This key serves as the numeric key **[1]** during menu operation.  
 →See section 3.5.6 on page 3-40.
- ㉒ **[MAP] [2] (Map Display/2) Key**  
 Selects whether to display charts, shorelines or depth contours on the radar map.  
 This key serves as the numeric key **[2]** during menu operation.  
 →For displaying charts, see section 3.7 on page 3-71 onward.
- ㉓ **[VECT R/T] [3] (Vector Mode/3) Control**  
 Selects the ATA vector display mode (true/relative).  
 This key serves as the numeric key **[3]** during menu operation.  
 →See section 5.2.4 on page 5-16.
- ㉔ **[TM/RM] [4] (True Motion/Relative Motion) Key**  
 Switches back and forth between the TM display mode and RM display mode.  
 This key serves as the numeric key **[4]** during menu operation.  
 →See section 3.5.7 on page 3-41.
- ㉕ **[OFF CENT] [5] (Off Center/5) Key**  
 Shifts the own ship's position within a desired direction (within 66% of the scope's radius) from the scope's center to expand the display portion.  
 This key serves as the numeric key **[5]** during menu operation.  
 →See section 3.5.8 on page 3-42.
- ㉖ **[MARK] [6] (Mark/6) Key**  
 Displays a mark at an arbitrary position or erases the mark on the display.  
 This key serves as the numeric key **[6]** during menu operation.  
 →See section 3.5.15 on page 3-51.
- ㉗ **[DAY/NIGHT] [7] (Day/Night Mode Select/7) Key**  
 Selects a preset color and brilliance of the display screen.  
 This key serves as the numeric key **[7]** during menu operation.  
 →See section 3.3.4 on page 3-9.

- ②⑧ **[RR/HL] [8] (Fixed Range Marker/Heading Line Off/8) Key**  
 The ship's HL (heading line) is erased while this key is held down.  
 The fixed range marker display switches back and forth between display and non-display each time the key is pressed.  
 This key serves as the numeric key **[8]** during menu operation.  
 →For displaying Fixed Range Marker, see section 3.4.9 on page 3-21.  
 →For Heading Line Off, see section 3.4.10 on page 3-21.
- ②⑨ **[GZ ALARM] [9] (Guard Zone/9) Key**  
 Sets a guard zone on the radar display.  
 This key serves as the numeric key **[9]** during menu operation.  
 →See section 5.1.6 on page 5-11.
- ③⑩ **[TRAILS] [0] (Radar Trails/0) Key**  
 The radar trails time length is switched each time the key is pressed.  
 This key serves as the numeric key **[0]** during menu operation.  
 →See section 3.5.9 on page 3-43.
- ③① **[RADAR MENU] (Radar Menu) Key**  
 Displays the radar menu when pressed.
- ③② **[ATA MENU] (ATA Menu) Key**  
 Displays the ATA menu when pressed.
- ③③ **[RANGE+] (Range Scale +) Key**  
 Expands the observation range scale when pressed.  
 →See section 3.4.3 on page 3-14.
- ③④ **[RANGE-] (Range Scale -) Key**  
 Shrinks the observation range scale when pressed.  
 →See section 3.4.3 on page 3-14.
- ③⑤ **[VRM1] (Variable Range Marker 1) Key**  
 Use this key to display and select VRM1.  
 Holding down the key for two seconds or more displays the menu for VRM1 setting.  
 →See section 3.5.4 on page 3-30.  
 →For VRM1 setting, see page 3-31.
- ③⑥ **[VRM2] (Variable Range Marker 2) Key**  
 Use this key to display and select VRM2.  
 Holding down the key for two seconds or more displays the menu for VRM2 setting.  
 →See section 3.5.4 on page 3-29.  
 →For VRM2 setting, see page 3-30.
- ③⑦ **[ENT] (Enter) Key**  
 Use this key to determine menu selection or value input.  
 Pressing the key has the same effect as left-clicking the trackball.
- ③⑧ **[CLR/INFO] (Clear/Information) Key**  
 Use this key to cancel menu selection or value input.  
 Pressing the key has the same effect as right-clicking the trackball

# 2.2

## FUNCTIONS OF SOFTWARE BUTTONS

This radar provides the software buttons on the display which can be used to set several important functions directly and swiftly from the display without opening the corresponding menu.

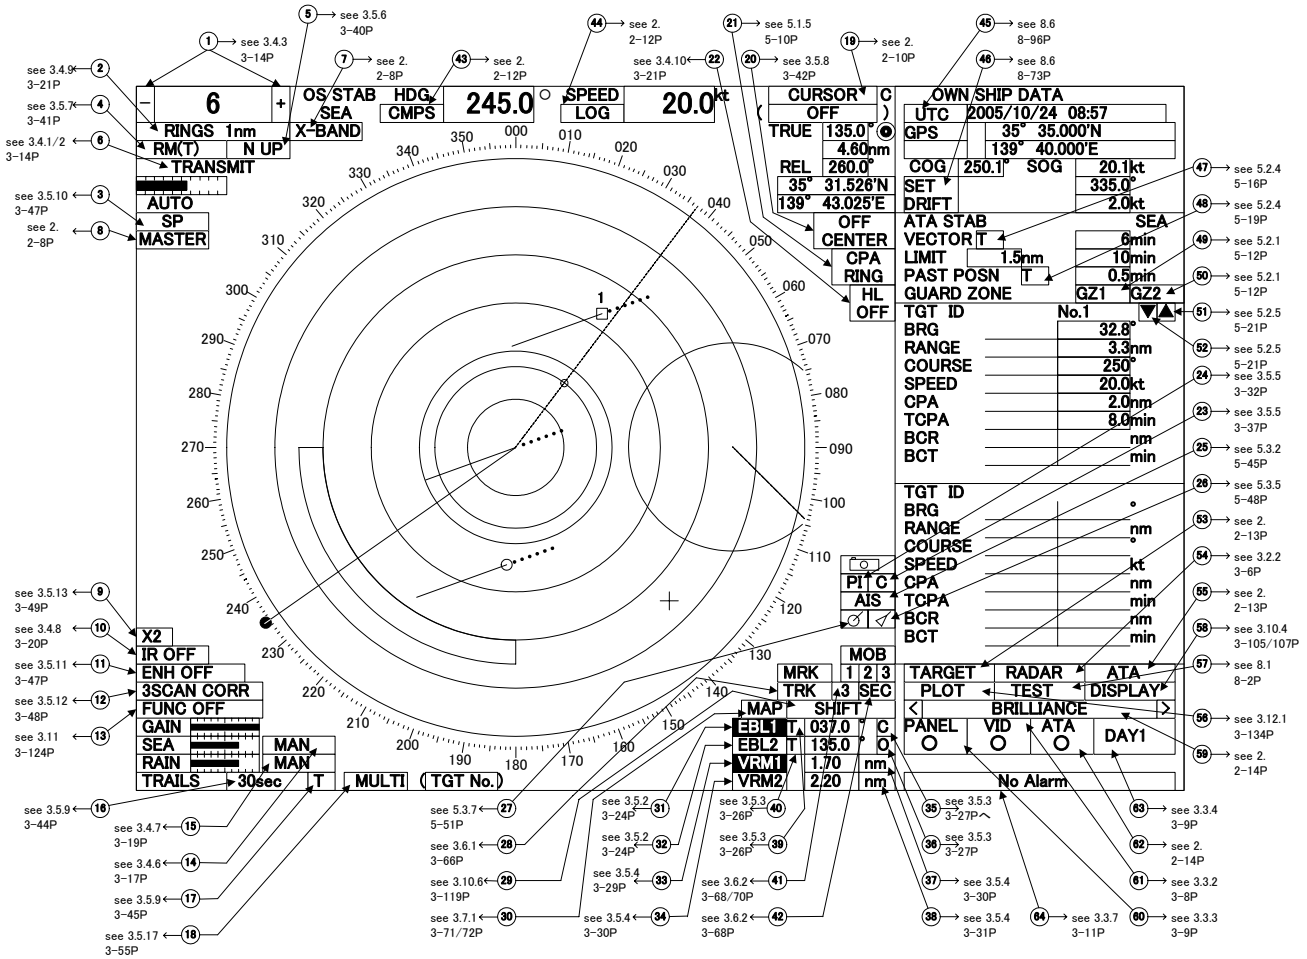

The names of buttons are described on the following pages. See the following pages. The Sections and page numbers on the above indicate pages where operation procedures and detailed descriptions are provided.

A-4 size screen pages are also provided in the appendix at the end of this description.

By positioning the arrow cursor to a button at ① to ⑥4 in the figure above and then clicking the left button of the trackball, the setting can be changed as shown below.

- ①: **Range selection**  
Switches a radar range.  
“+”: Increments the range scale. (96 or 120 nm at maximum)  
“-”: Decrements the range scale. (0.125 nm at minimum)  
→See section 3.4.3 on page 3-14.
- ②: **Selection of RINGS display**  
Turns on/off the fixed range marker display. While it is on, the range ring interval is displayed. While it is off, “OFF” is displayed.  
→See section 3.4.9 on page 3-21.
- ③: **Selection of transmitter pulse width**  
Selects a transmitter pulse width. There are three types of pulses, short pulse (SP), middle pulse (MP), and long pulse (LP). The pulse width to be selected varies depending on the current range. If the pulse width cannot be changed, the display disappears. The pulse width setting is stored for each range.  
→See section 3.5.10 on page 3-47.
- ④: **Selection of motion mode**  
Selects the true motion (TM) or relative motion (RM) mode for the radar display.  
The display switches back and forth between “TM” and “RM” each time the button is clicked.  
RM (R) indicates relative trails; RM (T) indicates true trails.  
→See section 3.5.7 on page 3-41.
- ⑤: **Selection of bearing mode**  
Selects North-up (true bearing), Head-up (relative bearing), or Course-up bearing mode.  
This button operates similarly to the “AZI MODE” key.  
The selection changes in the following sequence each time the button is clicked:  
 ⇒  ⇒   
→See section 3.5.6 on page 3-40.
- ⑥: **Selection of Transmit/Standby**  
 at the upper left of the radar display changes to  about three minutes after the power is turned on.  
: Indicates the standby state. Clicking the button in this state changes to the transmission state.  
: Indicates the transmission state. Clicking the button in this state changes to the standby state.  
→For how to start transmission, see Section 3.4.1 on page 3-14.  
→For how to stop transmission, see Section 3.4.2 on page 3-14.
- ⑦: **Indication of band**  
This button is fixed depending on the type of the antenna.  or  is displayed.
- ⑧: **Selection of Master/Slave. Simplified Inter-switch option.**  
This button is displayed when an simplified inter-switch option is enabled. The display indicates the connection between the indicator and the scanner. Clicking the button select Master mode or Slave mode.  
The indicator-scanner connection cannot be changed unless the indicator is in standby state.  
→For the setting procedure, refer to the Installation Manual. The inter-switch is an option.
- ⑨: **Zoom selection**  
Doubles the size of display specified with the cursor.  
→See section 3.5.13 on page 3-49.
- ⑩: **Selection of radar interference rejection function**

Turns on/off the radar interference rejector function (IR). The selection changes in the following sequence each time the button is clicked.

→  →  →

→See section 3.4.8 on page 3-20.

⑪: Selection of radar video enhance function (ENH)

Turns on/off the radar video enhance function. The selection changes in the following sequence each time the button is clicked:

→  →  →

→See section 3.5.11 on page 3-47.

⑫: Selection of radar video processing function (PROC)

Selects a video processing mode. The selection changes in the following sequence each time the button is clicked:

→  →  →  →  
 →

→See section 3.5.12 on page 3-48.

⑬: Selection of processing setting function (FUNC)

Selects a processing setting mode. The selection changes in the following sequence each time the button is clicked:

→  →  →  →

The currently selected function mode name is shown on the button.

→See section 3.11 on page 3-124.

⑭: Selection of MANUAL/AUTO for sea clutter suppression function (SEA)

Selects whether to use the sea clutter suppression function in manual or automatic mode. The bar shown at left indicates the control setting position.

→See section 3.4.6 on page 3-17.

⑮: Selection of MANUAL/AUTO for rain/snow clutter suppression function (RAIN)

Selects whether to use the rain/snow clutter suppression function in manual or automatic mode. The bar shown at left indicates the control setting position.

→See section 3.4.7 on page 3-19.

⑯: Selection of radar trail display function (TRAILS)

Sets up the trail time of the radar to be displayed. The setting of trail time can be changed.

→See section 3.5.9 on page 3-44.

→For the selection of trail time length, see section 3.10.2 on page 3-85.

⑰: Selection of radar trail mode

Selects the true-motion trail mode or relative-motion trail mode in which the radar trail function is to operate.

is displayed when the true-motion trail mode is selected;  is displayed when the relative-motion trail mode is selected.

This selection is limited by the radar video motion mode.

While relative motion (RM) is indicated, the true-motion trail mode or relative-motion trail mode can be selected.

While true motion (TM) is indicated, only the true-motion trail mode can be selected.

→See section 3.5.9 on page 3-45.

- ⑱: **Multi-function Control Mode**  
 Each time you press this button, you can change the item registered in the multi-function control function.  
 A switched item is displayed put in parentheses. Give a long press of the control to open the setup screen for registering items. Give a long press of the control button again to close this setup screen.  
 →See section 3.5.17 on page 3-55.
- ⑲: **Cursor mode selection**  
 Selects a mode in which the cursor is to move. The selection changes in the following sequence each time the button is clicked:  
 OFF → ACQ ATA → ACT AIS → TGT DATA → CANCEL → □  
 → OFF
- ⑳: **Selection of off-center mode**  
 This button operates similarly to the [OFF CENT] key. To shift the center of the own ship to the cursor position, press the button to move the cursor and left-click. The center of the own ship can be shifted within 66% of the scope's radius.  
 →See section 3.5.8 on page 3-42.
- ㉑: **Selection of CPA RING display**  
 Turns on/off the CPA RING display.  
 CPA RING is not displayed when TRUE is selected for the vector mode.  
 →See section 5.1.5 on page 5-10.
- ㉒: **Selection of HL Off**  
 This button operates similarly to the [RR/HL] key.  
 The heading line (HL) display is off while the button is held down.  
 →See section 3.4.10 on page 3-21.
- ㉓: **Starting point mode of parallel cursor**  
 Determines whether the starting point of parallel cursor is placed at the center of the own ship or at an arbitrary position on the radar display screen.  
 You can select from the following three types: C: CENTER, 0: OFFSET, and L: L/L FIX.  
 →See section 3.5.5 on page 3-37.
- ㉔: **Selection of parallel index line display**  
 Turns on/off the parallel index line display. The selection (on/off) changes each time the button is pressed.  
 →See section 3.5.5 on page 3-32.
- ㉕: **Selection of AIS display function**  
 Turns on/off the AIS display function. The selection status is changed each time the button is pressed.  
 →See section 5.3.2 on page 5-45.  
 \* This function is available only when the AIS I/F (option) is connected.
- ㉖: **Selection of AIS symbol display**  
 Turns on/off the AIS symbol display. The selection (on/off) changes each time the button is pressed.  
 →See section 5.3.5 on page 5-48.  
 \* This function is available only when the AIS I/F (option) is connected.
- ㉗: **Selection of ARPA symbol display**  
 Turns on/off the ARPA symbol display to distinguish the symbol from the AIS symbol. The selection changes each time the button is pressed.  
 →See section 5.3.7 on page 5-51.  
 \* This function is available only when the AIS I/F (option) is connected.

- ②9: Selection of map display position correction  
Turns on/off the map display position correction. The setup menu is open each time the button is pressed.  
→See section 3.10.6 on page 3-119.
- ③0: Selection of map display  
Turns on/off the map display. The selection (on/off) changes each time the button is pressed. A card containing map information needs to be inserted into the card slot in the processor in advance.  
→See section 3.7.1 on page 3-71/3-72.
- ③1 - ③4: EBL and VRM setting  
The buttons  EBL1,  EBL2,  VRM1, and  VRM2 are provided to turn on/off the display and get operation authority.  
They operate similarly to the keys [EBL1], [EBL2], [VRM1], and [VRM2] on the control panel. To move an EBL or VRM, use the control on the panel.  
→For turning on/off EBL, see section 3.5.2 on page 3-24.  
→For turning on/off VRM, see section 3.5.4 on page 3-29/3-30.
- ③5: Starting point mode of EBL1  
Determines whether the EBL1 starting point is placed at the center of the own ship or at an arbitrary position on the radar display.  
The [EBL] control on the control panel operates similarly to this button.
- C: CENTER indicates that the EBL1 starting point is placed at the center of the own ship.  
 O: OFFSET indicates that the EBL1 starting point is not placed at the center of the own ship. In this status, the starting point is at the cursor position or is fixed to an arbitrary position on the radar display. The starting point becomes the cursor position when the button is clicked, and it is fixed to the cursor position when the button is left-clicked subsequently.  
 L: L/L FIX indicates that after the EBL1 starting point is moved, the latitude and longitude at the starting point are fixed.  
When the starting point gets out of the radar display, the reset function automatically works for the starting point to return to the center of the own ship.  
→See section 3.5.3 on page 3-27.
- ③6: Starting point mode of EBL2  
Determines whether the EBL2 starting point is placed at the center of the own ship or at an arbitrary position on the radar display.  
For other information, see ③5 Starting point mode of EBL1.  
→See section 3.5.3 on page 3-27.
- ③7: Units of VRM1 range display  
Selects units of VRM1 range display. The selection changes in the following sequence each time the button is pressed:  
 nm →  km →  sm  
→See section 3.5.4 on page 3-30.
- ③8: Units of VRM2 range display  
Selects units of VRM2 range display. The selection changes in the following sequence each time the button is pressed:  
 nm →  km →  sm  
→See section 3.5.4 on page 3-31.
- ③9: Numeric data display mode of EBL1  
Selects the numeric data display mode of EBL1 depending on the true or relative bearing. The selection changes each time the button is pressed.  
 T is displayed while true bearing is selected;  R is displayed while relative bearing is selected.



→See section 3.5.3 on page 3-26.

④①: **Numeric data display mode of EBL2**

Selects the numeric data display mode of EBL2 depending on the true or relative bearing. The selection changes each time the button is pressed.

T is displayed while true bearing is selected;  R is displayed while relative bearing is selected.

→See section 3.5.3 on page 3-26.

④②: **Memory intervals for own ship track display**

Selects track data memory intervals for own ship. The setting changes each time the button is pressed.

→See section 3.6.2 on page 3-68/70.

④③: **Selection of units of memory intervals for own ship's track display**

Selects units of memory intervals for own ship's track display. The selection switches back and forth between

sec →  min and  nm each time the button is clicked.

→See section 3.6.2 on page 3-68.

④④: **Selection of bearing sensor**

The bearing sensor in use is displayed.

④⑤: **Selection of speed sensor**

Selects a speed sensor. The selection changes in the following sequence each time the button is pressed.

MAN →  LOG →  2AXW →  2AXG →  GPS

(Manual) (1-axis log) (2-axis log water) (2-axis ground)

An alarm occurs if a speed sensor not connected to the radar is selected.

While  MAN is selected for the speed sensor, a value can be entered by moving the cursor to the value area and left-clicking.

④⑥: **Selection of time display mode**

Selects  UTC or  LOCAL for the time display mode. The selection changes each time the button is pressed.

UTC: Universal time coordinated

LOCAL: Local time

→See section 8.6 on page 8-96.

④⑥: SET/DRIFT

Turns on/off the SET/DRIFT correction.

If CORRECTION is on, **CORR** is displayed beside the button. In this case, the values shown to the right of **CORR** are valid. CORRECTION can be selected only when **MANUAL** or **LOG** (1-axis log) or **2AXW** (2-axis log speed against water) is selected for the speed sensor.

SET setting

To enter a value, move the cursor to the value area and left-click.

This setting is valid only when CORRECTION is set to ON.

DRIFT setting

To enter a value, move the cursor to the value area and left-click.

This setting is valid only when CORRECTION is set to ON.

→See section 8.6 on page 8-73.

④⑦: ATA vector mode

Selects a vector mode for ATA symbol display.

T: Indicates true vector. R: Indicates relative vector.

This selection changes with the PAST POSN (past position) display mode.

→See section 5.2.4 on page 5-16.

④⑧: PAST POSN display mode

Selects a display mode for ATA's PAST POSN.

**T**: Indicates true past position. **R**: Indicates relative past position.

This selection changes with the ATA vector mode.

→See section 5.2.4 on page 5-19.

④⑨: Guard zone 1 function ON/OFF

Sets the guard zone 1 function to ON or OFF.

→See section 5.2.1 on page 5-12.

④⑩: Guard zone 2 function ON/OFF

Sets the guard zone 2 function to ON or OFF.

→See section 5.2.1 on page 5-12.

④⑪, ④⑫: Scroll of ATA numeric data display

Pressing either of the buttons scrolls the target ship IDs in the ATA numeric data display area.

→See section 5.2.5 on page 5-21.

④⑬: ATA TARGET display

Displays the ATA numeric data display screen when pressed while the menu screen is open.

④⑭: RADAR menu

This button operates similarly to the **[RADAR MENU]** key on the control panel.

Press the button to open the "MAIN MENU" screen.

④⑮: ATA menu

This button operates similarly to the **[ATA MENU]** key on the control panel.

Press the button to open the "ATA MENU" screen.

Use this menu screen to set the ATA function and AIS function.

④⑯: PLOT menu

Press this button to open the "PLOT MENU" screen.

Use this menu screen to set the plotter function.

- ⑤7: **TEST menu**  
Press this button to open the “TEST MENU” screen.  
Use this menu screen to operate the self-diagnostic function in the radar.
- ⑤8: **DISPLAY screen**  
Press this button to display optional information such as navigation information.  
For the setting of information to be displayed, see section 3.10.4 on page 3-105.
- ⑤9: **Selection of display item**  
The display switches back and forth between the brilliance control screen and the display information setting screen each time this button is pressed.



**DISPLAY INFO**

- USER MAP:** Navigation information readout function  
The menu for calling a user-created map opens.
- PIN (Personal Information):**  
Personal code call function  
The PIN menu opens. Use this menu to load, save, and delete data.

- ⑥0: **PANEL brilliance**  
Sets the brilliance of operation panel illumination. Five brilliance levels are set each time this button is pressed.  
→See section 3.3.3 on page 3-9.
- ⑥1: **VID brilliance**  
Controls the video level of echoes.  
Brilliance changes each time this button is pressed. Four brilliance levels are switched in the following sequence:  
1 → 2 → 3 → 4  
→See section 3.3.2 on page 3-8.
- ⑥2: **ATA brilliance**  
Controls the brilliance of ATA symbols.  
Brilliance changes each time this button is pressed. Five brilliance levels are switched in the following sequence:  
OFF → 1 → 2 → 3 → 4
- ⑥3: **DAY/NIGHT mode**  
Selects a DAY/NIGHT mode. Brilliance changes according to the selected mode each time this button is pressed. Four brilliance levels are set in the following sequence:  
DAY1 → DAY2 → NIGHT1 → NIGHT2  
→See section 3.3.4 on page 3-9.
- ⑥4: **ALM ACK (Alarm acknowledgment function)**  
Press this button to stop the alarm buzzing and the alarm lamp flashing. If more than one alarm has occurred, the next alarm to be acknowledged is indicated.  
The uppercase displays an alarm that can be acknowledged by pressing the key.  
The lowercase displays current alarms one by one.  
→See section 3.3.7 on page 3-11.



# SECTION 3

## BASIC OPERATION


3.1	FLOW OPERATION .....	3-1	3.5.13	Zoom.....	3-49
3.1.1	Power ON and Start the System .....	3-2	3.5.14	Use Marker [MOB].....	3-50
3.1.2	Observe and Adjust Video.....	3-3	3.5.15	Marking [MARK].....	3-51
3.1.3	Acquire and Measure Data.....	3-3	3.5.16	Operate EBL Maneuver Function (EBL Maneuver) .....	3-52
3.1.4	End the Operation and Stop the System.....	3-4	3.5.17	Operate Multi-Function Control [MULTI].....	3-55
3.2	MENU COMPOSITION.....	3-5	3.5.18	Operate User Key Switches [User Key 1/2].....	3-57
3.2.1	Overview of Menu Structure .....	3-5	3.5.19	Operation of Guard Zone [ATA Guard Zone].....	3-59
3.2.2	Basic Menu Operation .....	3-6	3.5.20	Radar Alarm (Radar Alarm) .....	3-62
3.3	PREPARATION .....	3-8	3.6	DISPLAY OWN SHIP'S TRACK .....	3-66
3.3.1	Adjust Display Brilliance .....	3-8	3.6.1	Display Own Ship's Track (Display Own Track) .....	3-66
3.3.2	Adjust Contrast .....	3-8	3.6.2	Set Own Ship's Track Data Storage Interval (Own Track Interval) .....	3-68
3.3.3	Adjust Operation Panel Brilliance [PANEL].....	3-9	3.6.3	Clear Own Ship's Track Data (Clear Own Track).....	3-69
3.3.4	Switch Day/Night Mode [DAY/NIGHT].....	3-9	3.6.4	Cancel Storing of Own Ship's Track Data (Own Track Memory) .....	3-70
3.3.5	Adjust Brilliance of Information on Radar Display (Brilliance Setting) .....	3-10	3.7	DISPLAY CHARTS.....	3-71
3.3.6	Adjust Sound Volume (Buzzer Volume) .....	3-11	3.7.1	Display Coastline ROM Card Produced by JRC.....	3-71
3.3.7	Reset Alarm Buzzer [ALARM ACK].....	3-11	3.7.2	Display ERC Card.....	3-72
3.3.8	Set Display Color .....	3-12	3.7.3	Fill Charts (Fill Land Area).....	3-73
3.4	BASIC OPERATIONS .....	3-14	3.8	DISPLAY NAVIGATION INFORMATION.....	3-74
3.4.1	Start Transmission [TX/PRF].....	3-14	3.8.1	Display Waypoint Marks (Waypoint Display).....	3-74
3.4.2	Stop Transmission [STBY].....	3-14	3.8.2	Display Navigation Information (NAV Display Setting) .....	3-75
3.4.3	Change Range (Observation Range Scale) [RANGE+/-].....	3-14	3.8.3	Create/Edit Navigation Information (Edit User Map).....	3-76
3.4.4	Tune.....	3-15	3.8.4	Set Navigation Information (User Map Setting) .....	3-82
3.4.5	Control Sensitivity [GAIN/PL] .....	3-15	3.8.5	Set and Display Geodetic System .....	3-89
3.4.6	Suppress Sea Clutter [AUTO-SEA].....	3-16	3.9	OPERATE PERFORMANCE MONITOR (PM DISPLAY).....	3-91
3.4.7	Suppress Rain/Snow Clutter [AUTO-RAIN] .....	3-18	3.9.1	Operation Procedures .....	3-91
3.4.8	Reject Radar Interference [IR].....	3-20	3.10	APPLIED OPERATIONS.....	3-97
3.4.9	Hide/Display Range Rings (RINGS).....	3-21	3.10.1	Set Radar Signal Processing (Process Setting) .....	3-97
3.4.10	Hide Ship's Heading Line (HL OFF).....	3-21	3.10.2	Set Radar Trails (RADAR Trails Setting).....	3-100
3.4.11	Hide Graphics Information on Radar Display (Graphic Display) .....	3-22	3.10.3	Set Cursor (Cursor Setting) .....	3-104
3.5	GENERAL OPERATIONS .....	3-23	3.10.4	Set Screen .....	3-105
3.5.1	Move Cross Cursor Mark by Trackball.....	3-23	3.10.5	Set Scanner (TRX Setting) .....	3-109
3.5.2	Use EBLs (Electronic Bearing Lines) [EBL1/2] .....	3-24	3.10.6	Set Chart Display (Map Setting) .....	3-111
3.5.3	Set EBL Operation (EBL1 /2 Setting).....	3-26	3.10.7	Set LORAN C (LORAN C Correction) .....	3-123
3.5.4	Display Variable Range Markers [VRM1/VRM2].....	3-29	3.11	USE FUNCTION SWITCH [FUNC] .....	3-124
3.5.5	Display Parallel Index Lines (Parallel Index Line) .....	3-32	3.11.1	Operation Procedures .....	3-124
3.5.6	Switch Bearing Display Mode [AZI MODE] .....	3-40	3.11.2	Function Setting Menu Items .....	3-125
3.5.7	Switch True/Relative Motion Display Mode [TMRM] .....	3-41	3.11.3	Overview of Function Operations .....	3-126
3.5.8	Move Own Ship's Display Position [OFF CENT] .....	3-42	3.11.4	Overview of Stored Function Setting Data .....	3-129
3.5.9	Display Other Ships' Trails [TRAILS].....	3-43	3.11.5	Personal Information (PIN Setting) .....	3-130
3.5.10	Switch Pulse Length (GAIN/PL) .....	3-46	3.12	USING CARD .....	3-133
3.5.11	Expand Targets (Target Enhance).....	3-47	3.12.1	Save in and Transfer to Card (MEM CAPA/Copy).....	3-134
3.5.12	Use Video Process (Process) .....	3-48	3.12.2	Erase/Initialize Card Memory (CLR MEM INIT Card).....	3-140

---

## 3.1 FLOW OPERATION

### Attention

- **Do not put anything on the operation panel.  
If you put anything hot on it, it may be deformed.**
- **Do not give any impact to the operation panel,  
trackball, or controls.  
Otherwise, any failure or damage may result.**

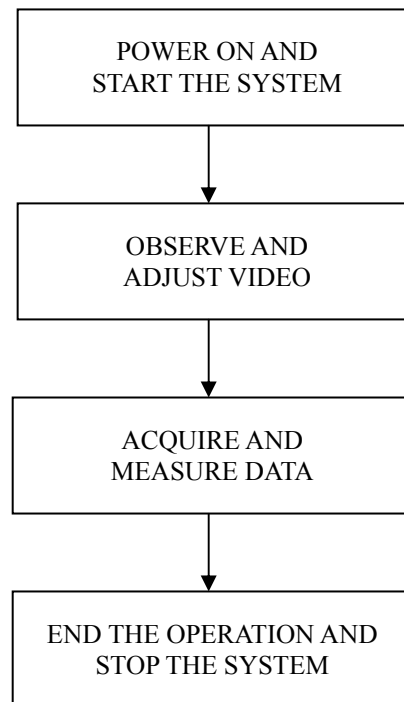

Each operation is described in detail below.

### 3.1.1 Power ON and Start the System

## Caution



A malfunction may occur if the power in the ship is instantaneously interrupted during operation of the radar. In this case, the power should be turned on again.

### Attention

- Wait for about 2 seconds before turning on the power again.
- Immediately after the radar is installed, at start of the system after it has not been used for a long time, or after the magnetron is replaced, preheat the equipment in the standby state for 20 to 30 minutes before setting it into the transmit state.
- If the preheating time is short, the magnetron causes sparks, resulting in its unstable oscillation. Start transmission on a short-pulse range and change the range to the longer pulse ranges in turn. If the transmission is unstable in the meantime, immediately place the system back into the standby state and maintain it in the standby state for 5 to 10 minutes before restarting the operation. Repeat these steps until the operation is stabilized.

**Procedures**

- 1 Check that the ship's mains are turned on.
- 2 Press [STBY] key.

The system is turned on, and the preheating time is displayed. [PREHEAT] is indicated at the upper left of the radar display.

- 3 Wait until the preheating time is over.

When the preheating time is over, the preheating time screen disappears, and [PREHEAT] at the upper left of the radar display changes to [STANDBY].

- 4 Press [TX/PRF] key.

The radar will start transmission and the antenna will start rotating. [STANDBY] at the upper left of the radar display changes to [TRANSMIT].

**Note:** The radar does not start transmission if you press [TX/PRF] key while [PREHEAT] is indicated.

### 3.1.2 Observe and Adjust Video

**Procedures**

- 1 Press [RANGE+] key or [RANGE-] key to set the range to the scale required for target observation.
- 2 Turn the controls [GAIN], [SEA], and [RAIN] to obtain the clearest targets.

Refer to  
[GAIN]→3-16  
[SEA]→3-17  
[RAIN]→3-19  
for how to use each control.

### 3.1.3 Acquire and Measure Data

For details on data acquisition and measurement, refer to Section 3.4 "BASIC OPERATIONS" and Section 4 "MEASUREMENT OF RANGE AND BEARING."





### 3.1.4 End the Operation and Stop the System

**Exit**

- 1 Press [STBY] key.

The radar will stop transmission and the antenna will stop rotating.

**TRANSMIT** at the upper left of the radar display changes to **STANDBY**.

[ Maintain the standby state if radar observation is restarted in a relatively short time.  
Only pressing the [TX/PRF] key starts observation. ]

- 2 Press the [STBY] key and the [TX/PRF] key together.

The system will be turned off.



## Warning



**When conducting maintenance work, make sure to turn off the power and unplug the power connector J1 of the processor so that the power supply to the equipment is completely cut off.**


**Some equipment components can carry electrical current even after the power switch is turned off, and conducting maintenance work without unplugging the power connector may result in electrocution, equipment failure, or accidents.**

---

## 3.2 MENU COMPOSITION

The Menu system of this radar equipment consists of the main menu and the submenus up to the lower 2 levels. You can jump to each menu by pressing the menu button at the lower right of the radar display or the switch on the operation panel.

### 3.2.1 Overview of Menu Structure

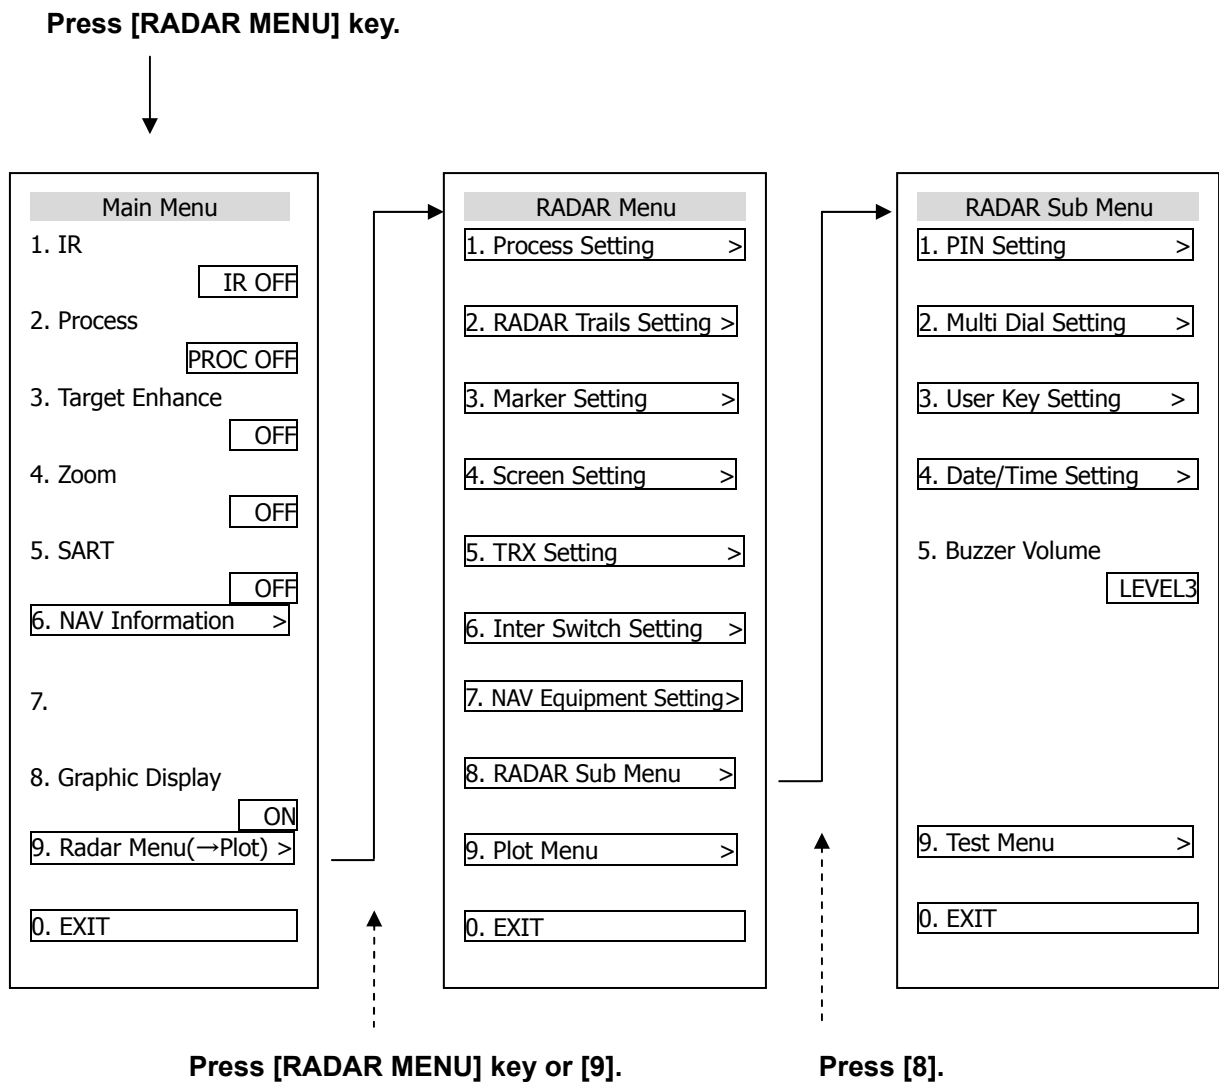

Use the Main Menu to change the settings of signal processing functions, use the radar menu to change the settings of other detailed information, and use the Radar Submenus to change the less frequently used settings or run the system's self-diagnostic program.

## 3.2.2 Basic Menu Operation


### To open the menu:

Press [RADAR MENU] key.

### To close the menu:

Press [RADAR MENU] key.


Alternatively, hold down [0] key until the menu closes.

\* Button  on the radar display on page 2-7 is also available to switch between ON and OFF.

### To move to a lower level of the menu:


The menu is in hierarchical structure. Press the numeric keys [1]-[9] corresponding to the desired menu item number. Control will move to the lower level.

Alternatively, place the cursor over the item and then press [ENT] key.

 is shown at the right end of a menu item having a lower level.

### To move to a higher level of the menu:

Press [0] key while the menu is open. Control will return to the higher level from the lower level.

Alternatively, place the cursor over the  item and then press [ENT] key.

### To determine an item:

Press the numeric keys [1]-[9] corresponding to the desired item number. The selected item will be displayed. Alternatively, place the cursor over the item you want to change, and then press [ENT] key.

### To determine the selected item:

Press the numeric keys [1]-[9] corresponding to the selected item number. Alternatively, place the cursor over the selected item and then press [ENT] key. If you do not change the setting of the selected item, press [CLR/INFO] key.


---

## Menu Operation with the Trackball

The menu items are software buttons that can be operated with the trackball.

An item can be selected by pointing the trackball cursor to the item and pressing [ENT] key, instead of using the numeric key.

### Example of menu display

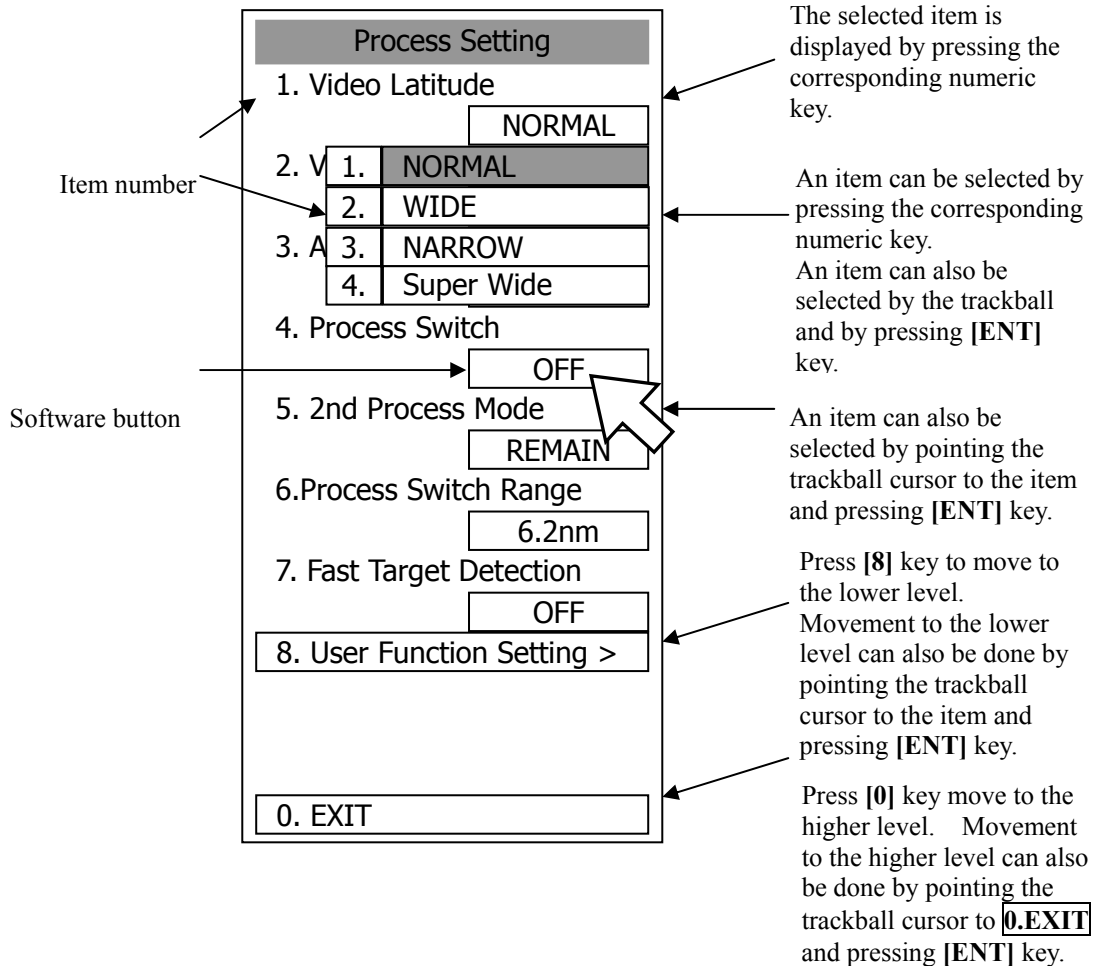

# 3.3 PREPARATION

## 3.3.1 Adjust Display Brilliance

### Procedures

- 1 Obtain the best-to-see display with optimum brilliance by turning the [BRILL] control at the lower right of the display unit.

Turning the [BRILL] control clockwise increases the brilliance of the entire display. Conversely, turning the [BRILL] control counterclockwise decreases the brilliance of the entire display.

In consideration of the ambient brightness, adjust display brilliance that is high enough to easily observe the radar display but does not glare.


## 3.3.2 Adjust Contrast

Adjust the contrast of the radar video display.

### Procedures

- 1 Point the trackball to the **VID** button (\* Button ⑥ on the radar display on page 2-7) at the lower right of the radar display, press [ENT] key, and then make adjustment to obtain the best-to-see video.

Point the trackball to the **VID** button at the lower right of the radar display and then press [ENT] key to adjust the contrast of the radar video display at four levels.

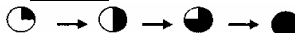Each time the **VID** button is clicked, the contrast level changes in the following sequence: 

Adjust the **VID** button to obtain the best-to-see video with optimum contrast.

---

### 3.3.3 Adjust Operation Panel Brilliance [PANEL]

#### Procedures

- 1 Press [PANEL] key to adjust the brilliance of the operation panel light.

There are five brilliance levels, and brilliance increases by one level each time the [PANEL] key is pressed. When it reaches the highest level, it is resumed to the lowest level.

In consideration of the ambient brightness, adjust panel brilliance that is high enough to read the characters on the operation panel but does not glare.

The [PANEL] key lamp lights up irrespective of panel brilliance adjustment.

\* Button ⑥ on the radar display on page 2-7 is also available for switching.

### 3.3.4 Switch Day/Night Mode [DAY/NIGHT]

The day/night mode changes in the following sequence each time the [DAY/NIGHT] key is pressed:

DAY1 → DAY2 → NIGHT1 → NIGHT2

The current mode is indicated at the lower right of the radar display.

The brilliance level in accordance with the selected mode is saved. For brilliance adjustment, refer to page next page. For day/night mode switching, refer to 3-12page Section 3.3.8 “Set Display Color.”

\* Button ③ on the radar display on page 2-7 is also available for switching.

### 3.3.5 Adjust Brilliance of Information on Radar Display (Brilliance Setting)

Brilliance can be adjusted for each item of information on the radar display by operating the menu.

<b>RADAR Video</b>	Adjusts the brilliance of radar echoes.
<b>RADAR Trails</b>	Adjusts the brilliance of radar trails.
<b>ATA/AIS</b>	Adjusts the brilliance of ATA symbols and AIS symbols.
<b>FIX Marker</b>	Adjusts the brilliance of fixed range markers.
<b>EBL/VRM</b>	Adjusts the brilliance of variable range markers (VRM1 and VRM2) and electronic bearing lines (EBL1 and EBL2).
<b>Character</b>	Adjusts the brilliance of characters.
<b>Panel</b>	Adjusts the brilliance of operation panel.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [4] key.

Press [2] key.

The Brilliance Setting Menu will appear.

- 2 Select the item for which brilliance is to be adjusted, pressing the numeric keys [1] to [7].

The pull-down menu will appear showing the brilliance levels.

- 3 Select the brilliance level number to be set, pressing the numeric key.

The selected brilliance level will be set.

To change the setting of another item, repeat steps 2 and 3.

#### Exit

- 1 Press [RADAR MENU] key.

The menu will be closed.

Brilliance Setting	
1. RADAR Video	LEVEL4
2. RADAR Trails	LEVEL1
	LEVEL2
3. ATA/AIS	LEVEL3
	LEVEL4
4. Fix Marker	LEVEL2
5. EBL/VRM	LEVEL2
6. Character	LEVEL4
7. Panel	LEVEL4
0. EXIT	

**Note:** The brilliance levels set here are saved in accordance with the day/night mode.

### 3.3.6 Adjust Sound Volume (Buzzer Volume)

**Procedures**

- 1 Press [RADAR MENU] key twice.

Press [8] key.

The RADAR Sub Menu will appear.

- 2 Press [5] key to select Buzzer Volume.

The pull-down menu will appear showing the volume levels.

- 3 Select the volume level number to be set, pressing the numeric keys [1] to [5].

The selected volume level will be set.

**Exit**

- 1 Press [RADAR MENU] key.

The menu will be closed.

RADAR Sub Menu	
1. PIN Setting	
2. Multi Dial Setting	
3. User Key Setting	
4. Date/Time Setting	
5. Buzzer Volume	
	LEVEL4
1.	OFF
2.	LEVEL1
3.	LEVEL2
4.	LEVEL3
5.	LEVEL4
9. Test Menu	
0. EXIT	


### 3.3.7 Reset Alarm Buzzer [ALARM ACK]

When an audible alarm is issued, use ALARM ACK to acknowledge the alarm information, stop the alarm buzzing, and stop the alarm lamp flashing. (If more than one alarm has occurred, press the switch for each alarm indication.) The alarm stops buzzing, but the alarm indication does not disappear.

**Procedures**

- 1 Press [ALARM ACK] key.

The alarm will stop buzzing.

\* Button  on the radar display on page 2-7 is also available to stop buzzing the alarm.



### 3.3.8 Set Display Color

For each day/night mode, set the colors of the background outside the bearing scale, the background inside the bearing scale, characters, radar echoes, and radar trails.

Color Adjustment by Menu Operation

<b>Day/Night</b>	Registers the switching of a day/night mode.
<b>Color Scheme</b>	Calls a preset color scheme pattern.
<b>Outer PPI</b>	Adjusts the background color outside the bearing scale.
<b>Inner PPI</b>	Adjusts the background color inside the bearing scale.
<b>Character</b>	Adjusts the colors of characters and bearing scales.
<b>RADAR Echo</b>	Adjusts the colors of radar echoes.
<b>RADAR Trails</b>	Adjusts the colors of radar trails.
Time:	Display interval time is selected.
Cont:	Continuous display
<b>HL/Vector/ATA/AIS</b>	Adjusts the colors of HL, Vectors, ATA symbols, AIS symbols.

#### Selecting a Day/Night Mode (Day/Night)

Select the mode for which color setting is to be changed.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [4] key.

Press [1] key.

The Display Color Setting Menu will appear.

- 2 Press [1] key.

The Day/Night mode selection screen will appear.

- 3 Select the mode number for color adjustment, pressing the numeric keys [1] to [4].

The mode will be selected.

Display Color Setting	
1. Day/Night	DAY1
2. C 1.	DAY1
	2. DAY2
3. C 3.	NIGHT1
	4. NIGHT2
4. Inner PPI	BLACK
5. Character	WHITE
6. RADAR Echo	YELLOW
7. RADAR Trails ( Time )	CYAN
8. RADAR Trails ( Cont )	WHITE
9. HL/Vector/ATA/AIS	WHITE
0. EXIT	

## Setting Colors of Items

Set the display color of each item.

### **Procedures**

- 1 While the Display Color Setting Menu is open, select the item number for color setting, pressing the numeric keys [3] to [8].**

The color selection screen will appear.

- |                       |   |
|-----------------------|---|
| 3. Outer PPI:         | Adjusts the background color outside the bearing scale. |
| 4. Inner PPI:         | Adjusts the background color inside the bearing scale.  |
| 5. Character:         | Adjusts the colors of characters and bearing scales.    |
| 6. RADAR Echo:        | Adjusts the colors of radar echoes.                     |
| 7. 8. RADAR Trails:   | Adjusts the colors of radar trails.                     |
| Time:                 | Display interval time is selected.                      |
| Cont:                 | Continuous display                                      |
| 9. HL/Vector/ATA/AIS: | Adjusts the colors of HL, Vectors, ATA, and AIS.        |

- 2 Select the color number to be set, pressing the numeric key.**

The selected color will be set.

To set more than one color, repeat steps 1 and 2.

Display Color Setting									
1. Day /Night	<input type="text" value="DAY1"/>								
2. Color Scheme	<input type="text" value="ORIGINAL"/>								
3. Outer PPI	<input type="text" value="GRAY"/>								
4. Inner PPI	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr style="background-color: #cccccc;"><td style="width: 20px; text-align: center;">1.</td><td>GRAY</td></tr> <tr><td style="text-align: center;">2.</td><td>BLUE</td></tr> <tr><td style="text-align: center;">3.</td><td>DARK BLUE</td></tr> <tr><td style="text-align: center;">4.</td><td>BLACK</td></tr> </table>	1.	GRAY	2.	BLUE	3.	DARK BLUE	4.	BLACK
1.	GRAY								
2.	BLUE								
3.	DARK BLUE								
4.	BLACK								
5. Cont	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="width: 20px; text-align: center;">1.</td><td>GRAY</td></tr> <tr><td style="text-align: center;">2.</td><td>BLUE</td></tr> <tr><td style="text-align: center;">3.</td><td>DARK BLUE</td></tr> <tr><td style="text-align: center;">4.</td><td>BLACK</td></tr> </table>	1.	GRAY	2.	BLUE	3.	DARK BLUE	4.	BLACK
1.	GRAY								
2.	BLUE								
3.	DARK BLUE								
4.	BLACK								
6. RADAR Echo	<input type="text" value="YELLOW"/>								
7. RADAR Trails ( Time )	<input type="text" value="CYAN"/>								
8. RADAR Trails ( Cont )	<input type="text" value="WHITE"/>								
9. HL/Vector/ATA/AIS	<input type="text" value="WHITE"/>								
0. EXIT	<input type="text" value=""/>								

### **Exit**

- 1 Press [RADAR MENU] key.**

The menu will be closed.



# 3.4 BASIC OPERATIONS

## 3.4.1 Start Transmission [TX/PRF]

### Procedures

- 1 Press [TX/PRF] key.

The radar will start transmission and the antenna will start rotating.  
The indication **STANDBY** at the upper left of the radar display changes to **TRANSMIT**.

**Note:** The radar does not start transmission if you press [TX/PRF] key while **PREHEAT** is indicated.

## 3.4.2 Stop Transmission [STBY]

### Procedures

- 1 Press [STBY] key.

The radar will stop transmission and the antenna will stop rotating.  
The indication **TRANSMIT** at the upper left of the radar display changes to **STANDBY**.

\* Button ⑥ on the radar display on page 2-7 is also available to start/stop transmission.

## 3.4.3 Change Range (Observation Range Scale) [RANGE+/-]

### Procedures

- 1 Press [RANGE+] key or [RANGE-] key to set the range to the scale required for target observation.

To observe long-range targets, press [RANGE+] key.  
To zoom and observe a short-range target near the own ship, press [RANGE-] key.

\* Button ① on the radar display on page 2-7 is also available to switch the range.

---

### 3.4.4 Tune

This system tunes the transmitting frequency and receiving frequency under automatic control, so it does not need any tuning by hand

### 3.4.5 Control Sensitivity [GAIN/PL]

#### **Procedures**

- 1 **Control noise on the radar display by turning the [GAIN/PL] control until targets can be easily observed.**

Turning [GAIN/PL] control clockwise increases sensitivity.

Turning [GAIN/PL] control counterclockwise decreases sensitivity.

Turning the [GAIN/PL] control clockwise increases receiving sensitivity and extends the radar observation range. If the sensitivity is too high, the receiver noise increases reducing the contrast between the targets and the background video. As a result, the targets become obscure on the radar display.

To observe densely crowded targets or short-range targets, turn the [GAIN/PL] control counterclockwise to reduce the sensitivity so that the targets are easy to observe. However, be careful not to overlook important small targets.



### 3.4.6 Suppress Sea Clutter [AUTO-SEA]

## Caution



When using the [AUTO SEA] function, never set the suppression level too high canceling out all image noises from the sea surface at close range.

Detection of not only echoes from waves but also targets such as other ships or dangerous objects will become inhibited.

When using the [AUTO SEA] function, make sure to choose the most appropriate image noise suppression level.

# 3

#### Procedures

- 1 Control the sea clutter returns on the radar display by turning the [AUTO-SEA] control until targets can be easily observed.

Turning [AUTO-SEA] control clockwise suppresses sea clutter returns.

Turning [AUTO-SEA] control counterclockwise intensifies sea clutter returns.

The sea clutter suppression function suppresses sea clutter returns by decreasing the receiving sensitivity on a short range.

Turning the [AUTO-SEA] control clockwise heightens the effect of sea clutter suppression.

However, be careful that excessive suppression causes low signal-strength targets such as buoys and boats to disappear from the radar display.

Before sea clutter returns can be suppressed in accordance with their intensity, the automatic sea clutter suppression mode must be selected by pressing the [AUTO-SEA] control. Use this automatic mode when sea clutter returns vary in direction.

To change back to the manual mode, press the [AUTO-SEA] control again.

**Note:** The AUTO SEA (automatic sea clutter suppression) mode and the AUTO RAIN (automatic rain/snow clutter suppression) mode cannot be used at the same time.

#### Using AUTO SEA (automatic sea clutter suppression function)

#### Procedures

- 1 Press the [AUTO-SEA] control.

AUTO SEA is selected, and SEA AUTO is indicated at the lower left of the radar display. If AUTO SEA is selected, rotating the AUTO RAIN control and AUTO SEA control can make fine adjustments manually.

-----

**Note:** When AUTO SEA is selected, AUTO RAIN is switched to the manual mode.  
AUTO SEA and AUTO RAIN cannot be selected at the same time.

**Cancellation**

**1 Press the [AUTO-SEA] control.**

AUTO SEA is deselected, SEA  at the lower left of the radar display changes to SEA , and AUTO SEA is cancelled.

\* Button ⑭ on the radar display on page 2-7 is also available to switch AUTO/MANUAL.



### 3.4.7 Suppress Rain/Snow Clutter [AUTO-RAIN]



## Caution



When using the [AUTO RAIN] function, never set the suppression level too high canceling out all image noises from the rain or snow at the close range.

Detection of not only echoes from the rain or snow but also targets such as other ships or dangerous objects will become inhibited.

When using the [AUTO RAIN] function, make sure to choose the most appropriate image noise suppression level.

# 3

#### Procedures

- 1 Control the rain/snow clutter returns on the radar display by turning the [AUTO-RAIN] control until targets can be easily observed.

Turning [AUTO-RAIN] control clockwise suppresses rain/snow clutter returns.

Turning [AUTO-RAIN] control counterclockwise intensifies rain/snow clutter returns.

When the [AUTO-RAIN] control is turned clockwise, the rain/snow clutter suppression function suppresses rain/snow clutter returns and gets targets hidden by rain/snow clutter returns to appear on the radar display. However, be careful that excessive suppression may cause small targets to be overlooked. Since the rain/snow clutter suppression function also has the effect of suppressing sea clutter, the suppression efficiency improves when the [AUTO-RAIN] control is used with the [AUTO-SEA] control. In general, turn the [AUTO-RAIN] control fully to the left.

Before rain/snow clutter returns can be suppressed in accordance with their intensity, the automatic rain/snow clutter suppression mode must be selected by pressing the [AUTO-RAIN] control.

To change back to the manual mode, press the [AUTO-RAIN] control again.

**Note:** The AUTO SEA (automatic sea clutter suppression) mode and the AUTO RAIN (automatic rain/snow clutter suppression) mode cannot be used at the same time.

#### Using AUTO RAIN (automatic rain/snow clutter suppression function):

#### Procedures

- 1 Press the [AUTO-RAIN] control.

AUTO RAIN is selected, and RAIN AUTO is indicated at the lower left of the radar display. Rotating the AUTO RAIN control and AUTO SEA control can make fine adjustments manually.

-----

**Note:** When AUTO RAIN is selected, AUTO SEA is switched to the manual mode.  
AUTO SEA and AUTO RAIN cannot be selected at the same time.

**Cancellation**

**1 Press the [AUTO-RAIN] control.**

AUTO RAIN is deselected, RAIN  at the lower left of the radar display changes to RAIN , and AUTO RAIN is cancelled.

\* Button ⑤ on the radar display on page 2-7 is also available to switch AUTO/MANUAL.



### 3.4.8 Reject Radar Interference [IR]

#### Procedures

- 1 Press [RADAR MENU] key.

The Main Menu will appear.

- 2 Press [1] key.

The IR Menu will appear.

- 3 Select the level number to be set, pressing the numeric keys [1] to [4].

The selected level will be set.

Rejection levels of the interference rejector

IR OFF: Interference rejector off

IR LOW: Interference rejection level - low

IR MEDIUM: Interference rejection level - moderate

IR HIGH: Interference rejection level - high

When a high interference rejection level is selected, the radar's ability of detecting small targets such as buoys and small boats lowers.

In general, [IR LOW] should be selected.

Main Menu	
1. IR	<input type="button" value="IR OFF"/>
2. P 1.	<input type="button" value="IR OFF"/>
	<input type="button" value="IR LOW"/>
3. T 3.	<input type="button" value="IR MED"/>
	<input type="button" value="IR HIGH"/>
4. Zoom	<input type="button" value="OFF"/>
5. SART	<input type="button" value="OFF"/>
6. NAV Information	
7.	
8. Graphic Display	<input type="button" value="ON"/>
9. RADAR Menu (Plot)	
0. EXIT	

\* Button ⑩ on the radar display on page 2-7 is also available to switch IR settings.

#### Attention

- When viewing a radar beacon or SART signal, select IR OFF (Interference Rejector OFF) because IR processing suppresses the video.

---

### 3.4.9 Hide/Display Range Rings (RINGS)

**Procedures**

- 1 Press [RR/HL] key.

The range rings display switches back and forth between display and non-display each time [RR/HL] key is pressed.

Refer to page 3-10 for how to change the brilliance of range rings.

\* Button ② on the radar display on page 2-7 is also available to switch between ON and OFF.

### 3.4.10 Hide Ship's Heading Line (HL OFF)

**Procedures**

- 1 Hold down [RR/HL] key.

The ship's heading line is hidden while [RR/HL] key is held down.

The ship's heading line (HL) that presents the course of own ship is always shown on the radar display. The heading line is hidden while [RR/HL] key is held down, so the targets on the heading line can be easily observed.

\* Button ② on the radar display on page 2-7 is also available to switch between ON and OFF.



### 3.4.11 Hide Graphics Information on Radar Display (Graphic Display)

#### Procedures

- 1 Press [RADAR MENU] key.

The Main Menu will appear.

- 2 Press [8] key.

The setting of Graphic Display will be changed to **ON**.

Graphics information other than VRMs, EBLs, HL, cross cursor mark, and range rings on the radar display is temporarily hidden.

#### Cancellation

- 1 Press [RADAR MENU] key.

The Main Menu will appear.

- 2 Press [8] key.

The setting of Graphic Display will be changed back to **OFF**.

Temporarily hidden graphics information is displayed again.



Main Menu	
1. IR	<input type="button" value="IR OFF"/>
2. Process	<input type="button" value="PROC OFF"/>
3. Target Enhance	<input type="button" value="OFF"/>
4. Target Enhance	<input type="button" value="OFF"/>
5. SART	<input type="button" value="OFF"/>
6. NAV Information	
7.	
8. Graphic Display	<input type="button" value="ON"/>
9. RADAR Menu ( Plot )	
0. EXIT	

Various graphics information such as ATA/AIS symbols, NAV lines, and MAP information is shown on the radar display of this system, and may make it difficult to view the radar video. In this case, use this function to temporarily hide unnecessary graphics information.

---


# 3.5 GENERAL OPERATIONS


## 3.5.1 Move Cross Cursor Mark by Trackball

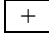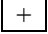The cross cursor mark  is used for position designation and other purposes in various operating procedures. The cross cursor mark  moves in coupling with the trackball. If the trackball is rotated up and down or right and left, the cross cursor mark follows the move of the trackball. Operators must be familiar with trackball operation before running the system.

### Operation inside Radar Video PPI

The cross cursor mark as shown at right is displayed inside the radar video PPI.

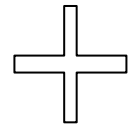

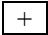- 1) The distance and bearing between own ship and the cross cursor mark , and the degrees of latitude and longitude are indicated at the upper right of the radar display.
- 2) When moving the current center position, use the cross cursor mark to designate a new center position.
- 3) Use the cross cursor mark to create marks and lines.
- 4) When the ATA function is installed as an option, use the cross cursor mark to acquire targets in manual mode.

### Operation outside Radar Video PPI

As shown at right, the cursor mark changes into the pointer outside the radar video PPI.



- 1) Use the pointer to operate software buttons.
- 2) Use the pointer to select menu items.

\* The EBL/VRL dial is available for operating the cursor mark. Pressing the EBL dial for two seconds can perform switching to the trackball operation. For details, refer to Page 3-102.



## 3.5.2 Use EBLs (Electronic Bearing Lines) [EBL1/2]

EBLs (Electronic Bearing Lines) are indispensable to the measurement of bearings. Operators must be familiar with the operation of EBLs beforehand.

### EBL1 Operation

If EBL2 is selected or EBL1 is not displayed, press [EBL1] key to select EBL1 before starting operation. (The currently selected EBL is shown in reverse video at the lower right of the radar display.)

#### **Procedures**

##### **1 Press [EBL1] key.**

EBL1 at the lower right of the radar display will be shown in reverse video, and EBL1 becomes operable.

##### **2 Press [EBL1] key again.**

The EBL1 display will disappear.

\* Button ③① on the radar display on page 2-7 is also available to switch EBL1 between ON and OFF.

### EBL2 Operation

If EBL1 is selected or EBL2 is not displayed, press [EBL2] key to select EBL2 before starting operation. (The currently selected EBL is shown in reverse video at the lower right of the radar display.)

#### **Procedures**

##### **1 Press [EBL2] key.**

EBL2 at the lower right of the radar display will be shown in reverse video, and EBL2 becomes operable.

##### **2 Press [EBL2] key again.**

The EBL2 display will disappear.

\* Button ③② on the radar display on page 2-7 is also available to switch EBL1 between ON and OFF.

**Operation procedures are described on the following pages. For how to measure distance and bearing, see Section 4.**

---

## **EBL Bearing Display**

The bearing values of EBL1 and EBL2 currently displayed on the PPI are indicated at the lower right of the radar display.

The currently operable EBL1 or EBL2 is shown in reverse video beside the bearing value.

## **Starting Point of EBL**

The starting point of the currently operating EBL can be switched from the center of the radar display (CENTER) to any offset position (OFFSET).

**Note:** The offset position of the EBL's starting point can be fixed on the radar display or at specific latitude and longitude. (For details, refer to page 3-28.)

### **[I] Offsetting the starting point of EBL1 while EBL1 is operating:**

#### **Procedures**

#### **1 Press the [EBL] control.**

The indication  C to the right of the EBL value at the lower right of the radar display will change to  O, and "OFFSET" will be set.

\* Button ③⑤ on the radar display on page 2-7 is also available to switch the offset of EBL1.

\* Button ③⑥ on the radar display on page 2-7 is also available to switch the offset of EBL2.

#### **2 Move the starting point of EBL1 with the trackball.**

#### **3 Press [ENT] key at the starting point of EBL1 you want to move.**

The starting point of EBL1 will be determined.

If EBL2 is operating, the starting point of EBL2 is offset.

### **[II] Moving the starting point of EBL1 to the own ship's position while EBL1 is operating:**

#### **Procedures**

#### **1 Press the [EBL] control twice.**

The indication  O to the right of the EBL value at the lower right of the radar display will change to  C, and "CENTER" will be set.

\* Button ③⑤ on the radar display on page 2-7 is also available to switch EBL1 CENTER.

\* Button ③⑥ on the radar display on page 2-7 is also available to switch EBL2 CENTER.

If EBL2 is operating, the starting point of EBL2 moves to the own ship's position.



### 3.5.3 Set EBL Operation (EBL1 /2 Setting)

#### [I] Setting the bearing display mode of EBL1 (EBL1 Bearing REF)

Determine whether to display EBLs (Electronic Bearing Lines) in true bearing mode or relative bearing mode.

##### Procedures

- 1 Press [RADAR MENU] key twice.

Press [3] key

Press [1] key.

The EBL1 Setting Menu will appear.

- 2 Press [1] key.

The setting of EBL1 Bearing REF will be switched between  and .

: EBL1 is displayed in true bearing mode.

: EBL2 is displayed in relative bearing mode.

\* Button ③ on the radar display on page 2-7 is also available to switch the display mode of EBL1.

#### [II] Setting the bearing display mode of EBL2 (EBL2 Bearing REF)

##### Procedures

- 1 Press [RADAR MENU] key twice.

Press [3] key.

Press [2] key.

The EBL2 Setting Menu will appear.

Subsequently, set the bearing display mode of EBL2 performing the same operation as explained in [I].

\* Button ④ on the radar display on page 2-7 is also available to switch the display mode of EBL2.

EBL1 Setting	
1. EBL1 Bearing REF	<input type="text" value="TRUE"/>
2. EBL1 Floating	<input type="text" value="OFF"/>
3. EBL1 Bearing Fix	<input type="text" value="SCREEN"/>
0. EXIT	

# 3

### [III] Setting the mode to move the starting point of EBL1 (EBL1 Floating)

When this function is set to **L/L FIX** and the starting point of an EBL is moved to a position, the starting point can be fixed at the latitude and longitude of that position. The function is effective when the bearing from a certain point is repeatedly measured.

When the function is set to **SCREEN FIX**, the starting point of an EBL is fixed on the radar display. The starting point is always indicated at the same position on the radar display even when the own ship has moved.

#### Procedures

- 1 Press **[RADAR MENU]** key twice.

Press **[3]** key

Press **[1]** key.

The EBL1 Setting Menu will appear.

- 2 Press **[2]** key.

The EBL1 Floating Setting Menu will appear.


- 3 Select the mode number to be set, pressing the numeric keys **[1]** to **[3]**.

The selected mode will be set.

OFF: Floating mode off

SCREEN FIX: The starting point of EBL1 is fixed on the radar display.

L/L FIX: The starting point of EBL1 is fixed at specific latitude and longitude.

\* Button  on the radar display on page 2-7 is also available to switch the Screen Fix and L/L Fix of EBL1.

EBL1 Setting							
1. EBL1 Bearing REF	TRUE						
2. EBL1 Floating	OFF						
3. EBL1 Floating Setting Mode	<table border="1"> <tbody> <tr> <td>1.</td> <td>OFF</td> </tr> <tr> <td>2.</td> <td>SCREEN FIX</td> </tr> <tr> <td>3.</td> <td>L/L FIX</td> </tr> </tbody> </table>	1.	OFF	2.	SCREEN FIX	3.	L/L FIX
1.	OFF						
2.	SCREEN FIX						
3.	L/L FIX						
0. EXIT							

### [IV] Setting the mode to move the starting point of EBL2 (EBL2 Floating)

#### Procedures


- 1 Press **[RADAR MENU]** key twice.

Press **[3]** key.

Press **[2]** key.

The EBL2 Setting Menu will appear.

Subsequently, set the EBL2's starting point move mode performing the same operation as explained in [III].

\* Button  on the radar display on page 2-7 is also available to switch the Screen Fix and L/L Fix of EBL2.

- Notes:**
- The course data and the own ship's latitude and longitude data are required for activating the L/L Fix mode.
  - While the L/L Fix mode is active, the starting point of an EBL will be returned to the center if it disappears from the radar display when moved.



**[V] Setting the EBL1 bearing fix mode (EBL1 Bearing FIX)**

While this function is set to **ANGLE**, an EBL is fixed to the preset bearing. For example, if the true bearing 020° is preset, the EBL is fixed to the true bearing 020° even when the own ship turns.

While the function is set to **SCREEN**, the EBL is fixed on the radar display.

**Procedures**

- 1 Press **[RADAR MENU]** key twice.

Press **[3]** key

Press **[1]** key.

The EBL1 Setting Menu will appear.

- 2 Press **[3]** key.

The setting of EBL1 Bearing Fix will be switched between **ANGLE** and **SCREEN**.

**ANGLE**: EBL1 bearing is fixed to the preset value.

**SCREEN**: EBL1 bearing is fixed on the radar display.

EBL1 Setting	
1. EBL1 Bearing REF	<input type="text" value="TRUE"/>
2. EBL1 Floating	<input type="text" value="OFF"/>
3. EBL1 Bearing Fix	<input type="text" value="SCREEN"/>
<input type="text" value="0. EXIT"/>	

**3****[VI] Setting the EBL2 bearing fix mode (EBL2 Bearing Fix)****Procedures**

- 1 Press **[RADAR MENU]** key twice.

Press **[3]** key.

Press **[2]** key.

The EBL2 Setting Menu will appear.

Subsequently, set the EBL2 bearing fix mode performing the same operation as explained in [V].

**Note:** The course data is required for activating this function.


---

### 3.5.4 Display Variable Range Markers [VRM1/VRM2]

This function is to display and select variable range markers (VRMs). Two VRMs are available: VRM1 is represented as a broken line, and VRM2 as a dotted line. When EBL1 is displayed, VRM1 marker appears on the EBL1. When EBL2 is displayed, VRM2 marker appears on the EBL2. If the starting point of an EBL is offset, the center of a VRM marker is positioned at the starting point of the EBL.

VRM markers displayed on EBL1/EBL2

- mark: VRM1
- mark: VRM2

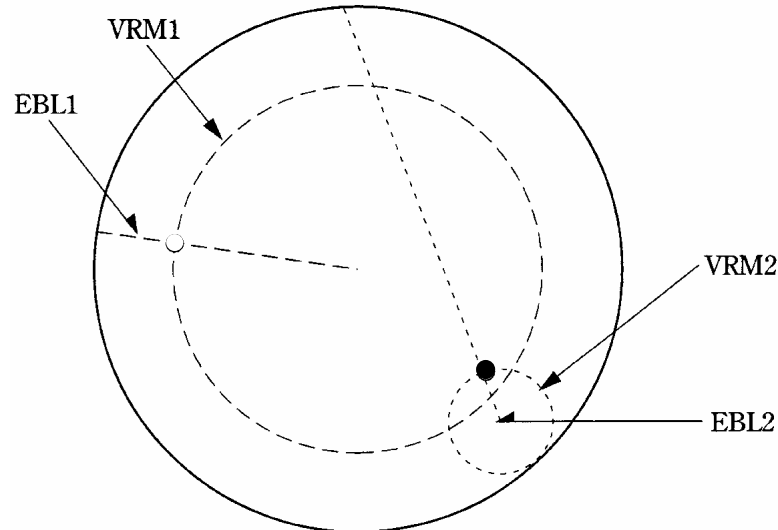

#### VRM1 Operation

If VRM2 is selected or VRM1 is not displayed, press [VRM1] to select VRM1 before starting operation. (The currently selected VRM is shown in reverse video at the lower right of the radar display.)

#### **Procedures**

**1 Press [VRM1] key.**

VRM1 at the lower right of the radar display will be shown in reverse video, and VRM1 becomes operable.

**2 Press [VRM1] key again.**

The VRM1 display will disappear.

\* Button ③ on the radar display on page 2-7 is also available to switch VRM1 between ON and OFF.

#### VRM Operations

The variable range markers are displayed centering around own ship. Turning the [VRM] control clockwise makes the VRM larger. Turning the [VRM] control counterclockwise makes the VRM smaller.

### VRM2 Operation

If VRM1 is selected or VRM2 is not displayed, press [VRM2] key to select VRM2 before starting operation.

(The currently selected VRM is shown in reverse video at the lower right of the radar display.)

**Procedures**

- 1 Press [VRM2] key.

VRM2 at the lower right of the radar display will be shown in reverse video, and VRM2 becomes operable.

- 2 Press [VRM2] key again.

The VRM2 display will disappear.

\* Button on the radar display on page 2-7 is also available to switch VRM2 between ON and OFF.

### VRM Range Display (VRM 1/2 Range Unit)

The values of VRM1 and VRM2 currently displayed on the PPI are indicated at the lower right of the radar display.

The currently operable VRM1 or VRM2 is shown in reverse video beside the range value.

### VRM1 Range Unit

**Procedures**

- 1 Press [RADAR MENU] key twice.

Press [3] key.

The Marker Setting Menu will appear.

- 2 Press [3] key.

The VRM1 Range Unit Setting Menu will appear.

- 3 Select the unit number to be set, pressing the numeric keys [1] to [3].

The selected unit will be set.

\* Button on the radar display on page 2-7 is also available to switch VRM1 range unit.

Marker Setting	
1.	EBL1 Setting
2.	EBL2 Setting
3.	VRM1 Range Unit
	nm
4. V	1. nm
	2. km
5. P	3. sm
6.	Cursor Setting >
7.	EBL Maneuver Setting
8.	Rectangle Cursor >
0.	EXIT

---

## VRM2 range unit

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [3] key.

The Marker Setting Menu will appear.

- 2 Press [4] key.

The VRM2 Range Unit Setting Menu will appear.

- 3 Select the item you want to set, pressing the numeric keys [1] to [3].

The selected item will be set.

\* Button ③ on the radar display on page 2-7 is also available to switch the VRM2 range unit.

Marker Setting		
1. EBL1 Setting		
2. EBL2 Setting		
3. VRM1 Range Unit		nm
4. VRM2 Range Unit		nm
5. P	1.	nm
	2.	km
6. C	3.	sm
7. EBL Maneuver Setting		
8. Rectangle Cursor >		
0. EXIT		

### 3.5.5 Display Parallel Index Lines (Parallel Index Line)

Parallel index lines can be displayed.

#### Procedures

#### 1 Press the [VRM] control.

Parallel index lines and the PI Individual Menu will appear.

To change the direction of parallel index lines, turn the [EBL] control.

To change the line intervals, turn the [VRM] control.

The bearing and interval of parallel index lines are displayed in the menu area.

#### 2 Press the [VRM] control again.

The parallel index line cursor will be fixed.

#### Cancellation

#### 1 Press the [VRM] control again.

The parallel index lines display will disappear.

Parallel Index Line	
1. Display	<input type="text" value="ON"/>
2. Range Link	<input type="text" value="OFF"/>
3. PI Bearing REF	<input type="text" value="TRUE"/>
4. PI Floating	<input type="text" value="OFF"/>
5. PI Bearing Fix	<input type="text" value="SCREEN"/>
6. PI Individual	
PI Bearing	<input type="text" value="T 000.0"/> °
Interval	<input type="text" value="1.00"/> nm
0. EXIT	

# 3

**Note:** Parallel index lines can be operated only while the parallel index line menu is open. After the menu closes, the parallel index lines display remains, but the settings of the bearing and interval cannot be adjusted any more. To adjust the bearing or interval in this case, press the [VRM] control twice to open the parallel index line menu.


\* Button ④ on the radar display on page 2-7 is also available to switch the parallel index lines between ON and OFF.

---

## Operation of Parallel Index Lines

- ⊙ Parallel index lines rotate in the same direction as you turn the **[EBL]** control. (①, ②)
- ⊙ The intervals of parallel index lines narrow when you turn the **[VRM]** control counterclockwise (③), and widen when you turn the **[VRM]** control clockwise (④).

Display of Parallel Index Lines

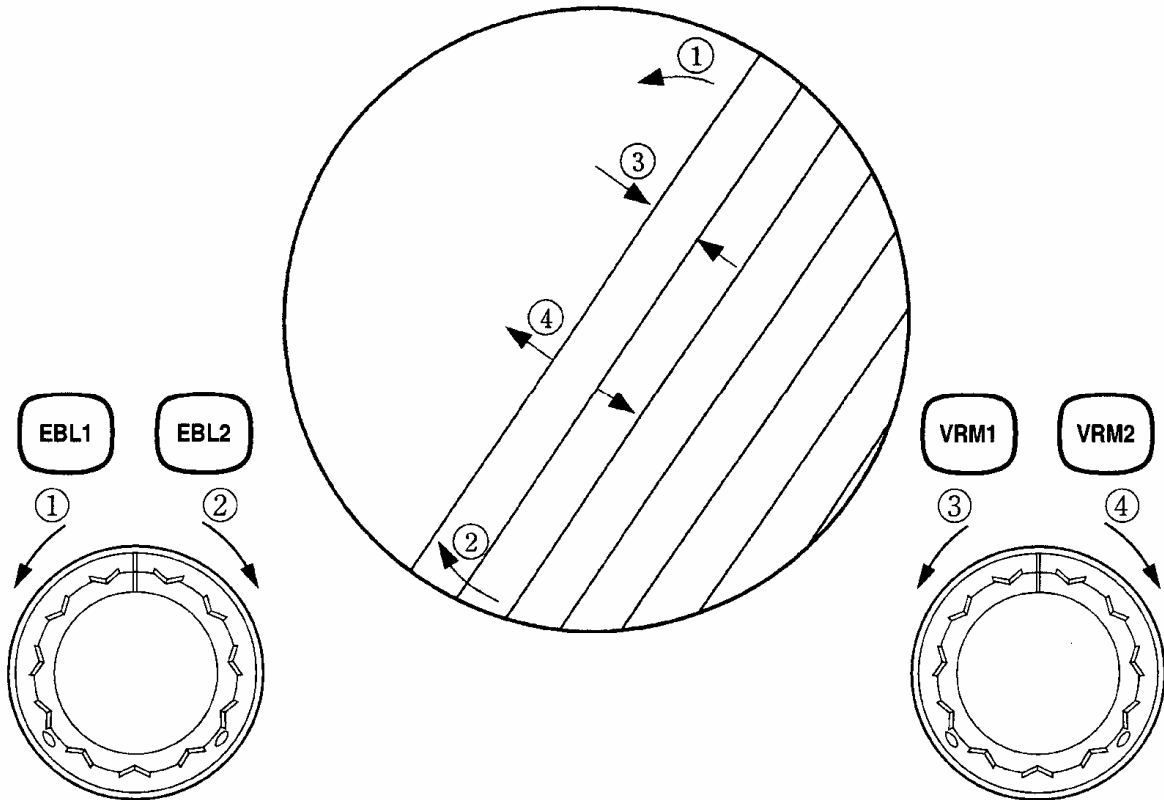

- ⊙ When **[RADAR MENU]** key is pressed, the parallel index line menu closes and the parallel index lines are fixed.

During the operation of parallel index lines, pressing the **[EBL1]** control or **[EBL2]** control prevents operating in rotation directions. Pressing the **[VRM1]** control or **[VRM2]** control prevents operation at parallel index line intervals.



## Setting of Parallel Index Lines (Parallel Index Line)

### [1] Parallel Index Line Display (Display)

In the radar menu, you can switch parallel index line display between ON and OFF.

#### **Procedures**

- 1 Press [RADAR MENU] key twice.

Press [3] key.

Press [5] key.

The Parallel Index Line Menu will appear.

- 2 Press [1].

Parallel Index Line Display is switched between ON and OFF each time you press [1] key.

Parallel Index Line	
1. Display	<input type="text" value="ON"/>
2. Range Link	<input type="text" value="OFF"/>
3. PI Bearing REF	<input type="text" value="TRUE"/>
4. PI Floating	<input type="text" value="OFF"/>
5. PI Bearing Fix	<input type="text" value="SCREEN"/>
6. PI Individual	
PI Bearing	
	<input type="text" value="T 000.0"/>
Interval	
	<input type="text" value="1.00"/>
0. EXIT	

-----

**[III] Parallel Index Line Range Link (Range Link)**

When a range is switched, parallel index lines links to a radar range scale and displayed.

**Procedures**

- 1 Press [RADAR MENU] key twice.**

**Press [3] key.**

**Press [5] key.**

The Parallel Index Line Menu will appear.

- 2 Press [2] key.**

Range Link is switched between ON and OFF each time you press [2] key.

Range Link ON:

If the range is switched, the width between parallel index lines changes in accordance with the radar range scale.

Range Link OFF:

If the range is switched, the width between parallel index lines remains fixed.

Parallel Index Line	
1. Display	<input type="text" value="ON"/>
2. Range Link	<input type="text" value="OFF"/>
3. PI Bearing REF	<input type="text" value="TRUE"/>
4. PI Floating	<input type="text" value="OFF"/>
5. PI Bearing Fix	<input type="text" value="SCREEN"/>
6. PI Individual	
PI Bearing	
	<input type="text" value="T 000.0"/>
Interval	
	<input type="text" value="1.00"/>
0. EXIT	





### [III] Parallel Index Line Bearing (PI Bearing REF)

Parallel index line bearing mode can be switched.

#### **Procedures**

- 1 Press [RADAR MENU] key twice.

Press [3] key.

Press [5] key.

The Parallel Index Line Menu will appear.

- 2 Press [3] key.

The PI Bearing REF mode is switched between true bearing and relative bearing each time you press [3] key.

\* PI bearing in the parallel index line menu will show which is selected, true bearing or relative bearing.

Parallel Index Line	
1. Display	<input type="text" value="ON"/>
2. Range Link	<input type="text" value="OFF"/>
3. PI Bearing REF	<input type="text" value="TRUE"/>
4. PI Floating	<input type="text" value="OFF"/>
5. PI Bearing Fix	<input type="text" value="SCREEN"/>
6. PI Individual	
PI Bearing	<input type="text" value="T 000.0"/> °C
Interval	<input type="text" value="1.00"/> nm
0. EXIT	

**[IV] Parallel Index Line Start Point Display Mode (PI Floating)**

If this function is set to  and the start point of parallel index line moves, the start point of the parallel index line can be fixed to the latitude/longitude of the start point. If the function is set to  the start point of parallel index line is fixed within the radar display, and the start point is fixed to the same place on the display even after the own ship moves.

**Procedures**

**1 Press [RADAR MENU] key twice.**

**Press [3] key.**

**Press [5] key.**

The Parallel Index Line Menu will appear.

**2 Press [4] key.**

The PI Floating Setting Menu will appear.

**3 Select the item you want to display, pressing the numeric keys [1] to [3].**

OFF: Floating mode OFF

SCREEN FIX: Fixes the start point of parallel index line to the radar display.

L/L FIX: Fixes the parallel index line with latitude and longitude.

\* Button ② on the radar display on page 2-7 is also available for switching.

Parallel Index Line	
1. Display	<input type="text" value="ON"/>
2. Range Link	<input type="text" value="OFF"/>
3. PI Bearing REF	<input type="text" value="TRUE"/>
4. PI Floating	<input type="text" value="OFF"/>
5. PI Bearing Fix	<input type="text" value="SCREEN"/>
6. PI Individual	
PI Bearing	<input type="text" value="T 000.0"/> °C
Interval	<input type="text" value="1.00"/> nm
0. EXIT	

**Note:** Setting the function to the L/L Fix mode needs course data and latitude/longitude data.

**[V] Parallel Index Line Bearing Fix Mode (PI Bearing Fix)**

If this function is set to **ANGLE**, the parallel index line also rotates in accordance with the bearing while the own ship is turning. If the function is set to **SCREEN FIX**, the parallel index lines are fixed within the radar display even while the own ship is turning. The parallel index lines are displayed at the same place even while the own ship is turning.

**Procedures**

- 1 Press **[RADAR MENU]** key twice.

Press **[3]** key.

Press **[5]** key.

The Parallel Index Line Menu will appear.

- 2 Press **[5]** key.

The PI Bearing Fix Setting Menu will appear.

**ANGLE:** Links the parallel index lines with the bearing of the own ship.

**SCREEN FIX:** Fixes the parallel index lines to the radar display.

Parallel Index Line	
1. Display	<input type="text" value="ON"/>
2. Range Link	<input type="text" value="OFF"/>
3. PI Bearing REF	<input type="text" value="TRUE"/>
4. PI Floating	<input type="text" value="OFF"/>
5. PI Bearing Fix	<input type="text" value="SCREEN"/>
6. PI Individual	
PI Bearing	<input type="text" value="T 000.0"/> °
Interval	<input type="text" value="1.00"/> nm
0. EXIT	

-----

## [VI] Individual Display of Parallel Index Line (PI Individual)

Individual parallel index lines can be switched between ON and OFF.

### **Procedures**

- 1 Press [RADAR MENU] key twice.**

**Press [3] key.**

**Press [5] key.**

The Parallel Index Line Menu will appear.

- 2 Press [6] key.**

The PI Individual Setting Menu will appear.

- 3 Select the item for which you want to display or not to display, pressing the numeric keys [1] to [7].**

Individual setting is switched between ON and OFF each time you press each numeric keys.

ON: Displayed

OFF : Not displayed

\* The line nearest to the own ship is specified as Line1.

PI Individual	
1. Line 1	<input type="checkbox"/>
2. Line 2	<input type="checkbox"/>
3. Line 3	<input type="checkbox"/>
4. Line 4	<input type="checkbox"/>
5. Line 5	<input type="checkbox"/>
6. Line 6	<input type="checkbox"/>
7. Line 7	<input type="checkbox"/>
<input type="checkbox"/> 0. EXIT	

### 3.5.6 Switch Bearing Display Mode [AZI MODE]

The bearing display mode is switched in the sequence of [NORTH UP] (true bearing), [HEAD UP] (relative bearing), and [COURSE UP] (course-up bearing) each time [AZI MODE] key is pressed.

The indication at the upper left of the radar display changes in sequence of **HUP** → **NUP** → **CUP**.

\* Button ⑤ on the radar display on page 2-7 is also available to switch the radar bearing display.

#### True Bearing Mode [North Up]


The video is displayed so that the zenith of the PPI ( $0^\circ$  on range rings) points to the due north. Fixed targets do not flicker and are easily identified on the chart, and the true bearing of a target can easily be read out.

#### Relative Bearing Mode [Head Up]

The video is displayed so that the ship's heading line points to the zenith of the PPI ( $0^\circ$  on range rings). Since targets are displayed in their directions relative to the ship's heading line, the operator can view the video in the same field of view as in operating the ship at sea. This mode is suitable for watching over other ships.

#### Course-up Bearing Mode [Course Up]

By pressing [AZI MODE] key, the own ship's course is fixed pointing to the zenith of the PPI ( $0^\circ$  on range rings) points to the due north. In the same way as in the North-up mode, fixed targets do not flicker, and are stabilized even if the ship is yawing. The bearing of the heading line varies by the same shift of own ship's course. To change the course, press [AZI MODE] key several times to select the Course-up mode, and set a new course.

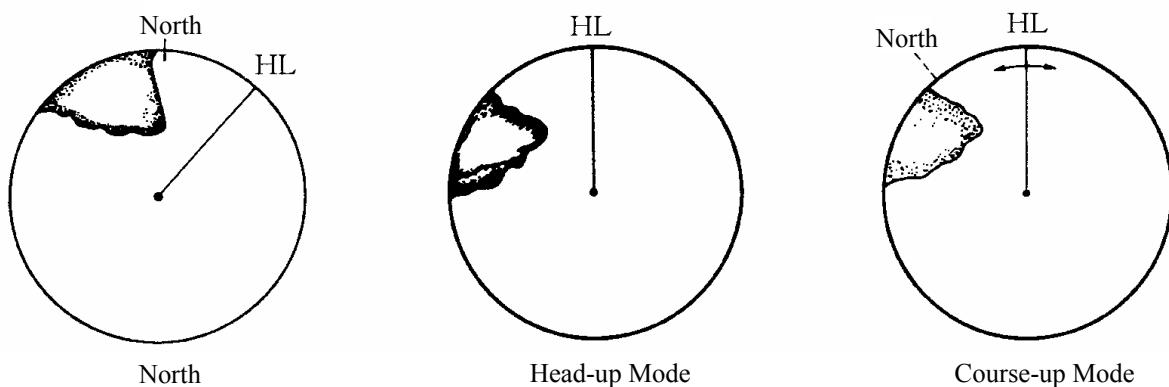

---


### 3.5.7 Switch True/Relative Motion Display Mode [TM/RM]

#### Switching Relative Motion (RM) Mode to True Motion (TM) Mode

##### **Procedures**

- 1 Press [TM/RM] key.

The true motion mode will be selected. In the true motion mode, the own ship's position on the radar display moves depending upon its speed and course and the influence of the current. Land and other fixed targets are fixed on the radar display and only actually moving targets move on the radar display. When the true motion mode is selected, the own ship's position is set to about 60% of the display radius in the opposite direction to its course allowing for the influence of the current. Own ship starts moving depending upon its speed and course and the influence of the current. Subsequently, when own ship arrives at the position of about 66% of the display radius, it is automatically reset to its initial position at about 60% of the display radius in the opposite direction to its course allowing for the influence of the current.

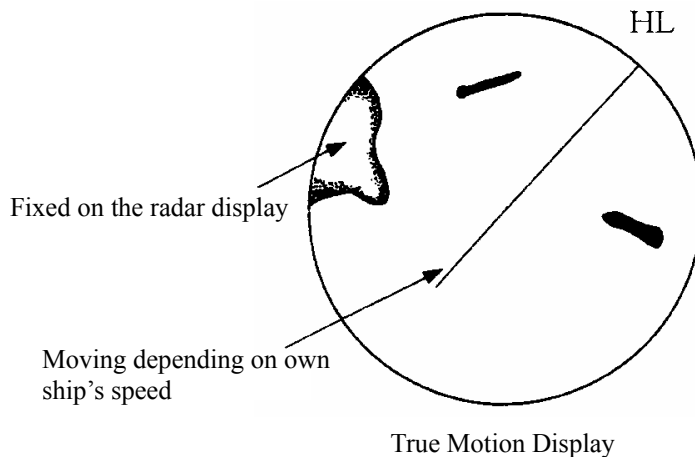

#### Resetting Own Ship to its Initial Position in True Motion (TM) Mode

##### **Procedures**

- 1 Press [TM/RM] key for 2 seconds.

Own ship will be reset to its initial position as established when the relative motion mode is changed to the true motion mode. The ship starts moving from that position.

#### Switching True Motion (TM) Mode to Relative Motion (RM) Mode

##### **Procedures**

- 1 Press [TM/RM] key.

The relative motion mode will be selected. Own ship returns to the center of the radar display.

\* Button ④ on the radar display on page 2-7 is also available to switch between true motion and relative motion. Keep pressing the button for two seconds can reset the position of the own ship during true motion.




### 3.5.8 Move Own Ship's Display Position [OFF CENT]

The own ship's position can be moved from the display center to any position within 66% of the display radius. This function is convenient for observing a wide coverage in any direction.

**Note:** This function is not available on the 96 NM range.

#### Procedures

##### 1 Press [OFF CENT] key.

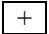The cross cursor mark  will appear at the own ship's position on the radar display.


\* Button ⑩ on the radar display on page 2-7 is also available to activate OFF Center.


##### 2 Move the cross cursor mark (own ship's display position) to a desired position by using the trackball.


While the cross cursor mark is moving, the own ship's display position moves following the cross cursor mark.

When it moves to a position outside 66% of the display radius, the center position is limited to a position within 66% of the display radius.

##### 3 Press [ENT] key.

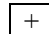The own ship's display position will be fixed to the cross cursor mark .

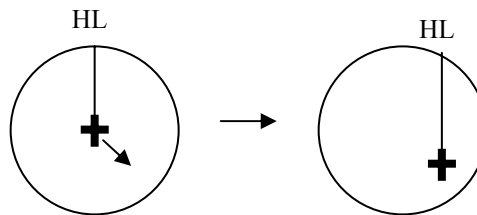

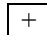Move the cross cursor mark  to a desired position.

Press [ENT] key.  
The own ship's display position will be fixed.

### Returning Own Ship's Position to the Center

#### Procedures

##### 1 Press [OFF CENT] key for 2 seconds.

**Note:** Close the menu before using this function. While the menu is open, the function cannot be used.


\* You can keep pressing button ⑩ on the radar display for two seconds on page 2-7 to return the own ship position to the center.

---

### 3.5.9 Display Other Ships' Trails [TRAILS]

Other ships' movements and speeds can be monitored from the lengths and directions of their trails, serving for collision avoidance. The trail length varies according to setting. The setting is described on the next page.

#### Procedures

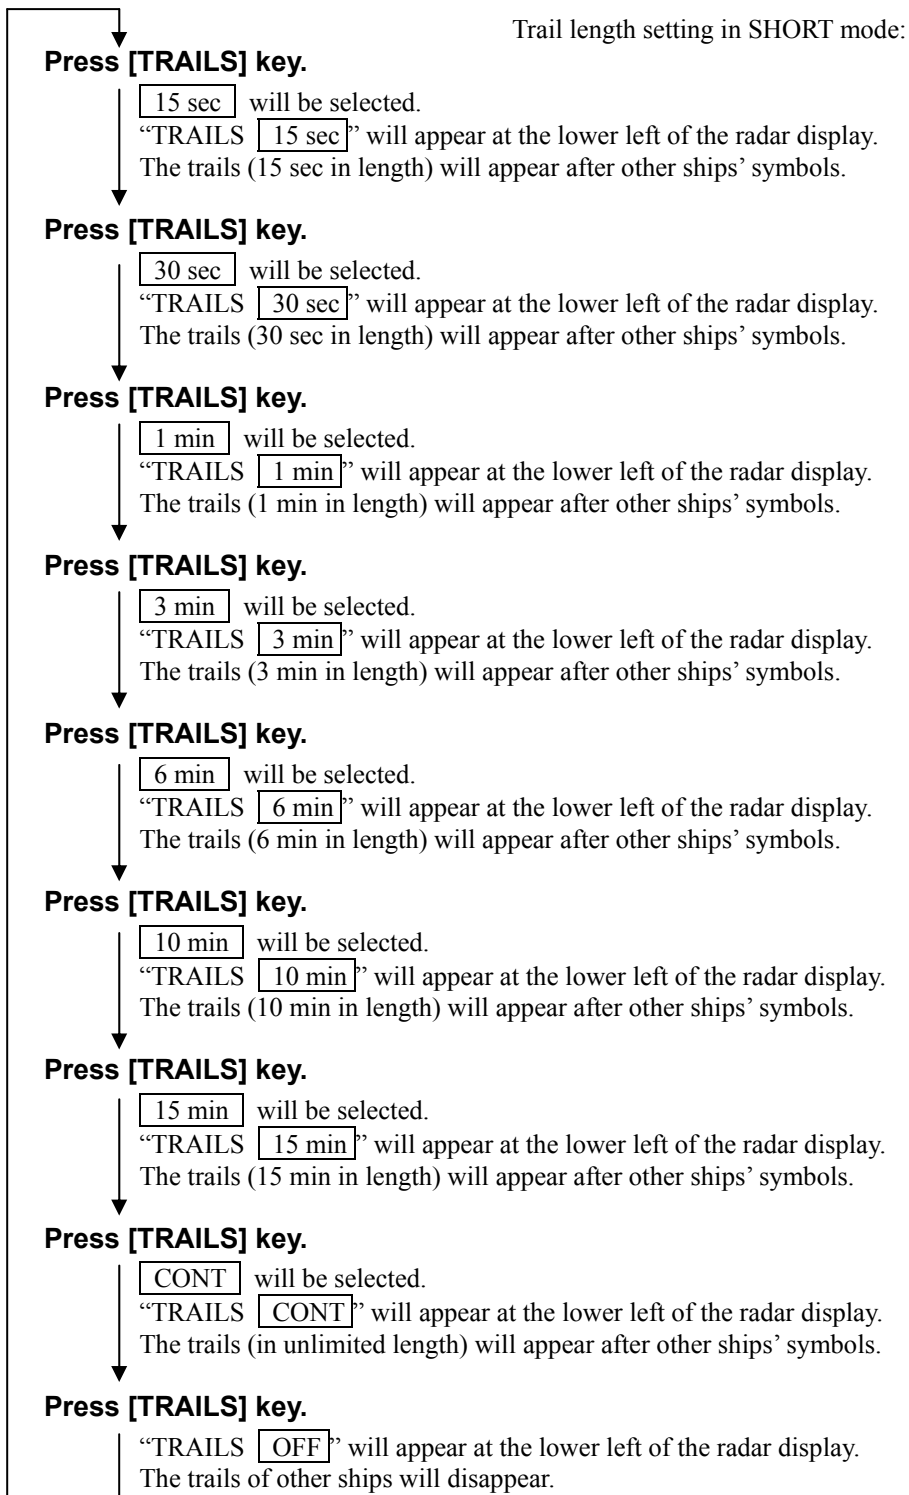



SHORT mode:	15 sec, 30 sec, 1 min, 3 min, 6 min, 10 min, 15 min, and CONT
MID mode:	30 sec, 1 min, 3 min, 6 min, 10 min, 15 min, 30 min, and CONT
LONG mode:	1 min, 3 min, 6 min, 10 min, 15 min, 30 min, 60 min, and CONT
SUPER LONG mode:	30 min, 1 hr, 2 hr, 3 hr, 4 hr, 5 hr, 6 hr, 7 hr, 8 hr, 9 hr, 10 hr, 11 hr, 12 hr and CONT

A trail length can also be changed by using the multi-function control. (Refer to page 3-55.)

Stored trails cannot be erased even when the trail lengths are changed by using [TRAILS] key. Even after the trails display is turned off, the past trails can be displayed traced back by setting a desired time. The system is plotting trails even while the trails display is off.

\* Button ⑩ on the radar display on page 2-7 is also available to change trail length.

## Erasing Trails Data

### **Procedures**

#### **1 Hold down [TRAILS] key for 5 seconds.**

All the stored trails data will be erased. The system starts plotting trails in initial state. When [TRAILS] key is pushed for 2 seconds, a RADAR Trails Setting menu will be displayed. Furthermore, data will be erased if it continues pushing.

## Trails Motion Mode

There are two types of trails: relative motion trails and true motion trails.


**Relative motion trails:** The system plots the trails of a target at a position relative to the own ship. The operator can easily judge whether the target is approaching the own ship.

While the own ship is moving, the system also plots the trails of land and other fixed targets.


**True motion trails:** The system plots the absolute motion trails of a target, irrespective of the own ship's position.

The operator can easily judge the course and speed of the target.

The system does not plot the trails of land and other fixed targets.

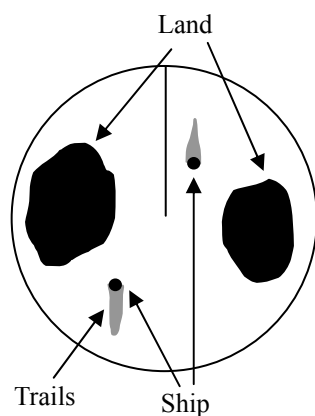

True Motion Trails

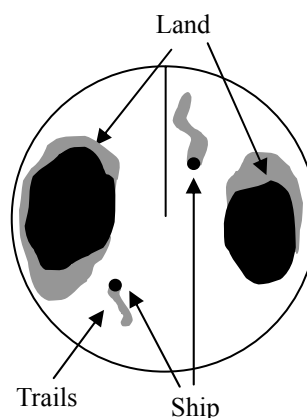

Relative Motion Trails

Trails modes provided with this system vary depending on the motion mode.

With true motion (TM) mode: Only the true motion trails mode is available.

With relative motion (RM) mode: The relative motion trails mode or true motion trails mode is selectable.

is indicated while the relative motion trails mode is active.

is indicated while the true motion trails mode is active.

While the true motion trails mode is active, this system enables the continuous use of true motion trails even if any of the following operations is performed:

- Motion display mode change [TM/RM] key
- TM reset [TM/RM] key
- Bearing display mode change [AZI MODE] key
- Center move [OFF CENT] key
- MAP display on/off [MAP] key
- \* Button ① on the radar display on page 2-7 is also available to change trial motion mode.

**Note:** Accurate true bearing signals and speed signals are necessary for using the true motion trails mode.

## Changing Motion Mode of Trails (Trails mode)

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [2] key.

The RADAR Trails Setting Menu will appear.

- 2 Press [2] key.

The setting of radar trails display mode will be switched between  and .

: True motion trails

: Relative motion trails

→ For other settings, see section 3.10.2, page 3-100

RADAR Trails Setting	
1. Trails Interval	<input type="text" value="6 min"/>
2. Trails Mode	<input type="text" value="TRUE"/>
3. Trails REF Level	<input type="text" value="LEVEL2"/>
4. Trails Reduction	<input type="text" value="OFF"/>
5. Time/Cont Combine	<input type="text" value="OFF"/>
6. Trails Process	<input type="text" value="OFF"/>
7. Max Interval	<input type="text" value="SHORT"/>
9. NEXT	<input type="text" value="&gt;"/>
0. EXIT	<input type="text"/>

### 3.5.10 Switch Pulse Length (GAIN/PL)

**Procedures****1 Press [GAIN/PL] control.**

The transmitter pulse length changes cyclically in the following sequence each time [GAIN/PL] control is pressed:

SP →  MP →  LP →  SP The currently selected pulse length is indicated at the upper left of the radar screen.

The pulse length can be changed only when the range is set to 0.75, 1.5, 3, 6, or 12 NM.

With  SP selected:

The transmitter pulse becomes shorter, and the range resolution improves.

The effect of suppressing sea clutter returns and rain/snow clutter returns heightens.

Recommended condition for selection:

In bays/harbors where targets are densely crowded

Rough sea state due to torrential rain or stormy weather

With  MP selected:

The normal transmitter pulse length is set.

Both range resolution and sensitivity are appropriately set.

Recommended condition for selection:

General navigation

With  LP selected:

The transmitter pulse becomes longer, and sensitivity improves.

Small targets are zoomed and are easy to observe.

Recommended condition for selection:

Detection of small targets in good weather conditions


\* Button ③ on the radar display on page 2-7 is also available to switch pulse width.

### 3.5.11 Expand Targets (Target Enhance)

This function expands targets shown on the radar display.

**Procedures**

- 1 **Press [RADAR MENU] key.**  
The Main Menu will appear.
- 2 **Press [3] key.**  
The Target Enhance Selection Menu will appear.
- 3 **Select the mode number to be set, pressing the numeric keys [1] to [4].**

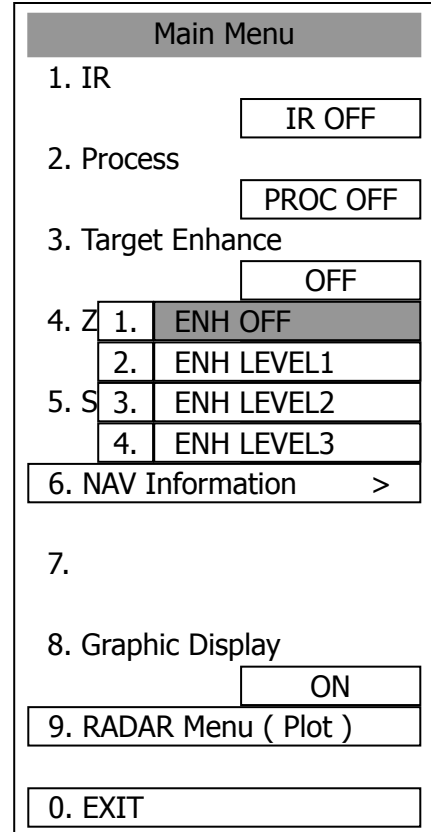

Target expansion modes

ENH OFF	Expansion off:	Select this mode particularly when resolution is required.
ENH LEVEL1	Expansion - small:	Select this mode in general. Radar echoes are expanded by 1 scale in all directions.
ENH LEVEL2	Expansion - medium:	Select this mode to easily view the radar video. Radar echoes are expanded by 2 scales in all directions on the display.
ENH LEVEL3	Expansion - large:	Select this mode to detect small targets such as buoys. The expansion near a screen center is added to ENH LEVEL2.

**Note:** When ENH LEVEL3 is selected, sea clutter returns and rain/snow clutter returns are apt to be expanded. When using this expansion mode, operate [AUTO-SEA] control and [AUTO-RAIN] control to suppress sea clutter returns and rain/snow clutter returns. In general, ENH LEVEL1 or ENH LEVEL2 should be selected.

\* Button ⑪ on the radar display on page 2-7 is also available to switch the target enhance mode.

### 3.5.12 Use Video Process (Process)

This function reduces unnecessary noise to highlight targets.


#### Attention

- **When viewing a radar beacon, SART signal, or fast moving target on the radar display, select PROCESS OFF (video process off).**



#### Procedures

- 1 Press [RADAR MENU] key.**  
The Main Menu will appear.
- 2 Press [2] key.**  
The Process Selection Menu will appear.
- 3 Select the mode number to be set, pressing the numeric keys [1] to [6].**  
The selected mode will be set.

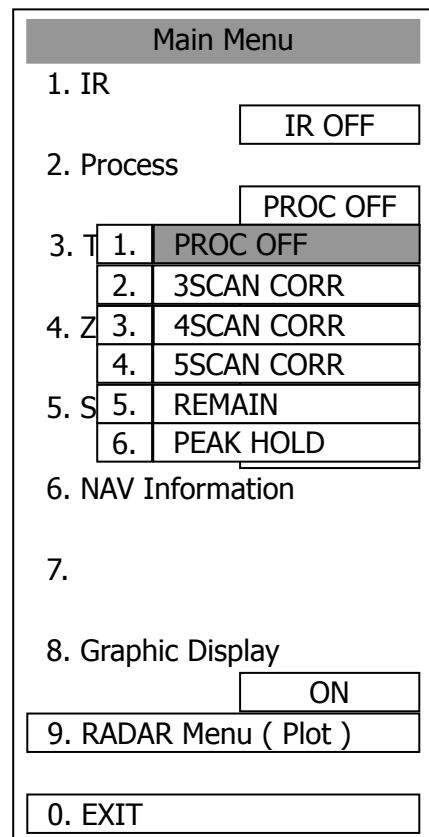

#### Video process modes

PROC OFF	Video process off:	Select this mode in general.
3SCAN CORR	Correlative process 1:	Select this mode when many rain/snow clutter returns are detected.
4SCAN CORR	Correlative process 2:	Select this mode to highlight targets while suppressing sea clutter returns.
5SCAN CORR	Correlative process 3:	Select this mode to detect small targets hidden by sea clutter returns.
REMAIN	Video process 4:	Select this mode when own ship yaws wildly.
PEAK HOLD	Video process 5:	Select this mode to detect small targets of which detection probability is low.

### 3.5.13 Zoom

This function doubles the size of radar video near a specified position.

**Attention** If the range is 0.125 NM, this function is not available.  
If the true motion mode is selected, this function is not available.

#### Procedures

- 1 Press **[RADAR MENU]** key.

The Main Menu will appear.

- 2 Press **[4]** key.

The setting of the zoom mode will be switched between ON and OFF.

OFF : Not zoomed  
ON : Zoomed


This function is not available at places where the size exceeds 66% of the radius of the display.

- 3 With **ZOOM ON** selected, move the cross cursor mark to the position to be zoomed, and press **[ENT]** key.

The position will be zoomed.

Main Menu	
1. IR	<input type="button" value="IR OFF"/>
2. Process	<input type="button" value="PROC OFF"/>
3. Target Enhance	<input type="button" value="OFF"/>
4. Zoom	<input type="button" value="OFF"/>
5. SART	<input type="button" value="OFF"/>
6. NAV Information	
8. Graphic Display	<input type="button" value="ON"/>
9. RADAR Menu ( Plot )	
0. EXIT	

Using the cross cursor mark as reference, the zoom function doubles the size of a radar video with the midpoint between the cursor mark and own ship's position being set to the center of radar display.

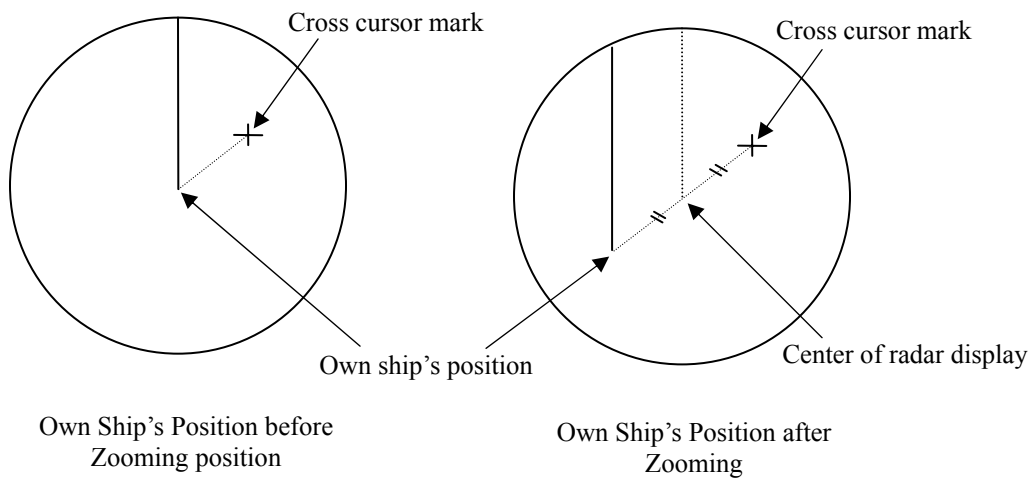

\* Button ⑨ on the radar display on page 2-7 is also available to switch the zoom function between ON and OFF. "x" blinks at the screen lower right during a ZOOM display.

### 3.5.14 Use Marker [MOB]

The marker function displays a dotted line from the marker input position to the own ship's position, and indicates the range, bearing, and required time from the own ship to the marker.

#### Procedures

##### 1 Press [MOB] key.

A marker will be displayed at the own ship's position on the radar display at the moment when [MOB] key is pressed.

The own ship and the marker are connected with a dotted line.

Even when the own ship moves, the marker is fixed at the latitude and longitude. Thus, if a marker is put to an important position, the ship can return to the position regarding the marker as a target.

#### Cancellation

##### 1 Hold down [MOB] key for 2 seconds.

The marker will disappear.

---

### 3.5.15 Marking [MARK]

A maximum of 20 marks can be indicated at arbitrary positions on the radar display.  
A mark created on the radar display holds the latitude and longitude.

#### [I] Creating Marks

##### Procedures

- 1 Press [MARK] key.

[□] will appear in the CURSOR field at the upper right of the radar display.

- 2 Put the cross cursor mark  on the position where a mark is to be created, and press [ENT] key.

The cross cursor mark  will be changed into the [□] mark and fixed on the radar display. To enter more [□] marks, repeat step 2.  
Up to 20 marks can be entered.

**Note:** If more than 20 marks are created, the oldest mark is cleared and the newly created mark is displayed.

#### [II] Clearing Marks

##### Procedures

- 1 Press [MARK] key.

The [□] mark will appear in the CURSOR field at the upper right of the radar display.

- 2 Put the cross cursor mark  on the mark to be cleared.

The [□] mark will disappear. To clear another [□] mark, repeat step 2.  
To clear all [□] marks, press [MARK] key and then hold down [CLR] key.

\* Pressing button ⑨ on the radar display on page 2-7 changes the cursor mode. When "□" appears, the cross cursor is available to create "□" mark.





### 3.5.16 Operate EBL Maneuver Function (EBL Maneuver)

#### [I] Initial Setting (Reach, Turn Mode, Turn Set)

##### Procedures

- 1 Press [RADAR MENU] key twice.

Press [3] key.

Press [7] key.

The EBL Maneuver Setting Menu will appear.

- 2 Press [2] key.

The CODE INPUT Menu will appear.  
Enter the Reach value and select ENT.

- 3 Press [3] to select Turn Mode.

The setting of turn mode will be switched between RADIUS and RATE.

RADIUS: Constant turn diameter (NM)  
RATE: Constant turn speed (deg/min)

- 4 Press [4] key.

The CODE INPUT Menu will appear.  
Enter the Turn Set value and select ENT.

EBL Maneuver	
1. EBL Maneuver	<input type="text" value="OFF"/>
2. Reach	<input type="text" value="1000 m"/>
3. Turn Mode	<input type="text" value="RADIUS"/>
4. Turn Set	<input type="text" value="1.0 nm"/>
HEADING	<input type="text" value="T *.*.* °"/>
	<input type="text" value="R *.*.* °"/>
WOL	<input type="text" value="*** nm"/>
<input type="text" value="0. EXIT"/>	

# 3

**Note:** If the initial setting is not correct, the maneuver curve is affected.

---

## [II] Creating Maneuver Curve (EBL Maneuver)

### Procedures

- 1 **Press [1] key while the EBL Maneuver menu is open.**

EBL Maneuver will be set to ON.

A supplemental line, a maneuver curve, and WOL will appear on the radar display.

- 2 **Set the starting point of the supplemental line using the trackball, and set the bearing of the supplemental line using the [EBL] control.**

The bearing of the supplemental line will be the final bearing in which the own ship is to move.

The position of WOL will change depending on the bearing of the supplemental line.

If the WOL is behind the own ship's position, the line color of WOL will change.

- 3 **Press [ENT] key.**

The setting will be determined. However, if the WOL is behind the own ship's position at this point, the pressing of [ENT] key is rejected, and the setting is not determined.

**Cancellation**


- 1 Press [1] key.

The EBL Maneuver function will be set to OFF.

**Exit**

- 1 Press [RADAR MENU] key.

The EBL Maneuver Menu will close.

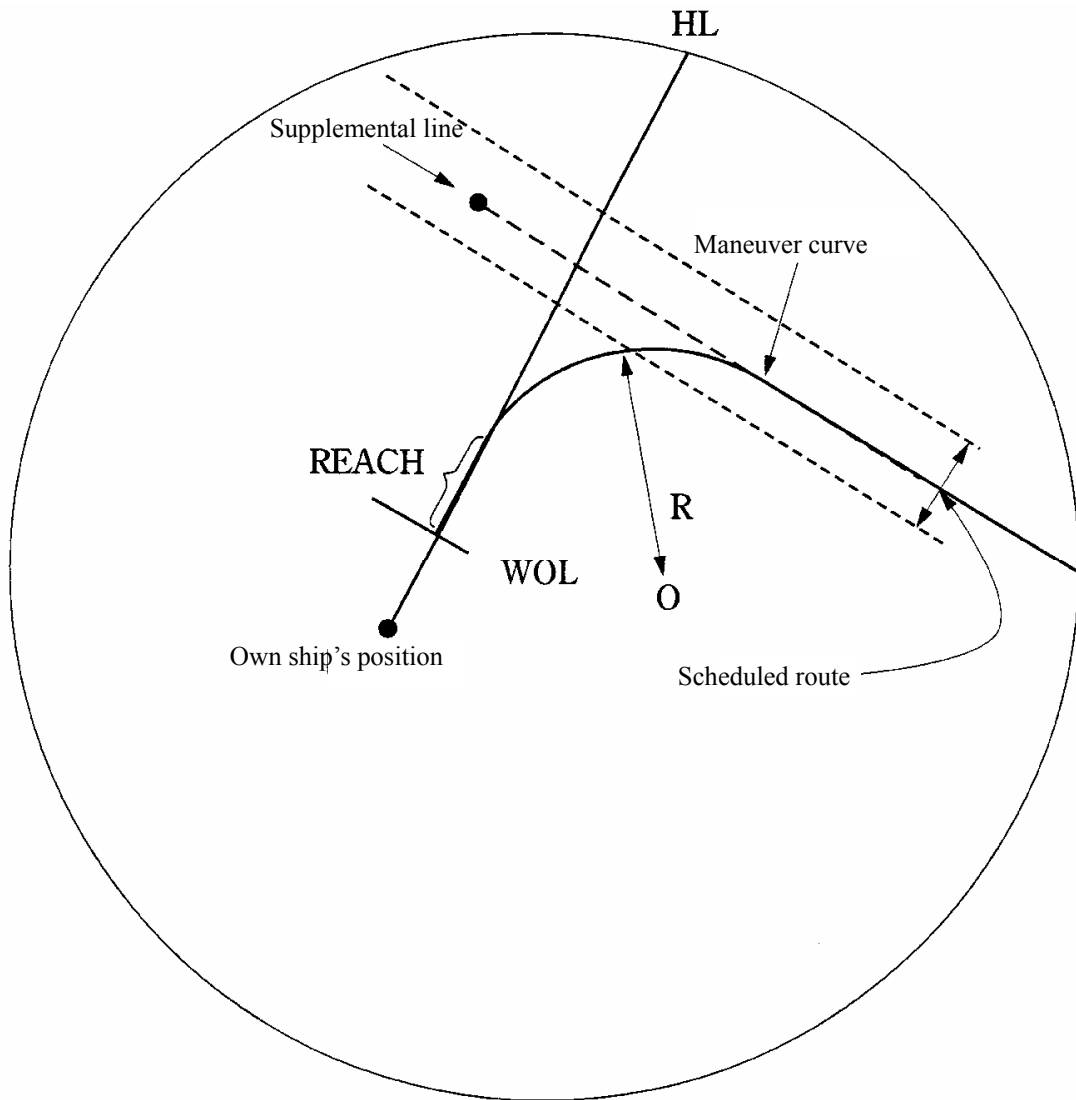

WOL: Steering point

REACH: Distance from when the wheel is steered to when the ship begins to turn

R: Turning radius

---

### 3.5.17 Operate Multi-Function Control [MULTI]

The multi-function control [MULTI] is provided to change the settings of parameters such as the length of radar trails. Turn the control to select a parameter. Radar operation is simplified by using the control.

#### [I] Initial Setting (Multi Dial Setting)

Set parameters that can be operated with the multi-function control.  
A parameter set to ON can be called by turning [MULTI] control.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [8] key.

Press [2] key.

The Multi Dial Setting Menu will appear.

- 2 Press the numeric key of the number of the parameter whose setting is to be changed.

The setting will be switched between  ON and  OFF .

ON: Can be operated with the multi-function control.

OFF: Cannot be operated with the multi-function control.

Multi Dial Setting	
1. Vector Length	<input type="checkbox"/> ON
2. Trails Length	<input type="checkbox"/> ON
3. ATA TGT Display No.	<input type="checkbox"/> ON
4. C-UP Angle	<input type="checkbox"/> OFF
5. Own Track Color	
6. Mark/Line Color	
0. EXIT	

#### Parameters

- |                         |  |
|-------------------------|--|
| 1. Vector Length:       | Vector length of ATA                                   |
| 2. Trails Length:       | Length of radar trails                                 |
| 3. ATA TGT Display No.: | ATA target number for which values are to be displayed |
| 4. C-UP Angle:          | Course in course-up mode bearing mode                  |
| 5. Own Track Color:     | Available with plotter option.                         |
| 6. Mark/Line Color:     | Available with plotter option.                         |


## [II] Using Multi-function Control

### Procedures

- 1 Press the [MULTI] control to select the parameter whose setting is to be changed.

Parameters will be selected sequentially each time the [MULTI] control is pressed. The currently selected parameter is indicated at the lower left of the radar display.

For example, if three parameter 1-3 are initially set to  ON, they are selected in the following sequence each time the [MULTI] control is pressed:

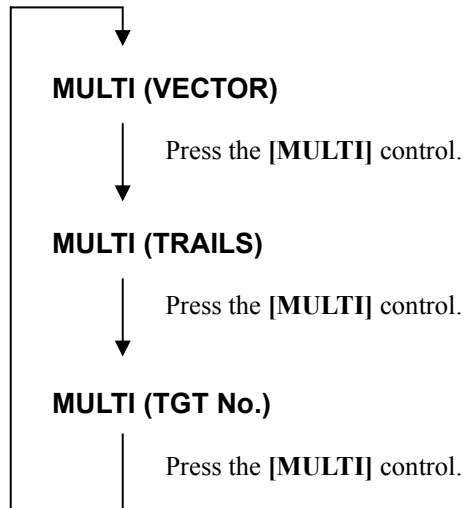

- 2 Turn the [MULTI] control to change the setting.

The preset values of the selected parameter will change sequentially. Stop turning the control when the desired value appears.

### 3.5.18 Operate User Key Switches [User Key 1/2]

Users can freely make settings with [USER KEY1] key and [USER KEY2] key. By using the switches, users can open a frequently used menu by only single operation, or assign special functions, which are not on the standard operation panel, to the user key switches.

#### [I] Initial Setting (User Key Setting)

Set functions that can be performed with the user key switches.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [8] key.

Press [3] key.

The User Key Setting Menu will appear.

- 2 Press the numeric keys [1] or [2] to select the user key switch whose setting is to be changed.

The pull-down menu will appear showing the functions.

User Key1: [1] key

User Key2: [2] key

- 3 Press the numeric key to select the function that is to be assigned to the user key switch.

The function will be selected.

User Key Setting	
1. User Key 1	MENU
2. U 1.	MENU
2.	ZOOM
3.	SCALE
4.	DEST
5.	○—>
6.	—>○
7.	ALT KEY
8.	CAPTURE SCREEN
0. EXIT	

Pull-down menu items

1. MENU: Directly displays a specified menu.
2. ZOOM: Sets the zoom function to ON/OFF.



## [II] Using User Key Switches (Directly displaying a specified menu)

Preset the menu that is to be displayed with the user key switch.

### Setting the menu that is to be displayed with User Key 1:

#### **Procedures**

- 1 Perform the general menu open procedure to open the menu that is to be directly displayed with User Key 1.
- 2 While the menu is open, hold down [USER KEY1] key for 2 seconds.

The menu will be assigned to [USER KEY1] key.

### Setting the menu that is to be displayed with User Key 2:

#### **Procedures**

- 1 Perform the general menu open procedure to open the menu that is to be directly displayed with User Key 2.
- 2 While the menu is open, hold down [USER KEY2] key for 2 seconds.

The menu will be assigned to [USER KEY2] key.

### Directly displaying the menus assigned to the User Keys:

#### **Procedures**

- 1 Press [USER KEY1] key.

The menu assigned to [USER KEY1] key will appear.  
Subsequently, general menu operation can be performed.

#### **Procedures**

- 1 Press [USER KEY2] key.

The menu assigned to [USER KEY2] key will appear.  
Subsequently, general menu operation can be performed.

---

### 3.5.19 Operation of Guard Zone [ATA Guard Zone]

A fan-shaped guard zone can be set to watch for other ships and targets to invade or to automatically track other invading ships.

The guard zone function can be switched between ON and OFF by placing the cursor on ④ or ⑤ on the radar display on page 2-7 and pressing [ENT]. In this case, the guard zone set previously will be ON.

#### [I] Making Guard Zone (Make Guard Zone 1/2)

Set a fan-shaped operation area of the guard zone.

##### Procedures

- 1 Press [ATA MENU] key.

Press [4] key.

Press [1] key.

The ATA Guard Zone Menu will appear.

- 2 Select the guide zone where you want to make an area, pressing the numeric key [3] to [4].

The Guard Zone selection mode is activated.

GUARD ZONE 1: [3] key

GUARD ZONE 2: [4] key

- 3 Using the [EBL] and [VRM] controls, put the start position of the guard zone at a desired position, and then press ENT.


The start position of the guard zone will be set.

- 4 Using the [EBL] and [VRM] controls, put the end position of the guard zone at a desired position, and then press ENT.

The end position of the guard zone will be set.

ATA Guard Zone	
1. Guard Zone 1	<input type="text" value="ON"/>
2. Guard Zone 2	<input type="text" value="OFF"/>
3. Make Guard Zone 1	
4. Make Guard Zone 2	
5. ENT	
0. EXIT	



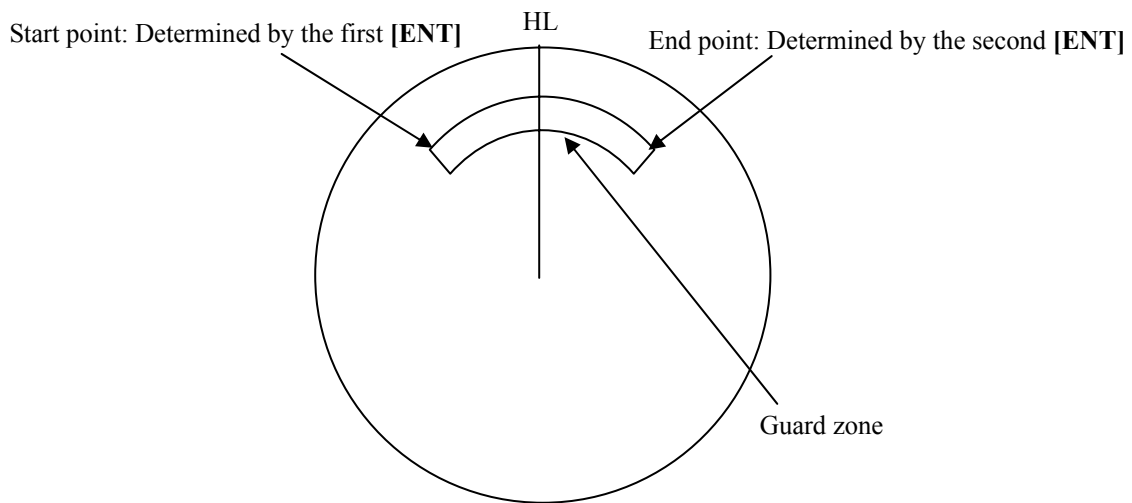

**Attention** Guard zones 1 and 2 can be set in the range of 0.5 to 32 nm.  
The width of distance of the guard zone is fixed to 0.5 nm.

#### **Operation of Guard zone**

- If a target is found within the fan-shaped area of the guard zone, an alarm is generated and the  $\nabla$  mark is displayed on the target. After approximately 1 minute, the tracking status is activated.
- If a guard zone is made, and the guard zone adopts the same point for the start point and end point, the guard zone will be a circle.
- Guard zone is displayed only when radar transmission takes place.  
Note that guard zone will not appear during preparation.

-----

## [II] Set [GZALARM] key (Set GZ Alarm key)

Set a guard zone that is turned ON/OFF when the [GZ ALARM] key is pressed.  
Such a guard zone can be simply called by assigning this key to a guard zone to be used on a steady basis.

### Procedures

#### 1 Press [ATA MENU] key.

Press [4] key.

Press [3] key.

Press [1] key.

The Guard Zone Menu will appear.

#### 2 Pressing [1] or [2], set the operation to be performed with the [GZ ALARM] key pressed.

GUARD ZONE1: [1] key is used for operation.

ON: Each time the [GZ ALARM] key is pressed, guard zone 1 is turned ON/OFF.

OFF: If the [GZ ALARM] key is pressed, guard zone 1 is not turned ON/OFF.

GUARD ZONE2: [2] key is used for operation.

ON: Each time the [GZ ALARM] key is pressed, guard zone 2 is turned ON/OFF.

OFF: If the [GZ ALARM] key is pressed, guard zone 2 is not turned ON/OFF.

Guard Zone	
1. Guard Zone 1	<input type="button" value="ON"/>
2. Guard Zone 2	<input type="button" value="OFF"/>
<input type="button" value="0. EXIT"/>	



### 3.5.20 Radar Alarm (Radar Alarm)

With a fan-shaped range made, the radar alarm can give an alarm to ships that enter or depart from the range.

#### [I] Set Radar Alarm Mode (Radar Alarm Mode)

For alarm issuing conditions for the radar alarm, set either entry or departure.

#### Procedures

**1 Press [ATA MENU] key.**

The ATA Menu will appear.

**2 Press [4] key.**

**Press [2] key.**

The Radar Alarm Menu will appear.

**3 Press [5] key.**

The radar alarm mode will be switched between ON and OFF.

IN: Issues an alarm when ship enters.

OUT: Issues an alarm when ship departs.

RADAR Alarm	
1. Sector RADAR Alarm	>
3. Make Sector Alarm	>
5. Radar Alarm Mode	IN
6. Sensitivity Level	4
0. EXIT	

---

## [II] Set Radar Alarm Detection Level (Sensitivity Level)

Detection levels can be set to issue alarms from the radar alarm.

### Procedures

**1 Press [ATA MENU] key.**

The ATA Menu will appear.

**2 Press [4] key.**

**Press [2] key.**

The Radar Alarm Menu will appear.

**3 Press [6] key.**

When a detection level appears, select the number you want to set, pressing the numeric keys [1] to [4].

\* As the numeric value for detection level is larger, echo needs to be stronger for detection. If the numeric value for detection level is low, detection can be made with weak echo to issue an alarm.

The screenshot shows a menu titled "RADAR Alarm". The menu items are:

- 1. Sector RADAR Alarm >
- 3. Make Sector Alarm >
- 5. Radar Alarm Mode  
IN
- 6. Sensitivity Level  
4
- 0. EXIT

1.	1
2.	2
3.	3
4.	4



### [III] Make Sector Alarm (Make Sector Alarm)

Sector alarms that can be made are divided into the two types.

#### Procedures

- 1 Press [ATA MENU] key.

The ATA Menu will appear.

- 2 Press [4] key.

Press [2] key.

The Radar Alarm Menu will appear.

- 3 Press [3] key.

The Make Sector Alarm Menu will appear.

- 4 Press numeric key [1] or [2] in accordance with the Sector Alarm to be made.

- 5 Place the start position of the sector alarm at a desired position by operating the EBL/VRM dial, and then select ENT.

The start position of the Sector Alarm will be set.

- 6 Place the end position of the Sector Alarm at a desired position by operating the EBL/VRM dial, and then select ENT.

The end position of the Sector Alarm will be set.

Make Sctor Alarm
1. Sector Alarm 1
2. Sector Alarm 2
3. ENT
0. EXIT

---

## [IV] Display Sector Alarm (Sector Alarm 1, 2)

Display a created Sector Alarm.

### Procedures

- 1 Press [ATA MENU] key.

The ATA Menu will appear.

- 2 Press [4] key.

Press [2] key.

The Radar Alarm Menu will appear.

- 3 Press [1] key.

The Sector Radar Alarm Menu will appear.

- 4 Press numeric key [1] or [2] in accordance with the Sector Alarm to be displayed.

The display sector alarm mode will be switched between ON and OFF.

ON: Displayed  
OFF : Not displayed

Sector RADAR Alarm	
1. Sector Alarm 1	<input type="text" value="ON"/>
2. Sector Alarm 2	<input type="text" value="ON"/>

# 3.6 DISPLAY OWN SHIP'S TRACK

## 3.6.1 Display Own Ship's Track (Display Own Track)

If navigation equipment is connected, this system records data received from the navigation equipment and displays the own ship's track.

### 1 Select color for new own ship past tracks. (Own Track Color)

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [1] key.

The Own Track Setting Menu will appear.

- 2 Press [5] key.

The color list is displayed.

- 3 Select the number to be set, pressing the numeric key.

The selected track color will be set.

\* Button ⑳ on the radar display on page 2-7 is also available to select the Own Track color.

The selected color is applied to the newly displayed track only.  
The tracks displayed already are not affected by the setting.

Own Track Setting	
1. Own Track Interval	1 min
2. DISP Own Track Color>	
3. Clear Own Track	ALL
4. Own Track Memory	ON
5. Track Color	CYAN
6. T	1. OFF
	2. WHITE
7. N	3. CYAN
	4. BLUE
	5. GREEN
	6. YELLOW
9.	7. PINK
	8. RED
	0. EXIT

**Note:** The own ship's track can be displayed even while Own Track Memory is set to OFF. In this case, if rewrite operation such as changing of the display range is performed for the radar display, the own ship's track display is erased and the track is not plotted again. If DISP Own Track is set to OFF when Own Track Memory is ON, the own ship's track is not shown on the radar display but the system stores own ship's track data at specified intervals.

**2 Select Own ship tracks by the color. (Display Own Track Color)**

**Procedures**

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [1] key.

The Own Track Setting Menu will appear.

- 2 Press [2] key.

The track color list is displayed.

- 3 Select the color of the tracks to be displayed by Pressing the numeric key.

The selected tracks are displayed.

Own Track Setting	
1. Own Track Interval	<input type="text" value="1 min"/>
2. DISP Own Track Color>	
3. Clear Own Track	<input type="text" value="ALL"/>
4. Own Track Memory	<input type="text" value="ON"/>
5. Track Color	<input type="text" value="CYAN"/>
6. Track Memory	<input type="text" value="NORMAL"/>
7. Num/Vector Display	<input type="text" value="OFF"/>
9. NEXT	>
0. EXIT	

DISP Own Track Color	
1. ALL	<input type="text" value="OFF"/>
2. White	<input type="text" value="ON"/>
3. Cyan	<input type="text" value="ON"/>
4. Blue	<input type="text" value="OFF"/>
5. Green	<input type="text" value="OFF"/>
6. Yellow	<input type="text" value="OFF"/>
7. Pink	<input type="text" value="OFF"/>
8. Red	<input type="text" value="OFF"/>
0. EXIT	



### 3.6.2 Set Own Ship's Track Data Storage Interval (Own Track Interval)

There are 10 preset time intervals and 4 preset range intervals that can be selected for storing own ship's track data.

**Procedures**

**1 Press [RADAR MENU] key twice.**

**Press [9] key.**

**Press [1] key.**

The Own Track Setting Menu will appear.

**2 Press [1] key.**

The Own Track Interval Setting Menu will appear.

**3 Select the storage interval number to be set, pressing the numeric key.**

The selected storage interval will be set.

Own Track Setting	
1. Own Track Interval	
	1 min
2. D	1. 3 sec
	2. 5 sec
3. C	3. 10 sec
	4. 30 sec
4. C	5. 1 min
	6. 3 min
5. T	7. 5 min
	8. 10 min
6. T	9. Next Page
7. Num/Vector Display	
	OFF
9. NEXT >	
0. EXIT	

A preset time interval or preset distance interval can be selected as the storage interval.

Storage intervals that can be selected

Time: 3 sec, 5 sec, 10 sec, 30 sec, 1 min, 3 min, 5 min, 10 min, 30 min, and 60 min

Range: 1 nm, 3 nm, 5 nm, and 10 nm

The pull-down menu consists of 2 pages.

To switch between the pages, select **Next Page** pressing the numeric key [9], or **Previous Page** pressing the numeric key [0].

\* Pressing button ④ on the radar display on page 2-7, you can switch track data storage intervals, and pressing ⑤ button on the radar display on page 2-7, you can switch of a memory unit. Setting the button to OFF cancels the storing of data.

Own Track Setting	
1. Own Track Interval	
	1 min
2. D	1. 30 min
	2. 60 min
3. C	3. 1 nm
	4. 3 nm
4. C	5. 5 nm
	6. 10 nm
5. T	7. 0.1 nm
	8. 0.2 nm
6. T	9. Next Page
	0. Previous Page
7. Num/Vector Display	
	OFF
9. NEXT >	
0. EXIT	



---

### 3.6.3 Clear Own Ship's Track Data (Clear Own Track)

This function clears own ship's track data from memory.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [1] key.

The Own Track Setting Menu will appear.

- 2 Press [3] key.

The Own Track color list will appear.

- 3 Select the track color to be cleared, pressing the numeric key.

The tracks with selected color will be cleared.

Own Track Setting	
1. Own Track Interval	1 min
2. DISP Own Track Color>	
3. Clear Own Track	
	ALL
4. C	1. ALL
	2. WHITE
5. T	3. CYAN
	4. BLUE
6. T	5. GREEN
	6. YELLOW
	7. PINK
	8. RED
7. Num/Vector Display	
	OFF
0. EXIT	



### 3.6.4 Cancel Storing of Own Ship's Track Data (Own Track Memory)

This function cancels the storing of own ship's track data.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [1] key.

The Own Track Setting Menu will appear.

- 2 Press [4] key.

The setting of Own Track Memory will be switched between ON and OFF.

ON: Own ship's track data is stored.  
 OFF: Own ship's track data is not stored.

Own Track Setting	
1. Own Track Interval	1 min
2. DISP Own Track Color>	
3. Clear Own Track	ALL
4. Own Track Memory	ON
5. Track Color	CYAN
6. Track Memory	NORMAL
7. Num/Vector Display	OFF
9. NEXT	>
0. EXIT	


\* Button ④ on the radar display on page 2-7 is also available for switching Track Data Storage Intervals. Setting the button to OFF cancels own track memory.

**Note:** The own ship's track can be displayed even while Own Track Memory is set to OFF. In this case, if rewrite operation such as changing of the display range is performed for the radar display, the own ship's track display is erased and the track is not plotted again. If Display Own Track is set to OFF when Own Track Memory is ON, the own ship's track is not shown on the radar display but the system stores own ship's track data at specified intervals.

---


## 3.7 DISPLAY CHARTS

**Note:** Keep a card horizontal when inserting it into a card slot. An inclined card causes a failure.

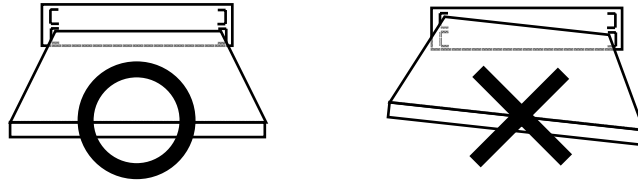

### 3.7.1 Display Coastline ROM Card Produced by JRC


- Insert the Coastline ROM card produced by JRC with the top surface upward into card slot 1 (lower) or 2 (upper) as shown in the figure below. Press [MAP] key, and the coastlines will be displayed automatically.
- Two Coastline ROM cards can be inserted into card slots 1 and 2 at the same time.
- For ranges including detailed coastlines, refer to the Coastline ROM card catalog.
- Do not insert an ERC card (provided by Japan Hydrographic Association) or C-MAP card into a card slot while JRC's Coastline ROM card is in the other slot. Doing so causes display trouble.

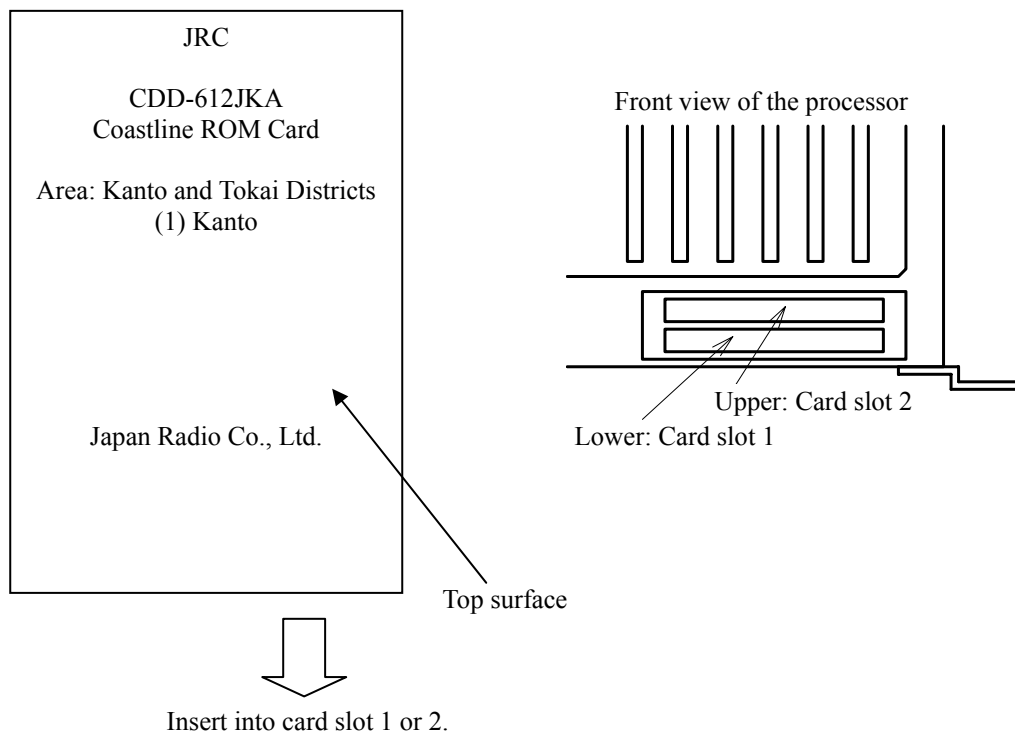



\* Insert the card and then press button ⑩ on the radar display on page 2-7 to switch Display Charts between ON and OFF.


### 3.7.2 Display ERC Card

- Insert the ERC card (provided by Japan Hydrographic Association) with the top surface upward into card slot 1 (lower) or 2 (upper) as shown in the figure below. Press [MAP] key, and the coastlines will be displayed automatically.
- Two ERC cards can be inserted into card slots 1 and 2 at the same time.
- For ranges of charts to be displayed, refer to the catalog issued by Japan Hydrographic Association.
- Do not insert JRC's Coastline ROM card or C-MAP card into a card slot while the ERC card is in the other slot. Doing so causes display trouble.

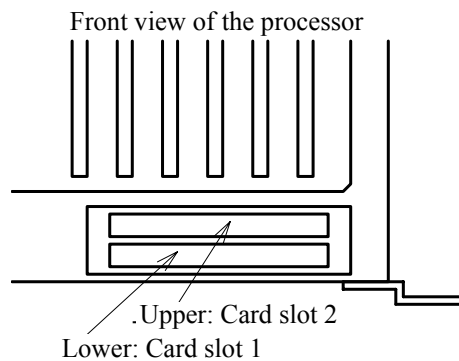

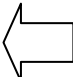Insert into card slot 1 or 2. 

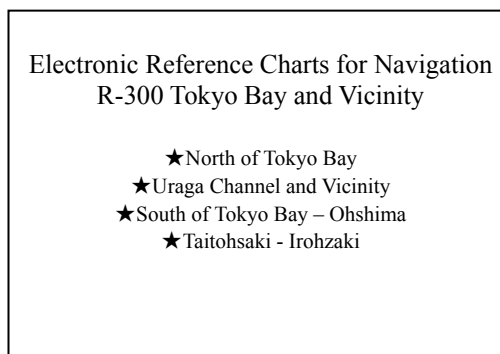

\* Insert the card and then press button  on the radar display on page 2-7 to switch Display Charts between ON and OFF.

---

### 3.7.3 Fill Charts (Fill Land Area)

This function fills the chart when JRC/ERC card is in use.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [5] key.

The Map Setting Menu will appear.

- 2 Press [1] key.

The setting of Fill Land Area will be switched between ON and OFF.

ON: Charts are filled.

OFF: Charts are not filled.

Map Setting	
1. Fill Land Area	<input type="checkbox"/> ON
2. C-MAP Setting	>
3. JRC/ERC Setting	>
4. Contour Setting	>
5. Map Display Setting	>
6. Select JRC Chart File	>
7. Map Draw AZI Mode	<input type="checkbox"/> N UP
8. JRC Chard Draw Mode	<input type="checkbox"/> FAST
0. EXIT	

# 3.8 DISPLAY NAVIGATION INFORMATION

Navigation information such as waypoint marks, and a maximum of 256 points of NAV lines, coastlines, depth contours, and NAV marks can be displayed, created, read, saved, corrected, and deleted. (This function is available only when navigation equipment is connected with the system.)

## 3.8.1 Display Waypoint Marks (Waypoint Display)

When waypoint information is received from the navigation equipment, the waypoint mark appears on the radar display. In this case,  is indicated as the waypoint mark on the radar display.

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [6] key.

The NAV Information Menu will appear.

- 2 Press [1] key.

The setting of Waypoint Display will be switched between ON and OFF.

: Displays waypoint marks.  
: Does not display waypoint marks.

NAV Information	
1. Waypoint Display	<input type="text" value="ON"/>
2. NAV Display Setting	>
3. User Map Setting	>
4. Geodetic	00 WGS-84
0. EXIT	

Waypoint marks are displayed only when NMEA sentences are used to receive Waypoint information. A plotter function (option) is needed to make Waypoint in this radar.

## 3.8.2 Display Navigation Information (NAV Display Setting)

The navigation information below can be displayed (ON) or hidden (OFF) individually.

- ① NAV lines [NAV Line] —
- ② Coastlines [Coast Line] ----
- ③ Depth contours [Contour] - —
- ④ Mark 1 [Mark 1] ⊗
- ⑤ Mark 2 [Mark 2] ★
- ⑥ Mark 3 [Mark 3] +
- ⑦ Mark 4 [Mark 4] Y

### Procedures

- 1 Press [RADAR MENU] key.

Press [6] key.

Press [2] key.

The NAV Display Setting Menu will appear.

To determine whether to display each type of navigation information, press the corresponding numeric key.

- ON: Displays the navigation information.
- OFF: Does not display the navigation information.

NAV Display Setting	
1. NAV Line —	<input type="checkbox"/> ON
2. Coast Line ----	<input type="checkbox"/> ON
3. Contour - —	<input type="checkbox"/> ON
4. Mark1 ⊗	<input type="checkbox"/> ON
5. Mark2 ★	<input type="checkbox"/> ON
6. Mark3 +	<input type="checkbox"/> ON
7. Mark4 Y	<input type="checkbox"/> ON
0. EXIT	





### 3.8.3 Create/Edit Navigation Information (Edit User Map)

#### Procedures

- 1 Press [RADAR MENU] key.

Press [6] key.

Press [3] key.

Press [6] key.

The Edit User Map Menu will appear.

The Edit User Map enables the operations of the functions below.

Clear Map Object: Clears all or an item of navigation information.

Make Map Object: Creates navigation information.

Correct: Corrects navigation information.

Delete: Deletes one point from navigation information.

Insert: Inserts an element into a line of each type

Edit User Map	
1. Clear Map Object	>
2. Make Map Object	>
3. Correct	
4. Delete	
5. Insert	
0. EXIT	

-----

## 1 Clearing all or an item of navigation information (Clear Map Object)

### Procedures

#### 1 Press [1] key while the Edit User MAP Menu is open.

The Clear Map Object Menu will appear.

Select the type of navigation information to be cleared, pressing the corresponding numeric key.

NAV Line: Clears NAV lines.  
Coast Line: Clears coastlines.  
Contour: Clears contour lines.  
Mark1: Clears Mark 1.  
Mark2: Clears Mark 2.  
Mark3: Clears Mark 3.  
Mark4: Clears Mark 4.

All: Clears all items of navigation information.


Clear Map Object	
1. NAV Line	—
2. Coast Line	----
3. Contour	- -
4. Mark1	⊗
5. Mark2	★
6. Mark3	+
7. Mark4	Y
8. All	
0. EXIT	

## 2 Making navigation information (Make Map Object)

### Procedures

- 1 Press [2] key while the Edit User MAP Menu is open.

The Make Map Object Menu will appear.

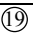**MAKE** will appear in the **CURSOR** mode field at the radar display button .

- 2 Select the type of navigation information to be made, pressing the corresponding numeric key.

- 3 Use the trackball to move the cross cursor mark to the starting point of a line or a point where a mark is to be made, and press [ENT] key.

The starting point of a line or one point of a mark will be determined.

- 4 Repeat step 3, and press [8] key when finishing the making of the line or mark.

The line or mark make mode will terminate.

- 5 To make another line or mark, repeat steps 2 to 4.

- 6 Press [0] key when finishing the making of all navigation information.

The Edit User Map Menu will reappear.

Make Map Object	
1. NAV Line	—
2. Coast Line	----
3. Contour	- - -
4. Mark1	⊗
5. Mark2	★
6. Mark3	+
7. Mark4	Y
8. ENTER	
Remain Point	<input type="text" value="256"/>
0. EXIT	

# 3

**Note:** Navigation information can be created with a maximum of 256 points being plotted. The number of points that can still be plotted (REMAIN POINT in the menu) is decremented each time a line or mark is plotted.

---

### 3 Correcting a continuous line or moving a mark (Correct)

#### **Procedures**

- 1 Press [3] key while the Edit User Map Menu is open.

The navigation information correction mode will be activated.

will appear in the  mode field at the radar display button ⑰.

- 2 Use the trackball to move the pointer to the vertex in a line to be corrected or the mark to be moved, and press [ENT] key.

The cross cursor mark will appear on the selected line or mark.

- 3 Use the trackball to move the cross cursor mark to a new point to which the line is corrected or the mark is moved.


The selected line will be corrected to the new point, or the mark will be moved there.

- 4 To correct another line or mark, repeat steps 2 and 3.

- 5 Press [0] key when finishing the correction of lines and marks.

The  mode at the upper right of the radar display will change to the general operation mode, terminating the navigation information correction mode.

(Example)

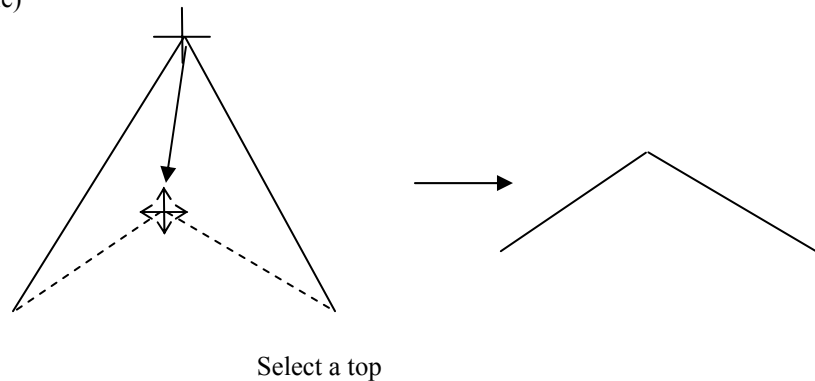



#### 4 Deleting a continuous line or mark (Delete)

##### **Procedures**

- 1 Press [4] key while the Edit User Map Menu is open.

The navigation information deletion mode will be activated.

will appear in the  mode field at the radar display button ⑨.

- 2 Use the trackball to move the pointer to the vertex in a line or the mark to be deleted, and press [ENT] key.

The selected line or mark will be deleted.


**Note:** A line drawn by joining two points is all deleted.

- 3 To delete another line or mark, repeat step 2.

- 4 Press [0] key when finishing the deletion of lines and marks.

The  mode at the upper right of the radar display will change to the general operation mode, terminating the navigation information deletion mode.

(Example) Deletion of a vertex from a line

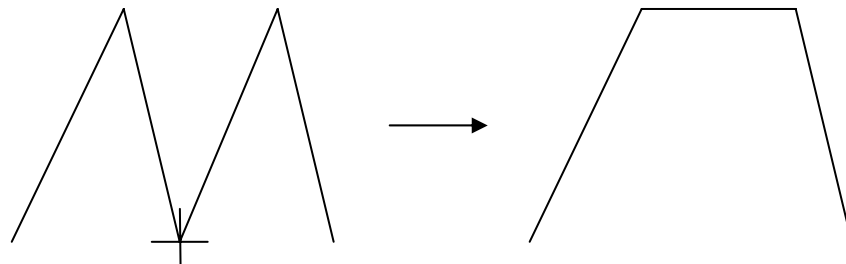

---

## 5 Inserting a vertex into a line (Insert)

### **Procedures**

- 1 Press [5] key while the Edit User MAP Menu is open.**

The navigation information insertion mode will be activated.

will appear in the  mode field at the radar display button ⑰.

- 2 Use the trackball to move the pointer to the line that is to become a vertex, and press [ENT] key.**

The cross cursor mark will appear on the selected point.

- 3 Use the trackball to move the cross cursor mark to a new point where a vertex is to be formed, and press [ENT] key.**


A vertex will be inserted into the selected line.

- 4 To insert another vertex, repeat steps 2 and 3.**

- 5 Press [0] key when finishing the insertion of all vertices.**

The  mode at the upper right of the radar display will change to the general operation mode, terminating the navigation information insertion mode.

(Example)

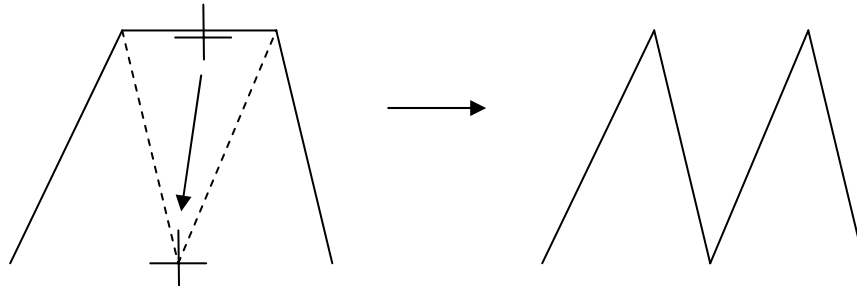

### 3.8.4 Set Navigation Information (User Map Setting)

#### Procedures

- 1 Press [RADAR MENU] key.

Press [6] key.

Press [3] key.

The User Map Setting Menu will appear.

Select operation for navigation information, pressing the corresponding numeric key. The selected operation will be performed.

Load: Loads navigation information.  
 Unload: Unloads navigation information.  
 Save: Saves navigation information.  
 Erase: Erases navigation information.  
 Edit User Map: Edits navigation information.  
 Shift: Shifts the display position of navigation information.  
 Shift Clear: Clears position correction information.

User Map Setting	
1. Own Ship Position	
	N 35° 23.000'
	E139° 22.345'
2. Load	>
3. Unload	
4. Save	>
5. Erase	>
6. Edit User Map	>
7. Shift	
8. Shift Clear	
0. EXIT	

---

## **[1] Entering the own ship's position in manual mode (Own Ship Position)**

Use this function to edit the navigation information of any positions other than the own ship's position.

### **Procedures**

**1 Press [1] key while the User Map Setting Menu is open.**

The CODE INPUT Menu for entering latitude and longitude of the own ship position will appear.

**2 Enter a value as the latitude (xx° xxx.xx') using the numeric keys [0] to [9].**

**3 To switch between north latitude and south latitude, turn the [MULTI] control.**

Each time the control is turned, N (north latitude) is changed to S (south latitude), or vice versa.

**4 Press [ENT] key.**

The latitude entered in manual mode will be determined. Subsequently, enter the longitude.

**5 Enter a value as the longitude (xx° xxx.xx') using the numeric keys [0] to [9].**

**6 To switch between east longitude and west longitude, turn the [MULTI] control.**

Each time the control is turned, E (east longitude) is changed to W (west longitude), or vice versa.

**7 Press [ENT] key.**

The longitude entered in manual mode will be determined.

\* Button on the CODE INPUT Menu is also available instead of the numeric keys.

**Note:** The own ship's position manually entered by using the function above is valid only in the User MAP Setting Menu. When control exits from the menu, the manually entered position data is invalidated.



**[III] Loading navigation information (Load User Map)**

**Procedures**

- 1 Press [2] key while the User Map Setting Menu is open.**

The Load User Map Menu will appear.

- 2 Press [2] key.**

The list of navigation information files saved in the system will appear.

\* Each time you press [1] key, the Device item is switched between INTERNAL and CARD2.



INTERNAL: Reads saved data from the processor.

CARD2: Reads saved data from CARD2.

To select CARD2, insert the flash memory card, in which data has been saved, into card slot 2 (upper stage).

- 3 Select the number of the file to be loaded, pressing the numeric key.**

The selected navigation information will be loaded and shown on the radar display.

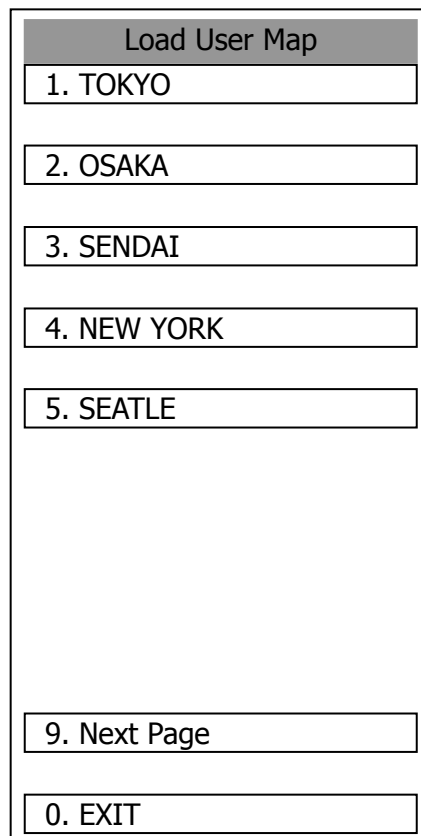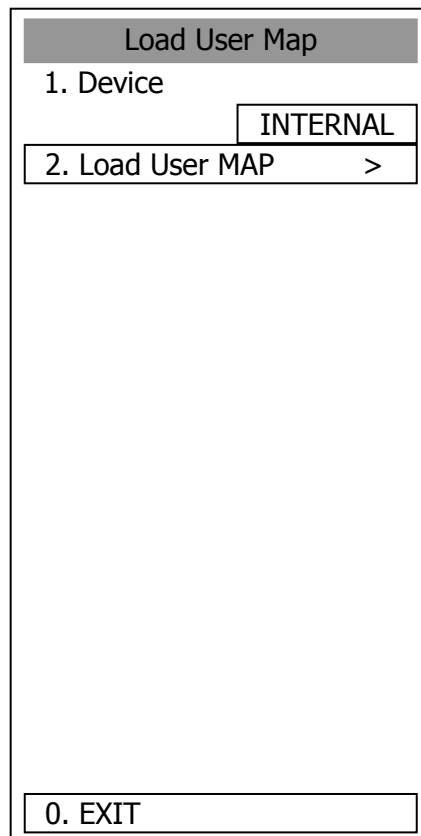

-----

### **[III] Initializing Navigation Information (Unload)**

#### **Procedures**

- 1 Press [3] key while the User Map Setting Menu is open.**

Display the window to select whether or not the information is to be initialized.

- 2 Press [1] key.**

The navigation information is initialized.

This function can be executed for files that have been read and new navigation information currently being entered.

User MAP Setting	
1. Own Ship Position	
	35° 23.000' N
	139° 22.345' E
2. Load	>
3. Unload	
4. Save	>
5. Erase	>
7. Shift	
8. Shift Clear	
0. EXIT	







### **[VI] Shifting the display position of navigation information to a correct position (Shift)**

If the display position of navigation information is incorrect, it can be shifted to the correct position in manual mode.

#### **Procedures**

- 1 Press [7] key while the User Map Setting Menu is open.

will appear in the  mode field at the upper right of the radar display, and the navigation information shift mode is activated.

- 2 Use the trackball to move the pointer to a mark or a point on a NAV line, coastline, or depth contour line, and press [ENT] key.
- 3 Use the trackball to move the cross cursor mark to the position to which the mark or line is shifted, and press [ENT] key.

All the marks and lines currently displayed will be shifted to their correct positions.

### **[VII] Shifting the corrected display position of navigation information back to original (Shift Clear)**

#### **Procedures**

- 1 Press [8] key while the User Map Setting Menu is open.

The MAP returns to the original position.

---

### 3.8.5 Set and Display Geodetic System

To create navigation information, set the geodetic system that is used with the connected navigation equipment. When navigation information is loaded, the geodetic system used when the navigation information was saved, is displayed. Make sure that the displayed geodetic system is identical to the one used with the navigation equipment. If the two geodetic systems are different, the positions of navigation information on the radar display will be shifted. Therefore, it is important to set the geodetic system of the navigation equipment.

#### Procedures

- 1 Press [RADAR MENU] key.

Press [6] key.

The NAV Information Menu will appear.

- 2 Press [4] key.

The geodetic system input ten-key screen will appear.

- 3 Enter the number of the target geodetic system, pressing the numeric keys.

- 4 The entered geodetic system number can be changed by turning the [MULTI] control.

- 5 Press [ENT] key.

The entered geodetic system will be determined.

NAV Information	
1. Way Point Display	ON
2. NAV Display Setting	>
3. User Map Setting	>
4. Geodetic	
00	WGS-84
0. EXIT	

**Geodetic System List**

No.	Name
0	WGS-84
1	WGS-72
2	Japan
3	North American 1927(U.S)
4	North American 1927(Canada & Alaska)
5	European 1950 (Europe)
6	Australian geodetic 1966 (Australia)
7	Ordance Survery of Great Britain (England)
8	NAD-83
9	- (No Use)
10	- (No Use)
11	ADINDAN (Etiopia & Sudan)
12	ARC 1950 (Botswana)
13	AUSTRALIAN GEODETIC 1984 (Australia)
14	BERMUDA 1957 (the Bermudas)
15	BOGOTA OBSERVATORY (Columbia)
16	CAMPO INCHAUSPE
17	CHATHAM 1971
18	CHUAASTRO (Paraguay)
19	CORREGO ALEGRE (Brazil)
20	DJAKARTA (VATAVIA) (Sumata)
21	EUROPEAN 1979 (Europe)
22	GEODETIC DATUM 1949 (New Zeland)
23	GUAM 1963 (Guam)
24	HAYFORD 1910 (Finland)
25	HJORSEY 1955 (Ice land)
26	INDIAN (India & Nepal)
27	IRELAND1965 (Ireland)
28	KERTAU 1948 (West Malaysia)
29	L.C.5 ASTRO (Cayman Black Island)
30	LIBERIA 1964 (Liberia)
31	LUZON (Philippines)
32	MERCHICH (Morocco)
33	MINNA (Cameroon)
34	NAHRWAN (Oman)
35	NAPARIMA, BWI (Trinidad & Tobago)
36	OLD EGYPTIAN (Egypt)
37	OLD HAWAIIAN (Hawaii)
38	PCO DE LAS NIEVES (Canary)
39	PROVISIONAL SOUTH AMERICAN 1956 (South America)
40	PROVISIONAL SOUTH CHILEAN 1963 (South Chile)
41	PUERTO RICO (Puerto Rico & Virgin Islands)
42	QORNOQ (South Greenland)
43	RT90 (Sweden)
44	SANTA BRAZ (San Miguel island & Saint Mary islands)
45	SOUTH AMERICAN 1969 (South America)
46	SOUTHWEST BASE (Faial & Sao Jorge & Pico & Graciosa & Terceira island)
47	TIMBALAI 1948 (Brunei & East Malaysia)
48	- (No Use)
49	- (No Use)

# 3.9

## OPERATE PERFORMANCE MONITOR (PM DISPLAY)

### 3.9.1 Operation Procedures

This function is available only when the radar equipment is equipped with the NJU-64 Performance Monitor.

#### 1 Preparation for Operation

If the equipment is provided with a radar interswitch, set the interswitch to the Master Radar mode.

##### Procedures

- 1 Press [RADAR MENU] key twice.

Press [8] key.

Press [9] key.



The Test Menu will appear.

- 2 Press [4] key.

The **TX LVL** indicator bar-graph in the menu indicates the performance monitor status. Use this bar graph to check for the transmitted power. (The following are automatically set for the radar:

Relative motion (RM)  
OFF CENTER OFF  
IR OFF  
PROCESS OFF  
TGT ENH OFF  
FUNCTION OFF, and  
24 NM range

At the same time, the PM pattern for checking the receiver system is shown on the radar display.)

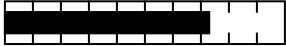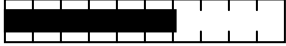Test Menu	
1. Self Test	
2. Monitor Test	
3. Panel Test	
4. PM Display	ON
5. Error Logging	
6. System INFO	
MAGI	
PM	
0. EXIT	


##### Exit

- 1 Press [RADAR MENU] key.

The Test Menu will be closed.

- Notes:**
- When PM is set to ON, all target acquisitions by ATA functions are cancelled. Once the target acquisitions are cancelled, they are not recovered.
  - The radar image is suppressed for the operator to easily view the PM image. Thus, be sure to close the TEST MENU when having checked for the PM.



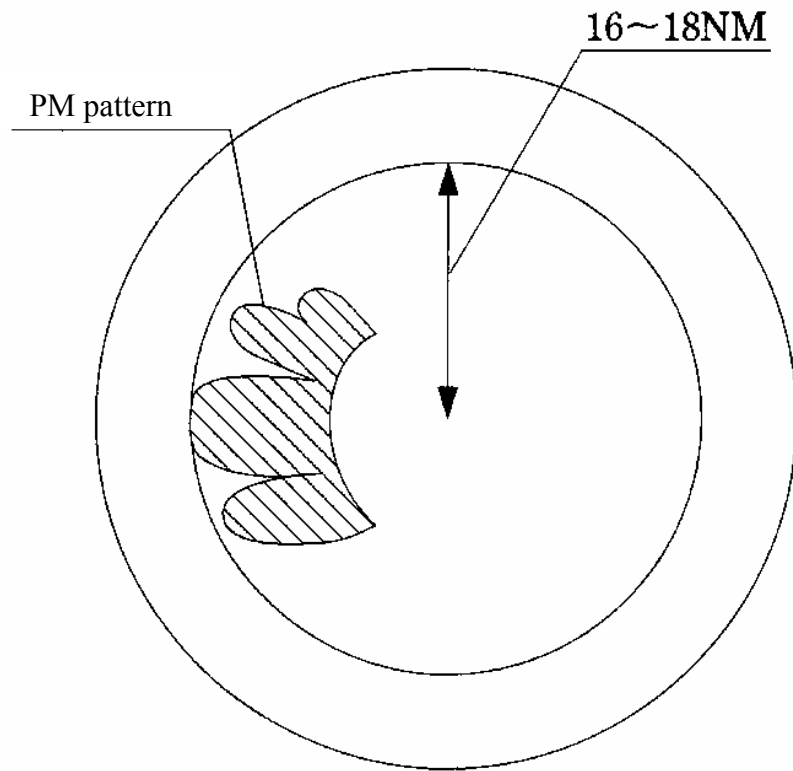


## **2 Checking Transmitter System**

The **TX LVL** indicator bar-graph in the menu indicates the value corresponding to the transmitted power. If the currently indicated bar is extremely shorter than when initially checked, the transmitter system needs to be inspected by the service engineer.

**Check Procedure**

- ① Read the value A of the current bar length.
- ② Referring to the Calibration Curve I, obtain the relative attenuation d (B) for the initial bar length B shown on the INFORMATION LABEL.
- ③ Referring to the Calibration Curve I, obtain the relative attenuation d (A) for the value A. The result of d (A) - d (B) indicates the current attenuation of transmitted power compared with the initially specified value.
- ④ When d (A) - d (B) indicates attenuation of 10 dB or more (due to the end of magnetron's life), the transmitter system needs to be inspected by the service engineer.

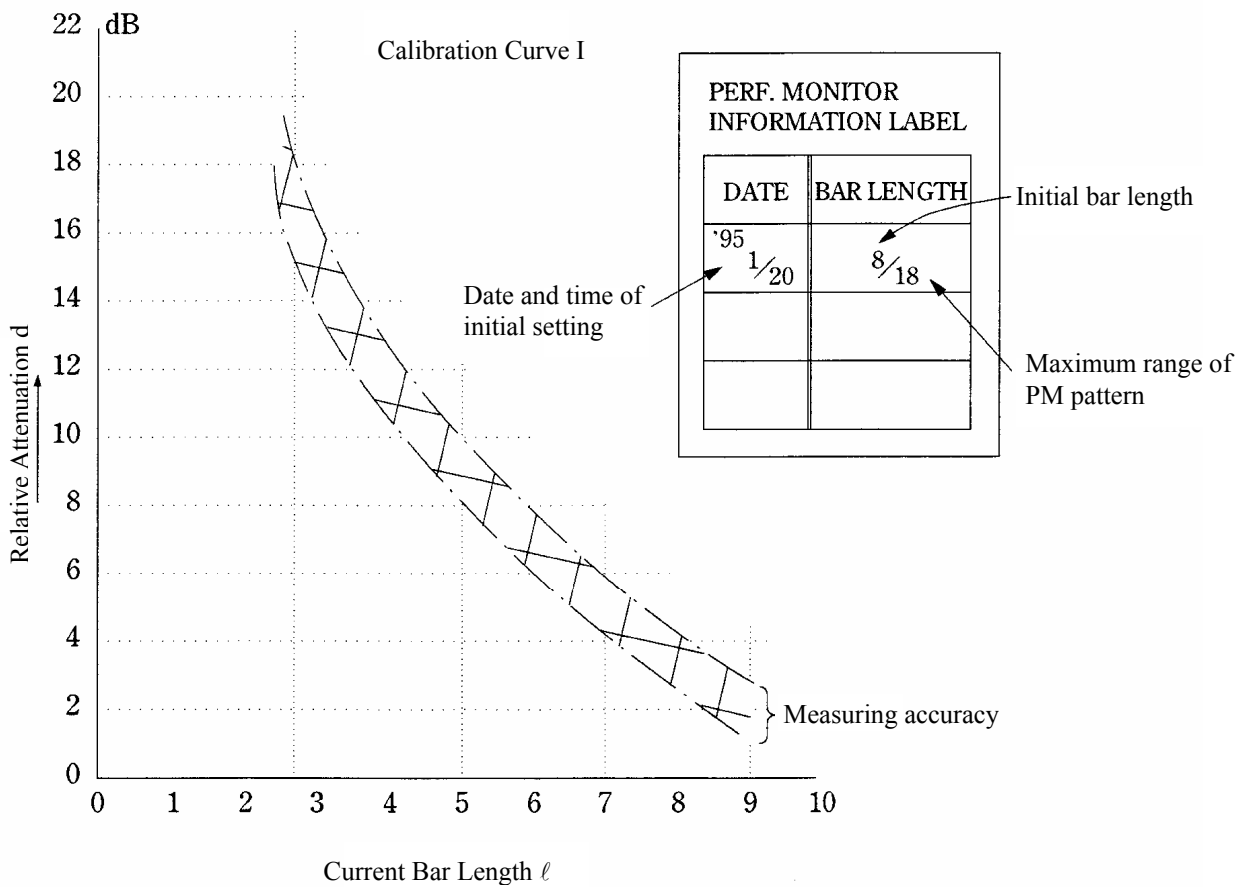

**Figure 1**

(Example) When the initial bar length  $B = 8$  and the current bar length  $A = 6$ , the relative attenuation is obtained as  $d(B) = 3.5$  dB and  $d(A) = 7$  dB according to the Calibration Curve I. Thus,  $d(A) - d(B) = 3.5$  dB. This proves that the current attenuation of transmitted power is about 3.5 dB.

**Example of Checking Transmitter System**


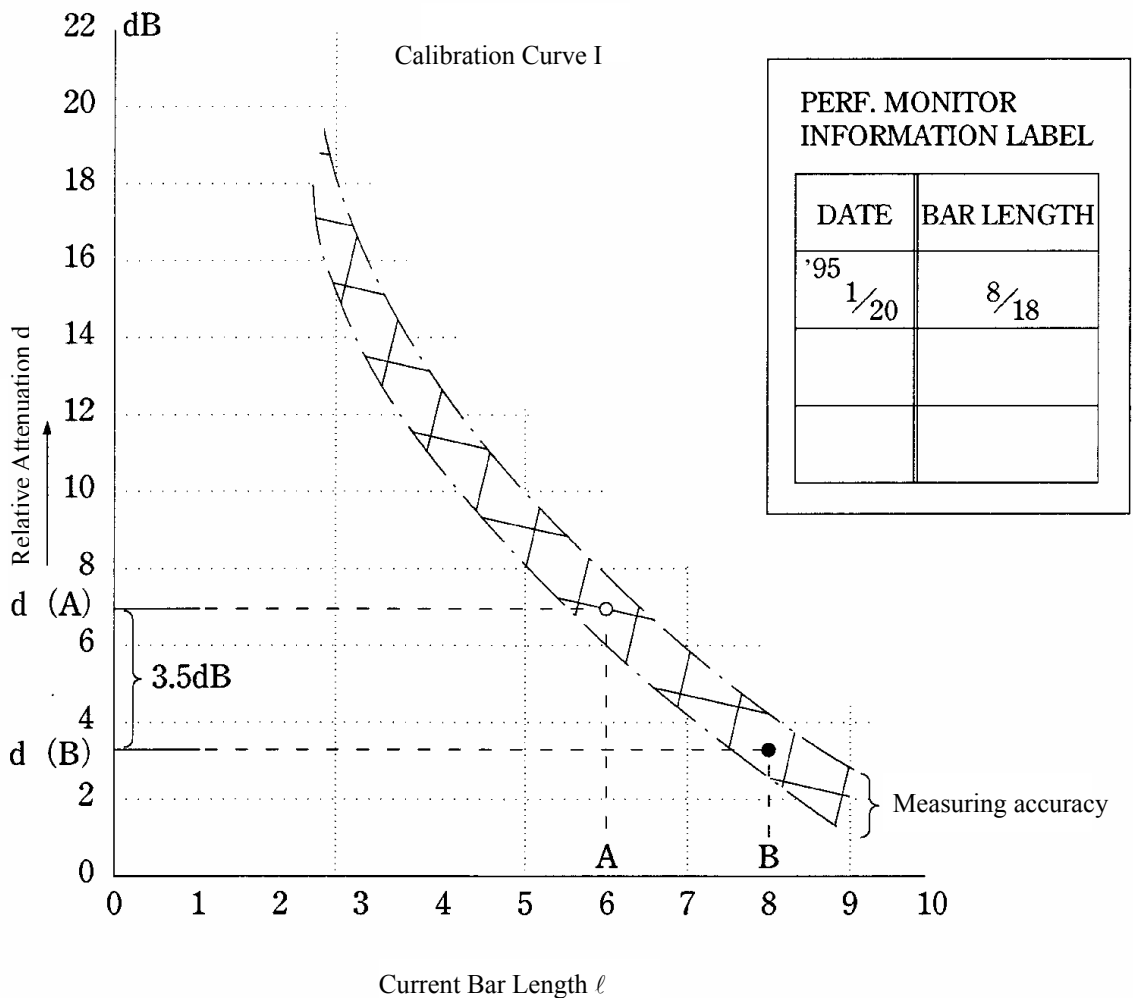


Figure 2

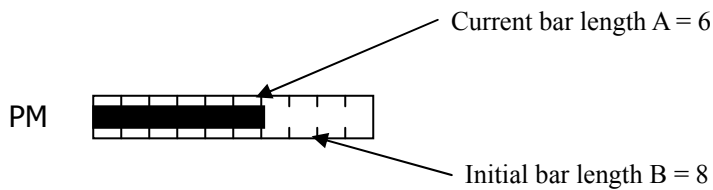

### 3 Checking Receiver System

The maximum range of the PM pattern on the display indicates that the receiver system's sensitivity has reduced.

#### Check Procedure

- ① Measure the maximum range  $r_{max}$  from the PPI center to the PM pattern on the display by using a VRM (Variable Range Marker).
- ② Referring to the Calibration Curve II, obtain the reduction of sensitivity  $R$  ( $r_{max}$ ). The value  $R$  ( $r_{max}$ ) indicates the current reduction of receiver system's sensitivity.



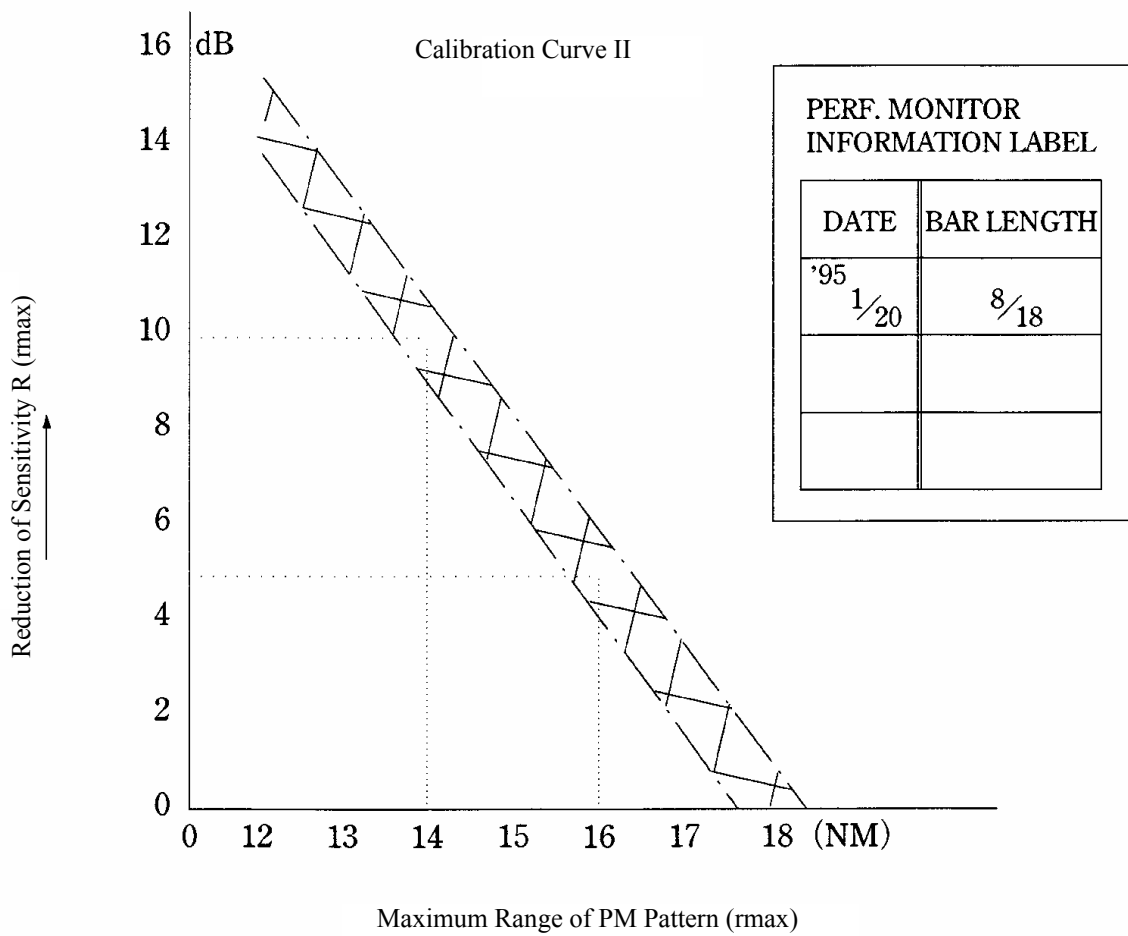


Figure 3

(Example) When the maximum range of the initial PM pattern  $r_{Bmax} = 18$  NM as shown on the INFORMATION LABEL and the maximum range of the current PM pattern  $r_{Amax} = 16$  NM, the reduction of sensitivity  $\Delta R$  ( $r_{max}$ ) = 5 dB is obtained according to the Calibration Curve II. This proves that the receiver system's sensitivity has reduced by about 5 dB.

**Example of Checking Receiver System**

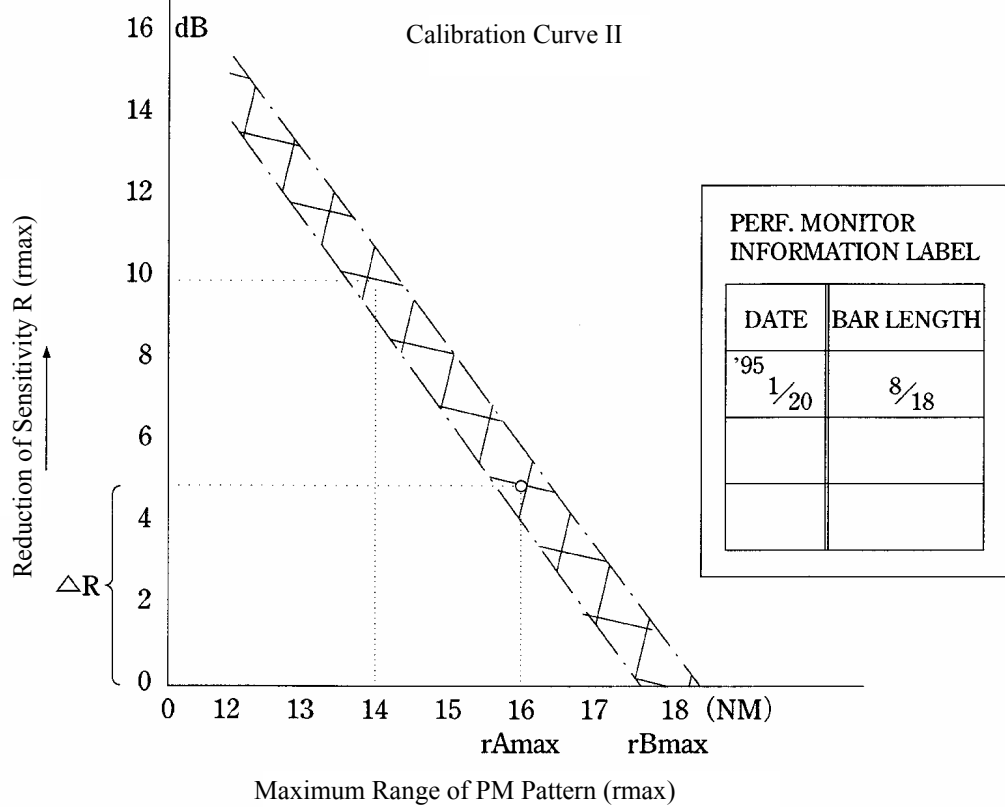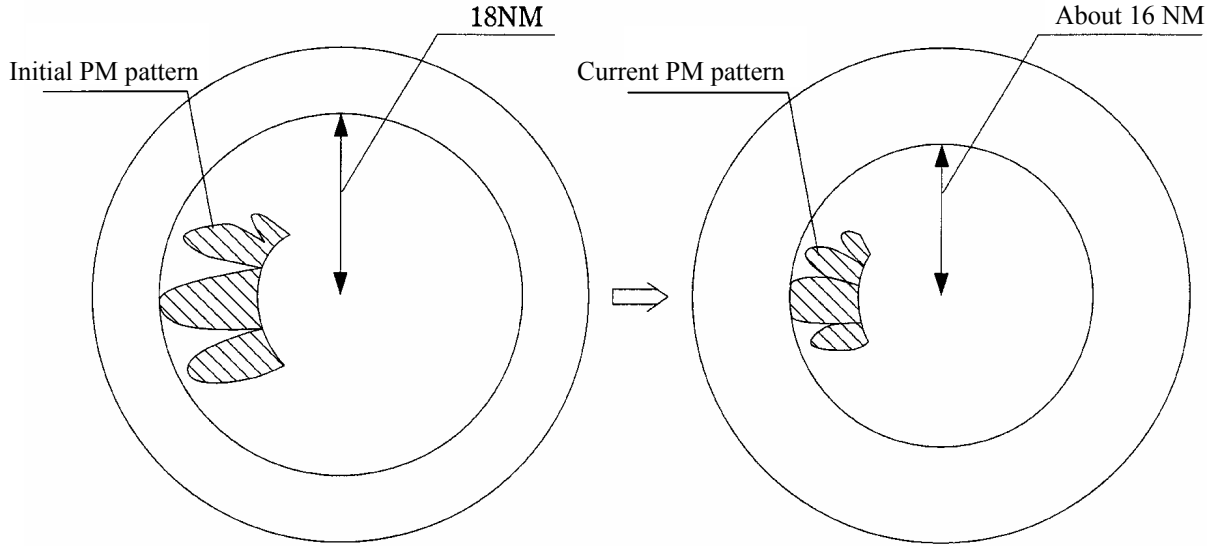

**Figure 4**



## [2] Video Noise Rejection

- This function rejects signals that assumed as noise and clutter in radar videos.
- Select **OFF** to display radar videos like analog signals.
- Select **LEVEL1** or **LEVEL2** to suppress noise and clutter.
- Select **LEVEL1** or **LEVEL2** to superimpose-display the chart.
  - OFF**: Turns off the noise rejection function, and displays all signals. Targets are popped up from noise and displayed like analog signals.
  - LEVEL1**: Rejects the signals of definitely unwanted waves (noise and clutter). When detection of targets or unwanted waves is not definite, the signals are displayed. When detection of targets is definite, the signals are displayed.
  - LEVEL2**: Rejects the signals of definitely unwanted waves (noise and clutter). When detection of targets or unwanted waves is not definite, the signals are rejected. Only when detection of targets is definite, the signals are displayed.

## [3] Auto DR Control

- This function automatically controls the dynamic range of radar videos when the AUTO SEA/RAIN clutter suppression mode is used.
- When the AUTO SEA clutter suppression mode is used, this function improves sensitivity by widening the dynamic range of only areas where sea clutter is strong, and narrowing the dynamic range of areas where sea clutter is not detected.
- When the AUTO RAIN clutter suppression mode is used, this function improves sensitivity by widening the dynamic range of areas where sea clutter or rain/snow clutter is strong, and narrowing the dynamic range of the other areas.
- Land videos become obscure when the AUTO RAIN clutter suppression mode is used.
  - OFF**: Does not control the dynamic range automatically. The dynamic range is set in the same manner as when the MANUAL SEA/RAIN clutter suppression mode is used.
  - ON**: Automatically controls the dynamic range. (Standard setting)

## [4] Process Switch

- This function sets a specific area and switches the video process mode between the inside and outside of the area.
- In **[5] 2nd Process Mode**, set the second video process mode for the area outside the boundary.
- In **[2] PROCESS** of **Main Menu**, set the first video process mode for the area inside the boundary.
- Sensitivity at a distance can be improved by suppressing near sea clutter through the correlative process.
- There are two methods for setting an area:
  - OFF**: Disables the Process Switching function. (Standard setting)
  - RANGE FIX**: Sets a boundary at a constant range from the center. Set the boundary range in **[6] Process Switch Range**. The specific area turns out to be a circle with the own ship's position as the center.
  - AUTO**: Automatically sets a specific area. The area subject to many clutter returns is inside the boundary, and the area less subject to clutter returns is outside the boundary.

---

## [5] 2nd Process Mode

- Set the second video process mode for the outside of a specific area.
- This function is enabled when **RANGE FIX** or **AUTO** is selected in **[4] Process Switching**.

### Video process modes

<b>PROC OFF</b>	Video process off:	Select this mode in general.
<b>3SCAN CORR</b>	Correlative process 1:	Select this mode when many rain/snow clutter returns are detected.
<b>4SCAN CORR</b>	Correlative process 2:	Select this mode to highlight targets while suppressing sea clutter returns.
<b>5SCAN CORR</b>	Correlative process 3:	Select this mode to detect small targets hidden by sea clutter returns.
<b>REMAIN</b>	Video process 4:	Select this mode when own ship yaws wildly.
<b>PEAK HOLD</b>	Video process 5:	Select this mode to detect small targets of which detection probability is low.

## [6] Process Switch Range

- Set the boundary range of a specific area.
- This function is enabled when **RANGE FIX** is selected in **[4] Process Switch**.
- The specific area turns out to be a circle with the own ship's position as the center.
- The boundary range can be set in units of 0.1 nm, ranging 0.1 to 25.5 nm.
- After selecting PROC Switch Range, adjust the range using the **[MULTI]** control.
- When finishing the adjustment, press **[ENT]** key to determine the video process switching range.

## [7] Fast Target Detection

- This function displays fast moving targets that are suppressed in scan-correlative process mode.
- This function is enabled when **3SCAN CORR**, **4SCAN CORR**, or **5SCAN CORR** is selected as the video process mode.
- If unwanted waves remain on the radar display, suppress them by using the **[SEA]**, **[RAIN]**, or **[GAIN]** control, or adjusting the interference rejection mode.
  - OFF**: Disables the Fast Target Detection function.
  - ON**: Enables the Fast Target Detection function.



## 3.10.2 Set Radar Trails (RADAR Trails Setting)

This function enables the setting of detail information about radar trails processing.

### Procedures

#### 1 Press [RADAR MENU] key twice.

Press [2] key.

The RADAR Trails Setting Menu will appear.

Detail information about radar trails processing can be set by changing the settings of the menu items.

**Note:** After the settings for radar trails processing are changed, targets' trails may not be displayed or trails may be plotted with unwanted waves. Thus, do not make a significant change in the settings.

RADAR Trails Setting	
1. Trails Interval	6 min
2. Trails Mode	TRUE
3. Trails REF Level	LEVEL2
4. Trails Reduction	OFF
5. Time/Cont Combine	OFF
6. Trails Process	OFF
7. Max Interval	SHORT
9. NEXT	>
0. EXIT	

### [1] Trails Interval

- Set the trail intervals at which radar trails are displayed.
- Selection items of trail intervals change depending on the setting of maximum value of radar trail display time.
- The Multi-function control is also available for setting.
- For the decision branches of trail interval, see Section 3.5.9 on page 3-45.

### [2] Trails Mode

- Set the radar trail display mode.
- Each time the button is pressed, you can switch between True and Relative.
- For details on the trail mode, see Section 3.5.9 on page 3-43.

### [3] Trails REF Level

- Select a radar video level required for plotting radar trails.
- The radar video level increases in order of LEVEL1 → LEVEL2 → LEVEL3 → LEVEL4.
- To plot radar trails with unwanted waves, change to a higher level.
- To thin radar trails, change to a higher level.
- If radar trails are plotted in snatches, change to a lower level.

### [4] Trails Reduction

- Make a setting for thinning radar trails.
- The effect of thinning increases in order of LEVEL1 → LEVEL2 → LEVEL3.
- Radar videos do not become obscure because of the thinning of radar trails.

OFF	: Disables the Trails Reduction function.
LEVEL1	: Enables the Trails Reduction function. (Effect: Low)
LEVEL2	: Enables the Trails Reduction function. (Effect: Modest)
LEVEL3	: Enables the Trails Reduction function. (Effect: High)

---

## [5] Time/Cont Combine

- This function superimpose-displays time radar trails and continuous radar trails.
- Operators can distinguish time radar trails from continuous radar trails by setting different colors for both types of trails.

OFF: Disables the Time/Cont Combine function.

ON: Enables the Time/Cont Combine function.

## [6] Trails Process

- Determine whether to use the video process with radar signals for plotting radar trails.
- When Trails Process is  ON, radar trails are never plotted with unwanted waves, but the radar trails of fast moving targets may not be plotted.
- When Trails Process is  OFF, radar trails may be plotted with unwanted waves, but the radar trails of fast moving targets are always plotted.

OFF: Disables the Trails Process function.

ON: Enables the Trails Process function.

## [7] MAX Interval

- Select the maximum time for displaying radar trails.
- Select  SHORT when short radar trails are often used in bays and the likes.
- Select  LONG when long radar trails are necessary for ocean navigation.
- MEDIUM is for specification between  SHORT and  LONG.
- Continuous trails are available with all the options.

SHORT: Sets 15 minutes as the maximum time for radar trails display.

MEDIUM: Sets 30 minutes as the maximum time for radar trails display.

LONG: Sets 60 minutes as the maximum time for radar trails display.

SUPER LONG: Sets 12 hours as the maximum time for radar trails display.

**[9] NEXT**

- The file menu will appear.

**Load and save of the Rdar trails.**

**Procedures**

- 1 Press [RADAR MENU] key twice.  
Press [2] key.  
Press [9] key.

**[1] Loading Trails File**

- Presse [1] key.  
The saved trail files are displayed.
- Select the file to be loaded  
Confirmation warning is displayed.  
Select “Yes” for loading.

It takes a few second to be loded.

**Note:** When the saved trail position is too far from own ship position, the saved trails can not be loaded.  
On the standby mode, however, far trail positions can be loaded. In that case, the own ship position is changed to the loaded trail position temporally.

After loading, Range scale, Trails mode (True / Relative) and Max interval are set to loded settings.

**[2] Saving Trails File**

- Presse [2] key.  
The File Save menu is displayed.
- Using the cursor, enter the file name and click “ENT”  
Confirmation warning is displayed.  
Select “Yes” for saving.



It takes a few second to be loded.

**Note:** When the own ship position data are not available, trails can not be saved.

**[3] Erasing Trails File**

- Presse [3] key.  
The saved trail files are displayed.
- Select the file to be erased.  
Confirmation warning is displayed.  
Select “Yes” for erasing.

**Note:** Deleted files can not be restored, so Erase files carefully.

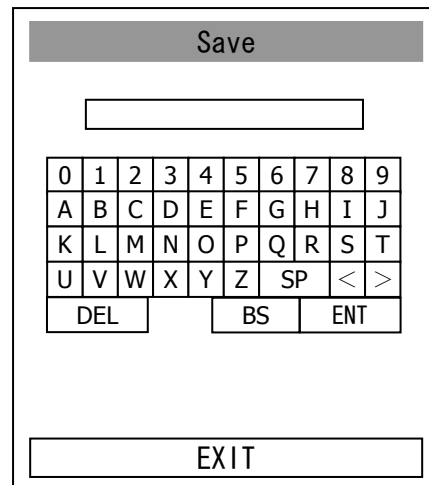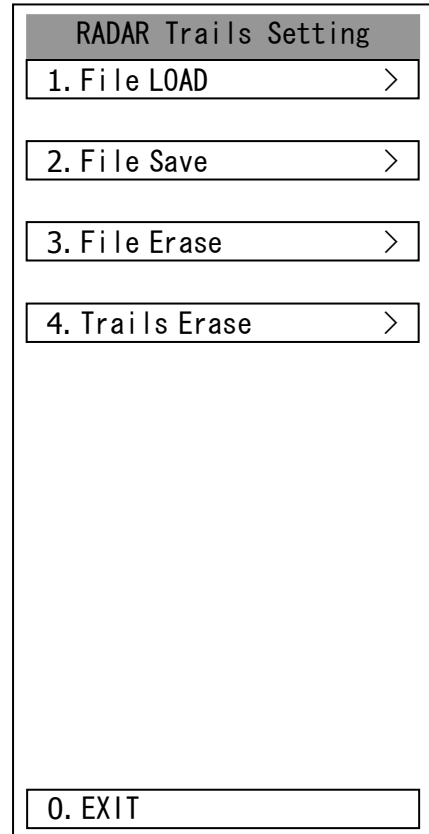

---

## Erasing the displayed trails partially.

- Erasing the part of the displayed trails by using the cursor as a eraser.

**Note:** Deleted trails can not be restored, so Erase them carefully.

### **Procedures**

- 1 Press [RADAR MENU] key twice.  
Press [2] key.  
Press [9] key.  
Press [4] key.

- Trail erase menu will appear.

### [1] Trails Erase Mode

Press [1] key.

- Trail erase mode is enabled.
- On the mode, cursor is fixed on the menu, and the eraser (white box) is displayed on the own ship position.
- Using the trackball, position the eraser on the Trail to be deleted.

### [2] Trails Erase start

Press [2] key.

- Trail erase function starts.  
Using the track ball, wipe out trails.
- Press [2] key again to disable the function temporarily.

The depth input scre

### [3] Eraser Size

Press [3] key.

- Eraser size lit is displayed.
- Select the size of the eraser.

Trails Erase	
1. Trails Erase Mode	OFF
2. Trails Erase Start	
3. Eraser Size	3×3
0.	EXIT

### 3.10.3 Set Cursor (Cursor Setting)

This function enables the setting of detail information about cursor operation and display.

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [3] key.

Press [6] key.

The Cursor Setting Menu will appear.

Detail information about cursor operation and display can be set by changing the settings of the menu items.

Cursor Setting	
1. EBL/VRM Control CURS	<input type="text" value="OFF"/>
2. Cursor Length	<input type="text" value="LONG"/>
3.Distance Unit Simultaneity	<input type="text" value="OFF"/>
<input type="text" value="0. EXIT"/>	

# 3

#### [1] EBL/VRM Control CURS (device for cursor operation)

- This function is switched between ON and OFF of EBL/VRM Control CURS function
- The trackball is provided as a standard device. If the trackball malfunctions, the cursor can be moved by using the [EBL] control and [VRM] control.
- The cursor moves horizontally when [EBL] is operated, and moves vertically when [VRM] is operated.
- To switch between EBL/VRM operation and cursor operation while ON is selected, hold down the [EBL] control for 2 seconds.

: Cursor is operated using a [EBL] [VRM] control.

: Cursor is operated using a trackball.

#### [2] Cursor Length

- Set the length of the cross cursor mark on the radar display.
  - : Cuts the cross cursor mark in length.
  - : Makes the cross cursor mark twice as long as when  is selected.

### 3.10.4 Set Screen(Screen Setting)

This function enables the setting of detail information about screen display.


#### Procedures

1 Press [RADAR MENU] key twice.


Press [4] key.

The Screen Setting Menu will appear.


Detail information about screen display can be set by changing the settings of the menu items.

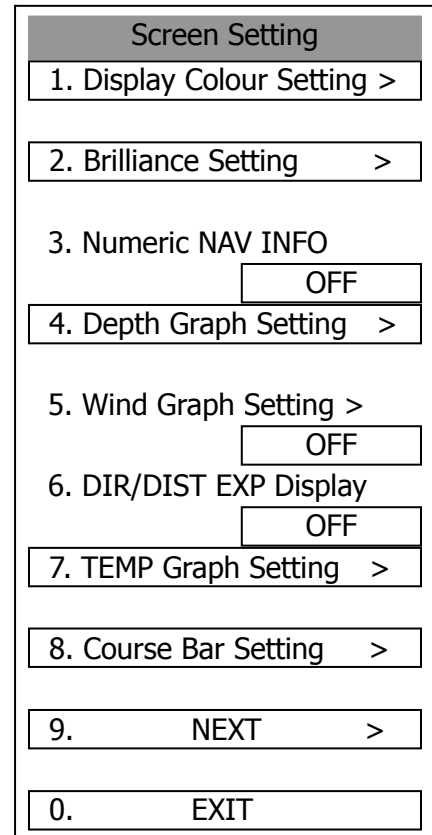

#### [3] Numeric NAV INFO

- Determine whether to display the numeric values of received navigation information.
- The values are displayed in one of two ATA's numeric data display areas.
- When the navigation information is displayed, the sizes of the ATA's numeric data display areas are exclusively decreased.
- Navigation information of the water depth, water temperature, tidal current, wind direction/velocity, and destination is displayed with numeric values.
- Numeric NAV INFO is set to ON/OFF each time the  button on the screen on page 2-7 is pressed.

- OFF**: Does not display the numeric values of navigation information.
- AREA1**: Displays the numeric values of navigation information in numeric data display area 1.
- AREA2**: Displays the numeric values of navigation information in numeric data display area 2.

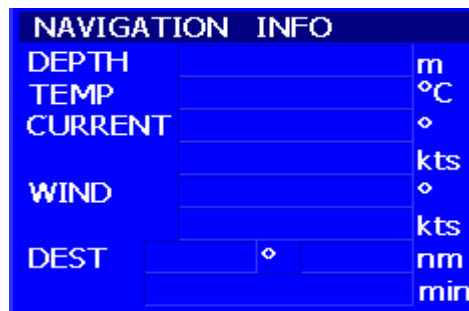


### [5] Wind/Current Graph

- Determine whether to display received wind direction/velocity information with a graph.
- The graph is displayed in one of two ATA's numeric data display areas.
- When the wind direction/velocity information is displayed, the sizes of the ATA's numeric data display areas are exclusively decreased.
- Wind/Current Graph is set to ON/OFF each time the **OPTION** button on the screen is pressed.

**OFF**: Does not display the wind direction/velocity graph.

**AREA1**: Displays the wind direction/velocity graph in numeric data display area 1.

**AREA2**: Displays the wind direction/velocity graph in numeric data display area 2.

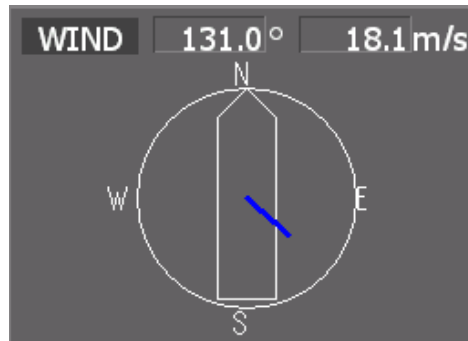

### [6] DIR/DIST EXP Display

- Determine whether to expand the value display of cursor, EBL, and VRM.
- The value display is expanded in ATA's numeric data display area 2.
- When the cursor mark moves on the PPI, the display of cursor information is expanded.
- When an EBL or VRM is operated, the value display of each marker is expanded.
- The expanded display remains for 5 seconds after the operation of each marker, and then it will disappear.
- While the menu is open, any display is not expanded.

**OFF**: Does not expand any display.

**ON**: Expands the display in numeric data display area 2.

**ALWAYS ON**: The data are always expanded.



## Displaying Water Depth Graph (Depth Graph Setting)

- Displays a water depth graph using received water depth information.

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [4] key.


Press [4] key.

The Depth Graph Setting Menu will appear.


Detail information about screen display can be set by changing the settings of the menu items.

Depth Graph Setting	
1. Depth Graph Display	<input type="text" value="OFF"/>
2. Depth Range	<input type="text" value="50 m"/>
3. Time Range	<input type="text" value="10 min"/>
4. Depth Unit	<input type="text" value="METERS"/>
<input type="text" value="0. EXIT"/>	

### [1] Depth Graph Display

- Determine whether to display received water depth information with a graph.
- The graph is displayed in one of two ATA's numeric data display areas.
- When the water depth graph is displayed, the sizes of the ATA's numeric data display areas are exclusively decreased.
- Depth Graph Display is set to ON/OFF each time the  button on the screen on page 2-7 is pressed.

<input type="text" value="OFF"/>	: Does not display a water depth graph.
<input type="text" value="AREA1"/>	: Displays the water depth graph in numeric data display area 1.
<input type="text" value="AREA2"/>	: Displays the water depth graph in numeric data display area 2.

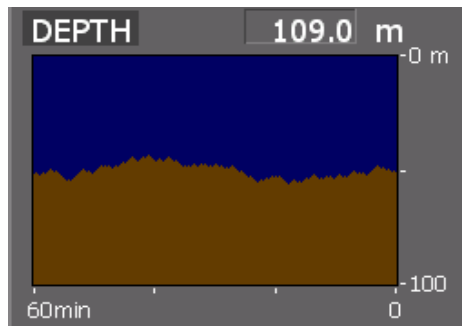




**[2] Depth Range**

- Select the depth range on the water depth graph.

50m	: Sets 50 m as the depth range.
100m	: Sets 100 m as the depth range.
250m	: Sets 250 m as the depth range.
AUTO	: Uses the depth range in the DPT sentence included in received data.

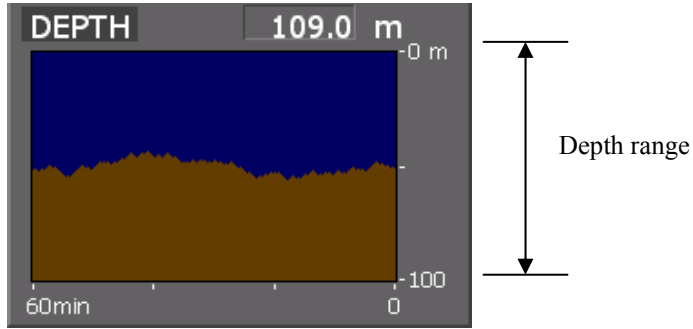


**3**

**[3] Time Table**

- Select the time range on the water depth graph.

10min	: Sets 10 minutes as the time range.
15min	: Sets 15 minutes as the time range.
30min	: Sets 30 minutes as the time range.
60min	: Sets 60 minutes as the time range.

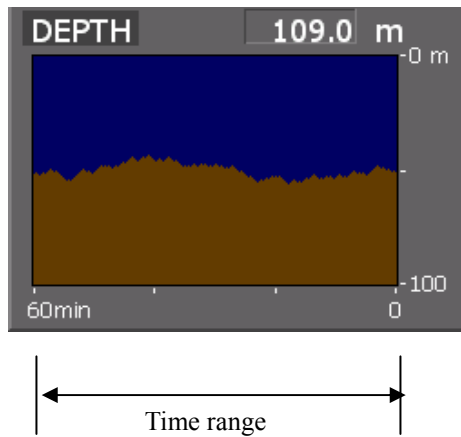

---

### 3.10.5 Set Scanner (TRX Setting)

This function enables the setting of detail information about a scanner

#### Procedures

1 Press [RADAR MENU] key twice.

Press [5] key.

The TRX Setting Menu will appear.

Detail information about antenna operation can be set by changing the settings of the menu items.

TRX Setting	
1. PRF Fine Tuning	<input type="text" value="0"/>
2. Jamming	<input type="text" value="OFF"/>
4. XMIT Repitation FREQ	<input type="text" value="NORMAL"/>
5. Band Select	<input type="text" value="X-BAND"/>
<input type="text" value="0. EXIT"/>	

#### [1] PRF Fine Tuning

- Fine-tune the transmitting repetition frequency of the transmitter in the range 90 to 100%.
- If radar's interference patterns are concentrically displayed, increment or decrement the set value by 3 to 4 in order to heighten the effect of interference rejection.
- The same operation can be performed by pressing the [TX/STBY] key several times.
- One of 32 levels 0-31 can be set.

#### [2] Jamming

- Use the jamming function to control the transmitting repetition frequency of the transmitter.
- This function is effective when interference patterns caused by radar equipment of the same model do not disappear.

: Disables the jamming function.  
: Enables the jamming function.

#### [4] XMIT Repitation FREQ

- Select the operation mode the transmitting repetition frequency of the transmitter.

<input type="text" value="NORMAL"/>	Standard mode:	Both appropriate sensitivity and magnetron's life expectancy are maintained.
<input type="text" value="ECONOMY"/>	Power saving mode:	Sensitivity slightly lowers, but the service life of magnetron is prolonged when short pulses are used.
<input type="text" value="HI POWER"/>	High sensitivity mode:	Sensitivity improves when long pulses are used, but the service life of magnetron is slightly shortened.



## [5] Band Select

- Select band of antenna. This item is effective only when the antenna in connection supports two frequencies.

X-Band:	Selects the X-band side from the two frequencies.
S-Band:	Selects the S-band side from the two frequencies.
X/S-band:	Supports the two frequencies.

**Note:** This function is not functioning now. The function is for future use.

---

## 3.10.6 Set Chart Display (Map Setting)

This function enables the setting of detail information about chart display.

### Setting JRC/ERC Chart Display (JRC/ERC Setting)

#### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [5] key.

Press [3] key.

The JRC/ERC Setting Menu will appear.

Detail information about the colors and brilliance of JRC/ERC chart display can be set by changing the settings of the menu items.

The data of colors and brilliance can be stored for each day/night mode.

JRC/ERC Setting	
1. Day/Night	<input type="text" value="DAY1"/>
2. Color of Land	<input type="text" value="YELLOW"/>
3. Bright of Land	<input type="text" value="HIGH"/>
4. Color of Sea	<input type="text" value="BLUE"/>
5. Bright of Sea	<input type="text" value="HIGH"/>
6. Color of Name	<input type="text" value="WHITE"/>
7. Bright of Name	<input type="text" value="HIGH"/>
8. Bright of Name	<input type="text" value="LEVEL4"/>
9. Next Page	<input type="text"/>
0. EXIT	<input type="text"/>

#### [1] Day/Night

- Select a desired display mode before setting the colors and brilliance of chart display.
- There are four selection items: , , , and .

#### [2] Color of Land

- Select the color of land display.
- There are four selection items: , , , and .

#### [3] Bright of Land

- Select the brilliance of land display.
- There are three selection items: , , and .

**[4] Color of Sea**

- Select the color of sea display.
- There are four selection items: , , , and .

**Note:** This function is available on the plotter mode only.

**[5] Bright of Sea**

- Select the brilliance of sea display.
- There are four selection items: , , , and .

**Note:** This function is available on the plotter mode only.

**[6] Color of Name**

- Select the color of a location name.
- There are eight selection items: , , , , , , , and .

**[7] Bright of Name**

- Select the brilliance of location name display.
- There are four selection items: , , , and .

**[8] Bright of Track/Mark/Line**

- Select the brilliance of track, mark and line..
- There are four selection items: , , , and .

**[9] Next Page**

- Moves to the next page.
- The next page of the JRC/ERC Setting Menu will appear.

**[1] LAT/LON Line**

- Select the mode to display latitude and longitude lines.
- There are two selection items:
  - : Displays both latitude/longitude lines and values indicating the latitude and longitude.
  - : Displays only the values indicating the latitude and longitude.

**[2] Color of L/L Line**

- Select the colors that are to represent latitude and longitude lines.
- There are eight selection items: , , , , ,

JRC/ERC Setting	
1. LAT/LON Line	<input type="text" value="LINE NUM"/>
2. Color of L/L Line	<input type="text" value="BLUE"/>
3. Bright of L/L Line	<input type="text" value="HIGH"/>
4. ERC Display Request	<input type="text" value="ON"/>
5. ERC Mark	<input type="text" value="SMALL"/>
6. JRC Card Display Setting	
7. Copy JRC Chart to CF	
8. Fishing Area Display	<input type="text" value="OFF"/>
0. EXIT	

-----

, , and .

### [3] Bright of L/L Line

- Select the brilliance of latitude/longitude line display.
- There are four selection items: , , , and .

### [4] ERC Display Request

- Display of the information within ERC can be switched between ON and OFF .
- There are two selection items: , and .

### [5] ERC Mark

- Select the size of mark display on the ERC chart.
- There are two selection items:  and .

### [6] JRC Card Display

- Sets the display contents of the JRC card.
- The JRC Card Display Setting Menu will appear.

### [1] Light House

- Determine whether to display lighthouses.
- There are two selection items:  and .

### [2] Buoy

- Determine whether to display buoys.
- There are two selection items:  and .

### [3] Rough Line

- Determine whether to display rough lines.
- There are two selection items:  and .

### [4] Other Line

- Determine whether to display other lines.
- There are two selection items:  and .

JRC Card Display Setting	
1. Light House	<input type="text" value="ON"/>
2. Buoy	<input type="text" value="ON"/>
3. Rough Line	<input type="text" value="ON"/>
4. Other Line	<input type="text" value="ON"/>
0. EXIT	

## Setting Contour Lines on Chart (Contour Setting)

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [5] key.

Press [4] key.

The Contour Setting Menu will appear.

Depths and display colors can be set for 9 contour lines in total: 8 for depth specification and 1 for other depths.

- 2 Select the number of depth to be changed, pressing the numeric key.

The depth input screen will appear. Enter the value as the depth to be set. Subsequently, the display line list will appear.

- 3 Select the number of display line to be set, pressing the numeric key.

Subsequently, the display color list will appear.

- 4 Select the number of display color to be set, pressing the numeric key.

The selected color to represent the contour lines of the depth will be set.

To change the settings of other depths, repeat steps 2 and 3.

Contour Setting		
1.	10m	GREEN
2.	20m	BLUE
3.	30m	BLUE
4.	40m	BLUE
5.	50m	BLUE
6.	60m	BLUE
7.	70m	BLUE
8.	80m	BLUE
9.	Other	BLUE
1-99: 100-999: 1000-9999:		
0. EXIT		

---

## Set C-MAP Display

### **Procedures**

- 1 Press [RADAR MENU] key twice.

Press [9] key.

The Plot Menu will appear.

- 2 Press [5] key.

The MAP Setting Menu will appear.

- 3 Press [2] key.

The C-MAP Setting Menu will appear.

C-Map Setting	
1. Grid Display	<input type="text" value="ON"/>
2. Sounding Display	<input type="text" value="ON"/>
3. Sounding Unit	<input type="text" value="FEET"/>
4. Light Sectors Display	<input type="text" value="ON"/>
5. Light Sectors Level	<input type="text" value="H"/>
6. Chart Boundary	<input type="text" value="ON"/>
7. Buoy&Beacon	<input type="text" value="INTERNATIONAL"/>
8. Names	<input type="text" value="ON"/>
9. NEXT	>
0. EXIT	

### **[1] Grid Display**

- Sets whether or not latitudinal longitudinal lines are displayed with C-MAP.
- Each time you press [1] key, the grid display item is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

### **[2] Sounding Display**

- Sets whether or not soundings values are displayed with C-MAP.
- Each time you press [2] key, the sounding display item is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed





### [3] Sounding Unit

- Sets the units when soundings values are displayed with C-MAP.
- Press [3] key to display a list of units.
- 1: FEET  
2: FATHOM  
3: METERS  
4: DECIMAL FATHOM

You can select one from the above four items. Select the item you want to set, pressing the numeric keys [1] to [4].

### [4] Light Sectors Display

- Sets whether or not the light sectors are displayed.
- Each time you press [4] key, the light sectors display item is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

### [5] Light Sectors Level

- Sets levels when light sectors are displayed with C-MAP.
- Press [5] key to display a list of levels.
- Selects one from level settings A to H.

### [6] Chart Boundaries

- Sets whether or not the Chart Boundaries are displayed.
- Each time you press [6] key, the function is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

### [7] Buoy and Beacon

- Sets display style of the buoy and beacon.
- Press [7] key to display a list of display style.
  - 1: OFF
  - 2: INTER NATIONAL : The style based on the official paper chart presentation.
  - 3:United States : The style based on the NOAA paper chart.
  - 4: SIMPLIFIED : Simplified style display.

### [8] Geographical Names

- Sets whether or not the geographical names are displayed.
- Each time you press [8] key, the geographical name is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

### [9] NEXT

- Going to Next page.
- Another C-MAP setting menu is displayed..

---

## [1] Land Marks

- Sets whether or not the Land Marks are displayed.
- Each time you press [8] key, the Land Marks is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

## [2] Rivers and Lakes

- Sets whether or not the Inland waters are displayed.
- Each time you press [8] key, the Rivers and Lakes is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

## [3] Cultural Features

- Sets whether or not the cultural features are displayed.
- Each time you press [8] key, the Cultural features is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

## [4] Sea bottom types

- Sets whether or not the types of the seabed are displayed.
- Each time you press [8] key, the Sea bottom type is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

## [5] Under water rocks etc.

- Sets whether or not the rocks, obstructions etc are displayed.
- Each time you press [8] key, the Under water is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

## [7] Depth Contours.

- Sets the Depth Contours settings.
- Press [8] key. the Depth Contour setting menu appears.

C-MAP Setting	
1. Land Marks	<input type="checkbox"/> ON
2. River and Lake	<input type="checkbox"/> ON
3. Cultural	<input type="checkbox"/> ON
4. Bottom Type	<input type="checkbox"/> ON
5. Under Water	<input type="checkbox"/> ON
6.	
7. Depth Contour	>
0. EXIT	



### [1] Depth Contours.

- Sets whether or not the Depth Contours are displayed.
- Each time you press [1] key, the Depth Contours is switched between ON and OFF.
- ON: Displayed  
OFF: Not displayed

### [2] Contour Upper limit.

- Sets upper limit of the contours.
- Press [2] key to display the input menu of upper limit.
- Using numerical keys, Sets upper limit.

### [3] Contour Lower limit.

- Sets Lower limit of the contours.
- Press [2] key to display the input menu of Lower limit.
- Using numerical keys, Sets lower limit.

**Note:** Unit for the above mentioned limits defines on the **Sounding Unit menu** (C-MAP setting).

Depth Counter	
1. Depth Counter	ON
2. Upper	9843
3. Lower	0000
0.	EXIT

## Correcting Chart Position (Map Display Setting)

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [9] key.

Press [5] key.

Press [5] key.

The Map Display Setting Menu will appear.

There are three methods for correcting the chart position.

### [1] Shift Coast Line 1

Set the correction value by operating the cursor.

- 1 Press [1] key while the Map Display Setting Menu is open.
- 2 Move the cursor to the chart on which a position is to be corrected, and press [ENT] key.
- 3 Move the cursor to the radar video of which position is to be corrected, and press [ENT] key.

(correcting) will be indicated for Shift Coast Line 1.

At this time,  will appear at the radar display button ② on page 2-7, indicating that the position is being corrected.

Map Display Setting	
1. Shift Coast Line 1	<input type="text" value="SETTING"/>
2. Shift Coast Line 2	<input type="text" value="NO.000'"/> <input type="text" value="E0.000'"/>
3. LAT/LON Correction	<input type="text" value="NO.000'"/> <input type="text" value="E0.000'"/>
4. MAP Center Position	<input type="text" value="N 35° 00.000'"/> <input type="text" value="E140° 00.000'"/>
5. LORAN C Correction	
6. LORAN A Correction	
7. DECCA Correction	
0. EXIT	

### Cancellation of Shift Coast Line 1

- 1 Press [1] key while the MAP Display Setting Menu is open.

(no correction) will be indicated for Shift Coast Line 1.

At this time,  will disappear from the lower right of the radar display.



## [2] Shift Coast Line 2

Set a correction value pressing the numeric values.

A correction value can be entered in the range -9.999' to +9.999'.

**1 Press [2] key while the Map Display Setting Menu is open.**

The chart position correction value input screen will appear.

**2 Enter the correction value for the latitudinal direction, pressing the numeric keys.**

To switch between the north and south, turn the [MULTI] control.

**3 Press [ENT] key.**


The correction value for the latitudinal direction will be determined.

**4 Enter the correction value for the longitudinal direction, pressing the numeric keys.**

To switch between the east and west, turn the [MULTI] control.

**5 Press [ENT] key.**

The correction value for the longitudinal direction will be determined.

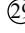At this time, MAP SHIFT will appear at the radar display button  on page 2-7, indicating that the position is being corrected.

### Cancellation of Shift Coast Line 2

**1 Press [2] key while the MAP Display Setting Menu is open.**

The chart position correction value input screen will appear.

**2 Press [0] key, and then [ENT] key.**

The correction value for the latitudinal direction will be set to 0.

**3 Press [0] key, and then [ENT] key.**

The correction value for the longitudinal direction will be set to 0.

At this time, MAP SHIFT will disappear from the lower right of the radar display.

---

### **[3] LAT/LON Correction**

This method corrects a chart position by changing the values of latitude and longitude that are sent by the navigation equipment.

Only our service engineers are to use this correction method because the contents of data such as trails data to be saved are changed when the method is used.

A correction value can be entered in the range -9.999' to +9.999'.

**1 Press [3] while the MAP Display Setting Menu is open.**

The latitude/longitude correction value input screen will appear.

**2 Enter the correction value for the latitudinal direction, pressing the numeric keys.**

To switch between the north and south, turn the [MULTI] control.

**3 Press [ENT] key.**

The correction value for the latitudinal direction will be determined.

**4 Enter the correction value for the longitudinal direction, pressing the numeric keys.**

To switch between the east and west, turn the [MULTI] control.

**5 Press [ENT] key.**

The correction value for the longitudinal direction will be determined.

#### **Cancellation of LAT/LON Correction**

**1 Press [3] key while the MAP Display Setting Menu is open.**

The latitude/longitude correction value input screen will appear.

**2 Press [0] key, and then [ENT] key.**

The correction value for the latitudinal direction will be set to 0.

**3 Press [0] key, and then [ENT] key.**

The correction value for the longitudinal direction will be set to 0.



## [4] MAP Center Position

This method corrects a chart position by entering the values of latitude and longitude at own ship's position in manual mode.

If latitude and longitude data sent by the navigation equipment has been entered, the data has priority over the manually entered values.

**1 Press [4] key while the MAP Display Setting Menu is open.**

The latitude/longitude correction value input screen will appear.

**2 Enter the value as latitudinal, pressing the numeric keys.**

To switch between the north latitude and south latitude, turn the [MULTI] control.

**3 Press [ENT] key.**

The entered value will be determined as latitude.

**4 Enter the value as longitude, pressing the numeric keys.**

To switch between the east longitude and west longitude, turn the [MULTI] control.

**5 Press [ENT] key.**

The entered value will be determined as longitude.

**Note:** The function is available in the plotter mode only.

---

### 3.10.7 Set LORAN C (LORAN C Correction)

**Note:** Plotter option is necessary to enable LORAN C time difference display.

#### Setting LORAN C

##### **Procedures**

1 Press [RADAR MENU] key twice.

Press [9] key.

Press [5] key.

Press [5] key.

Press [5] key.

The LORAN C Correction Menu will appear.

The chain and time difference for LORAN C time difference display can be set by changing the settings of the menu items.

LORAN C Correction	
1. Chain	<input type="text" value="9970"/>
2. TD1	<input type="text" value="13"/>
3. TD2	<input type="text" value="58"/>
4. TD1 Correction	<input type="text" value="0.1 uS"/>
5. TD2 Correction	<input type="text" value="0.2 uS"/>
<input type="text" value="0. EXIT"/>	

#### **[1] Chain**

- Set the chain.
- Enter the value in the range 0000 to 9999 by using the numeric keys.
- Only a value in the table can be entered.

#### **[2] TD1, [3] TD2**

- Enter the TD value for slave station 1/2.

#### **[4] TD1 Correction, [5] TD2 Correction**

- Enter the sound velocity time correction value for the TD value of slave station 1/2.



# 3.11 USE FUNCTION SWITCH [FUNC]

“Radar Function Setting” is provided for always obtaining the best radar video by storing complex radar signal processing settings in the optimum status by use, and calling the setting in accordance with the conditions for using the function.

Functions are factory-set for general use, and the settings can be fine adjusted by operating the menu.

Four function modes are available, and they are factory-set as follows:

Function 1:	COAST	Useful for observing short-range videos
Function 2:	DEEP SEA	Suitable for general ocean navigation
Function 3:	FISH NET	Useful for small target.
Function 4:	STORM	Useful for observing videos in stormy weather

3

## 3.11.1 Operation Procedure

### Calling a Function


#### Procedures

#### 1 Press the [FUNC] key.

Each time the [FUNC] key is pressed, the selection changes cyclically as follows:

Function Off → Function 1 → Function 2 → Function 3 → Function 4 → Function Off

The currently called function mode will be indicated at the lower left of the radar display.

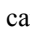\* Switching can be done each time button  on the radar display on page 2-7 is pressed.

### Changing Function Setting (temporary change)

- When radar signal processing setting is changed by using the menu or button on the radar display while function 1 to 4 is called, the change is temporarily reflected to the operating state.
- Since this method does not change the memory contents, the new setting is deleted as soon as another function is called.
- When the previous function is called again, operation is performed according to the memory contents.

### Changing Function Setting (memory contents change)

- To change the memory contents of functions 1 to 4, use the function setting menu.
- To display the function setting menu, press [RADAR MENU] twice, [1] key, and then [8] key.
- Press the numeric key corresponding to the target function number.
- The function setting menu consists of five pages. To switch between the pages, select [0] key Previous Page or [9] key Next Page.

## 3.11.2 Function Setting Menu Items

The function setting menu has the items below.

### Page 1

1. Mode	Name of the mode to be used	
2. IR	Radar interference rejection	OFF/LOW/MEDIUM/HIGH
3. Process	Video process	OFF/.....
4. Target Enhance	Target expansion	OFF/ LEVEL1/LEVEL2/LEVEL3
5. Auto STC/FTC	Automatic clutter suppression	OFF/AUTO SEA/AUTO RAIN
7. Save Present State	Saving of the present state	

### Page 2

1. PL 0.75nm	Standard pulse length of 0.75 nm range	SP/MP
2. PL 1.5nm	Standard pulse length of 1.5 nm range	SP/MP/LP
3. PL 3/4nm	Standard pulse length of 3 nm range	SP/MP/LP
4. PL 6/8nm	Standard pulse length of 6 nm range	SP/MP/LP
5. PL 12nm	Standard pulse length of 12 nm range	SP/MP/LP
6. PL 16nm	Standard pulse length of 16 nm range	SP/MP/LP

### Page 3

1. Video Latitude	Dynamic range of radar video	NORMAL/WIDE/NARROW /SUPER WIDE
2. Video Noise Rejection	Radar video noise rejection	OFF/LEVEL1/LEVEL2
3. Auto DR Control	Automatic dynamic range control	OFF/ON
4. Process Switch	Radar video process switching	OFF/RANGE FIX/AUTO
5. 2nd Process Mode	Second video process mode	OFF/.....
6. Process Switch Range	Video process switching range	Range setting
7. Fast Target Detection	Fast moving target detection	OFF/ON

### Page 4

1. Trails Interval	Radar trails length	OFF/.....
2. Trails Mode	Radar trails mode	TRUE/RELATIVE
3. Trails REF Level	Radar trails plotting threshold	LEVEL1-4
4. Trails Reduction	Thinning of radar trails	OFF/LEVEL1-3
5. Time/Cont Combine	Superimpose-display of time radar trails and continuous radar trails	OFF/ON
6. Trails Process	Radar trails video process	OFF/ON
7. Max Interval	Maximum time for radar trails display	SHORT/MEDIUM/LONG/SUPER LONG

### Page 5

1. Gain Offset	Sensitivity correction	Correction value setting
2. XMIT Repetition FREQ	Transmitting repetition frequency	NORMAL/ECONOMY/HIPOWER
3. Small Buoy Detection	Small target detection mode	OFF/ON
4. Fishnet Detection	Fishnet detection mode	OFF/ON
5. Antenna Height	Antenna height	DEFAULT/-5m/5-10m/10-20m/20m

### 3.11.3 Overview of Function Operations

The following outlines the operation of each function selected from the function setting menu:

#### **[Page 1] [1] MODE (Mode)**

- Selects the function name to be indicated at the lower left of the radar display when the function is selected.
- When the setting is changed back to the factory setting, the initial value of the selected mode is called.
- The following 11 modes are provided:
  - COAST: Use this mode to monitor a relatively short range, for example, bays and coasts where many boats and ships are running. (Importance is attached to resolution.)
  - DEEPSEA: Use this mode to monitor a relatively long range, for example, the open sea. (Importance is attached to long-range sensitivity.)
  - FISHNET: Use this mode to detect small targets such as fishnets of round haul netters hidden by sea clutter returns. (Importance is attached to sea clutter suppression, and sensitivity to moving targets lowers.)
  - STORM: Use this mode when many rain/snow clutter returns or sea clutter returns are detected in stormy weather. (Importance is attached to rain/snow clutter and sea clutter suppression, and sensitivity slightly lowers.)
  - CALM: Use this mode when only a few rain/snow clutter returns or sea clutter returns are detected.
  - RAIN: Use this mode when sea clutter is not strong but rain/snow clutter is strong. (Importance is attached to rain/snow clutter suppression, and sensitivity slightly lowers.)
  - BIRD: Use this mode to detect tens of seabirds at low altitude during coastal navigation or hundreds of seabirds at high altitude during ocean navigation.
  - LONG: Use this mode to detect small targets at relatively long distance in the open sea.
  - BUOY: Use this mode to detect small targets like radio buoys in areas outside the sea clutter area. (This mode displays targets of which detection probability is low.)
  - USER1: General mode used when the nine modes above are not applicable
  - USER2: General mode used when the nine modes above are not applicable

#### **[Page 1] [2] IR (radar interference rejection)**

- Same function as IR in the Main Menu

#### **[Page 1] [3] Process (video process)**

- Same function as PROCESS in the Main Menu

#### **[Page 1] [4] Target Enhance**

- Same function as TARGET ENHANCE in the Main Menu

---

## **[Page 1] [5] Auto SEA/RAIN (Auto STC/FTC)**

- Detects unwanted waves such as rain/snow clutter and sea clutter and automatically suppresses them.
- When the sea state or weather changes, this function automatically performs suppression processing in accordance with the situation.
- Suppression processing is not full automatic, and requires the operator to control the afterimages of unwanted waves.
- To control the afterimage of sea clutter, use the **[SEA]** control.
- To control the afterimage of rain/snow clutter, use the **[RAIN]** control.
- In areas where the density of unwanted waves is low, unwanted waves may remain being judged as targets. Thus, use the automatic clutter suppression mode together with the video process mode.
- Characteristics of the automatic clutter suppression function:
  - OFF: Disables the automatic clutter suppression function.  
Select OFF when rain/snow clutter and sea clutter are not strong or when the ship is in a bay.
  - AUTO SEA: Automatically detects the strength of sea clutter, and performs the most suitable sea clutter suppression processing.  
Even when the strength of sea clutter varies depending on the wind direction, AUTO SEA performs the most suitable suppression processing.  
Land like islands can be displayed naturally.  
Since rain clouds outside sea clutter areas are recognized as land, there is no effect of suppressing rain/snow clutter.
  - AUTO RAIN: Along with AUTO SEA, AUTO RAIN automatically detects the strength of rain/snow clutter, and performs the most suitable rain/snow clutter suppression processing.  
When rain clouds are scattered about, AUTO RAIN performs rain/snow clutter suppression processing for only the rain-cloud areas.  
Since land is recognized as rain clouds, land videos become obscure.

## **[Page 2] [1]-[7] PL (Pulse Width)**

- Sets the standard transmitter pulse length in each range.
- When the range is called, the pulse range is used.

## **[Page 3] [1]-[7] Radar signal processing settings (Process Setting)**

- Same functions as those in the Process Setting Menu generally used

## **[Page 4] [1]-[7] Radar trails settings (Trails Setting)**

- Same functions as in the Trails Setting of the RADAR Menu generally used

**[Page 5] [1] Gain Offset**

- Corrects sensitivity while the function mode is called.
- Since the displayed noise level varies depending on the combination of the video process mode and the interference rejection level, sensitivity needs fine adjustment for always obtaining the highest level.
- The sensitivity correction function saves the correction value set by the sensitivity control in each function mode, so it can obtain the highest sensitivity without the sensitivity control being operated when the function mode is changed.
- To set high sensitivity, set a value on the “+” side.
- To set low sensitivity, set a value on the “-” side.
- When the radar interference rejection level is increased, the noise level is lowered. Thus, set a sensitivity correction value to the “+” side.
- When the video process mode 3SCAN CORR, 4SCAN CORR, or 5SCAN CORR is used, the noise level is lowered. Thus, set a sensitivity correction value to the “+” side.
- When the video process mode REMAIN or PEAK HOLD is used, noise is hard to disappear. Thus, set a sensitivity correction value to the “-” side.

**[Page 5] [2] XMIT Repetition FREQ.**

- Same function as in the TRX Setting of the RADAR Menu generally used

**[Page 5] [3] Small Buoy Detection**

- Reduces the loss of signal processing during detection of small targets.
  - OFF: Activates the general signal processing mode.
  - ON: Activates the small buoy detection mode that reduces the loss of signal processing.


**[Page 5] [4] Fishnet Detection**

- Use this mode to detect small targets hidden by sea clutter returns.
- This function becomes more effective when the AUTO RAIN clutter suppression function is used together.
  - OFF: Activates the general signal processing mode.
  - ON: Activates the fishnet detection mode.

### 3.11.4 Overview of Stored Function Setting Data

The overview of stored function setting data is as follows:

- Factory-set data: Stored data that general operation cannot change
- Default data: Standard data of each function mode that users can change
- Data that can be called: Stored data that can be called by pressing the [FUNC] key

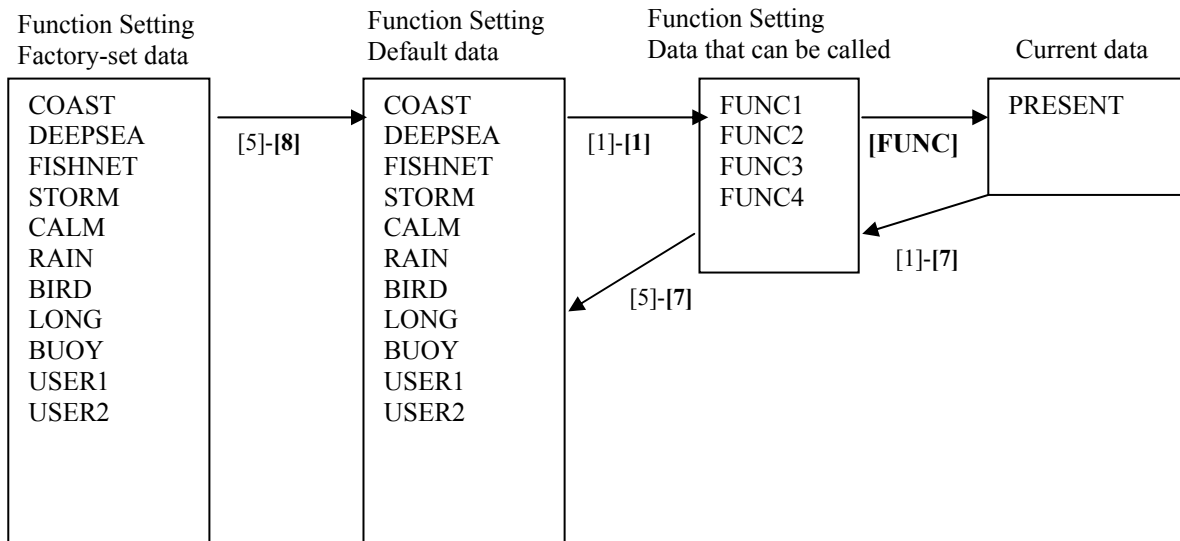

#### [Page 1] [1] Call Mode

- Calls the standard setting of the mode, and stores it for the function number.

#### [Page 1] [6] Save Present State

- The currently operating state can be stored for the function number.
- Use this function to store the state of good setting that will be frequently used.

#### [Page 5] [7] Save Default of Mode

- Stores the setting of the current function number, as the default setting of the mode.

#### [Page 5] [8] Initialization

- Changes the memory contents of the mode, which is used with the current function number, back to the factory setting.

### 3.11.5 Personal Information (PIN Setting)

The operation status of the radar is recorded. If the system is operated by more than one operator, the operators can register operation status as suitable for them and call the status. Operation status for up to five operations can be registered, and a name can be assigned to each status. (Up to 10 alphanumeric characters)

\* Data stored as personal information

- Day/Night mode setting
- Brilliance
- Alarm volume
- Vector length/mode
- Various types of image processing (IR, ENH, PROC, FUNC)

# 3

#### [1] Calling Operation Status (Load PIN Data)

##### Procedures

- 1 Press [RADAR MENU] key twice.

Press [8] key.

The Radar Sub Menu will appear.

- 2 Press [1] key.

The PIN Setting Menu will appear.

- 3 Press [1] key.

The Load PIN Data Menu will appear.

- 4 Select the item you want to load, pressing the numeric keys [1] to [5].

The Load Execution Check Menu will appear.  
Select "Yes" for loading.

##### Exit

- 1 Press [RADAR MENU] key.

The Target Information Display Menu will reappear.

Load PIN Data	
1.	<input type="text"/>
2.	<input type="text"/>
3.	<input type="text"/>
4.	<input type="text"/>
5.	<input type="text"/>
0. EXIT	

**III Saving Operation Status (Save PIN Data)**

**Procedures**

- 1 Press [RADAR MENU] key twice.

Press [8] key.

The Radar Sub Menu will appear.

- 2 Press [1] key.

The PIN Setting Menu will appear.

- 3 Press [2] key.

The Save PIN Data Menu will appear.

- 4 Select the number corresponding to the place where you want to save status, pressing the numeric keys [1] to [5].

The Code Input Menu will appear.

- 5 Using numeric key, enter the name and then press [ENT] key.

Data will be saved with the entered name.

Save PIN Data

1.

2.

3.

4.

5.

0. EXIT

**Exit**

- 1 Press [RADAR MENU] key.

The Target Information Display Menu will reappear.

Save PIN Data

0	1	2	3	4	5	6	7	8	9	
A	B	C	D	E	F	G	H	I	J	
K	L	M	N	O	P	Q	R	S	T	
U	V	W	X	Y	Z	SP	<	>		
DEL							BS		ENT	

EXIT





### **[III] Erasing Registered Operation Status (Delete PIN Data)**

#### **Procedures**

- 1 Press [RADAR MENU] key twice.

Press [8] key.

The Radar Sub Menu will appear.

- 2 Press [1] key.

The PIN Setting Menu will appear.

- 3 Press [3] key.

The Delete PIN Data Menu will appear.

- 4 Select the file you want to erase, pressing the numeric keys [1] to [5].

The Delete Execution Check Menu will appear.  
Select "Yes" for deletion.

#### **Exit**

- 1 Press [RADAR MENU] key.

The Target Information Display Menu will reappear.

Delete PIN Data	
1.	<input type="text"/>
2.	<input type="text"/>
3.	<input type="text"/>
4.	<input type="text"/>
5.	<input type="text"/>
<input type="text" value="0. EXIT"/>	

---

## 3.12 USING CARD

This radar has two card slots. Inserting a flash memory card (option) into a card slot, you can save the following contents, saved in the processor, in the card or can read data from the card to the processor.

- Trails of own ship: 7000 points maximum
- Track of other ship: 20 target×1500 points (ATA option)
- Mark Line: 20000 points maximum (plotter option)
- Waypoint: 99 points maximum (plotter option)
- Route: 10 routes maximum (plotter option)

These pieces of information can be saved in a flash memory card as a file. The internal capacity is as large as only a file. An internally created file can be saved until the flash memory card is full.

### Caution



**Compact Flash Cards can be used with this system. The following shows the recommendations in use. However they do not guarantee that CF cards may properly work with this system. Depending on the hardware or software, the cards will not work correctly. Any damage including loss of data caused by using the data created on this system is out of warranty. Important files should be backed up therefore.**

© Recommendations on using CF cards.

★ Recommended card size.

64 MB, 128 MB, 256 MB, 512 MB, 1GB.

★ Recommended file system.

The Compact card should be formatted to FAT32 in Windows XP (SP2).

Many CF cards are formatted to FAT16 before shipping. Be sure to Format the CF card to FAT32, before use.

★ Recommended OS.

Windows XP (SP2).

★ Operating temperature range

Depending on the CF card specification and the radar specification, -15 to +55 degree Celsius.

**Ⓢ Caution in use.**

Never eject the CF card while files are being written to the card.  
Turn the power off before inserting or ejecting a CF card.

### 3.12.1 Save in and Transfer to Card (MEM CAPA/Copy)

**Procedures**

- 1 Press [RADAR MENU] key twice.

The Radar Menu will appear.

- 2 Press [9] key.

The Plot Menu will appear.

\* Button Ⓢ on the radar display on page 2-7 is also available to save and transfer data.

- 3 Press [6] key.

The MEM CAPA/Copy window will appear.

Plot Menu
1. Own Track Setting
5. Map Setting
6. MEM CAPA/Copy
7. CLR MEM INIT Card
0. EXIT

MEM CAPA/Copy																
1. Copy Internal -> Card 2	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td style="text-align: center;">TRACK</td></tr> </table> <table border="1" style="display: inline-table; border-collapse: collapse; margin-left: 20px;"> <tr><td style="text-align: center;">0000</td></tr> </table>	TRACK	0000													
TRACK																
0000																
2. Copy Card 2 -> Internal	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td style="text-align: center;">OVER WRITE</td></tr> </table> <table border="1" style="display: inline-table; border-collapse: collapse; margin-left: 20px;"> <tr><td style="text-align: center;">0000</td></tr> </table>	OVER WRITE	0000													
OVER WRITE																
0000																
3. Copy Card 1 -> Card 2	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td style="text-align: center;">0000</td></tr> </table> <span style="margin: 0 10px;">-&gt;</span> <table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td style="text-align: center;">0000</td></tr> </table>	0000	0000													
0000																
0000																
4. Clear File	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td style="text-align: center;">0000</td></tr> </table>	0000														
0000																
7. Show Card 1	<table border="1" style="border-collapse: collapse; text-align: center; width: 100%;"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>-</td><td>0</td><td>+</td></tr> <tr><td>CLR</td><td colspan="2">ENT</td></tr> </table>	1	2	3	4	5	6	7	8	9	-	0	+	CLR	ENT	
1		2	3													
4		5	6													
7		8	9													
-		0	+													
CLR	ENT															
8. Show Card 2																
0. EXIT																
Memory Content	Card 2															
<table border="1" style="border-collapse: collapse;"> <tr><td>TOTAL</td></tr> <tr><td>TRACK</td></tr> <tr><td>  Remain</td></tr> <tr><td>MARK/LINE</td></tr> <tr><td>  Remain</td></tr> <tr><td>WPT</td></tr> <tr><td>  Remain</td></tr> <tr><td>ROUTE</td></tr> <tr><td>  Remain</td></tr> <tr><td>CARD Remain</td></tr> </table>	TOTAL	TRACK	Remain	MARK/LINE	Remain	WPT	Remain	ROUTE	Remain	CARD Remain	<div style="display: flex; align-items: center; justify-content: center;"> <div style="margin-right: 10px;"> </div> <div style="border: 1px solid black; flex-grow: 1; min-height: 100px;"></div> </div> <div style="display: flex; align-items: center; justify-content: center; margin-top: 10px;"> <div style="margin-right: 10px;"> </div> </div>					
TOTAL																
TRACK																
Remain																
MARK/LINE																
Remain																
WPT																
Remain																
ROUTE																
Remain																
CARD Remain																

- Information saved in the processor is displayed in the Memory Content.
  - Total: Total number of data points
  - Track: Number of data points for own ship's track (7000 points maximum)
  - Remain: Number of remaining data points of own ship's track that can be saved
  - Mark/Line: Number of mark and line points made with user map (20000 points maximum only when a plotter option is installed)
  - Remain: Number of remaining data points of marks and lines that can be saved
  - WPT: Number of data points of created waypoints (99 points maximum)
  - Remain: Remaining waypoints that can be saved
  - Route: Number of data points of created routes (10 routes maximum)
  - Remain: Remaining routes that can be saved
  
- File names and information saved in the card is displayed in Card 2.
  
- Arrows next to Card 2 are used to scroll the contents of Card 2.  
Range +/- keys can be used to scroll also.
  
- Numeric key is used to give a file name.

**[I] Copy Internal Information to Card 2 (Copy Internal → Card 2)**

**Procedures**

- 1 Press [1] key while the CAPA/Copy Menu is open.

The items to be saved are displayed.

MEM CAPA/Copy																		
1. Copy Internal -> Card 2	TRACK		0000															
2. Copy Card 2 -> Internal	1. ALL		0000															
3. Copy Card 1 -> Card 2	2. TRACK		0000															
4. Clear File	3. MARK/LINE																	
	4. WPT/ROUTE																	
	5. ATA TRACK																	
7. Show Card 1																		
8. Show Card 2																		
			<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><td style="padding: 2px 10px;">1</td><td style="padding: 2px 10px;">2</td><td style="padding: 2px 10px;">3</td></tr> <tr><td style="padding: 2px 10px;">4</td><td style="padding: 2px 10px;">5</td><td style="padding: 2px 10px;">6</td></tr> <tr><td style="padding: 2px 10px;">7</td><td style="padding: 2px 10px;">8</td><td style="padding: 2px 10px;">9</td></tr> <tr><td style="padding: 2px 10px;">-</td><td style="padding: 2px 10px;">0</td><td style="padding: 2px 10px;">+</td></tr> <tr><td style="padding: 2px 10px;">CLR</td><td colspan="2" style="padding: 2px 10px;">ENT</td></tr> </table>	1	2	3	4	5	6	7	8	9	-	0	+	CLR	ENT	
1	2	3																
4	5	6																
7	8	9																
-	0	+																
CLR	ENT																	
0. EXIT																		
Memory Content		Card 2																
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="padding: 2px;">TOTAL</td></tr> <tr><td style="padding: 2px;">TRACK</td></tr> <tr><td style="padding: 2px;">Remain</td></tr> <tr><td style="padding: 2px;">MARK/LINE</td></tr> <tr><td style="padding: 2px;">Remain</td></tr> <tr><td style="padding: 2px;">WPT</td></tr> <tr><td style="padding: 2px;">Remain</td></tr> <tr><td style="padding: 2px;">ROUTE</td></tr> <tr><td style="padding: 2px;">Remain</td></tr> <tr><td style="padding: 2px;">CARD Remain</td></tr> </table>	TOTAL	TRACK	Remain	MARK/LINE	Remain	WPT	Remain	ROUTE	Remain	CARD Remain	  	<table border="1" style="width: 100%; height: 100%; border-collapse: collapse;"> <tr><td style="width: 100%; height: 100%;"></td></tr> </table>						
TOTAL																		
TRACK																		
Remain																		
MARK/LINE																		
Remain																		
WPT																		
Remain																		
ROUTE																		
Remain																		
CARD Remain																		

3

- 2 Using the numeric key, select a item to be saved.

A file name to copy Internal information to Card 2 can be entered.

- 3 Using the numeric key, enter a file name.

After enter a file name, select ENT. CLR will be cancelled.

The system writes internal information into Card 2 with an entered number used as a file name.

The capacity of information that can be saved in the internal portion is limited to the maximum number of points in items described on the previous page. For the capacity of information that can be saved in a card, the system can save information in a card until the card capacity is filled with a file, counting the information saved in the internal portion as a file.

**III] Read Information from Card 2 to Internal Portion(Copy Card 2 → Internal)**

**Procedures**

- 1 Press [2] key while the CAPA/Copy Menu is open.
- 2 Using the numeric key, select ADD mode or OVER WRITE mode.

MEM CAPA/Copy																	
1. Copy Internal -> Card 2	TRACK	0000															
2. Copy Card 2 -> Internal	OVER WRITE	0000															
3. Copy Card 1 -> C	1. OVER WRITE	0000															
4. Clear File	2. ADD	0000															
7. Show Card 1	<table border="1" style="margin: auto;"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>-</td><td>0</td><td>+</td></tr> <tr><td>CLR</td><td colspan="2">ENT</td></tr> </table>		1	2	3	4	5	6	7	8	9	-	0	+	CLR	ENT	
1			2	3													
4			5	6													
7			8	9													
-			0	+													
CLR	ENT																
8. Show Card 2																	
0. EXIT																	
Memory Content	↑	Card 2															
TOTAL TRACK Remain MARK/LINE Remain WPT Remain ROUTE Remain CARD Remain	↓																

A file name to copy information from Internal portion to Card 2 can be entered.  
 Read the file name displayed in the Card 2 window.

- 3 Using the numeric key, enter a file name.

After having enter the name, select ENT.CLR will be cancelled.  
 The entered file name is read from Card 2 to the internal portion.

When information is to be transferred from Card 2 to the internal portion in the ADD mode, the information can be copied from multiple files. However, information cannot be read when the number of points for an item has reached the maximum. In the ADD mode, the WPT and Route are overwritten.



### **[III] Copy Information from Card 1 to Card 2 (Copy Card 1 → Card 2)**

#### **Procedures**

- 1 Press [3] key while the CAPA/Copy Menu is open.**

A file name to copy information from Card 1 to Card 2 can be entered.

- 2 Using the numeric key, enter a file name.**

Using the numeric key, enter a file name to be copied.

After having enter the name, select ENT. CLR will be cancelled.

- 3 Using the numeric key, enter a file name to copy.**

After having enter the name, select ENT.CLR will be cancelled.

The entered file number is copied from Card 1 to Card 2.

---

## **[IV] Delete File from Card 2 (Clear File)**

### **Procedures**

- 1 **Press [4] key while the CAPA/Copy Menu is open.**

A file name to clear file can be entered.

- 2 **Using the numeric key, enter a file name.**

After having enter the name, select ENT.CLR will be cancelled.  
The entered file number is deleted from Card 2.

## **[VI, VII] View Information in Card (Show Card)**

### **Procedures**

- 1 **Press [7] or [8] key while the CAPA/Copy Menu is open.**

7: Card slot 1

8: Card slot 2

Select a card to be displayed.

### **Exit**

- 1 **Press [0] key.**

The MEM CAPA/Copy window will be closed.





### 3.12.2 Erase/Initialize Card Memory (CLR MEM/INIT Card)

Erase saved information from inside the processor.

#### **[1] Erase Mark/Line (CLR Mark/Line Data)**

Erase saved mark/line from inside the processor.

#### **Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [9] key.**

The Plot Menu will appear.

- 3 Press [7] key.**

The CLR MEM/INT Menu will appear.

- 4 Press [1] key.**

A window will appear to select whether or not marks/lines should be erased.

1. Erased
- 2: Cancel

CLR MEM/ INIT Card
1. CLR Mark/Line Data
2. CLR WPT/Route Data
3. Format Card 2
0. EXIT

---

### **[II] Erase Waypoint/Route (CLR WPT/Route Data)**

Erase saved WPT/Route from inside the processor.

#### **Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [9] key.**

The Plot Menu will appear.

- 3 Press [7] key.**

The CLR MEM INIT Card Menu will appear.

- 4 Press [2] key.**

The Waypoint/Route Erase Execution window will appear.

1. Erase
- 2: Cancel

### **[III] Initialize Card 2 (Format Card 2)**

Initialize Card 2.

#### **Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [9] key.**

The Plot Menu will appear.

- 3 Press [7] key.**


The CLR MEM INIT Card Menu will appear.

- 4 Press [3] key.**

The window to select whether or not Card 2 is initialized will appear.

1. Initialize
- 2: Cancel

# SECTION 4 MEASUREMENT OF RANGE AND BEARING

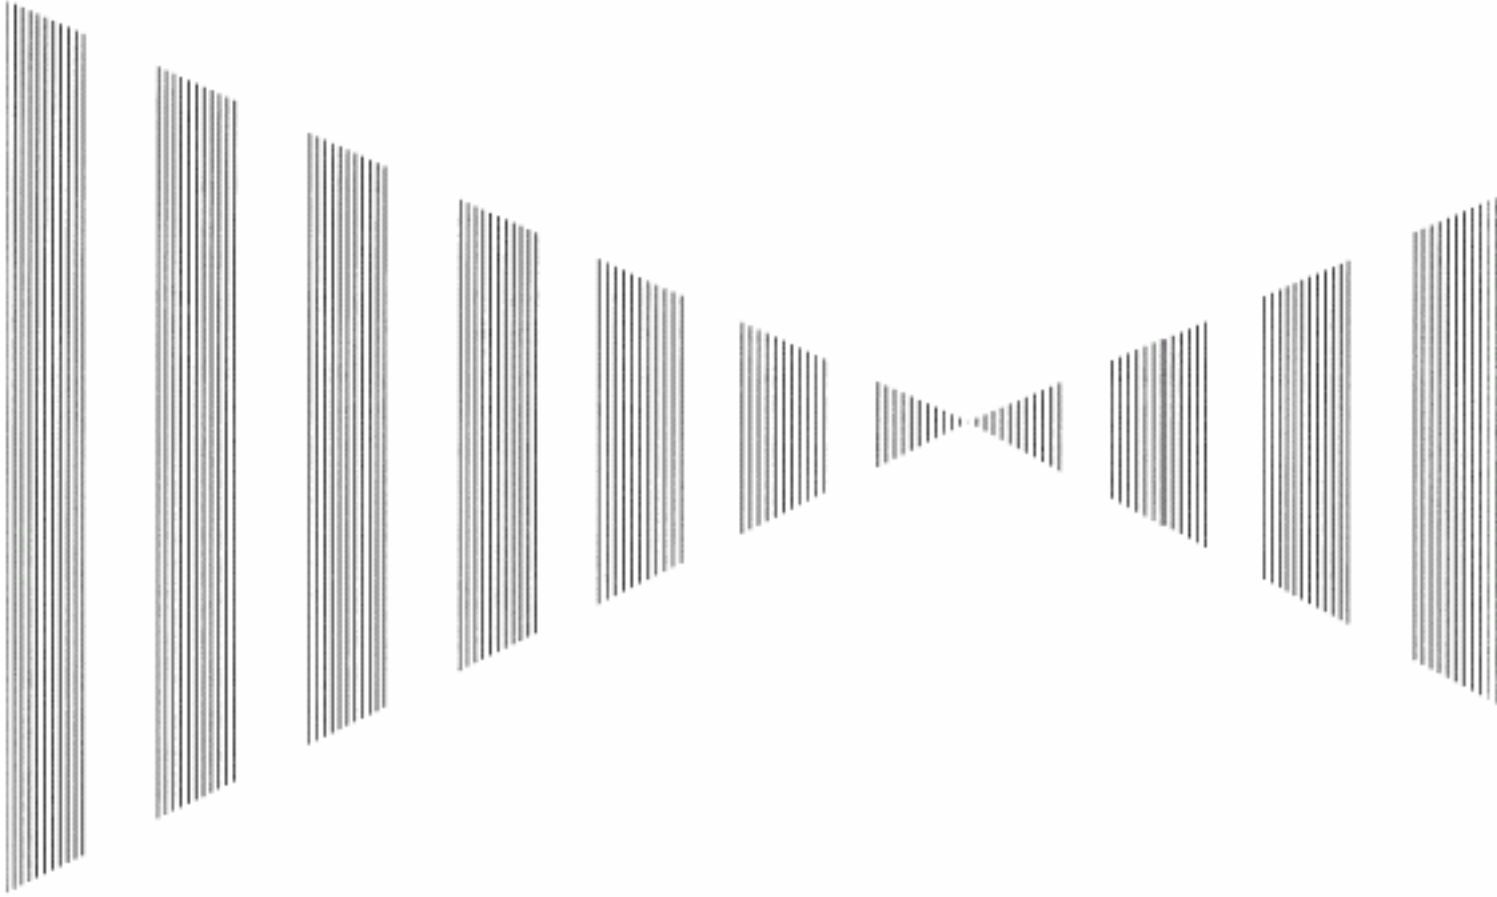

<b>4.1</b>	<b>Measurement by Trackball .....</b>	<b>4-1</b>
<b>4.2</b>	<b>Measurement by Range Rings .....</b>	<b>4-2</b>
<b>4.3</b>	<b>Measurement by EBLs and VRMs .....</b>	<b>4-3</b>
<b>4.4</b>	<b>Measurement between Two Optional Points.</b>	<b>4-5</b>

---

# 4.1 MEASUREMENT BY TRACKBALL

## Procedures

- 1 Check the target echoes on the radar display.
- 2 Move the cursor mark to a target by the trackball.

The **CURSOR** on the radar display indicates the bearing and range of the target.  
The range is a distance from own ship's position.

CURSOR ( )

TRUE 45.0°: True bearing of the cursor relative to own ship

5.0nm: Range between the cursor and own ship

REL 45.0°: Relative bearing of the cursor relative to own ship

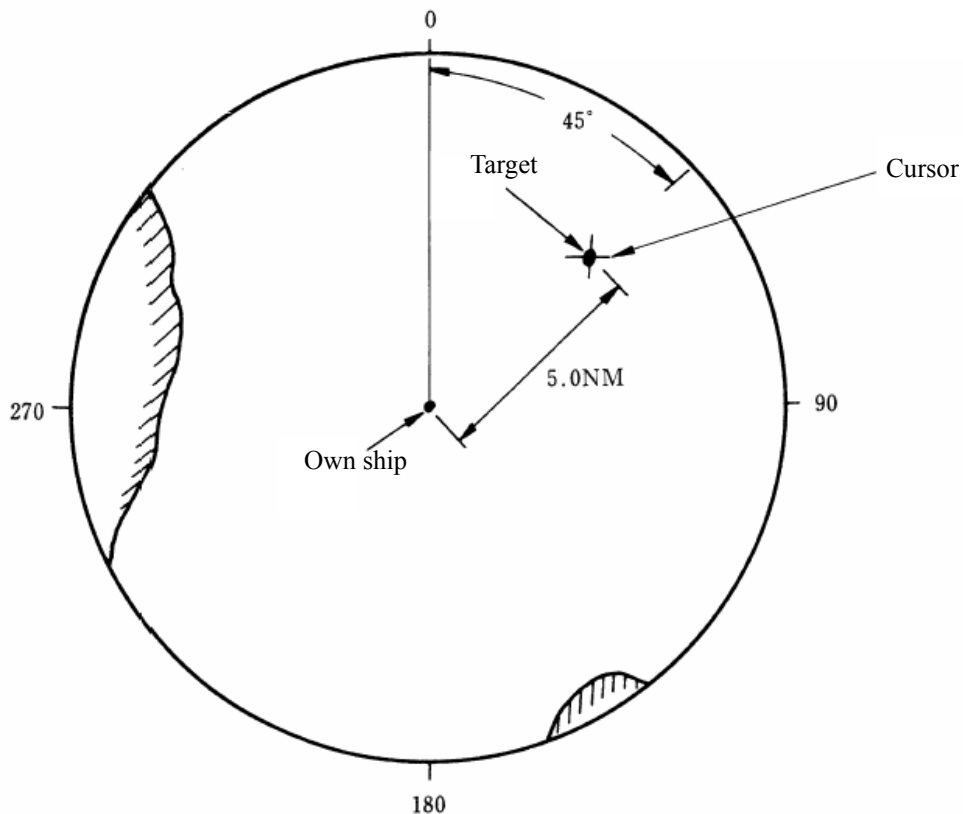


Figure 4.1



## **4.2** MEASUREMENT BY RANGE RINGS

### **Procedures**

#### **1 Press [RR/HL] key.**

The Range Rings will appear on the radar display.

The range between the target and own ships can be determined by visually measuring the target's position that lies between two range rings.

(The range ring interval is fixed and indicated within the radar display ② on page 2-9.)

# 4.3

## MEASUREMENT BY EBL1 AND VRM1

### Procedures

- 1 Press [EBL1] key to select EBL1 display and operation.

The EBL1 indication at the lower right of the radar display will be selected and the EBL1 will appear as a broken-line on the PPI display.

- 2 Turn the [EBL] control to put EBL1 on a target.

The bearing of the EBL1 will appear at the lower right of the radar display. The EBL1 bearing represents the target's bearing.


- 3 Press [VRM1] key to select VRM1 display and operation.

The VRM1 indication at the lower right of the radar display will be selected and the VRM1 will appear as a broken-line circle on the PPI display.


- 4 Move the broken-line VRM1 to the target by using the [VRM] control.

The range of the VRM1 from own ship will appear at the lower right of the radar display. The range of VRM1 signifies a distance between the target and own ship.

Refer to **Figure 4.2** in the next page.  
In this **Figure 4.2**, the range and bearing are;  
Range: 5.0nm  
Bearing: 45.0°

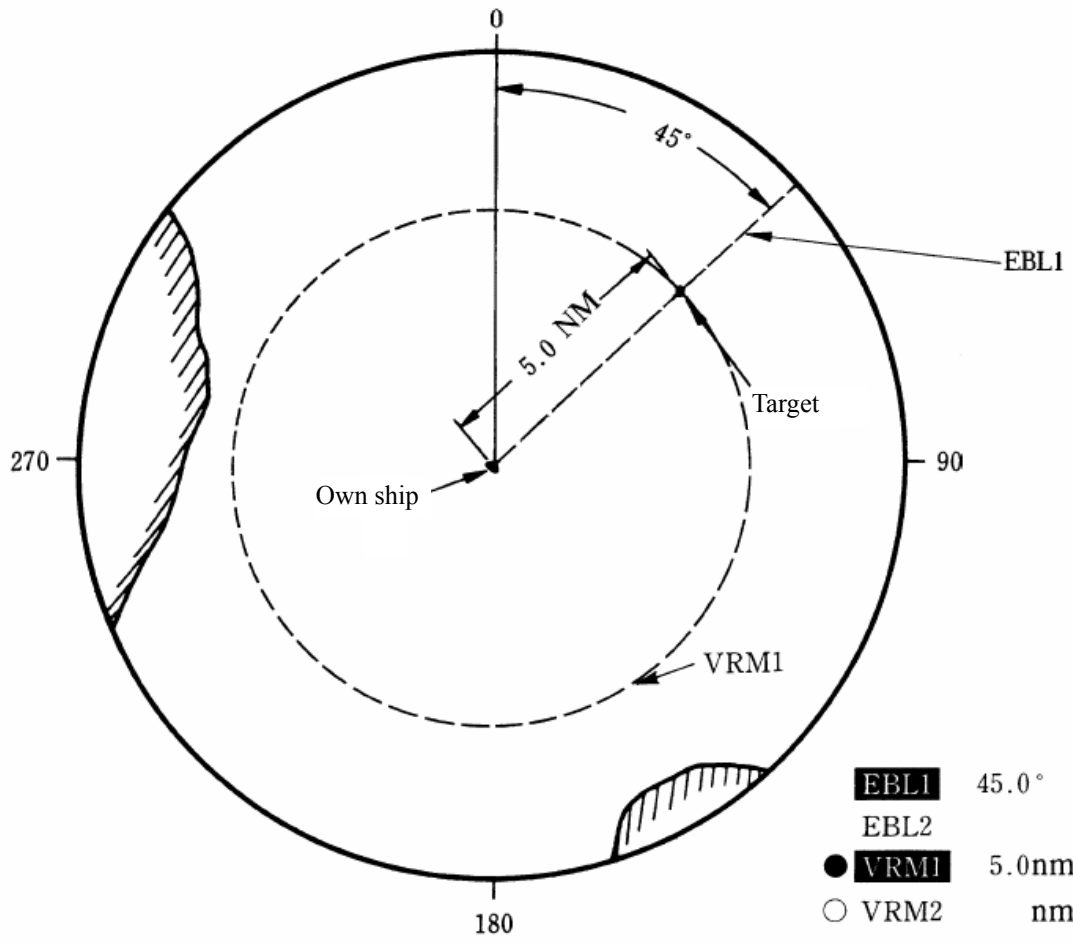

4

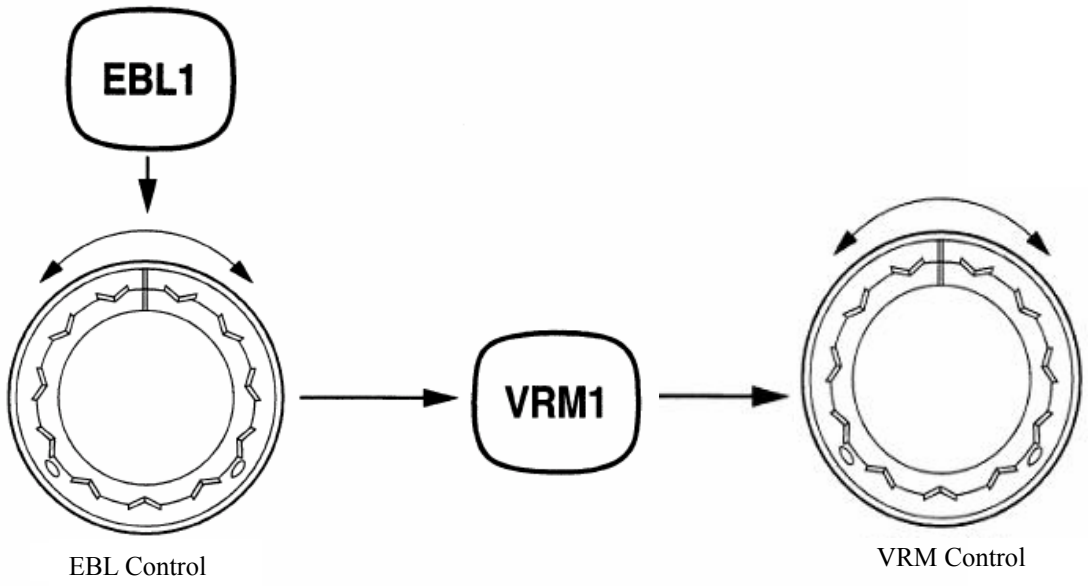

# 4.4

## MEASUREMENT BETWEEN TWO OPTIONAL POINTS


### Procedures

- 1 Press [EBL2] key to select EBL2 display and operation.

The  EBL2 indication at the lower right of the radar display will be selected and the EBL2 will appear as a dotted-line on the PPI display.

- 2 Point the cursor to the  C switch of EBL2 at the lower right of the radar display, and press [ENT] key. The EBL cursor mode changes each time  O or  L is pressed.

EBL1	T	123.4	°	C
EBL2	T	004.3	°	C



- 3 Using the trackball, move the starting point of EBL2 to one (A) of the two points and press [ENT] key.

(See Figure 4.3.)

- 4 Turn the [EBL] control to move EBL2 to the other point (B).

(See Figure 4.3.)


- 5 Press [VRM2] key to select VRM2 display and operation.

○ (VRM marker) will appear on a dotted-line of the EBL2.

- 6 Using the [VRM] control, move the VRM2 marker on a dotted-line of EBL2 to the point B.

The bearing and range between the two points will appear in the VRM2 and EBL2 area on the lower right of the radar display.



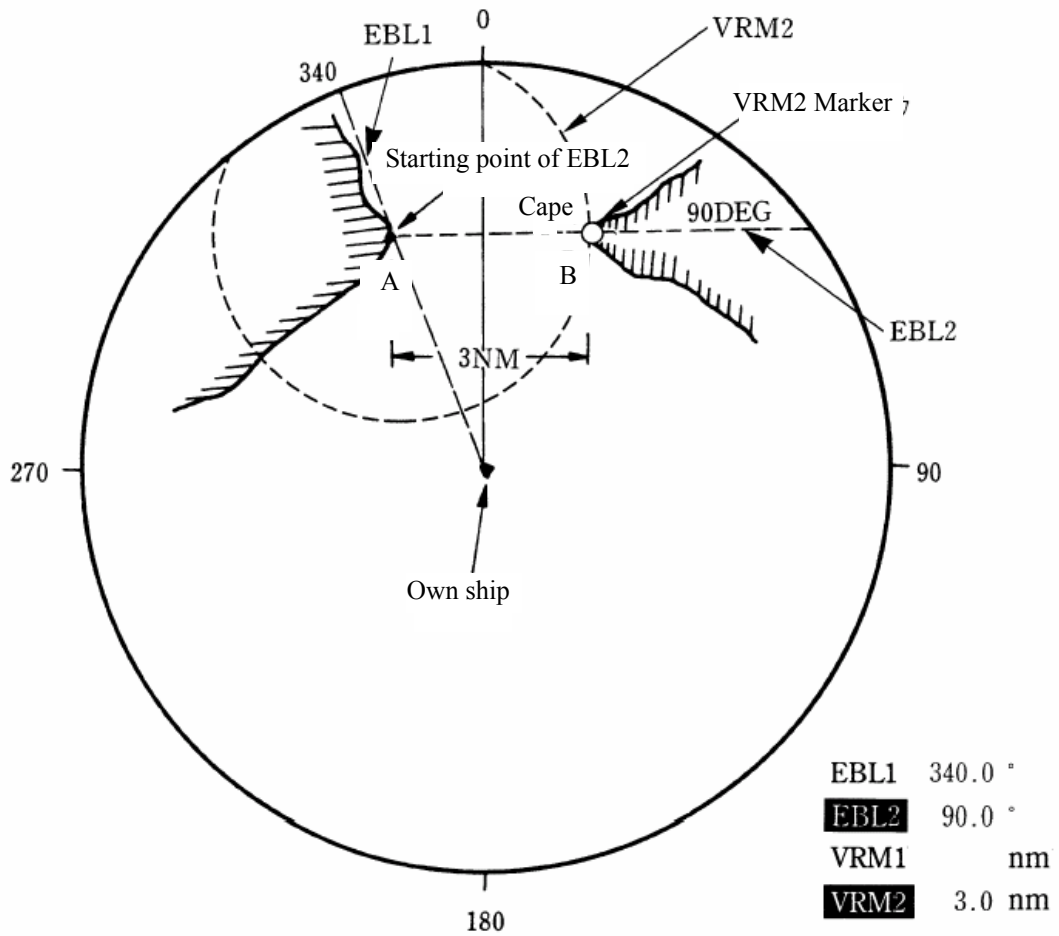

4


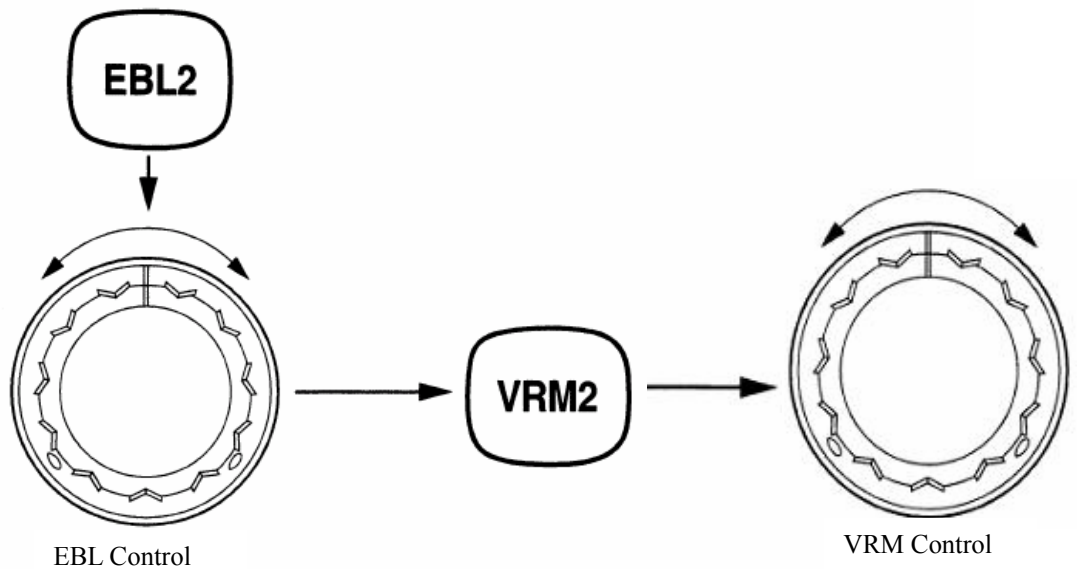


Figure 4.3

It is also possible to use EBL1 instead of EBL2 in measuring the bearing and range between two optional points.  
 In this case, read EBL2 as EBL1 and VRM2 as VRM1 in the procedure above, point the cursor to **C** of EBL2 in step 2, and then press [ENT] key.

-----

# SECTION 5 OPERATION OF ATA AND AIS

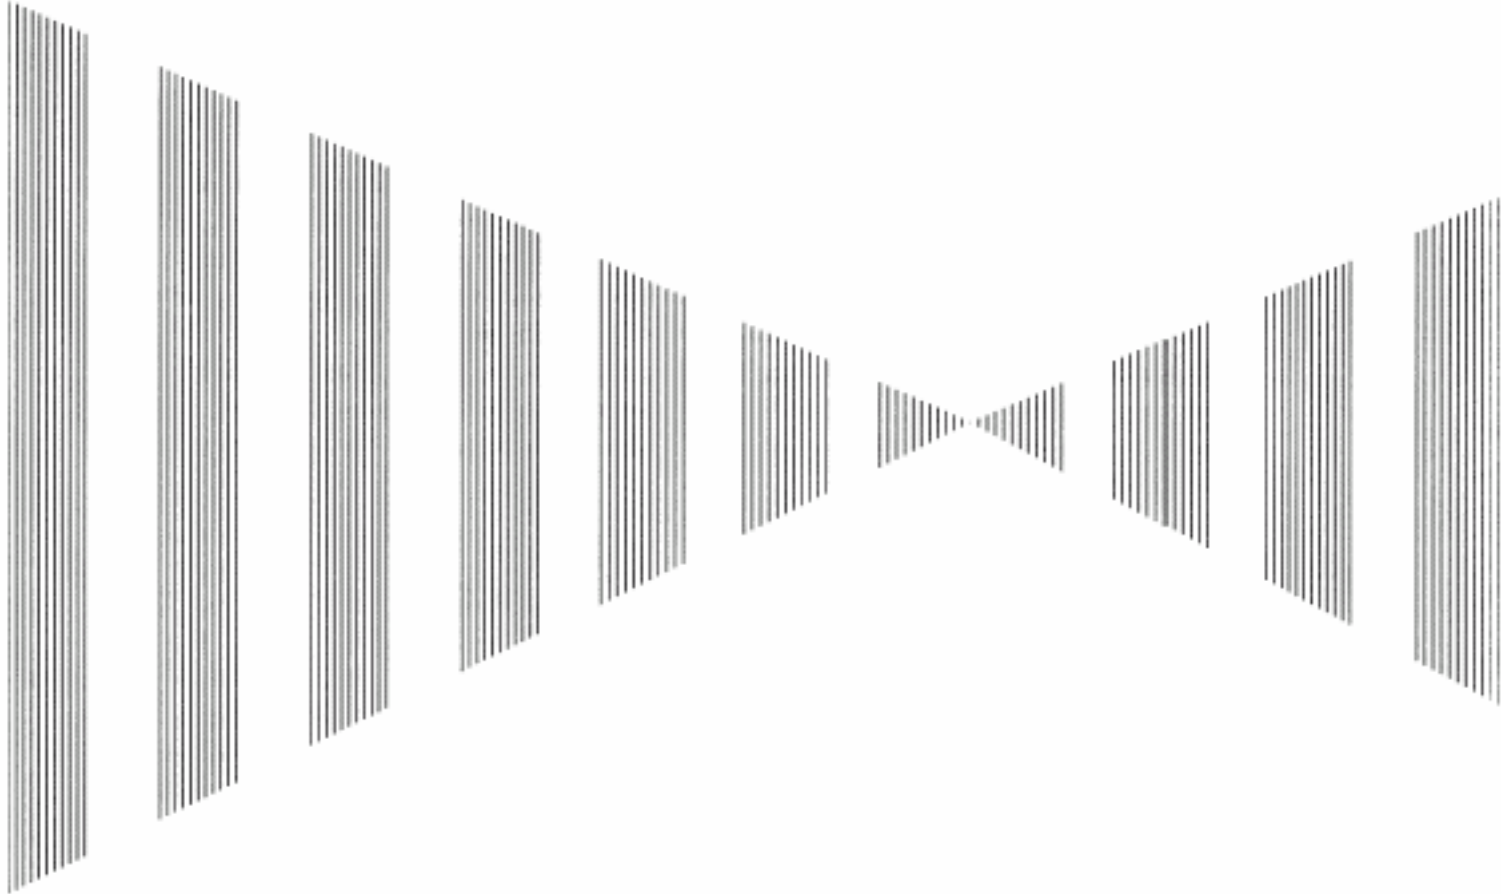

5.1	PREPARATION .....	5-2	5.3.3	Activating AIS Targets.....	5-46
5.1.1	Collision Avoidance.....	5-3	5.3.4	Deactivating AIS Targets.....	5-47
5.1.2	Definitions of Symbols.....	5-6	5.3.5	Setting AIS Symbol Display Function (AIS Symbol Display) .....	5-48
5.1.3	Setting Collision Decision Criteria (CPA/TCPA Limit) .....	5-8	5.3.6	Displaying Numeric Data of AIS Targets .....	5-49
5.1.4	Setting Vectors (Vector Time) .....	5-9	5.3.7	Setting ATA Symbol Display Function (ATA Symbol Display) .....	5-51
5.1.5	Setting CPA Ring (CPA Ring).....	5-10	5.3.8	Setting AIS Filter (AIS Filter Setting) .....	5-52
5.1.6	Setting Automatic Acquisition Key Assignment (Set GZ Alarm Key) .....	5-11	5.3.9	Deciding AIS Target as the Same One (Identical Distance) .....	5-55
5.2	ATA OPERATION .....	5-12	5.3.10	Conditions for Deciding AIS Target to be Lost... 5-57	
5.2.1	Acquiring Target .....	5-12	5.3.11	Displaying AIS Symbols.....	5-58
5.2.2	Canceling Unwanted Targets.....	5-14	5.3.12	AIS Alarm Display.....	5-59
5.2.3	Displaying Target ID No. (Target Number Display) .....	5-15	5.3.13	Restrictions.....	5-60
5.2.4	ATA Data Display.....	5-16			
5.2.5	Target Data Display.....	5-21			
5.2.6	Alarm Display.....	5-25			
5.2.7	ATA Simulation.....	5-29			
5.2.8	Setting ATA Tracks (ATA Track Setting) .....	5-35			
5.3	AIS OPERATION.....	5-42			
5.3.1	Initial Setting .....	5-43			
5.3.2	Setting AIS Display Function (AIS Function) .....	5-45			

---

# Usage of ATA

## Attention

There are the following limitations on use of the target acquisition and tracking functions of ATA.

**[I] Resolution between adjacent targets and swapping during automatic tracking**

Depending on the particular distance and echo size, resolution between adjacent targets during automatic tracking usually ranges somewhere between 0.03 to 0.05 nm. If multiple targets approach each other, resolution will become about 0.03 nm and this may cause the system to regard them as one target and thus to swap them or lose part of them. Such swapping or loss of targets may also occur if the picture of the target being tracked is affected by rain/snow clutter returns or sea clutter returns or moves very close to land.

**[II] Intensity of echoes and the tracking function**

The intensity of echoes and the tracking function have a relationship, and thus the target will be lost if no echoes are detected during six scans in succession. If a lost target exists, therefore, radar gain must be increased to support detection of the target. If, however, radar gain is increased too significantly, sea clutter returns or other noise may be erroneously detected and tracked as a target, and resultingly, a false alarm may be issued.

**[III] Adverse effects of error sources on automatic tracking**

To execute accurate tracking, it becomes necessary first to appropriately adjust the [GAIN], [SEA] and [RAIN] controls of the radar so that the target to be acquired and tracked is clearly displayed on the radar display. Inappropriate settings of these controls reduce the reliability/accuracy of automatic tracking.



# 5.1 PREPARATION

This section explains the features of ATA and AIS functions, and the initial setting for using each function.

The two plotting functions below are available with this radar equipment.  
An optional device is necessary for using each of the ATA, and AIS functions.

## **ATA (Automatic Tracking Aid) function**

The ATA function calculates the course and speed of a target by automatically tracking the target's move.  
The ATA function enables automatic acquisition of targets by using the guard zone function.  
The ATA function is available when the ATA option is installed.

## **AIS (Automatic Identification System) function**

The AIS function shows the target's information on the radar display, using other ships' information sent out from the AIS unit.  
The AIS function is available when the optional AIS interface is installed.

## 5.1.1 Collision Avoidance

### Problems of Collision Avoidance in Navigation

Marine collision avoidance is one of the problems that have been recognized from of old. Now, it will be described briefly who the collision avoidance is positioned among the navigational aid problems.

The navigation pattern of all mobile craft constitutes a system with some closed loops regardless of the media through which the mobile craft travels, whether air, water, the boundary between air and water, or space. This pattern consists of two closed loops in principle, one of which is a collision with another mobile craft and the other is a loop of finding a right and safe way to reach a predetermine destination. Fig. 5-1 shows the conceptual diagram of navigation pattern by MR. E.W. Anderson. The closed loop of collision avoidance is shown on the left side and the closed loop of finding a right course on the right side.

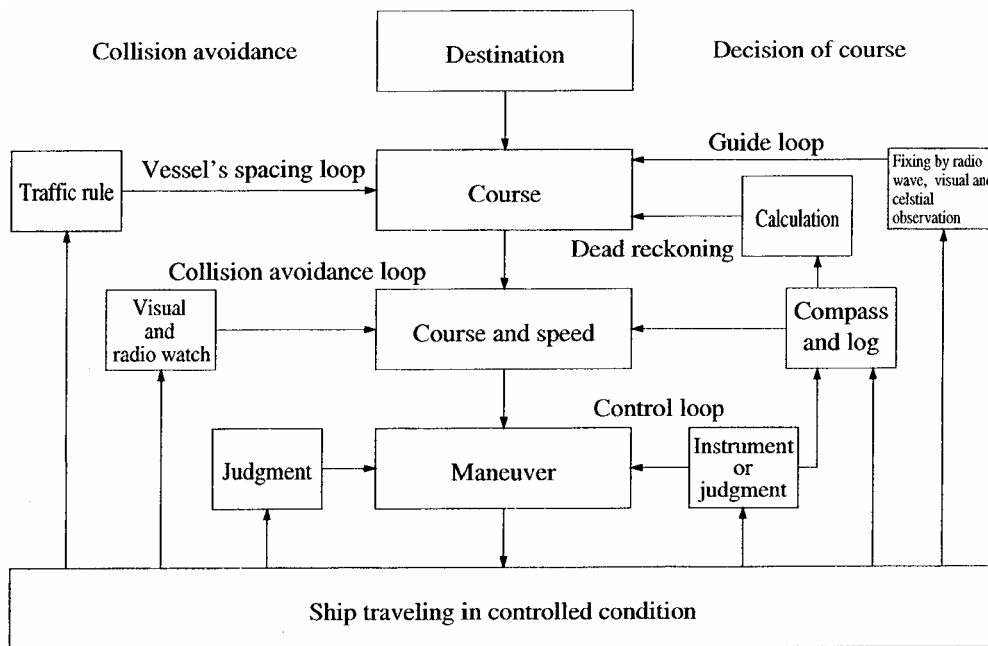


Fig. 5-1 Navigation Pattern

### Marine Accidents and Collisions

Among marine accidents, collision accidents have been highlighted as the tonnages and speeds of ships become higher along with the increase in traffic at sea. If a tanker carrying dangerous articles such as crude oil collides with any other vessel, then not only the vessels involved with the accident but other vessels in the vicinity, port facilities, inhabitants in the coastal area as well as marine resources may also suffer immeasurable damages and troubles. Collision accidents have a high percentage of the marine accidents that have occurred in recent years. To cope with these problems, any effective measures are needed and some equipment to achieve collision avoidance requirements have been developed at rapid strides.



## Basic Concept of Collision Avoidance

There are two aspects in collision avoidance: collision prediction and avoidance. Collision prediction is to predict that two or more vessels will happen to occupy the same point at the same time, while collision avoidance is to maneuver vessels not to occupy the same point at the same time.

In practical operation of vessels, a spot of collision has to be deemed to be a single point but a closed zone. This closed zone is conceptually defined as a CPA (Closest Point of Approach). In collision prediction, the time to be taken until a ship reaches the CPA is defined as a TCPA (Time to CPA).

Fig. 5-2 shows a diagram caked “Collision Triangle”.

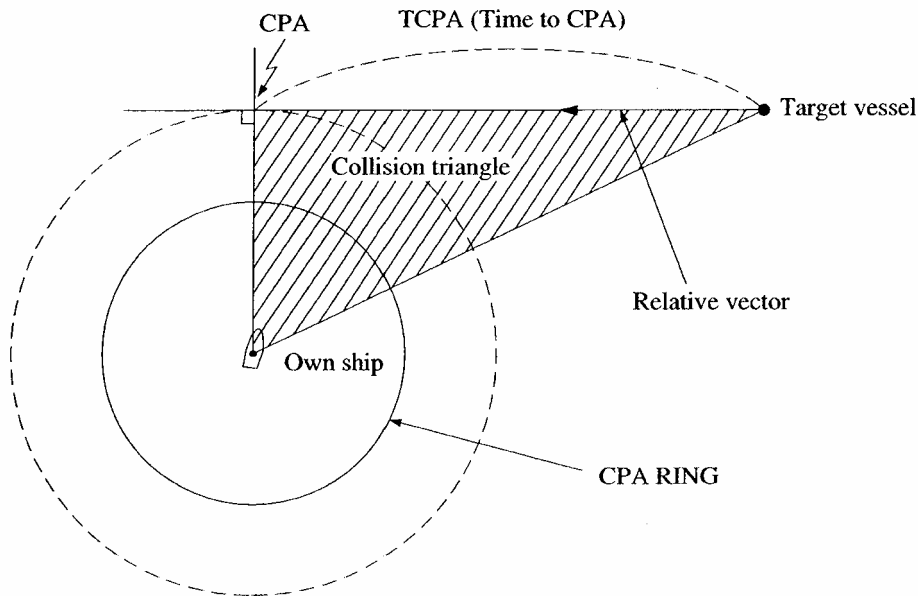


Fig. 5-2 Collision Triangle

## Relative Vector and True Vector

From two points of view, collision prediction and avoidance, it is necessary to obtain the relative vector of other ship for prediction and the true vector of other ship for collision avoidance in order to grasp other ship's aspect. The relationship between the relative vector and true vector is shown in Fig. 5-3

Both rough CPA and TCPA can be obtained easily from the relative speed vector of other ship. This method has an advantage that the risks of collision with all other ships within the radar range can be seen at a glance. On the other hand, the course and speed of other ship can easily be obtained from its true speed vector, enabling other ship's aspect to be seen at a glance. Thus, the aspects of other ships (transverse, outsail, parallel run, reverse run, etc.) as described in the Act of Prevention of Collision at Sea can be readily grasped. If there is a risk of collision with other ship, the operator can determine which rule to be applied and how to operate own ship.

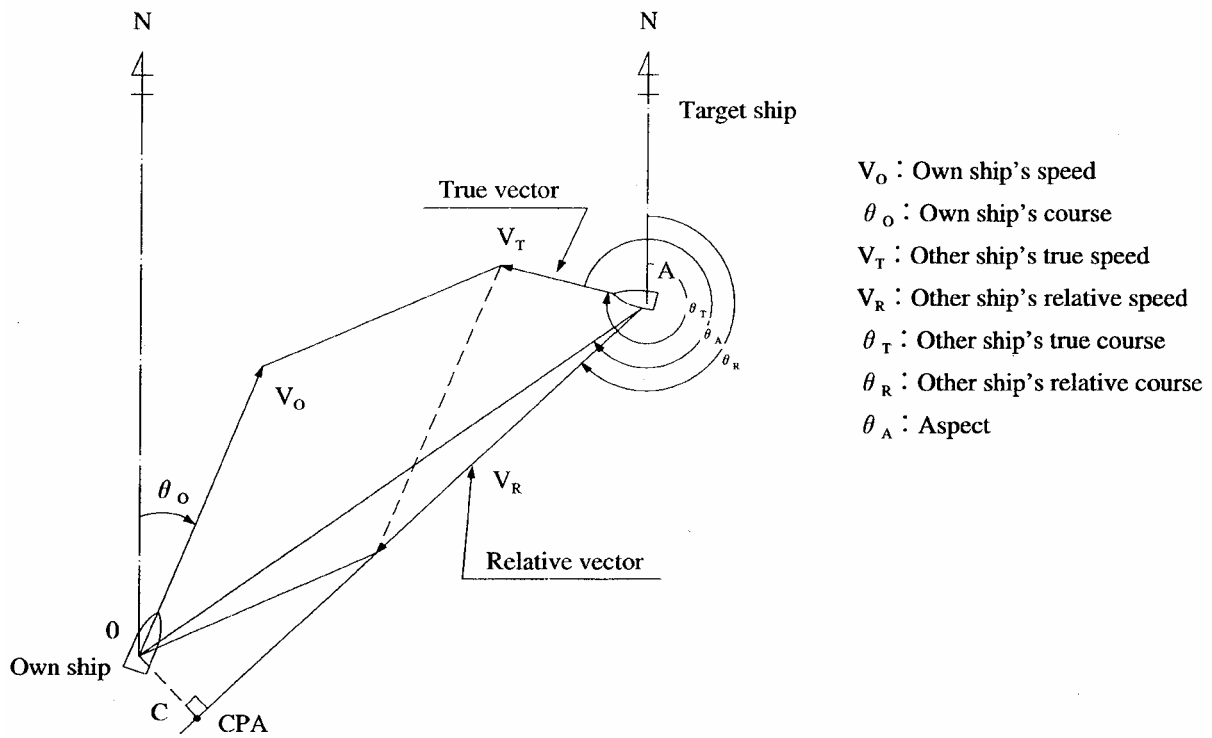


Fig. 5-3 Relative Vector and True vector

### Radar and Collision Avoidance








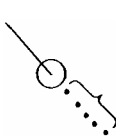
Radar is still playing an important roll for collision prevention and positioning. A plotter is used to further enhance the radar functionality. The plotter is capable of plotting other positions of other ships in 3 to 6 minute intervals to monitor their movement. The plots of other ships represent their tracks relative to own ship, and it is shown whether there is a risk of collision, namely CPA and TCPA can be obtained. This method using a plotter is fairly effective, but the number of target ship, which are manually plotted, is limited and it takes several minutes to measure those.








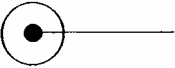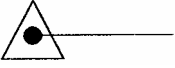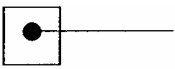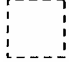

## 5.1.2 Definitions of Symbols

### Types and Definitions of EPA and ATA Symbols

Vector/Symbol	Definition	Remarks
	Safe target	
	Dangerous target	Alarm characters (CPA/TCPA) appear and an alarm sounds. The characters blinks with red lamp.
	Target for which numeric data is displayed	When numeric data is displayed, the target symbol is changed into □.
	Initial acquisition mark	This symbol is displayed until the vector is displayed after target acquisition.
	Target that has intruded into the guard zone	Alarm characters (GZ) appear and an alarm sounds. The characters blinks.
	Lost target (a target that can not be tracked for any reason)	Alarm characters (LOST) appear and an alarm sounds. The symbol blinks. No vector is displayed.
	Trackball cross cursor mark	This mark is used to designate a target when acquiring manually and canceling it and indicating its numerical data.
	A target's past positions	The symbol and vector is displayed only when [PAST POSN] is ON. The position interval can be set to OFF/0.5min/1min/2min/4min 0.1nm/0.2nm/0.5nm/1nm

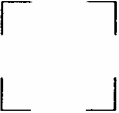**Types and Definitions of AIS Symbols**

Vector/Symbol	Definition	Remarks
	Sleeping target	This symbol is displayed when received data is valid. The direction of the triangle's vertex indicates the target's bow or COG.
	Activated target	The heading direction is displayed with a solid line, and the COG vector is displayed with a dotted line. The line perpendicular to the heading direction indicates the direction to which the course is to be changed. This line may not be displayed.
	Numeric-displayed target	This symbols is displayed around the target for which numeric data is displayed.
	Dangerous target	Alarm characters (CPA/TCPA) An alarm sounds. The characters are displayed in red and the symbol is blinks.
	Lost target	The dangerous target is regarded as a lost target when data cannot be received for specified time. When it is determined as a lost target, this symbol is displayed at the position calculated from the last-received data such as the course and speed.



### 5.1.3 Setting Collision Decision Criteria (CPA/TCPA Limit)

For details on each operation, see 3.4 BASIC OPERATION and 4 MEASUREMENT OF RANGE AND BEARING.

#### Attention

**Set the optimum values of collision decision conditions, depending upon vessel type, water area, weather and oceanographic conditions.  
(For the relations between those conditions and alarms, refer to section 5.2.6 Alarm Display. )**

Set and check collision decision criteria before operating the ATA system.

# 5

#### Procedures

- 1 Press [ATA MENU] key.**
- 2 Press [1].**  
The ATA Setting menu will appear.
- 3 Press [3].**  
The ten-key screen will appear.
- 4 Select the value to be set pressing the numeric key, and press [ENT].**  
The selected CPA Limit value will be determined.
- 5 Press [4].**  
The ten-key screen will appear.
- 6. Select the value to be set pressing the numeric key, and press [ENT].**  
The selected TCPA Limit value will be determined.

ATA Setting	
1. Vector Time	<input type="text" value="6 min"/>
2. Past Position	<input type="text" value="OFF"/>
3. CPA Limit	<input type="text" value="10 nm"/>
4. TCPA Limit	<input type="text" value="1 min"/>
5. CPA Ring	<input type="text" value="ON"/>
9. Target Number Display	<input type="text" value="ON"/>
0. EXIT	<input type="text"/>

---

## 5.1.4 Setting Vectors (Vector Time)

Vector time can be set in minutes in the range 1 to 60 min.  
A true (T) vector mode or relative (R) vector mode can be selected.

### Setting vector time using the menu

#### **Procedures**

- 1 Press [ATA MENU] key.  
The ATA Setting menu will appear.
- 2 Press [1].  
The ten-key screen will appear.
- 3 Press [1].  
The ten-key screen will appear.
- 4 Select the vector time to be set pressing the numeric key, and press [ENT].  
The selected vector time will be determined.

ATA Setting	
1. Vector Time	<input type="text" value="6 min"/>
2. Past Position	<input type="text" value="OFF"/>
3. CPA Limit	<input type="text" value="10 nm"/>
4. TCPA Limit	<input type="text" value="1 min"/>
5. CPA Ring	<input type="text" value="ON"/>
9. Target Number Display	<input type="text" value="ON"/>
0. EXIT	<input type="text"/>

### Setting vector time using the multi-function control

#### **Procedures**

- 1 Press the [MULTI] control several times to activate the  mode.  
 will appear in the  mode field at the lower left of the radar display.
- 2 Turn the [MULTI] control to set the vector time.

### Setting vector mode

#### **Procedures**

- 1 Press the [VECT] key to select the vector mode.  
 or  will appear indicating the vector mode in the ATA information display area at the upper right of the radar display.



## 5.1.5 Setting CPA Ring (CPA Ring)

### Procedures

1 Press [ATA MENU] key.

2 Press [1].

The ATA Setting menu will appear.

3 Press [5].

The setting of CPA Ring will change between ON and OFF.

ON: Displays the CPA ring.

OFF: Hides the CPA ring.

While the CPA ring is displayed, **CPA RING** is shown at the upper right of the radar display.

While the distance of the specified CPA Limit value is used as the radius, the CPA ring is displayed with a red circle of which center is the own ship's position.

**Note:** The CPA ring is not displayed when the true (T) vector mode is selected.

ATA Setting	
1. Vector Time	6 min
2. Past Position	OFF
3. CPA Limit	10 nm
4. TCPA Limit	1 min
5. CPA Ring	ON
9. Target Number Display	ON
0. EXIT	

\* The CPA ring switch to Display or Hide within the radar display ②① on page 2-7.

---

## 5.1.6 Setting Automatic Acquisition Key Assignment (Set GZ Alarm Key)

This section explains how to set a guard zone that is to be assigned to the [GZ ALARM] key.

The setting enables the operator to select ON/OFF for a generally used guard zone by simply operating the [GZ ALARM] key on the control panel.

### Procedures

- 1 Press [ATA MENU] key.

Press [4].

Press [3].

Press [1].

Guard Zone menu will appear.

ON: Turns on the guard zone when the [GZ ALARM] key is pressed.

OFF: Does not turn on the guard zone when the [GZ ALARM] key is pressed.

Guard Zone	
1. Guard Zone 1	<input type="button" value="ON"/>
2. Guard Zone 2	<input type="button" value="OFF"/>
<input type="button" value="0. EXIT"/>	

The same function also as RADAR Alarm (Sector Alarm) can be given.

### Procedures

- 1 Press [ATA MENU] key.

Press [4].

Press [3].

Press [2].

\* The setting method is the same as the method of a guard zone.

For the creation method of sector alarm, refer to 3-64P and Chapter 3.5.20 for the creation method of sector alarm. .



## 5.2 ATA OPERATION

This section explains how to use the ATA functions.

Each function is available only when the ATA option is installed.

The functions automatically track a target, and store/display vectors as the course and speed.

They calculate CPA and TCPA, and issue an alarm.

The ATA function can track up to 30 ships.

The guard zones can be set for automatic acquisition.

When the power is turned off or the transmit/standby mode is activated, tracking data is erased from memory.

### 5.2.1 Acquiring Target

Target acquisition can be performed on two modes, AUTO and MANUAL, and both modes can be used at the same time.

#### Automatic Acquisition [AUTO]

##### Attention

**If untracked targets intrude into the guard zone in the conditions that maximum number of targets is under tracking, the targets acquired automatically will be cancelled in the order of lower levels of danger.**

#### Procedures

**1 Press the [GZ ALARM] key.**

Automatic acquisition will be started. The mark “▽” and target ID number are put to an acquired target, and they move together with the target. The vectors are displayed within one minute.

**2 Press the [GZ ALARM] key again.**

Automatic acquisition will be turned off, and the guard zone disappears from the radar display. However, automatically acquired ships are continuously tracked.

For the guard zone to be called by using the [GZ ALARM] key, refer to Section 5.1.6 Setting Automatic Acquisition Key Assignment.

\* The guard zone can be called by using buttons ④⑨ and ⑤⑩ shown in the radar display on page 2-7.

---

## Manual Acquisition [MANUAL]


### Attention

**If more targets are acquired manually in the condition that the maximum number of targets are under tracking, the targets under tracking will be cancelled in the order of lower level of danger in order to track the manually acquired targets.**

### Procedures

- 1 **Move the cross cursor mark onto the target to be acquired, and press the [ACQ] key.**

The target will be acquired. The initial acquisition mark and target ID number are put to the acquired target, and the vectors are displayed within one minute.

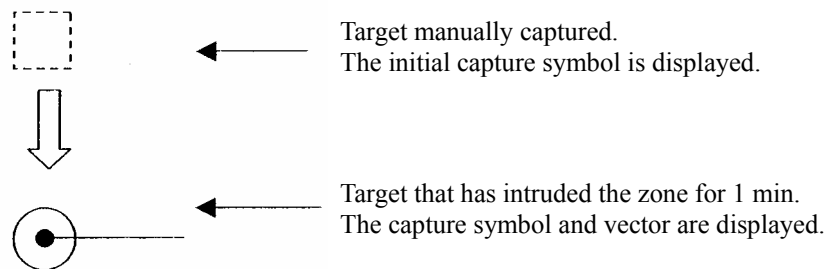

When using only the manual acquisition mode alone, press the [GZ ALARM] key to turn off the automatic acquisition mode.

## Use of Automatic and Manual Acquisition Modes [ACQ AUTO] / [ACQ MANUAL]

Use the manual acquisition mode while the automatic acquisition mode is on.

Manually acquire the target to which particular attention should be paid, and get the other targets automatically acquired. If a new target appears exceeding the maximum number of targets, the manually acquired target is displayed even in the background until it gets out of the display. However, automatically acquired targets are canceled starting far distance from own ship.





## 5.2.2 Canceling Unwanted Targets

Unwanted targets can be canceled one by one in the following cases:

- Tracking is no longer necessary for targets with which vectors/symbols are displayed after being acquired and tracked.
  - The number of vectors on the radar display needs to be reduced for easy observation.
- When targets are to be re-acquired from the beginning, all the current vectors can also be canceled.

### Canceling targets one by one

#### **Procedures**

- 1 Move the cross cursor mark onto the target to be canceled.
- 2 Press the [TGT CNCL] key.

The target's vectors and symbols will disappear, and only the radar video remains.

### Canceling all targets collectively

#### **Procedures**

- 1 Hold down the [TGT CNCL] key.

The vectors and symbols of all the targets will disappear, and only the radar videos remain.

**Note:** When all the targets have been canceled, the system stops tracking them. Thus, you need to re-acquire targets in manual or automatic acquisition mode. Do not cancel all the targets unless otherwise required.

---

### 5.2.3 Displaying Target ID No. (Target Number Display)

A target ID number is a value displayed beside the acquisition symbol when a target is acquired. ID numbers are assigned to targets in acquisition order. When the NCA-877 option is installed, ID numbers 1 to 30 are automatically assigned. Each target is identified by the assigned ID number until it is lost or its acquisition is canceled.

#### Procedures

1 Press [ATA MENU] key.

2 Press [1] key.

The ATA Setting menu will appear.

3 Press [9] key.

The Target Number Display is switched ON or OFF.

ON: Displays target ID numbers.

OFF: Hides target ID numbers.

ATA TRACK: Displays target ID number with ATA track.

If there are many tracking targets and their symbol display is confusing, set Target Number Display to OFF to view the radar display easily.

ATA Setting	
1. Vector Time	<input type="text" value="6 min"/>
2. Past Position	<input type="text" value="OFF"/>
3. CPA Limit	<input type="text" value="10 nm"/>
4. TCPA Limit	<input type="text" value="1 min"/>
5. CPA Ring	<input type="text" value="ON"/>
9. Target Number Display	<input type="text" value="ON"/>
0. EXIT	<input type="text"/>

**Note:** An ID number is always displayed for targets with which numeric data is displayed.



## 5.2.4 ATA Data Display

(Refer to Example of Display in page 2-1. )

### Display of Vectors

#### Attention

**When a target or own ship changes a course, or when a target is acquired, its vector may not reach a given level of accuracy until three minutes or more has passed after such course change or target acquisition.**

**Even if three minutes or more has passed, the vector may include an error depending upon the tracking conditions.**

A vector to represent a target's predicted position can be presented in the True vector or Relative vector mode. In each mode, a vector length can be freely changed for a time interval of 1 to 60 minutes.

The True and Relative vector can be switched by using buttons<sup>(4)</sup> shown in the radar display on page 2-7.

### [I] Vector Mode Selection


#### True Vector Mode

In the true vector mode, the direction of a target vector indicates the true course of the target and its vector length is proportional to its speed.

In this mode, own ship's vector is displayed as shown below.

In this mode, the movements of other ships around own ship can be accurately and easily monitored.

However, no CPA RING can appear in this mode.

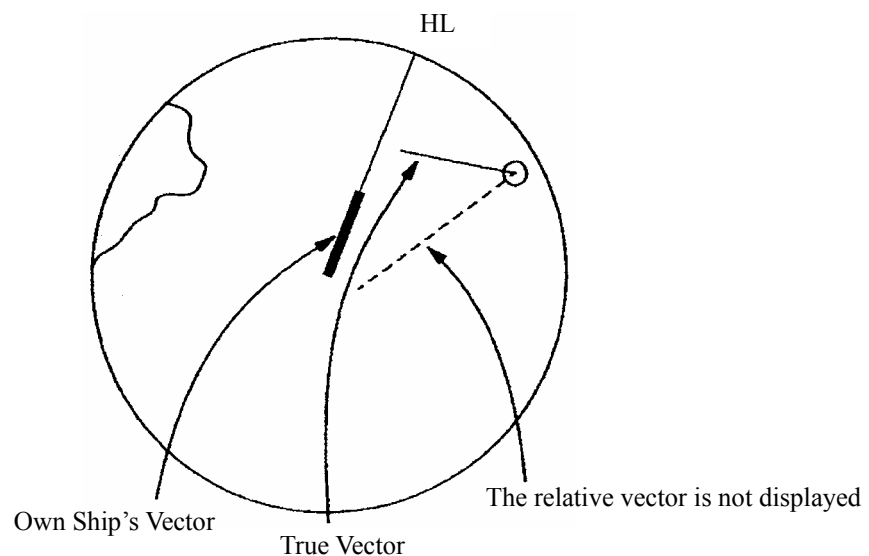


---

## Relative Vector Mode

In displaying the relative vector of a target, press the [VECT R/T] key to select the Relative Vector mode.

The relative vector does not represent the true motion of the target, but its relative relation with own ship. This means that a target with its relative vector directed to own ship (passing through the CPA LIMIT ring) will be a dangerous target. In the Relative Vector mode, it can be seen at a glance where the CPA LIMIT of the dangerous target is.

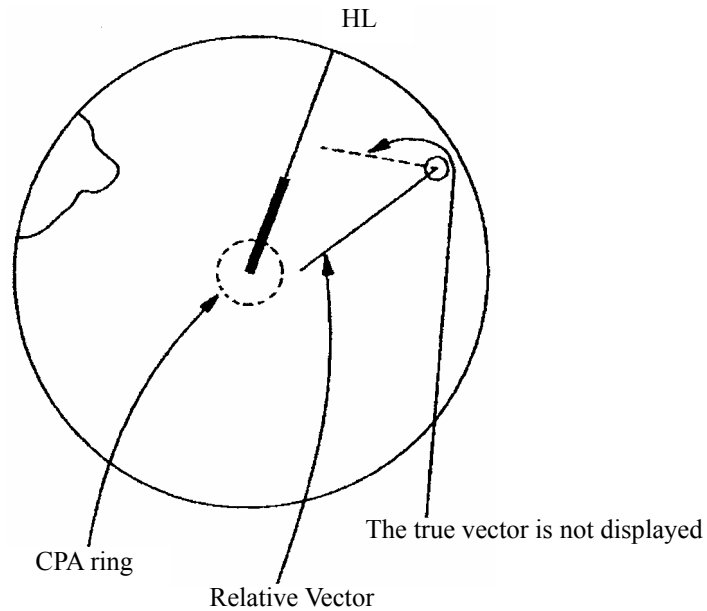


Therefore, the TRUE/REL mode shall optionally be used for the purpose of observation: the TRUE vector mode for grasping the true aspect of a target, and the REL vector mode for grasping a target's closest point of approach (CPA)



### [II] Vector Length: VECTOR TIME

The vector length of a target is proportional to its speed, and the vector time can be switched in a range of 1 to 60 minutes by used for ten-key.

The diagram below illustrates a vector length of a target for six minutes, and the tip of the vector represents the target's position expected to reach six minutes later.

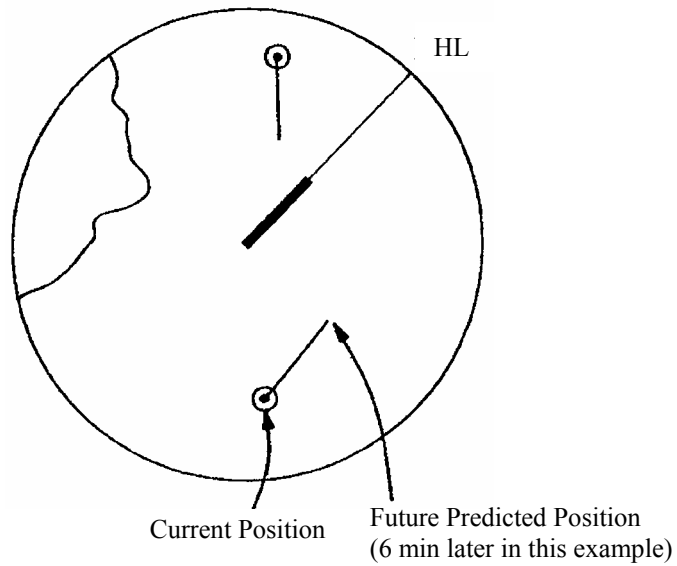**5**

Refer to Section 5.1.4 Setting Vectors for how to change the vector time.

## Display of Past Positions [PAST POSN]

### Procedures

1 Press [ATA MENU] key.

2 Press [1] key.

The ATA Setting menu will appear.

3 Press [2] key.

The Past Position screen will appear.

4 Select the past position display interval to be set, pressing the numeric key.

The selected past position display interval will be set.


OFF: Hides past positions.

Time/Range: Past positions are displayed at the set intervals.

ATA Setting	
1. Vector Time	6 min
2. Past Position	OFF
3. C 1.	OFF
	2. 0.5 min
4. T 3.	1 min
	4. 2 min
5. C 5.	4 min
	6. 0.1 nm
6. T 7.	0.2 nm
	8. 0.5 nm
	9. 1 nm
9. Target Number Display	ON
0. EXIT	


The ATA Past Position function can display up to 6 past positions of a target. The display interval can be set to specified time intervals of 0.5, 1, 2, or 4 minutes, or specified range intervals of 0.1, 0.2, 0.5, or 1 nm. The specified interval is shown on the right of PAST POSN in the ATA information display area. When OFF is shown, Past Position is set to OFF in the menu.

Switching between the True and Relative Vector modes takes place at the same time the vector mode is switched. In relative mode, target's relative tracks displayed.

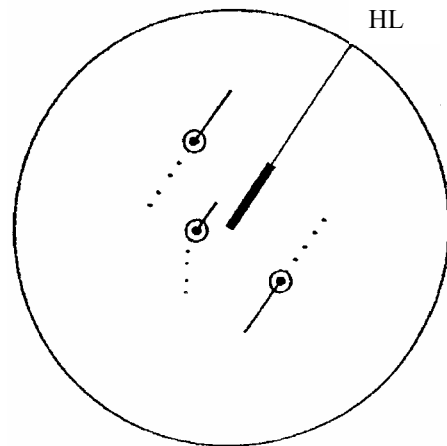



An example of display is shown in Fig. 5-4

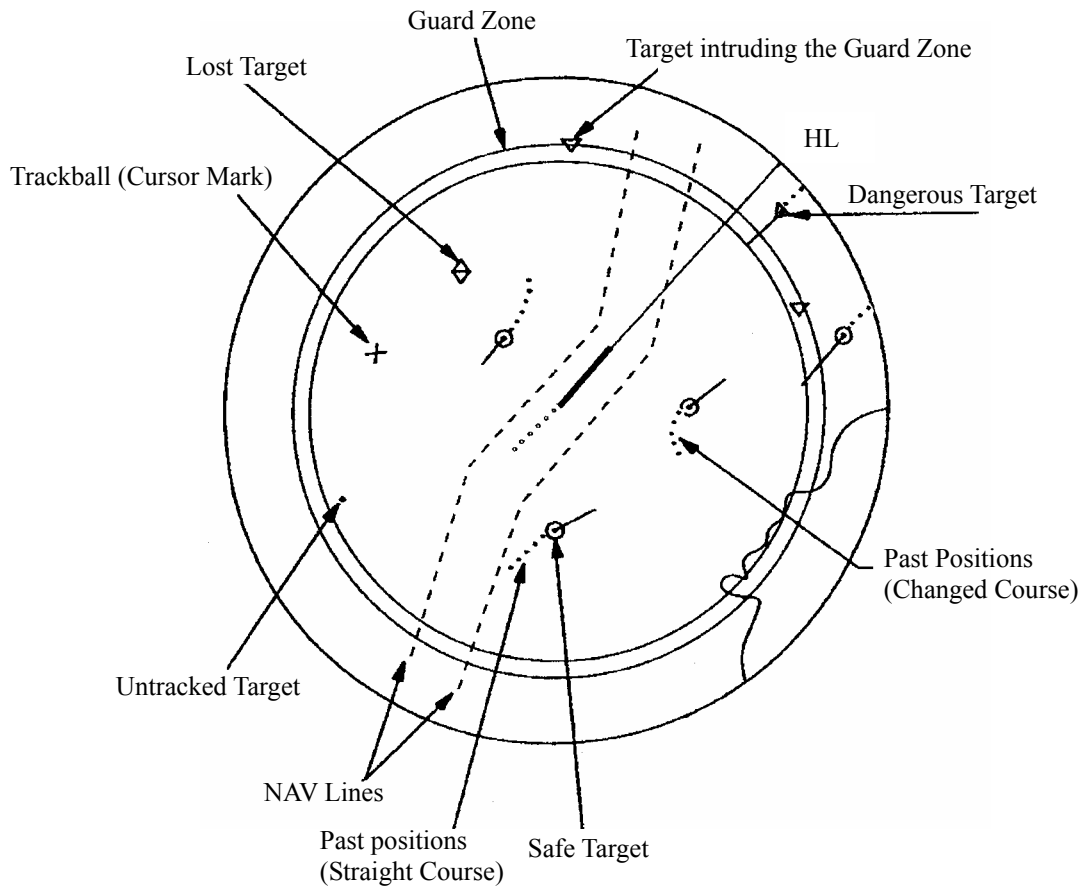

**Fig. 5-4 Example of Display (in North-up and True Vector mode)**

In addition to the marks and symbols shown above, fixed/variable range markers, electronic bearing lines, etc. are presented on an actual video.

---

## 5.2.5 Target Data Display

### Attention

**When a target or own ship changes its course, or when a new target is acquired, its vector may not reach a given level of accuracy until three minutes or more has passed after such course change or target acquisition.**

**Even if three minutes or more has passed, the vector may include an error depending upon the tracking conditions.**

### Type of Data Display

#### Target Data

Target identification (TGT ID)	ID number of the target
True bearing: BEARING	0.1° unit
Range: RANGE	0.01 NM unit
True course: COURSE	0.1° unit
True speed: SPEED	0.1 knot unit
Closest point of approach (CPA)	0.01 NM unit
Time to CPA (TCPA)	0.1 min unit
Bow crossing range (BCR)	0.01 NM unit
Bow crossing time (BCT)	0.1 min unit

The target for which its numeric data is displayed is marked with a symbol “ □ ” to distinguish from other targets.

If a target’s data is displayed, but without the symbol “ □ ”, such a target exists outside the currently displayed radar display.

### [I] Method of Displaying Target Data [TGT DATA]

#### **Procedures**

- 1 Move the cross cursor mark onto the target for which numeric data is to be displayed, and press the [TGT DATA] key.**

Then, the data of the designated target will appear, it will be marked with a symbol “ □ ”. The target data will remain on the radar display until the target is lost and its vector disappears, or until another target is designated.

If a target with the mark “ □ ” is designated, only its true bearing (BEARING) and range (RANGE) will appear until its vector appears.

\* Buttons ⑤① and ⑤② on the radar display on page 2-7 are available to switch target numbers of numeric data.





## [II] Input of target information (ATA Target INFO)

This radar enables name inputs and target track color changes for individual ATA targets acquired.

\* EPA is not available to make this setting.

### Procedures

#### 1 Turn OFF the cursor mode.

Button ⑰ on the radar display is available to change the cursor mode.

#### 2 Place the cursor over the target and then press [CLR/INFO] key.

The ATA Target INFO screen opens.

\* This function is available only when the cursor mode is set to OFF.

#### Item overview

Target ID: Target ID currently selected.  
 Name: The name of the target. It is blanked in the initial status. The user is to enter a name.  
 Track Color: Determines a target track color.

#### Target information screen

**ATA Target INFO**

Target ID

1. Name

2. Track Color

0. EXIT

**Name entry (Name)**

**Procedures**

- 1 While the ATA Target INFO screen is open, press [1] key.
- 2 For the entry of a new name  
 → 2. INPUT  
 For the selection of a name from names that have already been entered  
 → 1. DATA BASE.

**ATA Target INFO**

Target ID

1. Name

1.	DATA BASE
2.	INPUT
3.	OFF

0. EXIT

For new entry

Selecting INPUT displays the screen shown below.

After making an entry, place the cursor over [ENT] key and then press it.

When the name entered with INPUT is changed to a target name, it is saved in DATA BASE.

\* Up to eight characters can be entered as a name.

**Name**

0	1	2	3	4	5	6	7	8	9
A	B	C	D	E	F	G	H	I	J
K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	SP	<	>	

DEL

BS

ENT

EXIT

For calling a name from the names that have been entered

Selecting DATA BASE lists INPUT names that have already been entered. From the list, select a name you want to use.

\* Names for 32 ships can be saved in DATA BASE.



## Track Color Setting (Track Color)

### Procedures

- 1 While the ATA Target INFO screen is open, press [2] key.
- 2 Pressing numeric key(s), select a color number you want to set.

Colors selectable with Track Color are colors that have been set within the ATA Track Setting. When colors are set, individual colors can be set for 10 ships. For the 11th to 20th ships, 10 ships are to be set collectively.

On this screen, selection of the 1st track is to select CYAN.

For target tracks, up to 20 ships can be displayed.

For color settings selected with Track Color, see page 5-36 in Section 5.2.8.

**ATA Target INFO**

Target ID

1. Name

2. Track Color

1.	OFF
2.	1-CYAN
3.	2-WHITE
4.	3-BULE
5.	4-GREEN
6.	5-YELLOW
7.	6-RED
8.	7-PINK
9.	NEXT Page


0. EXIT


## 5.2.6 Alarm Display

The ATA system provides the following alarms:

Dangerous target alarm:	CPA/TCPA
Guard zone entry alarm:	GZ
Lost target alarm:	LOST
System function alarm:	ATA (DATA)
Gyro set alarm:	SET GYRO

### Dangerous Target Alarm


CAUTION



**Since these alarms may include some errors depending on the target tracking conditions, the navigation officer himself should make the final decision for ship operations such as collision avoidance.**

**Making the final navigation decision based only on the alarm may cause accidents such as collisions.**

In the ATA system, targets are categorized into two types: tracked targets and dangerous targets. The grade of danger can easily be recognized on the display at a glance. So the officer can easily decide which target he should pay attention to. The types of target and alarm are shown below.

#### Dangerous Target Alarm

Status	Symbol on display	Alarm characters	Alarm sound	Conditions
Tracking target	○	(OFF)	(OFF)	<ul style="list-style-type: none"> <li>• <math>CPA &gt; CPA\ LIMIT</math></li> <li>• <math>0 &gt; TCPA</math></li> <li>• <math>TCPA &gt; TCPA\ LIMIT</math></li> </ul>
Dangerous target	△	TCP/TCPA	Beep sound (pee-poh) Acknowledgeable	<ul style="list-style-type: none"> <li>• <math>CPA \leq CPA\ LIMIT,</math> <math>0 \leq TCPA \leq TCPA\ LIMIT</math></li> </ul>

CPA LIMIT and TCPA LIMIT: The Setting Values




**Guard Zone Alarm**

<b>CAUTION</b>
<p><b>!</b> In setting a guard zone, it is necessary to adjust the gain, sea clutter suppression and rain/snow clutter suppression to ensure that target echoes are displayed in the optimum conditions. No guard zone alarms will be issued for targets undetected by the radar, and this may cause accidents such as collisions.</p>

5

The guard zone functions are to set a zone at an arbitrary range and to deliver an alarm if any target intrudes within this zone.

For the method of setting a guard zone, refer to page 3-59, section 3.5.19 Set Guard Zones.

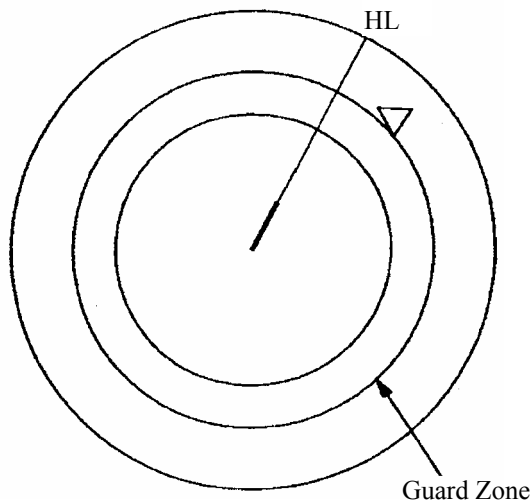

**Guard Zone Alarm**

Status	Symbol on display	Alarm characters	Alarm sound	Conditions
Target entering the guard zone	▽	GZ	Beep sound (pipipi) Acknowledgeable	An alarm sound is generated while a target has entered into the range of 0.5 NM between the outer and the inner ring.


**Lost Target Alarm**

**Attention**


**If the gain, sea clutter suppression, rain/snow clutter suppression are not adjusted adequately, the lost target alarm may be easily generated. So such adjustments should be mad carefully.**

When it is impossible to continue tracking any acquired and tracked target, the LOST target alarm will be generated. The typical causes for alarm generation are shown below, but not limited to the following:

- The target echo is very weak.
- The target is shadowed by a shore or a large ship and its echo is not received.
- The target echo is blurred by sea clutter returns.

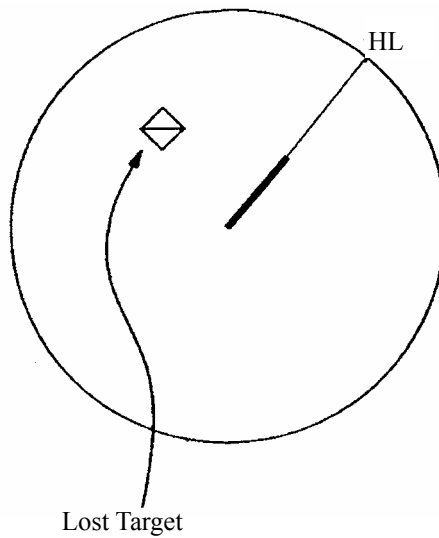

**Lost Target Alarm**

Status	Symbol on display	Alarm characters	Alarm sound	Conditions
Lost target		LOST	Beep sound (pee) Acknowledgeable	The alarm will sound once when a lost target symbol is displayed.

## System Function Alarm

When an abnormal state of an input signal or a trouble in the processing circuitry occurs, an character or alarm is generated. When an alarm occurs against any ATA function, ATA (DATA) will appear in the WARNING display area, but no indication is made in the ATA information display. This status means that there is any operational trouble in the ATA system. Please, contact the service depot or the manufactures.

### System Function Alarm

Alarm characters	Alarm sound	Conditions
ATA(DATA)	Beep sound (pipipi)	An alarm sound is generated when an ATA circuit error occurs.

## Gyro Set Alarm



The North Stabilizing Kit (NSK) in this system receives signals from a gyro. Even if the power is turned off, the system will follow up the gyro. However, the system stops the follow-up operation when the power of the master gyro is turned off or when any trouble occurs to the line. When the power of the master gyro is recovered, the SET GYRO alarm will be generated.  
If this alarm occurs, set the gyro.

### Gyro Set Alarm

Alarm characters	Alarm sound	Conditions
SET GYRO	Beep sound (pipipi)	The signals from the gyro are stopped, but the gyro is recovered.

---

## 5.2.7 ATA Simulation

 <b>CAUTION</b>	
	<p><b>Simulation is a function to check whether the ATA system is operating normally. Do not use this function except when checking the ATA operation. In particular, if this mode is used during navigation, pseudo targets appear on the radar display, which may be confused with the actual targets. Do not use this mode during navigation. Otherwise, this may cause accidents.</b></p>

The following simulation to be used for ATA can be referred to and modified:

[I]	Test Video:	Test video for use in checking the operation of the target detection circuit.
[II]	ATA Simulator:	Pseudo targets are generated on the radar display to check whether the ATA functions are operating normally.
[III]	Status:	Displays the ATA status.
[IV]	Gate Display:	Gate size to acquire and track targets.





## [I] Test Video

### Attention

**TEST VIDEO may not appear for targets that are not acquired nor tracked, or if the [GAIN] and [SEA] controls are adjusted properly**

Test Video is used to check whether the video signals under target acquisition and tracking are inputted to and processed in the target processing circuit normally. However, it is sufficient to check that VDH in TEST VIDEO is displayed. The start of the Test Video mode is available only in the Standby mode.

#### Procedures

**1 Press [STBY] key.**

The equipment will enter the standby state.

**2 Press [ATA MENU] key.**

**Press [5] key.**

The ATA Test Menu will appear.

**3 Press [1] key.**

The Test Video setting screen will appear.

**4 Press a numeric key to select a video signal you want to set.**

The selected test video will be set.

**5 Press [TX/PRF] key.**

The test video is displayed in the background of the radar display.

In general, **[VDH]** is sufficient for target display checks in test video mode.

ATA TEST MENU	
1.	Test Video
	OFF
2. A	1. OFF
	2. VDG
3. S	3. VDH
	4. VDL
4. G	5. VDIN
	OFF
0. EXIT	

# 5

If any target displayed clearly in the radar display is not displayed in the Test Video mode, the target detection circuit of the ATA system may have a trouble.

## [II] ATA Simulator

Pseudo targets can be generated in certain known positions to check whether the ATA processing circuits are operating normally. Since the pseudo targets move depending on known parameters, the values for these pseudo targets can be compared with the known value if the pseudo targets are acquired and tracked, and displayed. Thus, it can be checked if the ATA system is operating normally.

### Procedures

**1 Press the [STBY] key.**

The equipment will enter the standby state.

**2 Press [ATA MENU] key.**

**Press [5] key.**

The ATA Test Menu will appear.

**3 Press [2] key.**

The ATA Simulator screen will appear.

**4 Select the simulator to be set, pressing the numeric key.**

The selected simulator will be set.

**5 Press the [TX/PRF] key.**

The simulator will be activated and generate pseudo targets. The characters "XX" at the bottom of the radar display blinks indicating that the simulation mode is active.

ATA TEST MENU		
1. TEST Video		
		OFF
2. ATA Simulator		
		OFF
3. S	1.	OFF
	2.	SCENARIO1
4. G	3.	SCENARIO2
	4.	SCENARIO3
	5.	SCENARIO4
	6.	SCENARIO5
	7.	SCENARIO6
0. EXIT		

ATA simulator/scenario

SCENARIO	TARGET START POINT		TARGET END POINT		TARGET SPEED
	DISTANCE	BEARING	DISTANCE	BEARING	
1	3.2NM	10°	1NM	90°	20kts
2	6NM	0°	0NM	0°	10kts
3	6NM	every 18°	1NM	every 18°	10kts
4	6NM	45°	1NM	45°	105kts
5	6NM	45°	6NM	150°	20kts
6	6NM	45°	6NM	150°	20kts

**Note:** When the range between own ship and the pseudo target is 0, the target will disappear.

**Exit****1 Press the [STBY] key.**

The equipment will enter the standby state.

**2 Press [2] key while the ATA Test Menu is open.**

The ATA Simulator screen will appear.

**3 Press [1] key to select OFF.**

The ATA Simulator is turned off.

---

### [III] Status

The current ATA status will appear.

#### Procedures

#### 1 Press [ATA MENU] key.

The ATA Menu will appear

#### Press [5] key.

The ATA Test Menu will appear.

#### 2 Press [3] key.

The Status screen will appear..

- \*Constant: Vector response
- \*Video Level TD: Threshold value used for tracking
- \*Video Level HI: VD threshold value used for guard zone
- \*Video Level Low: Unused
- \*Gate Size: Size of gate used for tracking
- \*Tracking: Number of targets currently acquired

Status	
* Constant	<input type="text" value="5"/>
* Video Level TD	<input type="text" value="15"/>
* Video Level HI	<input type="text" value="8"/>
* Video Level Low	<input type="text" value="1"/>
* Gate Size	<input type="text" value="NARROW"/>
* Tracking	<input type="text" value="1"/>
<input type="text" value="0. EXIT"/>	



#### [IV] Gate Display

The gate displays an area monitoring a target using the ATA function. This radar equipment allows the gate size to change automatically according to target distance and size. User can check the gate size using the following function.

##### Procedures

- 1 Press [ATA MENU] key.  
Press [5] key.

The ATA Test Menu will appear.

- 2 Press [4] key.

The gate display mode is switched.

ON: Gate is displayed

OFF: Gate is not displayed


- 3 The gate displays data of a target you want to check using the cursor and [TGT DATA] key. (See Section 5.3.5 Target Data Display.)

The data is displayed, and the gate is displayed around the ATA symbol in green.

**Note:** The ATA function can display the gate of two targets simultaneously.

ATA TEST MENU	
1. TEST Video	<input type="text" value="OFF"/>
2. ATA Simulator	<input type="text" value="OFF"/>
3. Status	
4. Gate Display	<input type="text" value="OFF"/>
0. EXIT	

# 5

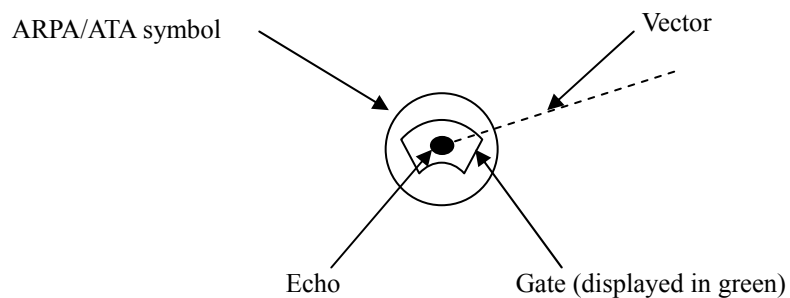

---

## 5.2.8 Setting ATA Tracks (ATA Track Setting)

Track information on acquired ATA targets can be set.  
This radar can acquire target tracks of up to 20 ships.

### [I] Turning ON/OFF the target track function (Track Function)

#### Procedures

1 Press [ATA MENU] key.

2 Press [3] key.

The ATA Track Setting Menu will appear.

3 Press [1] key.

The ATA Track function is switched between ON and OFF.

ON: Sets the ATA Track function to ON.

OFF: Sets the ATA Track function to OFF.

ATA Track Setting	
1. Track Function	ON
2. Track Color	>
3. Track Display	>
4. Track Memory Interval	3 sec
5. Clear Track Color	WHITE
6. Clear Track Number	WHITE
7. Card2 Track Display	0000
0. EXIT	

\* When this function turn off, all target track functions to OFF(Including track memory), If so, checking cannot be done later.



**[II] Setting target track colors (Track Color)**

The same color can be selected for all target tracks, or different colors can be set to ships whose track numbers are 1 to 10. In such cases, 10 ships, whose track numbers are 11 to 20, are to be set collectively.

**Procedures**

**1 Press [2] key while the ATA Track Setting Menu is open.**

Track color can be set.

**2 Press [1] key.**

Which is to be selected, setting individual colors or setting the same color for all ships, is to be determined depending on the setting for the ALL item.

Setting individual colors: Select INDIVIDUAL  
 Setting the same color for all ships:  
 Select a color number

Track Color	
1. All	INDIVIDUAL
2. A	1. INDIVIDUAL
	2. WHITE
3. A	3. CYAN
	4. BLUE
4. A	5. GREEN
	6. YELLOW
5. A	7. PINK
	8. RED
6. ATA Track No.5	WHITE
7. ATA Track No.6	OFF
8. ATA Track No.7	CYAN
9. NEXT	>
0. EXIT	



For setting individual colors

Selecting INDIVIDUAL makes it effective to set track numbers from ATA Track No.1 to ATA Track No.10 as well as individual settings for Other. Set a color for each target.

When pressing the item number of the target to be set displays a list of colors, select desired colors from the list. Eight colors are selectable: OFF, WHITE, CYAN, BLUE, GREEN, YELLOW, PINK and RED.

ATA Track No.1 to  
 ATA Track No.10: 1st ship to 10th ship  
 Other: 11th ship to 20th ship  
 Settings are made as shown above.

\* Note that individual settings are effective only when INDIVIDUAL has been set.

For setting the same color for all ships

This setting is determined when you select a color displayed with ALL selected. The types of colors are the same as those to be used for setting individual colors.

**[III] Setting Display of Target Tracks (Track Display)**

The display of target tracks can be set to ON/OFF. For the display of tracks, setting for display/nondisplay of all ships or for individual ships can be made.

**Procedures**

**1 Press [3] key while the ATA Track Setting Menu is open.**

Track display can be set.

**2 Press [1] key.**

Which is to be selected, setting individual tracks or display/nondisplay for all ships, is to be determined depending on the setting for the ALL item.

Setting individual tracks: Select INDIVIDUAL  
Setting display for all ships: Select ON  
Setting nondisplay for all ships: Select OFF

For setting individual tracks

Selecting INDIVIDUAL makes it effective to set track numbers from ATA Track No.1 to ATA Track No.10 as well as individual settings for Other. Select display/nondisplay for each target.

Each time ON/OFF window is pressed, a decision branch is switched to another.

ATA Track No.1 to  
ATA Track No.10: 1st ship to 10th ship  
Other: 11th ship to 20th ship  
Settings are made as shown above.

Track Display							
1. All	<input type="text" value="INDIVIDUAL"/>						
2. A	<table border="1"><tr><td>1.</td><td>INDIVIDUAL</td></tr><tr><td>2.</td><td>ON</td></tr><tr><td>3.</td><td>OFF</td></tr></table>	1.	INDIVIDUAL	2.	ON	3.	OFF
1.	INDIVIDUAL						
2.	ON						
3.	OFF						
3. A	<input type="text" value="ON"/>						
4. ATA Track No.3	<input type="text" value="ON"/>						
5. ATA Track No.4	<input type="text" value="ON"/>						
6. ATA Track No.5	<input type="text" value="ON"/>						
7. ATA Track No.6	<input type="text" value="ON"/>						
8. ATA Track No.7	<input type="text" value="ON"/>						
9. NEXT							
0. EXIT							

\* Note that individual settings are effective only when INDIVIDUAL has been set.





#### [IV] Setting target track memory intervals (Track Memory Interval)

Target track memory intervals can be set.

\* Note that this function is available only when the Target Track function is set to ON.

#### Procedures

##### 1 Press [4] key while the ATA Track Setting Menu is open.

The Track Memory Interval setting items are displayed.

##### 2 Select a number for a memory interval you want to set.

Settable intervals

Select from the following intervals:  
OFF, 3 sec, 5 sec, 10 sec, 30 sec, 1 min, 3 min, 5 min, 10 min, 30 min, 60 min, 1 nm, 3 nm, 5 nm and 10 nm

\* Setting this function to ON saves target tracks even though Target Display is set to OFF.

ATA Track Setting	
1. Track Function	
2. Track Color >	
3. Track Display >	
4. Track Memory Interval	
	3 sec
5. C	1. OFF
	2. 3 sec
6. C	3. 5 sec
	4. 10 sec
7. C	5. 30 sec
	6. 1 min
	7. 3 min
	8. 5 min
	9. Next Page
	0.
0. EXIT	

**[V] Erasing target tracks (Clear Track)**

Target tracks can be erased. You can select an erasing method by color setting or an erasing method by track number setting.

**Procedures**

- 1 Press [5] key while the ATA Track Setting Menu is open.
- 2 Select the number of the color you want to erase.

ATA Track Setting	
1. Track Function	
2. Track Color	>
3. Track Display >	
4. Track Memory Interval	
	3 sec
5. Clear Track Color	
	WHITE
6. C	1. ALL
	2. WHITE
7. C	3. CYAN
	4. BLUE
	5. GREEN
	6. YELLOW
	7. PINK
	8. RED
0. EXIT	



Erasing tracks by track number (Clear Track Number)

**Procedures**

- 1 Press [6] key while the ATA Track Setting Menu is open.
- 2 Select the track number you want to erase.

ATA Track Setting	
1. Track Function	
2. Track Color	>
3. Track Display >	
4. Track Memory Interval	
	3 sec
5. Clear Track Color	
	WHITE
6. Clear Track Number	
	ALL
7. C	1. ALL
	2. ATA Track No.1
	3. ATA Track No.2
	4. ATA Track No.3
	5. ATA Track No.4
	6. ATA Track No.5
0. E	7. ATA Track No.6
	8. ATA Track No.7
	9. NEXT Page

---

## [VI] Reading target track saved in CARD2 (Card2 Track Display)

Saved target tracks can be read from CARD2.

### Reading targets by color setting

#### **Procedures**

- 1 Press [7] key while the ATA Track Setting Menu is open.
- 2 Enter the number you want to read with the numeric key, and then press the ENT key.

\* For how to save targets in CARD2, see page 3-134, section 3.12.1.

ATA Track Setting	
1. Track Function	
2. Track Color	>
3. Track Display	>
4. Track Memory Interval	3 sec
5. Clear Track Color	WHITE
6. Clear Track Number	1
7. Card2 Track Display	0000
0. EXIT	

## 5.3 AIS OPERATION

### Attention

There are the following limitations on use of the AIS function, system, and operation:

- [I] This system can display a maximum of 50 AIS targets. There are two types of filters for increasing the display priority. (Refer to Section 5.4.6 AIS FILTER SETTING.)
- [II] Keep in mind that the following restrictions are placed on use of the AIS function:
  - 1) The AIS function cannot be turned on in the following cases:
    - MANUAL is selected for the speed sensor.
    - LOG or 2-axis LOG is used for the speed sensor, and SET and DRIFT are selected.
  - 2) LOG or 2-axis LOG cannot be selected for the speed sensor in the following case:
    - SET or DRIFT is set while the AIS function is on.
  - 3) MANUAL cannot be selected for the speed sensor in the following case:
    - The AIS function is on.
  - 4) SET/DRIFT (current offset) cannot be turned on in the following case:
    - The AIS function is turned on, and LOG or 2-axis LOG is selected for the speed sensor.

\* Use of this function requires AIS I/F (option).

---

### 5.3.1 Initial Setting

This section explains the initial setting for using the AIS function.

#### **Setting the GPS antenna location**

Set the GPS antenna location. Set offset ranges in longitudinal direction and latitudinal direction from the own ship's reference position.

For the setting procedure, refer to Section 8.5 ADJUSTMENT.

#### **Attention**

**If offset ranges are not set correctly, AIS symbols and radar echoes may be displayed shifted.**

**When offset ranges are set, latitude and longitude data received from the GPS is offset, and the offset data is displayed as the latitude and longitude of own ship's position.**

#### **Setting collision decision criteria (CPA Limit/TCPA Limit)**

The collision decision criteria for the ATA function are applied to the AIS function.

For the setting procedure, refer to Section 5.1.3 Setting Collision Decision Criteria.

The AIS setting menu is also available for the collision decision criteria. Note that the same collision decision criteria must apply to ATA.

#### **Attention**

**Set the optimum values of collision decision conditions, depending upon vessel type, water area, weather, and oceanographic conditions.**


**Procedures**

**1 Press [ATA MENU] key.**

**2 Press [2] key.**

The AIS Setting Menu will appear.

**3 Press [4] key.**

The ten-key screen will appear.

**4 Using numeric keys, enter the CPA value you want to set, and then press [ENT] key.**

The entered CPA Limit value is determined.

**5 Press [5] key.**

The ten-key screen will appear.

**6 Using numeric keys, enter the TCPA value you want to set, and then press [ENT] key.**

The entered TCPA Limit value is determined.

AIS Setting	
1. AIS Function	<input type="text" value="OFF"/>
2. AIS Symbol Display	<input type="text" value="OFF"/>
3. ATA Symbol Display	<input type="text" value="ON"/>
4. CPA Limit	<input type="text" value="1 nm"/>
5. TCPA Limit	<input type="text" value="1 min"/>
6. AIS Filter Setting	<input type="text" value="&gt;"/>
7. Identical Distance	<input type="text" value="100 m"/>
0. EXIT	

\* The collision decision criteria set on the AIS side are also available on ATA.

## 5.3.2 Setting AIS Display Function (AIS Function)

Switch the AIS symbol display function to ON/OFF.

### Attention

**When the AIS display function is set to OFF, no AIS symbols are displayed.**

**The AIS display function itself is turned OFF.**

**Once the AIS display function is set to OFF, it is not automatically switched to ON even if a dangerous target exists.**

#### Procedures

- 1 Press [ATA MENU] key.

Press [2] key.

The AIS Setting menu will appear.

- 2 Press [1] key.

The AIS Function is switched between ON and OFF.

ON: Enables the AIS display function.

OFF: Disables the AIS display function.

AIS Setting	
1. AIS Function	<input type="text" value="OFF"/>
2. AIS Symbol Display	<input type="text" value="OFF"/>
3. ATA Symbol Display	<input type="text" value="ON"/>
4. CPA Limit	<input type="text" value="1 nm"/>
5. TCPA Limit	<input type="text" value="1 min"/>
6. AIS Filter Setting	<input type="text" value="&gt;"/>
7. Identical Distance	<input type="text" value="100 m"/>
<input type="text" value="0. EXIT"/>	

\* Button ② on the radar display on page 2-7 is also available to switch the display functions.

\* Note that turning OFF this function switches all AIS display functions to OFF.





### 5.3.3 Activating AIS Targets

Activate an AIS target, and display the target's vector and make a collision decision.

#### Manual activation

Activate an AIS target<sup>\*1</sup> in manual mode to display the vector and HL.

#### **Procedures**

- 1 Press the **CURSOR** button at the upper right of the radar display several times until **ACT AIS** appears.

The cursor mode is set to the AIS activation mode.

- 2 Move the cross cursor mark onto the inactive AIS target that is to be activated<sup>\*1</sup>, and press [ENT] key.

The selected AIS target will be activated<sup>\*1</sup>.

5

#### Automatic activation

Activate an AIS target in automatic mode to display the vector and HL.

If the guard zone function is in use, an AIS target is activated automatically when it has entered the guard zone. Dangerous targets are also activated automatically.

The guard zone is the same as for ATA. For the setting procedure, refer to "Setting Guard Zone" in 3.4 BASIC OPERATION of the instruction manual.

**Reference** If an AIS target is activated but the vector is not displayed, refer to Section 5.3.5 Setting AIS Symbol Display.

<sup>\*1</sup> For activation of targets, refer to Section 5.1.2 Definitions of Symbols.

---

## 5.3.4 Deactivating AIS Targets

Deactivate an AIS target<sup>\*2</sup> and clear the display of the vector and HL.

### Attention

**The operation above is effective only for active targets.**

#### Procedures

- 1 Press the **CURSOR** button at the upper right of the radar display several times until **CANCEL** appears.

The cursor mode is set to the deactivation mode.

- 2 **Move the cross cursor mark onto the active AIS target that is to be deactivated<sup>\*2</sup>, and press [ENT] key.**

The selected AIS target will be deactivated<sup>\*2</sup>.

<sup>\*2</sup> For deactivation of targets, refer to Section 5.1.2 DEFINITIONS OF SYMBOLS.



### 5.3.5 Setting AIS Symbol Display Function (AIS Symbol Display)

Switch ON or OFF to set the AIS symbol display function.

#### Procedures

- 1 Press [ATA MENU] key.

Press [2] key.

The AIS Setting menu will appear.

- 2 Press [2] key.

The AIS Symbol Display is switched between ON and OFF.

ON: Enables the AIS symbol display function.

OFF: Disables the AIS symbol display function.

AIS Setting	
1. AIS Function	OFF
2. AIS Symbol Display	OFF
3. ATA Symbol Display	ON
4. CPA Limit	1 nm
5. TCPA Limit	1 min
6. AIS Filter Setting	>
7. Identical Distance	100 m
0. EXIT	

# 5

\* Button ② on the radar display on page 2-7 is also available for switching.

## 5.3.6 Displaying Numeric Data of AIS Targets

Display the numeric data of active AIS targets.

### Types of numeric data displayed

There are two modes (simple and detail) to display the numeric data of AIS targets. The display items are different between the two modes.

Display Item	Detail mode	Simple mode
NAME (ship name)	Up to 20 characters	
CALL SIGN	Up to 7 characters	
MMSI	Up to 9 characters	
COG (course over ground)	0.1° unit	
SOG (speed over ground)	0.1 knot unit	
CPA (closest point of approach)	0.1 nm unit	
TCPA (time to CPA)	0.1 min unit	
BRG (true bearing)	0.1° unit	Not displayed
RANGE	0.1 nm unit	
HDG (heading bearing)	0.1° unit	
ROT (course change speed)	0.1°/min	
L/L (latitude/longitude)	0.001' unit	

The detail mode displays the numeric data of only a single ship; the simple mode can display the numeric data of up to two ships.


### Displaying numeric data


#### **Procedures**

- 1 Press the **CURSOR** button at the upper right of the radar display several times until **TGT DATA** appears.

The cursor mode is set to the numeric data display mode.

- 2 Move the cross cursor mark onto the active AIS target for which numeric data is to be displayed, and press [ENT] key.

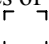The values of the selected AIS target will appear on the right side of the radar display. The mark  is displayed around the symbol.

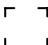**Reference:** If the values are displayed but the mark  is not on the radar display, the target is outside the radar display.




## Clearing numeric data

### Procedures

- 1 Press the **CURSOR** button at the upper right of the radar display several times until **TGT DATA** appears.


The cursor mode is set to the numeric data display mode.

- 2 Move the cross cursor mark onto the active AIS target for which numeric data is to be cleared, and press [CLR] key.

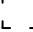
The values of the selected AIS target will be cleared from the right side of the radar display, and the mark  displayed around the symbol will also disappear.

## Selecting the detail/simple mode to display numeric data
 
### Procedures

- 1 Move the pointer to the button  at the upper right of the AIS target's numeric data display area, and press [ENT] key.
- 2 The detail mode or the simple mode is switched each time the button is clicked.

AIS ID	3
NAME	JRCMARU NO.3
CALL SIGN	JRC0003
MMSI	431999003
COG	225.3°
SOG	0.4 kts
CPA	5.3 nm
TCPA	+OVER min
BRG	98.8°
RANGE	6.6 nm
HDG	234.0°
ROT	1.1°/min
POSN	35°34.992'N 139°59.992'E



Switched each time  
the button is clicked

AIS ID	3
NAME	JRCMARU NO.3
CALL SIGN	JRC0003
MMSI	431999003
COG	225.3°
SOG	0.4 kts
CPA	5.3 nm
TCPA	+OVER min

Display sample in simple mode

---

### 5.3.7 Setting ATA Symbol Display Function (ATA Symbol Display)

Set the ATA symbol display function to ON/OFF.

This function is effective only when the AIS display function (option) is set to ON.

This function is unavailable when the AIS display function is set to OFF.

This function holds data even though the ATA display is set to OFF.

For the AIS display function, see Section 5.3.2 on page 5-45.

#### Procedures

**1 Press [ATA MENU] key.**

**Press [2] key.**

The AIS Setting menu will appear.

**2 Press [3] key.**

The ATA Symbol Display Function is switched ON or OFF.

ON Enables the ATA symbol display function.

OFF: Disables the ATA symbol display function.

AIS Setting	
1. AIS Function	<input type="text" value="OFF"/>
2. AIS Symbol Display	<input type="text" value="OFF"/>
3. ATA Symbol Display	<input type="text" value="ON"/>
4. CPA Limit	<input type="text" value="1 nm"/>
5. TCPA Limit	<input type="text" value="1 min"/>
6. AIS Filter Setting	<input type="text" value="&gt;"/>
7. Identical Distance	<input type="text" value="100 m"/>
<input type="text" value="0. EXIT"/>	

\* Button ⑰ on the radar display on page 2-7 is also available to switch between ON and OFF.



## 5.3.8 Setting AIS Filter (AIS Filter Setting)

### About an AIS filter

The setting of an AIS filter enables the priority display of AIS targets in the area. The filter is initially set in a circle having a radius of 20 [nm] from the own ship's position. If 51 or more targets exist in the filter range, they are displayed according to the priority explained in Section 5.4.11 Displaying AIS Symbols - Maximum number of targets and the display priority.

### Type of AIS filters (Filter Type)

There are the following three types of AIS filters:

- 1) RANGE .....A filter is set in a circle with a set range as the radius.
- 2) SECTOR.....A filter is set in a sector formed by two bearings with the bow as reference.
- 3) ZONE .....A filter is set in a zone formed by two bearings and two ranges with the bow as reference.

#### **Procedures**

- 1 Press [ATA MENU] key.**

**Press [2] key.**

**Press [6] key.**

The ATA Filter Setting menu will appear.

- 2 Press [1] key.**

The Filter type selection screen will appear.

- 3 Select the AIS filter type to be set, pressing the numeric key.**

The selected AIS filter type will be determined.

AIS Filter Setting	
1. Filter Type	
	RANGE
2. M	1. RANGE
	2. SECTOR
3. F	3. ZONE
	ON
4. ENT	
0. EXIT	

---

## Making an AIS filter (Make AIS Filter)

### **Procedures**

- 1 Press [2] key while the ATA Filter Setting menu is open.

The Make AIS Filter screen will appear.

#### **[I] Setting a RANGE filter**

- 2 Turn the [VRM] key control to set a filter range, and press [ENT] key.

The range of a RANGE filter will be set. AIS targets in the set circle are displayed by priority.

#### **[II] Setting a SECTOR filter**

- 2 Turn the [EBL] key control to set the bearing of the port side, and press [ENT] key.
- 3 Turn the [EBL] key control to set the bearing of the starboard, and press [ENT] key.

A SECTOR filter will be set.

AIS targets in the area formed by the two set bearings are displayed by priority.

#### **[III] Setting a ZONE filter**

- 2 Turn the [EBL] key and [VRM] key controls to set the bearing and range of the port side, and press [ENT] key.
- 3 Turn the [EBL] key and [VRM] key controls to set the bearing and range of the starboard, and press [ENT] key.

A ZONE filter will be set.

AIS targets in the area formed by the two set bearings and ranges are displayed by priority.

AIS Filter Setting

1. Filter Type

RANGE

2. Make AIS Filter

3. Filter Display

ON

0. EXIT





### Attention

**When the guard zone function is enabled, the system automatically corrects the filter range to cover the guard zone. Thus, the guard zone is always inside the filter range.**

### Setting the AIS filter display function to ON/OFF (Filter Display)

#### Procedures

- 1 Press [3] key while the ATA Filter Setting menu is open.

The setting of AIS Filter display will be switched ON or OFF.

ON: Displays the AIS filter.  
OFF: Hides the AIS filter.

AIS Filter Setting	
1. Filter Type	RANGE
2. Make AIS Filter	
3. Filter Display	ON
0. EXIT	

---

### 5.3.9 Deciding AIS Target as the Same One (Identical Distance)

#### Setting a range in which an AIS targets are regarded as the same one

An AIS target and an ATA target in the set range are regarded as the same one, and the ATA symbol is not displayed. At this time, the AIS symbol is automatically activated.

#### Attention

**To display the hidden ATA symbol, set the AIS symbol display function to OFF. (For the setting procedure, refer to Section 5.4.5)**

**Set 0 not to regard an AIS target and ATA target as the same one.**

#### Procedures

- 1 Press [ATA MENU] key.

Press [2] key.

The AIS Setting menu will appear.

- 2 Press [7] key.

The ten-key will appear.

- 3 Select the distance to be set pressing the numeric key, and press [ENT] key.

The range in which an AIS target and ATA target are regarded as the same one will be set.

AIS Setting	
1. AIS Function	<input type="text" value="OFF"/>
2. AIS Symbol Display	<input type="text" value="OFF"/>
3. ATA Symbol Display	<input type="text" value="ON"/>
4. CPA Limit	<input type="text" value="1 nm"/>
5. TCPA Limit	<input type="text" value="1 min"/>
6. AIS Filter Setting	<input type="text" value="&gt;"/>
7. Identical Distance	
<input type="text" value="0. EXIT"/>	

**CAUTION**

**When setting large values in determining the distance to the same target, the ATA target near the AIS target may be not displayed.**

**For example, when a pilot ship with AIS function, which is a small target, not ATA target, approaches to a cargo ship without ATA function, which is an ATA target, the cargo ship's ATA symbol may not be displayed.**

---

## 5.3.10 Conditions for Deciding AIS Target to be Lost

### About a lost target

When the data of an AIS target cannot be received for a specified time, the target is decided to be lost and the target data is deleted. As shown in the table below, the time until target data is deleted varies depending on the class of receive data and the target status.

#### [SOLAS ship] (Class A)

Target Status	Time until data deletion
Vessel below 3 knots and it is now at anchor or on the berth	<b>18 min</b>
Vessel of 3 knots or more and it is now at anchor or on the berth	<b>60 sec</b>
Vessel of 0 to 14 knots	<b>60 sec</b>
Vessel of 0 to 14 knots and it is now changing the course	<b>60 sec</b>
Vessel of 14 to 23 knots	<b>36 sec</b>
Vessel of 14 to 23 knots and it is now changing the course	<b>36 sec</b>
Vessel over 23 knots.	<b>12 sec</b>
Vessel over 23 knots and it is now changing the course	<b>12 sec</b>

#### [Non-SOLAS ship] (Class B)

Target Status	Time until data deletion
Vessel below 2 knots	<b>18 min</b>
Vessel of 2 to 14 knots	<b>180 sec</b>
Vessel of 14 to 23 knots	<b>90 sec</b>
Vessel over 23 knots	<b>30 sec</b>

#### Reference:

- When a dangerous target ship is lost, a lost alarm is issued and the symbol changes to a lost symbol. The system calculates the current position from the last-received data and continues displaying the symbol for a maximum of one minute. If the system cannot receive any data within one minute or the ALARM ACK switch is pressed, the symbol is cleared.
- When a safe target ship is lost, the system does not issue a lost alarm, display a lost symbol, or calculate the current position.



### 5.3.11 Displaying AIS Symbols

#### Maximum number of targets and the display priority

##### Attention

**When the system receives the data of the 51-th target ship, it displays AIS MAX TARGET at the right lower of the radar display, and issues audible alarm (beep sound of pipi).**

A radar of the JMA-5200 series displays AIS symbols for a maximum of 50 targets. When 50 AIS targets or more exist, they are displayed according to the following priority:

1. Target for which numeric data is displayed
2. Target displayed by the AIS target search function
3. Target whose CPA/TCPA is the set value or less.  
(Target for which a dangerous ship alarm has been issued)
4. Target in the AIS filter  
(Targets closer to the own ship in the filter have higher priority.)
5. Targets other than the above, which are outside the AIS filter  
(Targets closer to the own ship in the filter have higher priority.)

**5**

#### Displaying the vectors of AIS symbols

##### Attention

**If a vector is not displayed even when the AIS symbol is activated, probable causes are as follows:**

- 1. COG/SOG from the GPS has not been entered.**
- 2. The selected speed sensor is malfunctioning.**

The vector of an AIS symbol is to be displayed as a vector over water or over ground, depending on the speed sensor setting and current offset setting. The type of the currently displayed vector is confirmed in the own ship's information display area at the upper right of the radar display.

When "GROUND" is displayed to the right of OS STAB: Vector over ground

When "SEA" is displayed to the right of OS STAB: Vector over water

When the vector of an AIS symbol is displayed as a vector over water, the system has converted the AIS symbol's vector over ground to the vector over water according to the data received from the AIS and the own ship's information.

## 5.3.12 AIS Alarm Display


Alarm messages for the AIS system:

Error Message	Description
COA/TCPA	There is a dangerous target.
LOST	There is a lost target.
AIS MAX TARGET	The system received data (of the 50-th ship) over the specified maximum number of AIS symbols.
AIS (DATA)	The AIS data-format is incorrect. (Checksum error etc.)
AIS I/F (DATA)	The AIS interface is not connected to the radar correctly, or it is faulty.
AIS ALARM ***	Alarm information issued with the ALR sentence by the AIS *** is a 3-digit number which is Local Alarm No in the ALR sentence. For AIS alarms, refer to the table below.
AIS	The AIS is not connected correctly, or the power is off.

Numbers and definitions of AIS alarms which might appear on the radar display

Alarm No.	Definition
001	Transmission alarm
002	VSWR calculation result alarm
003	Receive channel 1 alarm
004	Receive channel 2 alarm
005	Receive channel 70 alarm
006	General error
008	Connection alarm between the transponder and controller
025	External EPFS connection alarm
026	The internal GPS is disabled, and latitude/longitude data has not been received from the external sensor or the data is invalid.
029	The internal GPS is disabled, and SOG data has not been received from the external sensor or the data is invalid
030	The internal GPS is disabled, and the COG command below has not been received from the external sensor or the data is invalid.
032	Course data has not been received from the external sensor, or the data is invalid.
035	ROT data has not been received from the external sensor, or the data is invalid.

**Reference:** An error message is displayed at the lower right of the radar display.

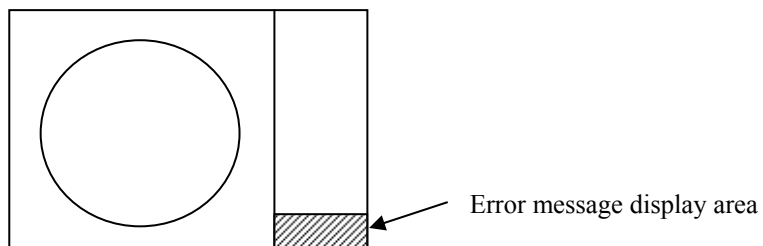



### 5.3.13 Restrictions

The following restrictions are placed on use of the AIS function:

The AIS function is unavailable in the following cases:

- “MANUAL” is selected for the speed sensor.
- SET or DRIFT is set while LOG or 2AXW is selected for the speed sensor.

LOG or 2AXW cannot be selected for the speed sensor in the following case:

- SET or DRIFT is set while the AIS function is on.

MANUAL cannot be selected for the speed sensor in the following case:

- The AIS function is on.


Current offset (SET/DRIFT) cannot be turned on in the following case:

- LOG or 2AXW is selected for the speed sensor while the AIS function is on.





# SECTION 6 TRUE AND FALSE ECHOES ON DISPLAY

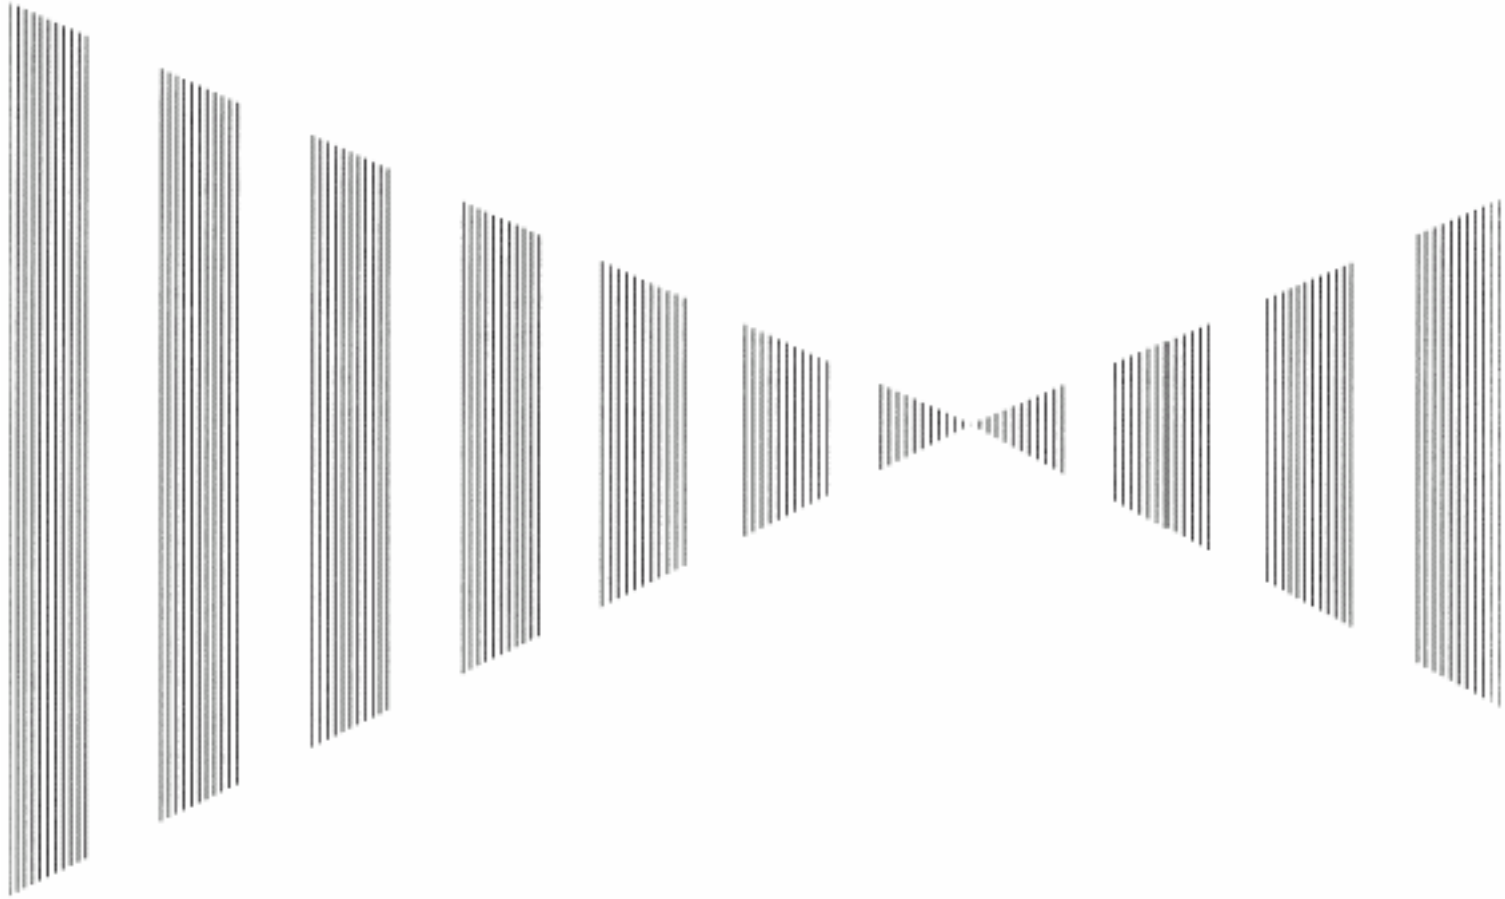

6.1	Radar Wave with the Horizon.....	6-2
6.2	Strength of Reflection from the Targets...	6-4
6.3	Sea Clutters .....	6-5
6.4	False Echoes .....	6-6
6.5	Display of Radar Transponder (SART).....	6-9

---

The radar operator has a role of interpreting the radar displays to provide his best aid in maneuvering the ship. For this purpose, the operator has to observe the radar displays after fully understanding the advantages and disadvantages that the radar has. For better interpretation of radar display, it is important to gain more experiences by operating the radar equipment in fair weathers and comparing the target ships watched with the naked eyes and their echoes on the radar display.

The radar is mainly used to monitor the courses of own ship and other ships in open seas, to check buoys and other nautical marks when entering a port, to measure own ship's position in the coastal waters relative to the bearings and ranges of the shore or islands using a chart, and to monitor the position and movement of a heavy rain if it appears on the radar display.

Various types of radar display will be explained below.



# 6.1 RADAR WAVE WITH THE HORIZON


Radar beam radiation has the nature of propagating nearly along the curved surface of the earth. The propagation varies with the property of the air layer through which the radar beam propagates. In the normal propagation, the distance (D) of the radar wave to the horizon is approximately 10% longer than the distance to the optical horizon. The distance (D) is given by the following formula:


$$D = 2.23(\sqrt{h_1} + \sqrt{h_2}) \text{ (nm)}$$

h1: Height (m) of radar scanner above sea level

h2: Height (m) of a target above sea level

Figure 6.1 is a diagram for determining the maximum detection range of a target that is limited by the curve of the earth surface in the normal propagation.

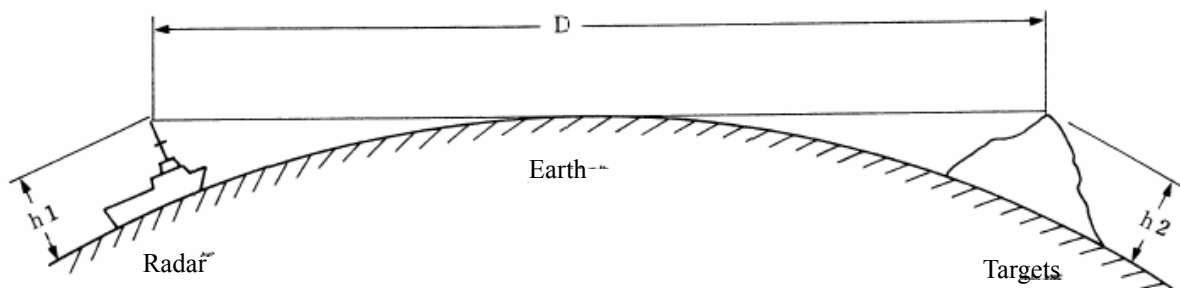

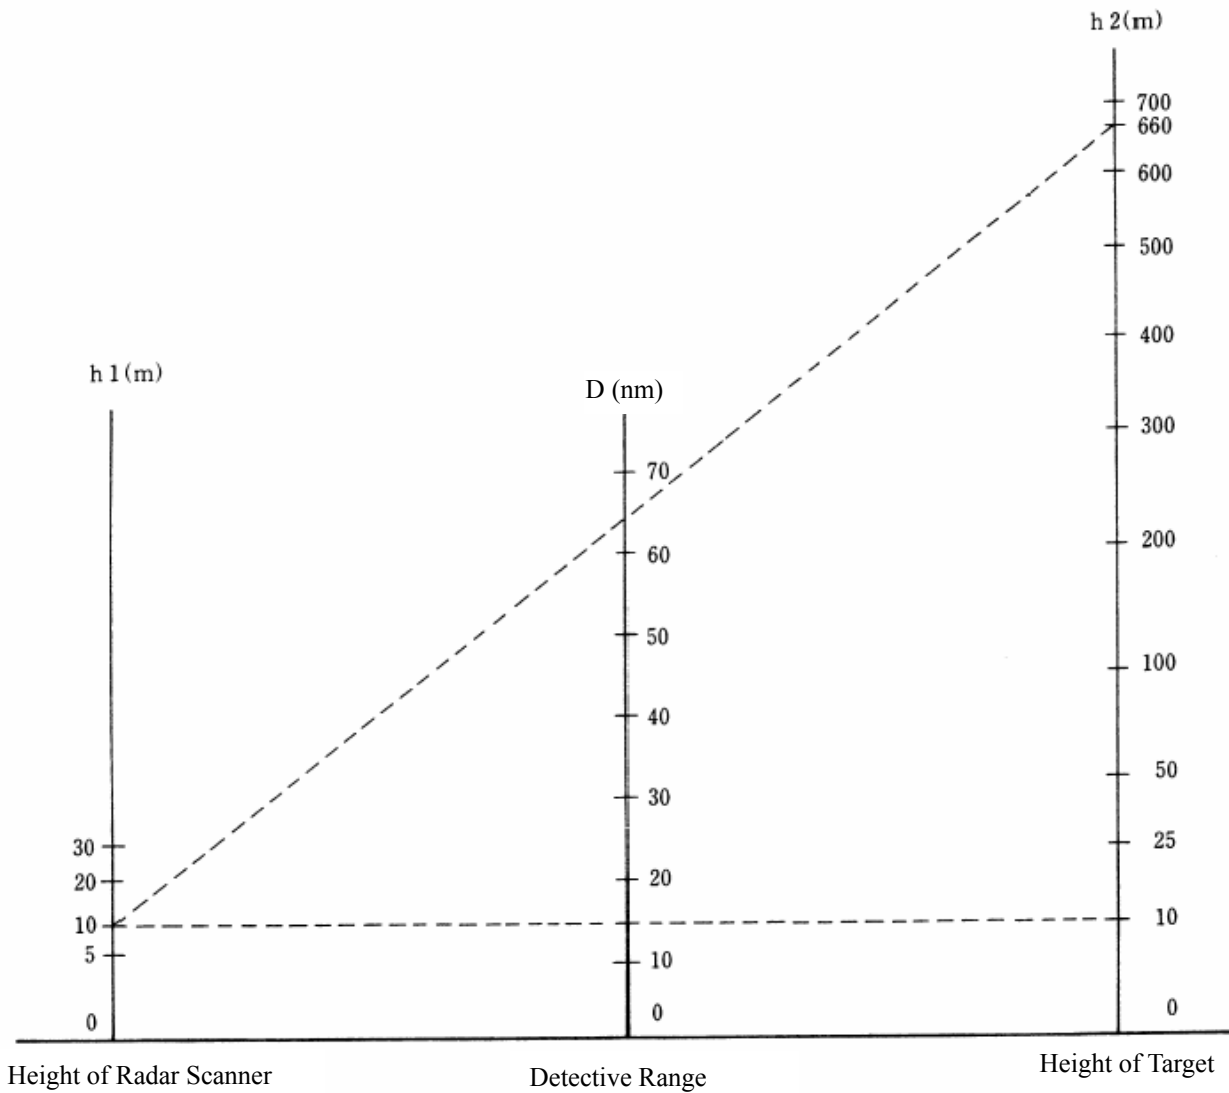

**Figure 6.1**

When the height of own ship's scanner is 10 m for instance,


- (a) A target that can be detected at the radar range of 64 nm on the radar display is required to have a height of 660 m or more.
- (b) If the height of a target is 10 m, the radar range has to be approx. 15 nm. However, the maximum radar range at which a target can be detected on the radar display depends upon the size of the target and the weather conditions, that is, the radar range may increase or decrease depending upon those conditions.



## 6.2 STRENGTH OF REFLECTION FROM THE TARGET

The signal intensity reflected from a target depends not only on the height and size of the target but also on its material and shape. The echo intensity from a higher and larger target is not always higher in general. In particular, the echo from a coast line is affected by the geographic conditions of the coast. If the coast has a very gentle slope, the echo from a mountain of the inland appears on the radar display. Therefore, the distance to the coast line should be measured carefully.

Mountain displayed on the radar display

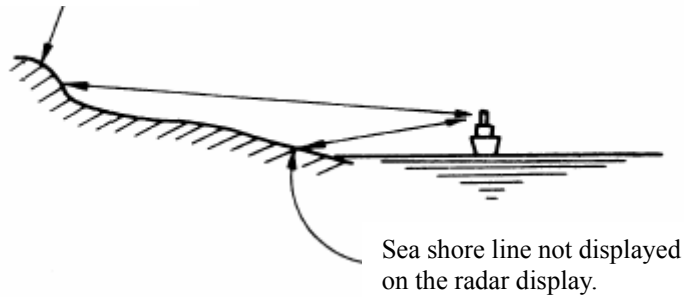

Sea shore line not displayed on the radar display.

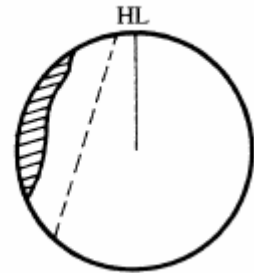


Figure 6.2

---

## **6.3** SEA CLUTTERS

When the sea surface ruffles, bright echo returns spread around the center of the radar display.  
The higher the waves are, the echo returns are larger.  
Swirling currents may appear as a smooth line like a coastal line.



## 6.4 FALSE ECHOES

The radar observer may be embarrassed with some echoes that do not exist actually. These false echoes appear by the following causes that are well known:

### [I] Shadow

When the radar scanner is installed near a funnel or mast, the echo of a target that exists in the direction of the funnel or mast cannot appear on the radar display because the radar beam is reflected on the funnel or mast. Whether there are some false echoes due to shadows can be checked monitoring the sea clutter returns, in which there may be a part of weak or no returns.

Such shadows appear always in the same directions, which the operator should have in mind in radar operation.

### [II] Side Lobe Effect

A broken-line circular arc may appear at the same range as the main lobe of the radar beam on the radar display. This type of false echo can easily be discriminated when a target echo appears isolated. (See Figure 6.3)



Figure 6.3

### [III] False Echo by Secondary Reflection

When a target exists near own ship, two echoes from the single target may appear on the radar display. One of those echoes is the direct echo return from the target and the other is the secondary reflection return from a mast or funnel that stands in the same direction as shown in Figure 6.4.

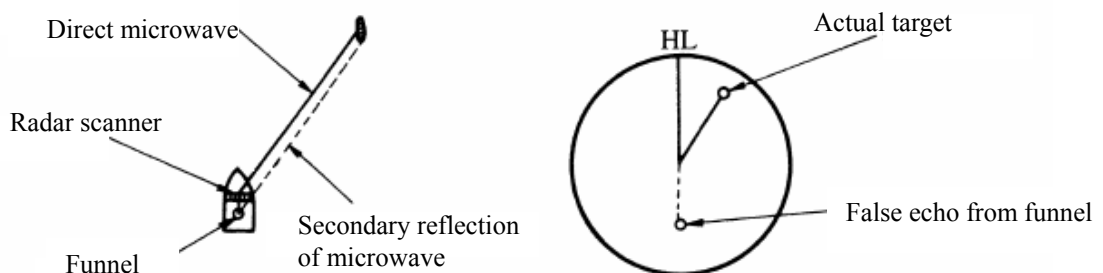


Figure 6.4

---

#### [IV] False Echo by Multiple Reflection

When there is a large structure or ship with a high vertical surface near own ship as shown in Figure 6.5, multiple reflection returns may appear on the radar display. These echoes appear in the same intervals, of which the nearest echo is the true echo of the target.

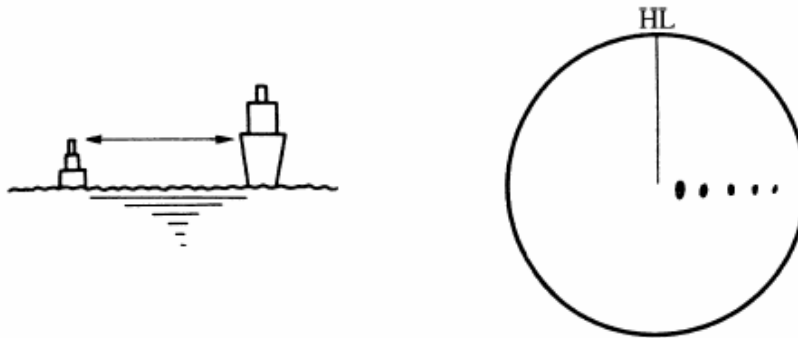


Figure 6.5

#### [V] Abnormal Propagation

The maximum radar detection range depends upon the height of the scanner and the height of a target as described in the section of “The Horizon for Radar Beam Radiation”. If a so-called “duct” occurs on the sea surface due to a certain weather condition, however, the radar beam may propagate to an abnormally long distance, at which a target may be detected by the radar.

For instance, assuming that the radar range is 6 NM (on the repetition frequency of 1100 Hz), the first pulse is reflected from a target at about 76 NM or more and received during the next pulse repetition time. In this case, a false echo appears at a position that is about 76 NM shorter than the actual distance.

If the false echo appears at 5 NM on the radar display, the true distance of the target is  $5+76=81$  NM. On the radar range scale of 1.5 NM (on the repetition frequency of 1900 Hz), a false echo may appear at a position that is about 43 NM shorter than the actual distance.

This type of false echo can be discriminated by changing over the range scale (the repetition frequency), because the distance of the target changes accordingly.





## [VI] Radar Interference

When another radar equipment using the same frequency band as that on own ship is near own ship, a radar interference pattern may appear on the radar display. This interference pattern consists of a number of spots which appear in various forms. In many cases, these spots do not always appear at the same places, so that they can be discriminated from the target echoes. (See Figure 6.6)

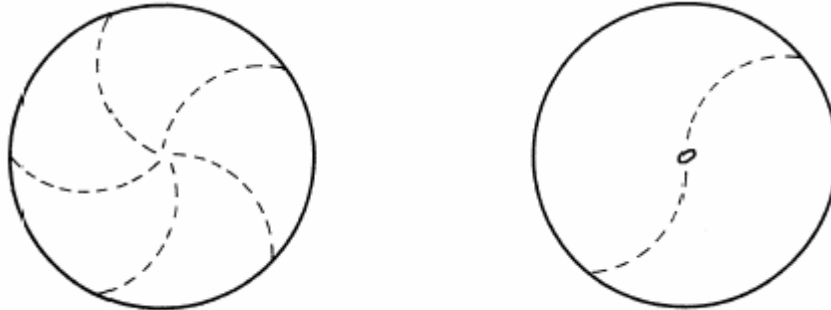


Figure 6.6

If radar equipment causing an interference pattern and this radar are of the same model, their transmitting repetition frequency is nearly the same. As a result, interference patterns may be displayed concentrically.

In this case, the interference patterns cannot be eliminated by using only the interference reflector function, so press **[TX/PRF]** several times to fine-tune the transmitting repetition frequency.

An interference suppressing effect can be heightened by applying a different transmitting repetition frequency to the interference pattern source radar and this radar.

---

# 6.5 DISPLAY OF RADAR TRANSPONDER (SART)

The SART (Search and rescue Radar Transponder) is a survival device authorized by the GMDSS (Global Maritime Distress and Safety System), which is used for locating survivors in case that a distress accident occurs at sea. The SART is designed to operate in the 9 GHz frequency band.

When receiving the 9 GHz radar signal (interrogating signal) transmitted from the radar equipment on a rescue ship or search aircraft, the SART transmit a series of response signals to inform the distress position to the rescue and search party.

\* This radar provides a shortcut item to make settings for SART signal reception. Execution of this item automatically switches to the setting for SART reception.

### Procedures


**1 Press [RANGE +] or [RANGE -] to set the radar range to 6 NM or 12 NM.**

**2 Press [RADAR MENU].**

The Main Menu will appear.


**3 Press [5].**

Each time the key is pressed, switching between ON and OFF takes place.

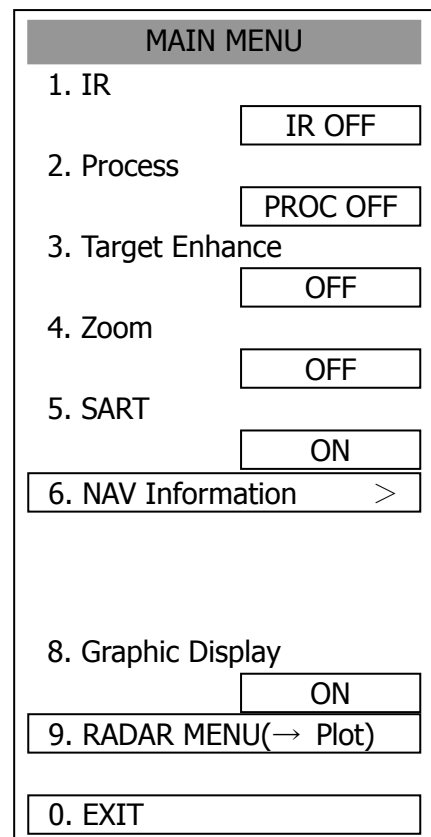

With the SART display mode set to ON, settings as shown below are made automatically.

- |  |                                      |
|--|--------------------------------------|
| (1) Sea clutter control:                             | Minimum (Most counterclockwise)      |
| (2) AUTO SEA function:                               | OFF                                  |
| (3) Rain and Snow Clutter Control (RAIN):            | minimum                              |
| (4) Auto Rain and Snow Clutter function (AUTO RAIN): | OFF                                  |
| (5) TUNE control:                                    | No tuning (to weaken clutter echoes) |
| (6) Interference rejector (IR):                      | OFF                                  |
| (7) PROCESS:   | OFF                                  |

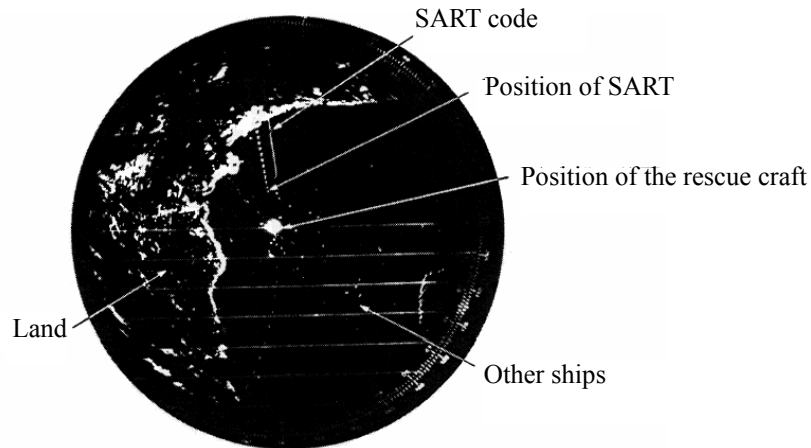

[Example of Display]


### Attention

- When the SART function is set to ON to detect the SART signal, small targets around own ship will disappear from the radar display. So it is necessary to exercise full surveillance over the conditions around own ship by visual watch in order to avoid any collision or stranding. If two or more sets of radar equipment are installed on own ship, use one set of 9 GHz band radar for detection of the SART signal and operate others as normal radars for avoiding collision, monitoring targets around own ship, and checking on own ship's position and avoidance of stranding.**

**After end of detecting the SART signal, turn the SART display off. Then the radar returns normally to the nautical mode.**



# SECTION 7 MAINTENANCE

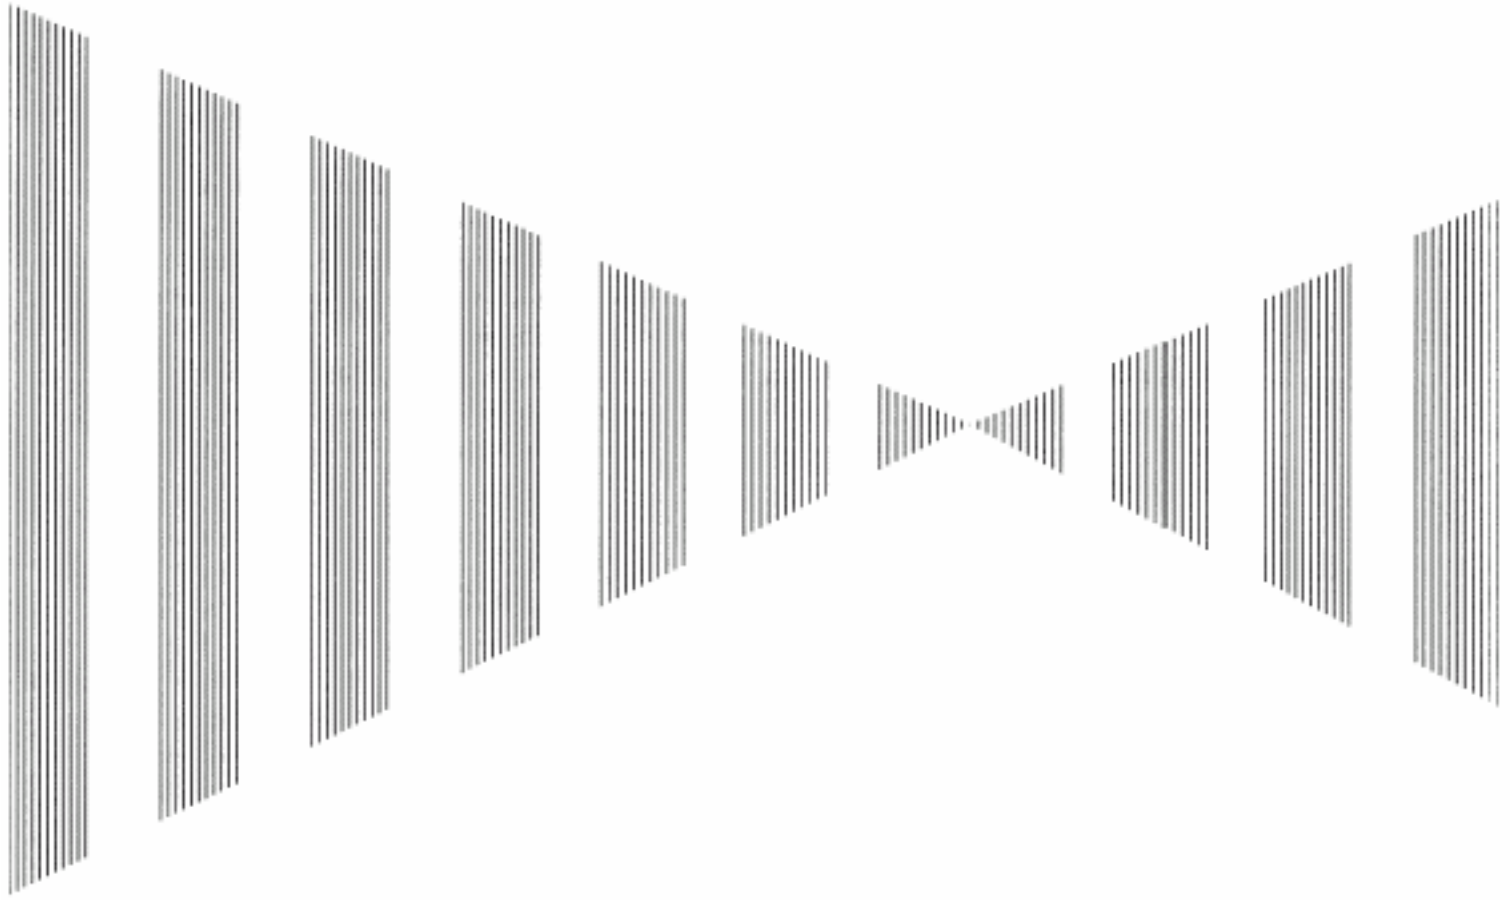

<b>7.1</b>	<b>Routine Maintenance .....</b>	<b>7-1</b>
<b>7.2</b>	<b>Maintenance on each Unit.....</b>	<b>7-2</b>
	<b>Scanner Unit NKE-2062/2102/2252 .....</b>	<b>7-2</b>
	<b>Display Unit NCD-4340 .....</b>	<b>7-7</b>

---

## **7.1** ROUTINE MAINTENANCE



### **WARNING**



**Never carry out internal inspection or repair work of the equipment by users.**

**Inspection or repair work by unauthorized personnel may result in fire hazard or electric shock.**

**Ask the nearest branch, business office or a dealer for inspection and repair.**



**Turn off the main power before maintenance work. Otherwise, an electric shock may result.**



**Turn off the main power before cleaning the equipment. Especially, make sure to turn off the indicator if a rectifier is used. Otherwise, equipment failure, or death or serious injury due to electric shock may result, because voltage is outputted from the rectifier even when the radar is not operating.**

For operating the radar equipment in the good conditions, it is necessary to make the maintenance work as described below. If maintenance is made properly, troubles will reduce. It is recommended to make regular maintenance work.

Common points of maintenance for each unit are as follow:

Clean the equipment.

Remove the dust, dirt, and sea water rest on the equipment cabinet with a piece of dry cloth. Especially, clean the air vents with a brush for good ventilation.

# 7.2 MAINTENANCE ON EACH UNIT

Scanner Unit NKE-2062/2102/2252



## WARNING



Turn off the main power source before starting maintenance.

Otherwise, an electric shock or injury may be caused.



Turn off the main power if you need to be near the scanner unit for maintenance or inspection purposes. Direct exposure to electromagnetic waves at close range in death or serious injury.



Set the safety switch for stopping the scanner unit to the OFF position.

Otherwise, an accidental contact with the rotating scanner unit may cause injury.



## CAUTION



**Do not put watches, clocks, or magnetic cards close to the modulator unit since this unit holds magnetrons having strong magnetic force. Failure or data destruction of the above devices may result.**

After finishing the maintenance work, reset the safety switch to the ON position.


### Precautions in Mounting the Cover

When the cover is removed for regular checkup and replacement of parts and refitted after such work, the procedures of fastening bolts shall be taken with the following precautions:


- (a) The proper fastening torque of the fitting bolts (M8) is 1176 to 1470 N•cm (120 to 150kgf•cm) (which makes the inside water-tight and protects the packings against permanent compressive strain).  
The packings start producing from the cover at a torque of approximately 1470N•cm (150kgf•cm).  
Do not fasten the bolts with a torque exceeding the specified value. Otherwise, the screws may be broken.
- (b) Use an offset wrench of 11 mm × 13 mm or a double-ended wrench of 13 mm × 17 mm (not longer than 200 mm).
- (c) Screw all the bolts by hand first to prevent them playing, then fasten them evenly in order not to cause one-sided fastening. (Fasten the bolts with 25% of the required torque at the first step.)

\*: Fasten the bolts in the diagonal order.



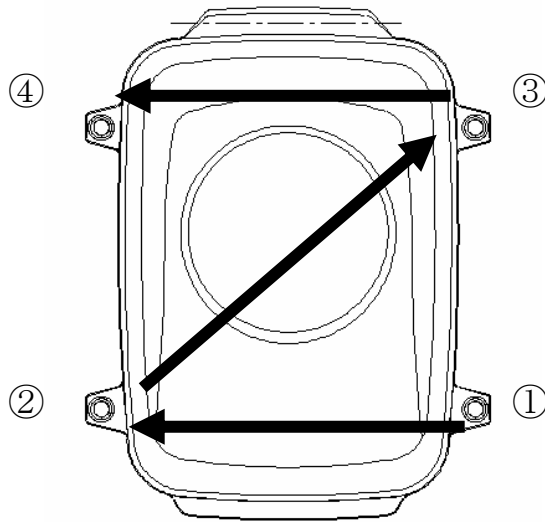

**Top View of NKE-2062/2102  
Bolt Tightening Procedure of NKE-2062/2102 Cover**

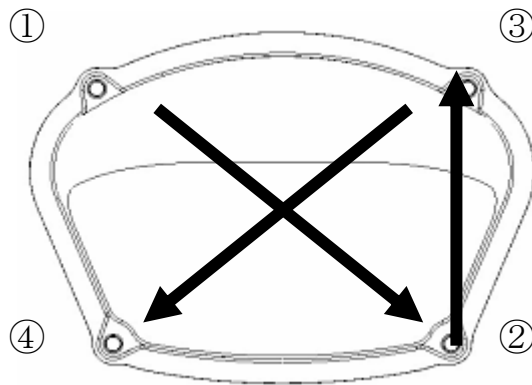

**Side View of NKE-2252  
Bolt Tightening Procedure of NKE-2252 Cover**

---

(1) Radiator

Attention

- **If the radiator front face (radiation plane) is soiled with smoke, salt, dust, paint or birds' droppings, wipe it with a piece of soft cloth wetted with alcohol or water and try to keep it clean at all times. Otherwise, radar beam radiation may attenuate or reflect on it, resulting in deterioration of radar performance.**
- **Never use solvents of gasoline, benzine, trichloroethylene and ketone for cleaning. Otherwise, the radiation plane may deteriorate.**

Check up and clean the radiator.

(2) Rotating section

(a) Supply Oil Seal

When there is not a grease nipple, the replenishment of grease oil is unnecessary.

Remove the cap on the grease nipple located on the side of the X band radar, and grease with a grease gun.

Make the oiling every six months. The oil quantity shall be approximately 100 g, which is as much as the grease comes out of the oil seal. Use the grease of Mobilux 2 of Mobil Oil.

(b) Oiling gears

Apply grease evenly to the tooth surfaces of the main shaft drive gear and the encoder drive gear with a spreader or brush. Oiling in short intervals is more effective to prevent the gears from wear and tear and extend their service life, but oil at least every six months.

Use Mobilux2 of Mobile Oil.

(c) Mounting legs

Check the mounting legs and mounting bolts of the scanner unit case for corrosion at intervals and maintain them to prevent danger. Apply paint to them once a half year because painting is the best measure against corrosion.

---

**Display Unit NCD-4340**




**WARNING**



**When cleaning the screen, do not wipe it too strongly with a dry cloth. Also, do not use gasoline or thinner to clean the screen. Otherwise the screen surface may be damaged.**

Dust accumulated on the screen will reduce clarity and darken the video. For cleaning it, wipe it with a piece of soft cloth (flannel or cotton). Do not wipe it strongly with a piece of dry cloth nor use gasoline or thinner.

# SECTION 8 TROUBLE SHOOTING AND ADJUSTMENT

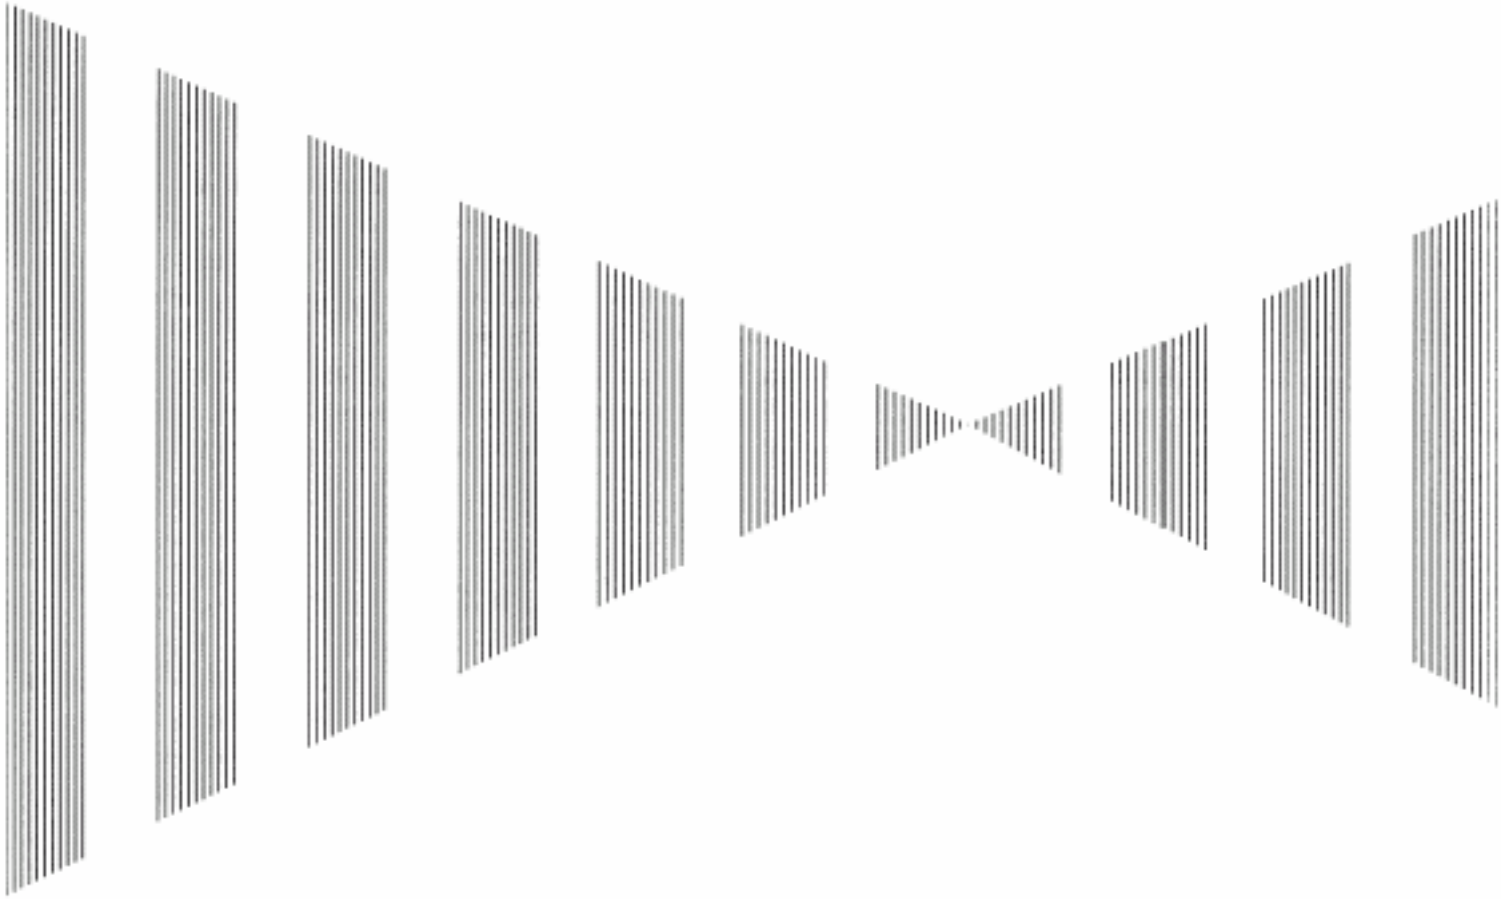

8.1	Performance Check.....	8-1
8.2	Fault Finding.....	8-20
8.3	Trouble Shooting.....	8-21
8.4	Replacement of Major Parts .....	8-26
8.5	Adjustments.....	8-34
8.6	Setting .....	8-69

# 8.1

## PERFORMANCE CHECK

Make operational check on the radar equipment regularly and if any problem is found, investigate it immediately. Pay special attention to the high voltage sections in checking and take full care that no trouble is caused by any error or carelessness in measurement. Take note of the results of checking, which can be used effectively in the next check work.

Operational check shall be made in accordance with Table 8-1 Function Check List in the order as specified in it.

**Table 8-1 Check List**

Equipment	Item to be checked	Criteria	Remarks
Transmitter-receiver Unit	Tuning LED of Receiver	The LED is lighting during operation	48NM range
Display Unit	Video and echoes on the screen Sensitivity LCD brilliance can be controlled correctly Various markers Various numerical indications Lighting	Can be correctly controlled	
	Safety Switch Various Currents and Voltages	See 8-5.	
	Communications Lines	See 8-6.	
	Memory	See 8-4.	
	Panel	See 8-8, -9, -10, -11.	
	Monitor	See 8-7.	
	ATA	See 5-37.	
	Magnetron current	See 8-18.	
	Performance Monitor	See 8-12.	
	Error Logging Display	See 8-13.	
	System Information Display	See 8-17.	

## Check Performance on Test Menu

The performance status of this radar equipment can be checked on the TEST Menu.

<b>Self Test</b>	[I] Self-diagnostic function
<b>Monitor Test</b>	[II] Monitor check
<b>Keyboard Test</b>	[III] Operation panel check
<b>PM Display</b>	[IV] Performance monitor
<b>Error Logging</b>	[V] Error log display
<b>System INFO</b>	[VI] System information display
<b>MAGI</b>	[VII] Indication of magnetron current

\* Execution of PM Display requires a PM unit.

### Procedures

- 1 Press [RADAR MENU] key twice.

Press [8] key.

Press [9] key.

The TEST Menu will appear.

\* Button  on the radar display on page 2-7 is also available.

- 2 Select the check item you want to check, pressing the numeric keys [1] to [6] on Test Menu.

The list of check items will appear.

### Exit

- 1 Press [RADAR MENU] key.

The TEST Menu will be closed.

Test Menu

1. Self Test

2. Monitor Test

3. Keyboard Test

4. PM Display ON

5. Error Logging

6. System INFO

MAGI

0. EXIT

**[1] Self-diagnosis function**

Check of Memory, Scanner Unit, and Communications Lines

<b>Memory Test</b>	1) Memory check
<b>Sensor Test</b>	2) Antenna check
<b>Line Test</b>	3) Communication line check

**Procedures**      **1 Press [1] key while the Test Menu is open.**


The SELF TEST Menu will appear.

**2 Select the item you want to check, pressing numeric keys [1] to [3] .**

The SELF CHECK Menu will appear.

**Exit**                      **1 Press [RADAR MENU] key.**

The Self Test Menu will be closed.

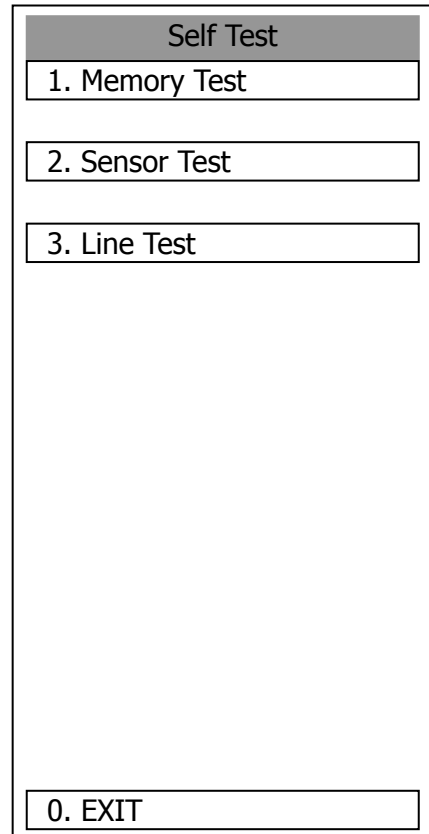



**1) Memory Test**

Checks for the performance of built-in memory.


<b>SDRAM</b>	SDRAM check
<b>SRAM</b>	SRAM check
<b>FLASH ROM</b>	Flash ROM check
<b>GRAPHIC</b>	Graphic check

**Procedures**

- Press [1] key while the Self Test menu is open.**  
The Memory Test Menu will appear.
- Select the item you want to check, pressing numeric keys [1] to [4].**  
When no abnormality is found, OK is displayed.  
When an abnormality is found, NG is displayed.

**Exit**

- Press [RADAR MENU] key.**  
The menu will be closed.

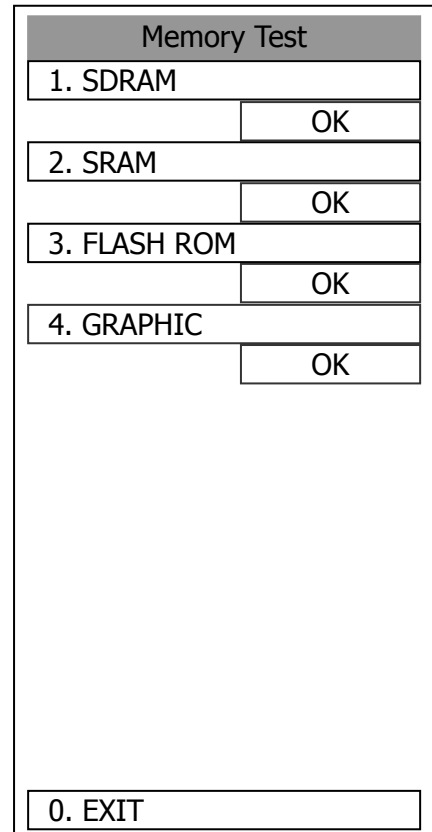

## 2) Sensor Test

Checks for signals from the antenna.

<b>Safety Switch</b>	Antenna's safety switch check
<b>AZI Pulse</b>	Antenna rotation signal check
<b>HL Pulse</b>	Heading line signal check
<b>MH Current</b>	Check on the load current of high voltage in the modulator
<b>Trigger</b>	Radar trigger signal check
<b>Video</b>	Radar video check

### Procedures

- 1 Press [2] key while the Self Test menu is open.

The Sensor Test menu will appear.  
 When no abnormality is found, OK is displayed.  
 When an abnormality is found, NG is displayed.  
 In standby, \*\* will appear.

### Exit

- 1 Press [RADAR MENU] key.

The menu will be closed.

Sensor Test	
※ Safety Switch	OK
※ AZI Pulse	OK
※ HL Pulse	OK
※ MH Current	OK
※ Trigger	OK
※ Video	OK
0. EXIT	

**3) Check of Communication Lines**

Check the status of communications with options.

<b>MTR</b>
<b>SIG.PROC</b>
<b>ATA</b>
<b>NSK</b>
<b>GPS Compass</b>
<b>COM1</b>
<b>COM2</b>
<b>COM3</b>
<b>COM4</b>
<b>Plotter Key</b>

Check on connection with the transmitter-receiver  
 Check on connection with the signal processing circuit  
 Check on connection with the ATA processing circuit  
 Check on connection with the NSK unit  
 Check on connection with the GPS compass  
 Check on connection with COM1  
 Check on connection with COM2  
 Check on connection with COM3  
 Check on connection with COM4  
 Check on connection with Plotter Key.

**Procedures**

- 1 Press [3] key with the Self Test menu open.

The Line Test menu will appear.  
 When no abnormality is found, OK is displayed.  
 When an abnormality is found, NG is displayed.

The status display field of equipment not connected is left blank.

**Exit**

- 1 Press [RADAR MENU] key.

The menu will be closed.

Line Test	
* MTR	OK
* SIG.PROC	OK
* ATA	OK
* NSK	OK
* GPS Compass	OK
* COM1	OK
* COM2	OK
* COM3	OK
* COM4	OK
* Plotter Key	OK
0. EXIT	

---

## [II] **Monitor Test**

Checks for the monitor.

### **Procedures**

- 1 Press [2] key while the Test Menu is open.**

The Monitor Test Menu will appear.

- 2 Select the item number you want to display, pressing numeric keys [1] to [5] of the test pattern.**

The selected test pattern will be displayed.

Pattern 1: All colors are filled with white.

Pattern 2: A white box is displayed on the black background of 1024 × 768 dots.

Pattern 3: Displays rectangle × 2, circle × 2, and cross-shape × 13 (white lines on the black background).

Pattern 4: Displays “H” of 9 dots × 9 dots on the entire screen (white character on the black background).

Pattern 5: Gray scale display (16 levels)

Pattern 6: Displays a color bar.

- 3 To return to the original display, press any key.**

If errors occur in the monitor, no test pattern will appear.

Monitor Test
1. Pattern 1
2. Pattern 2
3. Pattern 3
4. Pattern 4
5. Pattern 5
0. EXIT

### **Exit**

- 1 Press [RADAR MENU] key.**

The menu will be closed.

**[III] Operation Panel Test**

Checks for the controls and switches of the operation panel.

<b>Key Test</b>	1) Key check
<b>Buzzer Test</b>	2) Buzzer check
<b>Light</b>	3) Keyboard light check

**Procedures**

- 1 Press [3] key while the Test Menu is open.**

The Keyboard Test Menu will appear.

- 2 Select the item number you want to check, pressing numeric keys [1] to [3] of the item.**

The check contents will be displayed.

**Exit**

- 1 Press [RADAR MENU] key.**

The menu will be closed.

**Keyboard Test**

1. Key Test

2. Buzzer Test

3. Light

0. EXIT

---

## 1) Key Check

Checks for the controls and switches of the operation panel.

### **Procedures**

- 1 **Press [1] key while the Keyboard Test menu is open.**

The operation panel image will appear at the upper left of the display.

Each key on the operation panel on the display is shown in reverse video at the same time the key is pressed, and the name of the pressed key is displayed.

- 2 **To return to the normal display, move the cursor onto “EXIT” on the left side of the display, and press [ENT] key.**

### **Exit**

- 1 **Press [0] key.**

The menu will be closed.

The diagram shows a vertical rectangular menu titled "Keyboard Test" at the top. Below the title are three menu items, each in a separate box: "1. Key Test", "2. Buzzer Test", and "3. Light". At the bottom of the menu is a box labeled "0. EXIT".

## 2) Buzzer Test

Checks for the operation panel buzzer.

### Procedures

- 1 Press [2] key while the Keyboard Test menu is open.

The buzzer will sound.

- 2 The buzzer will sound for a given length of time.

### Exit

- 1 Press [RADAR MENU] key.

The menu will be closed.

Keyboard Test
1. Key Test
2. Buzzer Test
3. Light
0. EXIT

---

### 3) Light

Checks for the operation panel light.

#### **Procedures**

- 1 Press [3] key while the Keyboard Test menu is open.

The brightness of the operation panel is gradually intensified at four levels.

#### **Exit**

- 1 Press [RADAR MENU] key.

The menu will be closed.

Keyboard Test
1. Key Test
2. Buzzer Test
3. Light
0. EXIT



**[IV] PM Display**

Displays the bar indicating the performance monitor status.

\* Execution of this item needs a PM unit.

**Procedures**

- 1 Press [4] key while the Test Menu is open, and set PM Display to ON.


The PM bar will appear under the MAGI bar.

The setting of PM Display is switched back and forth between ON and OFF each time [4] is pressed.

**Exit**

- 1 Press [RADAR MENU] key.

The menu will be closed.

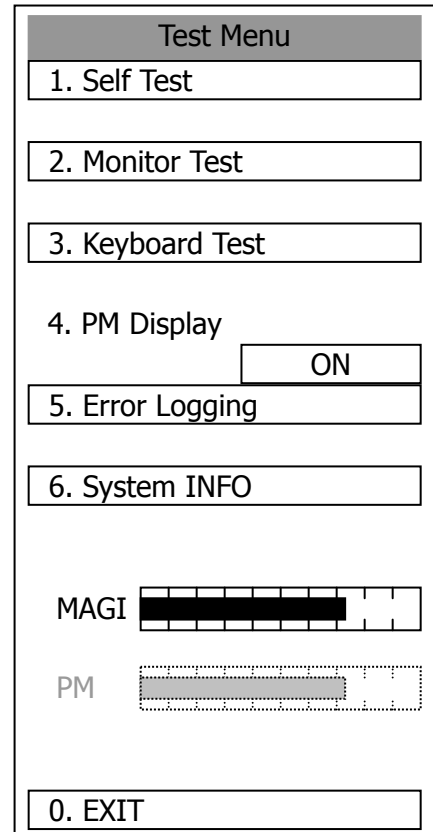

---

## [V] Error Logging

When a system error occurs, this function shows the error communication line in reverse video. Errors that have been reset are also displayed in time series.

### **Procedures**

- 1 **Press [5] key while the Test Menu is open.**

The Error Logging Menu will appear.

- 2 **Error logs will be displayed in the dotted area in the figure at right.**


For the display contents, refer to Table 8-2.

Press [1] key to clear all the error logs.

### **Exit**

- 1 **Press [RADAR MENU] key.**

The menu will be closed.

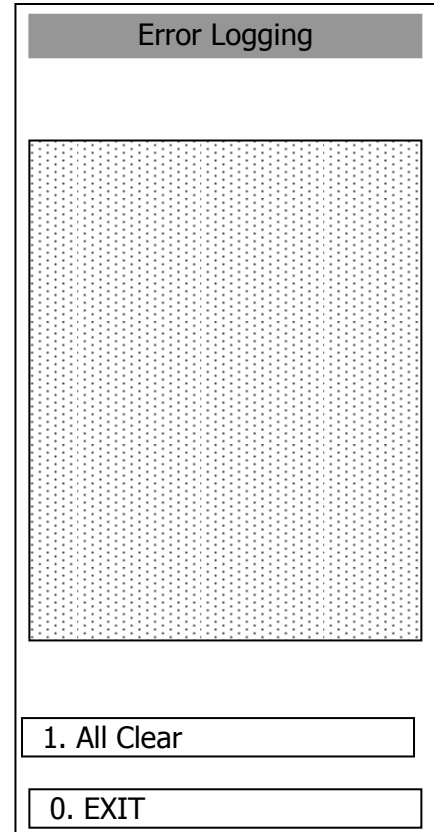

**Table 8-2 List of System Error Message (1)**

TRX(SSW OFF)	Scanner: Safety switch OFF
TRX(AZI)	Scanner: BP error
TRX(HL)	Scanner: HL error
TRX(MHV)	Scanner: Modulator's high voltage alarm
TRX	Scanner: No communication
TRX(DATA)	Scanner: Communication software version mismatched, checksum error, or collision
TRX(HEATER)	Scanner: Magnetron heater voltage alarm
TRX(REVERSE)	Scanner: Reverse rotation
TRX(VIDEO)	Scanner: VIDEO error
TRX(TRIGGER)	Scanner: TRIGGER error
TRX(FAN 1)	Scanner: FAN 1 alarm
TRX(FAN 2)	Scanner: FAN 2 alarm
TRX(STAB0)	Stabilizer error
TRX(STAB1)	Stabilizer error
TRX(STAB2)	Stabilizer error
TRX(STAB3)	Stabilizer error
TRX(STAB4)	Stabilizer error
TRX(STAB5)	Stabilizer error
TRX(STAB6)	Stabilizer error
TRX(STAB7)	Stabilizer error
TRX(STAB8)	Stabilizer error
TRX(STAB9)	Stabilizer error
TRX(STAB10)	Stabilizer error
TRX(STAB11)	Stabilizer error
TRX(STAB12)	Stabilizer error
TRX(STAB13)	Stabilizer error
TRX(STAB14)	Stabilizer error
TRX(STAB15)	Stabilizer error
TRX(HEATER SUB)	Scanner: Magnetron heater voltage alarm (non-selected side of 2 frequencies)
TRX(MHV SUB)	Scanner: Modulator's high voltage alarm (non-selected side of 2 frequencies)
TRX(MOTOR)	Scanner: Motor current alarm
PANEL	Operation PANEL: Communication error
PANEL(DATA)	Operation PANEL: Checksum error
PANEL2	Operation PANEL2: Communication error
PANEL2(DATA)	Operation PANEL2: Checksum error
NSK	NSK: No communication
NSK(GYRO)	NSK: GYRO error (error bit detected)
LOG	NSK: Logging error (error bit detected)
ISW	ISW: No communication
ISW(DATA)	ISW: Data inconsistency, or checksum error


**Table 8-3 List of System Error Message (2)**

DLOG	2-axis log: No communication
DLOG(DATA)	2-axis log: Data error
GPS	GPS: No communication
GPS(DATA)	GPS: Data error
GPS(STATUS)	GPS: Status error
PROC(BOOT)	Signal processing unit: Boot error
PROC(INT)	Signal processing unit: Interrupt error
PROC(AZI)	Signal processing unit: BP error
PROC(HL)	Signal processing unit: HL error
ATA(BOOT)	ATA: Boot error
ASIC(INT)	Error during interrupt to ASIC1
ASIC1 to RADAR	Error during interrupt from ASIC1 to RADAR DSP
RADAR to ASIC2	Error during interrupt from RADAR DSP to ASIC2
ASIC1 to ATA	Error during interrupt from ASIC1 to ATA DSP
ATA to ASIC2	Error during interrupt from ATA DSP to ASIC2
ASIC to LOCAL CPU	Error during interrupt from ASIC1 to LOCAL CPU
PROC(VIDEO)	VIDEO error
PROC(TRIGGER)	Trigger error
AIS	AIS: No communication
AIS(DATA)	AIS: Communication error
AIS I/F	AIS I/F: No communication
AIS I/F(DATA)	AIS I/F: Communication error
AIS ALARM ***	AIS alarm (Up to 10 alarm messages can be displayed.)
COM1	COM1 port alarm
COM2	COM2 port alarm
COM3	COM3 port alarm

**Table 8-4 List of System Error Message (3)**

COM4	COM4 port alarm
HEADING	Heading data: No communication
HEADING(DATA)	Heading data: Data error
DEPTH	Water depth: No communication
DEPTH(DATA)	Water depth: Data error
TEMP	Water temperature: No communication
TEMP(DATA)	Water temperature: Data error
WIND	Wind direction/velocity: No communication
WIND(DATA)	Wind direction/velocity: Data error
CURRENT	Tidal current: No communication
CURRENT(DATA)	Tidal current: Data error

**Reference:** An error message and a warning will appear at the lower right of the radar display.

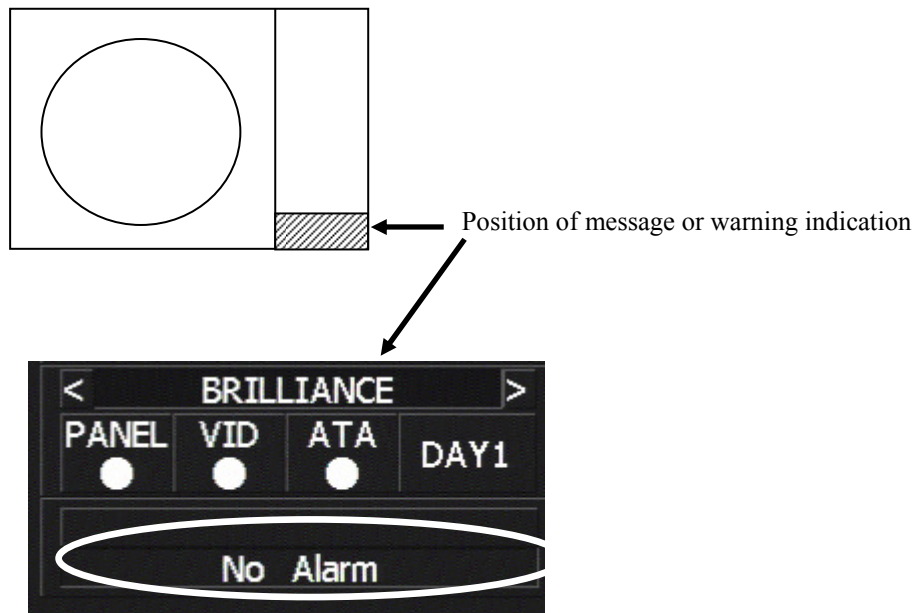

**[VI] System INFO**

Displays the current system information.


<b>Indicator</b>	Processor software version information
<b>MTR</b>	Scanner software version information
<b>System No.</b>	System number
<b>TX Time</b>	Total transmitting time (Total time during which radar was transmitted)
<b>Total Time</b>	Total operating time (Total power-on time)

**Procedures**      1 **Press [6] key while the Test Menu is open.**

The System INFO Menu will appear.

**Exit**                1 **Press [RADAR MENU] key.**

The menu will be closed.

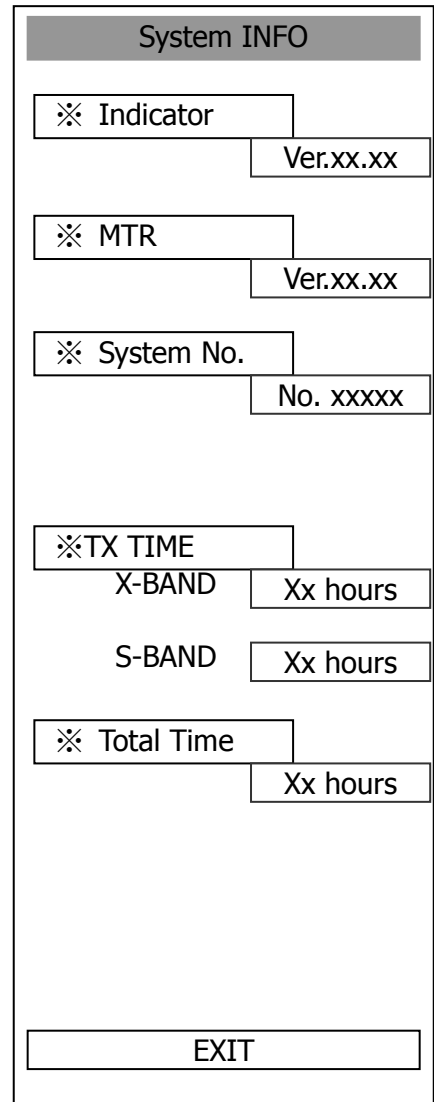

**[VII] MAGI**

Displays the MAGI bar indicating the magnetron current to check.

**Procedures**


- 1 Check if the MAGI bar in the Test Menu reads the value below in a range of 24 NM.

4.9kW: 4 to 5 scale marks  
 10 kW: 4 to 5 scale marks  
 25 kW: 5 to 8 scale marks

**Exit**

- 1 Press [RADAR MENU] key.

The menu will be closed.

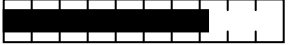Test Menu	
1. Self Test	
2. Monitor Test	
3. Keyboard Test	
4. PM Display	<input type="checkbox"/> ON
5. Error Logging	
6. System INFO	
MAGI	
0. EXIT	

## List of Alarms and other Indications

**Table 8-5 List of Notification**

Message	Description
SET GYRO	Requires setting of true bearing.
TM RESET	Use care of resetting TM.
POSN RESET	Change the latitude and longitude sentence.

**Table 8-6 List of ATA Alarms and Radar Alarms**

Message	Description
CPA/TCPA	Closest approach point/Time for reaching the closest approach point (ATA)
GUARD ZONE	A target exists in a guard zone.
LOST	A target under acquisition cannot be tracked.
RADAR ALARM(IN)	A target exists in a radar alarm zone.
RADAR ALARM(OUT)	A target doesn't exist in a radar alarm zone.

**Table 8-7 List of Operational Error Messages and Warnings**

Message	Description
NO HEADING DATA	ATA operation or TM selection when bearing data is invalid
NO POSITION DATA	Mark or line input when the latitude and longitude is invalid.
OUT OF RANGE	ATA out of acquisition range
CHANGE RANGE	TM selection due to TM-disabled range (96 or 120 nm) Zooming in a ZOOM-disabled range (0.125 nm)
MAX POINT	Tried to enter navigation information beyond the specified.
CAN'T TRANSMIT	Tried to transmit within 1 second after standby or when the transmitter-receiver has any trouble.
INVALID DATA	Tried to enter any data beyond its range.
MAX TARGET	The maximum number of targets of ATA is under acquisition.
SELECT STRAIGHT	The operator set PM to ON without selecting straight.
NO CARD	Card not detected yet
CARD FULL	Card capacity insufficient
FORMAT CARD	Unformatted card
INVALID CARD	Invalid card
READ FAILED	Read failure
WRITE FAILED	Write failure
DELETE FAILED	Deletion failure
FORMAT FAILED	Format failure
COPY FAILED	Copy failure
NOT ALLOWED	General operation error



## 8.2 FAULT FINDING

In case of semiconductor circuits, it is deemed that there are few cases in which the used semiconductor devices have inferior quality or performance deterioration except due to insufficient design or inspection or by other external and artificial causes. In general, the relatively many causes are disconnection in a high-value resistor due to moisture, a defective variable resistor and poor contact of a switch or relay. Some troubles are caused by defective parts, imperfect adjustment (such as tuning adjustment) or insufficient service (such as poor cable contact). It will also be effective to check and readjust these points. Melted fuses are caused by any clear cause. When a fuse is replaced, it is necessary to check the related circuits even if there is no trouble. In checking, note that there is some dispersion in the fusing characteristics. Table 8-12 shows a list of fuses used in the equipment.

**Table 8-12 Fuse List**

Location	Parts No.	Current Rating	Protection Circuit	Type
Display Unit	F2	5A/10A	Processing unit assembly	Refer to table 8-13
Display Unit	F3	12A/10A	Processing unit assembly	Refer to table 8-13
LOG.NSK circuit	F1 to F4	0.5A	LOG.NSK circuit PC4201	MF51NR-0.5A

# 8.3 TROUBLE SHOOTING

As this radar equipment includes complicated circuits, it is necessary to request a specialist engineer for repair or instructions for remedy if any circuit is defective.

There are also troubles by the following causes, which should be referred to in checking or repair work.

## 1 Poor Contact in Terminal Board of Inter-Unit Cables





- a) Poor contact in terminal board
- b) The cable end is not fully connected, that it, contacted with earthed another terminal.
- c) Disconnected cable wire

## 2 Poor Contact of Connector within Unit




**Reference:** This radar equipment is provided with 8-13 standard spares.

**Table 8-13 Spares (7ZXRD0013: JMA-5206, 7ZXRD0014: JMA-5210-4/6, 7ZXRD0015: JMA-5220-7/9, 7ZXRD0024: NCD-4340)**



### 7ZXRD0013

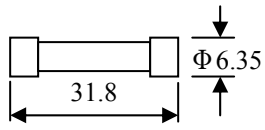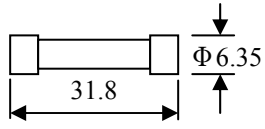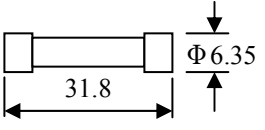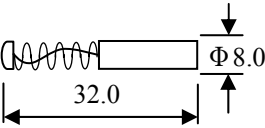Name	Type/Code	Shape (mm)	In use	Spare	Parts No.	Location
Fuse (For DC12V)	ST4-6.3AN1 (5ZFCA00051)		1	3	F2	Inside processing unit
Fuse (For DC24V)	ST4-3.15AN1 (5ZFCA00047)		1	3	F2	Inside processing unit
Fuse	ST4-5AN1 (5ZFCA00050)		1	3	F3	Inside processing unit
Motor brush	54531-01 (BRXP05247)		1	2	—	Scanner monitor




**7ZXRD0014**

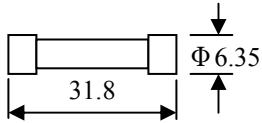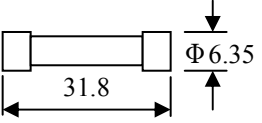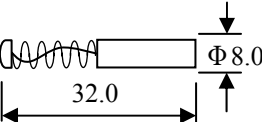Name	Type/Code	Shape (mm)	In use	Spare	Parts No.	Location
Fuse	ST4-5AN1 (5ZFCA00050)		1	3	F2	Inside processing unit
Fuse	TLC 12AN4 (5ZFCA00120)		1	3	F3	Inside processing unit
Motor brush	54583-01 (BRSW00101)		1	2	—	Scanner monitor

**7ZXRD0015**

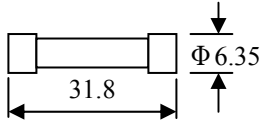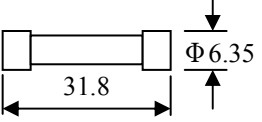Name	Type/Code	Shape (mm)	In use	Spare	Parts No.	Location
Fuse	ST6-10AN1 (5ZFCA00053)		1	3	F2	Inside processing unit
Fuse	ST6-10AN1 (5ZFCA00053)		1	3	F3	Inside processing unit

**7ZXRD0024**

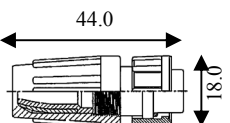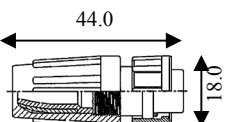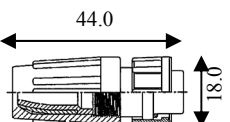Name	Type/Cde	Shape (mm)	In use	Spare	Parts No.	Location
Connector	LTWBD-06BFFA-LL7001 (5JCDX00032)		1	1	P2	Inside processing unit
Connector	LTWBD-08BFFA-LL7001 (5JCDX00034)		1	1	P5	Inside processing unit
Connector	LTWBD-07BFFA-LL7001 (5JCD00033)		1	1	P6	Inside processing unit

**Table 8-14 Special Parts**

**[I] JMA-5206/HS**

Parts No.	Name	Type	Manufacturer	Location	Code
V101	Magnetron	MSF1422B	NJRC	Scanner	5VMAA00068
A101	Circulator	FCX68	Toshiba	Scanner	6AJRD00001
A102	Diode Limiter	NJS6930	NJRC	Scanner	5EZAA00024

**[II] JMA-5210-4/6**

Parts No.	Name	Type	Manufacturer	Location	Code
V101	Magnetron	MSF1425B	NJRC	Scanner	5VMAA00051
A101	Circulator	FCX68	Toshiba	Scanner	6AJRD00001
A102	Diode Limiter	NJS6930	NJRC	Scanner	5EZAA00024

**[III] JMA-5220-7/9**

Parts No.	Name	Type	Manufacturer	Location	Code
V1	Magnetron	M1568B(J)	NJRC	Scanner	5VMAA00082
A101/A102	Circulator	FCX68	Toshiba	Scanner	6AJRD00001
A303	Diode Limiter	NJS6930	NJRC	Scanner	5EZAA00024

**Table 8-15 Circuit Block to be Repaired (JMA-5206)**

Location	Circuit Block	Type	Remarks
Scanner	Motor with gear	CBP-153	DC brush motor (ordinary)
Scanner	Modulator	CME-323	Excluding Magnetron
Scanner	Receiver	NRG-226	Including CAE-475-1
Processor	Radar processing circuit	CDC-1300	PC440
Processor	DSP circuit (ATA)	NCA-877	PCI
Processor	Power I/O circuit	CBD-1702	PC510
Operation panel unit	Operation panel unit	CCK-905	PC600
Operation panel unit	PS2 connector circuit	CQC-1095	PC610
Multi-function control	Operation circuit	CCK-914	PC601 (Option)
Multi-function control	PS2 connector circuit	CQC-1109	PC610 (Option)
Junction Box	Interface circuit	CMH-1994	PCI (Option)
Display	LCD display	NWZ-164	
NSK unit	NSK/LOG I/F circuit	CMJ-304C	PC4201 (Option)
NSK unit	Buzzer	CSC-631	(Option)

**Table 8-16 Circuit Block to be Repaired (JMA-5206HS)**

Location	Circuit Block	Type	Remarks
Scanner	Motor with gear	CBP-169	DC brushless motor
Scanner	Modulator	CME-339	Excluding Magnetron
Scanner	Receiver	NRG-226	Including CAE-475-1
Processor	Radar processing circuit	CDC-1300	PC440
Processor	DSP circuit (ATA)	NCA-877	PCI
Processor	Power I/O circuit	CBD-1702	PC510
Operation panel unit	Operation panel unit	CCK-905	PC600
Operation panel unit	PS2 connector circuit	CQC-1095	PC610
Multi-function control	Operation circuit	CCK-914	PC601 (Option)
Multi-function control	PS2 connector circuit	CQC-1109	PC610 (Option)
Junction Box	Interface circuit	CMH-1994	PCI (Option)
Display	LCD display	NWZ-164	
NSK unit	NSK/LOG I/F circuit	CMJ-304C	PC4201 (Option)
NSK unit	Buzzer	CSC-631	(Option)

**Table 8-17 Circuit Block to be Repaired (JMA-5210-4/6)**

Location	Circuit Block	Type	Remarks
Scanner	Motor with gear	CBP-139	DC brush motor (ordinary)
Scanner	Modulator	CPA-248	Excluding Magnetron
Scanner	Receiver	NRG-226	Including CAE-475-1
Scanner	Power supply circuit	CBD-1645	
Processor	Radar processing circuit	CDC-1300	PC440
Processor	DSP circuit (ATA)	NCA-877	PCI
Processor	Power I/O circuit	CBD-1702	PC510
Operation panel unit	Operation panel unit	CCK-905	PC600
Operation panel unit	PS2 connector circuit	CQC-1095	PC610
Multi-function control	Operation circuit	CCK-914	PC601 (Option)
Multi-function control	PS2 connector circuit	CQC-1109	PC610 (Option)
Junction Box	Interface circuit	CMH-1994	PCI (Option)
Display	LCD display	NWZ-164	
NSK unit	NSK/LOG I/F circuit	CMJ-304C	PC4201 (Option)
NSK unit	Buzzer	CSC-631	(Option)

**Table 8-18 Circuit Block to be Repaired (JMA-5220-7/9)**






Location	Circuit Block	Type	Remarks
Scanner	Motor with gear	H-7BDR0044	DC brushless motor (ordinary speed)
Scanner	Motor with gear	H-7BDRD0045	DC brushless motor (high speed)
Scanner	Modulator	NMA-499-1	Including CPA-209-1 Including CFR-161 Excluding Magnetron
Scanner	Receiver	NRG-154	Including CAE-344
Scanner	Power supply circuit	CBD-1682	
Scanner	T/R control circuit	CMC-1205	
Scanner	Motor power supply circuit	CBH-3	
Scanner	Motor power supply circuit	CSA-283	
Processor	Radar processing circuit	CDC-1300	PC440
Processor	DSP circuit (ATA)	NCA-877	PCI
Processor	Power I/O circuit	CBD-1702	PC510
Operation panel unit	Operation panel unit	CCK-905	PC600
Operation panel unit	PS2 connector circuit	CQC-1095	PC610
Multi-function control	Operation circuit	CCK-914	PC601 (Option)
Multi-function control	PS2 connector circuit	CQC-1109	PC610 (Option)
Junction Box	Interface circuit	CMH-1994	PCI (Option)
Display	LCD display	NWZ-164	
NSK unit	NSK/LOG I/F circuit	CMJ-304C	PC4201 (Option)
NSK unit	Buzzer	CSC-631	(Option)



## 8.4 REPLACEMENT OF MAJOR PARTS



### CAUTION

-  Turn off the main power source before replacing parts. Otherwise, an electric shock or trouble may be caused.
-  Before replacing the magnetron, turn off the main power source and wait for 5 minutes or more until the high voltage circuits are discharged. Otherwise, an electric shock may be caused.
-  Take off your wrist watch when bringing your hands close to the magnetron. Otherwise, your watch may be damaged because the magnetron is a strong magnet.
-  Two or more persons shall replace the liquid crystal monitor. If only one person does this work, he may drop the LCD, resulting in injury.
-  Even after the main power source is turned off, some high voltages remain for a while. Do not contact the inverter circuit in the LCD with bare hands. Otherwise, an electric shock may be caused.

---

## Parts Required for Periodic Replacement

Here are parts required for periodic replacement

Part name	Interval
1. Magnetron	4000 hours
2. LCD backlight	50000 hours
3. Fan motor	20000 hours
4. Backup battery	3 years

### Replacement of magnetron (V1/V201)

Remove the shield cover of the modulator and check that no charge remains in the high-voltage modulator circuit. Then, remove the socket of the magnetron. The magnetron can be demounted by removing the screws fixing it. When mounting a new magnetron, do not touch the magnet with a screwdriver or put it on an iron plate. After replacement, connect the lead wire correctly.


#### Handling of Magnetron under Long-Time Storage

The magnetron that has been kept in storage for a long time may cause sparks and operate unstably when its operation is started. Perform the aging in the following procedures:

- (1) Warm up the cathode for a longer time than usually. (20 to 30 minutes in the STBY state.)
- (2) Start the operation from the short pulse range and shift it gradually to the longer pulse ranges. If the operation becomes unstable during this process, return it to the standby mode immediately. Keep the state for 5 to 10 minutes until the operation is restarted.

#### © **Scanner : NKE-2102 Magnetron Replacement Procedures.**


- (1) Pull out three connectors, P11, P13, P14.
- (2) Loosen four screws indi.

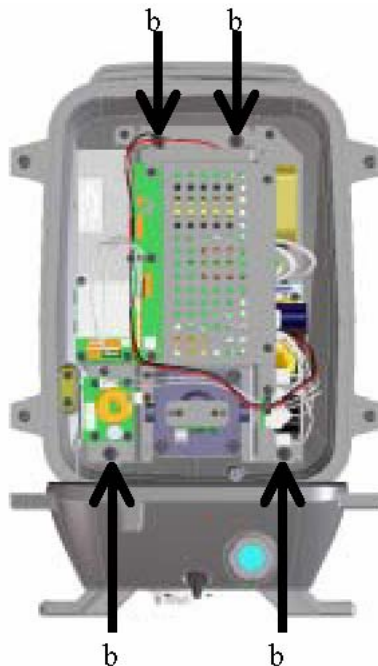







- (3) Remove Transmitter/Receiver unit.

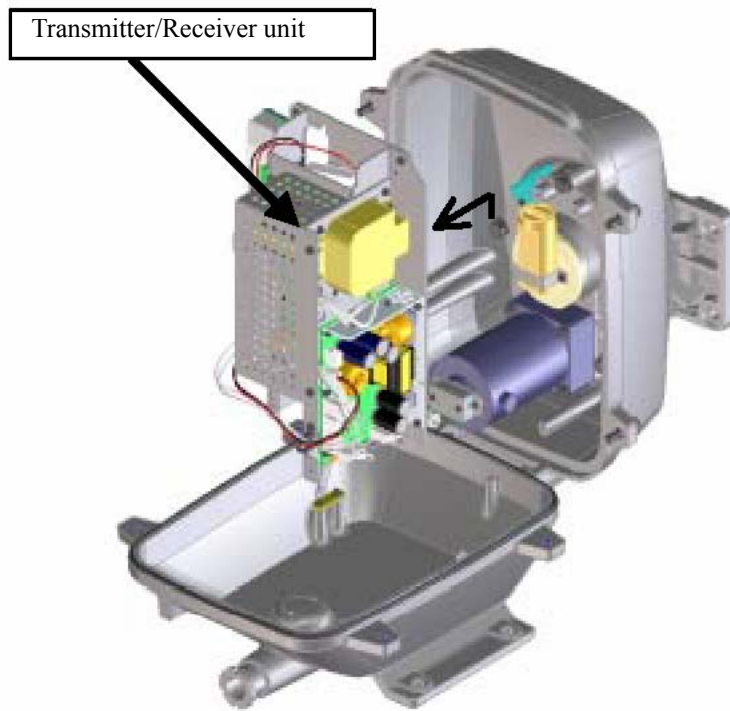


- (4) Remove 4 screws (a-1) shown in the following figure.

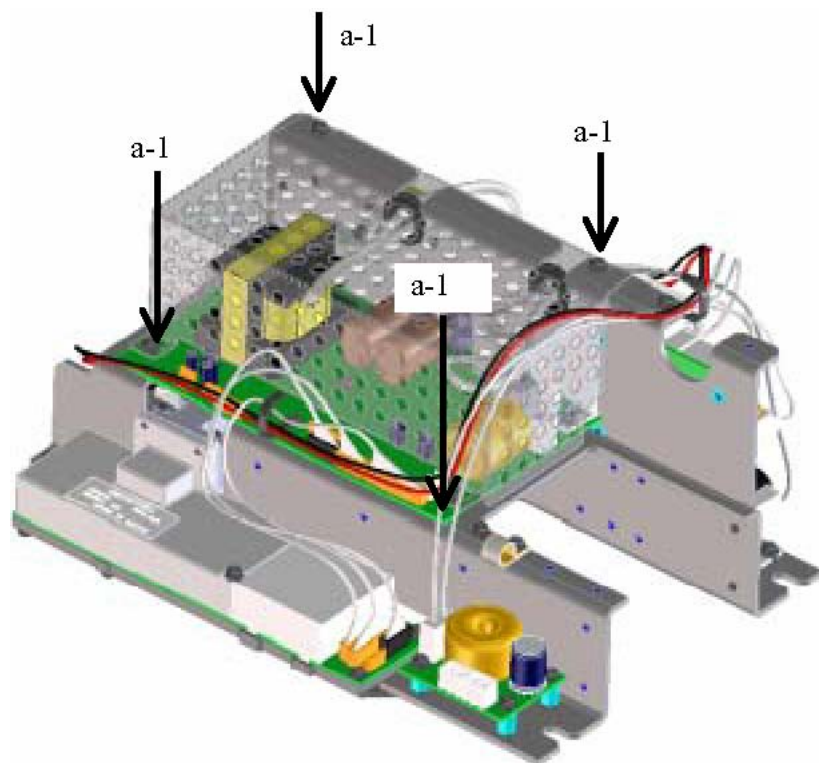


(4) Remove the modulator cover as shown below.

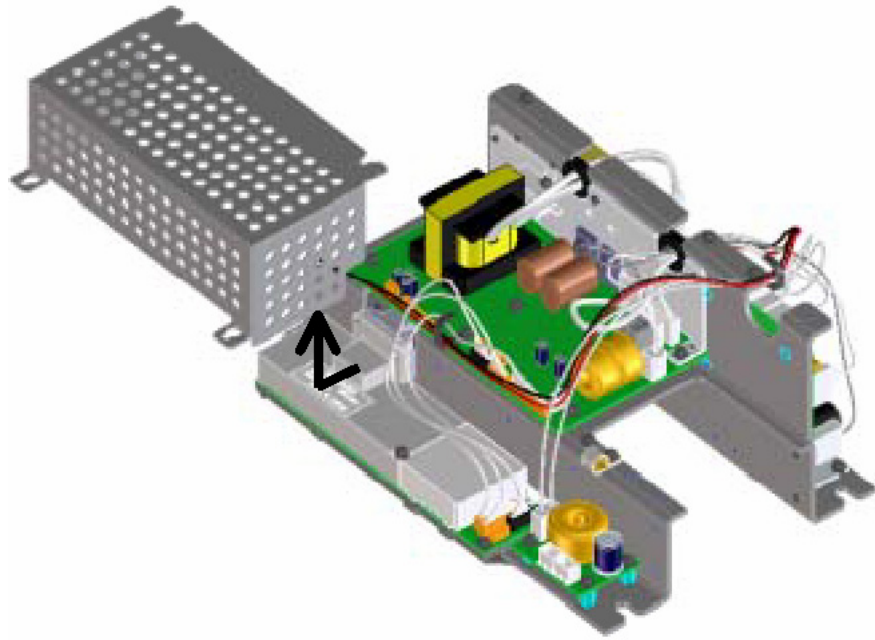


(5) Remove two magnetron cables soldered to transformer, T1.

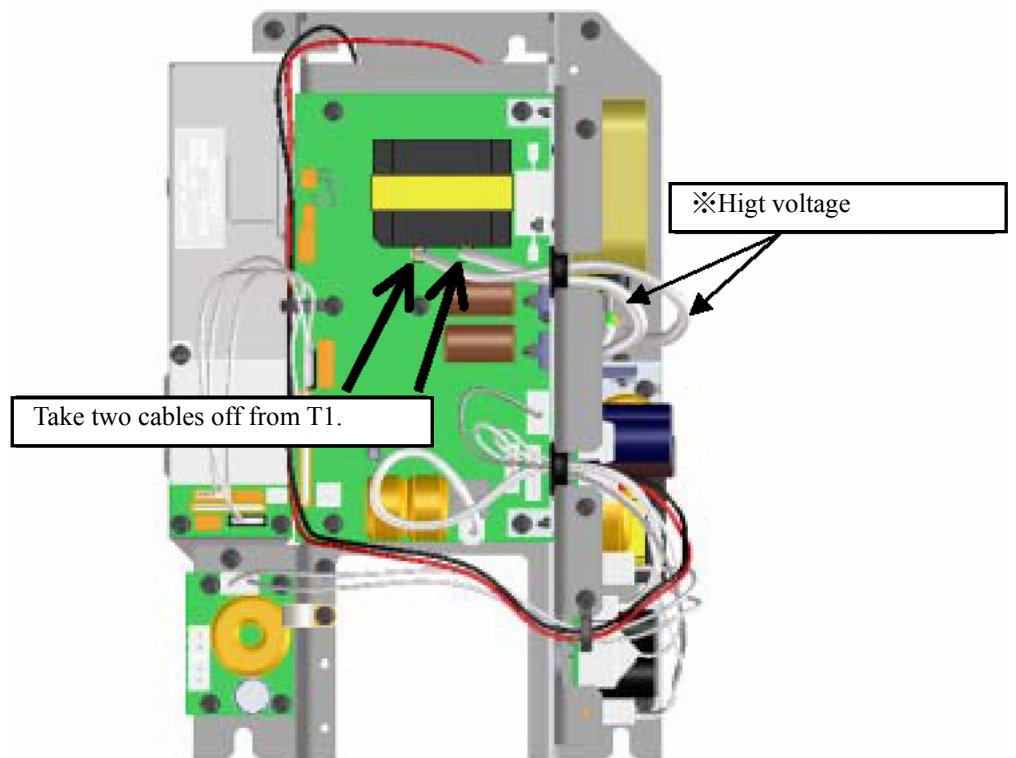

- (6) Remove four screws as shown below and then remove the magnetron.

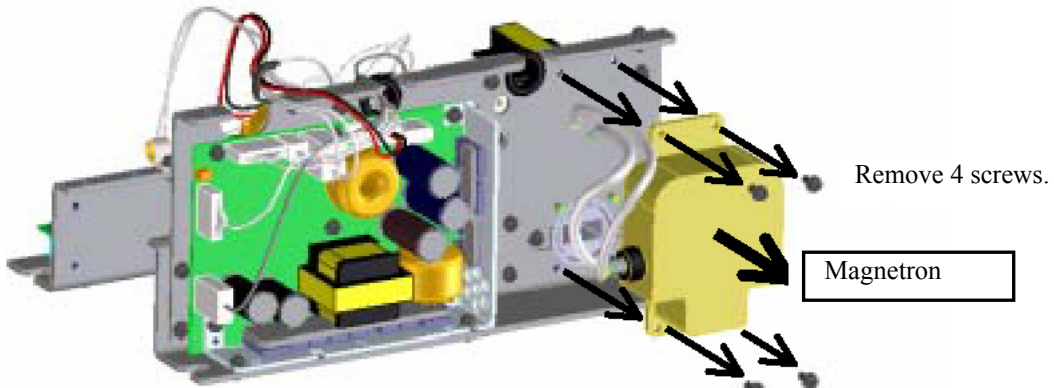


- (7) Fix new magnetron with the screws and cover the two cables with white tubes removed from the old magnetron.

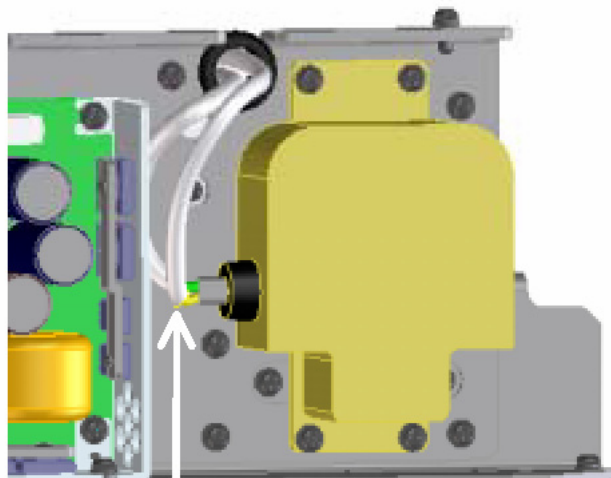


Cover two magnetron cables, green and yellow one, with white tubes.

- (8) Solder two magnetron cables to transformer, T1 as shown below.

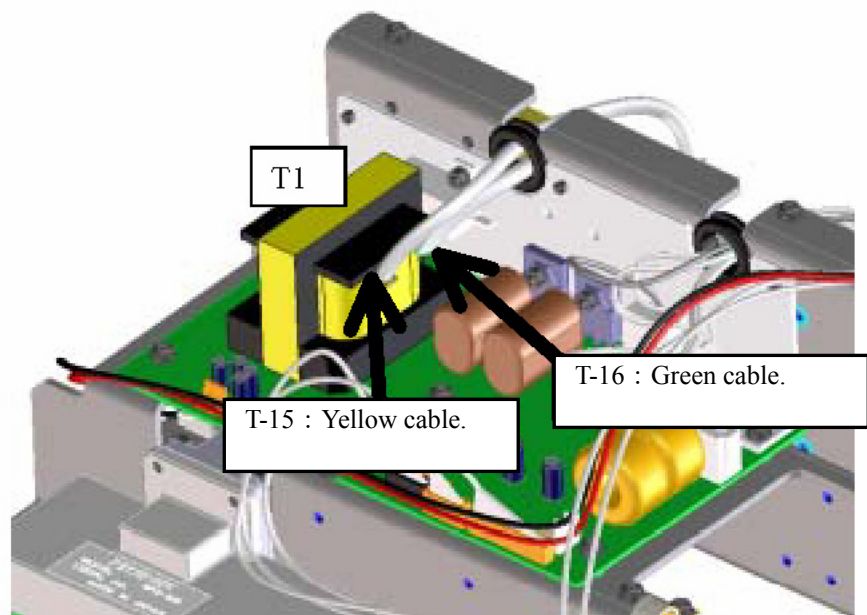


Scanner: NKE-2252 Magnetron Replacement Procedure

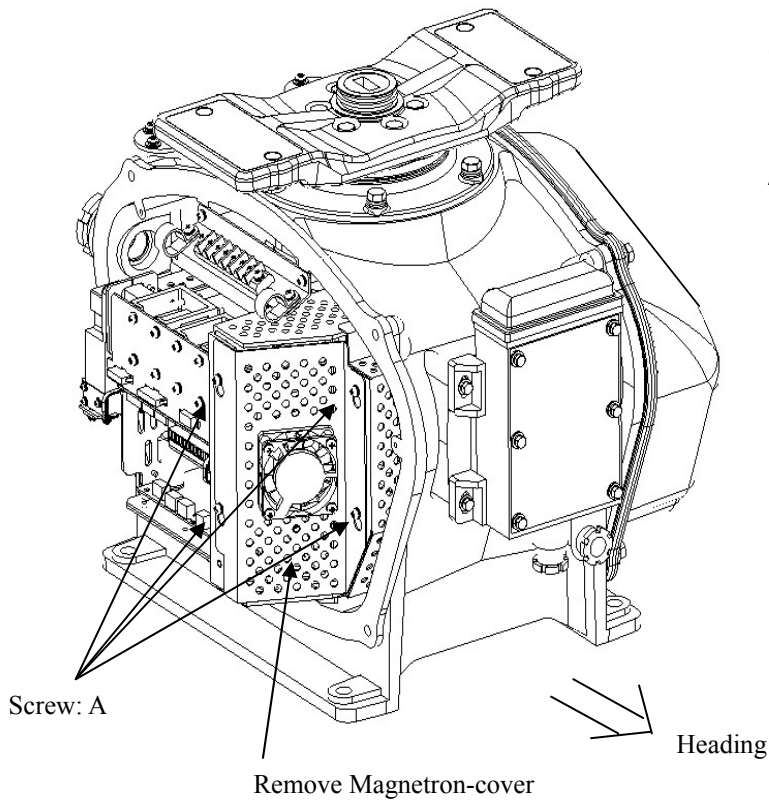


Open starboard cover of scanner.

Loosen 4 screws A.  
And remove magnetron-cover.

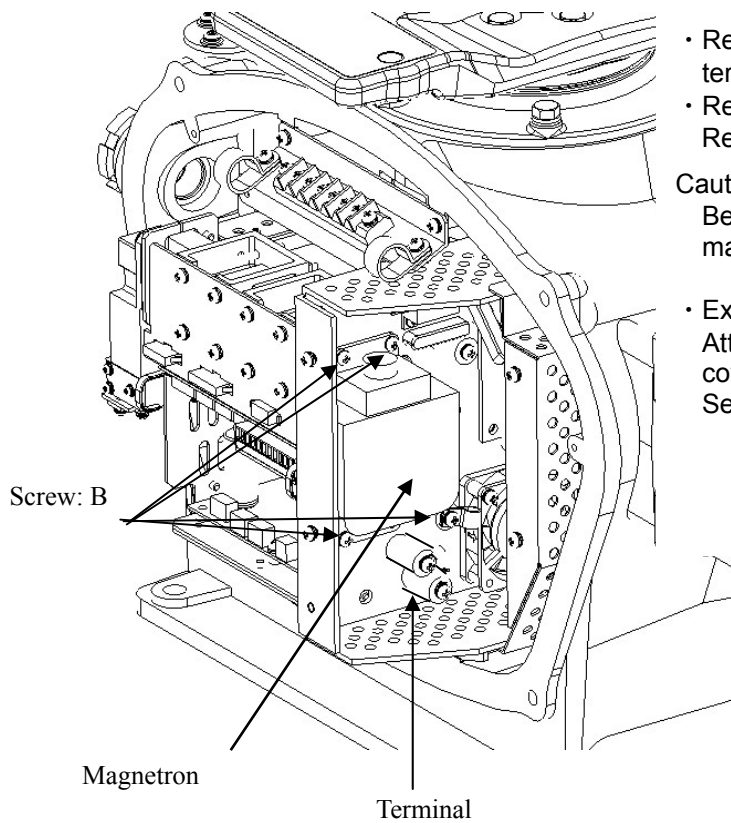

- Remove Magnetron-leads at the terminal.
- Remove 4 screws B.  
Remove The Magnetron.

Caution)  Be careful of the handling of a magnetron and screws.

- Exchange Magnetron.  
Attach Magnetron, leads and cover.  
Setting up scanner unit.

## Replacement of Diode Limiter (A102/A303)

Remove the 4 screws fixing the receiver. Remove the 4 screws fixing the diode and the limiter, and remove diode limiter. When mounting the diode limiter, take care of the mounting direction and mount it in the arrow direction facing it the receiver front end.

Connect the wiring in the same way as before the replacement.

---

## Replacement of LCD Monitor

### Attention


- **When replacing the LCD monitor, which is easily broken by a little impact, handle it carefully and do not hit any article against it or put it on a hard article.**



### **1 NWZ-164 (Display Unit: NCD-4340)**

- (1) Disconnect the cable from the connectors “VIDEO” on the rear of the processor and the power cable of LCD monitor.
- (2) Softly place the LCD monitor on a desk covered with a soft cloth.
- (3) Attach a new LCD monitor in the reverse sequence as described above.

# 8.5 ADJUSTMENTS

This section describes the electrical adjustments of the equipment as the adjustment procedures to be carried out by service persons at the time of installation.

 **CAUTION**

-  **Do not carry out the adjustments of the equipment except authorized service persons. If wrong setting is carried out, this may cause unstable operation.**
  
-  **Do not carry out the adjustments during navigation. Otherwise, the radar performance may be affected, resulting in an accident or trouble.**

Tuning, bearing and range adjustments can be made from the operation panel. Start the adjustment mode in the following procedures.

## How to open the Adjust Menu

- Procedures**
- 1 Continue to press [RADAR MENU] key.**  
The Code Input Menu will appear.
  - 2 Press [0] key.**
  - 3 Move the cursor onto the “ENT” button in the Code Input menu, and press [ENT] key.**  
The Adjust Menu will appear.

**CODE Input**  
Only for “Service Engineer”  
Press “0” and “ENT”  
to Adjust Menu

1	2	3	
4	5	6	
7	8	9	
+	0	-	
CLR			ENT

**4 Press [1] key.**

The Equipment Setup Menu will appear.

Adjust Menu
1. Equipment Setup
2. Maintenance Menu
3. Option
9. SP/ATA INIT Setup
0. EXIT

Equipment Setup	
1. Bearing Adjustment	0.0°
2. Range Adjustment	0
3. Tune Adjustment	0
4. TRX Setting	>
5. COM Port Setting	>
6. NAV Setting	>
7. Sector Blank	>
8. INSTALLATION	>
9. Language	ENGLISH
0. EXIT	

**Exit**

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.



## Tuning Adjustment

### Procedures

- 1 Open the Equipment Setup Menu.

- 2 Press [3] key.

The Code Input Menu will appear.

- 3 Using numeric pad, enter the value and then press “ENT” button, and press “EXIT” button to determine the value.

The multi-function control can also be used to enter the value.

- 4 Repeat Step 3, and adjust the bar-graph of the tuning indicator on the upper left of the display so that it becomes the longest.

### Exit

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

Equipment Setup	
1. Bearing Adjustment	<input type="text" value="0.0°"/>
2. Range Adjustment	<input type="text" value="0"/>
3. Tune Adjustment	<input type="text" value="0"/>
4. TRX Setting	<input type="text" value="&gt;"/>
5. COM Port Setting	<input type="text" value="&gt;"/>
6. NAV Setting	<input type="text" value="&gt;"/>
7. Sector Blank	<input type="text" value="&gt;"/>
8. INSTALLATION	<input type="text" value="&gt;"/>
9. Language	<input type="text" value="ENGLISH"/>
0. EXIT	<input type="text"/>

## Bearing Adjustment

Adjust the bearing so that bearing of the target measured with the ship's compass matches that of the target echo on the radar display.

### Procedures

- 1 Press **AZI MODE** to select the relative bearing presentation [H UP] mode. Set Image Processing to OFF.

[AZI MODE] → Button ⑤ on the Radar Menu  
Image Processing → Button ⑫ in the Radar Menu

- 2 Measure the bearing of an adequate target (for example, a ship at anchor, a breakwater or a buoy) relative to own ship's heading.

- 3 Open the Equipment Setup Menu.

- 4 Press [1] key.

The Code Input Menu will appear.

- 5 Using numeric key, enter the value and then press "ENT" button, and press "EXIT" button to determine the value.

The multi-function control can also be used to enter the value.

- 6 Repeat Step 5 above, and adjust to display the target measured in Step 2 to the measured bearing.

Equipment Setup	
1. Bearing Adjustment	<input type="text" value="0.0°"/>
2. Range Adjustment	<input type="text" value="0"/>
3. Tune Adjustment	<input type="text" value="0"/>
4. TRX Setting	>
5. COM Port Setting	>
6. NAV Setting	>
7. Sector Blank	>
8. INSTALLATION	>
9. Language	<input type="text" value="ENGLISH"/>
0. EXIT	

### Exit

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

## Range Adjustment

Adjust the range so that the range of the target on the radar video is indicated correctly.

### Procedures

1 **Search the radar display for a target of which range is already known.**

2 **Open the Equipment Setup Menu.**

3 **Press [2] key.**

The Code Input Menu will appear.

4 **Using numeric pad, enter the value and then press “ENT” button, and press “EXIT” button to determine the value.**

The multi-function control can also be used to enter the value.

5 **Repeat step 4, and adjust until the target range measured in step 1 and the range on the radar display become identical.**

### Exit

1 **Press [RADAR MENU] key.**

The Main Menu will reappear.

Equipment Setup	
1. Bearing Adjustment	<input type="text" value="0.0°"/>
2. Range Adjustment	<input type="text" value="0"/>
3. Tune Adjustment	<input type="text" value="0"/>
4. TRX Setting	>
5. COM Port Setting	>
6. NAV Setting	>
7. Sector Blank	>
8. INSTALLATION	>
9. Language	<input type="text" value="ENGLISH"/>
0. EXIT	

---

## Antenna Height Adjustment

Set the antenna height above the sea level, but change this setting carelessly.

### Procedures

- 1 **Measure the height from the sea level to the antenna in advance.**

- 2 **Open the Equipment Setup Menu.**

- 3 **Press [4] key.**

The TRX Setting Menu will appear.

- 4 **Press [1] key.**

The Antenna Height Set Value window will appear.

- 5 **Select the antenna height measured in step 1 from the pull-down menu by pressing the numeric key [1] to [4].**

The antenna height will be determined.

### Exit

- 1 **Press [RADAR MENU] key.**

The Main Menu will reappear.

TRX Setting	
1. Anntena Height	<input type="text" value="5-10m"/>
2. Tune Peak Adjust	<input type="text" value="0"/>
3. Tune Indicator Adjust	<input type="text" value="0"/>
4. PM Adjustment	<input type="text" value="0"/>
5. Manual Tune Adjustment	
7. Output Pulse	<input type="text" value="2048"/>
8. Antenna Location	<input type="text" value="0m"/> <input type="text" value="0m"/>
<input type="text" value="0. EXIT"/>	

## Bearing Pulse Output Adjustment (Output Pulse)

Set the output value of bearing pulse. This radar can set the output value to 2048 pulses and 4096 pulses. This setting is allowed only when a 25 kw antenna is used.

### Procedures

- 1 **Open the Equipment Setup Menu.**
- 2 **Press [4] key.**  
The TRX Setting Menu will appear.
- 3 **Press [7] key.**
- 4 **Select a set value to be used.**

### Exit

- 1 **Press [RADAR MENU] key.**  
The Main Menu will reappear.

TRX Setting	
1. Antenna Height	<input type="text" value="5-10m"/>
2. Tune Peak Adjust	<input type="text" value="0"/>
3. Tune Indicator Adjust	<input type="text" value="0"/>
4. PM Adjustment	<input type="text" value="0"/>
5. Manual Tune Adjustment	
7. Output Pulse	<input type="text" value="2048"/>
8. Antenna Location	<input type="text" value="0m"/> <input type="text" value="0m"/>
0. EXIT	

---

## Scanner Antenna Location Adjustment (Antenna Location)

Set the position at which the scanner is installed.

### Procedures

**1 Open the Equipment Setup Menu.**


**3 Press [4] key.**

The TRX Setting Menu will appear.

**4 Press [8] key.**

The Antenna Location Menu will appear.

TRX Setting	
1. Antenna Height	<input type="text" value="5-10m"/>
2. Tune Peak Adjust	<input type="text" value="0"/>
3. Tune Indicator Adjust	<input type="text" value="0"/>
4. PM Adjustment	<input type="text" value="0"/>
5. Manual Tune Adjustment	
7. Output Pulse	<input type="text" value="2048"/>
8. Antenna Location	<input type="text" value="0m"/> <input type="text" value="0m"/>
0. EXIT	

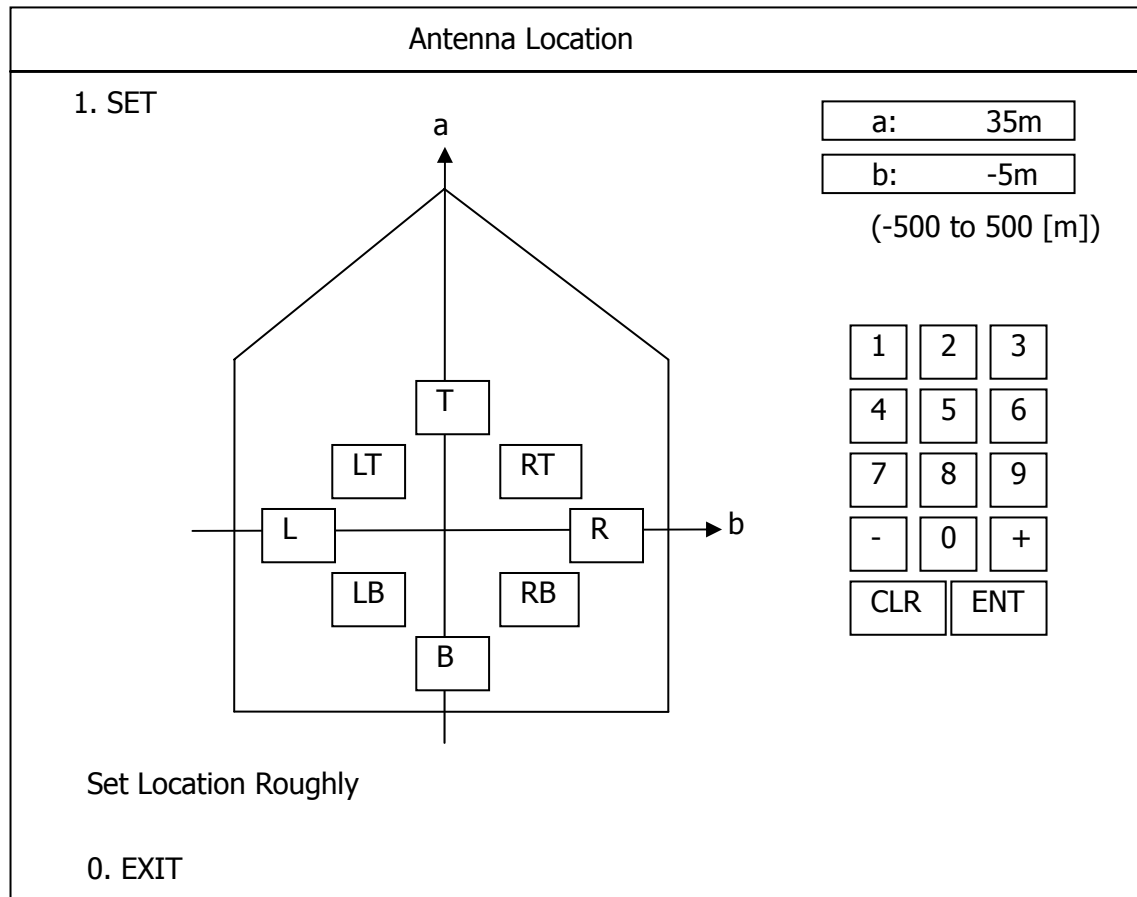

### 5 Enter two values, a and b.

With  $a > 0$ , the antenna is installed in the ship's heading direction.

With  $a < 0$ , the antenna is installed in the ship's stem direction.

With  $b > 0$ , the antenna is installed in the ship's starboard side direction.

With  $b < 0$ , the antenna is to be installed in the ship's port side direction.

Pressing **T**, **LT**, **L**, **LB**, **B**, **RB**, **R**, or **RT** in the own ship gives  $\pm$ sign, appropriate to the place, to values a and b.

Press CLR for cancellation. Press ENT to determine the value.

### 6 Press [0] key.

Entry will end.

## Exit

### 1 Press [RADAR MENU] key.

The Main Menu will reappear.

## COM Port Setting

External sensor signals are to be entered to this radar via a COM port. This radar has five COM ports. Input of signals from sensors or output of signals to sensors needs to adjust the COM port in accordance with the sensors.

Each ports on the menu represents following connectors.

COM1(GPS)	J3 GPS
COM2(PC)	J8 NMEA
COM3(NAV1)	J6 AIS/NMEA
COM4(NAV2)	J9 AUX (Option)
COM6(NSK/COMPASS)	J3 SCANNER
COM7(KEY BOARD1)	J4 KEY BOARD
COM8(KEY BOARD2)	J9 AUX (Option)

### [!] Baud Rate Setting

Set the baud rate of the signal to be entered into the COM port.

#### Procedures

- 1 Open the Equipment Setup Menu.**
- 2 Press [5] key.**  
The COM Port Setting Menu will appear.
- 3 Press [1] key.**  
The Baud Rate Setting Menu will appear.
- 4 Select the port number you want to set, pressing the numeric keys [1] to [5].**  
The Baud Rate Selection menu will appear.
- 5 In the selection menu, select the baud rate you want to set, pressing the numeric key.**

#### Selection value

- |                    |   |
|--------------------|---|
| 1. COM1 (GPS):     | 1200/4800/*38400<br>/9600 bps           |
| 2. COM2 (PC):      | 1200/4800/<br>38400/115200<br>/9600 bps |
| 3. COM3 (NAV1):    | 1200/4800/38400<br>/9600 bps            |
| 4. COM4 (NAV2):    | 1200/4800/*38400<br>/9600 bps           |
| 5. COM5 (COMPASS): | 4800/38400 bps                          |

\* If COM1/COM4 is set to 38400 bps, signals can only be transmitted. The baud rate for reception can be set to up to 4800 bps.

COM5 can be used for receive port only. It is dedicated for COMPASS signal. This means that the port is unavailable for other signals. The GPS, PC, NAV1, NAV2, COMPASS in the parentheses are the standard ports connecting to the external sensors.

Baud Rate	
1. COM1 (GPS)	4800bps
2. C	1. 1200bps
	2. 4800bps
3. C	3. 38400bps
	4. 9600bps
4. COM4 (NAV2)	384000bp
	4800bps
5. COM5 (COMPASS)	4800bps
0. EXIT	



**Exit**

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

## [II] Reception Sentence Setting (RX Sentence)

Set signal sentences to be received from sensors.

### Procedures

#### 1 Open the Equipment Setup Menu.

#### 2 Press [5] key.

The COM Port Setting Menu will appear.

#### 3 Press [2] key.

The RX Sentence Menu will appear.

#### 4 Select the signal you want to set, pressing the numeric keys [1] to [3].

The Setting Menu for each signal will appear.

##### Settable signal

1. GPS (LL/COG/SOG)
2. GPS (WPT/Time)
3. Depth
4. Wind
5. Current

#### 5 Select whether or not you want to use sentence for the signal.

##### Types of sentences to be used

GPS (LL/COG/SOG): GGA/RMC/RMA/GNS/  
GLL/VTG

GPS (WPT/Time): GGA/RMC/RMB/  
BWC/BWR/ZDA

Depth: DPT/DBK/DBT/DBS

Wind: MWV/MWD

Current: CUR

After having selected a signal, choose the number of the sentence for which you want to set whether or not it is used, pressing the numeric key.

As concerns current, set data set number and layer number of CUR sentence.

### Exit

#### 1 Press [RADAR MENU] key.

The Main Menu will reappear.

RX Sentence	
1. GPS (LL/COG/SOG)	>
2. GPS (WPT/Time)	>
3. Depth	>
4. Wind	>
5. Current	>
0. EXIT	



GPS (LL/COG/SOG)	
1. GGA	↓ <input type="button" value="USE"/>
2. RMC	<input type="button" value="USE"/>
3. RMA	<input type="button" value="USE"/>
4. GNS	<input type="button" value="USE"/>
5. GLL	<input type="button" value="USE"/>
6. VTG	<input type="button" value="USE"/>
0. EXIT	

**[III] Transmission Port Setting (TX Port)**

Set the number of the port via which signals are transmitted to sensors.

**Procedures**

**1 Open the Equipment Setup Menu.**

**2 Press [5] key.  
Press [3] key.**

The TX Port Menu will appear.

**3 Select the signal you want to set,  
pressing the numeric keys [1] to [8].**

The Output Port Setting Menu for each signal will appear.

**4 Select which port you want to use for output.**

**Types of ports to be used**

- 1. OFF
- 2. COM1 (GPS)
- 3. COM2 (PC)
- 4. COM3 (NAV1)
- 5. COM4 (NAV2)

Select the number of the port to be used, pressing the numeric key.

**5 Select the below settings.**

• **Output Format**

Valid for APB, BOD, GGA, GLL, RMC, RMB, VTG, XTE, BWC, HDT

Types V1.5 V2.0 V2.3

• **Talker**

Valid for APB, BOD, RMB, XTE, BWC, HDT

Types

STANDARD : The talker is RA.

GP : The talker is GP.

The talkers of TTM, TLL, OSD, RSD, ALR and AIS is RA.

The talkers of GGA, GLL, RMC and VTG is GP.

• **TX Interval**

Valid for APB, BOD, GGA, GLL, RMC, RMB, VTG, XTE, BWC, HDT

**Exit**

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

\* Note that, if you set COM1 and COM4 for transmission, they cannot be used as reception ports.

TX Port	
1. TTM (ATA Target)	OFF
2. T	1. OFF
	2. COM1 (GPS)
	3. COM2 (PC)
	4. COM3 (NAV1)
	5. COM4 (NAV2)
3. C	
4. RSD	OFF
5. ALR	OFF
6. AIS	AUTO
7. TTM (AIS Target)	OFF
8. TLL (AIS Target)	OFF
9. NEXT	
0. EXIT	

TX Port	
1. Online Maintenance	OFF
2. NMEA0183 Output Format	V2.3
3. NMEA0183 Talker	STANDARD
4. NMEA0183 Tx interval	1
5. APB	OFF
6. BOD	OFF
7. GGA	OFF
8. GLL	OFF
9. NEXT	
0. EXIT	



## [IV] Reception Port Setting (RX Port)

Set the number of the port via which signals are received from sensors.

### Procedures

**1 Open the Equipment Setup Menu.**

**2 Press [5] key.**

The COM Port Setting Menu will appear.

**3 Press [4] key.**

The RX Port Menu will appear.

**4 Select the signal you want to set, pressing the numeric keys [1] to [6].**

The Reception Port Setting Menu for each signal will appear.

**Settable signals**

1. GPS
2. DLOG
3. Depth
4. Temperature
5. Wind
6. Current

**5 Select which port you want to use for output.**

**Types of ports to be used**

1. AUTO
2. COM1 (GPS)
3. COM2 (PC)
4. COM3 (NAV1)
5. COM4 (NAV2)

RX Port	
1. GPS	AUTO
2. DLOG	1. AUTO
	2. COM1 (GPS)
3. Depth	3. COM2 (PC)
	4. COM3 (NAV1)
	5. COM4 (NAV2)
4. Temperature	AUTO
5. Wind	AUTO
6. Current	AUTO
7. Rate of Turn	AUTO
8. Rudder	AUTO
0. EXIT	

\* For AUTO, the initial value will be selected.

Select the number of the port to be used, pressing the numeric key.

### Exit

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

**[V] Line Monitor**

Serial communication data can be seen on the built-in Line monitor.  
Line monitor can be used to make sure that the serial data are received properly.

**Procedures**

**1 Open the Equipment Setup Menu.**

**2 Press [5] key.**


The COM Port Setting Menu will appear.

**3 Press [7] key.**

The LINE MONITOR menu will appear.

**4 Select the Communication port you want to see, pressing the numeric keys [1] to [8].**

The LINE MONITOR appears.  
Refer to the next page for the display.

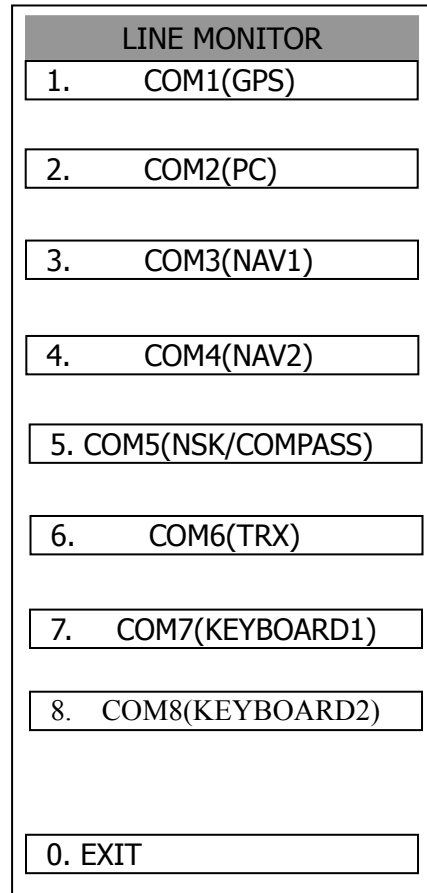

Each ports on the menu repesets followingconnectors.

COM1(GPS)	J3 GPS
COM2(PC)	J8 NMEA
COM3(NAV1)	J6 AIS/NMEA
COM4(NAV2)	J9 AUX (Option)
COM6(NSK/COMPASS)	J3 SCANNER
COM7(KEY BOARD1)	J4 KEY BOARD
COM8(KEY BOARD2)	J9 AUX (Optioon)

**Exit**

**1 Press [0] key.**

**2 Press [RADAR MENU] key.**

The Main Menu will reappear.



-----


### LINE MONITOR display

Received data ; The received serial communication data are displayed.

Transmitted data ; The transmitted serial communication data are displayed.

On-screen controls ; Line monitor can be controlled by the following soft keys on the upper right corner of the LINE MONITOR.

1. Port selection ; This key selects communication port to be displayed.
2. Data format selection ; This key switches the data format between ASCII format and binary format.
3. Play and Stop ; This key activates or deactivates data display renewing.
4. Clear ; The key clears all data.

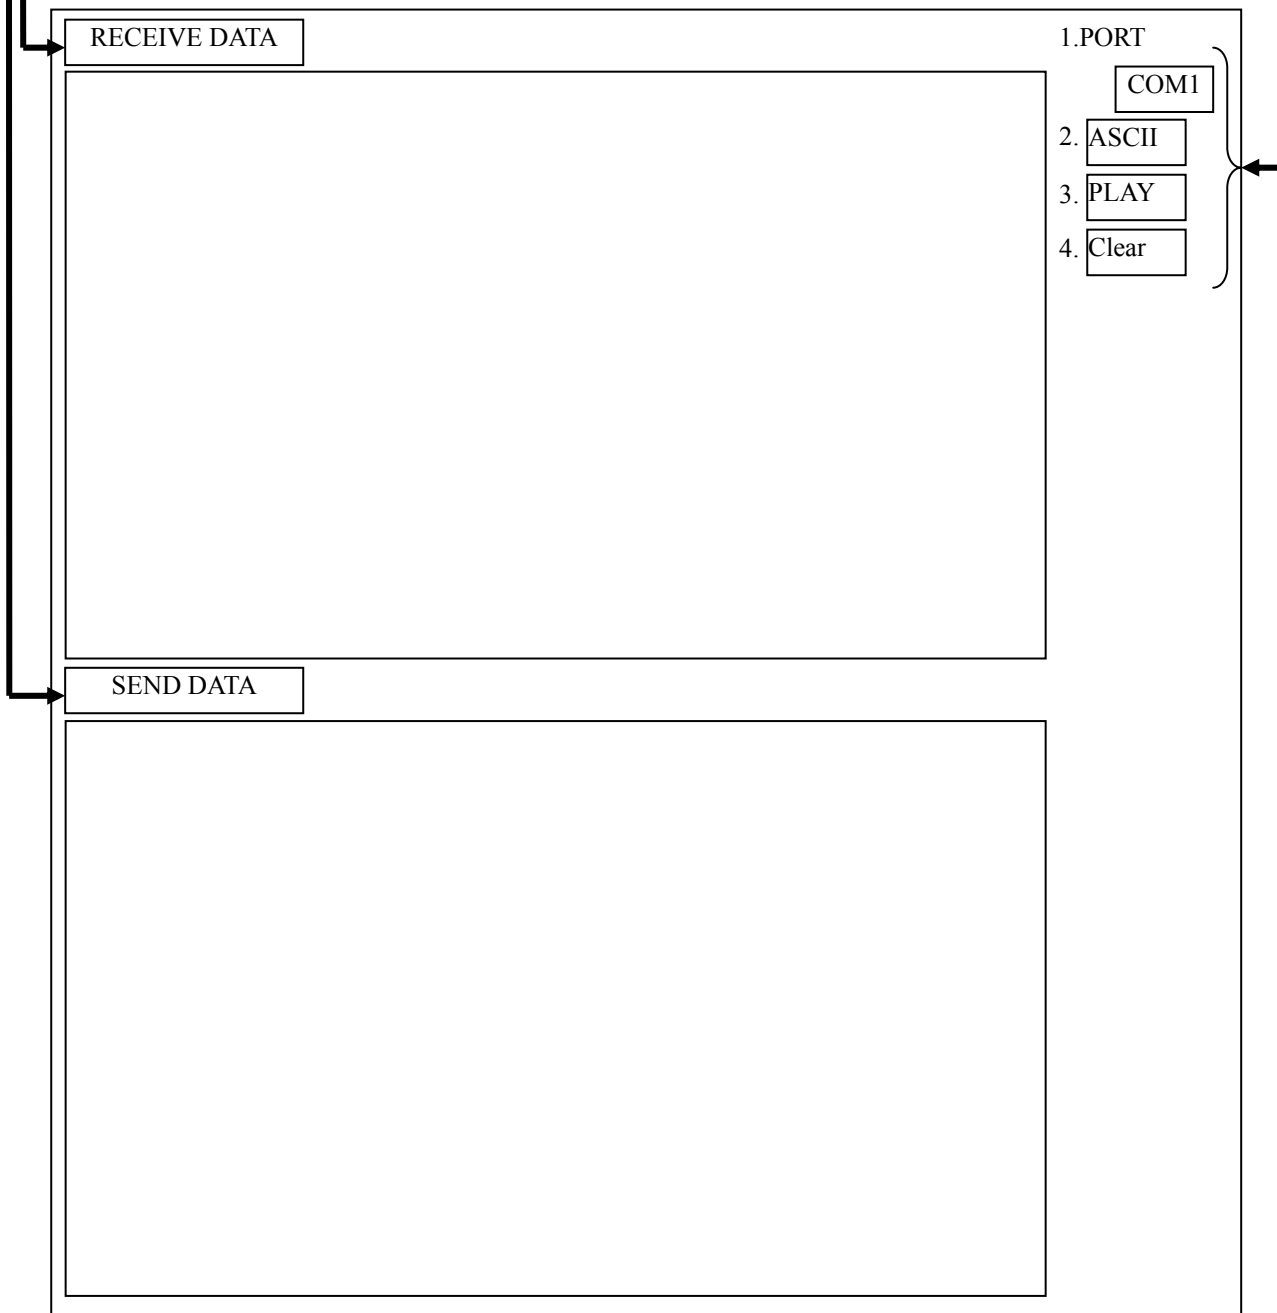

## Navigator Setting (NAV Setting)

GPS antenna installation position can be set.

### [1] GPS Antenna Location Setting (GPS ANT. Location)

Set the GPS antenna installation position.

#### Procedures

**1 Open the Equipment Setup Menu.**

**2 Press [6] key.**


The NAV Setting Menu will appear.

**3 Press [2] key.**

The GPS Antenna Location Menu will appear.



NAV Setting	
1.	
2. GPS ANT. Location	
0m	0m
0. EXIT	

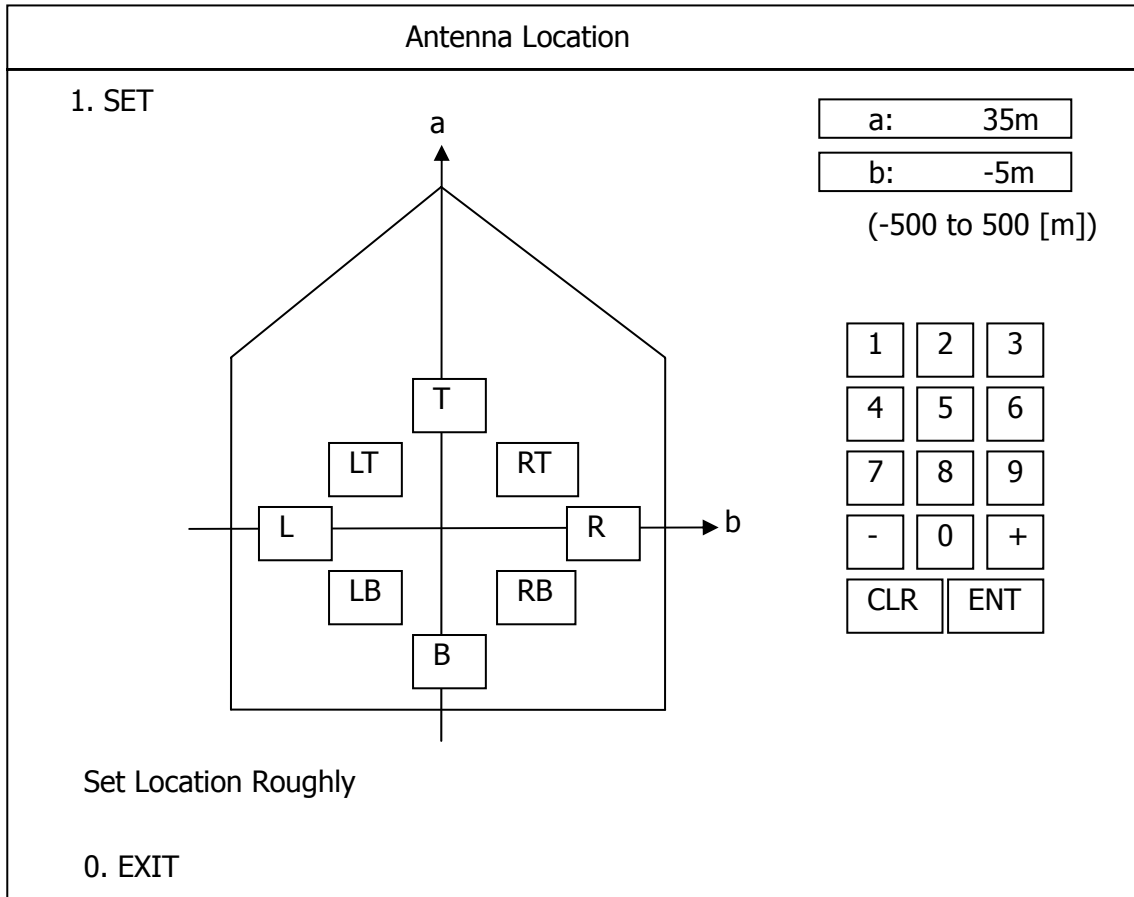

**5 Enter two values, a and b.**

With  $a > 0$ , GPS antenna is installed in the ship's heading direction.

With  $a < 0$ , GPS antenna is installed in the ship's stem direction.

With  $b > 0$ , GPS antenna is installed in the ship's starboard side direction.

With  $b < 0$ , GPS antenna is to be installed in the ship's port side direction.

Pressing **T**, **LT**, **L**, **LB**, **B**, **RB**, **R**, or **RT** in the own ship gives  $\pm$ sign, appropriate to the place, to values a and b.

Press CLR for cancellation. Press ENT to determine the value.

**6 Press [0] key.**

Entry will end.

**Exit**

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.



## Sector Blank Function (Sector Blank)

Set a sector range, preventing displaying the radar echo only within the area. Three types of sector can be created.

### [I] Turning ON/OFF the Sector function (Sector 1, 2 and 3)

#### Procedures

1 Open the Equipment Setup Menu.

2 Press [7] key.

The Sector Blank Menu will appear.

3 Select the number you want executed sector blank, Pressing the numeric keys [1] to [3].

Switching between ON and OFF is done each time the key is pressed.

ON: Execution of sector blank

OFF: Cancel

#### Exit

1 Press [RADAR MENU] key.

The Main Menu will reappear.

**Note:** This function can be performed only when the scanner is connected to NKE-2252.

Sector Blank	
1. Sector 1	<input type="button" value="ON"/>
2. Sector2	<input type="button" value="ON"/>
3. Sector3	<input type="button" value="ON"/>
4. Make Sector 1	
5. Make Sector 2	
6. Make Sector 3	
7. ENT	
0. EXIT	

**[II] Making Sector Function (Make Sector 1, 2, 3)**

**Procedures**

**1 Open the Equipment Setup Menu.**

**2 Press [7] key.**

The Sector Blank Menu will appear.

**3 Select the number you want to make sector blank, pressing the numeric keys [4] to [6].**

The sector blank for the numeric key pressed will be made.

**4 Set the start point of the sector blank by operating the [EBL] dial, and then press ENT.**

The start angle of the sector blank will be set.

**5 Set the end point of the sector blank by operating the [EBL] dial, and then press ENT.**

The end angle of the sector blank will be set.

**Exit**

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

Sector Blank	
1. Sector 1	<input type="checkbox"/> ON
2. Sector2	<input type="checkbox"/> ON
3. Sector3	<input type="checkbox"/> ON
4. Make Sector 1	
5. Make Sector 2	
6. Make Sector 3	
7. ENT	
0. EXIT	

## Language Setting (Language)

You can switch between Japanese and English.

### Procedures

1 Open the Equipment Setup Menu.

2 Press [9].

The Language Selection window will appear.

3 Select the language you want to display, pressing the numeric keys [1] to [3].

1. English
2. Japanese
3. Other

**“Other” in 3. is a language corresponding to characters created in overseas agents.**

To confirm whether or not your language is supported, contact overseas agents or our sales department.

To make the set language effective, turn off the power supply and then restart.

### Exit

1 Press [RADAR MENU] key.




The Main Menu will reappear.

Baud Rate							
1. Bearing Adjustment	<input type="text" value="0.0°"/>						
2. Range Adjustment	<input type="text" value="503"/>						
3. Tune Adjustment	<input type="text" value="32"/>						
4. TRX Setting	>						
5. COM Port Setting	>						
6. Nav Setting	>						
7. Sector Blank	>						
9. Language Selection	<table border="1"> <tbody> <tr> <td>1.</td> <td>ENGLISH</td> </tr> <tr> <td>2.</td> <td>JAPANESE</td> </tr> <tr> <td>3.</td> <td>OTHER</td> </tr> </tbody> </table> <input type="text" value="ENGLISH"/>	1.	ENGLISH	2.	JAPANESE	3.	OTHER
1.	ENGLISH						
2.	JAPANESE						
3.	OTHER						
0. EXIT							

---

## Maintenance Menu

This item is provided for equipment maintenance, including settings of antenna safety switch, master reset, etc.

 <b>CAUTION</b>	
	<b>Only our service engineers are to make the adjustment. Neglecting this caution may cause accidents and failures.</b>
	<b>Do not make the adjustments during navigation. Otherwise, adjustments may affect the radar functions, causing accidents and failures.</b>

### [1] Scanner Safety Switch Setting (Safety Switch)

#### Procedures

**1 Open the Adjust Menu.**

Refer to 8-29.

**2 Press [2] key.**

The Maintenance Menu will appear.

**3 Press [1] key.**

Setting items for the scanner safety switch will appear.

**4 Select the item you want to set, pressing the numeric key [1] to [4].**

1. TX OFF: Stops transmission. (The screen remains in the transmission status.)
2. STANDBY: Stops transmission. (The screen switches to the standby status)
3. TX-ON: Continues transmission without changes. (However, errors in bearing signals etc. are to occur due to safety switch-off.)
4. IGNORE ERROR: Continues transmission without changes. (Errors in bearing signals etc. due to safety switch-off are also ignored.)

#### Exit

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

Maintenance Menu	
1. Safety Switch	STANDBY
2. Partial Master Reset	
3. All Master Reset	
4. Internal To Card2	
5. Card2 To Internal	
6. TX TIME CLR	
7. String Data Update	
0. EXIT	

**[II] Partial Master Reset****Procedures****1 Open the Maintenance Menu.****2 Press [2] key.**

The Partial Master Reset Execution Check window will appear.

- 1 YES: Execution of Partial Master Reset
- 2 NO: Cancellation

Partial Master Reset resets items except for those set in the initialization menu.

**Exit****1 Press [RADAR MENU] key.**

The Main Menu will reappear.

Maintenance Menu	
1. Safety Switch	<input type="text" value="STANDBY"/>
2. Partial Master Reset	<input type="text"/>
3. All Master Reset	<input type="text"/>
4. Internal To Card2	<input type="text"/>
5. Card2 To Internal	<input type="text"/>
6. TX TIME CLR	<input type="text"/>
7. String Data Update	<input type="text"/>
0. EXIT	<input type="text"/>

**[III] All Master Reset (All Master Reset)**

- Procedures**
- 1 Open the Maintenance Menu.**
  - 2 Press [3] key.**
- The All Master Reset Execution Check window will appear.
- 1 YES: Execution of All Master Reset
  - 2 NO: Cancellation
- All Master Reset resets all items.

- Exit**
- 1 Press [RADAR MENU] key.**
- The Main Menu will reappear.

<b>Maintenance Menu</b>	
1. Safety Switch	<input type="button" value="STANDBY"/>
2. Partial Master Reset	
3. All Master Reset	
4. Internal To Card2	
5. Card2 To Internal	
6.TX TIME CLR	
7. String Data Update	
0. EXIT	

**[IV] Copy Internal Settings to Card2 (Internal To Card2)**

Execution of this item requires a memory flash card (option).

**Procedures**

- 1 **Insert a flash memory card into the CARD slot 2.**
- 2 **Open the Maintenance Menu.**
- 3 **Press [4] key.**

The execution check window will open to check whether or not you want to copy the internal settings to Card2.

- 1 YES: Execution of copy
- 2 NO: Cancellation

**Exit**

- 1 **Press [RADAR MENU] key.**

The Main Menu will reappear.

Maintenance Menu	
1. Safety Switch	STANDBY
2. Partial Master Reset	
3. All Master Reset	
4. Internal To Card2	
5. Card2 To Internal	
6. TX TIME CLR	
7. String Data Update	
0. EXIT	

---



# Caution



**Compact Flash Cards can be used with this system. The following shows the recommendations in use. However they do not guarantee that CF cards may properly work with this system. Depending on the hardware or software, the cards will not work correctly. Any damage including loss of data caused by using the data created on this system is out of warranty. Important files should be backed up therefore.**

© Recommendations on using CF cards.

★ Recommended card size.

64 MB, 128 MB, 256 MB, 512 MB, 1GB.

★ Recommended file system.

The Compact card should be formatted to FAT32 in Windows XP (SP2).

Many CF cards are formatted to FAT16 before shipping. Be sure to Format the CF card to FAT32, before use.

★ Recommended OS.

Windows XP (SP2).

★ Operating temperature range

Depending on the CF card specification and the radar specification, -15 to +55 degree Celsius.

© Caution in use.

Never eject the CF card while files are being written to the card.

Turn the power off before inserting or ejecting a CF card.



**[V] Read internal settings from Card2.**

Execution of this item requires a memory flash card (option).

**Procedures**

**1 Insert the memory flash card, in which internal settings have been saved, into Card slot 2.**

**2 Open the Maintenance Menu.**

**3 Press [5] key.**

The execution check window will open to check whether or not you want to read the internal settings from Card2.

- 1 YES: Read
- 2 NO: Cancellation

**Exit**

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

Maintenance Menu
1. Safety Switch
STANDBY
2. Partial Master Reset
3. All Master Reset
4. Internal To Card2
5. Card2 To Internal
6. TX TIME CLR
7. String Data Update
0. EXIT

---

## Noise Level Setting (Noise Level)

### [1] Setting the noise level for signal processing (Main)

#### Procedures

- 1 **When the Adjust Menu appears, press [9] key.**

The SP/ATA INIT Setup Menu will appear.

- 2 **Press [1] key.**

The Noise Level Menu will appear.

- 3 **Press [1] key.**

The Code Input Menu will open to change the noise level value.

- 4 **Change the value to display echo correctly.**

In addition to the entry on the Code Input menu, the Multi-functional Dial Control is available to change the value.

#### Exit

- 1 **Press [RADAR MENU] key.**

The Main Menu will reappear.

Noise Level	
1. Main	<input type="text" value="140"/>
2. Setting Mode	<input type="text" value="OFF"/>
<input type="text" value="0. EXIT"/>	

**[II] Noise Level Adjustment Mode (Setting Mode)****Procedures**

- 1 **When the Adjust Menu appears, press [9] key.**

The SP/ATA INIT Setup Menu will appear.

- 2 **Press [1] key.**

Options for Setting Mode will appear.

- 3 **Press [3] key.**

Switching between Setting Mode ON and OFF is done each time the key is pressed.

**Exit**

- 1 **Press [RADAR MENU] key.**

The Main Menu will reappear.

Noise Level	
1. Main	<input type="text" value="140"/>
2. Setting Mode	<input type="text" value="OFF"/>
<input type="text" value="0. EXIT"/>	

## Vector Constant

### Attention

- **Do not change the set value carelessly.**  
The vector constant shall be set to 5 normally. If the vector constant value is higher, a target's vector will be better followed up when the target and own ship change their course or speed, but the vector accuracy will be lower on the contrary.

### Procedures

- 1 Press [9] key while the Adjust Menu is open.

The SP/ATA INIT Setup Menu will appear.

- 2 Press [2] key.

The ATA Menu will appear.

- 3 Press [1] key.

The window for setting vector constants will appear.

- 4 Select the value you want to set, pressing the numeric keys [1] to [8].

### Exit

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

ATA	
1. Vector Const	<input type="text" value="5"/>
2. Video TD Level	<input type="text" value="15"/>
3. Video High Level	<input type="text" value="8"/>
4. Video Low Level	<input type="text" value="1"/>
5. Gate Size	<input type="text" value="NARROW"/>
6. Limit Ring	<input type="text" value="OFF"/>
<input type="text" value="0. EXIT"/>	

**Video TD Level****CAUTION**

**Do not change the set quantization level carelessly. If the level deviates from the proper value, the ARPA acquisition and tracking functions will deteriorate. Otherwise, this may cause accidents.**

The quantization level determines the minimum signal level of the input video to the ATA target detection circuit. In this test, the value of the quantization level can be set in a range of 1 to 63. If the value is set to a lower level, weak target echoes will be inputted to the ATA target detection circuit, but much radar noise will also be inputted to the circuit together, and target acquisition and tracking may be disabled. Therefore, it is important to set a value that is 4 or 5 higher than the detected noise level.

**Procedures**

- 1 Press [9] key while the Adjust Menu is open.**

The SP/ATA INIT Setup Menu will appear.

- 2 Press [2] key.**

The ATA Menu will appear.

- 3 Press [2] key.**

The Code Input Menu will appear.

- 4 Enter the Video TD Level value.**

The multi-function control can also be used to enter the value.

After having entered the value, press ENT.

**Exit**

- 1 Press [RADAR MENU] key.**



The Main Menu will reappear.

ATA	
1. Vector Const	<input type="text" value="5"/>
2. Video TD Level	<input type="text" value="15"/>
3. Video High Level	<input type="text" value="8"/>
4. Video Low Level	<input type="text" value="1"/>
5. Gate Size	<input type="text" value="NARROW"/>
6. Limit Ring	<input type="text" value="OFF"/>
<input type="text" value="0. EXIT"/>	

---

## Main Bang Suppression Level Adjustment (MBS Level)

Main Bang Suppression is adjusted to suppress main bang, a reflection signal from 3D circuit including wave guide tube, that generally appears as a circular image focusing on the center of the radar display. Optimum adjustment allows main bang image to remain lightly on the display.

 <b>CAUTION</b>
 <b>Do not change this adjusted level carelessly.</b> <b>Incorrect adjustment may erase targets in point-blank range and cause collision, resulting in death or serious injury.</b>

This adjustment is made for settings in the processing circuit of the display unit.

### Procedures

**1 Perform the following operation before setting.**

- Set the range to 0.125 nm.
- Set the radar video enhance function.
- Set the correlation processing function to OFF.
- Rotate the [AUTO-SEA] control to achieve the strength with which main bang can be judged.
- Rotate [AUTO-RAIN] control to the minimum position (counterclockwise fully).
- Rotate [GAIN/PL] control to the maximum position (clockwise fully).

**2 Display the SP/ATA INIT Setup Menu.**

**3 Press [3] key.**

The MBS Menu will appear.

**4 Press [1] key.**

The Code Input Menu will appear.

**5 Enter the Main Bung Suppression Level value.**

Adjust the value to erase the main bang.

MBS	
1. MBS Level	<input type="text" value="0"/>
2. MBS Area	<input type="text" value="0"/>
<input type="text" value="0. EXIT"/>	



### Exit

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

## Main Bang Suppression Area Adjustment (MBS Area)

Adjust the main bang suppression area.

 <b>CAUTION</b>
 <p><b>Do not change this adjusted level carelessly.</b>  <b>Incorrect adjustment may erase targets in point-blank range and cause collision, resulting in death or serious injury.</b></p>

### Procedures

**1 Perform the following operation before setting.**

- Set the range to 0.125 nm.
- Set the radar video enhance function.
- Set the correlation processing function to OFF.
- Rotate the [AUTO-SEA] control to achieve the strength with which main bang can be judged.
- Rotate [AUTO-RAIN] control to the minimum position (counterclockwise fully).
- Rotate [GAIN/PL] control to the maximum position (clockwise fully).

**2 Display the SP/ATA INIT Setup Menu.**

**3 Press [3] key.**

The MBS Menu will appear.

**4 Press [1] key.**

The Code Input Menu will appear.

**5 Enter the Main Bung Suppression Level value.**

Adjust the value to erase the main bang.

MBS	
1. MBS Level	<input style="width: 100px;" type="text" value="0"/>
2. MBS Area	<input style="width: 100px;" type="text" value="0"/>
<div style="border: 1px solid black; padding: 5px; margin-top: 10px;">0. EXIT</div>	

### Exit

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

## Adjustment of NSK Unit to GYRO Compass and Log

The NSK Unit of the radar equipment is designed to be compatible with almost all types of gyro compass by switch operation (For the step motor type, 24 VDC to 100 VDC, and for the synchro-motor type, the primary excitation voltage is 50 VAC to 115 VAC).

Before power-on operation, the switches S1, S2, S5 and jumper JP1 on the NSK Unit (NCT-4106) shall be set to the type of gyro compass in use in accordance with the procedures as described below. The gyro select switch on the NSK Unit is set to the gyration ratio of 360X and to be compatible with the synchro type before delivery from factory.

Check the type of the gyro compass used in own ship and make settings in the procedures below.

(1) Set the switches of the NSK Unit (NCT-4106) before turning on the radar equipment.

- S1: Set it to [OFF].
- S2: There are two types of gyro compasses: a compass of one type outputs a step signal, and the other outputs a synchro signal. Make sure of the type of gyro compass used with the own ship before setting S2.

[SYNC]..... Synchro signal  
 [STEP]..... Step signal

- S5: Set S5 depending on the type of the gyro compass currently in use, according to the S5 setting table.

S5-1: ..... Set this switch assembly according to the particular type of gyro.

[OFF] ..... Synchro signal  
 [ON]..... Step signal

S5-2, -3 ..... Gyration ratio

	360X	180X	90X	36X
S5-2	OFF	OFF	ON	ON
S5-3	OFF	ON	OFF	ON

S5-4 ..... Gyration direction

[OFF] ..... Normal (clockwise)  
 [ON]..... Reverse (counterclockwise)

S5-5 ..... Log type-1

[OFF] ..... Pulse signal  
 [ON]..... Synchro signal

S5-6 ..... Not used



S5-7, -8 .....Log ratio

	Pulse/NM (pulse signal)			
	800	400	200	100
	Gyraton/NM (synchro signal)			
	360X	180X	90X	36X
S5-7	OFF	OFF	ON	ON
S5-8	OFF	ON	OFF	ON

- S6:Log test. Set it to [NORMAL].
- S7: Normal or BSH(IMO) specifications selection. Set it to [NORMAL].
- Set JP1 according to the particular gyro.

[SYNC] .....Synchro signal  
 [STEP].....Step signal

- (2) Connect the gyro signal and the log signal cables to the NSK Circuit. (PC4201)
- (3) Set S1 to [ON].

\* After power-on operation, the switch S5-4 shall be set to [ON] if the radar video and the indicated value of COURSE (own ship's true bearing) is reversed.

**Table 8-19 Gyro and Log Select Switches (S5 Dip Switch)**

**S5 Setting Table**

		1	2	3	4	5	6	7	8	
GYRO SIG	SYNC	0								
	STEP	1								
	360X		0	0						
	180X		0	1						
	90X		1	0						
	36X		1	1						
	DIRECTION	Normal (NOR)				0				
	Reverse (REV)				1					
LOG SIG	TYPE	PULSE				0				
		SYNCHRO				1				
	PULSE/NM							0		
		800P/360X							0	0
		400P/180X							0	1
		200P/90X							1	0
100P/30X							1	1		



---

# 8.6 SETTING

## True Bearing Setting (Set GYRO)

Adjust the bearing that the bearing angle of the radar is the same as that of the gyro.

### Procedures

- 1 Press [RADAR MENU] key twice.

The RADAR Menu will appear.

- 2 Press [7] key.

The NAV Equipment Setting Menu will appear.

- 3 Press [1] key.

The Code Input Menu will appear.

- 4 Adjust true bearing value.

Adjust the bearing that the bearing angle of the radar is the same as that of the gyro.

The multi-function control can also be used to enter the value.

After having entered the value, press ENT.

### Exit

- 1 Press [RADAR MENU] key.

The menu will be closed.

NAV Equipment Setting	
1. Set GYRO	<input type="text" value="0.0°"/>
2. Heading Equipment	<input type="text" value="GYRO"/>
3. Speed Equipment	<input type="text" value="MANUAL"/>
4. Manual Speed	<input type="text" value="0.0kts"/>
5. MAG Compass Setting	
6. Set/Drift Setting	
7. GPS Setting	
8. Weather INFO Setting	
0. EXIT	

## Ship Speed Equipment Setting (Speed Equipment)

### Procedures

- 1 Press [RADAR MENU] key twice.

The RADAR Menu will appear.

- 2 Press [7] key.

The NAV Equipment Setting Menu will appear.

- 3 Press [3] key.

- 4 Select a ship speed sensor from the pull-down menu.

Types of selectable speed sensors:

- 1: Manual
- 2: Log
- 3: 2-axis log (NMEA signal: Speed over water)
- 4: 2-axis log (NMEA signal: Speed over ground)

### Exit

- 1 Press [RADAR MENU] key.

The menu will be closed.

**NAV Equipment Setting**

1. Set GYRO 0.0°
2. Heading Equipment GYRO
3. Speed Equipment MAN
4. Manual Speed 0.0kts
5. MAG Compass Setting
6. Set/Drift Setting
7. GPS Setting
0. EXIT

### Attention

- The manually entered speed is effective only when “MANUAL” is set.
- 2-axis log cannot be effective when the sentence VBW of NMEA0183 is not entered.

---

## Manual Speed Setting (Manual Speed)

### Procedures

- 1 Press [RADAR MENU] key twice.

The RADAR Menu will appear.

- 2 Press [7] key.

NAV Equipment Setting Menu will appear.

- 3 Press [4] key.

The Code Input menu will appear.

- 4 Pressing a numeric key, enter the value and select "ENT."

The multi-function control is also available for the entry.

**Note:** The manually entered speed is effective only when "MANUAL" is set.

NAV Equipment Setting	
1. Set GYRO	<input type="text" value="0.0°"/>
2. Heading Equipment	<input type="text" value="GYRO"/>
3. Speed Equipment	<input type="text" value="MAN"/>
4. Manual Speed	<input type="text" value="0.0kts"/>
<input type="text" value="5. MAG Compass Setting"/>	
<input type="text" value="6. Set/Drift Setting"/>	
<input type="text" value="7. GPS Setting"/>	
<input type="text" value="0. EXIT"/>	



---

## Current Correction (SET/DRIFT) Setting

The current set and drift will be set.

### Attention

- **The manually entered speed is effective only when 1. MANUAL or 2. 1AXIS is set in 2. SELECT SPEED of SETTING1 Menu.**

### Procedures

- 1 Press [RADAR MENU] key twice.**

The RADAR Menu will appear.

- 2 Press [7] key.**

The NAV Equipment Setting Menu will appear.

- 3 Press [6] key.**

The Set/Drift Setting Menu will appear.

- 4 Press [1] key to enable Correction.**

The setting of Correction is switched back and forth between ON and OFF each time [1] key is pressed.

- 5 Press [2] key.**

The Code Input Menu will appear.

- 6 Enter the direction of tendency.**

The direction of tendency will be set. The multi-function control is also available for the entry.

After having entered the direction, press ENT.

Set/Drift Setting	
1. Correction	<input type="text" value="OFF"/>
2. Set	<input type="text" value="0.0°"/>
3. Drift	<input type="text" value="0.0kts"/>
<input type="text" value="0. EXIT"/>	

---

**7 Press [3] key.**

The Code Input Menu will appear.

**8 Enter the speed of tendency.**

The speed of tendency will be set. The multi-function control is also available for the entry.

After having enter the value, press ENT.

**Exit****1 Press [RADAR MENU] key.**

The menu will be closed.

## Setting in GPS Receiver (GPS Process Setting)

Set an initial value in the GPS receiver (our GPS receiver).

### [I] Own ship position setting

#### Procedures

- 1 Press [RADAR MENU] key twice.

The Radar Menu will appear.

- 2 Press [7] key.

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.

GPS Setting Menu will appear.

- 4 Press [1] key.

GPS Process Setting Menu will appear.

- 5 Press [1] key.

The Code Input menu will appear.  
Enter the latitude, press ENT, enter the longitude, and then press ENT in order.  
The multi-function control is also available to enter the values.

- 6 After having entered the values, press [9] key, and transmit the setting contents to the GPS receiver.

#### Exit

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00'00.000'N
	000'00.000'E
2. Exclusion	
	00 00 00 00 00 00
3. Geodetic	
00	WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	



**[II] Setting of Banned Satellite (Exclction)****Procedures**

- 1 Press [RADAR MENU] key twice.**  
The Radar Menu will appear.
- 2 Press [7] key.**  
NAV Equipment Setting Menu will appear.
- 3 Press [7] key.**  
GPS Setting Menu will appear.
- 4 Press [1] key.**  
GPS Process Setting Menu will appear.
- 5 Press [2] key.**  
The Code Input menu will appear.  
Enter the number of the banned satellite.  
The multi-function control is also available to enter the values.
- 6 After having entered the value, press [9] key, and transmit the setting contents to the GPS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**  
The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00'00.000'N
	000'00.000'E
2. Exclution	
	00 00 00 00 00 00
3. Geodetic	
	00 WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	

**[III] Geodetic System Setting (Geodetic)**

Set the geodetic system in which the own ship is currently existent.

**Procedures**

- 1 Press [RADAR MENU] key twice.**  
The Radar Menu will appear.
- 2 Press [7] key.**  
NAV Equipment Setting Menu will appear.
- 3 Press [7] key.**  
GPS Setting Menu will appear.
- 4 Press [1] key.**  
GPS Process Setting Menu will appear.
- 5 Press [3] key.**  
The Code Input menu will appear.  
Enter the geodetic system in accordance with the table on the following page.  
The multi-function control is also available to enter the values.
- 6 After having entered the values, press [9] key to transmit the setting contents to the GPS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**  
The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00'00.000'N
	000'00.000'E
2. Exclusion	
00 00 00 00 00 00	
3. Geodetic	
00	WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	

### List of Geodetic Systems

No.	Name
0	WGS-84
1	WGS-72
2	Japan
3	North American 1927(U.S)
4	North American 1927(Canada & Alaska)
5	European 1950 (Europe)
6	Australian geodetic 1966 (Australia)
7	Ordance Survery of Great Britain (England)
8	NAD-83
9	- (No Use)
10	- (No Use)
11	ADINDAN (Etiopia & Sudan)
12	ARC 1950 (Botswana)
13	AUSTRALIAN GEODETIC 1984 (Australia)
14	BERMUDA 1957 (the Bermudas)
15	BOGOTA OBSERVATORY (Columbia)
16	CAMPO INCHAUSPE
17	CHATHAM 1971
18	CHUAASTRO (Paraguay)
19	CORREGO ALEGRE (Brazil)
20	DJAKARTA (VATAVIA) (Sumata)
21	EUROPEAN 1979 (Europe)
22	GEODETIC DATUM 1949 (New Zeland)
23	GUAM 1963 (Guam)
24	HAYFORD 1910 (Finland)
25	HJORSEY 1955 (Ice land)
26	INDIAN (India & Nepal)
27	IRELAND1965 (Ireland)
28	KERTAU 1948 (West Malaysia)
29	L.C.5 ASTRO (Cayman Black Island)
30	LIBERIA 1964 (Liberia)
31	LUZON (Philippines)
32	MERCHICH (Morocco)
33	MINNA (Cameroon)
34	NAHRWAN (Oman)
35	NAPARIMA, BWI (Trinidad & Tobago)
36	OLD EGYPTIAN (Egypt)
37	OLD HAWAIIAN (Hawaii)
38	PCO DE LAS NIEVES (Canary)
39	PROVISIONAL SOUTH AMERICAN 1956 (South America)
40	PROVISIONAL SOUTH CHILEAN 1963 (South Chile)
41	PUERTO RICO (Puerto Rico & Virgin Islands)
42	QORNOQ (South Greenland)
43	RT90 (Sweden)
44	SANTA BRAZ (San Miguel island & Saint Mary islands)
45	SOUTH AMERICAN 1969 (South America)
46	SOUTHWEST BASE (Faial & Sao Jorge & Pico & Graciosa & Terceira island)
47	TIMBALAI 1948 (Brunei & East Malaysia)
49	- (No Use)

**[IV] Antenna Height Setting (Antenna Height)**

**Procedures**

- 1 Press [RADAR MENU] key twice.**  
The Radar Menu will appear.
- 3 Press [7] key.**  
NAV Equipment Setting Menu will appear.
- 4 Press [7] key.**  
GPS Setting Menu will appear.
- 5 Press [1] key.**  
GPS Process Setting Menu will appear.
- 6 Press [4] key.**  
The Code Input menu will appear.  
Enter the antenna height of the own ship.  
The multi-function control is also available to enter the values.
- 7 After having entered the value, press [9] key, and transmit the contents of the settings to the GPS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**  
The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00°00.000'N
	000°00.000'E
2. Exclusion	
	00 00 00 00 00 00
3. Geodetic	
00	WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	

**[V] Fix Mode Setting (Fix Mode)**

Set the GPS fix mode.

**Procedures****1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

**2 Press [7] key.**

NAV Equipment Setting Menu will appear.

**3 Press [7] key.**

GPS Setting Menu will appear.

**4 Press [1] key.**

GPS Process Setting Menu will appear.

**5 Press [5] key.**

From the pull-down menu, you can select the following modes.

2D: 2D positioning only. Height cannot be acquired.

3D: 3D positioning can be done with height acquired.

AUTO: 2D positioning and 3D positioning can automatically be selected with optimum.

**6 After having entered the values, press [9] key to transmit the setting contents to the GPS receiver.****Exit****1 Press [RADAR MENU] key.**

The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00°00.000'N
	000°00.000'E
2. Exclusion	
	00 00 00 00 00 00
3. Geodetic	
	00 WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	

**[VI] HDOP Level Setting (DOP Level)**

Set the HDOP level of the GPS receiver.

**Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [7] key.**

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.**

GPS Setting Menu will appear.

- 4 Press [1] key.**

GPS Process Setting Menu will appear.

- 5 Press [6] key.**

From the pull-down menu, you can select a desired level. As the value is smaller, the precision becomes higher, but positioning grows more difficult.

- 6 After having entered the values, press [9] key to transmit the setting contents to the GPS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**

The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00'00.000'N
	000'00.000'E
2. Exclusion	
	00 00 00 00 00 00
3. Geodetic	
00	WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	

**[VII] Average Level Setting (Position Average)**

Set the time to average position information etc. output from the GPS receiver.

**Procedures****1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

**2 Press [7] key.**

NAV Equipment Setting Menu will appear.

**3 Press [7] key.**

GPS Setting Menu will appear.

**4 Press [1] key.**

GPS Process Setting Menu will appear.

**5 Press [7] key.**

Setting for the time of average is as follows according to ROM version of GPS receiver.

R26.00: Select the time of average from following

LONG(40sec)

STANDARD(10sec)

NONE.(2sec)

Other: Set the time(sec) of average

As the time of average is smaller, the update speed of position information is higher but dispersion is larger.

**6 After having entered the values, press [9] key to transmit the setting contents to the GPS receiver.****Exit****1 Press [RADAR MENU] key.**

The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00°00.000'N
	000°00.000'E
2. Exclusion	
	00 00 00 00 00 00
3. Geodetic	
	00 WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	

**[VII] Master Reset (Master Reset)**

Transmit the master reset to the GPS receiver to initialize the GPS receiver.

**Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [7] key.**

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.**

GPS Setting Menu will appear.

- 4 Press [1] key.**

GPS Process Setting Menu will appear.

- 5 Press [8] key.**

Switching between ON and OFF is done each time you press [8] key Select ON to transmit the reset.

- 6 After having entered the values, press [9] key to transmit the setting contents to the GPS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**

The Main Menu will reappear.

GPS Process Setting	
1. Position	
	00'00.000'N
	000'00.000'E
2. Exclusion	
	00 00 00 00 00 00
3. Geodetic	
00	WGS-84
4. Antenna Height	
	0m
5. Fix Mode	
	2D
6. DOP Level	
	Up to 5
7. Position Average	
	LONG
8. Master Reset	
	OFF
9. Send Data	
0. EXIT	



## Setting in DGPS Receiver (DGPS Setting)

Set an initial value in the DGPS receiver (our DGPS receiver).

### [1] DGPS Mode Setting (Mode)

#### Procedures

- 1 Press [RADAR MENU] key twice.

The Radar Menu will appear.

- 2 Press [7] key.

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.

GPS Setting Menu will appear.

- 4 Press [2] key.

DGPS Setting Menu will appear.

- 5 Press [1] key.

Each time [1] key is pressed, AUTO/MANUAL is toggled.

Auto: Automatically sets the working frequency of Beacon station.

Manual: Manually sets the working frequency.  
(From the next page)

- 6 After having entered the value, press [5] key to transmit the setting contents to the DGPS receiver.

#### Exit

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

**DGPS Setting**

1. Mode AUTO

2. Frequency 275.0KHz

3. Baud Rate (BPS) 50

4. DGPS Mode ON

5. Send Data

Status

No Beacon RCV connection

Frequency --- KHz

Baud Rate --- Baud

RSSI ---

0. EXIT

## [II] Setting of Working Frequency of Beacon Station (Frequency)

This setting can be made only when Manual is selected in 1. Mode.

### Procedures

- 1 Press [RADAR MENU] key twice.

The Radar Menu will appear.

- 2 Press [7] key.

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.

GPS Setting Menu will appear.

- 4 Press [2] key.

DGPS Setting Menu will appear.

- 5 Press [2] key.

The Code Input menu will appear.  
Enter the working frequency of the Beacon station.  
The multi-function control is also available for the entry.

- 6 After having entered the value, press [5] key to transmit the setting contents to the DGPS receiver.

### Exit

- 1 Press [RADAR MENU] key.

The Main Menu will reappear.

DGPS Setting	
1. Mode	<input type="text" value="AUTO"/>
2. Frequency	<input type="text" value="275.0KHz"/>
3. Baud Rate (BPS)	<input type="text" value="50"/>
4. DGPS Mode	<input type="text" value="ON"/>
<input type="text" value="5. Send Data"/>	
Status	
No Beacon RCV connection	
<input type="text" value="Frequency"/>	<input type="text" value="--- KHz"/>
<input type="text" value="Baud Rate"/>	<input type="text" value="--- Baud"/>
<input type="text" value="RSSI"/>	<input type="text" value="---"/>
<input type="text" value="0. EXIT"/>	

**[III] Setting of Communication Baud Rate with Beacon Station (BPS)**

This setting can be made only when Manual is selected in 1. Mode.

**Procedures****1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

**3 Press [7] key.**

NAV Equipment Setting Menu will appear.

**4 Press [7] key.**

GPS Setting Menu will appear.

**5 Press [2] key.**

DGPS Setting Menu will appear.

**6 Press [3] key.**

From the pull-down menu, you can select the following transmission speeds.

50bps  
100bps  
200bps

Set the desired communication speed.

**7 After having entered the value, press [5] key to transmit the setting contents to the DGPS receiver.****Exit****1 Press [RADAR MENU] key.**

The Main Menu will reappear.

DGPS Setting	
1. Mode	<input type="text" value="AUTO"/>
2. Frequency	<input type="text" value="275.0KHz"/>
3. Baud Rate (BPS)	<input type="text" value="50"/>
4. DGPS Mode	<input type="text" value="ON"/>
<input type="text" value="5. Send Data"/>	
Status	
No Beacon RCV connection	
<input type="text" value="Frequency"/>	<input type="text" value="--- KHz"/>
<input type="text" value="Baud Rate"/>	<input type="text" value="--- Baud"/>
<input type="text" value="RSSI"/>	<input type="text" value="---"/>
<input type="text" value="0. EXIT"/>	

**[IV] DGPS Mode Setting (DGPS Mode)**

Set the DGPS mode to ON/OFF. Setting the mode to ON allows you to acquire highly precise position information by using information from the Beacon station. Setting the mode to OFF allows you to acquire position information with the same precision as that of GPS.

**Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [7] key.**

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.**

GPS Setting Menu will appear.

- 4 Press [2] key.**

DGPS Setting Menu will appear.

- 5 Press [4] key.**

Switching between ON and OFF is done each time you press [4] key.

- 6 After having entered the value, press [5] key to transmit the setting contents to the DGPS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**

The Main Menu will reappear.

DGPS Setting	
1. Mode	<input type="text" value="AUTO"/>
2. Frequency	<input type="text" value="275.0KHz"/>
3. Baud Rate (BPS)	<input type="text" value="50"/>
4. DGPS Mode	<input type="text" value="ON"/>
<input type="text" value="5. Send Data"/>	
Status	
No Beacon RCV connection	
<input type="text" value="Frequency"/>	<input type="text" value="--- KHz"/>
<input type="text" value="Baud Rate"/>	<input type="text" value="--- Baud"/>
<input type="text" value="RSSI"/>	<input type="text" value="---"/>
<input type="text" value="0. EXIT"/>	

## Setting in WAAS Receiver (WAAS Setting)

Make settings in the WAAS receiver (our WAAS receiver).

Because the information the WAAS receiver receives from the satellite also includes the same information as that from DGPS Beacon station, it can perform positioning with higher precision than GPS.

### [1] WAAS Mode Setting (Mode)

Set whether or not differential information of the WAAS receiver is acquired from the Beacon or satellite.

#### Procedures

**1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

**2 Press [7] key.**

NAV Equipment Setting Menu will appear.

**3 Press [7] key.**

GPS Setting Menu will appear.

**4 Press [3] key.**

WAAS Setting Menu will appear.

**5 Press [1] key.**

From the pull-down menu, select the following:  
BEACON,  
WAAS, or  
AUTO.

**6 After having made entry, press [6] key to transmit the setting contents to the WAAS receiver.**

#### Exit

**1 Press [RADAR MENU] key.**

The Main Menu will reappear.

WAAS Setting	
1. Mode	<input type="text" value="AUTO"/>
2. Ranging	<input type="text" value="ON"/>
3. NG WAAS	<input type="text" value="NOT USE"/>
4. WAAS Select Mode	<input type="text" value="AUTO"/>
5. WAAS No.	<input type="text" value="120"/>
<input type="text" value="6. Send Data"/>	
<input type="text" value="0. EXIT"/>	





**[IV] Satellite Number Setting (WAAS Select Mode)**

Set the number of the WAAS satellite to be used.

**Procedures**

- 1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

- 2 Press [7] key.**

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.**

GPS Setting Menu will appear.

- 4 Press [3] key.**

WAAS Setting Menu will appear.

- 5 Press [4] key.**

Switching between Auto and Manual is done each time you press [4] key.

- 6 After having made entry, press [6] key to transmit the setting contents to the WAAS receiver.**

**Exit**

- 1 Press [RADAR MENU] key.**

The Main Menu will reappear.

WAAS Setting	
1. Mode	<input type="text" value="AUTO"/>
2. Ranging	<input type="text" value="ON"/>
3. NG WAAS	<input type="text" value="NOT USE"/>
4. WAAS Select Mode	<input type="text" value="AUTO"/>
5. WAAS No.	<input type="text" value="120"/>
<input type="text" value="6. Send Data"/>	
<input type="text" value="0. EXIT"/>	



**[V] Satellite Number Setting (WAAS Select Mode)**

Set the number of the WAAS satellite to be used.

To set satellite number, "MANUAL" must be selected in WAAS Select Mode.

**Procedures****1 Press [RADAR MENU] key twice.**

The Radar Menu will appear.

**2 Press [7] key.**

NAV Equipment Setting Menu will appear.

**3 Press [7] key.**

GPS Setting Menu will appear.

**4 Press [3] key.**

WAAS Setting Menu will appear.

**5 Press [5] key.**

The Code Input menu will appear.

Enter numeric values between Nos.120 and 138.

The multi-function control is also available to enter the values.

**6 After having made entry, press [6] key to transmit the setting contents to the WAAS receiver.****Exit****1 Press [RADAR MENU] key.**

The Main Menu will reappear.

WAAS Setting	
1. Mode	<input type="text" value="AUTO"/>
2. Ranging	<input type="text" value="ON"/>
3. NG WAAS	<input type="text" value="NOT USE"/>
4. WAAS Select Mode	<input type="text" value="AUTO"/>
5. WAAS No.	<input type="text" value="120"/>
<input type="text" value="6. Send Data"/>	
<input type="text" value="0. EXIT"/>	

---

## GPS Reception Status Display (GPS Status)

Display the reception status of the GPS receiver (GPS, DGPS and WAAS receivers) currently connected. Seize the status of satellites that are currently performing positioning.

### Procedures

- 1 Press [RADAR MENU] key twice.

The Radar Menu will appear.

- 2 Press [7] key.

NAV Equipment Setting Menu will appear.

- 3 Press [7] key.

GPS Setting Menu will appear.

- 4 Press [4] key.

GPS Status Menu will appear.

GPS Setting
1. GPS Process Setting
2. DGPS Setting
3. WAAS Setting
4. GPS Status
0. EXIT

### Exit

- 1 Press [0] key.

The Status Menu will be closed.

- 2 Press [RADAR MENU] key.

The menu will be closed.

GPS STATUS						
DATE /TIME (UTC)	---	---	---	---	---	---
L/L	---	---	---	---	---	---
FIX MODE	---	---	---	---	---	---
ALT	---	---	---	---	---	---
DOP LEVEL	---	---	---	---	---	---
SATELLITE No.	---	---	---	---	---	---
FIX	---	---	---	---	---	---
AZIMUTH	---	---	---	---	---	---
ELEVATE	---	---	---	---	---	---
LEVEL	---	---	---	---	---	---
STATUS	---	---	---	---	---	---
SATELLITE No.	---	---	---	---	---	---
FIX	---	---	---	---	---	---
AZIMUTH	---	---	---	---	---	---
ELEVATE	---	---	---	---	---	---
LEVEL	---	---	---	---	---	---
STATUS	---	---	---	---	---	---
RSSI	---	---	---	---	---	---
<div style="border: 1px solid black; display: inline-block; padding: 2px 10px;">0. EXIT</div>						

**GPS Status Display**

-----

The following items are to appear on the Status display.

DATE/TIME (UTC)	:	Local date and time Greenwich Mean Time
L/L	:	Current latitude and longitude
FIX MODE	:	Fix Mode (2D positioning/3D positioning)
ALT	:	Altitude of own ship. Setting the Fix Mode to 2D displays the antenna height initially set.
DOP LEVEL	:	Precision of positioning results. As the value is smaller, the indicated precision is higher.
SATELLITE No.	:	Satellite No.
FIX	:	Is positioning data used?
AZIMUTH	:	Azimuthal angle of satellite
ELEVATE	:	Elevation angle of satellite
LEVEL	:	Reception signal level
STATUS	:	Current status of satellite
RSSI	:	Reception intensity of Beacon station

## Date/Time Display Setting (Date/Time Setting)

In displaying the time, it is necessary to set the LOCAL TIME, LOCAL DATE and TIME ZONE.  
When the “ZDA” sentence of NMEA0183 is received, Date/Time is displayed automatically.

### Procedures

**1 Press [RADAR MENU] key twice.**

The RADAR Menu will appear.

**2 Press [8] key.**

The RADAR SUB Menu will appear.

**3 Press [4] key.**

The Date/Time Setting Menu will appear.

**4 Press [1] key.**

will be selected.

The setting is switched back and forth between UTC (Coordinate Universal Time) and LOCAL (local time) each time [1] key is pressed.

**5 Press [2] key.**

The Code Input Menu will appear.

**6 Enter the date.**

The date will be set. The multi-function control is also available for the entry.

After having enter the date, press ENT.

**7 Press [3] key.**

The Code Input Menu will appear.

Date/Time Setting	
1. UTC/LOCAL	<input type="text" value="UTC"/>
2. Local Date	<input type="text" value="1971/01/01"/>
3. Local Time	<input type="text" value="00:00"/>
4. Time Zone	<input type="text" value="+00:00"/>
<input type="text" value="0. EXIT"/>	

---

**8 Enter the time.**

The time will be set. The multi-function control is also available for the entry.

After having enter the time, press ENT.

**9 Press [4] key.**

The Code Input Menu will appear.

**10 Enter the time difference.**

The time difference will be set. The multi-function control is also available for the entry.

After having enter the value, press ENT.

**Exit**

**1 Press [RADAR MENU] key.**

The menu will be closed.

**Attention**

- **The “ZDA” sentence of NMEA0183 take presedence of the above setting.**

## Adjustment of Performance Monitor (NJU-64)

\* Execution of this item needs a PM unit (option).  
JMA-5206/HS has no PM option.

### Procedures

- 1 **Set the radar to Master Radar when the Interswitch is installed.**
- 2 **Press VRM1 key to display VRM1 and set the range of VRM1 to 10-18\* NM.**

- 3 **The Equipment Setup Menu will appear in accordance with the instructions of section 8.5.**

- 4 **Press [4] key.**

The TRX Setting Menu will appear.

- 5 **Press [4] key.**

The Code Input Menu will appear.

- 6 **Enter a set value.**

Adjust the PM pattern so that its outer edge is within 10 to 18 NM. The multi-function control is also available for the entry. After having enter the value, press ENT.

- 7 **Attach the INFORMATION LABEL provided with the performance monitor to an appropriate position on the display unit.**

TRX Setting	
1. Anntena Height	<input type="text" value="5-10m"/>
2. Tune Peak Adjust	<input type="text" value="0"/>
3. Tune Indicator Adjust	<input type="text" value="0"/>
4. PM Adjustment	<input type="text" value="0"/>
5. Manual Tune Adjustment	
7. Output Pulse	<input type="text" value="2048"/>
8. Antenna Location	<input type="text" value="0m"/> <input type="text" value="0m"/>
<input type="text" value="0. EXIT"/>	

**8 Press [RADAR MENU] key twice.**

The RADAR Menu will appear.

**9 Press [8] key.**

The RADAR Sub Menu will appear.

**10 Press [9] key.**

The Test Menu will appear.

**11 Press [4] key, and set PM Display to ON.**

The PM bar will appear.

**12 Write the value indicated by the PM bar and the check date to the INFORMATION LABEL you have attached to the display unit in step 7.**


The image shows a vertical menu titled "Test Menu" with the following options:

- 1. Self Test
- 2. Monitor Test
- 3. Panel Test
- 4. PM Display  ON
- 5. Error Logging
- 6. System INFO
- 0. EXIT

Below the menu, there are two data entry fields:

- MAGI: A field with a solid black bar covering the value.
- PM: A field with a dotted border and a grey bar covering the value.

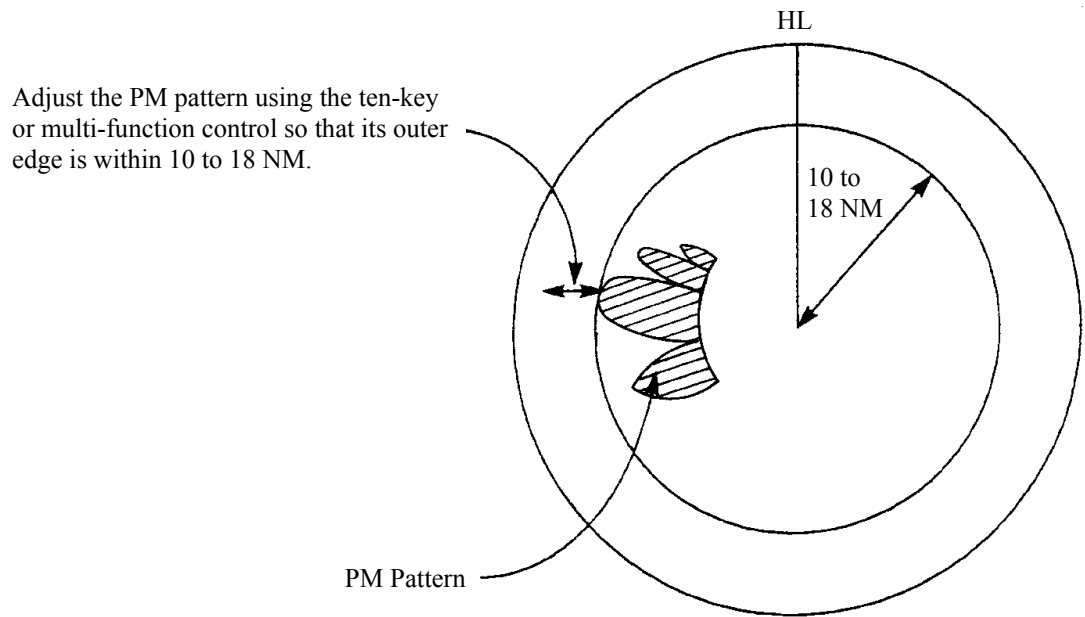


**Exit****1 Press [RADAR MENU] key.**

The menu will be closed.

- Note:**
- All target acquisitions by ATA functions will be cancelled when PM is ON. The target acquisition cancelled will not be recovered.
  - The radar image is suppressed to make the PM image easier to see. Therefore, the PM Display should be turned OFF after PM check is completed.

-----

**SECTION 9  
AFTER-SALES SERVICE**

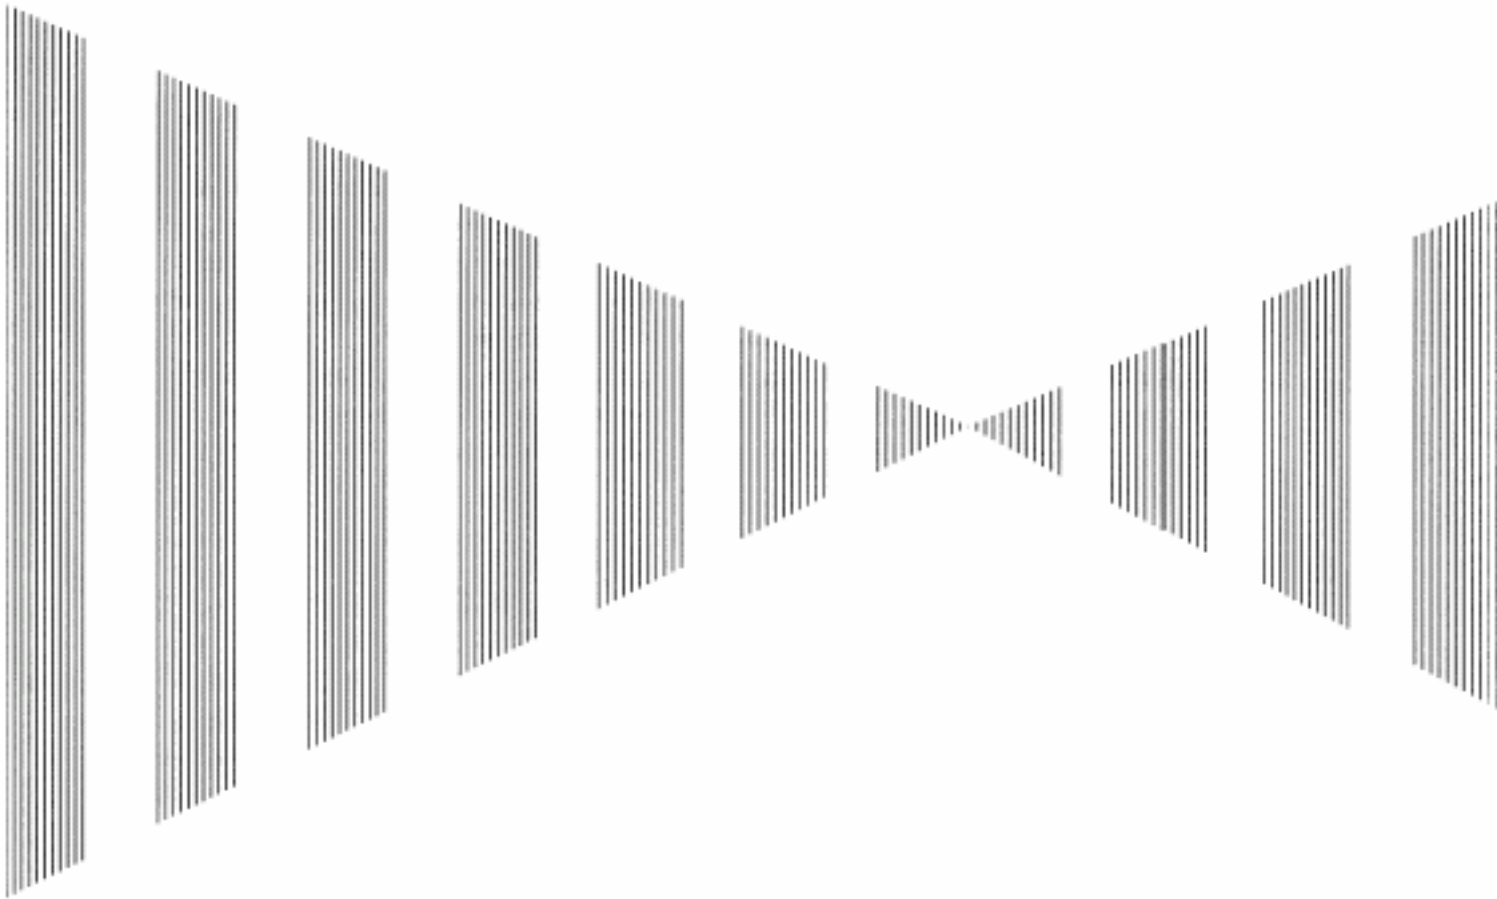

..... **When you Request for Repair** .....

If you suppose the product may be out of order, read the description in Section 8 carefully and check the suspected point again.

If it is still out of order, you are recommended to stop operation of the equipment and consult with the dealer from whom you purchased the product, or our branch office in your country or district, the sales department in our main office in Tokyo.

- **Repair within the Warranty Period**  
If any failure occurs in the product during its normal operation in accordance with the instruction manual, the dealer or JRC will repair free of charge. In case that any failure is caused due to misuse, faulty operation, negligence or force major such as natural disaster and fire, the product will be repaired with charges.
  
- **Repair after the Warranty Period**  
If any defective function of the product is recoverable by repair, the repair of it will be made at your own charge upon your request.
  
- **Necessary Information for Repair**
  - ☆ Product name, model, manufacturing date and serial number
  - ☆ Trouble conditions (as detailed as possible. Refer to “Radar Failure Check List” in page 9-2. )
  - ☆ Name of company/organization, address and telephone number

..... **Recommended Maintenance** .....

The performance of the product may deteriorate due to the secular change of the parts used in it, though such deterioration depends upon the conditions of operation.  
So checkup and maintenance is recommendable for the product in addition to your daily care.  
For maintenance, consult with the near-by dealer or our sales department.  
Such maintenance will be made with charges.

For further details of after-sale service, contact the JRC Offices in the list at the end of this manual.



## Radars Failure Check List

When placing an order for repair of the product, it is requested that you could confirm the check items and fill the results and sent the sheet to our contact.

If there is any unclear items, contact the ship on which the product is installed, and give the correct information on the product.

Ship name: \_\_\_\_\_ Phone: \_\_\_\_\_ Fax: \_\_\_\_\_

Radars general model name: JMA- \_\_\_\_\_ Serial No. : \_\_\_\_\_

(Write the full model name correctly)

- (1) Check the following items in the order of the number, and circle the applicable answer between YES or NO. If the item cannot be determined as YES or NO, explain in detail in the item (18), others.
- (2) If any of the items (1) to (5) is marked as NO, check the fuse of the product (refer to Section 8.2 and 8.3).
- (3) Check the items (4) to (17) while the transmission (TX) is ON.


\* Functions mentioned in the items (14), (15) and (17) may be optional, answer is not necessary.

No.	Check Item	Result	
		YES	NO
(1)	Power can be turned on. (The lamp on the operation panel is lit)	YES	NO
(2)	A few minutes after powering-on, it will become standby status (TX Ready).	YES	NO
(3)	When powering-on (or TX ON), LCD displays something (LCD is lit).	YES	NO
(4)	The scanner rotates at the transmission (TX) ON. (Check the following items while transmission is ON)	YES	NO
(5)	Current is supplied to the magnetron. (Refer to the instruction manual)	YES	NO
(6)	Turning is enabled. (Check with the range of 6 NM or more)	YES	NO
(7)	Fixed marker is displayed.	YES	NO
(8)	VRM is displayed.	YES	NO
(9)	While noise is displayed while set at STC and FTC minimum, GAIN maximum, IR-OFF and range 48 NM.	YES	NO
(10)	Target reflection echo is displayed.	YES	NO
(11)	Sensitivity of reflection echo is normal.	YES	NO
(12)	EBL is displayed.	YES	NO
(13)	Cursor mark moves.	YES	NO
*(14)	GYRO course can be set and normally displayed.	YES	NO
*(15)	LOG speed can be normally displayed.	YES	NO
(16)	ATA works normally.	YES	NO
*(17)	If equipped with an interswitch, when switching from the straight mode (II) to (X), the failures (items marked NO) in the above (1) to (16), are switched over to the other unit.	YES	NO

(18) Others (Error message, etc.) \_\_\_\_\_



# SECTION 10 DISPOSAL

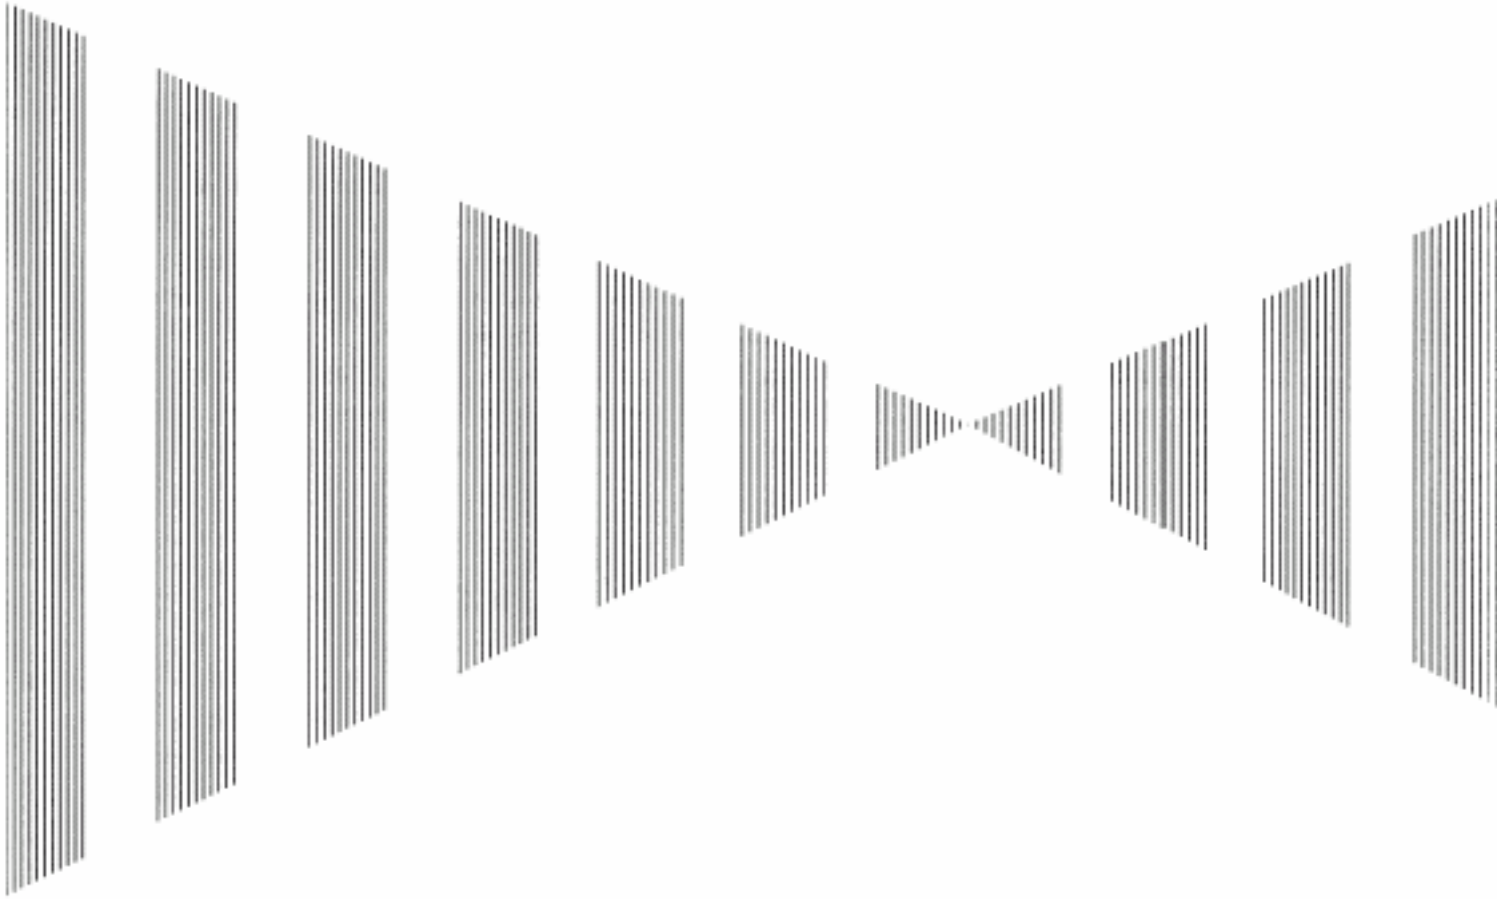

<b>DISPOSAL .....</b>	<b>1</b>
<b>10.1 Disposal of the Unit .....</b>	<b>1</b>
<b>10.2 Disposal of Used Batteries.....</b>	<b>2</b>
<b>10.3 Disposal of Used Magnetron.....</b>	<b>3</b>

# DISPOSAL



## 10.1 DISPOSAL OF THE UNIT

When disposing of this unit, be sure to follow the local laws and regulations for the place of disposal.



## 10.2

# DISPOSAL OF USED BATTERIES

 <b>WARNING</b>	
	When disposing of used lithium batteries, be sure to insulate the batteries by taping the ⊕ and ⊖ terminals. Otherwise, heat generation, explosion or a fire may occur.

In this unit, Lithium batteries are used for the following parts:  
Radar Processing circuit (CDC-1300): BT1 (Maxell: CR2450)


- Do not store used lithium batteries. Dispose of them in accordance with regulations of local government.
- When disposing of used lithium batteries be sure to insulate the batteries by taping the ⊕ and ⊖ terminals. For disposal of batteries, be sure to follow the local laws and regulations. For detail, consult with the dealer you purchased the product our business office, or local government.

## **10.3** **DISPOSAL OF USED MAGNETRON**

Magnetron is used in the Scanner (NKE—2062/2102/2252)

- When the magnetron is replaced with a new one, return the used magnetron to our dealer or business office.  
For detail, consult with our dealer or business office.

# SECTION 11 SPECIFICATIONS

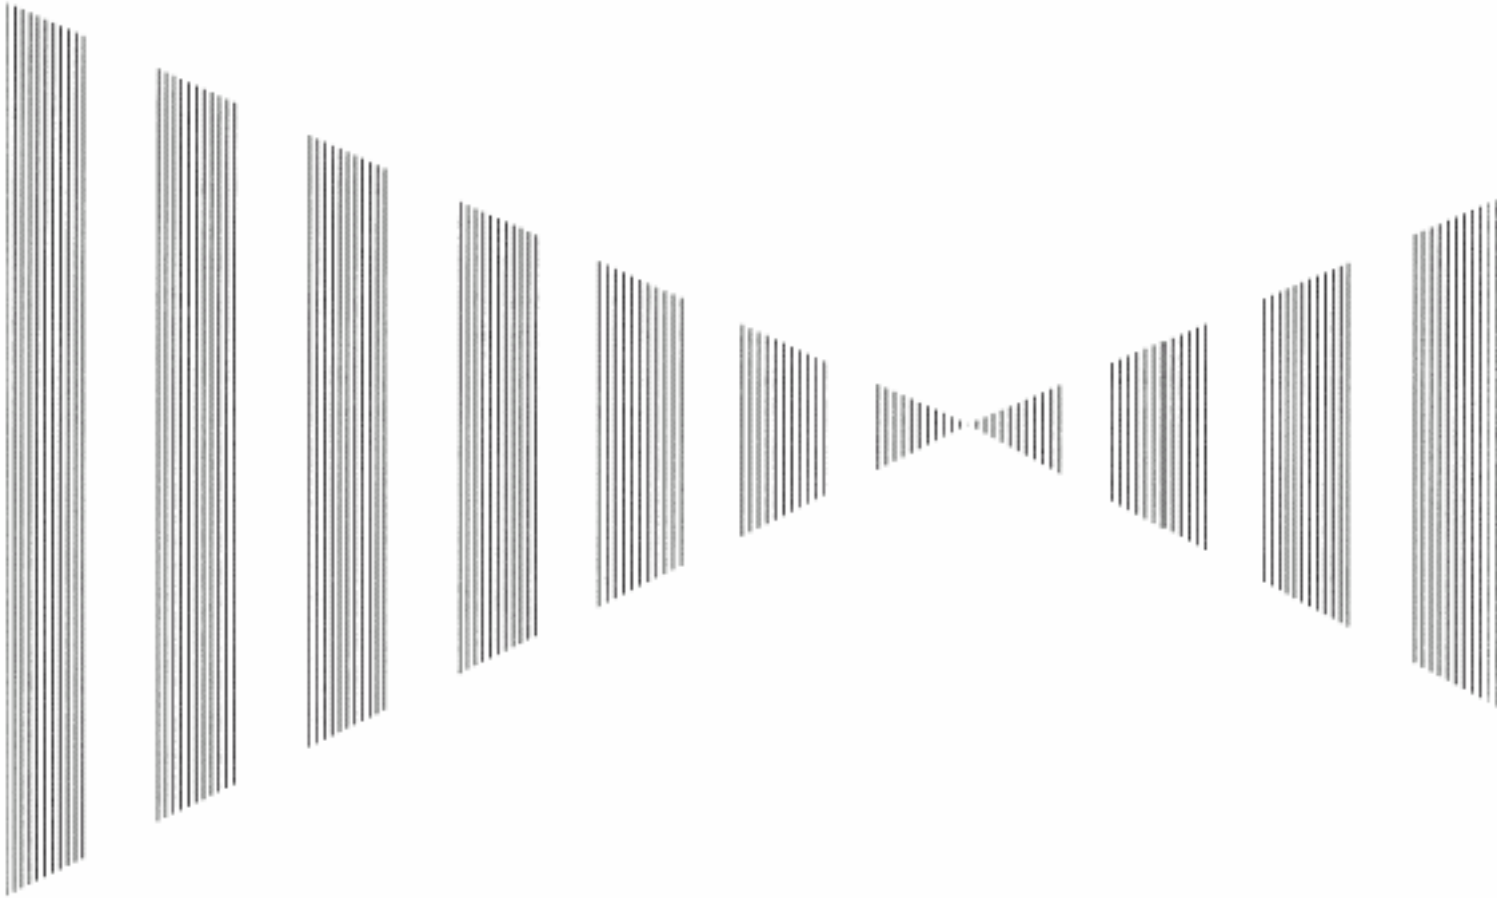

11.1	JMA-5206/HS TYPE RADAR.....	11-1	11.10	ATA .....	11-12
11.2	JMA-5210-4/6 TYPE RADAR.....	11-2	11.11	KEYBOARD UNIT(NCE-7699) ....	11-13
11.3	JMA-5220-7/9 TYPE RADAR.....	11-3	11.12	INPUT ENABLE SIGNAL.....	11-14
11.4	SCANNER (NKE-2062/HS).....	11-4	11.13	OUTPUT ENABLE SIGNAL .....	11-15
11.5	SCANNER (NKE-2102).....	11-5	11.14	STANDARD CONFIGURATION..	11-16
11.6	SCANNER (NKE-2252-7/9).....	11-6	11.15	EQUIPMENT DISTANCE BETWEEN OTHER INSTRUMENTS.....	11-17
11.7	DISPLAY UNIT(NCD-4340) .....	11-7	11.16	OTHERS (OPTION) .....	11-18
11.8	PROCESSOR UNIT(NDC-1340).....	11-8			
11.9	PLOTTER UNIT.....	11-10			

# 11.1

## JMA-5206/HS TYPE RADAR

(1) Type of Emission	P0N
(2) Display	Color Raster Scan
(3) Screen	15-inch Color LCD Effective diameter of radar display, more than 180 mm
(4) Range Scale	0.125, 0.25, 0.5, 0.75, 1.5, 3, 6, 12, 24, 48, 96nm
(5) Range Resolution	Less than 25m
(6) Minimum Detectable Range	Less than 28m
(7) Range Accuracy	Less than 1% of the maximum distance of the range scale in use or less than 15m whichever is larger
(8) Bearing Accuracy	Less than 1°
(9) Bearing Indication	Relative Motion mode: Head-up/Course-up/North-up True Motion mode: Course-up/North-up
(10) Ambient Condition	According to IEC60945-4 Temperature Scanner: -25 to +55°C (Storage Temperature: -25 to +70°C) Other Unit except Scanner: -15 to +55°C Relative Humidity 93% at +40°C Vibration 2 to 13.2Hz, amplitude $\pm 1\text{mm} \pm 10\%$ 13.2 to 100Hz, acceleration $7\text{m/s}^2$ Velocity of the wind 51.5m/s(100kt)
(11) Power Supply Input	+24VDC (Display Unit) +24VDC (Scanner) * Display Unit and Scanner correspond to 100VAC/220VAC when use NBA-3308.
(12) Power Consumption	Approx. 300W (In maximum wind velocity)
(13) Power Supply Voltage Fluctuation	+32V/24V/12VDC $-10/+30\%$ (JMA-5206) +24VDC $-10/+30\%$ (JMA-5206HS)
(14) Pre-heating Time	Approx. Within 1min30sec



# 11.2 JMA-5210-4/6 TYPE RADAR

(1) Type of Emission	P0N
(2) Display	Color Raster Scan
(3) Screen	15-inch Color LCD Effective diameter of radar display, more than 180 mm
(4) Range Scale	0.125, 0.25, 0.5, 0.75, 1.5, 3, 6, 12, 24, 48, 96nm
(5) Range Resolution	Less than 25m
(6) Minimum Detectable Range	Less than 28m
(7) Range Accuracy	Less than 1% of the maximum distance of the range scale in use or less than 15m whichever is larger
(8) Bearing Accuracy	Less than 1°
(9) Bearing Indication	Relative Motion mode: Head-up/Course-up/North-up True Motion mode: Course-up/North-up
(10) Ambient Condition	According to IEC60945-4 Temperature Scanner: -25 to +55°C (Storage Temperature: -25 to +70°C) Other Unit except Scanner: -15 to +55°C Relative Humidity 93% at +40°C Vibration 2 to 13.2Hz, amplitude $\pm 1\text{mm} \pm 10\%$ 13.2 to 100Hz, acceleration $7\text{m/s}^2$ Velocity of the wind 51.5m/s(100kt)
(11) Power Supply Input	+24VDC (Display Unit) +24VDC (Scanner) * Display Unit and Scanner correspond to 100VAC/220VAC when use NBA-3308.
(12) Power Consumption	Approx. 300W (In maximum wind velocity)
(13) Power Supply Voltage Fluctuation	+24VDC $-10/+30\%$ (Display Unit) +24VDC $-10/+30\%$ (Scanner Unit)
(14) Pre-heating Time	Approx. Within 1min30sec

---

# 11.3 JMA-5220-7/9 TYPE RADAR

(1) Type of Emission	P0N
(2) Display	Color Raster Scan
(3) Screen	15-inch Color LCD Effective diameter of radar display, more than 180 mm
(4) Range Scale	0.125, 0.25, 0.5, 0.75, 1.5, 3, 6, 12, 24, 48, 96nm
(5) Range Resolution	Less than 25m
(6) Minimum Detectable Range	Less than 28m
(7) Range Accuracy	Less than 1% of the maximum distance of the range scale in use or less than 15m whichever is larger
(8) Bearing Accuracy	Less than 1°
(9) Bearing Indication	Relative Motion mode: Head-up/Course-up/North-up True Motion mode: Course-up/North-up
(10) Ambient Condition	According to IEC60945-4 Temperature Scanner: -25 to +55°C (Storage Temperature: -25 to +70°C) Other Unit except Scanner: -15 to +55°C Relative Humidity 93% at +40°C Vibration 2 to 13.2Hz, amplitude $\pm 1\text{mm} \pm 10\%$ 13.2 to 100Hz, acceleration $0.7\text{m/s}^2$ Velocity of the wind 51.5m/s (100kt)
(11) Power Supply Input	+24VDC (Display Unit) +24VDC (Scanner) * Display Unit and Scanner correspond to 100VAC/220VAC when use NBA-3308.
(12) Power Consumption	Approx. 400W (In maximum wind velocity)
(13) Power Supply Voltage Fluctuation	+24VDC $-10/+30\%$ (Display Unit) +24VDC $-10/+30\%$ (Scanner Unit)
(14) Pre-heating Time	Approx. Within 3min



# 11.4 SCANNER (NKE-2062/HS)

(1) Dimensions	Height 432mm×Swing Circle 1220mm		
(2) Mass	Approx. 24kg		
(3) Polarization	Horizontal Polarization		
(4) Directional Characteristic	Horizontal Beam Width:	2° (-3dB width)	
	Vertical Beam Width:	30° (-3dB width)	
	Sidelobe Level:	Below -23dB (within ±10°)	
		Below -26dB (outside ±10°)	
(5) Revolution	NKE-2062 : Approx. 27rpm (Normal)		
	NKE-2062HS : Approx. 48rpm (Normal)		
(6) Peak Power	4.9 kW		
(7) Transmitting Frequency	9410 ±30MHz		
(8) Transmitting Tube	Magnetron [MSF1422B]		
(9) Pulse width/Repetition Frequency	Short	Middle	Long
	0.125nm	0.08μS/2250Hz	
	0.25nm	0.08μS/2250Hz	
	0.5nm	0.08μS/2250Hz	
	0.75nm	0.08μS/2250Hz	0.25μS/1700Hz
	1.5nm	0.08μS/2250Hz	0.25μS/1700Hz
	3nm	0.25μS/1700Hz	0.5μS/1200Hz
	6nm	0.25μS/1700Hz	0.5μS/1200Hz
	12nm	0.25μS/1700Hz	0.5μS/1200Hz
	24nm		1.0μS/650Hz
	48nm		1.0μS/650Hz
	96nm		1.0μS/650Hz
(10) Duplexer	Circulator + Diode Limiter		
(11) Mixer	MIC Front End		
(12) Intermediate Frequency Amplifier	Intermediate Frequency: 60MHz		
	Band Width:	20MHz(0.08μS)	
		6MHz(0.25μS,0.5μS)	
		3MHz(0.8μS, 1μS)	
	Gain:	More than 90dB	
	Amplifying Characteristics:	Logarithmic Amplifier	
(13) Overall Noise Figure	6dB(Average)		

# 11.5 SCANNER (NKE-2102)

(1) Dimensions	Height 440mm×Swing Circle 1910mm			
(2) Mass	Approx. 31kg			
(3) Polarization	Horizontal Polarization			
(4) Directional Characteristic	Horizontal Beam Width:	1.2° (-3dB width)		
	Vertical Beam Width:	20° (-3dB width)		
	Sidelobe Level:	Below -26dB (within ±10°)		
		Below -30dB (outside ±10°)		
(5) Revolution	Approx. 27rpm (Normal)			
(6) Peak Power	10kW			
(7) Transmitting Frequency	9410 ±30MHz			
(8) Transmitting Tube	Magnetron [MSF1425B]			
(9) Pulse width/Repetition Frequency	Short	Middle	Long	
	0.125nm	0.08μS/2250Hz		
	0.25nm	0.08μS/2250Hz		
	0.5nm	0.08μS/2250Hz		
	0.75nm	0.08μS/2250Hz	0.25μS/1700Hz	
	1.5nm	0.08μS/2250Hz	0.25μS/1700Hz	0.5μS/1200Hz
	3nm	0.25μS/1700Hz	0.5μS/1200Hz	0.8μS/750Hz
	6nm	0.5μS/1200Hz	0.8μS/750Hz	1.0μS/650Hz
	12nm	0.5μS/1200Hz	0.8μS/750Hz	1.0μS/650Hz
	24nm			1.0μS/650Hz
	48nm			1.0μS/650Hz
	96nm			1.0μS/650Hz
(10) Duplexer	Circulator + Diode Limiter			
(11) Mixer	MIC Front End			
(12) Intermediate Frequency Amplifier	Intermediate Frequency: 60MHz			
	Band Width: 20MHz(0.08μS)			
	6MHz(0.25μS, 0.5μS)			
	3MHz(0.8μS, 1μS)			
	Gain: More than 90dB			
	Amplifying Characteristics: Logarithmic Amplifier			
(13) Overall Noise Figure	6dB(Average)			





# 11.6 SCANNER (NKE-2252-7/9)

(1) Dimensions	25kW-7ft: Height 440mm×Swing Circle 2270mm 25kW-9ft: Height 440mm×Swing Circle 2825mm			
(2) Mass	25kW-7ft: Approx. 54 kg 25kW-9ft: Approx. 56 kg			
(3) Polarization	Horizontal Polarization			
(4) Directional Characteristics	Horizontal Beam Width:	1.0° (7ft, -3dB width) 0.8° (9ft, -3dB width)		
	Vertical Beam Width	20° (7/9ft, -3dB width)		
	Sidelobe Level:	Below -26dB (7/9ft, within ±10°) Below -30dB (7/9ft, outside ±10°)		
(5) Revolution	24rpm (7/9ft, Normal)			
(6) Peak Power	25kW ±50%			
(7) Transmitting Frequency	9410 ±30MHz			
(8) Transmitting Tube	Magnetron [M1568B(J)]			
(9) Pulse Width/Repetition Frequency	Short	Middle	Long	
	0.125nm	0.07μS/2200Hz		
	0.25nm	0.07μS/2200Hz		
	0.5nm	0.07μS/2200Hz		
	0.75nm	0.07μS/2200Hz	0.2μS/2200Hz	
	1.5nm	0.07μS/2200Hz	0.2μS/2200Hz	0.4μS/1400Hz
	3nm	0.2μS/2200Hz	0.4μS/1400Hz	0.8μS/750Hz
	6nm	0.4μS/1400Hz	0.8μS/750Hz	1.0μS/650Hz
	12nm	0.4μS/1400Hz	0.8μS/750Hz	1.0μS/650Hz
	24nm			1.0μS/650Hz
	48nm			1.0μS/650Hz
	96nm			1.2μS/520Hz
(10) Duplexer	Circulator + Diode Limiter			
(11) Mixer	MIC Front End			
(12) Intermediate Frequency Amplifier	Intermediate Frequency: 60MHz Band Width: 20MHz(0.08μS) 6MHz(0.2μS, 0.4μS) 3MHz(0.8μS, 1μS, 1.2μS) Gain: More than 90dB Amplifying Characteristics: Logarithmic Amplifier			
(13) Overall Noise Figure	6dB(Average)			

---

# 11.7

## DISPLAY UNIT(NCD-4340)

- |                            |  |
|----------------------------|--|
| (1) Structure              | Desk Top Type<br>(LCD Monitor Unit/Keyboard Unit/Processor Unit Separation Structure)  |
| (2) Screen                 | 15-inch Color LCD 1024x768 dot (XGA)   |
| (3) Display mode           | Radar mode<br>Synthesis mode (Synthesis Radar echo and Coastline)<br>Plotter mode (Require Plotter Unit (option))  |
| (4) Range Scale            | 0.125, 0.25, 0.5, 0.75, 1.5, 3, 6, 12, 24, 48, 96nm  |
| (5) Range Marker           | 0.025, 0.05, 0.1, 0.25, 0.25, 0.5, 1, 2, 4, 8, 16nm  |
| (6) Bearing Indication     | Rader mode/Synthesis mode<br>Relative motion: North-up, Course-up, Head-up<br>True motion: North-up, Course-up<br>True motion (Plotter mode (Option)): N-up, C-up                                  |
| (7) Variable Range Maker   | 2VRM (Digital Display)<br>VRM unit of Display: nm, km<br>VRM Range:0.000 to 97.8nm (0.000 to 181.1km)  |
| (8) Electric Bearing lines | 2EBL(Digital Display)<br>Each EBL can be floating displayed.<br>EBL unit of Display: 0.1°<br>EBL Range: 0.000° to 359.9°<br>Bearing Indication: Relative bearing and True bearing can be switched. |
| (9) Cursor                 | Target Range, Bearing and Latitude presentation can be possible to move with trackball.  |



# 11.8 PROCESSOR UNIT(NDC-1340)

- |                                     |  |
|-------------------------------------|--|
| (1) Structure                       | Desk Top Type (Horizontal putting and length putting using combinedly)   |
| (2) Dimensions                      | Height 125mm×Width 340mm×Depth 347mm   |
| (3) Mass                            | Approx. 4kg  |
| (4) Tune Method                     | Auto(Bar-graph indicate)<br>* Manual operation can be adjusted in maintenance mode.  |
| (5) STC (SEA)                       | AUTO/MANUAL  |
| (6) FTC (RAIN)                      | AUTO/MANUAL  |
| (7) Radar Interference Rejection    | Built-in (The effect can be adjusted by three stages.)   |
| (8) Scan Correlation                | Function1/2/3, 2 Peak Hold Processing1/2<br>Automatic change of processing method.<br>(Target range synchronize/Clutter synchronize)   |
| (9) Bearing Marker                  | 360° in 1° digit.<br>Relative motion: Fixation<br>True motion: Rewrite at a position correct in every scan.  |
| (10) Heading Line                   | Electronic (Stern Line can be displayed.)  |
| (11) Guard Zone Alarm (Radar Alarm) | Invasion, Seccession, OFF can be Selected.<br>With buzzer sound.(Possible to output to External buzzer. )<br>Ring.<br>Automatically acquisition by ATA described in Section “ATA”. |
| (12) Off Center                     | Within 66% of the radius of any range. (Except 96nm)<br>Can be operated in all mode in relative motion.<br>Trail is succeed at Off Center mode.                                    |
| (13) True motion Unit               | Built-in (Except 96nm)   |
| (14) True motion reset position     | 66% of radius of any range.<br>Possible to manual reset.   |

- 
- |                              |  |
|------------------------------|--|
| (15) Twice zoom              | The zoom center is 66% radius of any range. (Except 0.125nm)   |
| (16) Radar trails indication | <p>True motion: (Only true motion)</p> <p>Relative motion:</p> <p>True motion trails and relative motion trails can be selected.</p> <p>Trail time length:</p> <p>15 sec/30 sec/1 min/3 min/6 min/10 min/15 min/30 min/60 min/Continuous/OFF</p> <p>Arbitrary trail time length can be displayed at any time.</p> <p>Possible to display time series trail and continuous trail by color classification.</p> <p>Built-in Trail thinning process.</p> <p>Trail function can be use at true motion reset.</p> <p>When range is changed, Trail function can be use.</p> <p>Trail function can be use at Off Center. (Relative motion)</p> <p>When motion indication and bearing indication changed, Trail function can be use.(Only true motion trails indication.)</p> |
| (17) Variety of Pulse width  | Long/Middle/Short (0.75, 1.5, 3,6,12 nm)   |
| (18) Target enhance          | 3 stages can be changed.   |
| (19) Correct position        | When synthesis Radar and Coastline is displayed, position can be corrected by manually.  |
| (20) Display color           | <p>Radar echo: 16 stages (Yellow, Green, Amber, Purple, Red)</p> <p>Radar trails: 16 stages (White, Cyan, Green)</p> <p>Fixed Maker: Monochrome (Cyan)</p> <p>VRM1/VRM2/EBL1/EBL2: Monochrome (Cyan)</p> <p>Character/Bearing Marker: 5 stages (White, Green, Amber, Black, Red)</p> <p>Cursor: Monochrome (White)</p> <p>Heading Line/Vector/ATA/AIS:4 stages(White, Black, Cyan, Green)</p> <p>Own Ship's track/Another Ship's track: 7 stages</p> <p>Coastline/Isobaths: 16 stages</p>  |



# 11.9 PLOTTER UNIT

## (1) Plotter (Normal) (Synthesis mode)

Projection:	Mercator projection (Latitude 70 degree or less.)
Scale:	Radar synchronize range scale
Own ship trail:	Color of 1 stage. Interval of storage 3/5/10/30 sec, 1/3/5/10/30/60 min or every 0.1/0.2/0.3/0.5/1/3/5/10 nm and OFF
Cursor mark :	Storage Capacity 7,000 point
Coastline data :	Coastline ROM Card(Optional) (ERC, JRC, C-Map NT+) One selected isobath can be displayed.
Painting out:	ON/OFF can be selected.

## (2) Plotter (Option) (Synthesis mode)

Projection:	Mercator projection (Latitude 70 degree or less.)
Scale:	Synchronize range scale
Own ship trail:	Color of 7 stages. Interval of storage: 3/5/10/30 sec, 1/3/5/10/30/60 min or every 0.1/0.2/0.3/0.5/1/3/5/10 nm and OFF Storage capacity of own ship trail: 7,000 point
Cursor mark:	Color of 7 stages Storage capacity of cursor mark: 20,000 point Variety of cursor Mark: 19
Event mark:	Color of 7 stages Storage capacity of event mark: Include in cursor mark Variety of event mark: 3 kinds, (Two kinds can be switched. /8 form to selection.) Variety of external event mark: One kind, Monochrome
Line:	Color of 7 stage Storage capacity of line: Include in cursor mark Variety of line: Solid line, broken line, alternate long and short dash line
Coast line data:	Coast line ROM card (Option)(ERC, JRC, C-Map NT+) Selected one isoline can be displayed.
Painting out:	ON/OFF can be selected.
External memory:	Memory card (Option)
Destination and sea route:	Destination can be set up to 99 point. Information of destination: Azimuth, distance and the time to required destination. Setting of sea route: 10 sea routes. (10 destination for one sea route can be set.) Alarm of sea route: Destination, Secession, Invetion, Secession
Position compensation:	Radar display synchronize range scale coast line by manual.

(3) Plotter (Option) (Synthesis mode)

Projection:	Mercator projection (Latitude 85 degree or less.)
Scale:	1/1,000 to 1/10,000,000 are continuously selected. 10 stage can be changed (Preset can be used)
Own ship trail:	Color of 7 stages. Interval of storage: 3/5/10/30 sec, 1/3/5/10/30/60 min or every 0.1/0.2/0.3/0.5/1/3/5/10 nm and OFF Storage capacity of own ship trail: 7,000 point
Cursor mark:	Color of 7 stages Storage capacity of cursor mark: 20,000 point Variety of cursor Mark: 19
Event mark:	Color of 7 stages Storage capacity of event mark: Include in cursor mark Variety of event mark: 3 kinds, (Two kinds can be switched. /8 form to selection.) Variety of external event mark: One kind, Monochrome
Line:	Color of 7 stage Storage capacity of line: Include in cursor mark Variety of line: Solid line, broken line, alternate long and short dash line
Coast line data:	Coast line ROM card (Option)(ERC, JRC, C-Map NT+) Selected one isoline can be displayed.
Painting out:	ON/OFF can be selected.
External memory:	Memory card (Option) Own ship trail, another ship trail, cursor mark, event mark, line, destination, sea route can be memorized.
Destination and sea route:	Destination can be set up to 99 point. Information of destination: Azimuth, distance and the time to required destination. Setting of sea route: 10 sea routes. (10 destination for one sea route can be set.) Alarm of sea route: Destination, Seccession, Invetion, Seccession



# 11.10 ATA

## Radar mode, synthesis mode

Manual acquisition, Automatically acquisition (by two of guard ring)

Automatic tracking of 30 targets can be done.

Maximum tracking range: 32nm

Display of tracking data: 6 at the same time. (Can be scroll.)

Naming function: Possible to name by the alphabet up to 8 character to each target.

The range, azimuth, CPA, TCPA, true course, true speed, BCR, BCT of target can be displayed.

(When naming is displayed, BCR/BCT can't be displayed.)

Vector display: True/Relative

Past position:

Alarm of danger ship: Depends on CPA/TCPA setting.

## Synthesis mode

Another ship trail: 20 target.s 1500 point per one target can be displayed. (Own ship trail and marks are another.)

Display color: Color of 7 stages (The display color of each target can be set.)

(The display color of all targets can be set by the batch. In this case, the display color is one color.)

Interval of storage: 3/5/10/30 sec, 1/3/5/10/60 min, 1/3/5/10 nm Possible to storage in memory card (Option).

# 11.11

## KEYBOARD UNIT(NCE-7699)

- (1) Structure                      Structure of keyboard unit is separate from processor unit.  
Desk-Top type  
Correspond Flush mount
- (2) Switch                         Gain (Transmit pulse width can be changed by PUSH-SW.)  
SEA (AUTO/MANU can be changed by PUSH-SW.)  
RAIN (AUTO/MANU can be changed by PUSH-SW.)  
MULTI (Adjustment item can be changed by PUSH-SW.)  
EBL (Floating EBL ON/OFF can be changed by PUSH-SW.)  
VRM  
Trackball
- (3) Operation switch
- |   |   |
|---|---|
| STBY/OFF (Standby/Power off):             | Stop transmit, Power off.   |
| TX/OFF (Transmit start/Power off):        | Start transmit, Power off   |
| PANEL(Brightness of keyboard adjustment): | Brightness of keyboard switch adjust.                             |
| ALARM ACK(Stop Alarm):                    | Acknowledge and stop alarm.                                       |
| EBL1(EBL1):                               | Selection display and non-display of EBL1.                        |
| EBL2(EBL2):                               | Selection display and non-display of EBL2.                        |
| VRM1(VRM1):                               | Selection display and non-display of VRM1.                        |
| VRM2(VRM2):                               | Selection display and non-display of VRM2.                        |
| RANGE+(Increase display range):           | Increase display range.   |
| RANGE-(decrease display range):           | decrease display range.   |
| ACQ(acquisition):                         | ATA target acquisition  |
| TGT DATA(Numeric display):                | Numeric display of tracking target.                               |
| TGT CNCL(Release of selection):           | Release of selection of tracking target.                          |
| MOB(Marker):                              | Turning on and release marker.                                    |
| ENT(Enter):                               | Left side button of trackball.                                    |
| CLR/INFO(Release/Information):            | Right side of trackball.  |
| MAP(Display mode):                        | Selection display and non-display of MAP(NAV LINE, etc...).       |
|   | Selection of Rader, Synthesis and Plotter mode.                   |
| AZI MODE(Display azimuth):                | Selection of North-up, Course-Up, Head-Up.                        |
| TM/RM(True/Relative Motion):              | Selection true motion, relative motion.                           |
| RR/HL(Fixed ring/Heading Line):           | Selection display and non-display of fixed ring and heading line. |
|   | Off center operation  |
| OFF CENT(Off Center):                     | Setting and release of guard zone.                                |
| GZ ALARM (Guard zone alarm):              | Selection of true motion and relative motion of vector.           |
| VECT T/R (True/Relative motion vector):   | Selection display and non-display of trails.                      |
|   | Selection of screen arrangement of color.                         |
| TRAILS (Trails):                          | Selection of signal processing.                                   |
| Day/Night(Brightness of screen switch):   | User assignment key1.   |
| FUNC(Function):                           | User assignment key2.   |
| USER KEY1(User key1):                     | Rader menu.   |
| USER KEY2(User key2):                     | Selection display and non-display of mark.                        |
| RADAR MENU(Radar menu):                   | ATA menu.   |
| MARK(MARK):                               |   |
| ATA MENU(ATA menu):                       |   |





# 11.12

## INPUT ENABLE SIGNAL

- |     |                                      |  |
|-----|--------------------------------------|--|
| (1) | Navigation equipment:                | NMEA0183<br>Receive capability sentence.<br>Longitude/Latitude: GGA>RMC>RMA>GNS/GLL<br>Waypoint: RMB>BWC(BWR)<br>COG/SOG: RMC>RMA>VTG<br>SPEED: VBW<br>Day/Time information: ZDA<br>Rate of Turn : ROT<br>Rudder : RSA                       |
| (2) | Bearing signal:                      | GYRO-SYNC: 360X, 180X, 90X, 30X. (Require optional NSK unit)<br>GYRO-STEP: 360X, 180X, 90X, 30X. (Require optional NSK unit)<br>JRC-NSK format (JLR-10)<br>IEC61162-2 38400bps: HDT<br>IEC61162-1: HDT>HDG>HDM>VHW<br>※Can't be use for ATA. |
| (3) | Speed signal:                        | LOG-SYNC: 360X, 180X,90X, 30X. (Require optional NSK unit)<br>LOG-PULSE: 800, 400, 200, 100. (Require optional NSK unit)   |
| (4) | External event mark:                 | Contact input by way of terminal board.  |
| (5) | Radar buoy:                          | Negative input   |
| (6) | Depth:                               | DPT>DBK>DBT>DBS  |
| (7) | Water temperature:                   | MTW  |
| (8) | Tendency:                            | CUR, JRC format  |
| (9) | Direction of wind, velocity of wind: | MWV, MWD   |

---

# 11.13

## OUTPUT ENABLE SIGNAL

- (1) Slave video                      Radar video: TIY, VD, BP(2048p), BZ (Option)
- (2) Navigation information      NMEA0183
  - Radar system data: RSD
  - Own ship data: OSD
  - ARPA data: TTM
  - Target data latitude/longitude: TLL
  - Alarm: ALR
- (3) External alarm                Contact output by way of NSK unit NCT-4106. (Option)
- (4) External monitor            Multi scan monitor, Analog RGB, HD15pin Connector (Option)



# 11.14

## STANDARD CONFIGURATION

- (1) Scanner 1
- (2) Display unit 1 (Processor unit, LCD unit, Keyboard unit)
- (3) Equipment cable 4.9/10/25kW (Both end was connectors.)
- (4) Equipment reserve parts 1
- (5) Instruction manual 1 (Japanese or English)

---

# 11.15

## EQUIPMENT DISTANCE BETWEEN OTHER INSTRUMENTS

	Maximum
(1) LCD monitor to processor unit	5m
(2) Keyboard unit to processor unit	5m
(3) Scanner to display unit (10/25kw)	65m
(4) Scanner to display unit (4.9kw NKE-2062 DC12V)	20m
(5) Scanner to display unit (4.9kw NKE-2062 DC32V/24V)	30m
(5) Scanner to display unit (4.9kw NKE-2062HS DC24V)	30m

\*1 Total distance between scanner and display unit must be 65m or less.




# **11.16** OTHERS (OPTION)

- NSK unit
- Plotter (Built-in)
- AIS interface (Built-in)
- Coast line ROM card
- Memory card



# APPENDIX

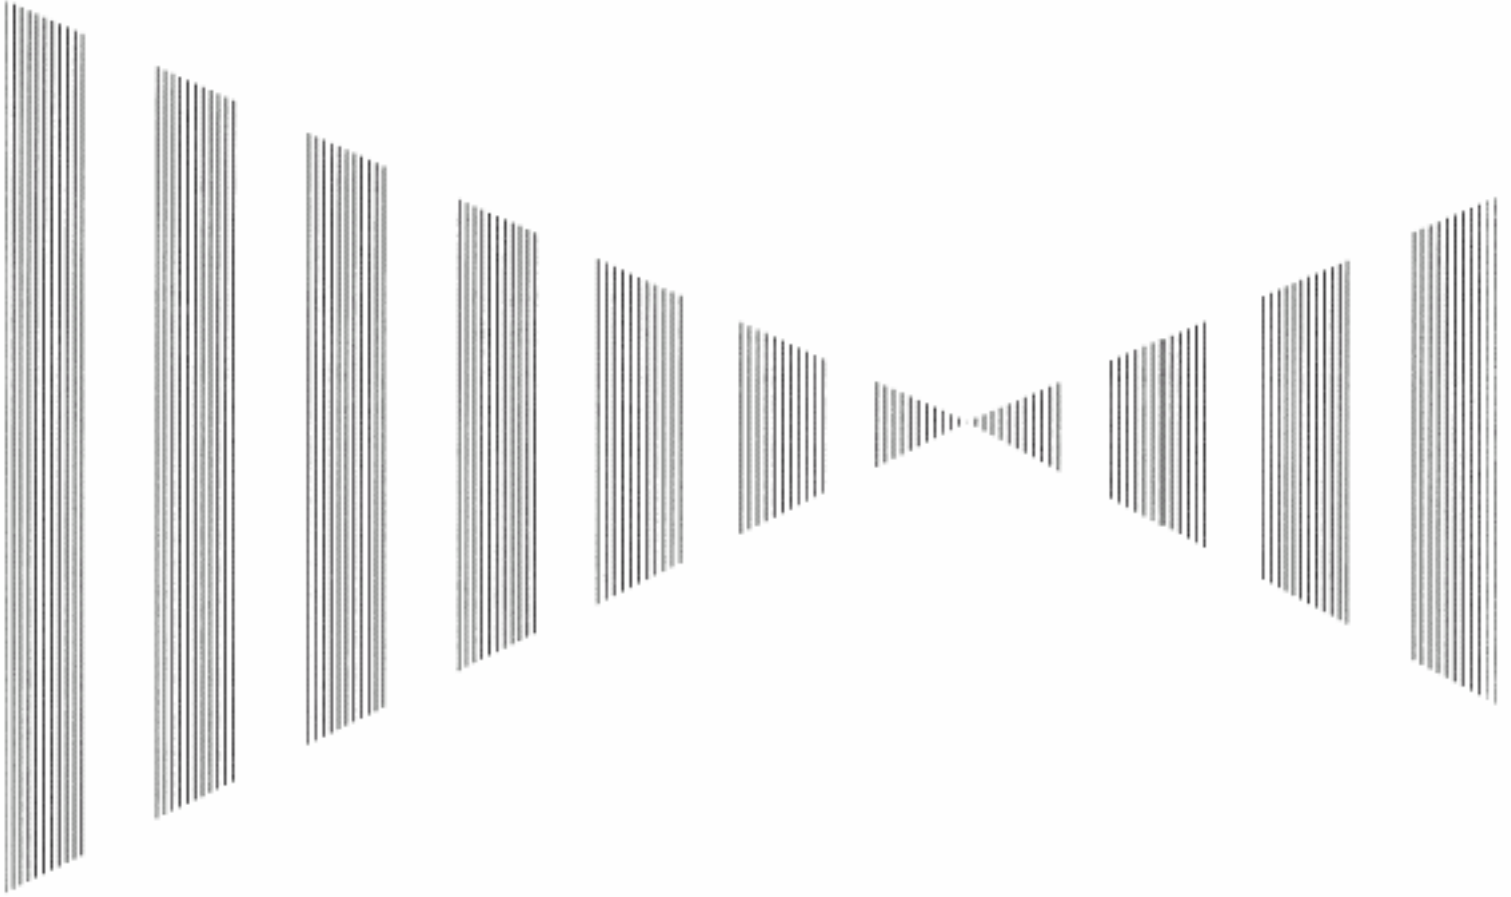

**FIGURE 1 JMA-5206/HS, JMA-5210-4/6,  
JMA-5220-7/9 BLOCK DIAGRAM**

**FIGURE 2 JMA-5206/HS INTER-CONNECTION  
DIAGRAM**

**FIGURE 3 JMA-5210-4/6 INTER-CONNECTION  
DIAGRAM**

**FIGURE 4 JMA-5220-7/9 INTER-CONNECTION  
DIAGRAM**


**FIGURE 5 PRIMARY POWER SUPPLY DIAGRAM,  
TYPE JMA-5206/HS ,JMA-5210-4/6,  
JMA-5220-7/9**

**FIGURE 6 PROCESSOR UNIT, NDC-1340  
INTER-CONNECTION DIAGRAM**

**FIGURE 7 KEY-BOARD UNIT, NCE-7699**

**INTER-CONNECTION DIAGRAM**


**FIGURE 8 JMA-5200 ON-SCREEN CONTROLS**

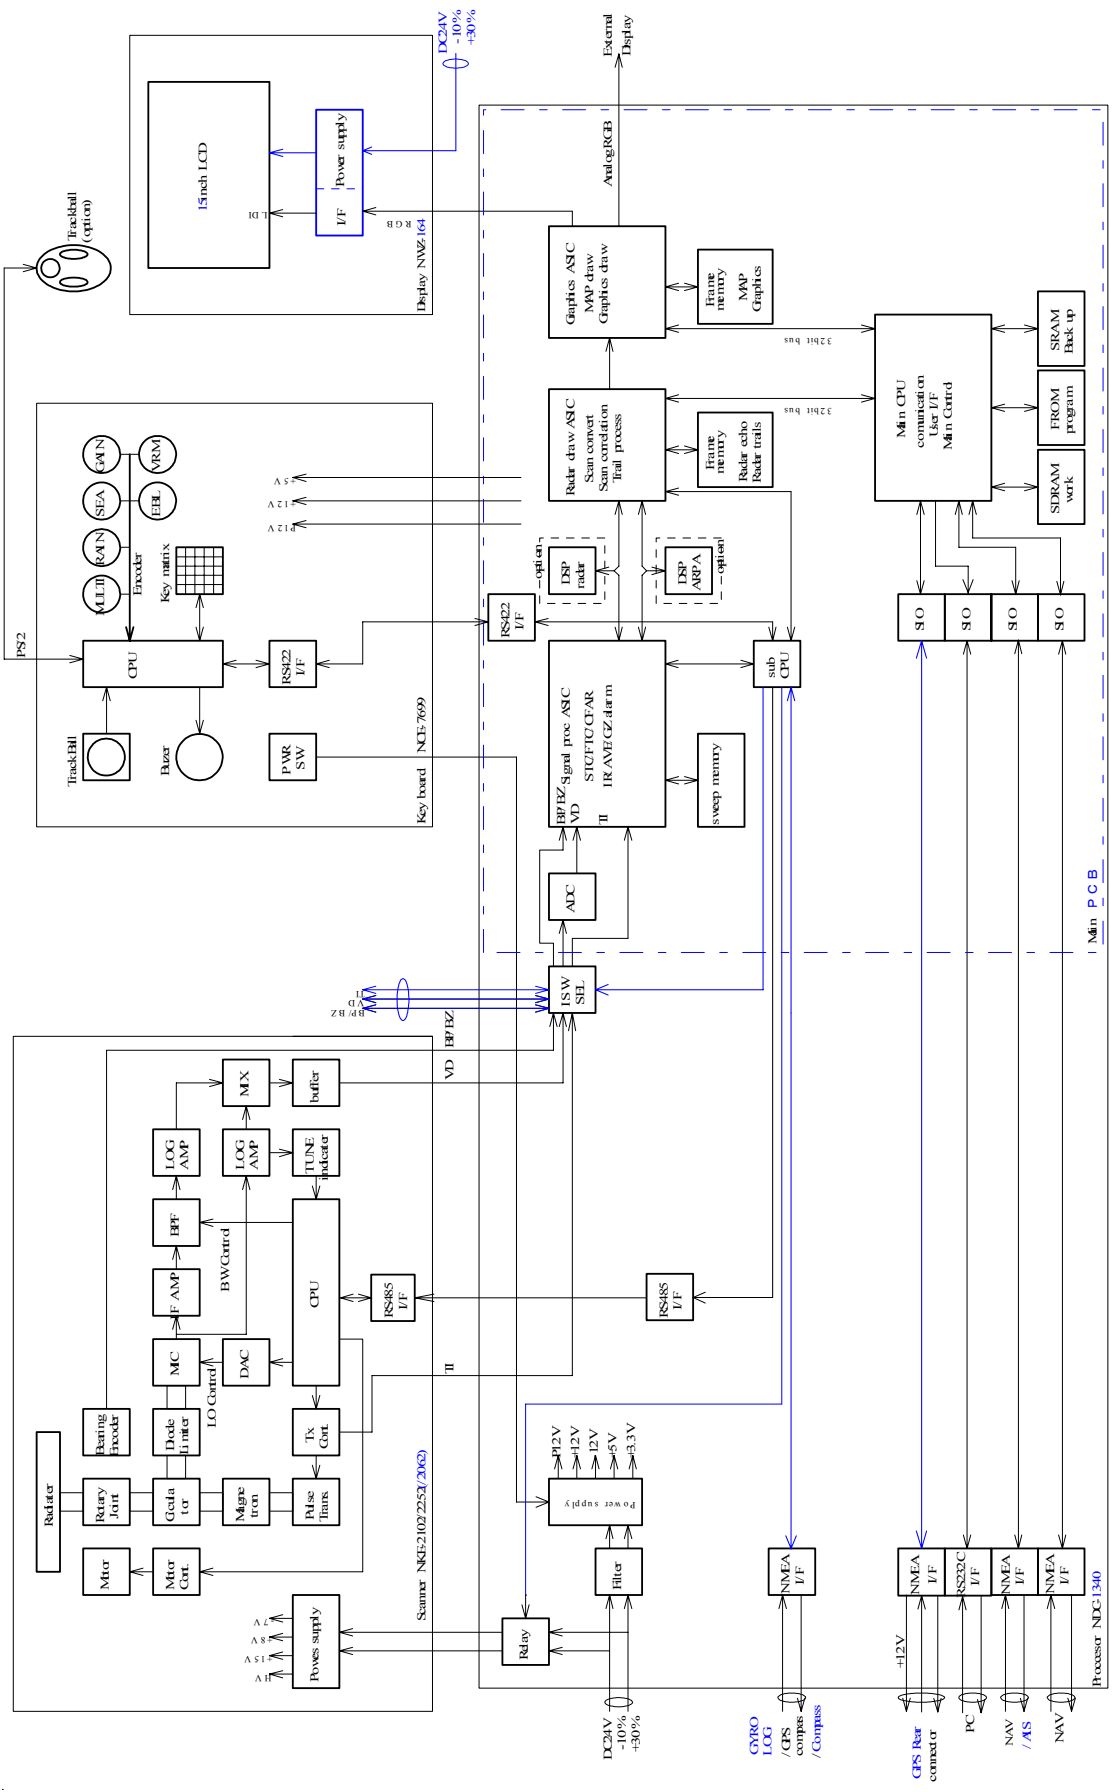

JMA-5200 Radar Block diagram


Figure 1 JMA-5206/HS, JMA-5210-4/6, JMA-5220-7/9 Block Diagram



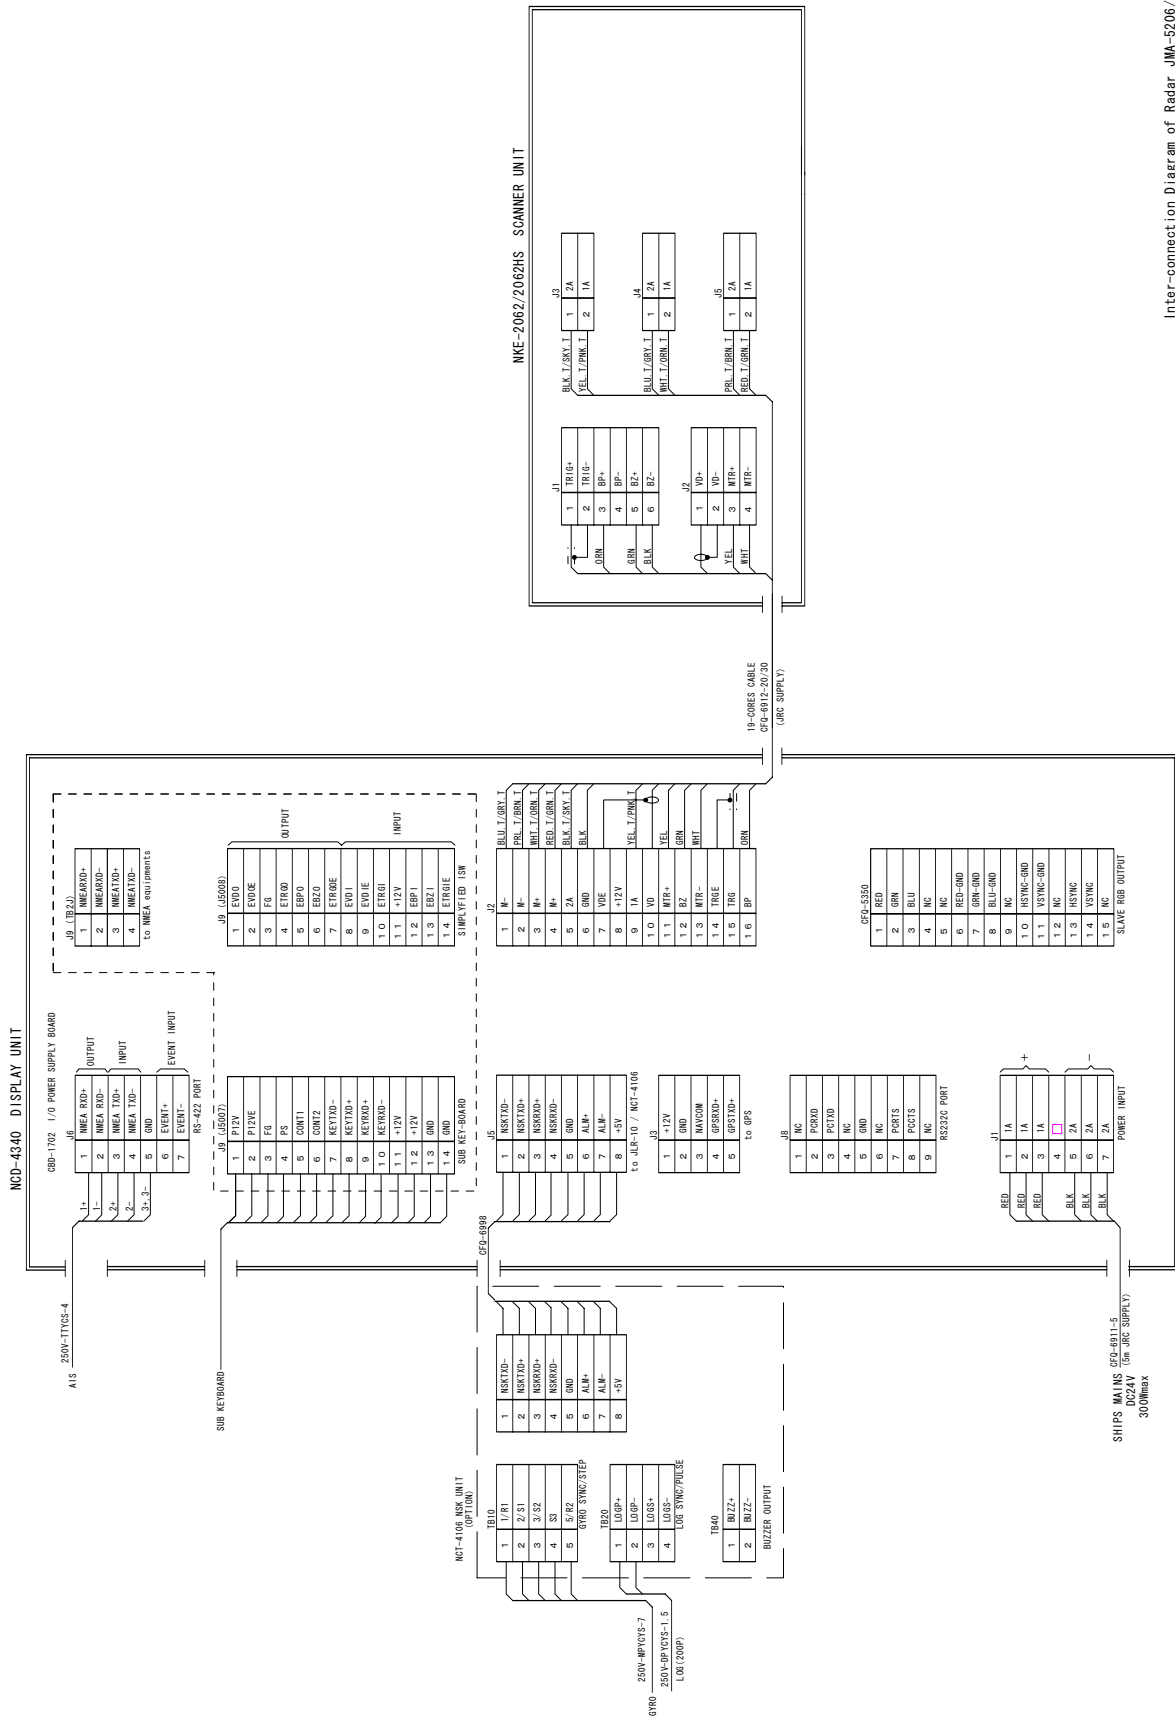


Inter-connection Diagram of Radar JMA-5206/HS

Figure 2 JMA-5206/HS Inter-connection Diagram

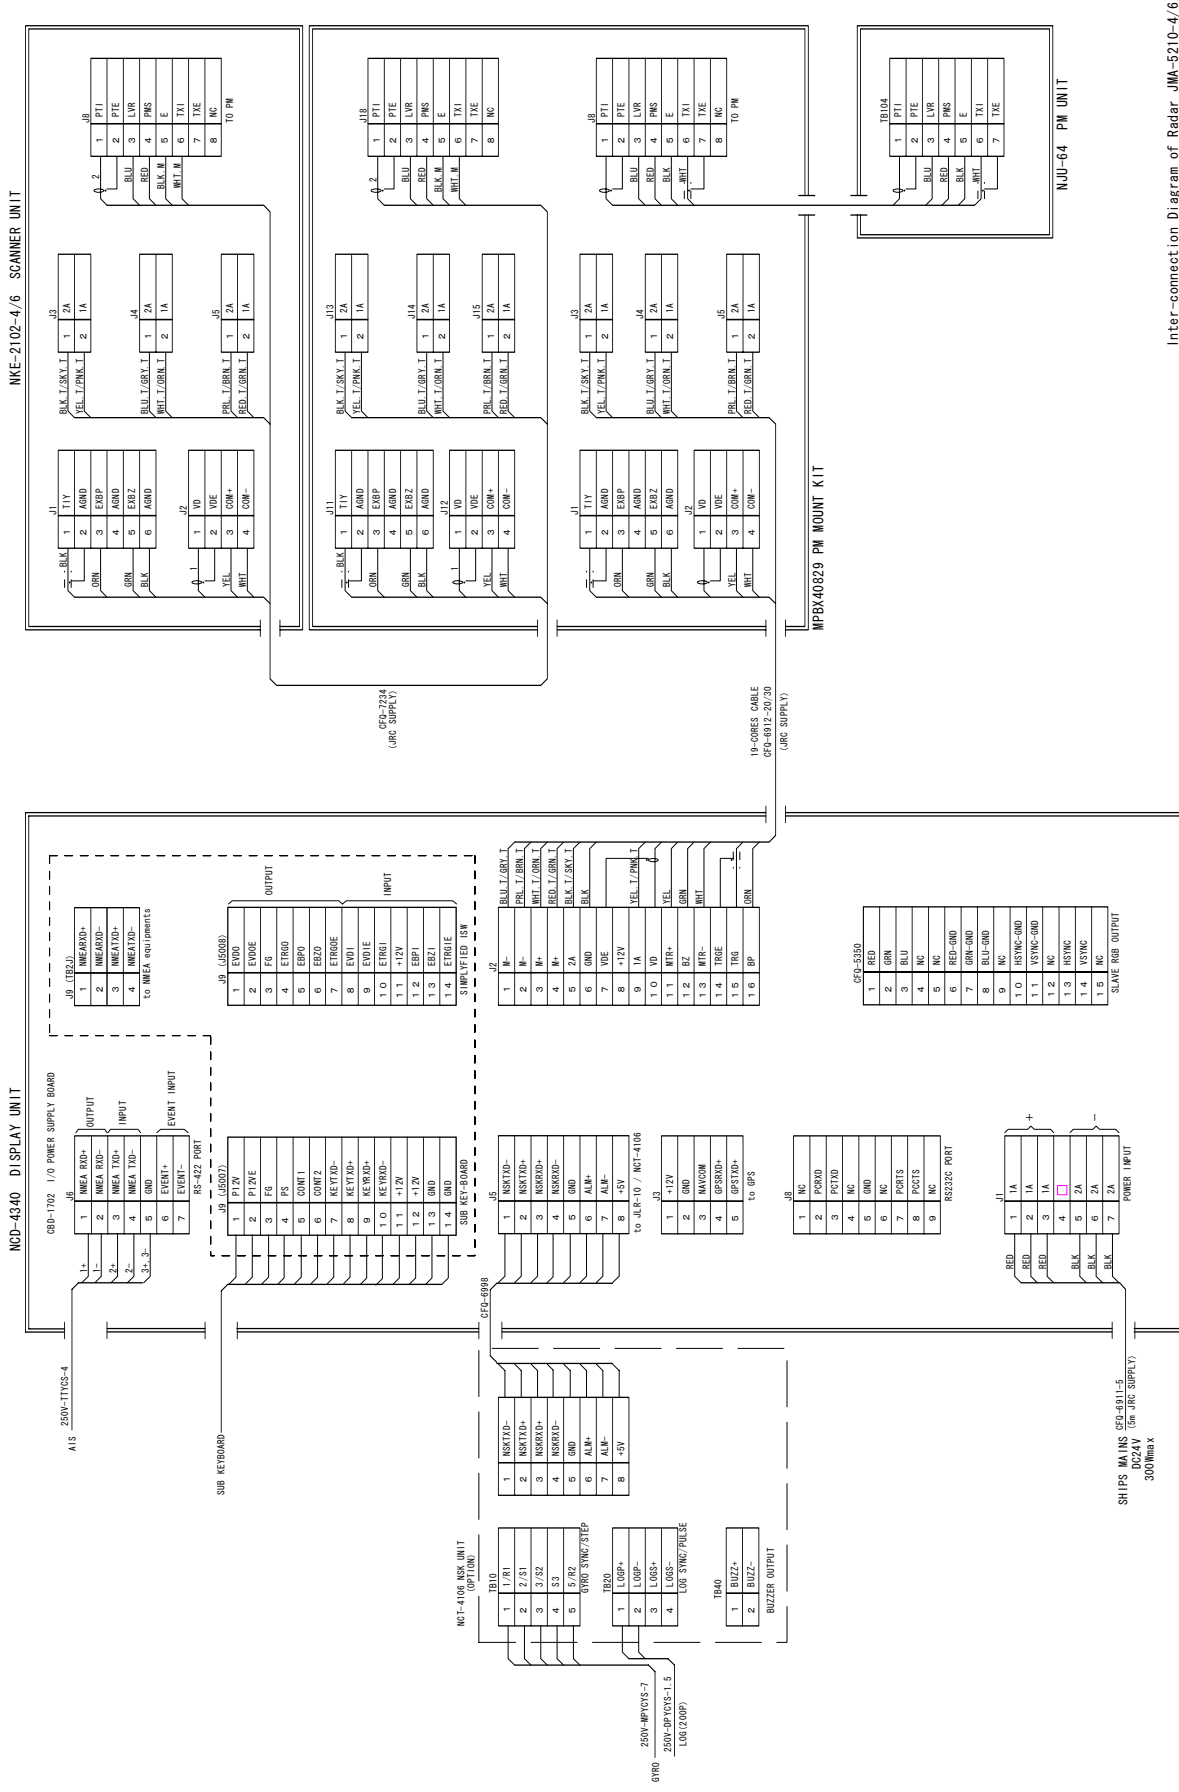

Inter-connection Diagram of Radar JMA-5210-4/6

Figure 3 JMA-5210-4/6 Inter-connection Diagram

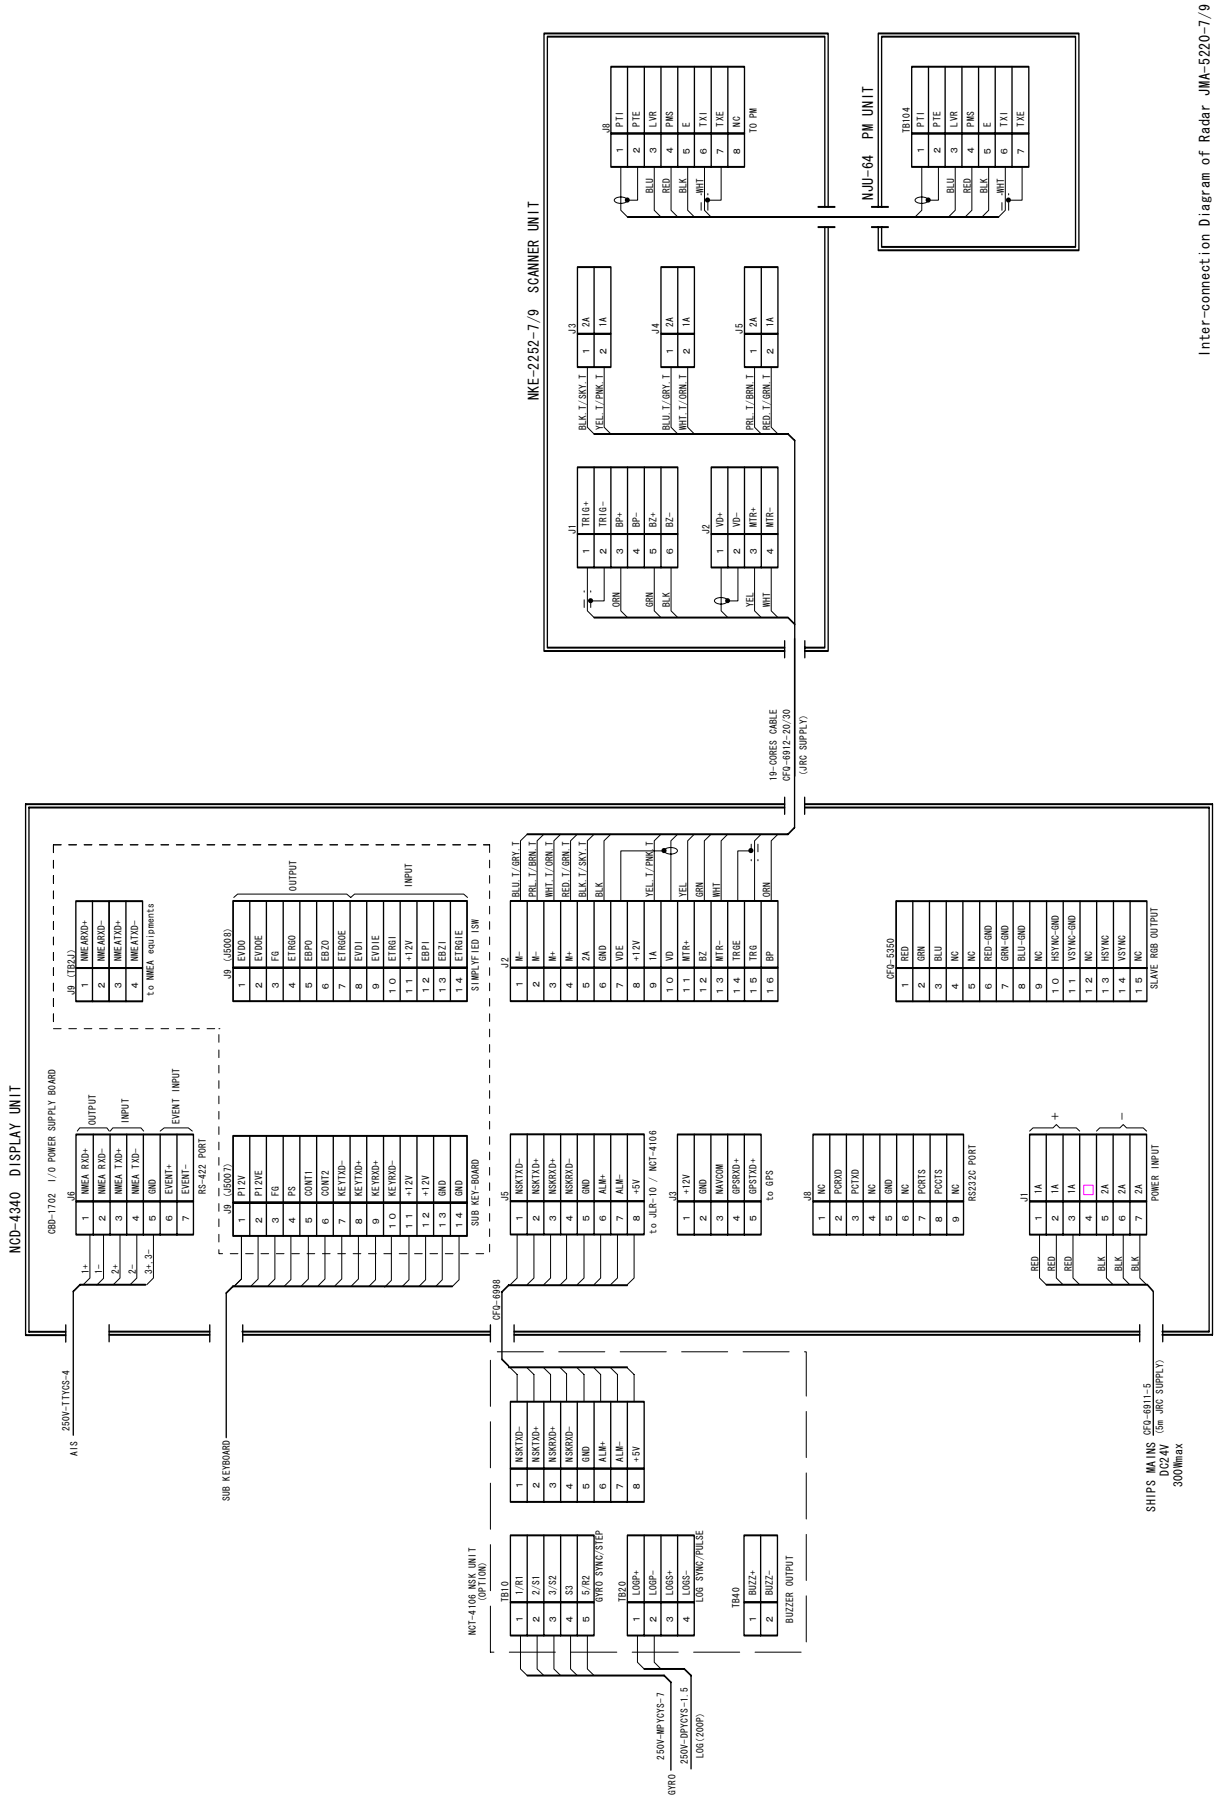

Inter-connection Diagram of Radar JMA-5220-7/9

Figure 4 JMA-5220-7/9 Inter-connection Diagram

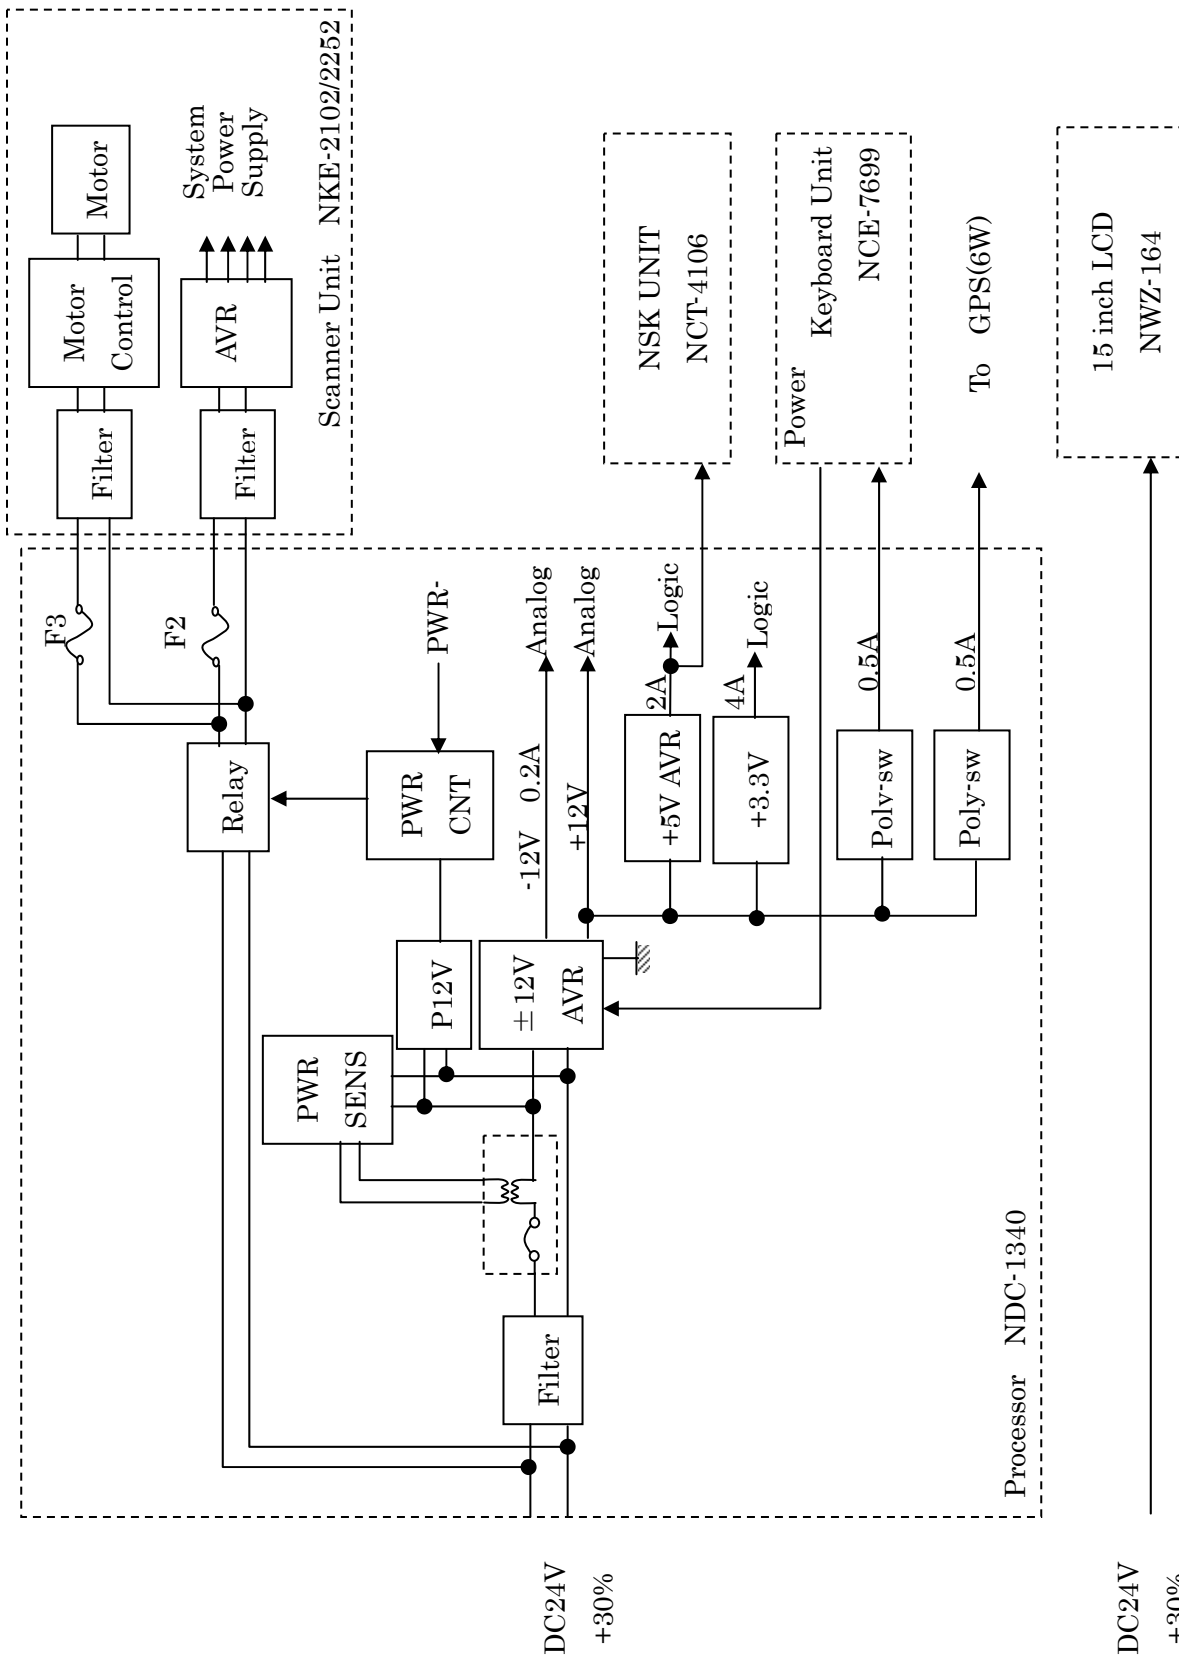


Figure 5 Primary Power supply Diagram, Type JMA-5206/HS ,JMA-5210-4/6, JMA-5220-7/9



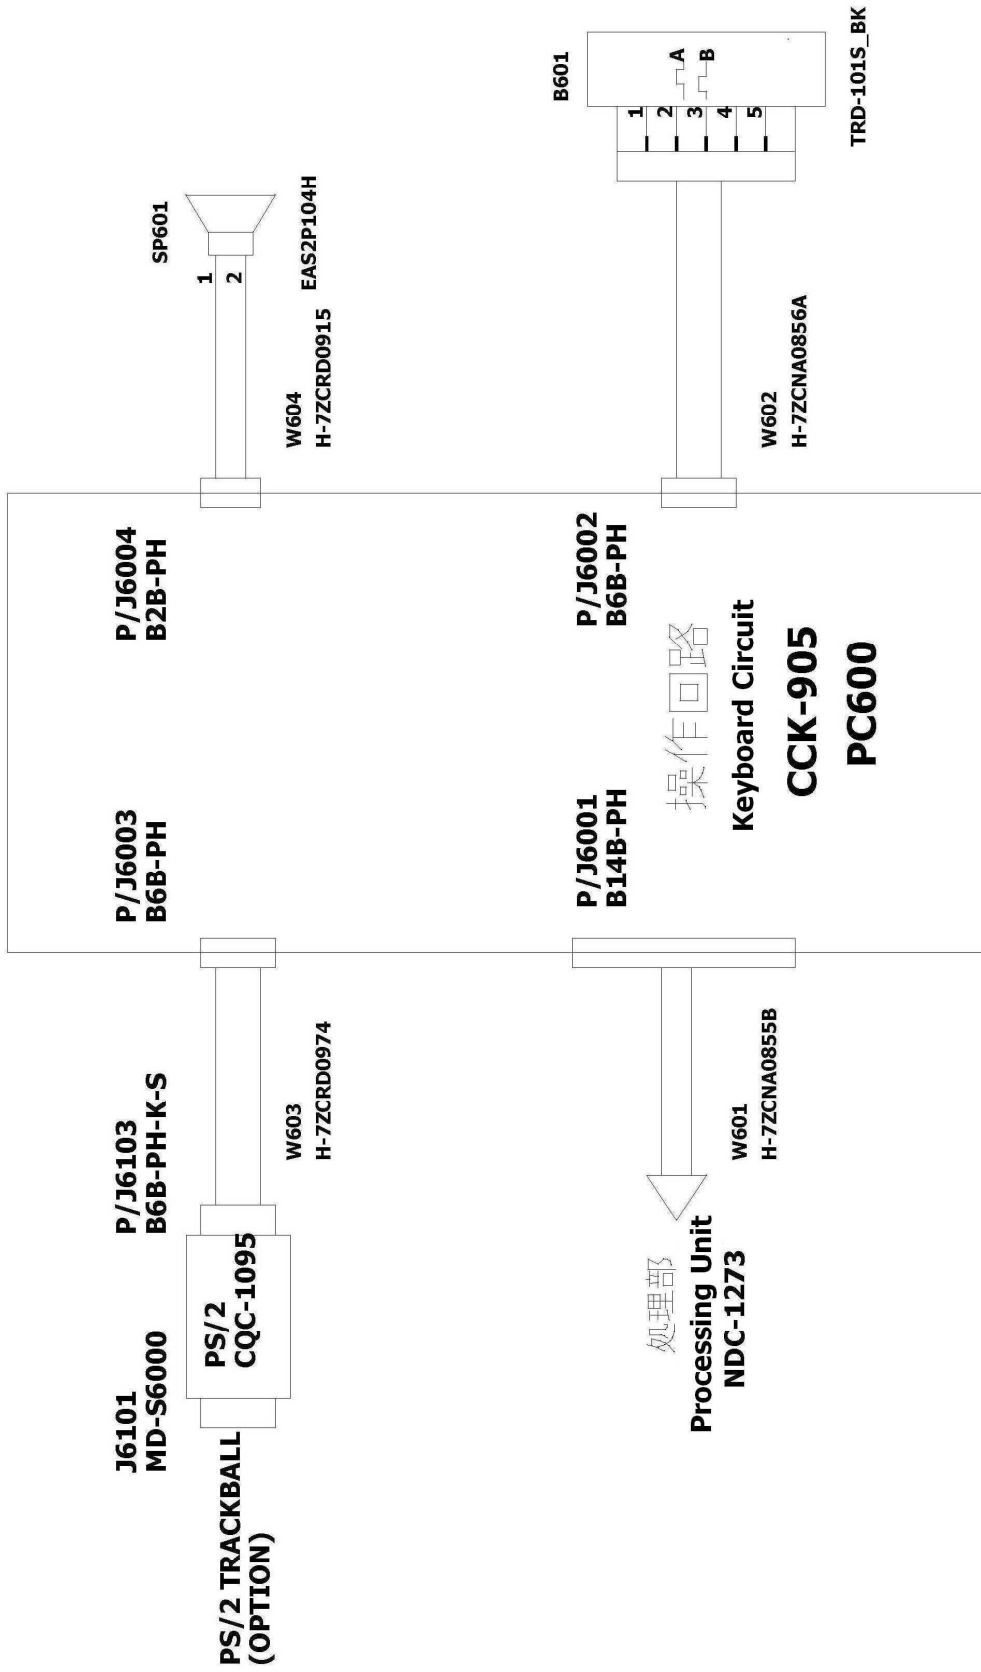


Figure 7 Key-board unit, NCE-7699 Inter-connection Diagram

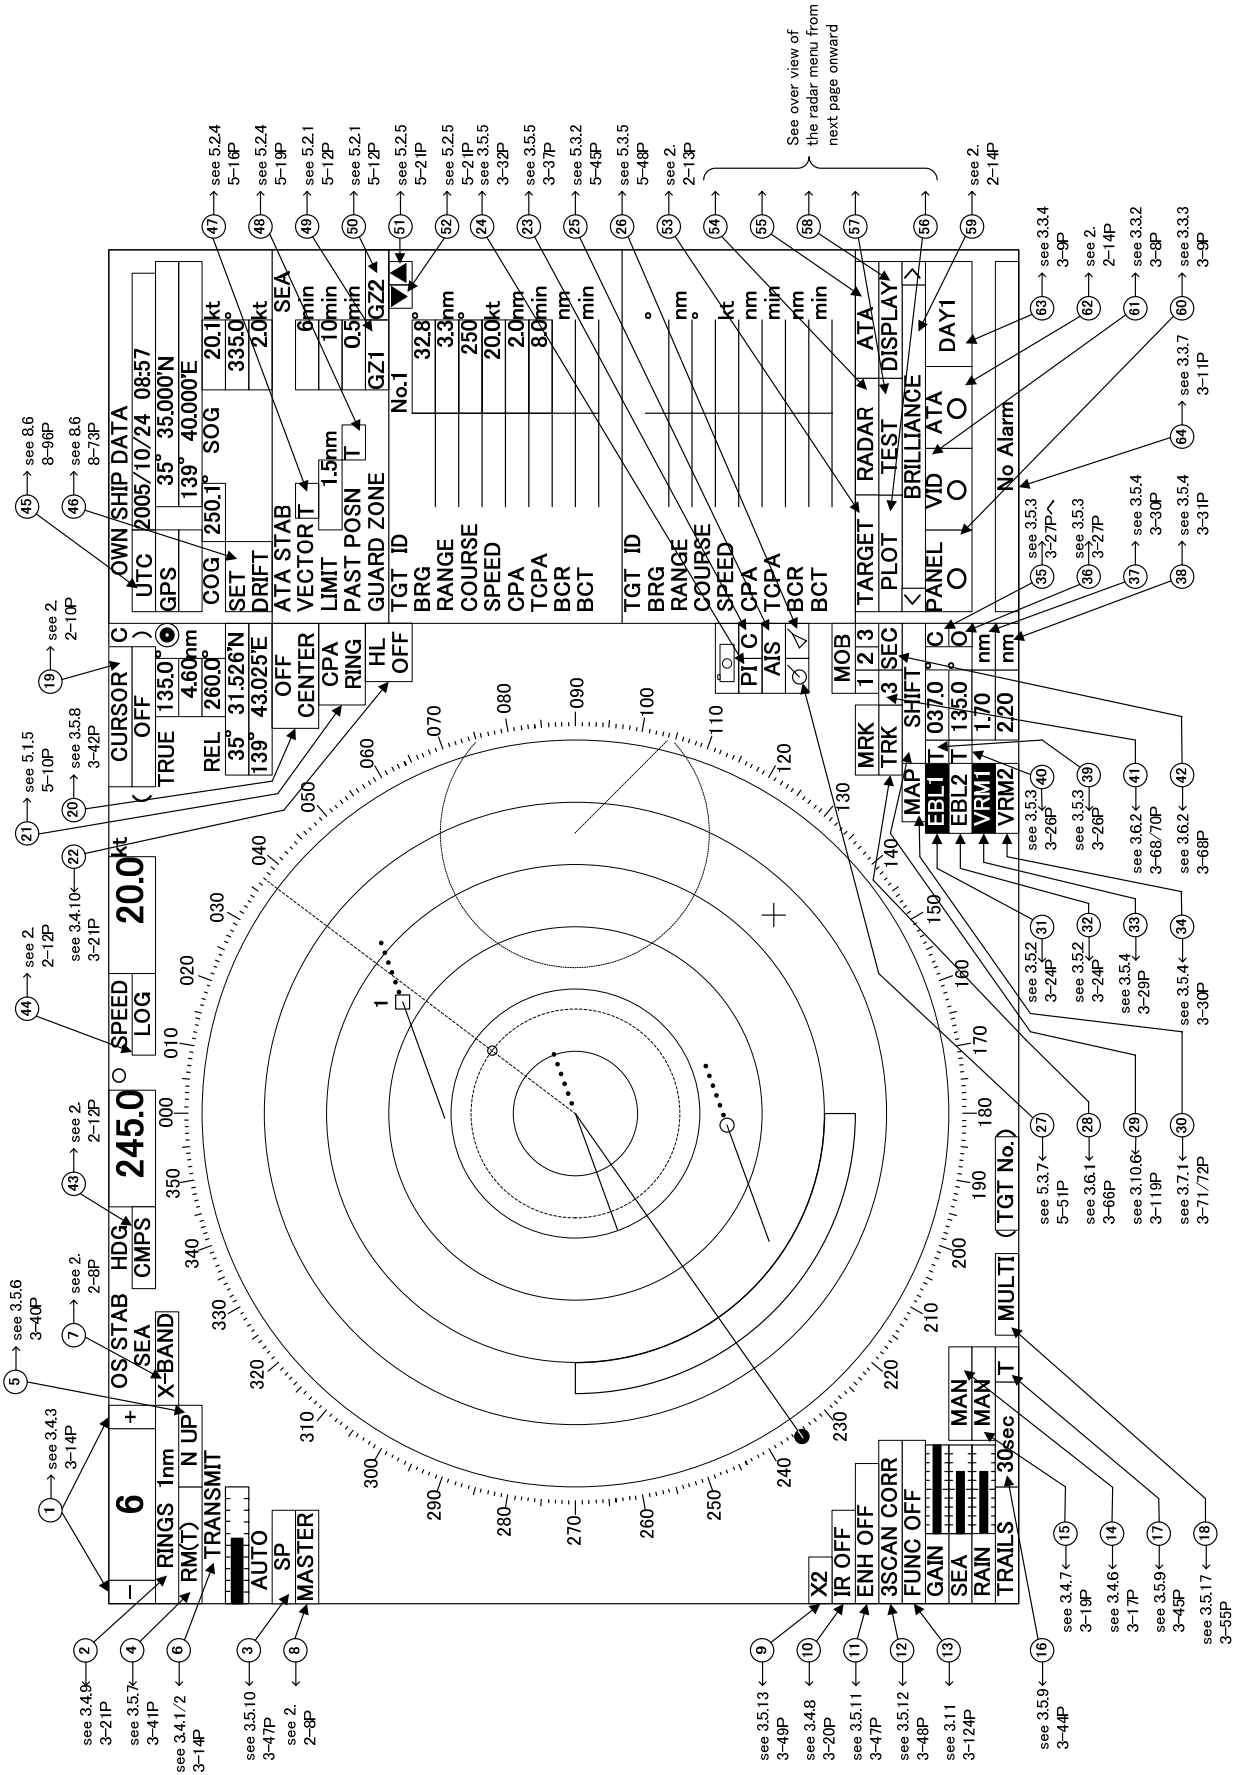


Figure 8 JMA-5200 On-screen controls

Main Menu

- 1 IR
- 2 Process
- 3 Target Enhance
- 4 Zoom
- 5 SART
- 6 NAV Information

- 1 Waypoint Display
- 2 NAV DISP Setting

- 1 Nav Line(绿实线)
- 2 Coast Line(黄点线)
- 3 Contour(青一点虚线)
- 4 Mark1(赤鼓)
- 5 Mark2(赤灯台)
- 6 Mark3(赤十)
- 7 Mark4(赤Y)

- 3 User MAP Setting

- 1 Own Ship Position
- 2 Load
- 3 Unload
- 4 Save
- 5 Erase
- 6 Edit User Map

- 1 Device
- 2 Load User Map

- 1 Device
- 2 Save User Map
- 3 All Files to Card2

- 1 Device
- 2 Erase User Map

- 1 Nav Line
- 2 Coast Line
- 3 Contour
- 4 Mark1
- 5 Mark2
- 6 Mark3
- 7 Mark4
- 8 All

- 1 Nav Line
- 2 Coast Line
- 3 Contour
- 4 Mark1
- 5 Mark2
- 6 Mark3
- 7 Mark4
- 8 Enter

- 1 Clear Map Object

- 2 Make Map Object

- 3 Correct
- 4 Delete
- 5 Insert

- 7 Shift
- 8 Shift Clear

- 4 Geodetic

- 7
- 8 Graphic Display
- 9 RADAR Menu(→Plot)
- 0 EXIT





RADAR Menu

1 Process Setting

- 1 Video Latitude
- 2 Video Noise Rejection
- 3 Auto DR Control
- 4 Process Switch
- 5 2nd Process Mode
- 6 Process Switch Range
- 7 Fast Target Detection
- 8 User Function Setting

1 Function1 Setting

- 1 Mode
- 2 IR
- 3 Process
- 4 Target Enhance
- 5 Auto STC/FTC
- 6 Save Present State
- 7
- 8
- 9 NEXT

- 1 Pulse Width 0.75nm
- 2 Pulse Width 1.5nm
- 3 Pulse Width 3/4nm
- 4 Pulse Width 6/8nm
- 5 Pulse Width 12nm
- 6 Pulse Width 16nm
- 7
- 8
- 9 NEXT

- 1 Video Latitude
- 2 Video Noise Rejection
- 3 Auto DR Control
- 4 Process Switch
- 5 2nd Process Mode
- 6 Process Switch Range
- 7 Fast Target Detection
- 8
- 9 NEXT

- 1 Trails Interval
- 2 Trails Mode
- 3 Trails Ref Level
- 4 Trails Reduction
- 5 Time/CONT Combine
- 6 Trails Process
- 7 Max Interval
- 8
- 9 NEXT

- 1 Gain Offset
- 2 XMIT Repetition FREQ
- 3 Small Buoy Detection
- 4 Fishnet Detection
- 5 Antenna Height
- 6 Set Mode Default
- 7
- 8
- 9 Initialize

- 2 Function2 Setting
- 3 Function3 Setting
- 4 Function4 Setting

2 RADAR Trails Setting

- 1 Trails Interval
- 2 Trails Mode
- 3 Trails REF Level
- 4 Trails Reduction
- 5 Time/CONT Combine
- 6 Trails Process
- 7 Max Interval
- 8
- 9 Next

- 1 File Load
- 2 File Save
- 3 File Erase
- 4 Trails Erase

- 1 Trails Erase Mode
- 2 Trails Erase Start
- 3 Eraser Size

3 Marker Setting

- 1 EBL1 Setting
- 2 EBL2 Setting
- 3 VRM1 Range Unit
- 4 VRM2 Range Unit
- 5 Parallel Index Line

- 1 EBL1 Bearing REF
- 2 EBL1 Floating
- 3 EBL1 Bearing Fix

- 1 EBL2 Bearing REF
- 2 EBL2 Floating
- 3 EBL2 Bearing Fix

- 1 Display
- 2 Range Link
- 3 PI Bearing REF
- 4 PI Floating
- 5 PI Bearing Fix
- 6 PI Individual

- 1 Line 1
- 2 Line 2
- 3 Line 3
- 4 Line 4
- 5 Line 5
- 6 Line 6
- 7 Line 7

- 6 Cursor Setting

- 1 EBL/VRM Control CURS
- 2 Cursor Length
- 3 Distance Unit

- 7 EBL Maneuver Setting

- 1 EBL Maneuver
- 2 Reach
- 3 Turn Mode
- 4 Turn Set

- 8 Rectangle Cursor

- 1 Rectangle Cursor Display
- 2 Make Rectangle Cursor
- 3 ENT
- 4 Unit Of Distance

4 Screen Setting

1 Display Color Setting	1 Day/Night 2 Color Scheme 3 Outer PPI 4 Inner PPI 5 Character 6 RADAR Echo 7 RADAR Trails(Time) 8 RADAR Trails(CONT) 9 HL/Vector/ARPA/AIS
2 Brilliance Setting	1 RADAR Video 2 RADAR Trails 3 ARPA/AIS 4 Fix Marker 5 EBL/VRM 6 Character 7 Panel
3 Numeric NAV INFO 4 Depth Graph Setting	1 Depth Graph Display 2 Depth Range 3 Time Range 4 Depth Unit
5 Wind Graph Setting	1 Wind Graph Display 2 Wind Speed Unit
6 DIR/DIST EXP Display 7 TEMP Graph Setting	1 TEMP Graph Display 2 TEMP Graph Color 3 Water TEMP Range 4 Time Range
8 Course Bar Setting	1 Course Bar Display 2 Auto Pilot Course 3 ROT Scale
9 Next	1 Water temperature (MIN) white 2 Water temperature cyan 3 Water temperature blue 4 Water temperature green 5 Water temperature yellow 6 Water temperature (MAX) pink
1 Screen Capture Setting	1 Select Capture Item 2 File Erase 3 Auto Capture Interval 4 Auto File Erase
	1 RADAR Echo 2 Trails 3 Chart 4 Graphic

5 TRX Setting

- 1 PRF Fine Tuning
- 2 Jamming
- 3 **Rotation Speed**

---

- 1 0.08uS/2250Hz
- 2 0.25uS/1700Hz
- 3 0.5uS/1200Hz
- 4 0.8uS/750Hz
- 5 1.0uS/650Hz

---

- 1 0.07uS/2200Hz
- 2 0.2uS/2200Hz
- 3 0.4uS/1400Hz
- 4 0.8uS/750Hz
- 5 1.0uS/650Hz
- 6 1.2uS/520Hz

---

- 4 XMIT Repetition FREQ
- 5 Band Select

---

- 1 **Select TRX**

6 Inter Switch Setting

7 NAV Equipment Setting

- 1 Set GYRO
- 2 Heading Equipment
- 3 Speed Equipment
- 4 Manual Speed
- 5 **MAG** Compass Setting
- 6 Set/Drift Setting
- 7 GPS Setting

---

- 1 Heading Correction
- 2 Correct Value

---

- 1 Correction
- 2 Set
- 3 Drift

---

- 1 GPS Process Setting

---

- 1 Position
- 2 Exclusion
- 3 Geodetic
- 4 Antenna Height
- 5 Fix Mode
- 6 DOP Level
- 7 Position Average
- 8 Master Reset
- 9 Send Data

---

- 2 DGPS Setting

---

- 1 Mode
- 2 Frequency
- 3 Baud Rate(BPS)
- 4 DGPS Mode
- 5 Send Data

---

- 3 WAAS Setting

---

- 1 Mode
- 2 Ranging
- 3 NG WAAS
- 4 WAAS Select Mode
- 5 WAAS No.
- 6 Send Data

---

- 4 GPS Status

---

- 8 **Weather INFO** Setting

---

- 1 Display Weather INFO
- 2 SEL Observation Place
- 3 RX Message Display
- 4 RX Buzzer

8 RADAR Sub Menu

- 1 PIN Setting
  - 1 Load PIN Data
  - 2 Save PIN Data
  - 3 Delete PIN Data
- 2 Multi Dial Setting
  - 1 Vector Length
  - 2 Trails Length
  - 3 ATA TGT Display No.
  - 4 C-UP Angle
  - 5 Own Track Color
  - 6 Mark/Line Color
- 3 User Key Setting
  - 1 User Key1
  - 2 User Key2
- 4 Date/Time Setting
  - 1 UTC/LOCAL
  - 2 Local Date
  - 3 Local Time
  - 4 Time Zone
- 5 Buzzer Volume
- 9 Test Menu

- 1 Self Test
- 2 Monitor Test
- 3 Keyboard Test
- 4 PM Display
- 5 Error Logging
- 6 System Info

- 1 Memory Test
- 2 Sensor Test
- 3 Line Test

- 1 SDRAM
- 2 SRAM
- 3 FLASH ROM
- 4 GRPHIC

- 1 SAFETY SWITCH
- 2 AZI PULSE
- 3 HL PULSE
- 4 MH CURRENT
- 5 TRIGGER
- 6 VIDEO

- MTR
- SIG PROC
- ATA
- NSK
- GPS COMPASS
- COM1
- COM2
- COM3
- COM4
- Plotter Key

- 1 Pattern 1
- 2 Pattern 2
- 3 Pattern 3
- 4 Pattern 4
- 5 Pattern 5
- 6 Pattern 6

- 1 Key Test
- 2 Buzzer Test
- 3 Light

← PM option required

9 Plot Menu  
0 EXIT

Plot Menu

1 Own Track Setting

- 1 Own Track Interval
- 2 DISP Own Track Color
- 2 DISP Own Track Color
- 3 Clear Own Track Color
- 3 Clear Own Track Color
- 4 OWN Track Memory
- 5 Track Color
- 6 Track Memory
- 7 Num./Vector Display
- 9 NEXT

- 1 All
- 2 White
- 3 Cyan
- 4 Blue
- 5 Green
- 6 Yellow
- 7 Pink
- 8 Red

- 1 Water Depth Setting
- 2 Water TEMP. Setting
- 3 Tideway Setting

- 1 (MIN) white
- 2 cyan
- 3 blue
- 4 green
- 5 yellow
- 6 (MAX) pink

- 1 (MIN) white
- 2 cyan
- 3 blue
- 4 green
- 5 yellow
- 6 (MAX) pink

- 1 Tideway Size
- 2 Layer A
- 3 Layer B
- 4 Layer C

2 Mark Setting

1 Display Mark Type

2 Display Mark Color

3 Clear Mark Color/Type  
4 Mark/Line Entry  
5 Mark/Line List  
6 New Mark/Line Input

- 1 All
- 2 Fish 1
- 3 Fish 1
- 4 Fish heaven (round)
- 5 Fish heaven (square)
- 6 Wreck
- 7 Squid
- 8 Scallop
- 9 Next Page

- 1 Crab
- 2 Lobster
- 3 Mola
- 4 +
- 5 X
- 6 Y
- 7 Hour glass
- 8 Star
- 9 Next Page

- 1 Buoy 1
- 2 Buoy 2
- 3 Buoy 3
- 4 Number
- 5 ...
- 6 -
- 7 .
- 8 .

- 1 All
- 2 White
- 3 Cyan
- 4 Blue
- 5 Green
- 6 Yellow
- 7 Pink
- 8 Red

- 1 Type
- 2 Color
- 3 LAT/LON
- 4 Comment
- 9 New Mark Input

↔ 9 New Line Input

3 WPT/Route Setting

- 1 Waypoint Alarm
- 2 Route Alarm
- 3 Set Route Sequence
- 4 Select Route
- 5 Waypoint Entry
- 6 Waypoint Input
- 7 Save TEMP. Route
- 8 Route Alarm Color

4 WPT/Route Operation

- 1 Route Sequence
- 2 Waypoint Switch Mode
- 3 Waypoint Skip
- 4 Waypoint Back Skip
- 5 Set/Cancel Waypoint

5 Map Setting

- 1 Fill Land Area
- 2 C-MAP Setting

- 1 Grid Display
- 2 Sounding Display
- 3 Sounding Unit
- 4 Light Sectors Display
- 5 Light Sectors Level
- 6 Chart Boundary
- 7 Buoy&Beacon
- 8 Names
- 9. Next

- 1 Land Marks
- 2 River&Lake
- 3 Cultural
- 4 Bottom Type
- 5 Under-Water
- 6
- 7 Depth Contour

- 1 Depth Contour
- 2 Upper
- 3 Lower

3 JRC/ERC Setting

- 1 Day/Night
- 2 Color of Land
- 3 Bright of Land
- 4 Color of Sea
- 5 Bright of Sea
- 6 Color of Name
- 7 Bright of Name
- 8 Bright of Track/Mark/Line
- 9. NEXT

- 1 LAT/LON Line
- 2 Color of L/L Line
- 3 Bright of L/L Line
- 4 ERC Display Request
- 5 ERC Mark
- 6 JRC Card Display
- 7 Copy JRC Chart to CF
- 8 Fishing Area Display

- 1 Lighthouse
- 2 Buoy
- 3 Rough Line
- 4 Other Line



4 Contour Setting

- 1 10m
- 2 20m
- 3 30m
- 4 40m
- 5 50m
- 6 60m
- 7 70m
- 8 80m
- 9 Other

5 Map Display Setting

- 1 Shift Coast Line 1
- 2 Shift Coast Line 2
- 3 LAT/LON Correction
- 4 Map Center Position
- 5 LORAN C Correction
- 6 LORAN A Correction
- 7 DECCA Correction

- 1 Chain
- 2 TD1
- 3 TD2
- 4 TD1 Correction
- 5 TD2 Correction

- 1 LOP1
- 2 LOP2
- 3 TD1 Correction
- 4 TD2 Correction

- 1 Chain
- 2 LOP1
- 3 LOP2
- 4 LOP1 Correction
- 5 LOP2 Correction

6 Select JRC Chart File

- 7 Map Draw AZI Mode
- 8 JRC Chart Draw Mode

- 1 Copy Internal → Card2
- 2 Copy Card2 → Internal
- 3 Copy Card1 → Card2
- 4 Clear File
- 5 Card2 Own Track Display
- 6 Card2 Mark Display
- 7 Show Card1
- 8 Show Card2

6 MEM CAPA/Copy

- 1 Clear Mark/Line Data
- 2 Clear WPT/Route Data
- 3 Format Card2

7 CLR MEM/INIT Card

8 Plot Setting

0 EXIT

1 Scale/CSE Up Setup

2 Curosr/Number Display

3 Basic

1 Scale  
2 Preset Scale  
3 Course Up Data

1 Tolerance  
2 Averaging  
3 Round Speed

1 Shape of Current Position  
2 Current POS Blink  
3 Unit of Speed  
4 Unit of Distance  
5 Current Position Display  
6 Select Line  
7 Select Mark Size  
8 Select Cursor Mark  
9 NEXT

1 Event Mark 1  
2 Event Mark 2  
3 Select WPT Mark Size  
4 Cursor Vector DISP  
5 Cursor Vector Length  
6 Waypoint Vector  
7 Status of ORG/DEST  
9 NEXT

1 WPT Number Display  
2 RTE Number Display  
3 Scalebar Display  
4 Numeric Mark  
5 Comment Font Size

1 Auto Backup

ARPA Menu

1 ATa Setting

- 1 Vector Time
- 2 Past Position
- 3 CPA Limit
- 4 TCPA Limit
- 5 CPA Ring
- 7
- 8
- 9 Target Number Display

2 AIS Setting

- 1 AIS Function
- 2 AIS Symbol Display
- 3 ATA Symbol Display
- 4 CPA Limit
- 5 TCPA Limit
- 6 AIS Filter Setting
- 7 Identical Distance

- 1 Filter Type
- 2 Make AIS Filter
- 3 Filter Display
- 4 ENT

3 ATa Track Setting

- 1 Track Function
- 2 Track Color
- 3 Track Display
- 4 Track Memory Interval
- 5 Clear Track Color
- 6 Clear Track Number
- 7 Card12 Track Display

- 1 All
- 2 ATA Track No.1
- 3 ATA Track No.2
- 4 ATA Track No.3
- 5 ATA Track No.4
- 6 ATA Track No.5
- 7 ATA Track No.6
- 8 ATA Track No.7
- 9 NEXT

- 1 ATA Track No.8
- 2 ATA Track No.9
- 3 ATA Track No.10
- 4 Other

- 1 All
- 2 ATA Track No.1
- 3 ATA Track No.2
- 4 ATA Track No.3
- 5 ATA Track No.4
- 6 ATA Track No.5
- 7 ATA Track No.6
- 8 ATA Track No.7
- 9 NEXT

- 1 ATA Track No.8
- 2 ATA Track No.9
- 3 ATA Track No.10
- 4 Other

4 Guard Zone Setting

- 1 ATA Guard Zone
- 2 RADAR Alarm
- 3 Set GZ Alarm Key

- 1 Guard Zone 1
- 2 Guard Zone 2
- 3 Make Guard Zone 1
- 4 Make Guard Zone 2
- 5 ENT

- 1 Sector RADAR Alarm
- 3 Make Sector Alarm
- 5 RADAR Alarm Mode
- 6 Sensitivity Level

- 1 Sector Alarm 1
- 2 Sector Alarm 2

- 1 Sector Alarm 1
- 2 Sector Alarm 2
- 3 ENT

- 1 Guard Zone 1
- 2 Guard Zone 2

- 1 Sector Alarm 1
- 2 Sector Alarm 2

5 ATA Test Menu

- 1 Test Video
- 2 ATA Simulator
- 3 Status
- 4 Gate Display

Adjust Menu

1 Equipment Setup

- 1 Bearing Adjustment
- 2 Range Adjustment
- 3 Tune Adjustment
- 4 TRX Setting

- 1 Antenna Height
- 2 Tune Peak Adjustment
- 3 Tune Indicator
- 4 PM Adjustment
- 5 Manual Tune Adjustment
- 7 Output Pulse
- 8 Antenna Location

5 COM Port Setting

- 1 COM1(GPS)
- 2 COM2(PC)
- 3 COM3(NAV1)
- 4 COM4(NAV2)
- 5 COM5(COMPASS)

1 Baud Rate

2 RX Sentence

- 1 GPS(LL/COG/SOG)

- 1 GGA
- 2 RMC
- 3 RMA
- 4 GNS
- 5 GLL
- 6 VTG

2 GPS(WPT/Time)

- 1 GGA
- 2 RMC
- 3 RMB
- 4 BWC
- 5 BWR
- 6 ZDA

3 Depth


- 1 DPT
- 2 DBK
- 3 DBT
- 4 DBS

4 Wind

- 1 MWV
- 2 MWD

5 Current

- 1 Data Set Number
- 2 Layer A
- 3 Layer B
- 4 Layer C

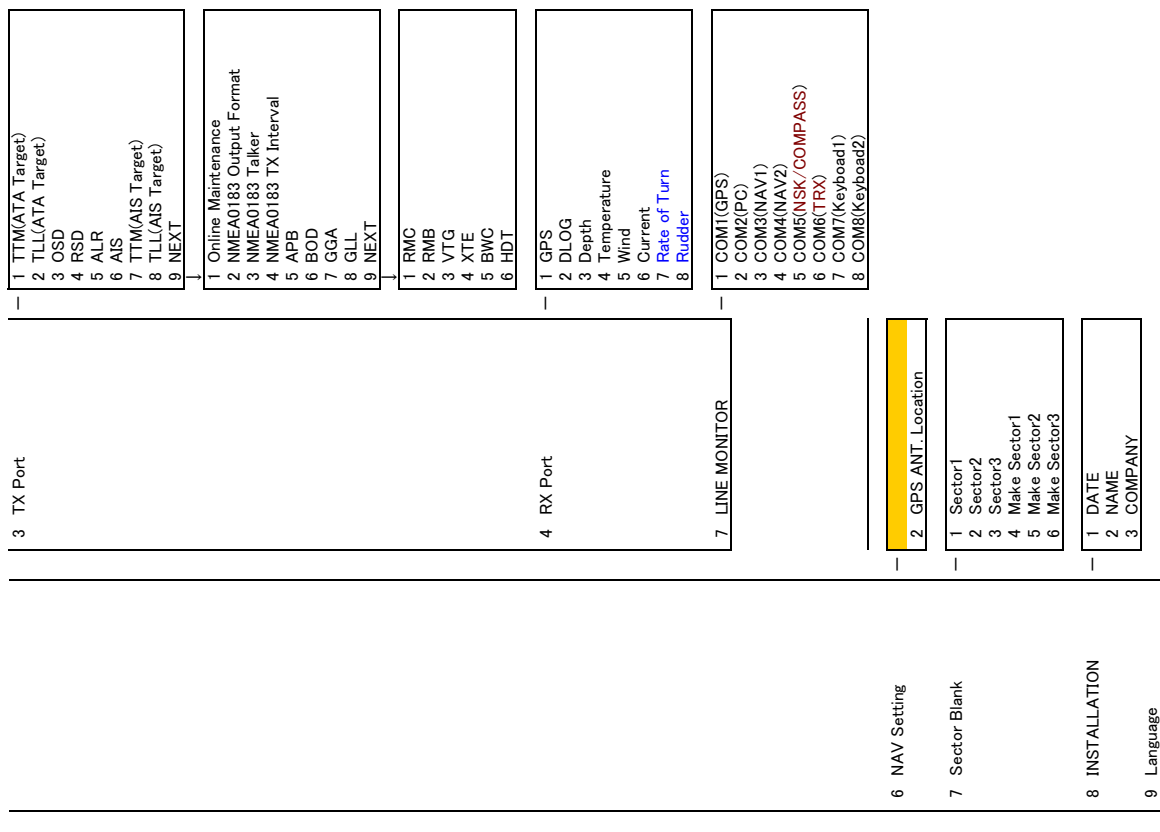

- 1 TTM(ATA Target)
- 2 TLL(ATA Target)
- 3 OSD
- 4 RSD
- 5 ALR
- 6 AIS
- 7 TTM(AIS Target)
- 8 TLL(AIS Target)
- 9 NEXT

- 1 Online Maintenance
- 2 NMEA0183 Output Format
- 3 NMEA0183 Talker
- 4 NMEA0183 TX Interval
- 5 APB
- 6 BOD
- 7 GGA
- 8 GLL
- 9 NEXT

- 1 RMC
- 2 RMB
- 3 VTG
- 4 XTE
- 5 BWC
- 6 HDT

- 1 GPS
- 2 DLOG
- 3 Depth
- 4 Temperature
- 5 Wind
- 6 Current
- 7 Rate of Turn
- 8 Rudder

- 1 COM1(GPS)
- 2 COM2(PC)
- 3 COM3(NAV1)
- 4 COM4(NAV2)
- 5 COM5(NSK/COMPASS)
- 6 COM6(TRX)
- 7 COM7(Keyboard1)
- 8 COM8(Keyboard2)


3 TX Port

4 RX Port

7 LINE MONITOR

- 2 GPS ANT Location
- 1 Sector1
- 2 Sector2
- 3 Sector3
- 4 Make Sector1
- 5 Make Sector2
- 6 Make Sector3
- 1 DATE
- 2 NAME
- 3 COMPANY


- 6 NAV Setting
- 7 Sector Blank
- 8 INSTALLATION
- 9 Language

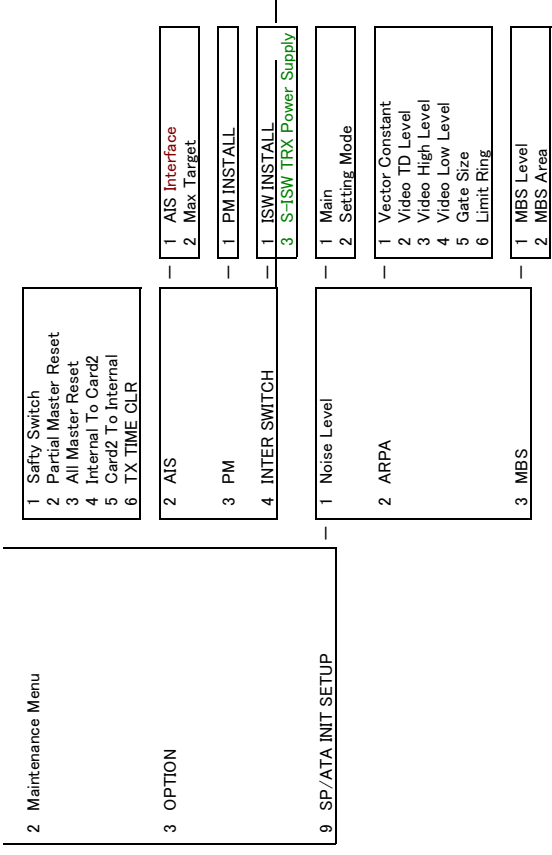





# ENVIRONMENTAL PROTECTION

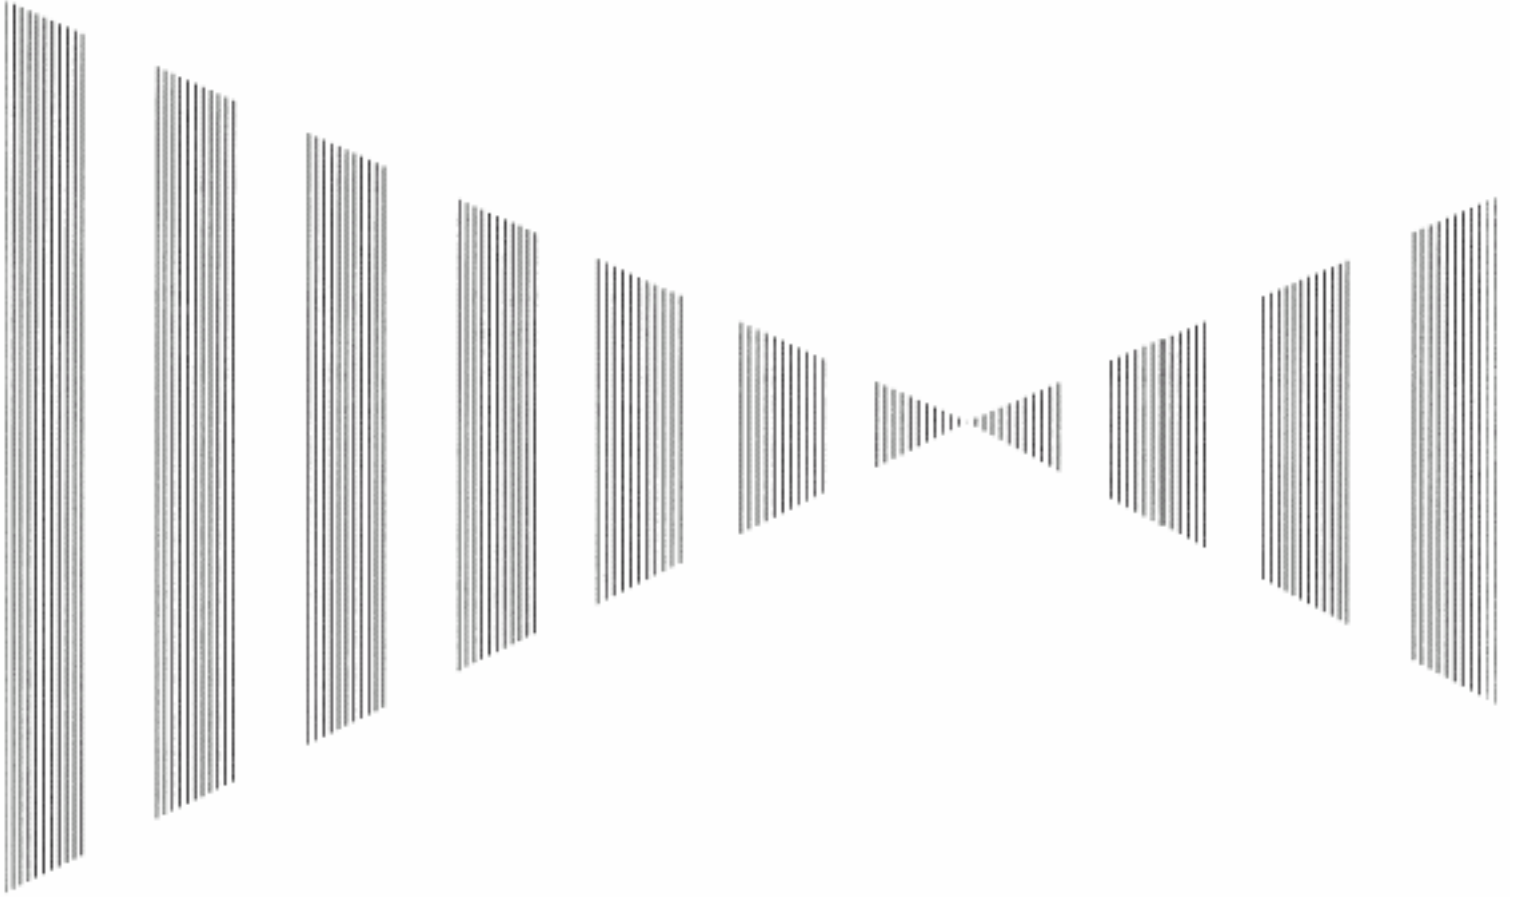

**MANAGEMENT METHOD ON CONTROL OF POLLUTION FROM ELECTRONICS  
INFORMATION PRODUCTS OF THE PEOPLE'S REPUBLIC OF CHINA**



## 有毒有害物质或元素的名称及含量

(Names & Content of toxic and hazardous substances or elements)

形式名(Type): JMA-5200

名称(Name): RADAR

部件名称 (Part name)	有毒有害物质或元素 (Toxic and Hazardous Substances and Elements)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr <sup>6+</sup> )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
天线 (Scanner Unit)	×	×	×	×	×	×
收发信单元 (Transmitter-receiver Unit)	×	×	×	×	×	×
主船内装置 (Inboard Unit) ·显示装置 (Display Unit) ·键盘装置 (Keyboard Unit) ·信号处理装置 (Processing Unit)	×	×	×	×	×	×
外部设备(Peripherals) ·选择(Options) ·电线类(Cables) ·手册(Documentts)	×	×	×	×	×	×
<p>○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006 标准规定的限量要求以下。 (Indicates that this toxic, or hazardous substance contained in all of the homogeneous materials for this part is below the requirement in SJ/T11363-2006.)</p> <p>×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006 标准规定的限量要求。 (Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.)</p>						

RE: 中华人民共和国电子信息产品污染控制管理办法  
Management Methods on Control of Pollution from Electronics Information Products of the People's Republic of China

**Management Method on Control of Pollution from Electronics Information  
products of the People's Republic of China**





CE 0191 ⚠

アスベストは使用していません  
Not use the asbestos

CODE No.7ZPRD0652

For further information, contact:

**JRC**

*Japan Radio Co., Ltd.*

Since 1915

URL <http://www.jrc.co.jp>

Marine Service Department

Telephone : +81-3-3492-1305

Facsimile : +81-3-3779-1420

e-mail : [tmsc@jrc.co.jp](mailto:tmsc@jrc.co.jp)

AMSTERDAM Branch

Telephone : +31-20-658-0750

Facsimile : +31-20-658-0755

e-mail : [service@jrcams.nl](mailto:service@jrcams.nl)

SEATTLE Branch

Telephone : +1-206-654-5644

Facsimile : +1-206-654-7030

e-mail : [service@jrcamerica.com](mailto:service@jrcamerica.com)

01ETM

ISO 9001, ISO 14001 Certified

©MAY, 2007 Edition 3

JRC

Printed in Japan