


CONFIGURATION GUIDE

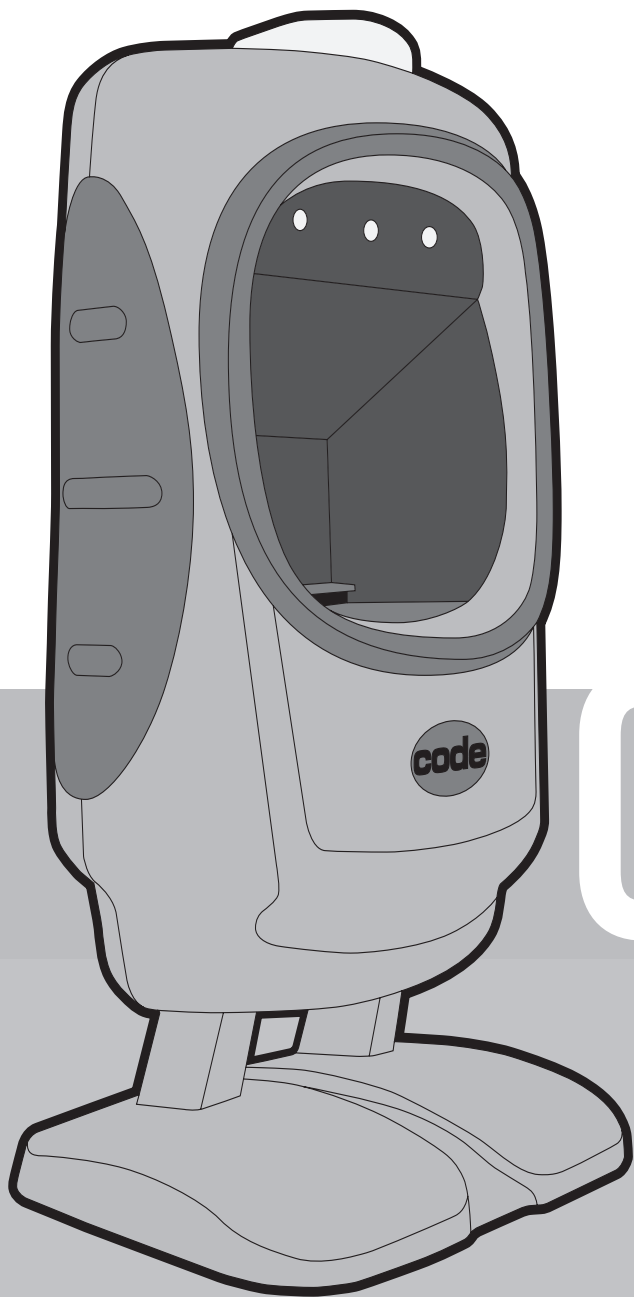

CR5000

Configuration barcodes generated based on current firmware versions
WEB GENERATED
7-14-2015



www.codecorp.com



User Manual



[YouTube.com/codecorporation](https://www.youtube.com/codecorporation)

code
ADVANCED BARCODE READERS

Table of Contents

General Reading Mode Settings.....	6
Off-Table Trigger Mode - Default.....	6 (A2)
On-Table Trigger Mode.....	6 (A3)
Off-Table Detect Barcode Mode.....	6 (A4)
On-Table Always On Mode.....	6 (B1)
Off-Table Always On Mode.....	6 (B2)
On-Table Detect Barcode Mode - Default.....	6 (B3)
On-Table Pick List Mode.....	6 (B4)
Off-Table Pick List Mode.....	6 (C1)
Mirroring On.....	6 (C2)
Mirroring Off - Default.....	6 (C3)
Targeting On - Default.....	6 (C4)
Targeting Off.....	6 (D1)
Cell Phone Reading Enhancement On - Default.....	6 (D2)
Cell Phone Reading Enhancement Off.....	6 (D3)
Data Formatting (Prefix/Suffix) Settings.....	6-7
Erase Prefix & Suffix Data - Default.....	6 (E2)
Erase Prefix Data - Default.....	6 (E3)
Erase Suffix Data - Default.....	6 (E4)
Prefix AIM ID On.....	7 (A1)
Prefix AIM ID Off - Default.....	7 (A2)
Prefix Carriage Return Line Feed (RS232 Mode Only).....	7 (A3)
Prefix Comma.....	7 (A4)
Prefix Space.....	7 (B1)
Prefix Tab (USB Keyboard Mode Only).....	7 (B2)
Prefix Tab (RS232 Mode Only).....	7 (B3)
Suffix Carriage Return (RS232 Mode Only).....	7 (B4)
Suffix Carriage Return Line Feed (RS232 Mode Only).....	7 (C1)
Suffix Comma.....	7 (C2)
Suffix Enter (USB Keyboard Mode Only).....	7 (C3)
Suffix Line Feed (RS232 Mode Only).....	7 (C4)
Suffix Space.....	7 (D1)
Suffix Tab (USB Keyboard Mode Only).....	7 (D2)
Suffix Tab (RS232 Mode Only).....	7 (D3)
Translate all Characters to Uppercase On.....	7 (D4)
Translate all Characters to Uppercase Off - Default.....	7 (E1)
Symbology Settings.....	7-13
Australian Post On.....	7 (E3)
Australian Post Off - Default.....	7 (E4)
Aztec On - Default.....	8 (A1)
Aztec Inverse On.....	8 (A2)
Aztec Inverse & Normal On.....	8 (A3)
Aztec Off.....	8 (A4)
Codabar On - Default.....	8 (B1)
Codabar Off.....	8 (B2)
Codablock F On.....	8 (B3)
Codablock F Off - Default.....	8 (B4)
Code 11 On.....	8 (C1)
Code 11 Off - Default.....	8 (C2)
Code 11 Checksum Stripped from Result On.....	8 (C3)
Code 32 (Italian Pharmacode) On.....	8 (C4)
Code 32 (Italian Pharmacode) Off - Default.....	8 (D1)
Code 39 On - Default.....	8 (D2)
Code 39 Off.....	8 (D3)
Code 39 Checksum On.....	8 (D4)
Code 39 Checksum Off - Default.....	8 (E1)
Code 39 Checksum Stripped from Result On.....	8 (E2)
Code 39 Extended Full ASCII On.....	8 (E3)
Code 39 Extended Full ASCII Off - Default.....	8 (E4)

Table of Contents

Code 93 On - Default.....	9 (A1)
Code 93 Off.....	9 (A2)
Code 128 On - Default.....	9 (A3)
Code 128 Off.....	9 (A4)
Composite On.....	9 (B1)
Composite Off - Default.....	9 (B2)
Data Matrix Inverse On - Default.....	9 (B3)
Data Matrix Inverse Off.....	9 (B4)
All GS1 DataBar On - Default.....	9 (C1)
All GS1 DataBar Off.....	9 (C2)
GS1 DataBar Omnidirectional and GS1 DataBar Truncated On.....	9 (C3)
GS1 DataBar Omnidirectional and GS1 DataBar Truncated Off.....	9 (C4)
GS1 DataBar Expanded On.....	9 (D1)
GS1 DataBar Expanded Off.....	9 (D2)
GS1 DataBar Expanded Stacked On.....	9 (D3)
GS1 DataBar Expanded Stacked Off.....	9 (D4)
GS1 DataBar Limited On.....	9 (E1)
GS1 DataBar Limited Off.....	9 (E2)
GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional On.....	9 (E3)
GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional Off.....	9 (E4)
Han Xin On.....	10 (A1)
Han Xin Off - Default.....	10 (A2)
Hong Kong 2 of 5 On.....	10 (A3)
Hong Kong 2 of 5 Off - Default.....	10 (A4)
Int 2 of 5 On - Default.....	10 (B1)
Int 2 of 5 Off.....	10 (B2)
Int 2 of 5 Checksum On.....	10 (B3)
Int 2 of 5 Checksum Off - Default.....	10 (B4)
Int 2 of 5 Checksum Stripped from Result On.....	10 (C1)
Japan Post On.....	10 (C2)
Japan Post Off - Default.....	10 (C3)
KIX (Dutch Post) Code On.....	10 (C4)
KIX (Dutch Post) Code Off - Default.....	10 (D1)
Korean Post On.....	10 (D2)
Korean Post Off - Default.....	10 (D3)
Maxicode On.....	10 (D4)
Maxicode Off - Default.....	10 (E1)
Matrix 2 of 5 On.....	10 (E2)
Matrix 2 of 5 Off - Default.....	10 (E3)
Micro PDF417 On.....	10 (E4)
Micro PDF417 Off - Default.....	11 (A1)
MSI Plessey On.....	11 (A2)
MSI Plessey Off - Default.....	11 (A3)
NEC 2 of 5 On.....	11 (A4)
NEC 2 of 5 Off - Default.....	11 (B1)
PDF417 On - Default.....	11 (B2)
PDF417 Off.....	11 (B3)
Pharmacode On.....	11 (B4)
Pharmacode Off - Default.....	11 (C1)
Pharmacode Normal Barcode Decoding (Left to Right).....	11 (C2)
Pharmacode Reverse Barcode Decoding (Right to Left).....	11 (C3)
All QR Code On.....	11 (C4)
All QR Code Off.....	11 (D1)
Standard QR Code On - Default.....	11 (D2)
Straight 2 of 5 On.....	11 (D3)
Straight 2 of 5 Off - Default.....	11 (D4)
Telepen On.....	11 (E1)
Telepen Off - Default.....	11 (E2)
Trioptic On.....	11 (E3)
Trioptic Off - Default.....	11 (E4)
Trioptic Reverse Order Option (Bit 3)On.....	12 (A1)

Table of Contents

Trioptic Reverse Order Option (Bit 3) Off.....	12 (A2)
UK Plessey On.....	12 (A3)
UK Plessey Off - Default.....	12 (A4)
UK Royal Mail On.....	12 (B1)
UK Royal Mail Off - Default.....	12 (B2)
UPC On - Default.....	12 (B3)
UPC Off.....	12 (B4)
UPC E Expansion On.....	12 (C1)
UPC E Expansion Off - Default.....	12 (C2)
UPC Supplemental On.....	12 (C3)
UPC Supplemental Off - Default.....	12 (C4)
Transmit UPC-A Check Digit On - Default.....	12 (D1)
Transmit UPC-A Check Digit Off.....	12 (D2)
Transmit UPC-A Number System On - Default.....	12 (D3)
Transmit UPC-A Number System Off.....	12 (D4)
Transmit UPC-E Check Digit On - Default.....	12 (E1)
Transmit UPC-E Check Digit Off.....	12 (E2)
Transmit UPC-E Number System On - Default.....	12 (E3)
Transmit UPC-E Number System Off.....	12 (E4)
Transmit EAN-13 Check Digit On - Default.....	13 (A1)
Transmit EAN-13 Check Digit Off.....	13 (A2)
Transmit EAN-8 Check Digit On - Default.....	13 (A3)
Transmit EAN-8 Check Digit Off.....	13 (A4)
Convert EAN-8 to EAN-13 On.....	13 (B1)
Convert EAN-8 to EAN-13 Off - Default.....	13 (B2)
Convert UPC-A to EAN-13 Off - Default.....	13 (B3)
Convert UPC-A to EAN-13 On.....	13 (B4)
Convert Bookland EAN-13 to ISBN On.....	13 (C1)
Convert Bookland EAN-13 to ISBN Off - Default.....	13 (C2)
Convert Bookland EAN-13 to ISSN On.....	13 (C3)
Convert Bookland EAN-13 to ISSN Off - Default.....	13 (C4)
UPU ID-Tag On.....	13 (D1)
UPU ID-Tag Off - Default.....	13 (D2)
USPS Intelligent Mail/IMB/ 4-State CB On.....	13 (D3)
USPS Intelligent Mail/IMB/ 4-State CB Off - Default.....	13 (D4)
USPS Planet On.....	13 (E1)
USPS Postnet Off - Default.....	13 (E2)
USPS Planet Off - Default.....	13 (E3)
USPS Postnet On.....	13 (E4)
Keyboard Language Settings.....	14
English Keyboard Mapping for Apple.....	14 (A2)
Italian Keyboard Mapping for Apple.....	14 (A3)
German-Swiss Keyboard Mapping for Apple.....	14 (A4)
German Keyboard Mapping for Apple.....	14 (B1)
Russian Keyboard Mapping for Windows.....	14 (B2)
Operating System Settings.....	14
Alternative Operating System (Linux/Mac) On.....	14 (B4)
Alternative Operating System (Linux/Mac) Off - Default.....	14 (C1)
USB Settings.....	14
Reset to USB Factory Defaults.....	14 (C3)
USB Keyboard Mode.....	14 (C4)
USB Downloader Mode.....	14 (D1)
USB HID POS Mode (Terminal ID 131).....	14 (D2)
USB Native Two Way Mode.....	14 (D3)
USB Virtual COM One Way Mode.....	14 (D4)
USB Virtual COM Multiple Ports.....	14 (E1)
USB Virtual COM Common Ports.....	14 (E2)
RS232 Settings.....	14-15
Reset to RS232 Factory Defaults.....	14 (E4)

Table of Contents

RS232 Interface 1200 Baud Rate.....	15 (A1)
RS232 Interface 2400 Baud Rate.....	15 (A2)
RS232 Interface 4800 Baud Rate.....	15 (A3)
RS232 Interface 9600 Baud Rate.....	15 (A4)
RS232 Interface 19200 Baud Rate.....	15 (B1)
RS232 Interface 38400 Baud Rate.....	15 (B2)
RS232 Interface 57600 Baud Rate.....	15 (B3)
RS232 Interface 115200 Baud Rate - Default.....	15 (B4)
RS232 Interface 7 Data Bits.....	15 (C1)
RS232 Interface 8 Data Bits - Default.....	15 (C2)
RS232 Interface Stop Bits 1 - Default.....	15 (C3)
RS232 Interface Stop Bits 2.....	15 (C4)
RS232 Interface Even Parity.....	15 (D1)
RS232 Interface Odd Parity.....	15 (D2)
RS232 Interface No Parity - Default.....	15 (D3)
RS232 Interface Flow Control Off - Default.....	15 (D4)
RS232 Interface Flow Control - Hardware.....	15 (E1)
RS232 Packet Mode.....	15 (E2)
RS232 Raw Mode - Default.....	15 (E3)
Reader Feedback Settings.....	16
Beep Volume 100% - Default.....	16 (A2)
Beep Volume 67%.....	16 (A3)
Beep Volume 33%.....	16 (A4)
Beep Volume 0%.....	16 (B1)
Reader/Modem Command Settings.....	16
Reader ID and Firmware Version.....	16 (B3)
Reader Text Commands On.....	16 (B4)
Reader Text Commands Off - Default.....	16 (C1)
Enable Responses to Text Commands.....	16 (C2)
Reset, Clear and Save Reader Settings.....	16
Clear All JavaScript Rules.....	16 (C4)
Clear All Stored Data and Images.....	16 (D1)
Save All Reader Settings - Default.....	16 (D2)
Reboot Reader.....	16 (D3)

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Prefix AIM ID On</p>  <p>M10199_01</p> <p style="text-align: right;">A1</p>	<p>Prefix AIM ID Off - Default</p>  <p>M10198_01</p> <p style="text-align: right;">A2</p>	<p>Prefix Carriage Return Line Feed (RS232 Mode Only)</p>  <p>M10405_01</p> <p style="text-align: right;">A3</p>	<p>Prefix Comma</p>  <p>M10127_01</p> <p style="text-align: right;">A4</p>	
<p>Prefix Space</p>  <p>M10128_01</p> <p style="text-align: right;">B1</p>	<p>Prefix Tab (USB Keyboard Mode Only)</p>  <p>M10129_01</p> <p style="text-align: right;">B2</p>	<p>Prefix Tab (RS232 Mode Only)</p>  <p>M10319_01</p> <p style="text-align: right;">B3</p>	<p>Suffix Carriage Return (RS232 Mode Only)</p>  <p>M10320_01</p> <p style="text-align: right;">B4</p>	
<p>Suffix Carriage Return Line Feed (RS232 Mode Only)</p>  <p>M10322_01</p> <p style="text-align: right;">C1</p>	<p>Suffix Comma</p>  <p>M10131_01</p> <p style="text-align: right;">C2</p>	<p>Suffix Enter (USB Keyboard Mode Only)</p>  <p>M10134_01</p> <p style="text-align: right;">C3</p>	<p>Suffix Line Feed (RS232 Mode Only)</p>  <p>M10321_01</p> <p style="text-align: right;">C4</p>	
<p>Suffix Space</p>  <p>M10132_01</p> <p style="text-align: right;">D1</p>	<p>Suffix Tab (USB Keyboard Mode Only)</p>  <p>M10133_01</p> <p style="text-align: right;">D2</p>	<p>Suffix Tab (RS232 Mode Only)</p>  <p>M10323_01</p> <p style="text-align: right;">D3</p>	<p>Translate all Characters to Uppercase On</p>  <p>M10220_03</p> <p style="text-align: right;">D4</p>	
<p>Translate all Characters to Uppercase Off - Default</p>  <p>M10426_02</p> <p style="text-align: right;">E1</p>	<p>Symbology Settings</p>		<p>Australian Post On</p>  <p>M10288_02</p> <p style="text-align: right;">E3</p>	<p>Australian Post Off - Default</p>  <p>M10289_02</p> <p style="text-align: right;">E4</p>









CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Aztec On - Default</p>  <p>M10018_01</p> <p style="text-align: right;">A1</p>	<p>Aztec Inverse On</p>  <p>M10020_01</p> <p style="text-align: right;">A2</p>	<p>Aztec Inverse & Normal On</p>  <p>M10021_01</p> <p style="text-align: right;">A3</p>	<p>Aztec Off</p>  <p>M10019_01</p> <p style="text-align: right;">A4</p>
<p>Codabar On - Default</p>  <p>M10022_01</p> <p style="text-align: right;">B1</p>	<p>Codabar Off</p>  <p>M10023_01</p> <p style="text-align: right;">B2</p>	<p>Codablock F On</p>  <p>M10027_01</p> <p style="text-align: right;">B3</p>	<p>Codablock F Off - Default</p>  <p>M10026_01</p> <p style="text-align: right;">B4</p>
<p>Code 11 On</p>  <p>M10029_01</p> <p style="text-align: right;">C1</p>	<p>Code 11 Off - Default</p>  <p>M10028_01</p> <p style="text-align: right;">C2</p>	<p>Code 11 Checksum Stripped from Result On</p>  <p>M10031_01</p> <p style="text-align: right;">C3</p>	<p>Code 32 (Italian Pharmacode) On</p>  <p>M10239_02</p> <p style="text-align: right;">C4</p>
<p>Code 32 (Italian Pharmacode) Off - Default</p>  <p>M10238_02</p> <p style="text-align: right;">D1</p>	<p>Code 39 On - Default</p>  <p>M10033_02</p> <p style="text-align: right;">D2</p>	<p>Code 39 Off</p>  <p>M10034_02</p> <p style="text-align: right;">D3</p>	<p>Code 39 Checksum On</p>  <p>M10036_01</p> <p style="text-align: right;">D4</p>
<p>Code 39 Checksum Off - Default</p>  <p>M10035_01</p> <p style="text-align: right;">E1</p>	<p>Code 39 Checksum Stripped from Result On</p>  <p>M10037_01</p> <p style="text-align: right;">E2</p>	<p>Code 39 Extended Full ASCII On</p>  <p>M10039_01</p> <p style="text-align: right;">E3</p>	<p>Code 39 Extended Full ASCII Off - Default</p>  <p>M10038_01</p> <p style="text-align: right;">E4</p>

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Code 93 On - Default</p>  <p>M10042_01</p> <p style="text-align: right;">A1</p>	<p>Code 93 Off</p>  <p>M10043_01</p> <p style="text-align: right;">A2</p>	<p>Code 128 On - Default</p>  <p>M10044_01</p> <p style="text-align: right;">A3</p>	<p>Code 128 Off</p>  <p>M10045_01</p> <p style="text-align: right;">A4</p>
<p>Composite On</p>  <p>M10047_01</p> <p style="text-align: right;">B1</p>	<p>Composite Off - Default</p>  <p>M10046_01</p> <p style="text-align: right;">B2</p>	<p>Data Matrix Inverse On - Default</p>  <p>M10051_03</p> <p style="text-align: right;">B3</p>	<p>Data Matrix Inverse Off</p>  <p>M10050_03</p> <p style="text-align: right;">B4</p>
<p>All GS1 DataBar On - Default</p>  <p>M10054_01</p> <p style="text-align: right;">C1</p>	<p>All GS1 DataBar Off</p>  <p>M10055_01</p> <p style="text-align: right;">C2</p>	<p>GS1 DataBar Omnidirectional and GS1 DataBar Truncated On</p>  <p>M10057_03</p> <p style="text-align: right;">C3</p>	<p>GS1 DataBar Omnidirectional and GS1 DataBar Truncated Off</p>  <p>M10355_02</p> <p style="text-align: right;">C4</p>
<p>GS1 DataBar Expanded On</p>  <p>M10059_03</p> <p style="text-align: right;">D1</p>	<p>GS1 DataBar Expanded Off</p>  <p>M10417_02</p> <p style="text-align: right;">D2</p>	<p>GS1 DataBar Expanded Stacked On</p>  <p>M10357_02</p> <p style="text-align: right;">D3</p>	<p>GS1 DataBar Expanded Stacked Off</p>  <p>M10356_02</p> <p style="text-align: right;">D4</p>
<p>GS1 DataBar Limited On</p>  <p>M10056_03</p> <p style="text-align: right;">E1</p>	<p>GS1 DataBar Limited Off</p>  <p>M10354_02</p> <p style="text-align: right;">E2</p>	<p>GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional On</p>  <p>M10058_03</p> <p style="text-align: right;">E3</p>	<p>GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional Off</p>  <p>M10353_03</p> <p style="text-align: right;">E4</p>





CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Han Xin On</p>  <p>M10248_01</p> <p>A1</p>	<p>Han Xin Off - Default</p>  <p>M10249_01</p> <p>A2</p>	<p>Hong Kong 2 of 5 On</p>  <p>M10079_01</p> <p>A3</p>	<p>Hong Kong 2 of 5 Off - Default</p>  <p>M10078_02</p> <p>A4</p>
<p>Int 2 of 5 On - Default</p>  <p>M10060_01</p> <p>B1</p>	<p>Int 2 of 5 Off</p>  <p>M10061_01</p> <p>B2</p>	<p>Int 2 of 5 Checksum On</p>  <p>M10235_01</p> <p>B3</p>	<p>Int 2 of 5 Checksum Off - Default</p>  <p>M10234_01</p> <p>B4</p>
<p>Int 2 of 5 Checksum Stripped from Result On</p>  <p>M10065_01</p> <p>C1</p>	<p>Japan Post On</p>  <p>M10292_02</p> <p>C2</p>	<p>Japan Post Off - Default</p>  <p>M10293_02</p> <p>C3</p>	<p>KIX (Dutch Post) Code On</p>  <p>M10290_02</p> <p>C4</p>
<p>KIX (Dutch Post) Code Off - Default</p>  <p>M10291_02</p> <p>D1</p>	<p>Korean Post On</p>  <p>M10358_01</p> <p>D2</p>	<p>Korean Post Off - Default</p>  <p>M10359_01</p> <p>D3</p>	<p>Maxicode On</p>  <p>M10067_02</p> <p>D4</p>
<p>Maxicode Off - Default</p>  <p>M10066_01</p> <p>E1</p>	<p>Matrix 2 of 5 On</p>  <p>M10069_01</p> <p>E2</p>	<p>Matrix 2 of 5 Off - Default</p>  <p>M10068_01</p> <p>E3</p>	<p>Micro PDF417 On</p>  <p>M10073_01</p> <p>E4</p>

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Micro PDF417 Off - Default</p>  <p>M10072_01</p> <p style="text-align: right;">A1</p>	<p>MSI Plessey On</p>  <p>M10076_01</p> <p style="text-align: right;">A2</p>	<p>MSI Plessey Off - Default</p>  <p>M10077_01</p> <p style="text-align: right;">A3</p>	<p>NEC 2 of 5 On</p>  <p>M10082_01</p> <p style="text-align: right;">A4</p>
<p>NEC 2 of 5 Off - Default</p>  <p>M10083_01</p> <p style="text-align: right;">B1</p>	<p>PDF417 On - Default</p>  <p>M10070_01</p> <p style="text-align: right;">B2</p>	<p>PDF417 Off</p>  <p>M10071_01</p> <p style="text-align: right;">B3</p>	<p>Pharmacode On</p>  <p>M10275_02</p> <p style="text-align: right;">B4</p>
<p>Pharmacode Off - Default</p>  <p>M10274_03</p> <p style="text-align: right;">C1</p>	<p>Pharmacode Normal Barcode Decoding (Left to Right)</p>  <p>M10281_02</p> <p style="text-align: right;">C2</p>	<p>Pharmacode Reverse Barcode Decoding (Right to Left)</p>  <p>M10280_02</p> <p style="text-align: right;">C3</p>	<p>All QR Code On</p>  <p>M10101_02</p> <p style="text-align: right;">C4</p>
<p>All QR Code Off</p>  <p>M10351_03</p> <p style="text-align: right;">D1</p>	<p>Standard QR Code On - Default</p>  <p>M10095_04</p> <p style="text-align: right;">D2</p>	<p>Straight 2 of 5 On</p>  <p>M10241_01</p> <p style="text-align: right;">D3</p>	<p>Straight 2 of 5 Off - Default</p>  <p>M10240_01</p> <p style="text-align: right;">D4</p>
<p>Telepen On</p>  <p>M10103_01</p> <p style="text-align: right;">E1</p>	<p>Telepen Off - Default</p>  <p>M10104_01</p> <p style="text-align: right;">E2</p>	<p>Trioptic On</p>  <p>M10041_01</p> <p style="text-align: right;">E3</p>	<p>Trioptic Off - Default</p>  <p>M10040_01</p> <p style="text-align: right;">E4</p>

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Trioptic Reverse Order Option (Bit 3) On</p>  <p>M10446_01</p> <p>A1</p>	<p>Trioptic Reverse Order Option (Bit 3) Off</p>  <p>M10445_01</p> <p>A2</p>	<p>UK Plessey On</p>  <p>M10237_02</p> <p>A3</p>	<p>UK Plessey Off - Default</p>  <p>M10236_02</p> <p>A4</p>
<p>UK Royal Mail On</p>  <p>M10294_02</p> <p>B1</p>	<p>UK Royal Mail Off - Default</p>  <p>M10295_02</p> <p>B2</p>	<p>UPC On - Default</p>  <p>M10105_01</p> <p>B3</p>	<p>UPC Off</p>  <p>M10106_01</p> <p>B4</p>
<p>UPC E Expansion On</p>  <p>M10108_01</p> <p>C1</p>	<p>UPC E Expansion Off - Default</p>  <p>M10107_01</p> <p>C2</p>	<p>UPC Supplemental On</p>  <p>M10110_01</p> <p>C3</p>	<p>UPC Supplemental Off - Default</p>  <p>M10109_01</p> <p>C4</p>
<p>Transmit UPC-A Check Digit On - Default</p>  <p>M10475_01</p> <p>D1</p>	<p>Transmit UPC-A Check Digit Off</p>  <p>M10476_01</p> <p>D2</p>	<p>Transmit UPC-A Number System On - Default</p>  <p>M10477_01</p> <p>D3</p>	<p>Transmit UPC-A Number System Off</p>  <p>M10478_01</p> <p>D4</p>
<p>Transmit UPC-E Check Digit On - Default</p>  <p>M10479_01</p> <p>E1</p>	<p>Transmit UPC-E Check Digit Off</p>  <p>M10480_01</p> <p>E2</p>	<p>Transmit UPC-E Number System On - Default</p>  <p>M10481_01</p> <p>E3</p>	<p>Transmit UPC-E Number System Off</p>  <p>M10482_01</p> <p>E4</p>

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Transmit EAN-13 Check Digit On - Default</p>  <p>M10483_01</p> <p style="text-align: right;">A1</p>	<p>Transmit EAN-13 Check Digit Off</p>  <p>M10484_01</p> <p style="text-align: right;">A2</p>	<p>Transmit EAN-8 Check Digit On - Default</p>  <p>M10485_01</p> <p style="text-align: right;">A3</p>	<p>Transmit EAN-8 Check Digit Off</p>  <p>M10486_01</p> <p style="text-align: right;">A4</p>
<p>Convert EAN-8 to EAN-13 On</p>  <p>M10488_01</p> <p style="text-align: right;">B1</p>	<p>Convert EAN-8 to EAN-13 Off - Default</p>  <p>M10487_01</p> <p style="text-align: right;">B2</p>	<p>Convert UPC-A to EAN-13 Off - Default</p>  <p>M10489_01</p> <p style="text-align: right;">B3</p>	<p>Convert UPC-A to EAN-13 On</p>  <p>M10490_01</p> <p style="text-align: right;">B4</p>
<p>Convert Bookland EAN-13 to ISBN On</p>  <p>M10492_01</p> <p style="text-align: right;">C1</p>	<p>Convert Bookland EAN-13 to ISBN Off - Default</p>  <p>M10491_01</p> <p style="text-align: right;">C2</p>	<p>Convert Bookland EAN-13 to ISSN On</p>  <p>M10494_01</p> <p style="text-align: right;">C3</p>	<p>Convert Bookland EAN-13 to ISSN Off - Default</p>  <p>M10493_01</p> <p style="text-align: right;">C4</p>
<p>UPU ID-Tag On</p>  <p>M10360_02</p> <p style="text-align: right;">D1</p>	<p>UPU ID-Tag Off - Default</p>  <p>M10361_02</p> <p style="text-align: right;">D2</p>	<p>USPS Intelligent Mail/IMB/4-State CB On</p>  <p>M10286_02</p> <p style="text-align: right;">D3</p>	<p>USPS Intelligent Mail/IMB/4-State CB Off - Default</p>  <p>M10287_02</p> <p style="text-align: right;">D4</p>
<p>USPS Planet On</p>  <p>M10284_02</p> <p style="text-align: right;">E1</p>	<p>USPS Postnet Off - Default</p>  <p>M10283_02</p> <p style="text-align: right;">E2</p>	<p>USPS Planet Off - Default</p>  <p>M10285_02</p> <p style="text-align: right;">E3</p>	<p>USPS Postnet On</p>  <p>M10282_02</p> <p style="text-align: right;">E4</p>

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

Keyboard Language Settings	English Keyboard Mapping for Apple  M10419_01 A2	Italian Keyboard Mapping for Apple  M10423_01 A3	German-Swiss Keyboard Mapping for Apple  M10422_01 A4
German Keyboard Mapping for Apple  M10421_01 B1	Russian Keyboard Mapping for Windows  M10418_02 B2	Operating System Settings	Alternative Operating System (Linux/Mac) On  M10123_02 B4
Alternative Operating System (Linux/Mac) Off - Default  M10122_02 C1	USB Settings	Reset to USB Factory Defaults  M10002_02 C3	USB Keyboard Mode  M10200_01 C4
USB Downloader Mode  M10004_02 D1	USB HID POS Mode (Terminal ID 131)  M10425_01 D2	USB Native Two Way Mode  M10006_02 D3	USB Virtual COM One Way Mode  M10005_01 D4
USB Virtual COM Multiple Ports  M10431_01 E1	USB Virtual COM Common Ports  M10432_01 E2	RS232 Settings	Reset to RS232 Factory Defaults  M10389_03 E4

CR5000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>RS232 Interface 1200 Baud Rate</p>  <p>M10392_01</p> <p style="text-align: right;">A1</p>	<p>RS232 Interface 2400 Baud Rate</p>  <p>M10393_01</p> <p style="text-align: right;">A2</p>	<p>RS232 Interface 4800 Baud Rate</p>  <p>M10394_01</p> <p style="text-align: right;">A3</p>	<p>RS232 Interface 9600 Baud Rate</p>  <p>M10395_01</p> <p style="text-align: right;">A4</p>
<p>RS232 Interface 19200 Baud Rate</p>  <p>M10396_01</p> <p style="text-align: right;">B1</p>	<p>RS232 Interface 38400 Baud Rate</p>  <p>M10397_01</p> <p style="text-align: right;">B2</p>	<p>RS232 Interface 57600 Baud Rate</p>  <p>M10398_01</p> <p style="text-align: right;">B3</p>	<p>RS232 Interface 115200 Baud Rate - Default</p>  <p>M10399_01</p> <p style="text-align: right;">B4</p>
<p>RS232 Interface 7 Data Bits</p>  <p>M10390_01</p> <p style="text-align: right;">C1</p>	<p>RS232 Interface 8 Data Bits - Default</p>  <p>M10391_01</p> <p style="text-align: right;">C2</p>	<p>RS232 Interface Stop Bits 1 - Default</p>  <p>M10406_01</p> <p style="text-align: right;">C3</p>	<p>RS232 Interface Stop Bits 2</p>  <p>M10407_01</p> <p style="text-align: right;">C4</p>
<p>RS232 Interface Even Parity</p>  <p>M10400_01</p> <p style="text-align: right;">D1</p>	<p>RS232 Interface Odd Parity</p>  <p>M10401_01</p> <p style="text-align: right;">D2</p>	<p>RS232 Interface No Parity - Default</p>  <p>M10402_01</p> <p style="text-align: right;">D3</p>	<p>RS232 Interface Flow Control Off - Default</p>  <p>M10408_01</p> <p style="text-align: right;">D4</p>
<p>RS232 Interface Flow Control - Hardware</p>  <p>M10409_01</p> <p style="text-align: right;">E1</p>	<p>RS232 Packet Mode</p>  <p>M10388_01</p> <p style="text-align: right;">E2</p>	<p>RS232 Raw Mode - Default</p>  <p>M10387_01</p> <p style="text-align: right;">E3</p>	<p>Intentionally Blank</p>

