 


ChatCam™ Webcam - 4310100

Quick Start Guide

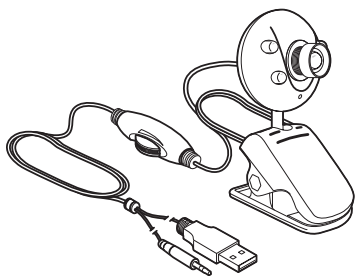

System Requirements:

- Windows® XP/SP2/Vista™/Win7™
- Available USB port
- Available microphone port (if PC does not have a built-in microphone)
- Tray loading CD-ROM drive


Packaging Contents:

- ChatCam™ Webcam
- ooVoo™ and driver install CD
- Quick Start Guide

Important:


Install the software before connecting the webcam to the computer. A computer restart is required after installation. Save and close all open applications before installing the software.


1

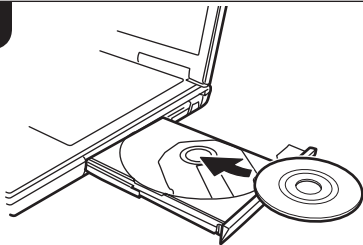


Insert installation CD into the computer and follow on-screen prompts. NOTE: Do not load mini CD into a slot loading CD-ROM drive. A tray loading CD-ROM drive is required.

2

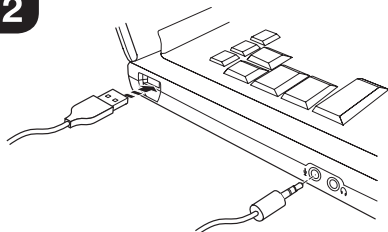


Plug the microphone cable into the microphone input, and plug the USB connector into an available USB port on the computer. USB ports are identified as .

3

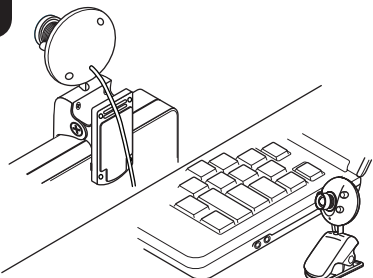

Mount the webcam above the computer monitor or position on your desk as shown.

4

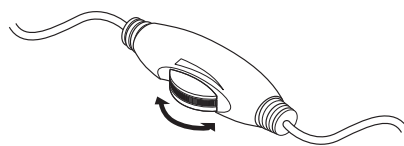

Use the dial located on the cord to adjust the LED brightness on the webcam's face.