

ENERGIZER CHFCV

**Battery Charger**



Dimensions (mm)  
204.00 x 100.00 x 52.00

**Features:**

1. LED charge indicators.
2. Reverse polarity protection: Protects the charger and batteries against damage from incorrectly installed batteries.
3. Charges multiple combinations of AAA, AA, C, D, or 9V NiMH batteries overnight.
4. Charges up to 4 AA or AAA NiMH batteries at a time.
5. Includes Charge Status Indicator.

**Product Detail:**

**Designation:** Family Charger

**Color:** Gun Metal Gray

**Charge Capability:** "AA" Two or Four Batteries  
 "AAA" Two or Four Batteries  
 "C/D" Two or Four Batteries  
 "9V" One or Two Batteries

**Charging Current:** "AA" 200 mA  
 "AAA" 200 mA  
 "C/D" 200 mA  
 "9V" 16 mA

**Trickle Charge:** 15-25 mA (AA, AAA, C, D)

**Charging Time:** 16.5 hours

**Typical Weight:** 500 grams (17.7 oz.)

**Dimensions (mm):** 204.00 x 100.00 x 52.00

**Charging Instructions:**

1. Insert the batteries in the charger as indicated in the charging slots.
2. Load 2 or 4 AA, AAA, C, or D size NiMH batteries or 1 or 2 9V NiMH batteries at a time.
3. Plug the charger into the proper AC outlet. When batteries are placed in the charger, one or two LED lights will glow red indicating charging. (refer to the table below for typical charge times). The LED will go off indicating charge completion.

4-5.5 hrs. for AAA (600-800mAh)  
 11-13 hrs. for AA (1600-1800mAh)  
 15-16.5 hrs. for AA (2100-2500mAh)  
 16.5 hrs. for C/D (2300-2600mAh)  
 10-13.5 hrs. for 9V (110-150mAh)

4. Batteries **must** be charged in **pairs** according to specific battery sizes.

**Important Safety Instructions:**

1. To reduce the risk of injury, charge only rechargeable NiMH batteries with the charger. Other types of batteries might burst, causing personal injury or damage to your charger.
2. Do not charge batteries with different capacities at the same time.
3. For indoor use only. Do not expose charger to rain, snow, or excessive moisture.
4. Never use an extension cord or any attachment not recommended by Energizer®. May result in a risk of fire or electric shock.
5. Do not operate the charger if it has been subjected to shock.
6. Do not disassemble the charger. Incorrect reassembly may result in shock or fire.
7. Always unplug the charger before attempting maintenance or cleaning.
8. Never alter the plug provided. Improper connection can result in shock or fire.
9. This charger is not intended for use by young children or infirm persons without supervision.
10. Never use as a power source.

**Important Notice**

This data sheet contains information specific to battery chargers manufactured at the time of its publication.

©Energizer Holdings, Inc. - Contents herein do not constitute a warranty