

Charging Instructions: CHFCV

1. Insert the batteries in the charger as indicated in the charging slots.
2. Load 2 or 4 AA, AAA, C, or D size NiMH batteries or 1 or 2 9V NiMH batteries at a time.
3. Plug the charger into the proper AC outlet. When batteries are placed in the charger, one or two LED lights will glow red indicating charging. (refer to the information below for typical charge times). The LED will go off indicating charge completion.

4-5.5 hrs. for AAA (600-800mAh)
11-13 hrs. for AA (1600-1800mAh)
15-16.5 hrs. for AA (2100-2500mAh)
16.5 hrs. for C/D (2300-2600mAh)
10-13.5 hrs. for 9V (110-150mAh)
4. Batteries **must** be charged in **pairs** according to specific battery sizes.



LIFETIME LIMITED WARRANTY

This Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries are warranted only to the original United States or Canadian purchaser upon presentation of proof of original purchase to be free from defects in material and workmanship for as long as you own your Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries and this product is manufactured by or for Energizer and such warranty is not transferable to any subsequent end user. Not applicable to damage caused by normal wear and tear, misuse, or modification. Repair or replacement of charger at Energizer's option. Send charger to Energizer, P.O. Box 6056, Cleveland, OH 44101. (Canadian residents send to Energizer Canada, Inc. 165 Kincardine Hwy, Walkerton, Ontario, N0G 2V0). WARRANTY APPLIES TO CONSUMER USE ONLY. ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED. SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THESE EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE OR PROVINCE.

Questions? Visit www.energizer.com

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.

Important Safety Instructions:

1. To reduce the risk of injury, charge only rechargeable NiMH batteries with the charger. Other types of batteries might burst, causing personal injury or damage to your charger.
2. Do not charge batteries with different capacities at the same time.
3. For indoor use only. Do not expose charger to rain, snow, or excessive moisture.
4. Never use an extension cord or any attachment not recommended by Energizer®. May result in a risk of fire or electric shock.
5. Do not operate the charger if it has been subjected to shock.
6. Do not disassemble the charger. Incorrect reassembly may result in shock or fire.
7. Always unplug the charger before attempting maintenance or cleaning.
8. Never alter the plug provided. Improper connection can result in shock or fire.
9. This charger is not intended for use by young children or infirm persons without supervision.
10. Never use as a power source.