

			Printer Server Model
Printer Manufacture	Printer Model	Type of Printer	GPSU21
HP	Business InkJet 1000		OK
	Color Laserjet 1500L		OK
	Color Laserjet 1600	GDI(USB)	OK
	Color Laserjet 2500	Parallel/USB (PCL6/5C)	OK
	Color LaserJet 2550	PCL6/PS level 3 (USB)	OK
	Color LaserJet 2550L/LN	PCL6/PS level 3 (USB)	OK
	Color LaserJet 2600		OK
	Color LaserJet 2605	PCL6/5E(USB)	OK
	Color LaserJet 2700n	USB2.0	OK
	Color LaserJet 2840		OK
	Color LaserJet 3700	PCL6/5C(USB,Parallel)	OK
	Color LaserJet 4000		
	Color LaserJet 4100		
	Color LaserJet 4500		
	Color Laserjet 4650	Install PCL Driver	OK
	Color LaserJet 8550 Color Laser	Parallel (PCL5C)	
	Color Laserjet CP1215		OK
	Color Laserjet CM1312 MFP	USB	OK
	Color Laserjet CM1015 MFP		OK
	Designjet 100		OK
	Designjet 600		
	Designjet 650C		
	Designjet 700		
	Designjet 750C+		
	DeskJet 1120C	Parallel (PCL3)	
	Deskjet 1125C	Parallel/USB (PCL3)	OK
	Deskjet 1180C	Parallel/USB	OK
	DeskJet 1280	PCL3(USB/Parallel)	OK
	Deskjet 2000 J210		OK
	Deskjet 3000		OK
	Deskjet 3050	USB2.0	OK
	Deskjet 3325	USB	OK
	DeskJet 3420	USB	OK
Deskjet 3535		OK	
Deskjet 3650		OK	
Deskjet 3743		OK	
Deskjet 3748	USB	OK	
Deskjet 3820	USB2.0/Parallel	OK	
DeskJet 3920		OK	
DeskJet 3940		OK	
DeskJet 400/420	Parallel		
Deskjet 450C		OK	
DeskJet 5440		OK	
DeskJet 5500			
Deskjet 5550	USB/Parallel	OK	
Deskjet 5652	USB/Parallel	OK	
Deskjet 670C	Parallel(PCL3)		
Deskjet 680C			
Deskjet 720C	Parallel		
HP			

HP

Deskjet 810C	USB2.0/Parallel(PCL3)	OK
Deskjet 830C		OK
Deskjet 845C	USB(PCL3)	OK
DeskJet 9300	USB/Parallel(PCL3)	OK
Deskjet 948c	Parallel/USB	OK
Deskjet 9600		OK
Deskjet 9650	USB/Parallel(PCL3)	OK
Deskjet 970c XI	Parallel/USB(PCL3)	OK
Deskjet 9800	USB/Parallel	OK
Deskjet D1560		OK
Deskjet D2560		OK
Deskjet D5560	USB	OK
DeskJet F370		OK
DeskJet F380		OK
DeskJet F4185		OK
DeskJet F4280		OK
Deskjet F4480	USB	OK
Laserjet M1005 MFP		OK
LaserJet 1022	USB(GDI)	OK
LaserJet 1022N		OK
Laserjet 1100	Parallel	
Laserjet 1010	USB	OK
LaserJet 1160	USB(PCL5e/GDI)	OK
LaserJet 1200	USB/Parallel (PCL6/5e)	OK
LaserJet 1220		OK
Laserjet 1300	USB/Parallel(PCL6/5e)	OK
Laserjet 1320	USB/Parallel(PCL6/5e)	OK
Laserjet M1522n MFP		OK
LaserJet 2100	Parallel (PCL6)	
Laserjet 2200d	USB/Parallel	OK
Laserjet 2300	USB/Parallel(PCL6/5E)	OK
LaserJet 2410	PCL6/5E(USB)	OK
LaserJet 2420	USB/Parallel(PCL6/5E)	OK
LaserJet 2550		OK
LaserJet 3015	USB/Parallel(PCL6/5E)	OK
LaserJet 3050	USB(PCL6/PCL5E)	OK
LaserJet 3055		OK
Laserjet 3200	USB/Parallel(PCL6/5E)	OK
Laserjet 3330		OK
LaserJet 3330mfp	USB/Parallel (PCL6/5E)	OK
LaserJet 3380	USB/Parallel (PCL6/5E)	OK
Laserjet 4000	Parallel(B.C)	
LaserJet 4050	Parallel(PCL6/5e)	
Laserjet 4100 /4100n	Parallel (PCL6/5E)	
LaserJet 4250	USB/Parallel(PCL6/5E)	OK
Laserjet 4300n	Parallel (PCL6/5E)	
Laserjet 4300tn/dtn	Parallel (PCL6/5E)	
Laserjet 4500		
Laserjet 4650		OK
Laserjet 5100fn/tn	Parallel (PCL6/5E)	
Laserjet 5100le/se	Parallel (PCL6/5E)	
Laserjet 6P / 6L	Parallel	
Laserjet 8100		
Laserjet M1005		OK

Laserjet M1005 MFP		OK
Laserjet M1120 MFP		OK
LaserJet M1319F MFP	USB	OK
LaserJet P2015	USB(PCL6/5e/PS Level 3	OK
Officejet J3608		OK
OfficeJet 4255		OK
OfficeJet 4255		OK
Officejet 4500		OK
OfficeJet 5610	USB	OK
Officejet J5780		OK
OfficeJet 6210		OK
OfficeJet 6310	USB	OK
Officejet 6000	USB	OK
Officejet 6500		OK
Officejet 7000	USB	
Officejet 7500A	USB2.0	OK
OfficeJet 7210		OK
OfficeJet J4580		OK
Officejet J4660		OK
Officejet J6480		OK
Officejet K7100		OK
OfficeJet K850		OK
OfficeJet Pro K5300		OK
OfficeJet Pro K550		OK
OfficeJet Pro K8600		OK
Officejet Pro L7380		OK
Officejet Pro L7590		OK
Officejet Pro 6500A Plus	USB2.0	OK
Officejet Pro 7000		OK
Officejet Pro 8000	USB	OK
Officejet Pro 8500A Plus	USB2.0	OK
Officejet Pro 8500W		OK
Photosmart 2610		OK
Photosmart 3110		OK
Photosmart 7150	USB2.0	OK
Photosmart 7200		OK
Photosmart 7550	USB 2.0、 Parallel	OK
Photosmart 7660	USB(PCL3)	OK
Photosmart 7830		OK
Photosmart 7900		OK
Photosmart 8200		OK
Photosmart Plus B209a	USB	OK
Photosmart Plus B210a	USB	OK
Photosmart Plus C310a	USB	OK
Photosmart A520		OK
Photosmart B109a		OK
Photosmart B110a AIO		OK
Photosmart C309a		OK
Photosmart C410a	USB2.0	OK
Photosmart C3180		OK
Photosmart C4180		OK
Photosmart C4280		OK
Photosmart C4385		OK
Photosmart C4480		OK

	Photosmart C4580		OK
	Photosmart C5180		OK
	Photosmart C5280		OK
	Photosmart C5380		OK
	Photosmart C6180		OK
	Photosmart C6280		OK
	Photosmart C6380		OK
	Photosmart C7180		OK
	Photosmart C7280		OK
	Photosmart C8180		OK
	Photosmart D5160		OK
	Photosmart D5360		OK
	Photosmart D5460		OK
	Photosmart D7160		OK
	Photosmart D7260		OK
	Photosmart D7360		OK
	Photosmart Premium C309g		OK
	Photosmart Premium C310g		OK
	PSC 1210	USB 2.0	
	PSC 1315		OK
	PSC 1350	USB (LIDIL)	OK
	PSC 1410		OK
	PSC 1610		OK
	PSC 2210		OK
	PSC 2310	USB	OK
Printer Manufacture	Printer Model	Type of Printer	PS-2101
			PUN-2001
	Aculaser C1100SE		OK
	Aculaser C1700	USB	OK
	Aculaser C1750N	USB	OK
	Aculaser C1750W	USB	OK
	Aculaser C1900	USB/Parallel	OK
	Aculaser C2900	USB	OK
	Aculaser C3800	USB	OK
	Aculaser C3900N	USB	OK
	Aculaser C9100		OK
	Aculaser CX16NF	USB	OK
	Aculaser CX17NF	USB	OK
	Aculaser M1400	USB	OK
	Aculaser M2010DN		OK
	Aculaser M2010D		OK
	Aculaser M2310D	USB/Parallel	OK
	Aculaser M2310DN	USB	OK
	Aculaser M2410D	USB/Parallel	OK
	Aculaser M2410DN	USB	OK
	Aculaser MX14	USB	OK
	Aculaser MX14NF	USB	OK
	B-508DN		OK
	C750		OK
	CC-500L		OK
	CL-760		OK
	E-300L		OK
	E-520		OK
	E-720		OK

EC-01		OK
EPL 5700		
EPL 5700	Parallel (ESC/Pages)	
EPL 5800		OK
EPL 5800	USB/Parallel (PCL6/5e)	OK
EPL 5900		OK
EPL 5900	USB/Parallel	OK
EPL 6100	USB/Parallel (PCL6/5e)	OK
EPL 6200		OK
Aculaser C1600		OK
B-518DN		OK
EPL 6200	USB/Parallel (ESC/Pages)	OK
EPL N2120		
K100	USB	OK
L200	USB	OK
L800	USB	OK
LP2500		OK
LP-7700		OK
LP-8700		OK
LP-8800C		OK
LP8900		OK
LP-9500C		OK
LQ 100		
LQ 1000C		
LQ 1170+		
LQ 1170C		
LQ 1170C+		
LQ 2070C		
LQ 2080C		
LQ 2090		
LQ 2090C		OK
LQ 2170C	Parallel(ESC/P)	
LQ 2180C		
LQ 2190C	Parallel/USB	OK
LQ 2550		
LQ 300	Parallel(ESC/P)	
LQ 300+		
LQ 300+II		OK
LQ 3500C		
LQ 570C		
LQ 670		
LQ 680	Parallel(ESC/P)	
LQ 680C		
ME 320		OK
ME 340	USB	OK
ME Office 82WD	USB	OK
ME Office 900WD	USB	OK
ME Office 940FW	USB	OK
ME Office 960FWD	USB	OK
MC-2000		OK
PictureMate PM250		OK
PLQ-20C		OK
PLQ-20CM		OK
PM-860PT		OK

PM-890C		OK
PM-920C		OK
PM-930C		OK
PM-950C		OK
PM-970C		OK
PM-980C		OK
PM-A550		OK
PM-A620		OK
PM-A650		OK
PM-A720		OK
PM-A820		OK
PM-A840		OK
PM-A850		OK
PM-A890		OK
PM-A900		OK
PM-A920		OK
PM-A940		OK
PM-A950		OK
PM-A970		OK
PM-2200C		OK
PM-3500C		OK
PM-3700C		OK
PM-4000PX		OK
PM-D800		OK
PM-D870		OK
PM-D1000		OK
PM-FA700		OK
PM-G800		OK
PM-G820		OK
PM-G850		OK
PM-G860		OK
PM-G4500		OK
PM-T960		OK
PM-T990		OK
PX-5000		OK
PX-A640		OK
PX-A740		OK
PX-G5300		OK
PX-G5100		OK
PX-G930		OK
PX-G5000		OK
PX-V780		OK
RX 510		OK
RX 530		OK
RX 590		OK
RX 630		OK
RX 690		OK
Stylus C20		OK
Stylus C40		OK
Stylus C41UX/SX	USB	OK
Stylus C43UX		OK
Stylus C45		OK
Stylus C59		OK
Stylus C60	USB/Parallel	OK

EPSON

Stylus C63		OK
Stylus C67		OK
Stylus C79		OK
Stylus C83		
Stylus C90		OK
Stylus Color 1160	USB/Parallel	OK
Stylus Color 1500		OK
Stylus Color 1520		OK
Stylus Color 400	Parallel	
Stylus Color 600		
Stylus Color 670	USB/Parallel (ESC/P)	OK
Stylus Color 800	Parallel (ESC/P2)	OK
Stylus Color 810		OK
Stylus Color 850	Parallel (ESC/P2)	OK
Stylus Color 900	USB/Parallel (ESC/P2)	OK
Stylus CX-1500		OK
Stylus CX-2900		OK
Stylus CX-3500		OK
Stylus CX-3700		OK
Stylus CX-3900		OK
Stylus CX-4100		OK
Stylus CX-4700		OK
Stylus CX-4900		OK
Stylus CX-5300		OK
Stylus CX-5500		OK
Stylus CX-5505		OK
Stylus CX-5900		OK
Stylus CX-6900F		OK
Stylus CX-7300		OK
Stylus CX-7800		OK
Stylus CX-8300		OK
Stylus CX-9300F		OK
Stylus Office T30		OK
Stylus Office T40W	USB	OK
Stylus Office TX300F		OK
Stylus Office TX320F	USB	OK
Stylus Office TX510FN	USB	OK
Stylus Office TX600FW		OK
Stylus Office TX610FW	USB	OK
Stylus Office T1100	USB	OK
Stylus Photo 915		OK
Stylus Photo 1270	USB/Parallel	OK
Stylus Photo 1290	USB/Parallel	OK
Stylus Photo 1390		OK
Stylus Photo 2100		OK
Stylus Photo 710	USB/Parallel	OK
Stylus Photo 720	USB/Parallel	OK
Stylus Photo 790		OK
Stylus Photo 810		OK
Stylus Photo 830U		OK
Stylus Photo 900		OK
Stylus Photo 915		OK
Stylus Photo EX2	Parallel	OK
Stylus Photo EX3	Parallel/USB1.1	OK

	Stylus Photo R1800		OK
	Stylus Photo R210	USB1.1	OK
	Stylus Photo R230	USB	OK
	Stylus Photo R250	USB	OK
	Stylus Photo R270	ESC/P(USB)	OK
	Stylus Photo R310	USB2.0	OK
	Stylus Photo R350		OK
	Stylus Photo R2400	USB	OK
	Stylus Photo R800		OK
	Stylus Photo RX430	USB	OK
	Stylus Photo RX 510		OK
	Stylus Photo RX 530		OK
	Stylus Photo RX 590		OK
	Stylus Photo RX 630		OK
	Stylus Photo RX 650		OK
	Stylus Photo RX 690		OK
	Stylus Photo R2880		OK
	Stylus Photo TX700W	USB	OK
	Stylus Photo TX800FW	USB	OK
	Stylus Photo TX820FWD	USB	OK
	Stylus Pro 7600	USB/Parallel	OK
	Stylus TX550W	USB	OK
	Stylus TX420W		OK
	Stylus TX410	USB	OK
	Stylus TX430	USB	OK
	Stylus TX235	USB	OK
	Stylus TX220		OK
	Stylus TX200	USB	OK
	Stylus TX210	USB	OK
	Stylus TX130	USB	OK
	Stylus TX110	USB	OK
	Stylus TX100	USB	OK
	Stylus T22		OK
	Stylus T20	USB	OK
	Stylus T21	USB	OK
	Stylus Photo T50	USB	OK
	TM883 (III)		
	TM T88III		
Printer Manufacture	Printer Model	Type of Printer	PS-2101
			PUN-2001
Canon	BJ-330		
	BJC-4200		
	BJC-4300	Parallel	
	BJC-4500	Parallel	
	BJC-4550	Parallel	
	BJC-4600		
	BJF9000		OK
	D380		OK
	I-255		OK
	I-355		OK
	I-450		OK
	I-455		OK
	I-470D		OK
	I-475D		OK

I-550		OK	
I-560		OK	
I-850	IEEE 1284/USB	OK	
I-865		OK	
I-950	USB 2.0	OK	
I-6100		OK	
I-6500		OK	
I-9100		OK	
I-9950		OK	
IX4000		OK	
IX5000		OK	
Imageclass D380		OK	
MP-160		OK	
MP-638		OK	
MP 770		OK	
MX318		OK	
MX320		OK	
MX700		OK	
PIXUS IP2500		OK	
PIXUS 990i		OK	
PIXMA iP1000	USB1.1	OK	
PIXMA iP1700		OK	
PIXMA iP1800		OK	
PIXMA Ip1880	USB	OK	
PIXMA Ip1980		OK	
PIXMA Ip2000		OK	
PIXMA iP3000	USB 2.0	OK	
PIXMA Ip3300		OK	
PIXMA Ip3500	USB	OK	
PIXMA Ip3680	USB	OK	
PIXMA iP4000	USB1.1/IEEE1284	OK	
PIXMA Ip4200		OK	
PIXMA Ip4300		OK	
PIXMA Ip4500		OK	
PIXMA Ip4760		OK	
PIXMA Ip5000		OK	
PIXMA Ip6000		OK	
PIXMA Ip8500		OK	
PIXMA MG6170	USB2.0	OK	
PIXMA MP110	USB	OK	
PIXMA MP130		OK	
PIXMA MP145		OK	
PIXMA MP150	USB 2.0 (GDI)	OK	
PIXMA MP180		OK	
PIXMA MP258	USB	OK	
PIXMA MP450		OK	
PIXMA MP730		OK	
PIXMA MP780		OK	
PIXMA MP830		OK	
PIXMA MX357		OK	
PIXMA MX416	USB2.0	OK	
S-200SPX		OK	
S-520	Parallel/USB		
Printer Manufacture	Printer Model	Type of Printer	PS-2101

			PUN-2001
Lexmark	C720	Parallel	
	E230	Parallel/USB2.0	OK
	E322	USB	OK
	Optra S1250	Parallel	
	P4350		OK
	P6250		OK
	T420		OK
	T620		OK
	W812	USB1.1/Parallel	OK
	Z42		OK
	Z43	USB	OK
	Z45	USB	OK
	Z55		OK
	Z515		OK
	Z615	USB1.1	OK
	Z705		OK
FUJI Xerox	Able 3321		
	DL700		
	DL900		
	DL-3400		
	DL-3800		
	DL-3850		
	DL-5800		
	DL-6400Pro		
	DL-6800		
	DocuPrint 2050	GDI(USB/Parallel)ok	OK
	DocuPrint 240A		OK
	DocuPrint C1110B		OK
	DocuPrint CM205 f	USB	OK
	DocuPrint CP105 b	USB	OK
	DocuPrint P205 b	USB2.0	OK
	DocuPrint M205 b	USB	OK
	DocuPrint M205 f	USB	OK
	DocuPrint M205 fw	USB	OK
	FP 410		
	Jet Wind 500C		
Phaser 3310		OK	
PP 10			
Printer Manufacture	Printer Model	Type of Printer	PS-2101 PUN-2001
Konica Minolta	Di 152	PCL-5	
	Di 200/Di 250/Di 251	PCL-5	
	magicolor 2450	USB (PCL-5)	OK
	magicolor 5450	USB/Parallel (PCL-5)	OK
	magicolor 7300		OK
	Magicolor 7300	IEEE1284/USB1.1	OK
	PagePro 1350W		OK
	PagePro 9100	IEEE1284/USB1.1	OK
	CLP-315		OK
	CLP-500	(SPL)	OK
	CLP-510		OK
	CLP-620ND		OK

Samsung	CLX2160	USB	OK
	ML-1510/1710	(SPL)	OK
	ML-1520		OK
	ML-1660		OK
	ML-1710		OK
	ML-1750	IEEE1284/USB(PCL6)	OK
	ML-1915	USB	OK
	ML-2010	SPL(USB)	OK
	ML-2250		OK
	ML-2550		OK
	ML-2580N		OK
	ML-3471ND		OK
	SCX-4016		OK
	SCX-4100/4106/4116/4216F	IEEE-1284/USB(SPL)	OK
	SRP 270		
Panasonic	KX-P1121		
	KX-P1123		
	KX-P1124		
	KX-P1624		
	KX-P6500		
TOSHIBA	E-161		OK(Parallel only)
	Estudio-25		
Printer Manufacture	Printer Model	Type of Printer	PS-2101
			PUN-2001
NEC	NEC P2200		
	NEC P3200		
	NEC P5300		
	NEC P8000		
IBM	IBM Infoprint 20	IEEE 1284 Parallel	
	Infoprint 1116		OK
	Infoprint 1312		OK
	Infoprint 1316		OK
	Infoprint 1332		OK
	Infoprint 1412		OK
Star	NX-2420		
Sharp	AR-255		
	AR-265FG		
	AR-M160(AR-NB2)	IEEE 1284, USB 2.0	
	AR-M205	IEEE 1284, USB 2.0	
	AR-M207		
	AR-M209	IEEE 1284, USB 2.0	
	AR-M235		
	AR-M236	IEEE 1284, USB 2.0	
	AR-M275		
	AR-M276	IEEE 1284, USB2.0	
	AR-M350		
	AR-M400		
	AR-M450		
RICOH	NF3570		
	MFC 4800		OK
	MFC 4800J		OK

Brother	MFC 6800		OK
	MFC 7220	GDI(USB/Parallel)	OK
	MFC 7420	GDI(USB/Parallel)	OK
	MFC 7820N		OK
	MFC 8840D		OK
	MFC 210C		OK
	MFC 240C		OK
	DCP-7030	USB2.0	OK
	HL1260		
	HL-2040	PCL6(USB,Parallel)	
	HL-2140		OK
	HL-2170W	USB	OK
	IntelliFax 2820		OK
其它	震旦AD-166数码复合机	USB(GDI)	
	震旦AD-216数码复合机	USB口使用1101U(GDI)	
	震旦AD-226数码复合机	USB(GDI)	
	DELL 1100	Parallel/USB(GDI)	
	中崎AB-80K (票据)		
	OKI 5530	Parallel	
	OKI Microline 391		
	OKI B4350		OK
	吉成5890热敏打印机	Parallel	
	MITAC	MP-6600C	
	BENQ CM3000		OK
Avision	MF 3200		OK
	MF 3230		OK
Citizen	GSX230		
DATAMAX	I-4208		
	I-4308		
DOCUJET	1610F		OK
	UA1610		OK
FUTEK	F8000		
	F84+		
	F86+		
Kyocera	FS-1010		OK
	FS-1010KX		OK
	FS-1020		OK
	FS-1920		OK
	FS-2000D		OK
	FS-820		OK
	FS-920		OK
	FS-6020		OK
	FS-6026		OK

Last Update: 2/21/2012