


810-106 AM/FM Severe Weather Band Radio

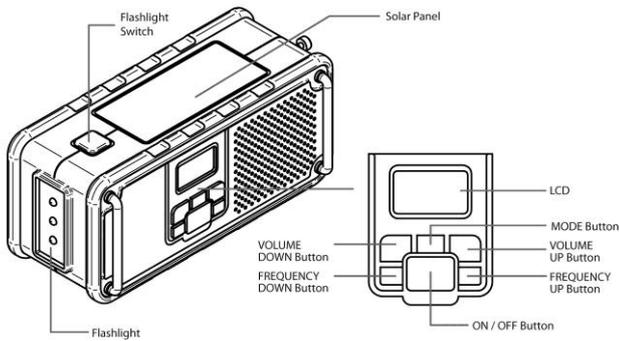


Keep aware of weather while camping, hiking, boating or just at home in a storm. This compact Weather Radio can receive 7 different weather band channels for alerts and AM/FM stations for news or entertainment. Operates as a LED flashlight if the power goes out.

FEATURES:

- Weather Band:** Receives 7 weather band channels.
- Radio:** AM and FM radio reception.
- IC Chip:** US made high quality.
- Motor:** Brushless AC motor
- Battery:** LIR123A Rechargeable 3.7V 600mAh
- Hand Crank:** Crank charge 1-minute equals 30-minutes of use.
- Solar Panel:** Power all day in sunlight.
- Mini USB Port:** Charge the radio with your computer
Charge the cell phone from the radio
- Light:** LED flashlight at the push of a button.
- Audio out:** Connect earphone (not included).
- Backlight:** Blue changes to Red for Weather Alert

OPERATION:

ON/OFF: Press and release the POWER button to turn the radio ON or OFF.

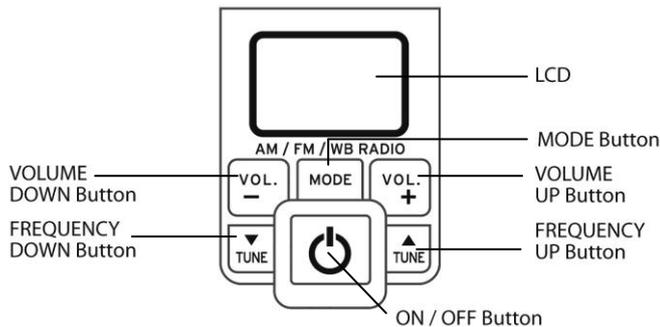

SET TIME: With the radio off, press and hold the MODE button for 5 seconds to enter the program menu.

- 12/24-HOUR:** 12h or 24h will flash. Press and release either TUNE button to change. Press and release the MODE button once to move to Hour.
- HOUR:** The Hour will flash. Use the left TUNE button to decrease the hour or the right TUNE button to increase the hour. When the Hour is set press and release the MODE button once to set the Minutes.
- MINUTES:** The Minutes will flash. Use the left TUNE button to decrease the minutes or the right TUNE button to increase the minutes. When the Minutes are set press and release the MODE button to return to confirm the settings.


NOTE: The clock will remain on when the power is off.

RADIO: Press and release the POWER button to turn the radio on.

- SELECT BAND:** Press and release the MODE button to select FM, AM or WB radio.
- TUNE:** With your radio band selected, press and release the left TUNE button to decrease the frequency and the right TUNE button to increase the frequency of the selected band.
- AUTO-SCAN:** Press and hold the left or the right TUNE button to auto-scan frequencies.
- VOLUME:** Use the -/VOL to decrease the volume and the +/VOL to increase the volume.

WEATHER BANDS: The weather alert radio can receive 7 weather band (WB) frequencies:

- Channel 1: 162.400MHz
- Channel 2: 162.425MHz
- Channel 3: 162.450MHz
- Channel 4: 162.475MHz
- Channel 5: 162.500MHz
- Channel 6: 162.525MHz
- Channel 7: 162.550MHz

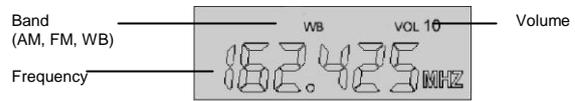


ALERTS: When WB is selected, the radio receives alarm signals automatically.

STANDBY: When in WB hold the MODE button for 3 seconds to enter Standby. When in Standby (WB Flashing) the radio receives alarm signal automatically and the backlight will flash. Press MODE button for 2 seconds to turn off the flashing backlight without influencing weather band radio reception.

NOTE: Volume level is reduced while listening to the Weather Bands. The volume will be adjusted to max level in weather band reception.

ANTENNA: Fully extend and rotate the telescoping Antenna and place near a window to receive a steady strong signal and avoid a broken or noisy reception.

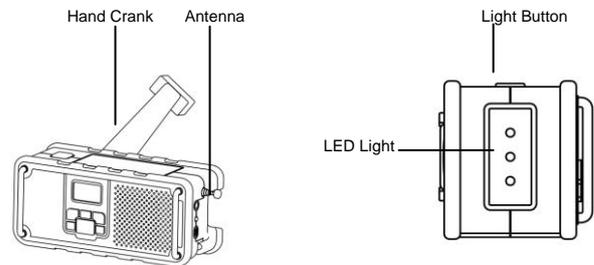

LED LIGHT:

ON: Press and release the LIGHT button to turn on the white LED light.
OFF: Press and release the LIGHT button again to turn the light off.

NOTE: There is a light shadow above and below the light beam, which is normal for a three LED arrangement.


CHARGING: When the low battery symbol displays, charge the radio by solar/hand crank/USB.

- Turn off the radio before charging.
- The red LED charging indicator will illuminate to indicate the unit is being charged.
- Green light will indicate it is charged. (the light will not stay on when not charging).

LOW BATTERY: A battery symbol will display in the top center of the display when the battery is low and the radio will not function.

SOLAR: Place the unit outside with the solar panel in direct sun. In bright sunlight the unit will be fully charged in 10-12 hours.

HAND CRANK: Extend the Hand Crank on the back of the radio. Rotate steadily clockwise at a rate of 130cycles/minute. 1-minute of cranking will provide 30-minutes of power. Red charge light will indicate cranking speed is appropriate.

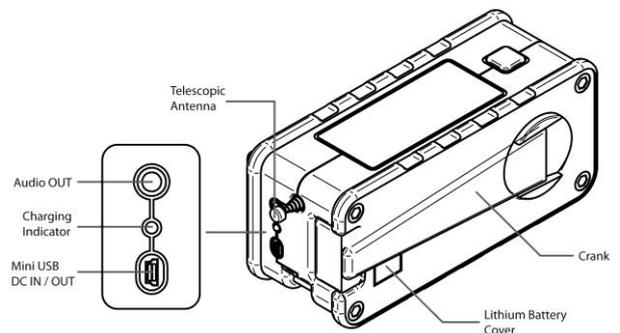


USB: This unit is equipped with a mini USB input/output jack for charging the radio itself and to charge external other USB devices. To charge the radio connect the USB charging cord into the mini USB port and plug into a USB power source.


NOTE: The voltage should be 5.0V maximum and current should be 500MA maximum when charging by USB.

CHARGE CELL PHONE: Connect the cell phone to the mini USB jack with the appropriate adapter kit (not included) and use the hand crank to charge your cell phone.

NOTE: Charge time will vary based on the depletion of the phone battery. It is best to have the radio off when charging.

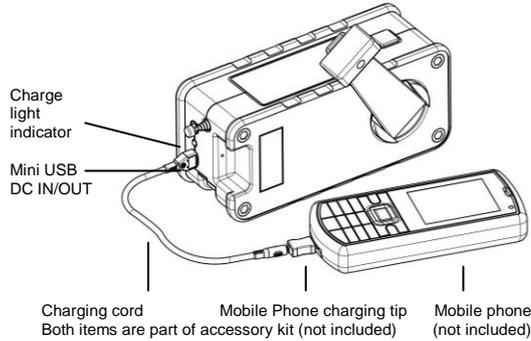

RESET: If the display is blank, charge the battery then press the RESET button once. The RESET button is a small pinhole near the antenna, where the crank handle rests.

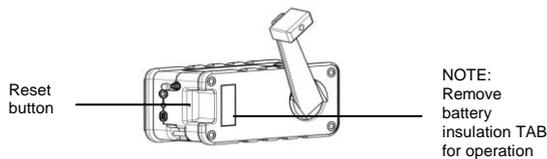

SPECIFICATIONS:

Dimensions: 5.5 in L x 2.5 in H x 2.375 in D
(13.97 cm L x 6.35 cm H x 6.032 cm D)

Bands:

Weather Band (7 Channels):	-6dB	162.4000 - 162.5500MHz
AM	82dB	540-1700KHz
FM	10dB	88-108 MHz

Rechargeable Battery: LIR123/600MAH
Solar charging: 5.5v/40MA

Operating Temperature: 32F-130F (0C-54C)
Storage Temperature: 14F-130F (-10C-54C)

MAINTENANCE AND CARE

- Extreme temperatures, vibration, and shock should be avoided to prevent damage to the units.
- Clean with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the radio.
- Do not submerge the weather radio in water.
- Opening the casings invalidates the warranty. Do not try to repair the unit.
- Open and close antenna fully. Never force the antenna.
- Do not leave in vehicle in extreme temperatures.
- Radio is not waterproof.
- Do not crank the unit when there's no battery inside or insulation tap being inserted.
- Do not listen to radio while the unit is plugged with USB power. Reception effect will be heavily influenced this way. Use low frequency adaptor to minimize the influence if an adaptor has to be used.


ACCESSORY PACK (not included):

Please check with your local retailer to purchase the accessory pack for the Severe Weather Band Radio.

The accessory pack includes:

- Earphone
- USB Radio charging cord
- Cell Phone charging cord
- Cell Phone charging Adaptors

To purchase accessory items, follow the link at:
www.lacrossecclock.com/810-106

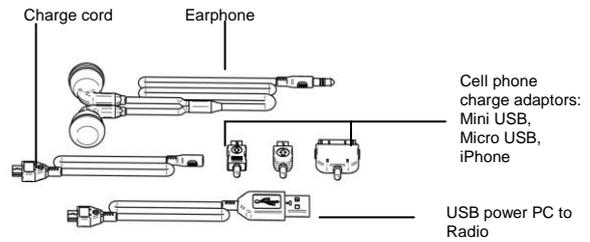

Please help in the preservation of the environment and return used batteries to an authorized depot.



WARRANTY:

1-Year Limited Warranty

La Crosse McCormick, LLC warrants that if the accompanying product proves to be defective to the original purchaser in material or workmanship within 1-year from the original retail purchase, La Crosse McCormick, LLC will, at La Crosse McCormick, LLC's option, either repair or replace same without charge (but no cash refund will be made).

CONDITIONS:

1. You must deliver, mail or ship the product, together with the original bill of sale and this limited warranty statement as proof of warranty coverage to:
La Crosse McCormick
Warranty Department
2817 Losey Blvd S
La Crosse WI 54601
2. This warranty is void if any defects are caused by abuse, misuse, negligence or unauthorized repairs.
3. All liability for incidental or consequential damages is specifically excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Limitation of Liability and Remedies

La Crosse McCormick, LLC shall have no liability for any damages due to loss of profits, loss of use or anticipated benefits, or other incidental, consequential, special or punitive damages arising from the use of, or the inability to use, this product, whether arising out of contract, negligence, tort or under any warranty, even if La Crosse McCormick, LLC has been advised of the possibility of such damages. La Crosse McCormick, LLC's liability for damages in no event shall exceed the amount paid for this product.

SERVICE PROCEDURE:

Please follow the procedure below to ensure the radio is properly serviced and returned. Failing to follow the procedures may result in delays or loss of product.

- 1. PROOF-OF-PURCHASE:** Include some form of proof-of-purchase.
- 2. RADIO:** Enclose the 810-106 AM/FM Severe Weather Band Radio.
- 3. PROPER PACKING:** Pack the radio securely to prevent damage during transit. Use original packing material if possible.
- 4. PROBLEM DESCRIPTION:** Enclose a detailed written description of the problem.
- 5. CONTACT INFORMATION:** Enclose a typed or clearly printed name, address, and phone number where you can be contacted during the day M-F.
- 6. PREPAID TRACEABLE CARRIER:** Ship the package with the contents listed above, prepaid and insured by way of traceable carrier (to avoid loss in transit). The Manufacturer is not responsible for units not received if the package has not been properly insured.

Mail to:

La Crosse McCormick
Warranty Department
2817 Losey Blvd S
La Crosse WI 54601

Support: www.lacrossecclock.com/810-106



- 7. REPAIR/EXCHANGE:** The radio will be repaired or exchanged upon its receipt if it is under warranty.
- 8. SERVICE TIMELINE:** Please allow approximately 2-4 weeks for the radio to be serviced under warranty.



Contact Support: 1-608-782-1610

Product Registration: www.lacrossecclock.com/register