
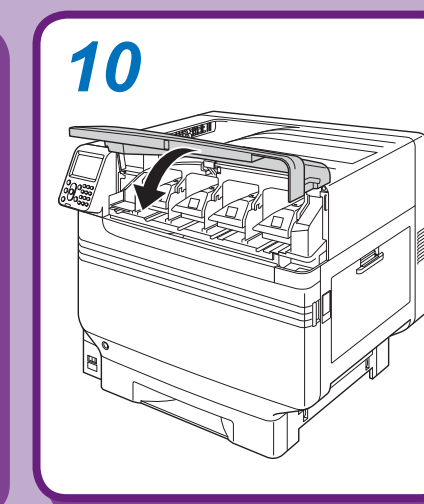
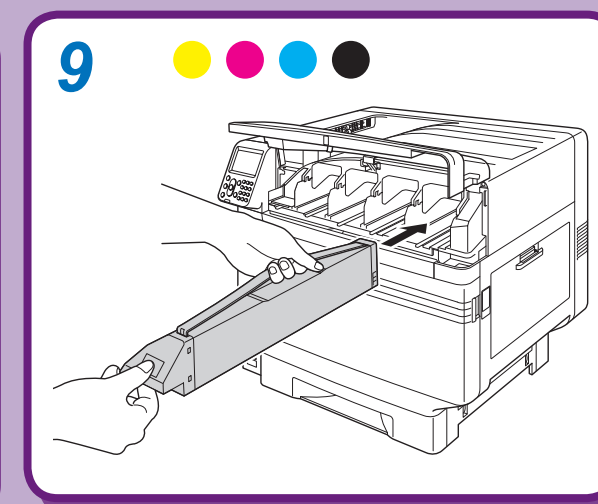
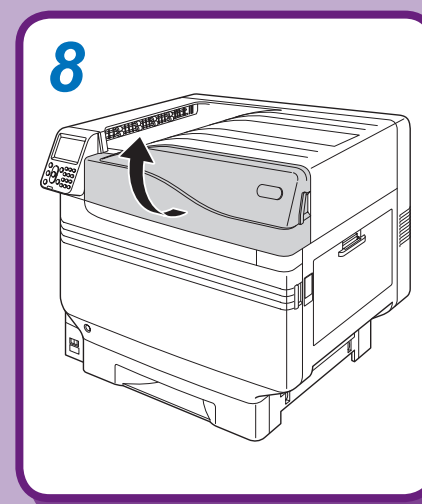
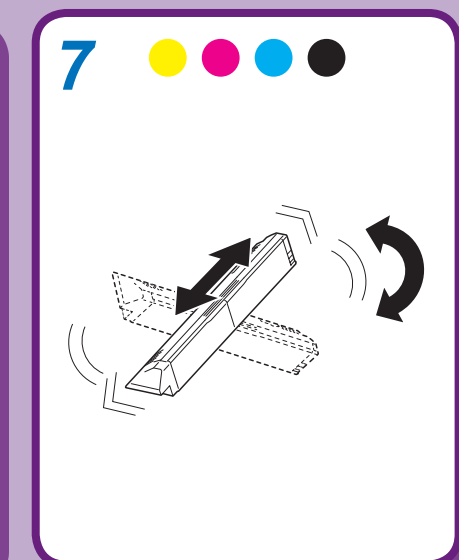
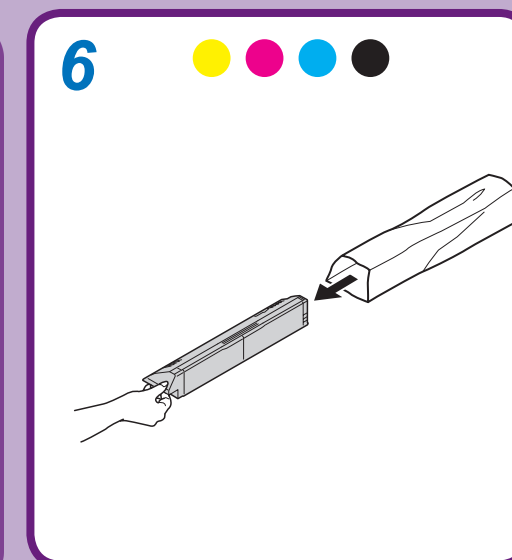
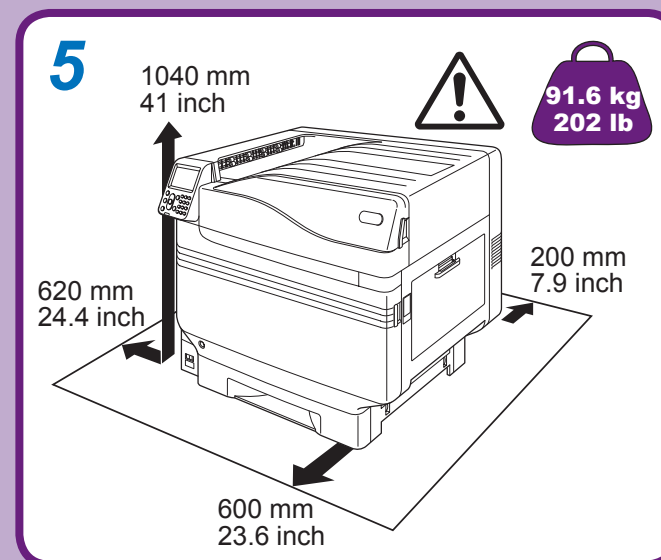
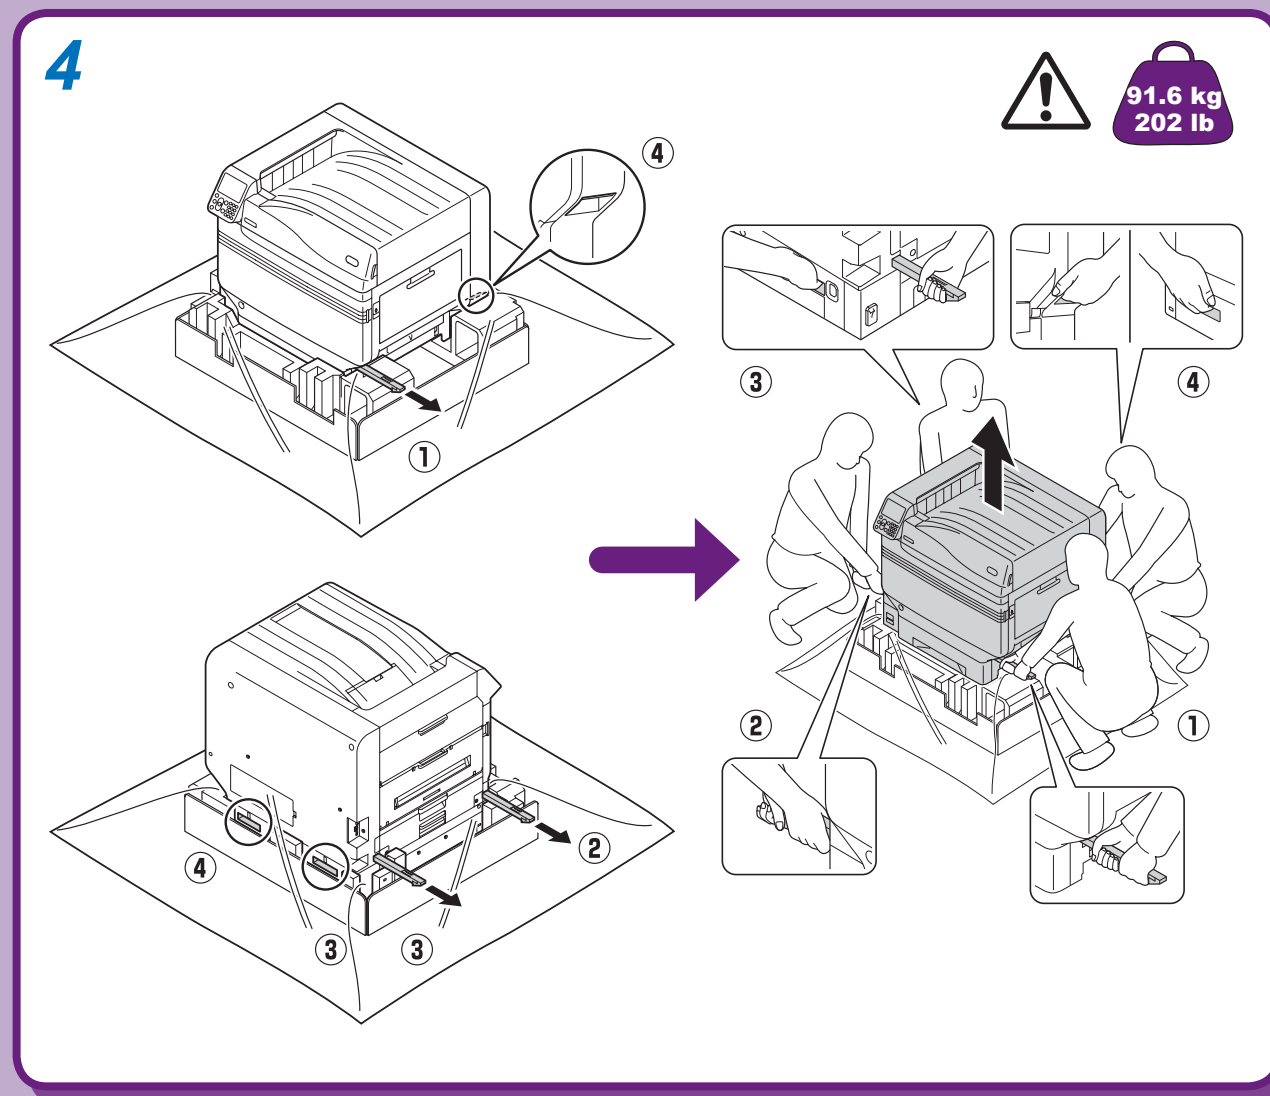
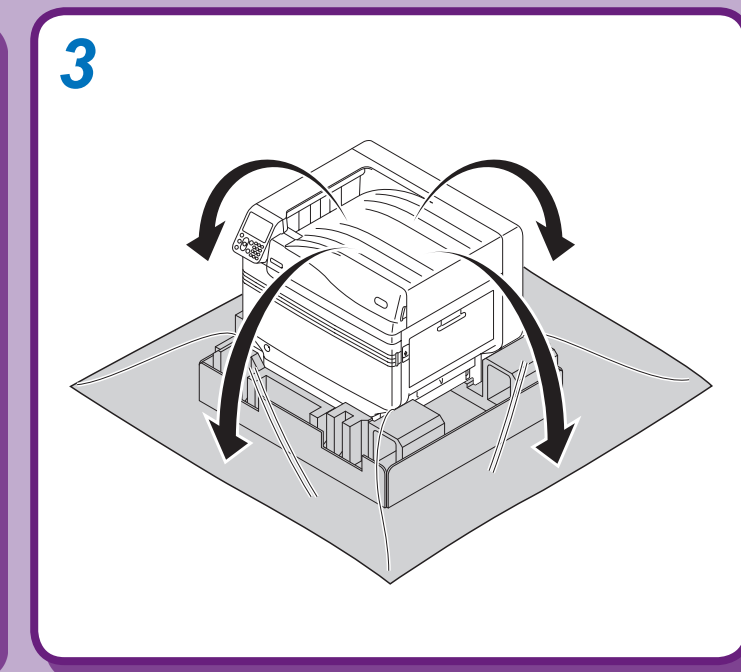
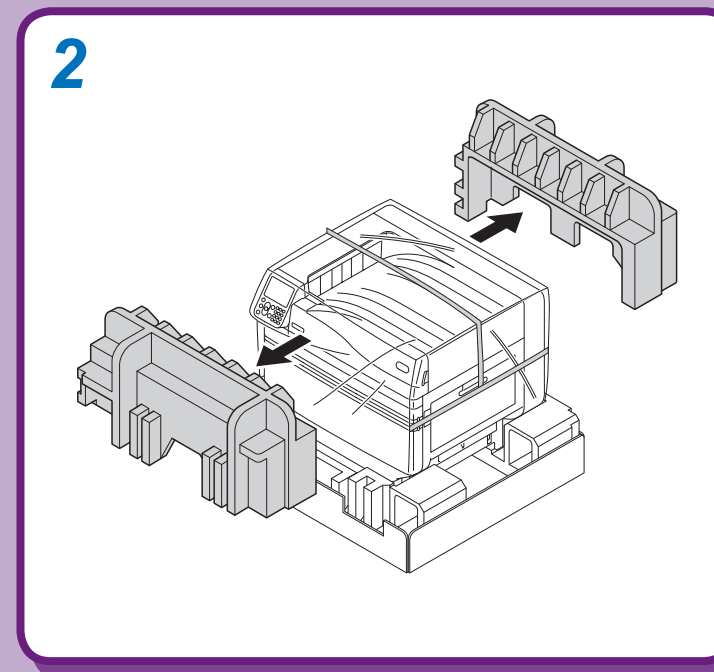
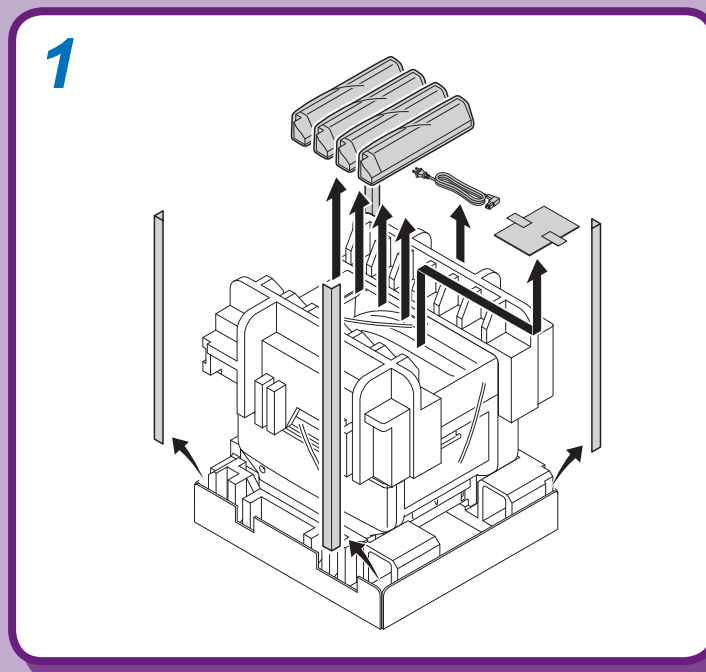



C911dn/C931dn/ES9411dn/ES9431dn Set-up Guide

OKI



45583101EE Rev2

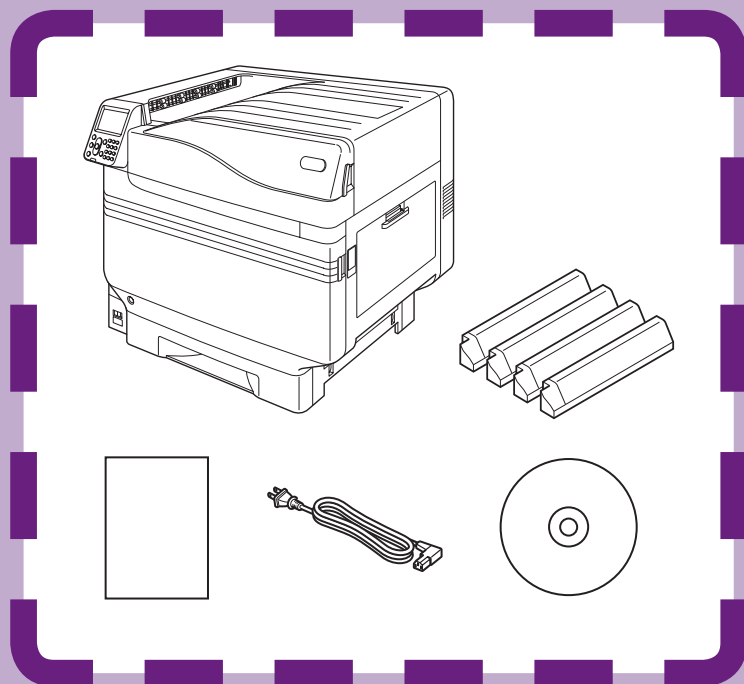


11

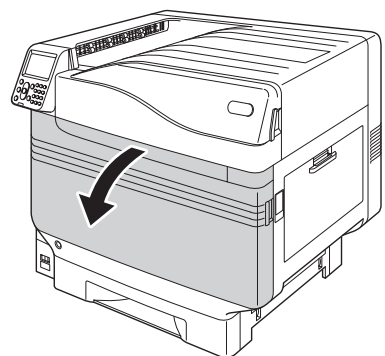


12

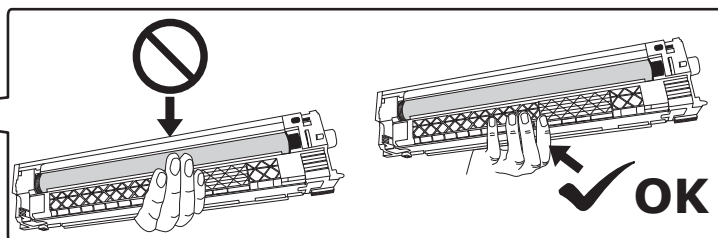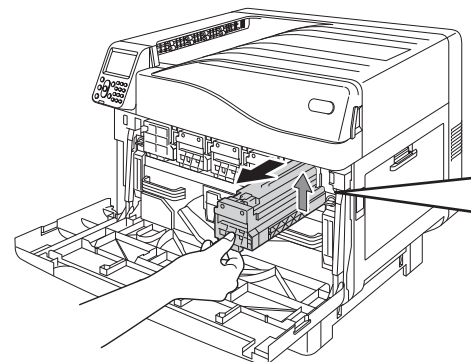


13

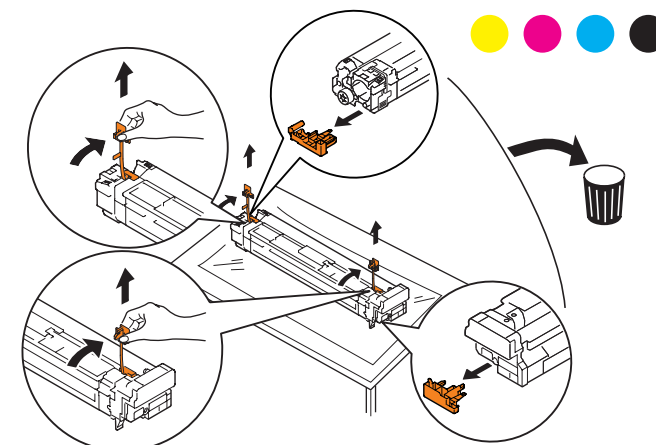


14

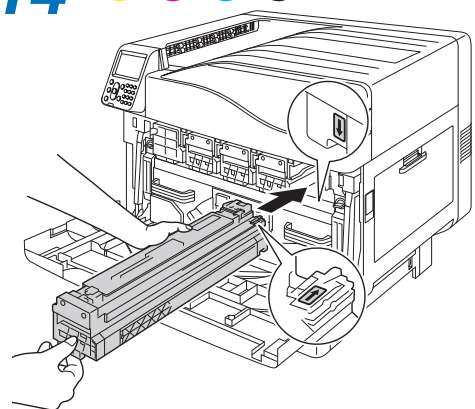


15

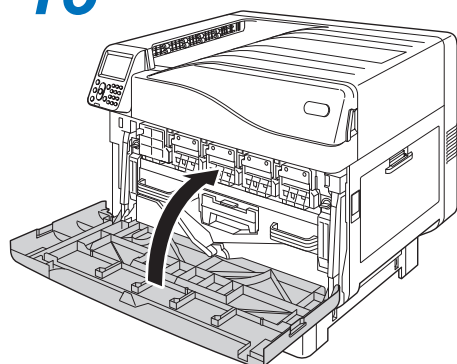


16

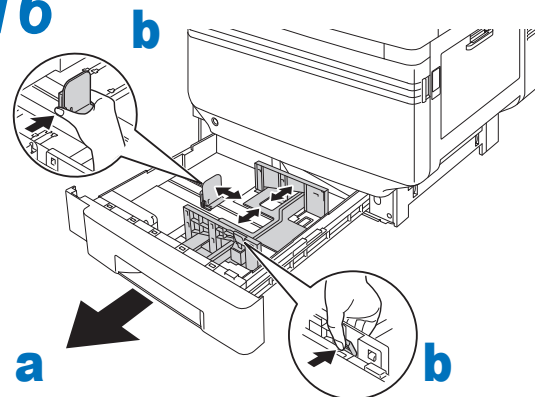

17

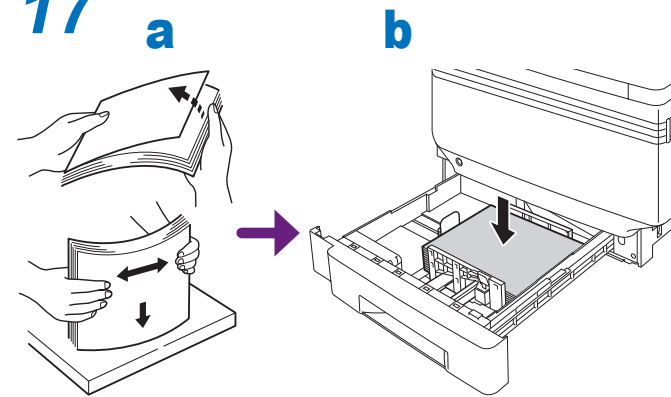

18

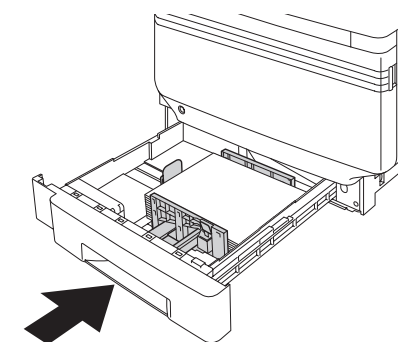

19

