

PLMP3C1

FM Transmitter w/ 1.4" TFT Screen,
USB/SD/MMC/MP3/iPod Inputs

Instruction Manual



KEY FEATURES:

- LCD Display Screen
- Built in Wireless FM Transmitter 206 Channel Freq Capable (87.5~108Mhz)
- USB/SD Card Compatible
- 3.5 Aux Input Adaptor for IPOD, normal Mp3/4....
- Fully Adjustable Arm for Multi Angle Viewing
- Wireless Full Function Remote Control
- Cigarette Lighter DC 12 Volt Compatible

USING THE FM TRANSMITTER:

Insert this FM transmitter into your vehicle's cigarette lighter or power port

Tune to your radio to a desired FM frequency, then match that same frequency on to the player by using the buttons on the unit or on the remote control.

Plug USB disk or SD card into this product, It will play and transmit the Mp3 files automatic. (You have to copy the MP3 files into the USB disk or SD card in advance.)

This product support other devices: normal mp3/4, CD... Using the 2.5mm to 3.5mm audio cable provided. Plug one jack into this transmitter, The other end into normal Mp3/4,CD... It will play and transmit the songs from the MP3/4.CD. And in this state. All functions will now need to be controlled on the device, not this transmitter or its Remote Control. Enjoy!

How to adjust the screen brightness:

Long press "CH" button for about 4 seconds.

Short press "▶▶" button continuously to turn up the screen brightness;

Short press "◀◀" button continuously to turn down the screen brightness.

QUICK GUIDE:

Operation Guide	FM transmitter	Remote Controller
1.How to play and stop the music	Press "PLAY" Button : Play the music Second Press "PLAY" Button: Stop	Press PLAY/PAUSE Button
2.How to adjust the Volume	Long Press "▶▶" button :Increase the Volume ; Long press "◀◀" Button :Decrease the Volume	Press "VOL+"" Increase the Volume ; Press "VOL-"" reduce the Volume ;
3.How to change the frequency	Press "CH" button first, then press "▶▶": increase the frequency Press "◀◀": decrease the frequency	Press "CH+" button: Increase 0.1MHZ Press "CH-" button: reduce 0.1MHZ Or press the number of the frequency what you desired,press"CH+"again to confirm
4.How to choose music	Short Press "▶▶"Button: Play the next song; Short Press "◀◀" Button: Play the previous song;	Press "NEXT"Button: Play the next song; Press "PREV" Button: Play the previous song; Or press the serial number of the song directly
5.How to set EQ	Nonsupport	Press "EQ" button to switch your favorite EQ
6.How to change loop mode	Long press "play/pause" button, four loop modes optional: folder, single, random, all	Press "🔄"button
7.How to switch folder	Nonsupport	Press "folder+" or "folder_"