

This document is a text description of the control panel layout for the product listed below. The complete operating instructions are available online in PDF format from the Customer Support section of www.panasonic.com.

Multi-Function Printer

Model Number KX-MB2000

Finding the Controls

The control panel of the unit is divided into three parts: left, middle and right.

Left part:

The left most buttons are two rectangular buttons: From top to bottom, they are the SCAN and COPY buttons.

Middle part:

In the top middle of the panel is the display. To the right of the display is the round MENU button. Immediately below the MENU button is a large round Navigator key. The UP and DOWN TRIANGLES on the vertical row of the Navigator key are also the VOLUME control. The RIGHT and LEFT TRIANGLES on are located the horizontal row of the Navigator key. The SET button located in the center of the Navigator key. To the left of the Navigator key are five buttons. From left to right, they are the COPY SIZE, CONTRAST, RESOLUTION, ZOOM and PAGE LAYOUT.

Right part:

This part contains the telephone keypad laid out in the conventional arrangement with a raised dot on the 5 button. To the right of the keypad are two buttons. The top one is the STOP button, and the bottom one is the START button, a large round key.