15" PT1510MX AND 17" PT1710MX QUICK START GUIDE

PT1510MX/PT1710MX

Thank you for choosing Planar's 15" PT1510MX or 17" PT1710MX resistive touchscreen monitor.

Customer Service:

To view online documentation and frequently asked guestions, or to send an email to our technical support staff, please visit: http://www.planar.com/support or call 1-866-PLANAR1 (1-866-752-6271) in the United States or +1 503-748-5799 outside the United States.

To receive advanced notification of product updates, please register your monitor at www.planar.com/support.

Planar has nearly 25 years experience delivering specialty display solutions for the most demanding applications. Each PT touch LCD monitor comes standard with our 3-Year Customer First™ Warrantv featuring FREE 2-Day Advance Replacement including prepaid shipping both ways.

Monitor Set-up

- 1. If it is necessary, clean the front surface of the display by using clean, compressed air or by using only a clean, dry, soft cloth.
- 2. Connect the video and power cables.
- 3. Read the Touch Set-up section prior to powering up the computer.

Touchscreen Set-up -

Please note: The PT1510MX and PT1710MX are available with both RS-232 and USB connections. If you're using the RS-232 connection follow the instructions below:

- 1. Be sure that the RS-232 cable is disconnected from the computer.
- 2. Power on the computer
- 3. Load the Touch Screen Driver CD
- 4. Follow the step-by-step instructions as found in the Touch Screen Driver Installation Manual located on the CD.
- 5. Reconnect the RS-232 cable between the computer and monitor prior to use.

If you're using the USB connection follow the instructions below:

- 1. Be sure that the USB cable is not connected to the PC.
- 2. Load the CD-Rom.
- 3. Follow the step-by-step instructions as found in the Touch Screen Driver Installation Manual located on the CD.
- 4. Reconnect the USB cable between the computer and monitor prior to use.
- 5. If the touch screen isn't active, simply reboot your system.

PLEASE NOTE! Don't plug in both the RS-232 and USB cables! Doing so may cause a driver conflict, making your touch screen inoperable.

Set-up Diagram

- Power Cord
- 2. VGA Cable
- 3. Audio-In Cable
- 4. RS-232 Cable
- 5. USB Cable



PT1510MX



PT1710MX

Warning! Don't plug in both the RS-232 and USB cables! This will cause your touch screen not to work due to driver conflict.

Package Overview

Contents

User's Guide













Importand Recycle Instruction -LCD Lamp(s) inside this



product contain mercury. This product may contain other electronic waste that can be hazardous if not disposed of properly. Recycle or dispose in accordance with local, state, or federal Laws. For more information. contact the Electronic Industries Alliance at WWW.EIAE.ORG. For lamp specific disposal information check WWW.LAMPRECYCLE.ORG.

The test results show that this device meets the FCC rules. Refer to the product operation manual for FCC classification found at: http://www.planar. com/support. Those limits are set to protect residential areas from the devices with harmful emission. This device will produce, use and radiate radio fre guency energy. In addition, failure to follow the user's manual to install or use this device might produce harmful interference with radio communication. Notwithstanding the foregoing, it does not guarantee that this type of harmful interference does not occur in some special installations. The interference caused by this device to the reception of radio or television signals may be verified by turning it on and off. Any changes or modifications to this TFT LCD would void the user's authority to operate this device.

> 020-0488-00B 36.59904G004 Ver. A