

Rosewill[®]



ELECTRONIC KITCHEN SCALE RHKS-15001

Operation Manual



For the use and maintenance of your electronic kitchen scale, please read these instructions thoroughly before use.

• Features

Equipped with a high precision "stain-gauge" sensor and high capability CPU to ensure precise weighing accuracy.

- Hang to stow
- Tare function
- Stain-Gauge sensor
- LCD display
- Backlight display
- Auto power-off
- Low voltage indicator
- Battery-powered: 3 x AAA

• Specifications

- 9 × 6.7 × 0.73 inches
- **Battery:** 3 × AAA Batteries
- Stainless steel surface
- **Capacity:** 2 g-5000 g
- **Units:** kg/g/lb
- **Environment temp:** 5°C-60°C

• Instructions

1. Setting Up

- ① Remove the electronic scale from the packaging.
- ② Open the battery cover, insert three (3) AAA batteries into the battery case, and close it.
- ③ Set the scale on a flat, steady surface.

2. Weighing

- ① Press the **[ON/OFF/TARE]** button to turn the scale on.
The display will show zero "0" after 2 seconds.
- ② Place the food container that will be holding your food onto the scale.
The LCD will show the weight of container.
- ③ Press the **[TARE]** button, and the LCD will reset and display zero (0).
- ④ Remove the container, add food into the container, and return the container onto the scale.
- ⑤ Read the weight of the food. The TARE function subtracted the weight of the container and now shows the weight of only the food.

3. Shutting Off

- ① Press the **[ON/OFF]** button to turn off the scale.

• Error Display

| Screen Message | Meaning |
|----------------|------------------------------------|
| LO | Low batteries; change immediately |
| EEEE | Overloaded scales; Too much weight |

• Battery / Effective Function

To ensure the scale functions properly, make sure you

- Use 3 × AAA batteries
- Have fully charged batteries
- Insert the batteries with the + and – position correctly

• Advice for Proper Results, Care, and Maintenance

- Use the scale on a clean and flat surface.
- Do not weigh heavy items. The max. weight is 5000 g (before tare).
- This scale is for small goods and personal use. Do not use for legal trade.
- Do not put the scale under water or use in hot or cold conditions.
- Clean with a soft cloth. Do not use any chemical detergents or allow water to get inside.
- This product is a high-precision electronic weighing apparatus. Please do not press or drop the scale, otherwise damage may easily occur.
- If the result appears incorrect, please check the battery installation or replace the batteries.
- If necessary, contact the Rosewill Customer Support M-F, 8-5 PST (800) 575-9885 or email at techsupport@rosewill.com