



# OPERATION INSTRUCTIONS

**(VP3320)**

**Rev. A**

## ***FCC Certifications***

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

## **CAUTION**

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electronic shock.

## **IMPORTANT WARRANTY INFORMATION**

- To reduce the risk of fire or shock hazard, do not expose this equipment to rain ,any liquid or moisture.
- Vosonic shall have no obligation to repair ,replace or refund until the customer returns the defective product to Vosonic.
- Any replacement product may be either new or like –new, provided that it has functionality at least equal to that of the product being replaced.
- The repairs and replacement service will not apply to PRODUCT units that were misused, repaired without authorization or by other reasons beyond the range of intended use.
- Vosonic is not responsible for any data stored on returned products, please backup any data prior to shipping the unit.
- The limited warranty for accessories (included battery) is only valid for **6** months from the date of purchasing..
- All OUT OF WARRANTY repairs maybe subject to a normal repair fee. Please contact your dealer or Vosonic for current charges.

## **Package Checklist**

- Main unit
- Earphone
- USB cable
- Carry Bag
- English user's guide
- Setup CD-ROM
- Power Adapter (100-240V auto switched )

**Dear Customer,**

**Thank you for purchasing the Xs-Drive.**

**Before using the Xs-Drive, you will have to**

**1 Charge the battery**

**2 Install Xs-Drive Windows USB driver  
( if you are a Windows 98 user)**

**3 Make sure the HDD has already partition or format as  
FAT system.(Refer to Page 10. 3-4 Format Hard Disk  
under Windows 2000/ XP)**

**4 Keep Xs-Drive plugged into the AC adapter/charge while  
connected to your computer.**

**5. Check [www.vosonic.com](http://www.vosonic.com) to download the update  
firmware that we offer new features .**

**Wishing you all the best**

**The Vosonic Team**


# Index

1. Specifications .....	5
2. Overview of Panels & keys.....	6
3. Using the X's-drive Pro .....	8
3-1 Starting up .....	8
-Charge Batteries .....	8
- Power On /Off .....	8
3-2 Driver Installation .....	8
3-3 Downloading or Editing the files on PC .....	9
3-4 Format Hard Disk under Windows 2000/ XP.....	10
3-5 Language Setting.....	11.
3-6 Disk Selection.....	11
3-7 Auto Power off Function.....	11
4 Using a memory card to transfer photos to Xs-Drive..	11
5. File Manager.....	13
5-1 Copy and Paste a file / folder.....	13
5-2 Deleting a file / folder.....	15
6. Play Music File.....	16
7. Listen FM Radio.....	19
8. Recording.....	20
9. Battery Recharge.....	23
10. If any erroneous display /operating occurs.....	23
11. Care for the Hard Drive and the unit.....	24
12. Troubleshooting.....	26

## 1. Specifications:



Audio	File Type	- MP3 (MPEG1 Audio Layer I/II/III & 2.5), Bit rate : 32kbps ~ 320 kbps CBR. - WMA ,Bit rate :32Kbps ~ 320Kbps, CBR - Audio CD
	Equalizer	Jazz / POP /Normal /Classic /Rock /user-definable
	Signal-to-Noise Ratio	90db
	ID3	With ID3 , can support multi-language
	FM Recording Voice Recording	Voice recording from line-in or internal microphone Encoding : MP3 , 112K ~ 192kbps
Photo Storage	Support Memory Card Interfaces	Compact Flash™ Card type I/type II (CF) Memory Stick® (MS) Secure Digital Card (SD) MultiMedia Card (MMC) IBM® MicroDrive Mini-SD (with adapter) RS-MMC (with adapter) MS Duo (with adapter), MS Pro Duo (with adapter).
FM Tuner	Frequency Range	87.5 ~ 108KHZ
General	Hard Disk Size	2.5" 9mm unlimited capacity
	Display	dot matrix LCD with LED backlight
	Interface	USB 2.0 (compatible USB 1.1)
	AC Adaptor	5V/2.5A DC IN
	Battery	Li-ion 3.7V 1800 mAh battery Model : FUJIFILM NP-120 ( optional ) Up to 11 hours non-stop music playback Li-ion 3.7V 1100 mAh battery Model : FUJIFILM NP-60 ( standard ) Up to 7 hours non-stop music playback
	Dimensions (Lx W x H)	120 x 80 x 28 mm
	Weight	VP3320 : 274gr ( Included 2.5" HDD & battery pack )
System OS	<ul style="list-style-type: none"> <li>• Windows98/98SE with driver</li> <li>• Windows XP/ Win 2000 SP3 above without driver</li> <li>• Linux Kernel version 2.4 or above without driver</li> <li>• Mac OS 10.01 above without driver</li> </ul>	

## 2. Overview of Panels & Keys :

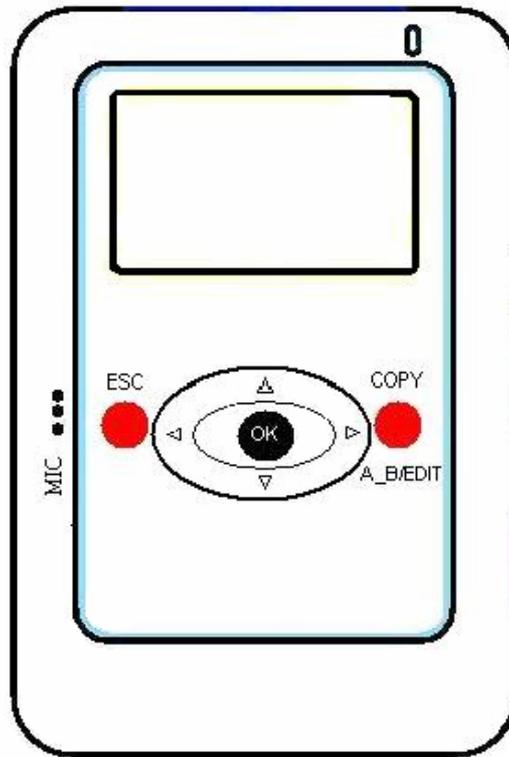

keypad	Function Description
OK	Enter : takes you to execute the current selection
	Pause: This function will effect under Music Playback Mode.
MENU	Play modes selection
◀	Direction button to move cursor on the screen
	Fast Backward :This function will effect under Music Playback Mode.
▶	Direction button to move cursor on the screen
	Fast Forward :This function will effect under Music Playback Mode.
▲	Direction button to move cursor on the screen
	Allows you to increase the volume
▼	Direction button to move cursor on the screen
	Allows you to decrease the volume
ESC	<ul style="list-style-type: none"> <li>● Takes you go back to previous mode</li> <li>● Take you to select the disk</li> </ul>
COPY	Allows you backup the files from memory cards automatically.

A_B	Allows you set a starting point and then press the "AB" button again to set the end point. The song will be played cyclically ☞ This function will effect under Music Playback Mode.
EDIT	Allows you paste , delete , cut the files ☞ This function will effect when you highlight any particular folders or files.

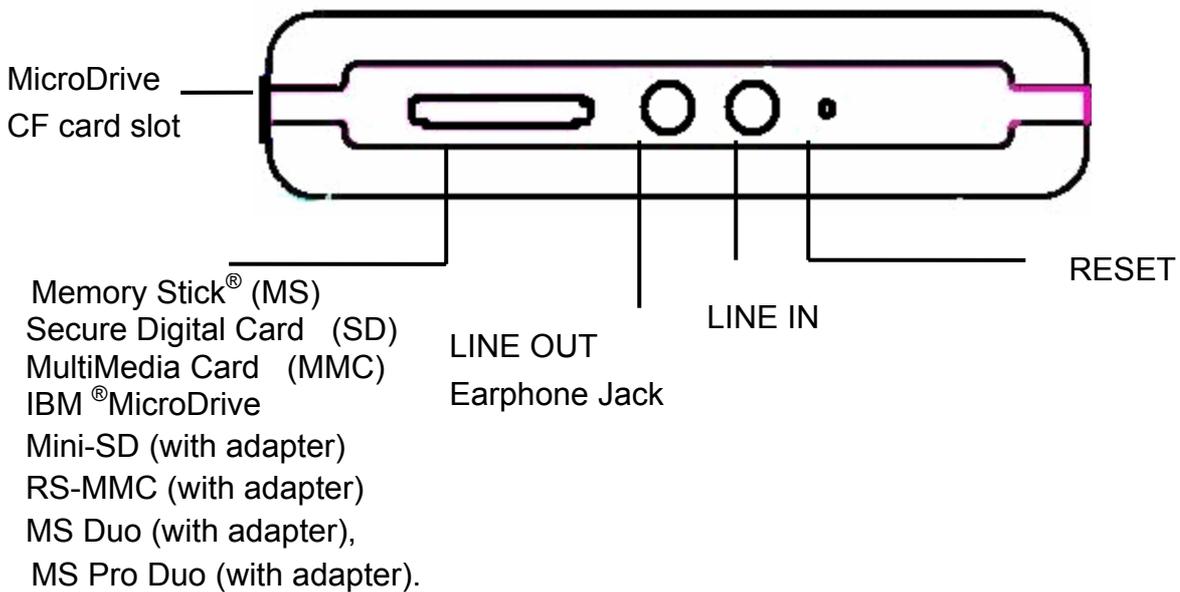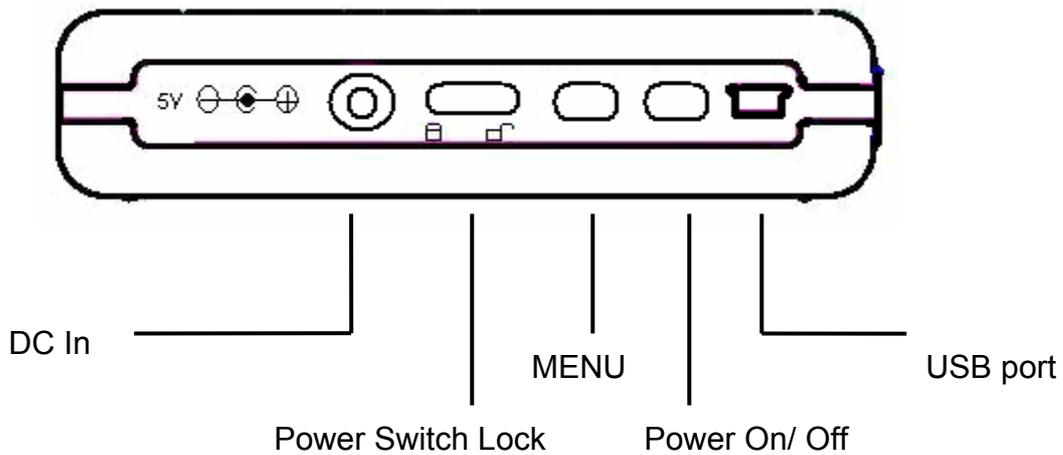

### 3. Using the X's-drive

#### 3-1 Starting up

##### 1) Charge the batteries

- Before using for the first time, charge the batteries for a full four hours.

##### 2) Power On /Off

- Press the power button. The green light will go on and the operating system will boot up.
- To shut off the unit, press the power button.

#### 3-2 Driver installation

Windows Me and Windows XP HomeEdition and Professional Edition  
,Win2000 Professional SP 3 above

Windows Me and Windows XP HomeEdition and Professional Edition, Win2000 Professional SP 3 above users do not need to install any drivers .Windows will automatically detect your device as following figure.



#### Windows 98/98 SE

1	Insert your driver Installation into your CD-ROM drive and double click on "My computer".
2	Browse your CD-ROM drive and run " <b>setup.exe</b> " to begin driver installation. Press " <b>Next</b> " and follow the installation instructions.
3	Restart your computer after installation is complete
4	<p>Under Windows 98 , the removable disk drives look like drives G , I and J in the following figure.</p> <p>A screenshot of the Windows 'My Computer' window for Windows 98. It displays three drive icons with their respective labels: 'CompactFlash I/I (G:)', 'MMC/SD (I:)', and 'Fixed Disk (J:)'. Each icon is accompanied by a small graphic representing the drive type.</p>

Macintosh MacOS 9.x

1	Insert your driver Installation into your CD-ROM drive and double click on "My computer" Browse your CD-ROM drive to " <b>MacOS Installer</b> ".
2	Follow the installation instructions to being installing drives.
3	Restart your computer after installation is complete.

**3-3 Downloading or Editing the files on PC**

- Power on the X's- Drive
- Connect the X's-Drive and PC with the provided USB cable
- Double Click the " My computer" icon , the operating system will display 2 "Removeable Disks " icons and 1 fixed disk icon identifying the media types correspondingly.
- You can then read ,write,copy ,delete and remove data on the PC.
- All the files download from PC will be stored under the path named " FILE " on Xs-Drive.
- When Xs-Drive begins connecting to the computer, the "**USB attached** " message will appear in the bottom of the screen. During file transfer in the PC mode

**DO NOT :**

1. Plug out the USB cable
2. Remove memory card(s) from the card slot, otherwise, there may be a chance of lost or corrupt data.

**Note:** (1) Keep it plugged into the AC adapter/charge while connected to your computer.


- (2) To safely disconnect the Xs-Drive from computer, click on the system tray remove icon and wait until you get a message saying that you can safely unplug the device before disconnecting the USB cable.

### 3-4 Format Hard Disk under Win 2K/ Win XP

Due to Win 2K/ Win XP can not support Format Disk for 30G above Hard Drive. Please find the Application Program on the included CD-ROM.

This program is a "FDisk AP" for Format Application Program. It has a simple interface which you can use it to format the Hard Disk.

- Use the power adapter to avoid the device shuts off due to low power.
- Connect the device and PC with the provided USB cable.
- Find the Application Program on the included CD-ROM.
- Follow then instructions to being formatting drives

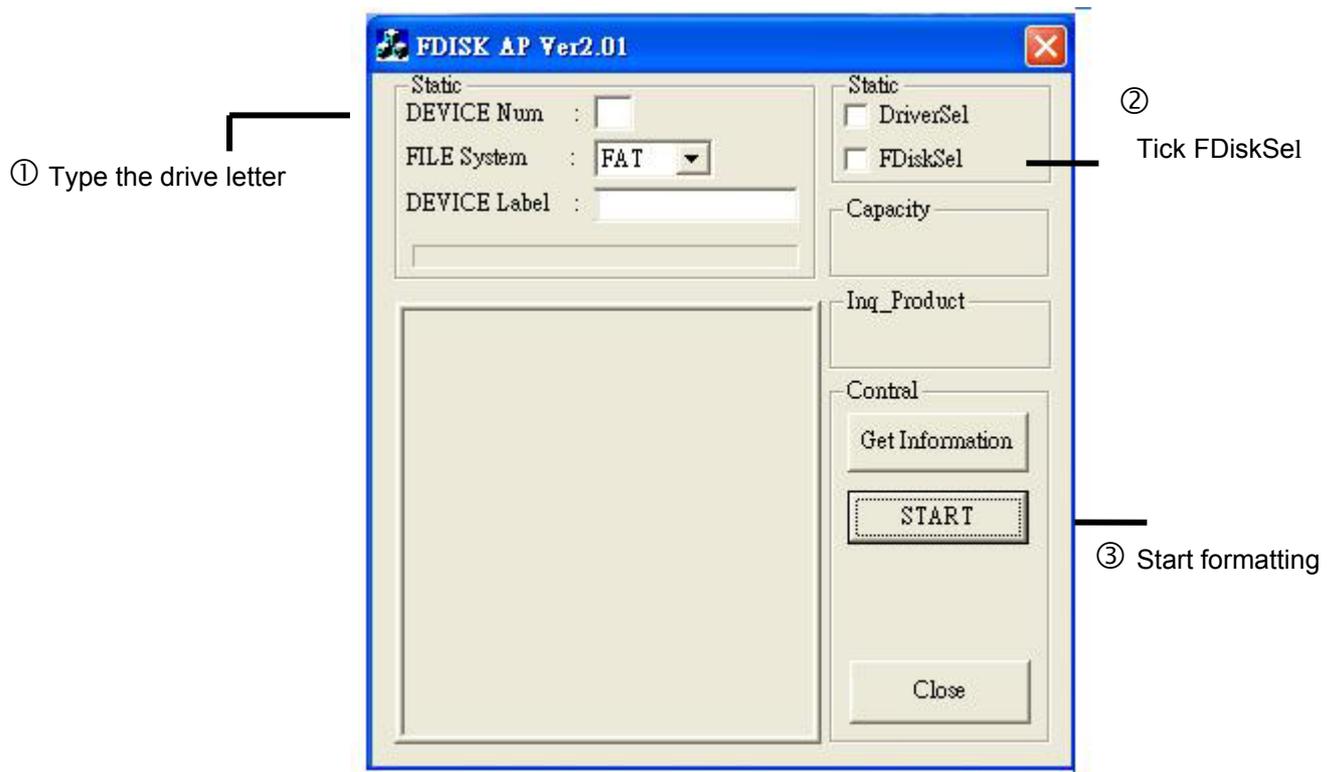

**Note:** If you are using the new Hard Disk, please remember to initialize the HDD first.

If you are not know how to initialize the HDD, please link to <http://support.microsoft.com> to learn more about your partitioning and formatting options or refer to the PDF file [ How to partition the HDD with Microsoft Windows XP ] on the included CD-ROM.

Attention: If the hard disk already contain data, please backup the data first , because when you partition and format a hard disk, all the data on that partition is permanently deleted.

### 3-5 Language Setting:

1. Press [ MENU ] button to open function menu .



2. Scroll to

3. Use the [▲] or [▼] buttons to select language , the language options included: English , Korean, Chinese , Japanese, please visit [www.vosonic.com](http://www.vosonic.com) for recent firmware.

### 3-6 Disk Selection

1. Switch on your Xs-Dirve
2. Press [ ESC] button to select desired source or target.


### 3-7 Auto Power off Function

There is an auto screen- off function to save battery power .Thus if it is idle for 35 seconds ,It will shut off .


## 4. Using a memory card to transfer photos to Xs-Drive

### Auto Copy

1. Switch on your Xs-Drive
2. Insert memory card(s) into X's-Drive card slot .
3. Press the “ Copy “ button , copy function will be performed.

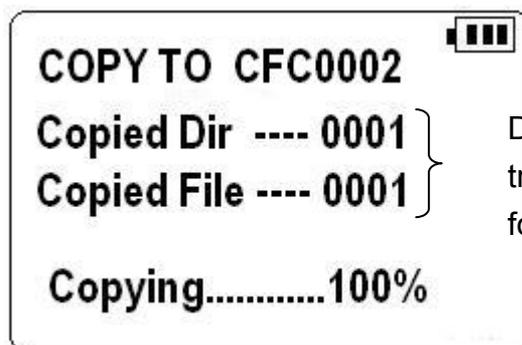


Display the amount of transferring files and folders

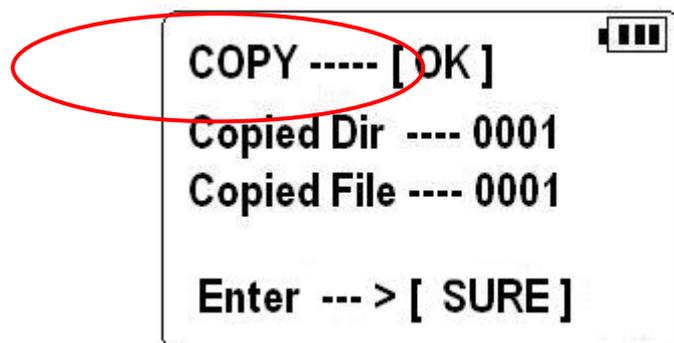


- If the “ OK” message display on the screen , it indicates the file is successfully copied  
The icon ☺ will display on the main page after switching the unit.
- If the “ NG” message display on the screen, it indicates the copy function is failed.  
The icon ☹ will display on the main page after switching the unit.  
Please refer to the troubleshooting sections for a first check.

4. Use [ OK ] button to go next path.
5. It will ask "Do you want to verify it ? Use the [ OK ] or [ ESC ] button to reply  
Yes or No.

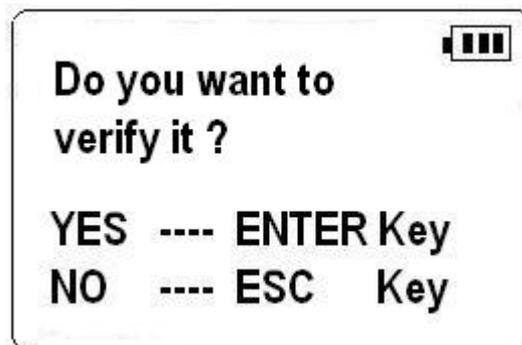

- The verify function allows you double check if the copied data are exactly corresponding with the flash memory card.
6. Press [ OK ] button, verify function will be performed.

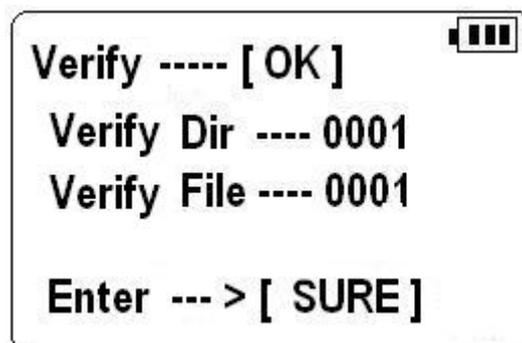

7. Use [ OK ] or [ ESC ] button to back to previous mode

- All files transfered from each memory card are stored onto the Hard Disk in folders numerically, under the name "CFC0001" , " MSC0001" , "SMC0001" , "SDC0001".
- When the same card was inserted and copied twice, two different folders were created, X's-drive won't overwrite the folder.
- To stop the data transfer , just depress the “ESC “ button and the ,  
“COPY STOP “message will pop on the screen , then you can switch off the device or  
press “ ESC “ button to switch to main menu .
- All recording files are saved into BACKUP Folder under FILE mode.

## 5. File Manager

1. Switch on your Xs-Drive.
2. Scroll to [ FILE ] and press [ OK ] button
3. Use the [ ▲ ] or [ ▼ ] buttons to high-light a folder or a file.
4. Press [Copy] button to open file manager

Item	Description
 Info.	Shows the last working result.
 Copy	Allows you copy select files or folder
 Paste	Allows you paste select file or folder
 Delete	Allows you delete select file or folder
 Cut	Allows you move select file or folder

### 5-1 Copy and Paste a file/folder

You can only copy data from HDD to memory card(s) or from memory card(s) to HDD.  
It is unabel to move the files or folders under HDD.

1. Switch on your Xs-Drive
2. Scroll to [ FILE ] and press [ OK ] button.
2. Use the [ ▲ ] or [ ▼ ] buttons to high-light a folder or a file you want to copy.
3. Press [Copy] button to open file manager.



4. Scroll to  and press [OK ] button, copy function will be performed.



5. Use [ ESC ] button to select desired disk you want to paste the select files.  
( Refer to 3-6 disk selection )
6. Use the [ ▲ ] or [ ▼ ] buttons to high-light a folder you want to paste.
7. Press [Copy] button to open file manager.



8. Scroll to  and press [OK] button , Paste function can be performed.

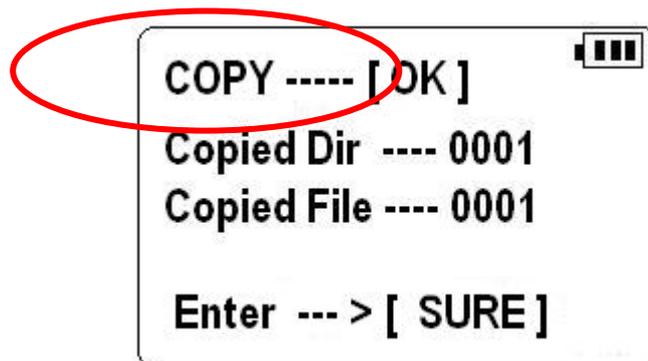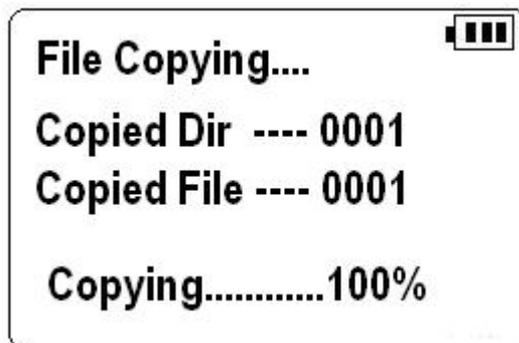

9. Use [ OK ] or [ ESC ] button to back to previous mode.
- If the “ OK” message display on the screen , it indicates the file is successfully copied  
The icon ☺ will display on the main page after switching your Xs-Drive.
  - If the “ NG” message display on the screen , it indicates the copy function is failed.  
The icon ☹ will display on the main page after switching your Xs-Drive.


## 5-2 Deleting a file/folder

1. Switch on your Xs-Drive.
2. Use [ ESC ] button to select desired disk you want to delete the files
3. Scroll to [ FILE ] and press [ Ok ] button
4. Use the [ ▲ ] or [ ▼ ] buttons to high-light a folder or a file you want to delete
5. Press [Copy] button to open file manager

6. Scroll to  and press [ ok ] button .



7. It will ask "Del Select File? Use the [ OK ] or [ ESC ] button to reply Yes or No.

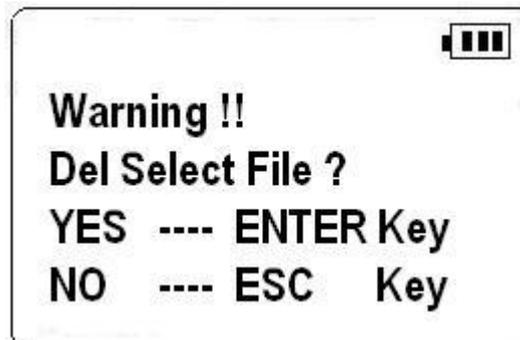

8. Press [ OK ] button, delete function will be performed.



- If the “ OK” message display on the screen , it indicates the file is successfully deleted.  
The icon ☺ will display on the main page after switching your Xs-Drive
- If the “ NG” message display on the screen , it indicates the copy function is failed.  
The icon ☹ will display on the main page after switching your Xs-Drive.

7. Use [ OK ] or [ ESC ] button to back to previous mode.

## 6. Play Music Files


### Find the desired source

1. Press [ ESC ] button to select desired disk
2. Use the [ ▲ ] or [ ▼ ] buttons to select the desired source.
3. Press [ Ok ] button to enter it.

### Playing

1. Scroll to [ FILE ] and press [Ok ] button
2. Use the [ ] or [ ] buttons to locate a folder or a song you want to play
3. Use the [ ] or [ ] buttons to s control the volume (32 levels of volume )  
while you listen
4. Use the [ Ok ] button to pause a song and then again to restart a song.
5. Long press [ ◀ ] button to rewind and find the specific part of music you want to play.
6. Long press [ ▶ ] button to fast forward and find the specific part of music you want to play.


The Display:

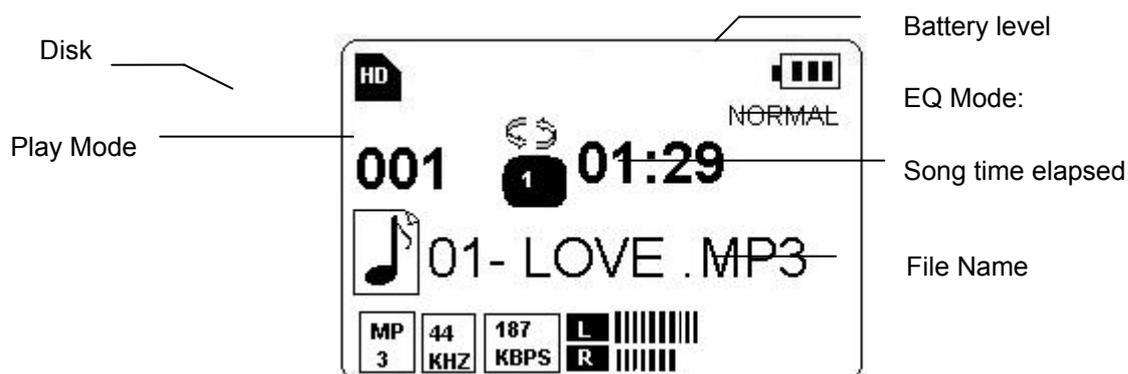

Note: If you hear nothing at first, make sure you have adjusted the volume control.


## Using the equalizer

1. Switch on your Xs-Drive.
2. Press [ MENU ] button to open function menu .
3. Scroll to 
4. Use the [▲] or [▼] buttons to select EQ mode , the Equalizer setting included:  
JAZZ, ROCK, NORMAL, USER, POP, CLASSIC, USER – Define.

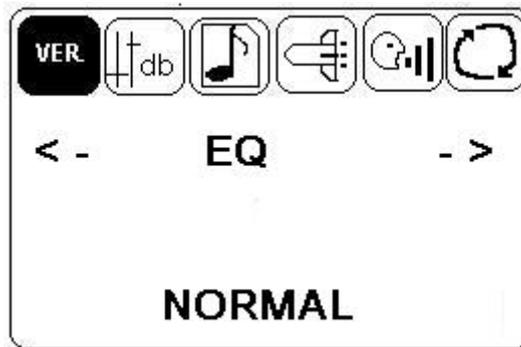

## Setting the repeat options

1. Switch on your Xs-Drive.
2. Press [ MENU ] button to open function menu .
3. Scroll to 
4. Use the [▲] or [▼] buttons to select repeat mode, the repeat options included  
Once – DIR : Play all tracks in the folder once  
Repeat -DIR : Play all tracks in the folder repeatedly.  
Once - File : Play single track once.  
Repeat – File : Play single track repeatedly.

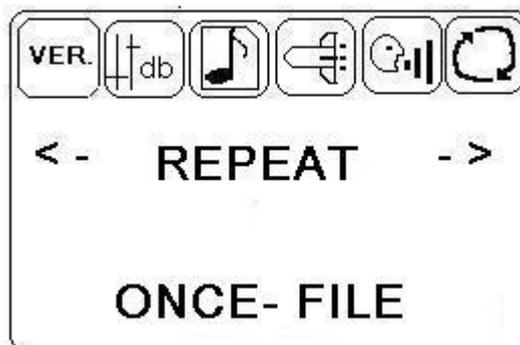

## Speed Control

1. Switch on your Xs-Drive.
2. Press [ MENU ] button to open function menu .

3. Scroll to 

4. Use the [▲] or [▼] buttons to adjust the speed.

## Display the Lyric

1. Switch on your Xs-Drive.
2. Press [ MENU ] button to open function menu .

3. Scroll to 

4. Use the [▲] or [▼] buttons to set your lyric at enable or disable mode

## ID3 Tag

1. Switch on your Xs-Drive.
2. Press [ MENU ] button to open function menu .

3. Scroll to 

4. Use the [▲] or [▼] buttons to set ID3 at enable or disable mode

Note: The ID3 is disable when the Lyric mode is ON.

## A-B Repeat function (Cyclically replaying user-defined sections of a song)

1. When listening to music, press the “AB” button to set the starting point
2. Press the “AB” button again to set the ending point. The Xs-Drive will play the section cyclically.
3. Press the “AB” button again to return normal playback mode

## *7. Listen to FM Radio*

Remember to connect the earphone to earphone jack .  
The earphone acts as the FM antenna.

### **Presetting a Channel**

#### **Auto tuning:**

1. Scroll to [ Radio ] and press [Ok ]button
2. Press and hold the [ ◀ ] or [ ▶ ] buttons for more than 0.5 seconds ; then release to auto scan FM radio stations . The tuner will stop at the first receivable broadcast station.
3. Press [ Ok ] button The current FM station will be set to a preset channel number. You can store up to 20 stations in memory.
4. To stop auto tuning, press the [ ESC ] button .

#### **Manual tuning :**

1. Scroll to [ Radio ] and press [Ok ]button
2. Press the [ ◀ ] or [ ▶ ] buttons to tune into the desired station

#### **To recall a memorized station:**

1. Scroll to [ Radio ] and press [Ok ]button
2. Press [Ok ] button , “ PRESET” will appear in the display.
3. Press the [ ◀ ] and [ ▶ ] buttons to switch to other preset radio bands.
4. To go back to the manual tuning, just press [ Ok] button again.

#### **Notes:**

- The last station tuned in will be recalled, even after switching the unit.

### **Deleting a channel preset**

1. Scroll to [ RADIO ] and press [OK ]button
2. Press [OK ] button , “ PRESET” will appear in the display.
3. Use the [ ◀ ] and [ ▶ ] buttons to find the desired file you want to delete.
4. Press and hold [ copy ] button for 2 seconds to remove the preset band

## 8. Recording:

- You can press the “Record” button anytime to start recording. However, you are not able to record voice streams and listen to music at the same time. You are able to listen to FM radio and record radio show at the same time but unable to record voice.
- Adjusting the volume to the right values is very important for usable recordings, it is better to choose a middle-way so the signal is not too loud and gets clipped but not too silent to get lost in the noise of the hardware.
- To get a better recording performance, it is recommended to use the 2.5” HDD with Fluid Dynamic Bearing (FDB) motor which provides the quiet operation

### Recording FM radio show

1. Scroll to [ Radio ] and press [Ok ]button
2. Use the [◀ ] or [▶] buttons to finding a desired channel. .
3. Press and hold the [Ok] button for more than 0.5 seconds , the recording function will be performed.




#### Note:

- FM recordings are saved in MP3 format and named sequentially, as FMRCXXXX.MP3 .
- Volume control is able to adjust while recording.
- All recording files are saved into RECORD Folder under FILE Mode.

## Recording from built-in microphone


1. Scroll to [REC ] and press [Ok ]button
2. Press [ MENU ] button to open function menu .
3. Scroll to [REC INPUT ]
4. Use [▲ ] or [▼ ] button to set REC INPUT at [ MIC IN ]

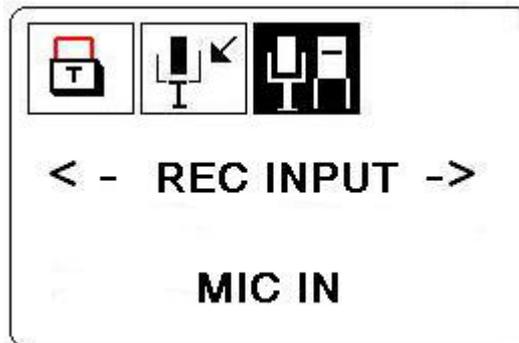

## Recording from Line-in

You can use a line –in cord to record music directly from an audio device ( such as CD player)

1. Scroll to [REC ] and press [Ok ]button
2. Press [ MENU ] button and scroll to [REC INPUT ]
3. Use [▲ ] or [▼ ] button to set REC INPUT at [ LINE IN ]

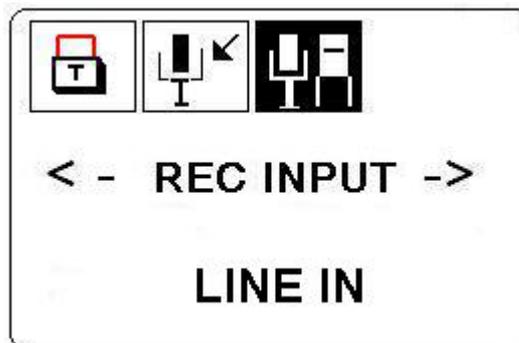

## Key Lock


- To lock the Xs-Drive front panel buttons from being accidentally pressed,

scroll  and press [ OK ] button.

- Press [ MENU ] to re-set the default again to effect the buttons.

## Starting the recording process

1. Scroll to [Rec] and press [Ok ]button
2. Press [Ok] button again to start the voice recording.
3. Use [ESC] button to end the recording process

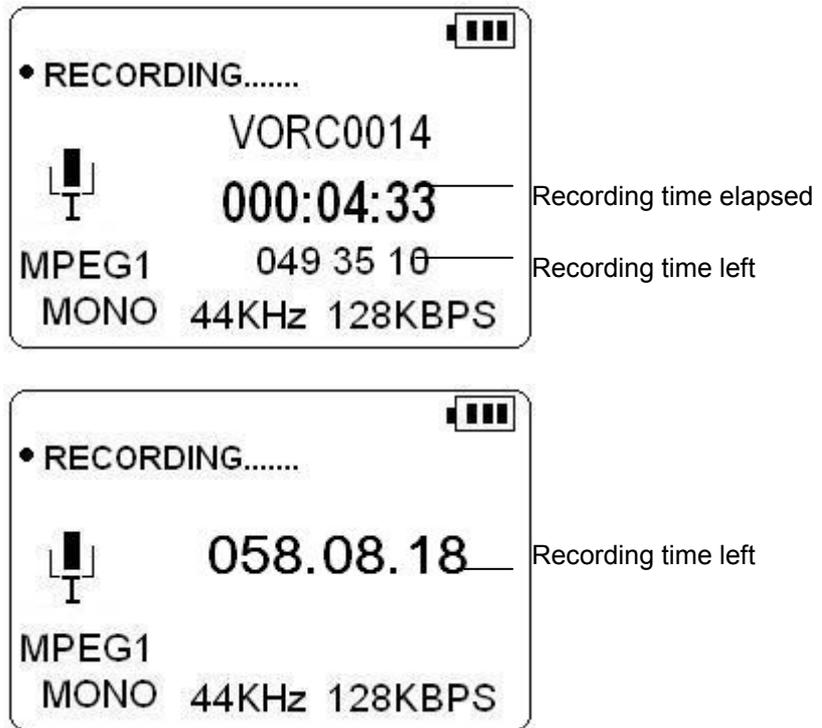

## Finding your recorded files

1. Scroll to [ Music] and press [Ok ]button
2. Scroll to RECORD folder and press [ OK ] button
3. Use the [▲ ] or [▼ ] buttons to finding your recorded files .

All recording files are saved as FMRCXXXX.MP3 .or VORCxxxx.MP3

## Deleting your recorded file

1. Scroll to [ Music] and press [Ok ]button
2. Scroll to RECORD folder and press [ OK ] button
3. Use the [▲ ] or [▼ ] buttons to high-light desired recorded files.
4. Press [ Copy ] button to open file manager
5. Scroll to [ Delete ] and press [ Ok ] button

## **9. Battery Recharge:**

### **Charging the battery using the computer (via USB cable)**

1. Switch off your Xs-Drive
2. lock the power switch which located on the right side .
3. Connect the Xs-Drive to your computer via a USB cable.
4. It usually takes about 4 hours for NP-60 battery or 6 hours for NP-120 battery to fully charge the battery from a low-power state using a USB cable.
5. The Xs-Drive is disable while charging via USB Port.

### **Charging the battery using the AC adapter**

- To charge the batteries, please connect the plug of the AC adapter to DC 5V jack of the main unit. When the Power LED indicator goes off , it indicates that the batteries are fully charged.
- Please use only the **FUJIFILM NP-120 or NP-60 1800mAh 3.7V rechargeable Li-ion battery** .
- For additional battery packs, please contact your dealer or you can purchase it at Digital Camera Stores.

## **10. If an erroneous display /operation occurs:**

---

- 1) When the device error message pop on screen, there may be a chance of corrupt data or the memory card is damaged , you can change another memory card or the main unit will be automatically switched off after 35 seconds.
- 2) If any shut down caused by erroneous operation , you can depress the [ reset] button located at the left side to switch off the main unit .
- 3) If the unit operated via USB on to PC while the batteries are low, erroneous display /operation may occur, if this happens ,unplug the USB cable, and press the [ reset] button .

## **11. Care for the Hard Drive and unit:**

1) If the computer or X's-Drive Pro can not detect the Hard Drive, check the suggested solutions:

- Check the flat connector is plugged securely or not
- Driver is not install -then reinstall
- Partition the HDD ( refer to 3-4 Format Hard Disk under Win 2K/ Win XP)
- Don't formatted the 32G above Hard Disk under Windows 2000 or Windows XP

**Note: Win 2K/ Win XP can not support Format Disk for 30G above Hard Drive.**

2) Please don't use force when connecting the flat cable with the unit and Hard Drive .

3) To keep your hard drive in better operating performance , we recommend to periodically run Scan Disk and Disk Defragmenter .

4) Hard Drive must be formatted to the FAT or FAT-32 format, NTFS format is not compatible with this function .

5) Please carefully insert and remove the memory card from each slot .

6) Do not drop, jar , bump , shock the unit , or expose to severe vibration while data is being transmitted .

7) To reduce the risk of electronic shock , do not remove cover (or back )

8) To reduce the risk of fire or shock hazard, do not expose this equipment to rain ,any liquid or moisture.

9) Keep it plugged into the AC adapter/charge while connected to your computer .

## 12. Troubleshooting.

### WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electronic shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult Your dealer or service center.

<b>Problem</b>	<b>USB Connection issues</b>
<b>Solutions</b>	Under Windows 98SE, the Xs-Drive should not be connected to the system before the driver has been installed.
	If using a USB port in the front of your computer, try a USB port in the back. Front USB ports are often from non-powered.
	If using a laptop computer and a docking station, try connecting without the docking station.
	If you cannot see the files on the device after copied files to Xs-Drive via USB from computer, You must properly remove (un-mount) your Xs-Drive from the computer <b>before</b> disconnecting the USB cable to avoid loss of data or freezing the computer and Xs-Drive
<b>Problem</b>	<b>Macintosh™ OS issues</b>
<b>Solutions</b>	MacOS 10.0.x does not adequately support FAT volumes. Upgrading to 10.1 or later is mandatory
	The FAT-32 format made by MacOS X's Disk Utility is incorrect. Formatting must be done under MacOS 9.
	The FAT volumes do not appear or disappear until after the mouse is being moved.
<b>Problem</b>	<b>Corrupt data, General Error</b>
<b>Solutions</b>	Due to file allocation table (FAT) has been corrupted, the data in memory card transferred into Xs-Drive may be looks faulty, please backup the data and run ScanDisk, Disk Defragmenter or reformat the memory card.
<b>Problem</b>	<b>The Xs-Drive can not be formatted with Fdisk AP?</b>
<b>Solutions</b>	If you are using the new Hard Disk, please remember to initialize the HDD first. If you are not know how to initialize the HDD, please refer

	to 3-3Format HDD under Win2000/WinXP .
<b>Problems</b>	<b>Formatting, and partitioning</b>
<b>Solutions</b>	To work in the stand-alone mode, both the disk and the memory cards must be formatted to the FAT or FAT-32 file systems. <b>Note: Win 2000/ Win XP can not support Format Disk for 32G above Hard Drive.</b>
	To have the 32G above Hard Disk work on the Win 2000/Win XP, you can use the included FDisk Application Program to format the HDD.
<b>Problems</b>	<b>The amount of free HD space on my Xs-Drive is different from the PC.</b>
<b>Solutions</b>	Run Scandisk to correct the disk platters for defects and also looks for lost clusters that are sometimes created when a program aborts. It is recommended to safely disconnect the Xs-Drive ( Refer to 3-3 )

### How to update the firmware for my Xs-drive

#### • VISIT VOSONIC ON THE WEB

Go to <http://www.vosonic.com/> to download the latest firmware

The latest version of this manual may be available on Vosnic's Web site

#### • CONTACT VOSONIC

To help Vosonic promptly answer your questions, please have your product's model number, serial number , firmware version , and your contact information when you call / send a mail to Customer Service ([service@vosonic.com.tw](mailto:service@vosonic.com.tw) ). The S/N and model number are on the back of your Xs-Drive case.

#### •REGISTER A MEMBER AT X's -Drive CLUB

The most easy way to communicate the operating problem with other users.

Register a Xs-Drive members at Xs-Drive

Club ( <http://groups.msn.com/Xs-Drive> )

# Hard Disk Assembly Chart

Step 1: Remove the 4 screws on the rear cover.



Step 2: To avoid bending the pins, carefully slide the HDD into the chassis.



# Battery Installation Chart

Step 1: Remove the 4 screws on the front cover



Step 2: To avoid bending the pins, carefully slide the battery into the chassis.



Note: If you are using the NP-60 battery, you will find a spongy rubbers underneath the front cove, this is to secure the assembly.



## VOSONIC TECHNOLOGY CORPORATION

To process a request for RMA Service, the following information must be provided.

Model No : \_\_\_\_\_

S/N NO: \_\_\_\_\_

User Name : \_\_\_\_\_ TEL: \_\_\_\_\_

E-mail: \_\_\_\_\_

Return Address: \_\_\_\_\_

Problem Description : ( For User)

Returned Product Detail: ( For Manufacturer)

Dealer information :