
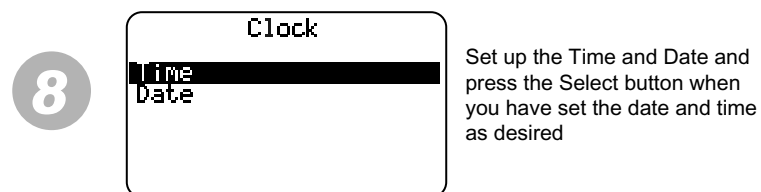
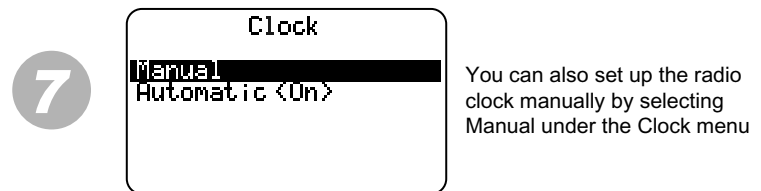
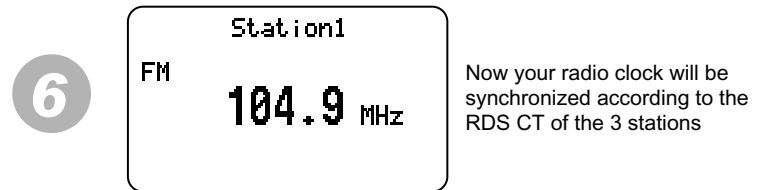
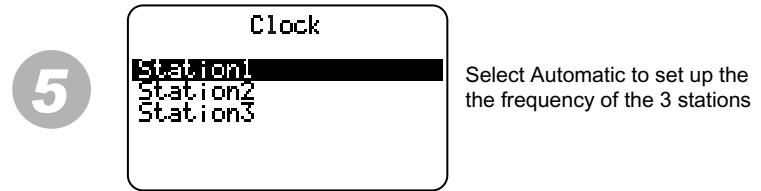
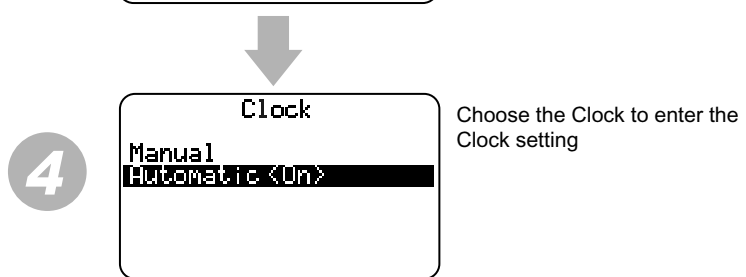
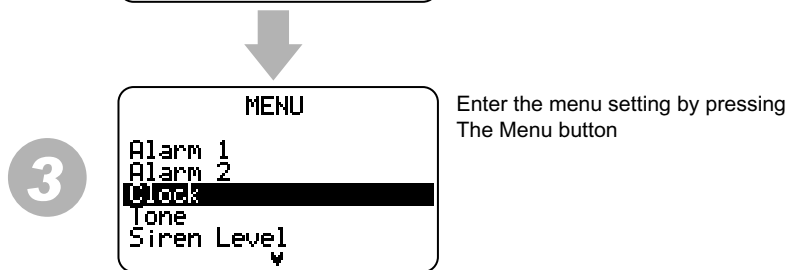


CL-100


S.A.M.E TABLE-TOP WEATHER HAZARD ALERT
WITH AM/FM ALARM CLOCK RADIO

Quick Setup Guide 1 Setting up Time and Date

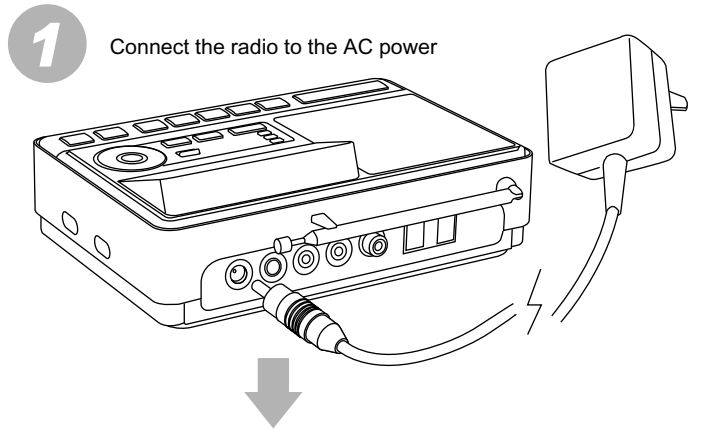


Quick Setup Guide 2 Program the Weather Channel for Your Area


1 Turn the radio on by connecting the AC power or with battery operation

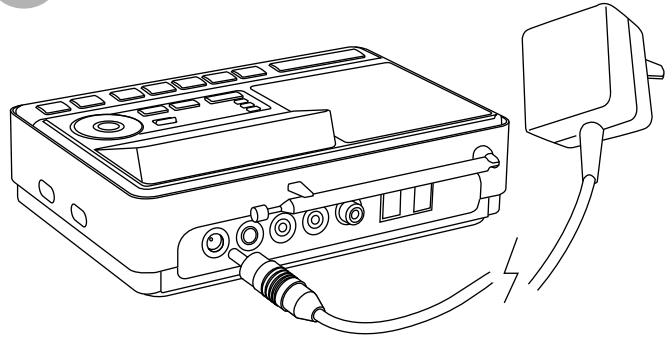


2 Press the Menu button to enter the menu setting

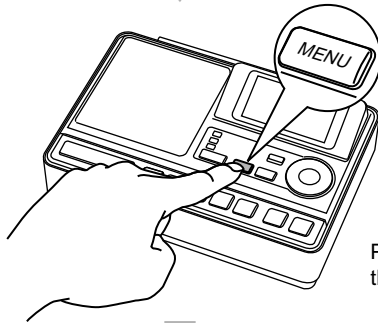




3 Choose the Weather Channel and press the Select button

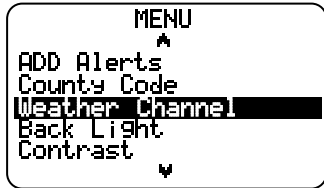


4 Press the VOL UP/DOWN and select the desired weather channel to receive the weather broadcast

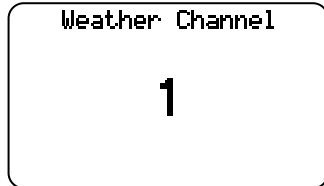


5 Press the Select button to save the setting, and press the Menu button to save this channel

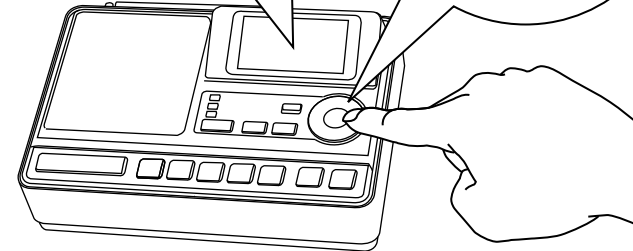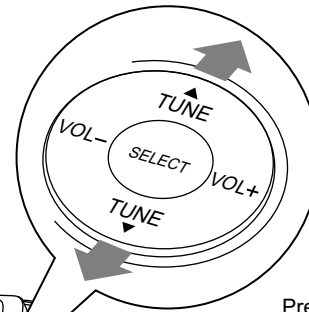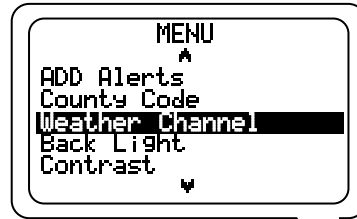


6 Switch on the Weather Alert ON/OFF to hear the voice broadcast

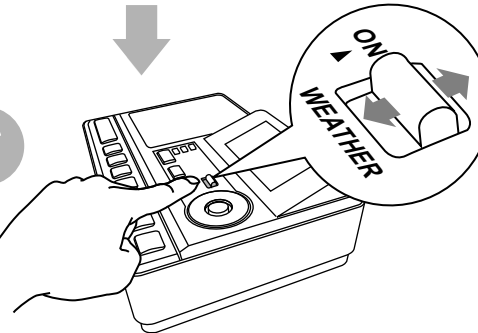

7 Press the Weather Band button

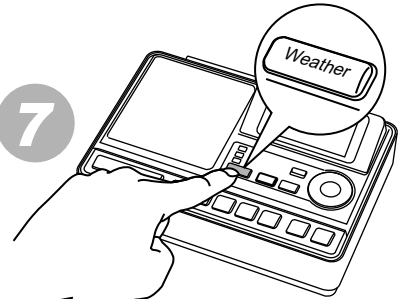


8 Use the VOL UP/DOWN to adjust the volume to a desired listening level

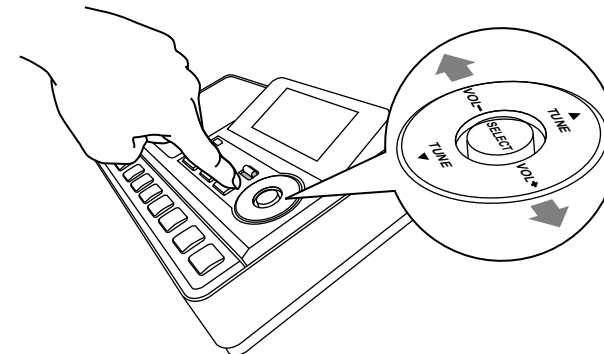


Quick Setup Guide 3 Setting up Defeat Siren

1 Power up the radio

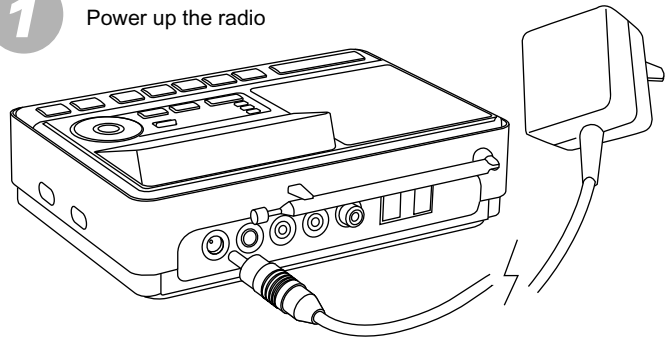


2

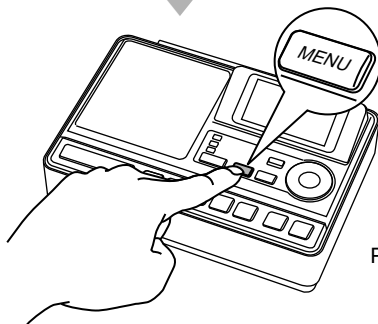


Press the Menu button

3

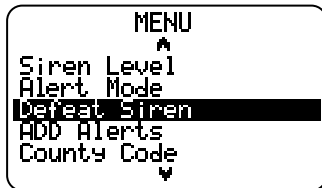


Press the VOL UP/DOWN until "Defeat Siren" is highlighted and press the "Select" button

4

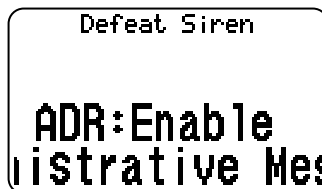


The display will show ADR: Enable and a scrolling message


5

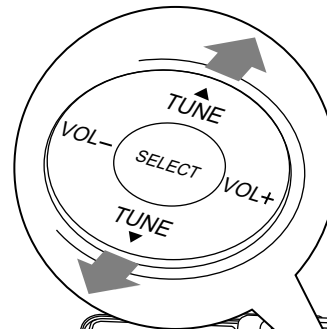

Press the TUNE UP/DOWN to enable or disable the defeat siren

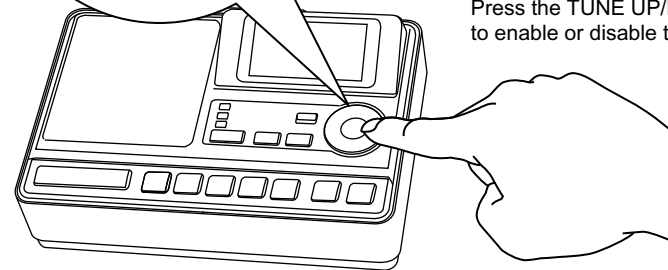

6

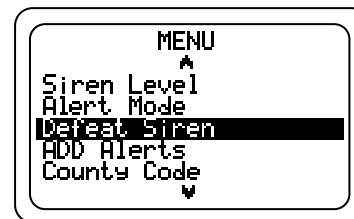

The radio will save your settings and return to the main menu. Please refer to your owner's manual for the Alert Description Table

