


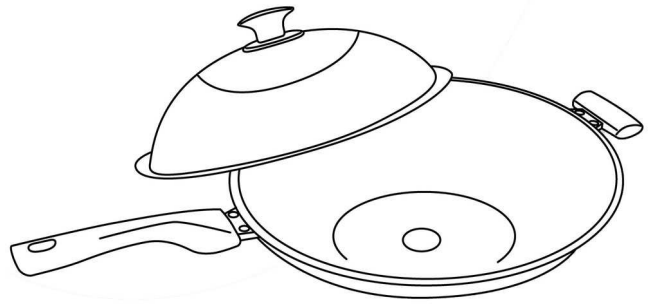

SK-7363: Super-Nano Anodized Wok

- Nano-titanium alloy
- Fast and even heat conductivity
- Smooth, rivet-free inner surface
- Super fine pores result in non-stick surface
- Scratch resistant – can be used with metallic spatula
- No Teflon coating, no chemical coating, no PFOA
- 14 in. (36cm) x 3.74 in. (9.5cm)



INSTRUCTIONS

Before initial use

1. Wash inside and outside of wok thoroughly with sponge and mild detergent.
2. Rinse well and wipe dry both inside and outside of wok.
3. Place wok on stove over medium heat for 1 minute.
4. Turn off heat and add 1 teaspoon of cooking oil into wok.
5. Spread the oil to a thin film covering the entire inside surface of the wok. Either use a paper towel to rub the oil over the surface (with a tong); or use a heat-proof brush to brush the oil.
6. Your wok is now ready to use.


Note: Always pre-heat wok with 1 teaspoon of oil for 1 minute over medium heat before each use.

MAINTENANCE

- Never leave unfinished food in wok – acid in food residue left for long period of time may cause damage to surface. Transfer and store leftovers in separate container.
- Never use a metallic scouring pad.
- After each use, best to clean immediately under running water with mild detergent, taking advantage of wok's retaining heat.
- After the wok has been in use for a while, it is normal for wok to experience slight change in color. This is due to coloring in seasonings, such as soy sauce.
- If extremely greasy:
 1. Fill wok $\frac{3}{4}$ full with water and bring to boil for approx. 5 minutes over medium heat.
 2. Clean with sponge and detergent under running water.
 3. Wipe dry

CHANGING THE HANDLE

This wok is equipped with 2 ear handles and 1 long handle, with one side interchangeable to your preference:

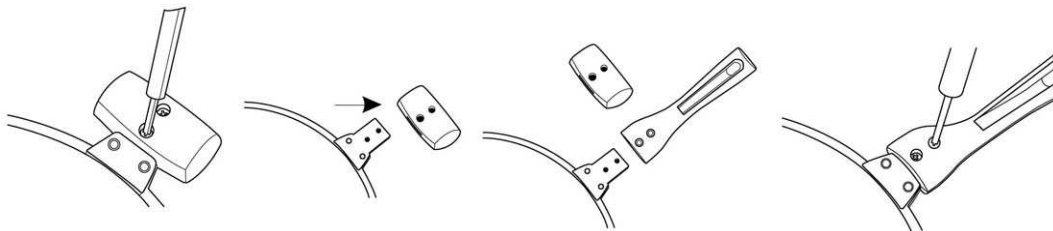

1. Unscrew the two screws and remove handle.
2. Insert handle and align screw openings.
3. Replace and tighten the two screws.



Your Guarantee

Within one year from date of purchase, Sunpentown will replace or repair at our discretion any item found defective in material or workmanship when put to normal household use and cared for according to the instructions. Minor imperfections, surface markings as a result of shipping, and slight color variations are normal. This excludes damage from misuse or abuse, such as improper cleaning, neglect, accident, alteration, fire, theft, or use in a commercial establishment.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
21415 Baker Parkway, City of Industry, CA 91789-5236
Tel: 800-330-0388 · Fax: 909-468-5279
service@sunpentown.com
www.sunpentown.com