

Mobile Phones

Green Text with Light Green Background indicates the adapter tip is included with product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the product is not compatible.

***NC* (Not Compatible):** The MP1550 is not compatible with devices that require more than 800mA. Therefore, it is important that the MP1550 is not used to power or charge these phones. The TekCharge MP1860A, however, is ideal for these phones.

Apple

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
iPhone, iPhone 3G, iPhone 3G S, iPhone 4, iPhone 4S	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	MP3300-16	

Blackberry

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
6210, 6220, 6230, 6280, 6510	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
7000i, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v,	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
8700c, 8700f, 8700g, 8700r, 8700v, 8703e, 8705g, 8707g, 8707h, 8707v, 8800, 8820, 8830	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Curve 8300, 8310, 8320, 8330, 8350	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Pearl 8100, 8100c, 8110, 8120, 8130	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Bold 9000	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Bold 9700, Curve 8530, Curve 8900, Curve 9300	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
Pearl 8220, Storm 9530, Storm 2, Tour 9630, Torch 9800	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	

HTC

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
Aria, Droid Eris, Droid Incredible, Evo 4G, Evo Shift 4G	*NC*	UA-U11	UA-U11	UA-U11	UA-U11	HTC USB Cable can be used with USB port
G1 (with Google)	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Mogul	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
P3300, P3470, P3600, P4350, P6300, P6500	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
PPC-6700	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
S310, S620, S710, S730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Touch, Touch Viva, Tytan II	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Touch Pro	*NC*	HTC USB Cable	HTC USB Cable	HTC USB Cable	HTC USB Cable	HTC USB Cable can be used with USB port

LG

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
AX260, AX275, AX380, AX565, AX8600	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	
AX300, AX585 (Rhythm), AX830 (Glimmer)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
CE110, CG180	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	
CF360, CF750	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
CT810 (Incite)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
CU515, CU575, CU720 Shine, CU915, CU915 Vu, CU920, CU920 Vu-TV	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	
GR500 (Xenon)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
LG830 (Spyder)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
LX150, LX160, LX165, LX260, LX570	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	
LX400, LX600 (Lotus)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
UX260, UX380	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	
UX300, UX585 (Rhythm), UX830 (Glimmer)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
VS740 (Ally)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
VX5400, VX5600 (Accolade), VX8350, VX8550 (Chocolate 2), VX8600, VX8610, VX8700, VX8800, VX9400, VX10000 Voyager	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	
VX5500, VX8560 (Chocolate 3), VX8610 (Decoy), VX9100 (enV2), VX9600 (Versa), VX9700 (Dare)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
CHOCOLATE, EnV, Muziq, Rumor, Scoop, Shine, TRAX, WAVE	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4	

Motorola						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
A630, A760, A830, A835, A845, A925, A1000	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
A1200, C290, E770	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
BARRAGE, Crush, DEVOUR, DROID, DROID 2, Evoke QA4, Hint QA30, Karma QA1, Quantico, Rival A455	*NC*	UA-U11	UA-U11	UA-U11	UA-U11	
E815, E816, E1000	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
ic402, ic402 The Blend, ic502 The Buzz, ic602 The Buzz+, ic902 The Deluxe	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
i30sx i50sx i55sr i58sr i60c i85s i88s i90c i95cl i99cl	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
i335	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
i205, i265, i275, i305, i315, i325, i325is, i355, i530, i560, i580, i605, i615, i670, i710, i730, i733, i760, i830, i836, i850, i860, i870, i880, i920, i930	UA-NEX1	UA-NEX1	UA-NEX1	UA-NEX1	UA-NEX1	
i410, Clutch i465, Brute i680, DEBUT i856, Stature i9	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
KRZR, KRZR K1, KRZR K1m	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
MOTO Q, MOTO Q9m	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
MOTO Q9, MOTO Q9h, MOTO Q Global, MOTO VE440	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
MOTOROLA BACKFLIP, CLIQ, CLIQ XT	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
PEBL U6	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
RAZR V3, RAZR V3C, RAZR V3i, RAZR V3m, RAZR V3r, RAZR V3t, RAZR V3xx, RAZR Maxx Ve, RIZR Z3, RIZR Z3tv	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
RAZR2 V8, RAZR2 V9, RAZR2 V9m, ROKR U9	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
ROKR E1, ROKR E2, ROKR E6, ROKR Z6, ROKR Z6m	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
SLVR L2, SLVR L6, SLVR L7, SLVR L7c	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
V60, V60c, V60g, V60i, V60t, V66, V70, V80, V120, V120C	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
V200, V260, V262, V265, V276, V300, V330, V400,	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
V500, V525, V540, V547, V551, V600, V620, V635, V710, V810	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
V190, V195, V235, V323, V323i, V325, V360, V365, V557	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
W315, W370, W385, W490, W510	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Entice W766, Z9	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
Bluetooth Headsets						
H3, H350, H500, H605, H670, H700	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
HS801, HS810, HS820, HS830, HS850	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	
H710	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	

Nokia						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
E50, E51, E61, E61i, E62, E65, E90	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
E75	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
N70, N71, N72, N73, N75, N76, N77, N80, N81, N90, N91, N92, N93, N93i, N95	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
N85, N86, N97	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
N800, N810 Internet Tablet	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
N900	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
1100, 1221, 1260, 1261	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
1650	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
2116i, 2125i, 2128i, 2220, 2260, 2270, 2280, 2285, 2600, 2610, 2651	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
2630, 2760, 3109, 3110, 3250, 3500	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
3100, 3120, 3200, 3205, 3220, 3280, 3285, 3300, 3320, 3360, 3361, 3390, 3395, 3520, 3560, 3570, 3585, 3585i, 3586i, 3587i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
5070, 5200, 5300 XpressMusic, 5500 Sport, 5700 XpressMusic	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
5100, 5110, 5120, 5125, 5130, 5140, 5160, 5165, 5170, 5170i, 5180, 5180i, 5185, 5185i, 5190, 5192	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
6010, 6015, 6015i, 6016i, 6019i, 6020, 6030, 6061, 6100, 6110, 6120, 6130, 6150, 6160, 6160i, 6161, 6162, 6168, 6170, 6180, 6185, 6185i, 6190, 6192, 6200, 6225, 6230, 6235, 6235i, 6236, 6236i, 6255i, 6256i, 6310i, 6340, 6340i, 6360, 6370, 6385, 6390	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
6070, 6080, 6085, 6086, 6101, 6102i, 6103, 6110, 6111, 6120, 6121, 6125, 6126, 6131, 6136, 6151, 6233, 6270, 6280, 6290, 6300, 6301, 6500, 6555	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6620, 6651, 6670, 6681, 6682, 6800, 6820, 6820i	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
7110, 7160, 7190, 7210, 7250, 7250i, 7380, 7610	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
7360, 7370, 7373, 7390, 7500 Prism	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	
8260, 8265, 8265i, 8270, 8290, 8290i, 8310, 8390, 8800, 8801, 8810, 8860, 8890, 9300, 9300i, 9500	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	
6205, 6500 (Classic), 7205 (Intrigue), 7900 (Prism), 8600 (Luna), 8800 (Arte / Sapphire Arte)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	

Palm						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
Centro	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Palm Pixi, Palm Pixi Plus, Palm Pre, Palm Pre Plus	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
Treo 650, Treo 680, Treo 700p, Treo 700w, Treo 700wx, Treo 750, Treo 755p	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Treo 800w, Treo Pro	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	

Samsung Galaxy S						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
D700 (Epic 4G)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Samsung USB Cable be used with USB port
i500 (Fascinate), i897 (Captivate)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Samsung USB Cable be used with USB port
T959 (Vibrant)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Samsung USB Cable be used with USB port

Samsung						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
a117, a127, a137, a167, a177, a226, a227, a237, a257 (Magnet)	N/A	N/A	N/A	N/A	N/A	
a303 (Heat), a436, a437, a503, a707, a717, a727	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	
a310, a517, a513 (Fin), a523 (Mysto), a637, a657, a737, a747 (SLM), a767 (Propel), a777, a827 (Access), a837 (Rugby), a867 (Eternity), a877 (Impression), a887 (Solstice)	N/A	N/A	N/A	N/A	N/A	
a570, a630, a645, a840, a850, a870, a890, a900, a920, a930, a990	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
a597 (Eternity II), a687 (Strive), a797 (Flight), a897 (Mythic)	*NC*	UA-U11	UA-U11	UA-U11	UA-U11	
c225, c417, d370, d347, d415	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
d806, d807, d900 (Black Carbon), e878	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	
e105, e315, e316, e317, e335, e715	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
i220, (Code), i350 (Intrepid), i920 (Omnia II)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
i325 (Ace), i617 (BlackJack II), i627 (Propel Pro), i637 (Jack), i770 (Saga), i907 (Epix), i910 (Omnia)	N/A	N/A	N/A	N/A	N/A	
i607 (BlackJack), m610, m620 (UpStage)	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	
m220, m240, m320, m330, m540 (Rant), m550 (Exclaim), m560 (Reclaim), m570 (Restore), m630 (Highnote), m850 (Instinct HD), m900 (Moment)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
m300, m305, m310 (Slash), m340 (Mantra), m510, m520, m800 (Instinct), m810 (Instinct s30)	N/A	N/A	N/A	N/A	N/A	
Nexus S (Google)	*NC*	UA-U11	UA-U11	UA-U11	UA-U11	
n330, n625, p107, p207	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
r100 (Stunt), r350/r351 (Freeform), r460 (MyShot II), r470 (TwoStep), r560 (Messenger II), r850 (Caliber)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
r200, r210 (Spex), r211, r300, r310 (Byline), r311 (Axle), r410, r420 (Tint), r430 (MyShot), r450 (Messenger), r451C, r500 (Hue), r520 (Trill), r600 (Hue II), r610, r800 (Delve), r810 (Finesse)	N/A	N/A	N/A	N/A	N/A	
r225, s307, t309	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
r510, t219, t329, t509, t519 (Trace), t629, t809	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	
t101G, t109, t119, t139, t229, t239, t301G, t339, t349, t401G, t409, t429, t439, t459 (Gravity), t469 (Gravity 2), t539 (Beat), t559 (Comeback), t639, t659, t729 (Blast), t739 (Katalyst), t749 (Highlight), t819, t919 (Behold), t929 (Memoir)	N/A	N/A	N/A	N/A	N/A	
t939 (Behold II)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
u310 (Knack), u350 (Smooth), u430, u440 (Gloss), u450 (Intensity), u470 (Juke), u490 (Trance), u640 (Convoy), u650 (Sway)	N/A	N/A	N/A	N/A	N/A	
u340, u410, u520, u540, u550, u620	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
u420, u740	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	
u700 (Gleam), u706 (Muse), u750 (Alias 2), u810 (Renown), u900 (FlipShot), u940 (Glyde), u960 (Rogue)	N/A	N/A	N/A	N/A	N/A	
v205, v206, x105, x426, x426M, x427, x427M, x475, x495, x496, x497	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	
z400	N/A	N/A	N/A	N/A	N/A	

Sanyo						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
Katana, Katana II, Katana DLX	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
M1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
MM-5600, MM-7400, MM-7500, MM-8300, MM-9000	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
PM-8200	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
RL-2000, RL-2500, RL-4920, RL-4930, RL-7300	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
S1	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
SCP-2400, SCP-3100, SCP-3200	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
SCP-3800 (Katana LX)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	
SCP-4900, SCP-4920, SCP-4930	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
SCP-5300, SCP-5400, SCP-5600, SCP-6650	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
SCP-7000, SCP-7050, SCP-7200, SCP-7300, SCP-7400, SCP-7500	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
SCP-8100, SCP-8200, SCP-8300, SCP-8400, SCP-8500, SCP-9000	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	
VM-4500	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	

Sony Ericsson						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
C702a, C902, C905	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
F305	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
G700, G705, G705u	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
J100i, J110i, J120i, J220i, J230i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
K200i, K220i, K310i, K320i, K330, K510i, K530i, K550i, K550im, K610i, K610im, K750i, K770i, K800i, K810i, K850i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
K700	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1	
M600i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
P1i, P990i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
P800, P802, P900	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1	
R380	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1	
S302, S500i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
S700	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1	
T226, T237, T310, T316, T610, T616, T618, T628, T630, T637	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1	
T250i, T303, T650i, T700	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
V630i, V640i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
W200a, W200i, W300i, W302, W380i, W580i, W595, W600, W610i, W660i, W700i, W705, W710i, W712a, W800, W810i, W850i, W880i, W900i, W902, W910i, W950i, W960i, W980	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
Xperia X10	*NC*	UA-U11	UA-U11	UA-U11	UA-U11	
Z310a, Z310i, Z320i, Z520a, Z525a, Z530i, Z550a, Z610i, Z710i, Z750a	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2	
Z200, Z500, Z600	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1	

T-Mobile						
Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Information
G1 (with Google)	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	