

PDA, GPS and Handheld Games

Green Text with Light Green Background indicates the adapter tip is included with product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the product is not compatible.

"NC" (Not Compatible): The MP1550 is not compatible with devices that require more than 800mA. Therefore, it is important that the MP1550 is not used to power or charge these phones. The TekCharge MP1860A, however, is ideal for these phones.

Casio

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
IT-10	UA-L40	UA-L40	UA-L40	UA-L40	PA-L42	

Garmin

Model	MP1550	MP1650	MP1800	MP1860A	MP2250	Additional Info
Edge: 605, 705	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
StreetPilot: i2, i3, i5	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 200, 200W, 205, 205W, 250, 250W, 255, 255W, 260, 270	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 300, 310, 350, 360, 370	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 610, 650, 660, 670, 680	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 710, 750, 760, 770, 780	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 850, 880	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 2300, 2300LM, 2350LMT, 2350LT, 2360LMT, 2370LT	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Garmin USB can be used with USB port
nuvi: 2450, 2450LM, 2460LMT	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Garmin USB can be used with USB port
nuvi: 3750, 3760LMT, 3760T, 3790LMT, 3790T	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Garmin USB can be used with USB port
dēzl: 560LMT, 560LT	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Garmin USB can be used with USB port
nūLink: 1695	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11	Garmin USB can be used with USB port

HTC

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
P3300, P3470, P3600, P4350, P6300, P6500	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
S310, S620, S710, S730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Tytan II	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	

Magellan

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
Maestro 3100, 3140, 4000, 4040, 4050, 4100	PA-L30 & MP1800-10	PA-L30 & MP1800-10	PA-L30 & MP1800-10	PA-L30 & MP1800-10	PA-L30	
Roadmate 800, 860, 2000, 2200T, 3000T, 3050T, 6000	PA-L30 & MP1800-10	PA-L30 & MP1800-10	PA-L30 & MP1800-10	PA-L30 & MP1800-10	PA-L30	

Navigon

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
Navigon 5100	"NC"	UA-U04	UA-U04	UA-U04	UA-U04	

Nintendo

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
DS, Gameboy Advanced, Gameboy SP	UA-NIN1	UA-NIN1	UA-NIN1	UA-NIN1	UA-NIN1	
DS Lite	UA-NIN3	UA-NIN3	UA-NIN3	UA-NIN3	UA-NIN3	
DS Dsi	N/A	N/A	N/A	N/A	N/A	Adapter not available (USB charge cable for Dsi will work)

Palm

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
m125, m130, m500, m505, m515	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
LifeDrive	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Tungsten C	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
Tungsten E2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Tungsten T, Tungsten T2, Tungsten T3	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
Tungsten T5	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Tungsten W	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
TX	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Zire 71	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	

Sony

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
PSP	UA-L40	UA-L40	UA-L40	UA-L40	PA-L42	
PSP 3000	UA-L40	UA-L40	UA-L40	UA-L40	PA-L42	
PSP Go	N/A	N/A	N/A	N/A	N/A	Adapter not available

TomTom

Model	MP1550	MP1580	MP1800	MP1860A	MP2250	Additional Info
GO: 520, 720, 730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
GO: 920, 930, 930 T	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
XL, XL S, XL 30, XL 330, XL 330 S	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
ONE: 2nd Edition, 30 Series, 3rd Edition	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	