



Expand Your Factory Radio



Honda/Acura

HD Radio
Operation

iSimple Connect



iSimple®
A Division of AAMP of America™
13190 56th Court Clearwater, FL 33760
Ph. 866-788-4237
support@isimplesolutions.com
©2013 AAMP of Florida, Inc.
www.isimplesolutions.com

Rev. 02-27-13

Table of Contents

	Pages
1. HD Radio Operation	3
2. Troubleshooting	4
3. Warranty	5

1. HD Radio Operation

Entering Mode Select Menu

Press the **XM** or **SAT** button to enter satellite radio mode. Immediately turn the rotary **TUNE KNOB** or press the **TUNE UP** button to scroll through available sources. . Once "HD RADIO" is displayed wait six seconds and the mode will auto select.

Tune Up

Turn the **TUNE KNOB** clockwise or press "**TUNE ▲**" manually tune up.

Seek Up

Press the **SEEK>** button to seek up to next available station.

Tune Down

Turn the rotary **TUNE KNOB** counter-clockwise or press "**TUNE ▼**" to manually tune down.

Seek Down

Press the **<SEEK** button to seek down to the next available station.

Changing Bands

Press the **XM** button to switch between AM and FM bands.

Store Presets

Tune to the station you want to store as a preset. Press and hold the preset button on which you want to store the channel.

Recall Presets

Press the preset button that corresponds with the channel you want to recall.

Changing Display

Press the **DISP** button to toggle between HD artist and HD title.

2. Troubleshooting

Symptom	Cause	Remedy
Radio shows "DEV INIT"	Connect device is initializing	This only occurs the first time the Connect is powered on. Wait a few minutes, cycle ignition off and on then enter SAT Mode.
Connect does not recognize the HD Radio tuner as a source	HD Radio tuner was not plugged in during initialization.	Press reset button to clear the memory and re-initialize the Connect

3. Warranty

One Year Limited Warranty

The quality controls used in the manufacture of this product will ensure your satisfaction. This warranty applies only to the original purchaser of this product from an authorized iSimple dealer. This warranty covers any supplied or manufactured parts of this product that, upon inspection by iSimple authorized personnel, is found to have failed in normal use due to defects in material or workmanship. This warranty does not apply to installation expenses. Attempting to service or modify this unit, operating this unit under conditions other than the recommended voltage will render this WARRANTY VOID.

Unless otherwise prescribed by law, iSimple shall not be liable for any personal injury, property damage and or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product. All parts of this iSimple product are guaranteed for a period of 1 year as follows:

Within the first 12 months from date of purchase, subject to the conditions above, iSimple will repair or replace the product at their discretion, if it is defective in material or workmanship providing it is returned to an Authorized iSimple Dealer, with PROOF OF PURCHASE from an authorized iSimple dealer.

Warning:

This equipment may be reset by unintentional electrostatic discharge during operation. Exposure to direct sunlight or extreme heat may cause damage or malfunction.

FCC Class B Radio Frequency

Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorientate or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that of which the receiver is connected.
4. Consult the dealer or an experienced radio / television technical for help.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.



www.isimplesolutions.com



For Best Performance Have It
Professionally Installed.



Powered by
CEA