





**User's Manual** 

CASE Legacy V6 User's Manual

# **Contents**

### ■ Product Overview


Specification	P.2
Disassemble Chart	P.3
Accessory Box	P.3
Connectors	P.3
Installation Guide	
Opening Chassis	P.4
Installing Motherboard	P.4
Installing Display Card	P.4
Installing PSU	P.4
Installing 3.5"/2.5" HDD	P.5
Finished	P.5

CASE Legacy V6 User's Manual CASE Legacy V6 User's Manual

# **Specification**

Material	Structure	SGCC Steel			
Material	Panel	ABS / Iron Mesh			
Dimension		250mm x 240mm x 210mm (WxDxH)			
Motherbo	ard	ITX			
Drive Bay	1	4 x 3.5" (3 of them support 2.5")			
Cooling	Front	3 x 60mm fans (optional)			
System	Rear	1 x 140mm fan (built-in)			
Fan Spee	d Controller	3 level of fan speed (optional)			
Expansio	n Slot	2			
CPU Coo	ler	Not Higher Than 65mm			
Display C	ard	Not Longer Than 200mm			
Front I/O	Port	1 x USB3.0, 1 x USB2.0, 1 x MIC, 1 x Audio			
Power Su	ipply	Standard ATX PSII PSU			
Weight		2.6 kg			

## **Disassemble Chart**

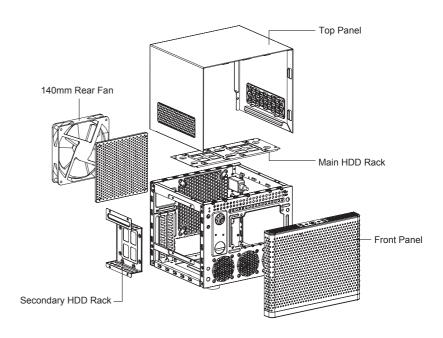

# **Accessory Box**


	For locking 3.5"HDD	12PCS	�	<b>[</b>	For locking 2.5"HDD	8PCS
	For locking motherboard and PSU	12PCS	<b>(</b> }		For locking fan	12PCS
<u>*</u>	For binding cables	5PCS				

## Connectors


USB 2.0 Connection	USB 3.0 Connection	Hard drive LED Connection	
USB+5V	VBUS SSRX1+1	A HOD TED #	
Power Button Connection	HD AUDIO Connection	Power LED Connection	
† POWER SW	PORT 1L  AUG GND PORT 1R  PRESENCE PORT 2R  SENSE1_RETURN PORT 2L  SENSE2_RETURN		

CASE Legacy V6 User's Manual CASE Legacy V6 User's Manual


#### **Installation Guide**

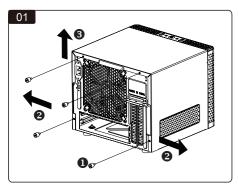


- 1.Unscrew the 4 screws and pull the top panel
- 2. Slightly open both side panels.
- 3.Remove the top panel.

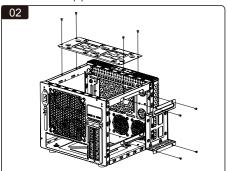


Unscrew the 8 screws, and take out the main and secondary HDD racks.

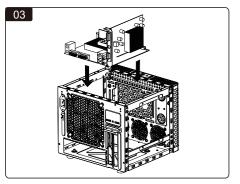


Install the motherboard and display card.

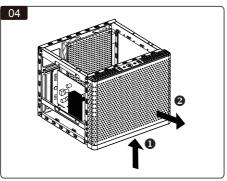


Pull out the front panel from the bottom.

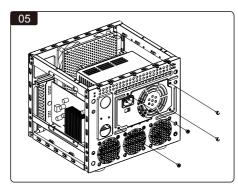


Install the PSU and secure with 4 screws.

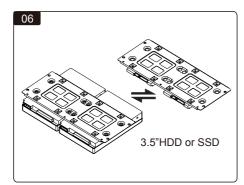


Install either 2x 3.5" or 2x 2.5" HDDs on main HDD rack.

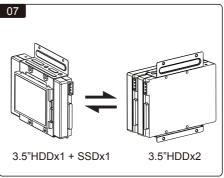


Install either 2x 3.5" or 1x 3.5" & 1x 2.5" HDDs on the secondary HDD rack.

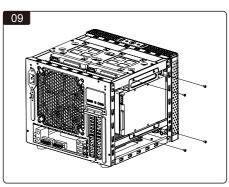

Install the secondary HDD rack.

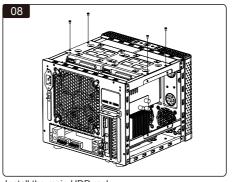

Install the main HDD rack.
(Note: If Dual-PCI-Solt display card is applied, please remove the secondary HDD rack.)

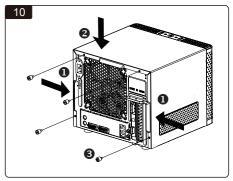

Install the panels step by step.

### Thank you for purchasing a High-Quality Rosewill Product.

Please register your product at: http://www.rosewill.com for complete warranty information and future support for your product.

If you have any question while using our products, please visit our website: **www.rosewill.com** for latest driver & user manual or feel free to contact us.

Support Phone Number: 800-575-9885
Support Email: techsupport@rosewill.com

4 © All rights reserved by Rosewill 5 © All rights reserved by Rosewill