 


# Product Guide

## 7 Hotkeys



Home : Back to home page

E-mail : Start the e-mail application

Search : Search for files

Volume Up : Turn up the volume of the media application

Volume Down : Turn down the volume of the media application

Mute : Toggle on / off the sound

Play / Pause : Toggle play / pause the media application

\* The Play / Pause Key on KB008W keyboard supports OS defaulted Windows Media Player, as well as add-on RealPlayer and PowerDVD.

The Play / Pause Key operates standard Microsoft key code per its IC firmware. This may limit the hotkey operation on some media players such as Winamp, QuickTime, WinDVD, FLV, and VLC.

## Fn Keys

To use the enhanced functions (blue functions), press the Fn key and respective F-Key simultaneously.

### Resolution adjustment




- Fn+F9 : change trackball resolution to 400dpi
- Fn+F10 : change trackball resolution to 800dpi
- Fn+F11 : change trackball resolution to 1200dpi

### Windows MCE function



- Fn+ Esc (MCE)—enter Windows Media Center
- Fn+ F1 (My TV)—open My TV menu
- Fn+ F2 (My Videos)—open My Videos menu
- Fn+ F3 (My Music)—open My Music menu
- Fn+ F4 (My Pictures)—open My Pictures menu
- Fn+ F5 (Record TV)—record a TV program
- Fn+ F6 (DVD)—play DVD disc
- Fn+ F7 (Pre-Track)—skip to the previous track
- Fn+ F8 (Next-Track)—skip to the next track

### Windows MCE function

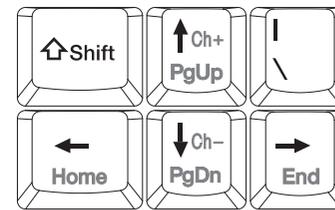

- Fn+↑ (Ch+) : switch to the next channel
- Fn+↓ (CH-) : switch to the previous channel
- Fn+↑ (PgUp) : navigate the page upwards
- Fn+↓ (PgDn) : navigate the page downwards
- Fn+← (Home) : navigate to the top of the page
- Fn+→ (End) : navigate to the end of the page

## Connection Assistance

- (1) The keyboard has already a pre-installed connection set-up. If it does not work, please check if the receiver is plugged into the USB port, batteries are put in right position, and the switch is turned to "on." If the keyboard still does not work, please re-connect the keyboard.
- (2) When the keyboard does not respond smoothly, its batteries may be empty or signal interferences occur. Please change the batteries. If the keyboard is still not responding smoothly, please re-connect the keyboard.

Press shortly the button on the receiver, then press shortly the connect button on the keyboard right away to reset connection.

\*KB008W will lose connection when you press the "Connect" button on the receiver or on the keyboard during usage. Please reset the connection.

## Battery Low

When the "battery low" led lights up, it indicates this keyboard is under-powered. Please change the batteries as soon as possible. The "battery low" status will keep lighting up until the power is exhausted.

\* The two batteries included in the product could not be disposed with normal household waste. Please dispose the exhausted batteries to the recycling center properly.

## Power on / off

Turn the switch to power on / power off. Please turn to power off when not using it, to maximize battery lifetime.

## Caps Lock / Num Lock / Scroll Lock Indicators software download ( optional )

For further convenience, Enermax provide Caps Lock / Num Lock / Scroll Lock Indicators software on [www.enermax.com](http://www.enermax.com) for users who need to download.

Step1. Please download Indicators software on [www.enermax.com](http://www.enermax.com)

Step2. Execute the software

Step3. Indicators will appear in toolbar below your monitor

\* KB008W is without "Num Lock" function.