

My Net™ AC Wi-Fi Bridge

User Manual



WD® Service and Support

Should you encounter a problem, please give us an opportunity to address it before returning this product. Most technical support questions can be answered through our knowledge base or e-mail support service at <http://support.wdc.com>. If the answer is not available or, if you prefer, please contact WD at the best telephone number shown below.

Your product includes 30 days of free telephone support during the warranty period. This 30-day period starts on the date of your first telephone contact with WD technical support. E-mail support is free for the entire warranty period and our extensive knowledge base is available 24/7. To help us keep you informed of new features and services, remember to register your product online at <http://register.wdc.com>.

Accessing Online Support

Visit our product support website at <http://support.wdc.com> and choose from these topics:

- **Downloads** - Download drivers, software, and updates for your WD product.
- **Registration** - Register your WD product to get the latest updates and special offers.
- **Warranty & RMA Services** - Get Warranty, Product Replacement (RMA), RMA Status, and Data Recovery Information.
- **Knowledge Base** - Search by keyword, phrase, or answer ID.
- **Installation** - Get online installation help for your WD product or software.
- **WD Community** – Share your thoughts and connect with other users.

Contacting WD Technical Support

When contacting WD for support, have your WD product serial number, system hardware, and system software versions available.

United States/North America	
English/Spanish	855.842.5370
Asia Pacific	
Australia	00 +80085584253
Hong Kong/Singapore/Thailand	0011 +80085584253
Japan	001 +80085584253
Europe	
Finland	001/0033/0061 +80085584253
Middle East	
Africa	
South Africa	00 +80085584253
Africa	
Africa	

Go to <http://support.wdc.com/contact> for a list of additional phone support numbers by region.

Table of Contents

WD® Service and Support	ii
1 Important User Information	1
Important Safety Instructions	1
Recording Your WD Product Information	2
Registering Your WD Product	2
2 Product Overview	3
Introduction	3
Features	3
Package Contents	4
Components	5
3 Getting Started	8
Setting up the Wi-Fi Bridge	8
Connecting to the Router Using the WPS Button	10
Connecting to the Router Manually	10
4 Basic Settings	16
Opening My Dashboard After Setup	16
Reviewing Current Settings	17
Configuring Wireless Settings	18
5 Advanced Settings	19
Opening and Closing the Advanced Settings Screen	19
Configuring LAN Settings	19
Configuring Administrative Settings	21
6 Troubleshooting	27
7 Regulatory and Warranty Information	29
Warranty Information (All Regions Except Australia/New Zealand)	33
Warranty Information (Australia/New Zealand only)	34
GNU General Public License (“GPL”)	35
Appendix: Technical Specifications	36
Index	37

1

Important User Information

Important Safety Instructions

This device is designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated into this unit will protect you if you observe the following instructions for installation, use, and servicing.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Carefully read and follow the Quick Install Guide and User Manual.
- Do not operate this device outside the temperature range of 5°C–35°C (41°F–95°F).
- Do not drop or shake the device.
- Do not move the device when it is powered on.
- Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon them or against them.
- Do not overload wall outlets.

For additional safety information, refer to www.wdc.com.

Recording Your WD Product Information

In the following table, write the serial and model numbers of your new WD product. You can find this information on the label on the bottom of the device. You should also note the date of purchase. This information may be required when requesting technical support.

Serial Number:
Model Number:
Purchase Date:
System and Software Notes:

Registering Your WD Product

Your WD product includes 30 days of free technical support during the applicable warranty period for your product. The 30-day period commences on the date of your first telephone contact with WD technical support. Register your WD product online at <http://register.wdc.com>.

2

Product Overview

Thank you for purchasing the My Net™ AC Wi-Fi Bridge. This user manual provides step-by-step instructions for installing and using your new bridge. For the latest WD product information and news, visit our website at www.wdc.com.

This chapter contains the following topics:

[Features](#)
[Package Contents](#)
[Components](#)

Introduction

The My Net™ AC Wi-Fi Bridge provides an Ethernet connection to remote devices via a wireless connection at AC speeds.

Features

The table below displays the basic specifications:

Note: For more detailed technical specifications, see Appendix A.

Feature	Description
Wireless link speed	5 GHz band: 1300 Mbps
Protocol(s)	802.11 ac, n, a
Ethernet ports	(4) Gigabit Ethernet

Next generation Wi-Fi — Bring powerful, next generation AC Wi-Fi to your home network and enjoy surfing, streaming, and sharing at a new level of Wi-Fi speed.

Simple push-button set up — Easy to set up with a push of two buttons (WPS) for hassle-free connection.

4 Gigabit ports — Convert up to four Ethernet-enabled devices like smart TVs, DVRs, Blu-ray™ Disc players, game consoles, and more to wireless AC.

Package Contents

In addition to your My Net AC Wi-Fi Bridge, the package contains:


- Network (Ethernet) cable
- AC power adapter
- Quick Install Guide



My Net AC Wi-Fi Bridge



AC power adapter

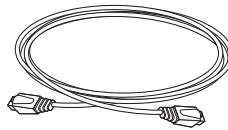

Ethernet cable



Quick Install Guide

Accessories

For U.S. residents, visit www.shopwd.com to view additional accessories available for your My Net AC Wi-Fi Bridge. For users outside the U.S., visit <http://support.wdc.com/>.


AC Power Adapters

The AC power adapter varies, depending on your location. Some locations do not require a power plug clip. Units sold in those locations have a fixed power plug. Refer to the illustrations below.



Installing

Removing

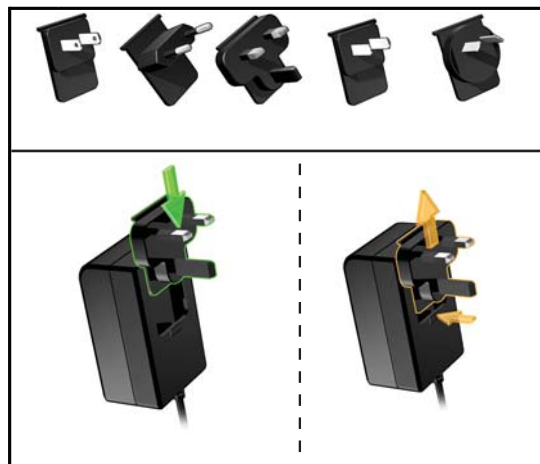

Installing

Removing

Components

Front Panel




- Power LED
- Wi-Fi Protected Setup (WPS) LED
- Internet LED
- Wireless LED

Front LED indicators

LED	Description
Power	Steady when the bridge is powered on and operational; flashes slowly during firmware upgrades.
Wi-Fi Protected Setup (WPS)	<p>When connecting the bridge to a wireless device (e.g., a router) on your network, the LED indicates the status of WPS:</p> <ul style="list-style-type: none"> • When WPS is connecting a wireless device, the light blinks slowly. • If an error occurs during setup, the light blinks quickly. • After setup, the light is solid when WPS pairing is successful. A few minutes later, the light turns off and remains off under normal operation.
Internet	Lit when Internet connection is active.
Wireless	Lit when wireless connection is active.

Side Panel

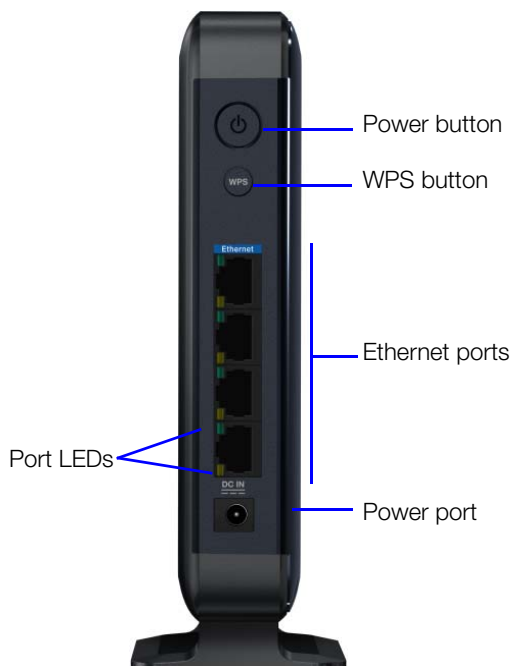


Side components

Component	Description
Power button	Press to turn the bridge on. Press again to turn it off.
WPS (Wi-Fi Protected Setup) button	Press this button to establish an initial connection between a WPS-enabled router and the bridge.
Ethernet (LAN) port(s)	Use Ethernet cables to connect these ports to wired network devices to these ports.
Power port	Use the included AC power adapter to connect this port to the power source.

Port LED indicators

Component	LED	Description
Ethernet port	Link LED (Green)	Steady on when a cable connects the port to another Ethernet port.
	Activity LED (Yellow)	Blinks to indicate network activity of the Ethernet port.

Back

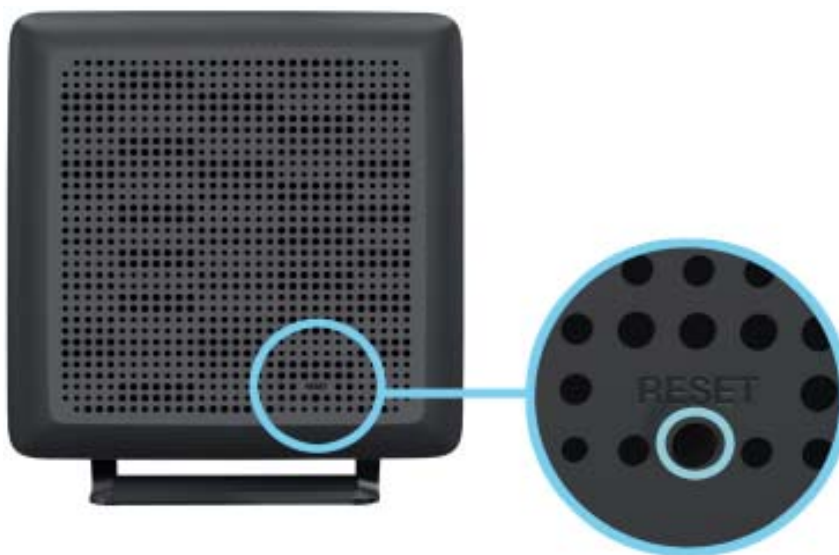

Component	Description
Reset button	To reset the bridge to factory default settings, press the Reset button for at least 8 seconds and release. The power LED flashes on the bridge, indicating a reset/reboot. This LED is solid when the reset/reboot has been completed.

3

Getting Started

This chapter contains the following topics:

- [Setting up the Wi-Fi Bridge](#)
- [Connecting to the Router Using the WPS Button](#)
- [Connecting to the Router Manually](#)

Setting up the Wi-Fi Bridge

1. Make sure your router supports 5 GHz. It may also be referred to as a dual-band router or concurrent dual-band router. The 5 GHz band helps ensure the highest speeds and seamless entertainment traffic.
2. Connect the Wi-Fi bridge to a power source and press the **Power** button. The power LED on the front of the bridge blinks during boot-up and becomes solid once the process is complete.



3. Connect up to four entertainment and other wired network devices to the bridge.



- 4.

IF your router ...

Has a WPS or  button,

Does not have a WPS or  button or
WPS is disabled

THEN continue with ...

"Connecting to the Router Using the
WPS Button" on page 10.

**"Connecting to the Router
Manually" on page 10.**

Connecting to the Router Using the WPS Button

1. Press the router's **WPS** button and the Wi-Fi bridge's **WPS** button within a period of two minutes.



- The WPS LED blinks while the connection is being established.
- When the wireless connection between the router and the bridge is established, the wireless and Internet LEDs are solid.

The router and bridge are connected wirelessly.



2. Congratulations! You can start using the Wi-Fi bridge in conjunction with the router, or if you want to configure the bridge's settings, proceed to "Basic Settings" on page 16.

Connecting to the Router Manually


There are cases requiring you to set up the bridge manually, for example, when:

- Wi-Fi Protected Setup (WPS) is disabled.
- The router does not support WPS.
- Some interference is preventing WPS from working.
- SSID broadcast is disabled.
- WPA only is enabled.
- WEP is enabled.

1. Connect the bridge directly to your computer using an Ethernet cable,



2. Launch a web browser. If the Wi-Fi bridge's Welcome screen does not appear automatically, enter **http://myacbridge**, **http://myacbridge.local** (Mac computers), or **http://192.168.1.240** in the address field to display it.

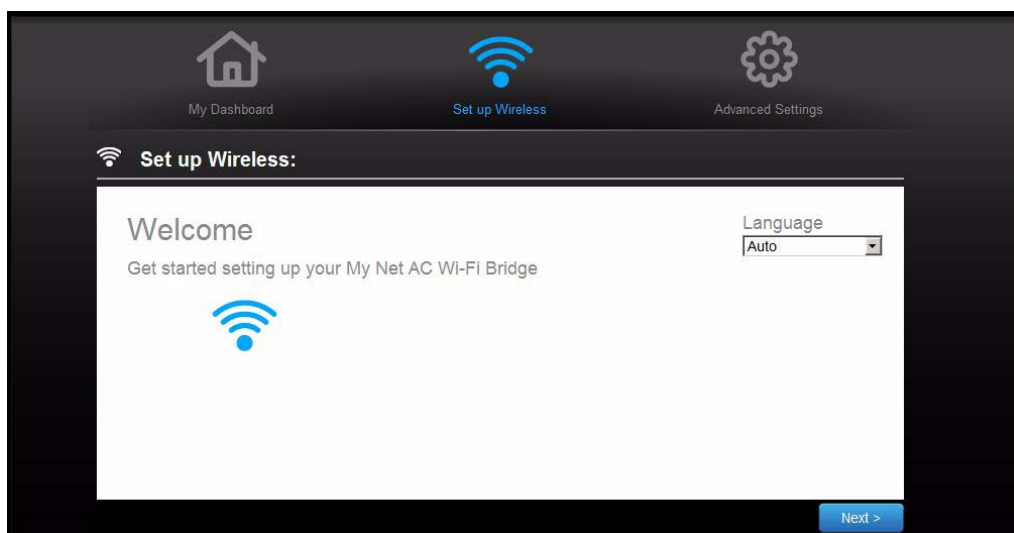

3. On the Welcome screen, select a language from the **Language** drop-down list (upper right of screen). The language defaults to Auto, the language setting on the browser.

- Click **Next** to display the Select an available network screen. After a few seconds, the screen displays a list of networks.



- Select a **Network Name** (or click anywhere in its row) and click **Connect**. If you do not see your router's name in the list, enter it in the **Use another network** field at the bottom of the screen and click **Connect**.

The Secure Network Connection screen displays.

Note: For an open (unsecured) system, this screen does not appear.



6. **If the router does not support WPS, or WPS is not enabled**, the following screen displays:



Enter the network password and click **Enter**. Continue to step 10.

7. **If the router supports WPS**, the following screen displays:




You have two options for configuring the Wi-Fi bridge's security:

- Enter the router's password and click **Enter**. Continue to step 10.
 - Use WPS. Continue to step 8.
8. Click **Use WPS** to display the Secure Network Connection Wi-Fi Protected Setup screen:

9. You have the following options:



- To use WPS buttons, press the **WPS** button on the router and click the blue **WPS** button on the screen within a two-minute period.
 - If your router has an 8-digit security PIN, enter it and click **Connect** (to the right of the PIN).
 - If your router requests a PIN, at your router's prompt, enter the PIN displayed at the bottom of the screen. Click **Connect** (to the right of the displayed PIN) on the Wi-Fi bridge's screen.
10. Wait for the connection to be made. When a connection verification screen displays, click **Next**.

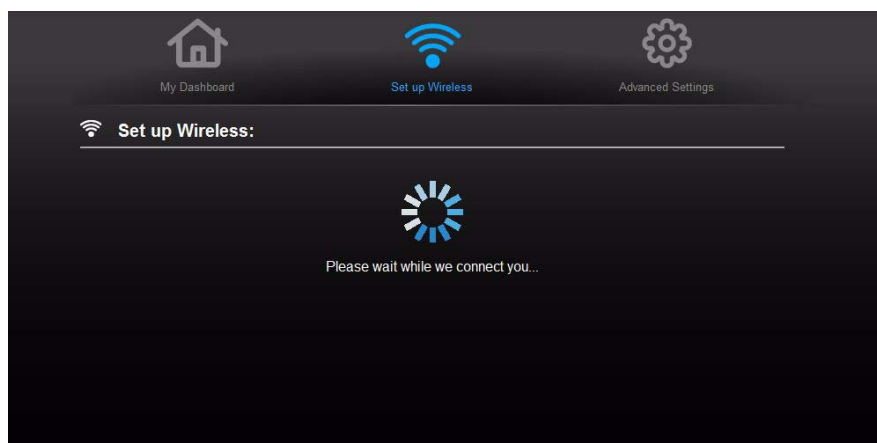

The Setup Complete screen displays.



You have the following options:

IF you want to...	THEN...
Ensure that you will receive important product information and firmware update notices,	Click Register Your Wireless Bridge and continue with “Registering the Wi-Fi Bridge” on page 25.
Configure the wireless bridge using the My Dashboard interface,	Click I’m done and continue with “Basic Settings” on page 16.
Start using the wireless bridge with no further configuration,	Close the window.

4

Basic Settings

This chapter contains the following topics:

- [Opening My Dashboard After Setup](#)
- [Reviewing Current Settings](#)
- [Configuring Wireless Settings](#)


Opening My Dashboard After Setup

To open the Wi-Fi bridge dashboard after initial configuration:

1. Type **http://myacbridge** or **http://myacbridge.local** (Mac computers) in the address field of your browser. The login screen displays:





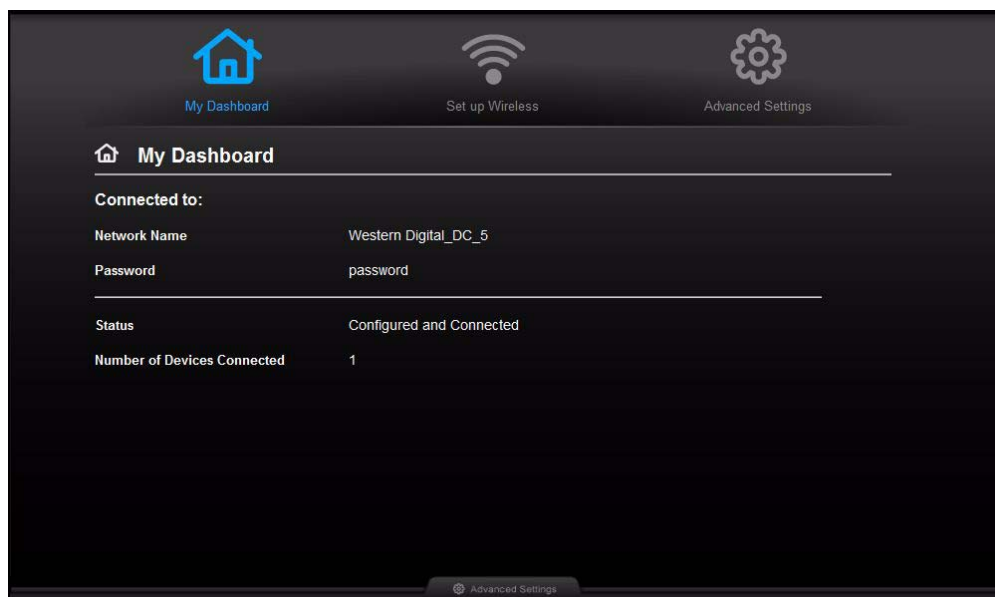

2. Enter the username (default value is **admin**) and password (default value is lowercase **password**) and click **Submit**. The My Dashboard home screen displays:



Connected to:	
Network Name	Western Digital_DC_5
Password	password
Status	Configured and Connected
Number of Devices Connected	1


Note: The settings have values resulting from the initial setup.

The icons at the top of the screen open screens and wizards for performing important tasks:

Icon	Name	Actions	See ...
	My Dashboard	Review and change current settings.	"Basic Settings" on page 16.
	Set up Wireless	Configure wireless settings such as network name and security.	"Configuring Wireless Settings" on page 18.
	Advanced Settings	Configure system administration and advanced wireless settings.	"Advanced Settings" on page 19.
	Alert	Click to display recent alerts about new firmware and network issues and shortcuts to important settings.	

Reviewing Current Settings

The My Dashboard's home screen is a simple snapshot of the Wi-Fi bridge's configuration with the most essential information in one screen. It includes summary information for wireless settings and status.

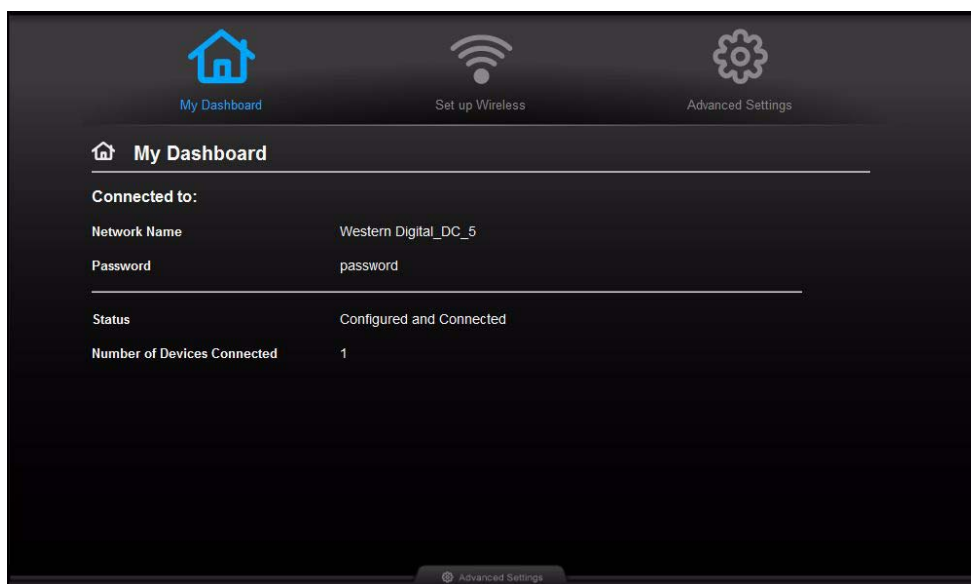

Review the following settings:

Setting	Description
Network Name	Unique identifier of the wireless network.
Password	Password for accessing the wireless network.
Status	Status can be Unconfigured, Configured and Connected, or Unconnected.
Number of Devices Connected	Number of devices connected to the Wi-Fi bridge by Ethernet cables.

Configuring Wireless Settings

1. To reconfigure wireless settings, click the **Set Up Wireless** icon.
2. Follow the instructions starting with step 3 in “Connecting to the Router Manually” on page 10.

5

Advanced Settings


This chapter contains the following topics:

- [Opening and Closing the Advanced Settings Screen](#)
- [Configuring LAN Settings](#)
- [Configuring Administrative Settings](#)

Opening and Closing the Advanced Settings Screen

To open the Advanced Settings screen:

1. To display the Advanced Settings screen, click the **Advanced Settings** icon. This screen provides the **LAN** and **Admin** icons.

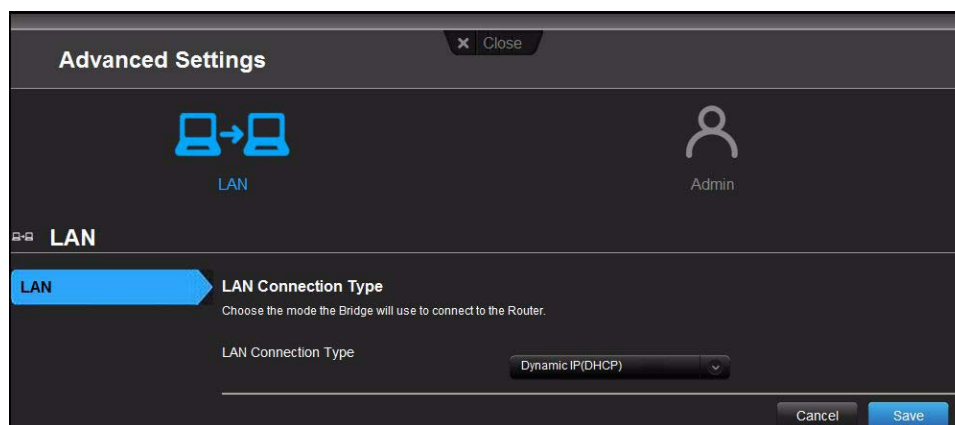


2. To close any advanced setting screen and return to the My Dashboard home screen, click **Close** at the very top of the screen.

Configuring LAN Settings

The **LAN** icon enables you to view the current Internet connection information and change the LAN Connection Type.

To change the LAN Connection Type:

1. On the Advanced Settings screen, click the **LAN** icon to display the LAN screen.

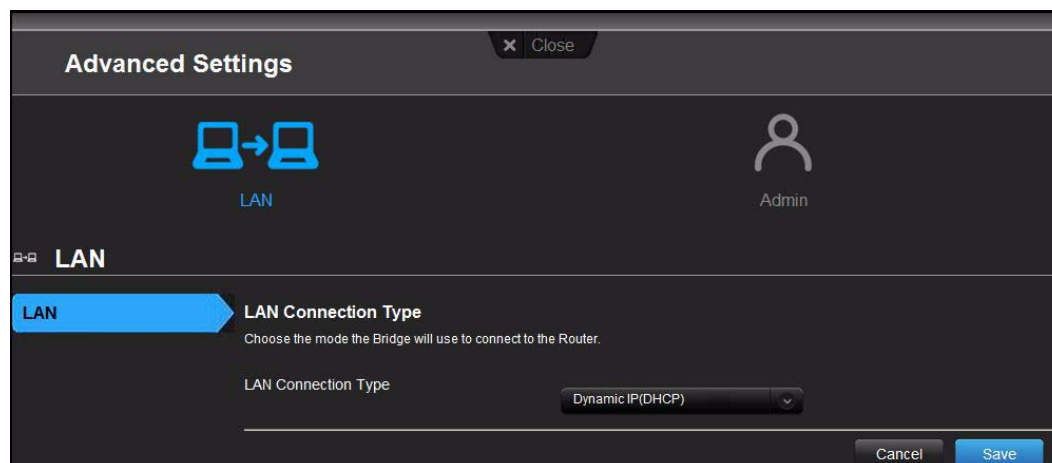

2. To change from Dynamic IP (DHCP), the default setting, to Static IP, select **Static IP** from the **LAN Connection Type** drop-down list. The screen displays additional settings.

The screenshot shows the 'Advanced Settings' window with a 'Close' button in the top right. Below the title bar, there are two icons: 'LAN' (two computers connected) and 'Admin' (a person icon). The 'LAN' section is active, showing a 'LAN Connection Type' dropdown menu set to 'Static IP'. Below this, there are input fields for 'IP Address' (192.168.1.139), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.1.1), 'Primary DNS Server', and 'Secondary DNS Server'. At the bottom right, there are 'Cancel' and 'Save' buttons.

3. Review and complete the settings:

Setting	Description
LAN IP address	IP address of the bridge. The IP address should be on the same network as your existing router.
Subnet Mask	The subnet mask is used to control how many subnetworks can exist in your local network.
Default Gateway	IP address of the router to which this device is connected wirelessly.
Primary/Secondary DNS Server	Your ISP configures and maintains the primary and secondary DNS Server addresses. You can find them on your main router or by contacting your ISP.

4. Click **Save**.

Configuring Administrative Settings


The **Admin** icon provides screens for registering the Wi-Fi bridge, changing the administrative password, updating the Wi-Fi bridge's firmware, restoring factory settings, saving and restoring settings, and rebooting the Wi-Fi bridge.

Changing the Administrator Password

The admin account manages the Wi-Fi bridge interface. The default password is **password**. To keep your Wi-Fi bridge secure, it is a best practice to create a new password.

To change the administrator password:

1. Click the **Admin** icon to display the Admin/Administrator screen.

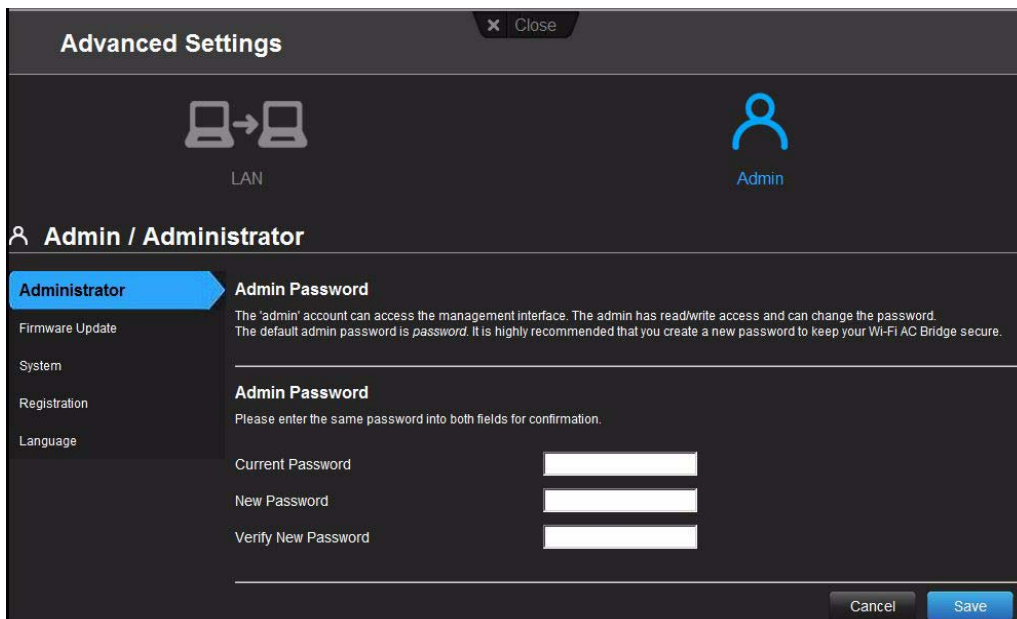

The screenshot shows the 'Advanced Settings' window with a 'Close' button in the top right. Below the title bar, there are two icons: 'LAN' (two laptops connected by an arrow) and 'Admin' (a person icon). The 'Admin / Administrator' section is active, showing a sidebar with 'Administrator' selected. The main content area is titled 'Admin Password' and contains the following text: 'The 'admin' account can access the management interface. The admin has read/write access and can change the password. The default admin password is password. It is highly recommended that you create a new password to keep your Wi-Fi AC Bridge secure.' Below this, there is a sub-section 'Admin Password' with the instruction 'Please enter the same password into both fields for confirmation.' There are three input fields: 'Current Password', 'New Password', and 'Verify New Password'. At the bottom right, there are 'Cancel' and 'Save' buttons.


2. Enter the existing administrator password in the **Current Password** field and the new administrator password in the **New Password** and **Verify Password** fields.
3. Click **Save**.

Updating the Wi-Fi Bridge's Firmware

WARNING! Do not disconnect or turn off the Wi-Fi bridge while the update is in process.

To check for Wi-Fi bridge firmware updates and upload new firmware:

1. On the Admin screen, click the **Firmware Update** tab on the left:

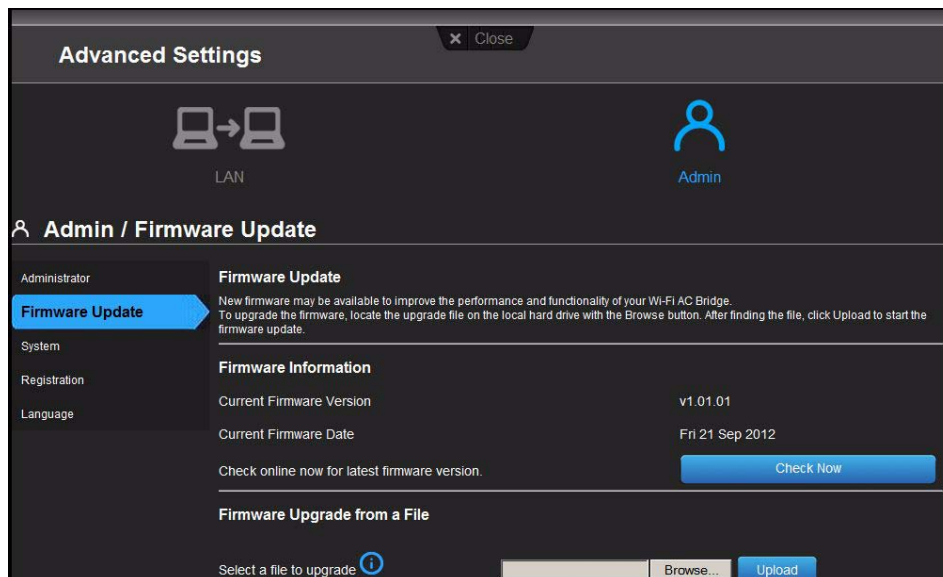

To check for the latest firmware version:

1. Click **Check Now**. The Wi-Fi bridge searches the WD website for a new firmware file. If a new file exists, the latest firmware version and an **Update Now** button appear.
2. Click **Update Now** to begin the firmware update. A message tells you how long the upload will take. Please wait while the firmware update is taking place.


To update from a file:

1. Locate the firmware file on the WD Support site at <http://support.wdc.com> and download it to your computer.
2. On the Wi-Fi bridge screen, click **Browse** and locate the firmware file you saved.
3. Click **Open**. The file name displays in the browser field on the Wi-Fi bridge screen.
4. Click **Upload**. A message indicates how long the upload will take. Please wait while the firmware update is taking place.

Saving and Restoring Your Wi-Fi Bridge's Settings

To save your settings:

1. On the **Admin** screen, click the **System** tab on the left of the screen to display the Admin / System screen:

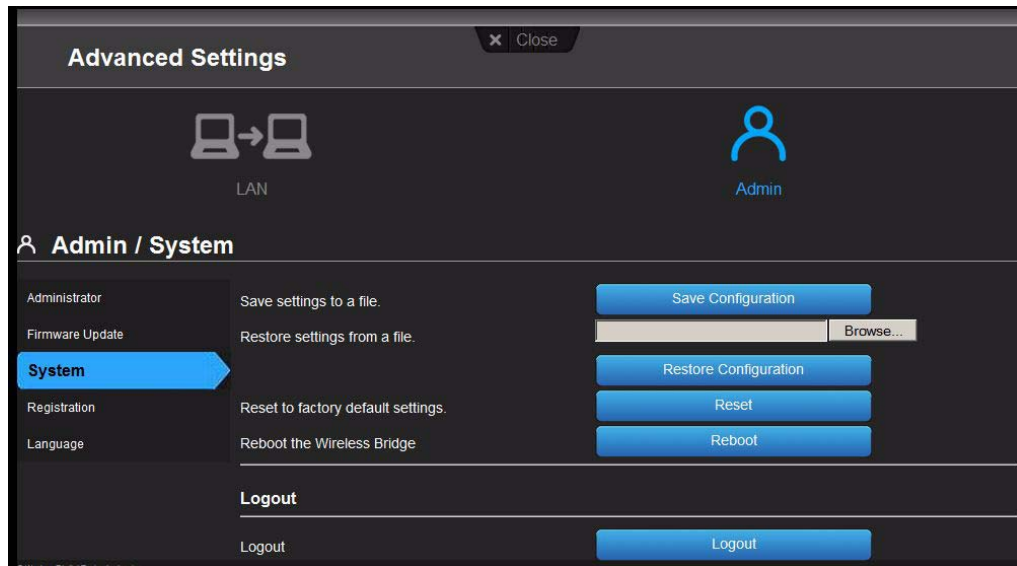

2. Click **Save Configuration**.
3. Name and save the configuration file.

To restore your Wi-Fi bridge's settings:

1. Browse to locate the saved configuration file.
2. Click **Restore Configuration**.

Resetting the Wi-Fi Bridge to Factory Defaults

You may want to reset the Wi-Fi bridge to how it was when you bought it.


Important: After a reset to factory defaults, you need to reconfigure the wireless connection, and optionally, other settings.

You have two options for restoring factory defaults: through the user interface or through the **Reset** button on the back of the Wi-Fi bridge.

WARNING! Do not reboot the Wi-Fi bridge while the reset is taking place. The Wi-Fi bridge reboots as part of the reset process.

Using the Dashboard

1. On the Admin screen, click the **System** tab on the left to display the Admin / System screen:

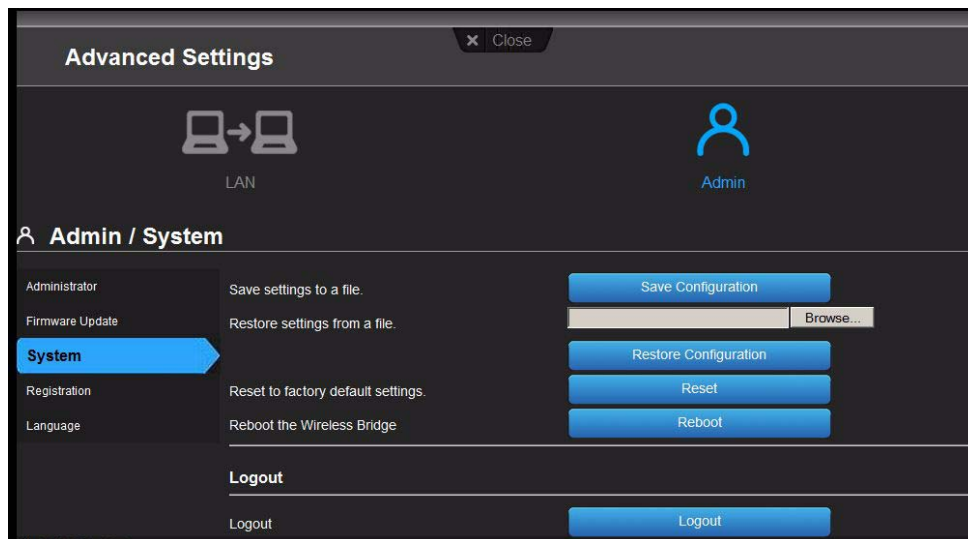


2. Click **Reset** to the right of **Reset to Factory Default Settings**.
3. When a confirmation message displays, click **OK**.
4. Wait until the Wi-Fi bridge reboots before using it.

Using the Reset button

To reset the Wi-Fi bridge manually:

1. Press and hold the **Reset** button on the bottom of the Wi-Fi bridge for at least 8 seconds.

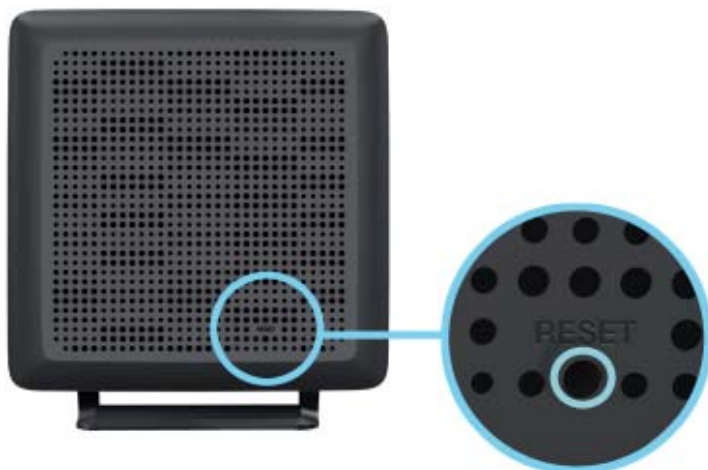

When the reset finishes, the Power LED blinks.

2. Wait until the reset finishes before using the Wi-Fi bridge.

Rebooting

You can reboot the Wi-Fi bridge two ways. If you are physically close to it, just press the **On/Off** button on the Wi-Fi bridge. If you cannot easily press the button:

1. Click the **Advanced Settings** icon and then the **System** tab on the left of the screen.
2. Click **Reboot**.

Logging Out

On the Admin / System screen, click **Logout**.

Registering the Wi-Fi Bridge

Register your router to receive software notifications and customer support.

1. On the Admin screen, click the **Registration** tab on the left of the screen to display the Admin / Registration screen.


2. Enter your name and email address, and click **Register**.

Selecting a Language

To change the language of the Wi-Fi bridge's screens:

Note: Auto represents the language of the browser.

1. On the Admin screen, click **Language** on the left to display the Admin / Language screen:

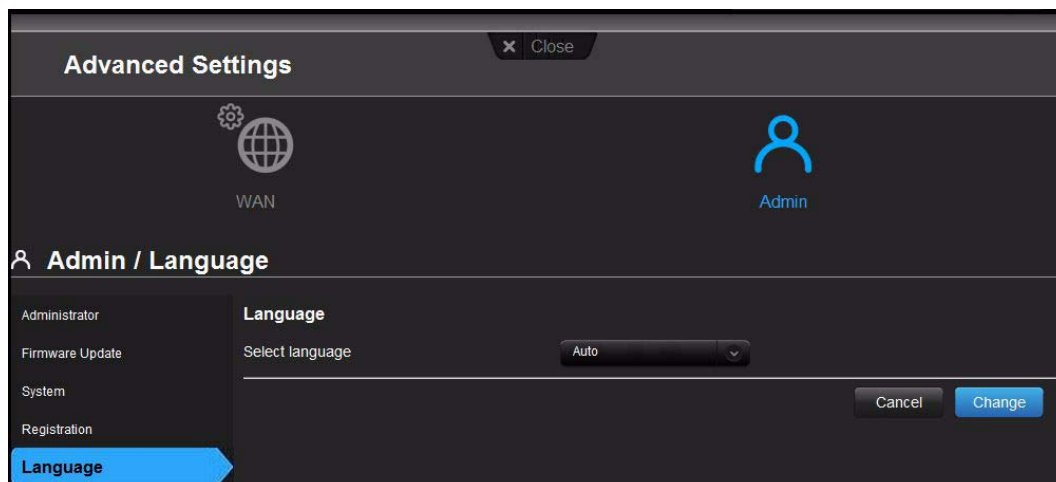

2. Select a language from the **Select language** drop-down list.
3. Click **Change**.

6

Troubleshooting

Problem/Question	Solution
The power LED does not illuminate.	<ol style="list-style-type: none"> 1. Push the power button on the Wi-Fi bridge to make sure the bridge is powered on. 2. Make sure that the power cord is connected to the Wi-Fi bridge correctly. 3. Make sure that the electrical outlet is working properly. To do this, plug a different electronic device into the outlet and try to power it on. 4. Make sure that you are using the AC adapter provided with the Wi-Fi bridge.
Computers are unable to access the Internet.	<ol style="list-style-type: none"> 1. Make sure that the Wi-Fi bridge is powered on. The power LED should be solid and not flashing. 2. Make sure the cable connections are set up correctly and are firmly in place. 3. Power off and power on your modem/ router, Wi-Fi bridge, and computer. 4. Make sure the computer is connected to the Wi-Fi bridge physically. 5. Make sure you do not have a cable connecting the Wi-Fi bridge to the router. 6. Make sure the wireless and Internet LEDs are solid on the device.
All front panel LEDs flash continuously.	<ol style="list-style-type: none"> 1. Relocate your Wi-Fi bridge to a place that has good ventilation. 2. Turn off your Wi-Fi bridge, and set it aside for 15 to 20 minutes until it cools down. Turn your Wi-Fi bridge back on to resume operation.
The Wi-Fi bridge cannot connect to the router.	<ol style="list-style-type: none"> 1. Ensure the Wi-Fi bridge is powered on 2. If you are using a WPS method, make sure the router supports WPS. 3. If WPS fails, connect using the manual method described on page 10. 4. Make sure your router supports 5 GHz clients. 5. If all of these solutions fail, reset the Wi-Fi bridge and try again.
How do I reset the Wi-Fi bridge?	For a soft reset using My Dashboard or a hard reset, using the Reset button, see “Resetting the Wi-Fi Bridge to Factory Defaults” on page 23.
How do I change wireless settings or connect a new router?	<ul style="list-style-type: none"> • If the router has a WPS button, and WPS is enabled, follow the steps in “Connecting to the Router Using the WPS Button” on page 10. • If the router does not have a WPS button, or WPS is disabled, reset the Wi-Fi bridge to factory defaults and follow the steps in “Connecting to the Router Manually” on page 10.

Problem/Question	Solution
What is the IP address of the Wi-Fi bridge after it is configured?	<p>The IP address of the Wi-Fi bridge depends on the IP address of the router or access point to which the Wi-Fi bridge is connected.</p> <p>You may be able to connect to the Wi-Fi bridge by typing http://myacbridge or http://myacbridge.local (Mac computers) in the address field of your browser.</p> <p>To determine the IP address:</p> <ol style="list-style-type: none">1. Check the client table on the router's or access point's web UI. The web UI varies depending on the model of the router.2. Locate the Wi-Fi bridge and its IP address on the table.

If you continue to have the problem, contact Technical Support at <http://support.wdc.com>.

7

Regulatory and Warranty Information

This chapter contains the following topics:

[Federal Communication Commission Interference Statement](#)
[Warranty Information \(All Regions Except Australia/New Zealand\)](#)
[Warranty Information \(Australia/New Zealand only\)](#)
[GNU General Public License \("GPL"\)](#)

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Regulatory Information/Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

For operation within 5.15 ~ 5.25 GHz frequency range, it is restricted to indoor environment. This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

CAUTION: To comply with FCC RF exposure compliance requirements, the antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: The country code selection is for non-US models only and is not available for all US models. Per FCC regulations, all WiFi products marketed in the US must be fixed to US operation channels only.

Industry Canada (IC)

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

CAUTION! The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

AVERTISSEMENT! Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

Radiation Exposure Statement: This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Déclaration d'exposition aux radiations: Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

ICES-003/NMB-003 Statement

Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada.

This device complies with Canadian ICES-003 Class B.

This product is intended to be supplied by a listed limited power source, double insulated, or direct plug-in power unit marked "Class 2."

Safety Compliance

Approved for US and Canada. CAN/CSA-C22.2 No. 60950-1, UL 60950-1: Safety of Information Technology Equipment.

Approuvé pour les États-Unis et le Canada. CAN/CSA-C22.2 No. 60950-1, UL 60950-1: Sûreté d'équipement de technologie de l'information.

This device is only for use with the compatible UL Listed AC adapter.

Cet appareil n'est destiné qu'à des adaptateurs compatibles marqués "UL Listed".

以下警語適用台灣地區

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

For Mexico Only

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

For Brazil Only

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não causar interferência a sistema operando em caráter primário.

CE Compliance for Europe

Operation of this device is subjected to the following National regulations and may be prohibited to use if certain restriction should be applied.

Marking by the CE symbol indicates compliance of this system to the applicable Council Directives of the European Union, including the EMC Directives (2004/108/EC), (1999/5/EC), the Low Voltage Directive (2006/95/EC), and EuP Directive (2005/32/EC). A "Declaration of Conformity" in accordance with the applicable directives has been made and is on file at Western Digital Europe.

Die Kennzeichnung mit dem CE-Symbol zeigt an, dass dieses System die anwendbaren Richtlinien der Europäischen Union erfüllt, einschließlich der EMV-Richtlinien (2004/108/EG), (1999/5/EG), der Niederspannungsrichtlinie (2006/95/EG) und der Richtlinie (2005/32/EG) des Europäischen Parlaments. Eine „Konformitätserklärung“ gemäß den anwendbaren Richtlinien wurde abgegeben und kann bei Western Digital Europe eingesehen werden.

Le symbole CE sur l'appareil indique la conformité de cet appareil avec les directives applicables du Conseil de l'Union Européenne, dont les directives EMC (2004/108/EC), (1999/5/EC), la directive sur les limites de tension (2006/95/EC) et la directive EuP (2005/32/EC), si applicable. Une « déclaration de conformité » conforme aux directives applicables a été effectuée et est consultable chez Western Digital Europe.

Il marchio CE indica la conformità del sistema alle direttive applicabili del Consiglio dell'Unione europea, tra cui le Direttive EMC (2004/108/CE), (1999/5/CE), la Direttiva Bassa Tensione (2006/95/CE), e la Direttiva EuP (2005/32/CE). Una "Dichiarazione di conformità" redatta in base alle direttive vigenti è disponibile presso Western Digital Europe.

La marca con el símbolo CE indica el cumplimiento de este sistema de las Directivas del Consejo de la Unión Europea correspondientes, incluidas las directivas EMC (2004/108/EC) y (1999/5/EC), la Directiva de bajo voltaje (2006/95/CE) y la Directiva EuP (2005/32/EC). Se ha realizado una "Declaración de conformidad" de acuerdo con las directivas aplicables y se encuentra archivada en Western Digital Europe.

CE-märkningen innebär att detta system uppfyller Europeiska Unionens tillämpliga rådsdirektiv, inklusive EMC-direktivet (2004/108/EC), (1999/5/EC), lågspänningsdirektivet

(2006/95/EC) och EuP-direktivet (2005/32/EC). En "Konformitetsdeklaration" i enlighet med gällande direktiv har gjorts och finns arkiverad hos Western Digital Europe.

Merking med CE-symbolet indikerer at dette systemet samsvarer med gjeldende direktiver (council directives) for EU, inkludert EMC-direktiv (2004/108/EF), (1999/5/EF), Lavspenningsdirektiv (2006/95/EF) og EuP-direktiv (2005/32/EF). En "Samsvarserklæring" i henhold til gjeldende direktiver har blitt opprettet og er i Western Digital Europas arkiver.

CE-merkintä osoittaa tämän järjestelmän yhdenmukaisuuden sovellettavissa olevien Euroopan yhteisön neuvoston direktiivien kanssa, mukaan lukien EMC-direktiivi (2004/108/EC), (1999/5/EC), alijännitedirektiivi (2006/95/EC) sekä EuP-direktiivi (2005/32/EC). "Noudattamisjulistus" on jätetty asiaankuuluvien direktiivien mukaisesti, ja se on tallessa Western Digital Europessa.

Mærkning med CE-symbolet angiver at systemet overholder Europaparlamentets og Rådets direktiver, herunder EMC-direktiverne (elektromagnetisk kompatibilitet) (2004/108/EC), (1999/5/EC) og lavspændingsdirektivet (2006/95/EC) og EuP-direktivet 2005/32/EC. En "Declaration of Conformity" (overensstemmelsesattestering) i henhold til gældende direktiver er afgivet og opbevares hos Western Digital Europe.

Маркировка символом CE свидетельствует о соответствии настоящей системы положениям применимых директив Совета Европейского Союза, в том числе директив об электромагнитной совместимости (2004/108/EC, 1999/5/EC), директивы о низковольтном оборудовании (2006/95/EC) и директивы об устройствах, использующих электроэнергию (2005/32/EC). Заявление о соответствии положениям применимых директив, сделанное компанией Western Digital, находится в архиве её европейского подразделения.

Η σήμανση με το σύμβολο CE υποδεικνύει ότι το σύστημα αυτό συμμορφώνεται με τις ισχύουσες οδηγίες του Συμβουλίου της Ευρωπαϊκής Ένωσης, συμπεριλαμβανομένων των οδηγιών περί ηλεκτρομαγνητικής συμβατότητας (2004/108/ΕΚ), (1999/5/ΕΚ), της οδηγίας περί χαμηλής τάσης (2006/95/ΕΚ) και της οδηγίας του Ευρωπαϊκού Κοινοβουλίου (2005/32/ΕΚ). Έχει πραγματοποιηθεί μία «Δήλωση συμμόρφωσης», σύμφωνα με τις ισχύουσες οδηγίες και τηρείται στα αρχεία της Western Digital Ευρώπης.

يشير التميز بوضع الرمز CE إلى توافق هذا النظام مع توجيهات المجلس القابلة للتطبيق والخاصة بالاتحاد الأوروبي، بما في ذلك توجيهات التوافقية الكهرومغناطيسية (EMC) (2004/108/EC) وتوجيهات الجهد الكهربائي المنخفض (2006/95/EC) وتم وضع "إعلان المطابقة" وفقًا للتوجيهات القابلة للتطبيق وهو موجود في ملف على Western Digital Europe.

Environmental Compliance (China)

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
机壳/机箱	X	0	0	0	0	0
电路板组合 / 板卡	X	0	0	0	0	0
电源变压器 / 电源供应器	X	0	0	0	0	0
硬盘	X	0	0	0	0	0

0: 代表此种部件的所有均质材料中所含的该种有毒有害物质均低于中华人民共和国信息产业部所颁布的《电子信息产品中有毒有害物质的限量要求》(SJ/T 11363-2006) 规定的限量。
X: 代表此种部件所用的均质材料中, 至少有一类材料其所含的有毒有害物质高于中华人民共和国信息产业部所颁布的《电子信息产品中有毒有害物质的限量要求》(SJ/T 11363-2006) 规定的限量

除非产品上另有标记, 所有内附产品及其部件的‘环保使用期限’均由此显示的符号表示。此环保使用期限只适用于产品手册中所规定的使用条件。
(在此表中, 企业可能需要根据实际情况对标记“X”的项目进行进一步的技术性解释。)



Warranty Information (All Regions Except Australia/New Zealand)

Limited Warranty

WD warrants that the Product, in the course of its normal use, will for the term defined below, be free from defects in material and workmanship and will conform to WD's specification therefor. The term of your limited warranty depends on the country in which your Product was purchased. The term of your limited warranty is for 1 year in the North, South and Central America region, 2 years in the Europe, the Middle East and Africa region, and 3 years in the Asia Pacific region, unless otherwise required by law. The term of your limited warranty period shall commence on the purchase date appearing on your purchase receipt. WD may at its discretion make extended warranties available for purchase. WD shall have no liability for any Product returned if WD determines that the Product was stolen from WD or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures, unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at <http://support.wdc.com>), accident or mishandling while in the possession of someone other than WD. Subject to the limitations specified above, your sole and exclusive warranty shall be, during the period of warranty specified above and at WD's option, the repair or replacement of the Product with an equivalent or better Product. The foregoing warranty of WD shall extend to repaired or replaced Products for the balance of the applicable period of the original warranty or ninety (90) days from the date of shipment of a repaired or replaced Product, whichever is longer.

The foregoing limited warranty is WD's sole warranty and is applicable only to products sold as new. The remedies provided herein are in lieu of a) any and all other remedies and warranties, whether expressed, implied or statutory, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose, and b) any and all obligations and liabilities of WD for damages including, but not limited to accidental, consequential, or special damages, or any financial loss, lost profits or expenses, or lost data arising out of or in connection with the purchase, use, or performance of the Product, even if WD has been advised of the possibility of such damages. In the United States, some states do not allow exclusion or limitations of incidental or consequential damages, so the limitations above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Obtaining Service

WD values your business and always attempts to provide you the very best of service. If this Product requires maintenance, either contact the dealer from whom you originally purchased the Product or visit our product support Web site at <http://support.wdc.com> for information on how to obtain service or a Return Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided on your return paperwork. Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via <http://support.wdc.com>. WD shall have no liability for lost data regardless of the cause, recovery of lost data, or data contained in any Product placed in its possession.

Warranty Information (Australia/New Zealand only)

For consumers purchasing products in Australia and New Zealand, please refer to this warranty information.

Nothing in this warranty modifies or excludes your legal rights under the Australian Competition and Consumer Act or the New Zealand Consumer Guarantees Act. This warranty identifies WD's preferred approach to resolving warranty claims which is likely to be quick and simple for all parties.

No other warranties either express or implied by law, including but not limited to those contained in the Sale of Goods Act, are made with respect to the Product. If you purchased your Product in New Zealand for the purposes of a business, you acknowledge and agree that the New Zealand Consumer Guarantees Act does not apply.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. What constitutes a major failure is set out in the Australian Consumer Law.

Warranty

WD warrants that the Product, in the course of its normal use, will for the term defined below, be free from defects in material and workmanship and will conform to WD's specifications. The term of your warranty is 3 years in Australia and New Zealand, unless otherwise required by law. The term of your warranty period shall commence on the purchase date appearing on your purchase receipt from an authorized distributor or authorized reseller. Proof of purchase shall be required to be eligible for this warranty and to establish the commencement date of this warranty. Warranty service will not be provided unless the Product is returned to an authorized distributor, authorized reseller or regional WD return center where the Product was first shipped by WD. WD may at its discretion make extended warranties available for purchase. WD shall have no liability for any Product returned if WD determines that the Product was (i) not purchased from an authorized distributor or authorized reseller, (ii) not used in accordance with WD specifications and instructions, (iii) not used for its intended function, or (iv) stolen from WD, or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures, including the mounting frame, unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at <http://support.wdc.com>), accident or mishandling while in the possession of someone other than WD.

PRODUCTS ARE COMPLEX AND FRAGILE ITEMS THAT MAY OCCASSIONALLY FAIL DUE TO (A) EXTERNAL CAUSES, INCLUDING WITHOUT LIMITATION, MISHANDLING, EXPOSURE TO HEAT, COLD, AND HUMIDITY, AND POWER FAILURES, OR (B) INTERNAL FAULTS. SUCH FAILURES CAN RESULT IN THE LOSS, CORRUPTION, DELETION OR ALTERATION OF DATA. NOTE THAT YOU SHALL BE RESPONSIBLE FOR THE LOSS, CORRUPTION, DELETION OR ALTERATION OF DATA HOWSOEVER CAUSED, AND FOR BACKING UP AND PROTECTING DATA AGAINST LOSS, CORRUPTION, DELETION OR ALTERATION. YOU AGREE TO CONTINUALLY BACK UP ALL DATA ON THE PRODUCT, AND TO COMPLETE A BACKUP PRIOR TO SEEKING ANY GENERAL SERVICE AND TECHNICAL SUPPORT FROM WD.

In Australia, if the Product is not of a kind ordinarily acquired for personal, domestic or household use or consumption, provided it is fair and reasonable to do so, WD limits its liability to replacement of the Product or supply of equivalent or better Product.

This warranty shall extend to repaired or replaced Products for the balance of the applicable period of the original warranty or ninety (90) days from the date of shipment of a repaired or replaced Product, whichever is longer. This warranty is WD's sole manufacturer's warranty and is applicable only to Products sold as new.

Obtaining Service

WD values your business and always attempts to provide you the very best of service. Should you encounter any problem, please give us an opportunity to address it before returning this Product. Most technical support questions can be answered through our knowledge base or e-mail support service at <http://support.wdc.com>. If the answer is not available or, if you prefer, please contact WD at the applicable telephone number shown in the front of this document.

If you wish to make a claim, you should initially contact the dealer from whom you originally purchased the Product. If you are unable to contact the dealer from whom you originally purchased the Product, please visit our product support Web site at <http://support.wdc.com> for information on how to obtain service or a Return Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided with your RMA number. If following receipt of a qualifying claim under this warranty, WD or the dealer from whom you originally purchased the Product determines that your claim is valid, WD or such dealer shall, at its discretion, either repair or replace the Product with an equivalent or better Product or refund the cost of the Product to you. You are responsible for any expenses associated with a claim under this warranty. The benefits provided to you under this warranty are in

addition to other rights and remedies available to you under the Australian Competition and Consumer Act or the New Zealand Consumer Guarantees Act.

Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via <http://support.wdc.com>.

Western Digital Technologies, Inc.
3355 Michelson Drive, Suite 100
Phone: 949-672-7000
E-mail: support@wdc.com

GNU General Public License (“GPL”)

Firmware incorporated into this product may include third party copyrighted software licensed under the GPL or Lesser General Public License (“LGPL”) (collectively, “GPL Software”) and not Western Digital’s End User License Agreement. In accordance with the GPL, if applicable: 1) the source code for the GPL Software may be downloaded at no charge from <http://support.wdc.com/download/gpl> or obtained on CD for a nominal charge from <http://support.wdc.com/download/gpl> or by calling Customer Support within three years of the date of purchase; 2) you may re-use, re-distribute, and modify the GPL Software; 3) with respect solely to the GPL Software, no warranty is provided, to the extent permitted by applicable law; and 4) a copy of the GPL is included herewith, may be obtained at <http://www.gnu.org>, and may also be found at <http://support.wdc.com/download/gpl>.

Modification of or tampering with the Software, including but not limited to any Open Source Software, is solely at your own risk. Western Digital is not responsible for any such modification or tampering. Western Digital will not support any product in which you have or have attempted to modify the Software supplied by Western Digital.

Appendix: Technical Specifications

Specification	Value
Wireless standard	IEEE 802.11ac, n, a
Ethernet	(4) Gigabit Ethernet ports
Bands	5 GHz
Antennas	3x3
Security	WEP WPA WPA2 WPA/WPA2 -PSK
Supported operating systems	Windows XP with Service Pack 3
	Windows Vista with Service Pack 2
	Windows 7 with Service Pack 1
	Mac OS X Leopard
	Mac OS X Snow Leopard
	Mac OS X Lion
	Mac OS X Mountain Lion
Supported web browsers	For PCs only: IE7, IE8, and IE9
	For PCs and Macs: Firefox, Google Chrome, and Safari
Physical dimensions	Width: 6.98" (177.4 mm)
	Height: 7.524" (191.1 mm)
	Depth: 2.48 " (63.0 mm)
	Weight: .83 lb (.38 Kg)
Power supply	Input voltage: 100V to 240V AC
	Input frequency: 50 to 60 Hz
	Output voltage: 12V DC, 1.5A
	Power supply: 18W
Temperature	Operating temperature: 0°C to 40°C (32 to 104°F)
	Storage temperature: -40°C to 70°C (-40°F to 158°F).

Index

A

AC power adapters 5
 accessories 4
 administrative settings 21

B

basic settings 16
 box contents 4
 button
 Reset 7
 WPS 7

C

configuration, saving and restoring 23
 connecting entertainment devices 9
 connecting to a router 10
 current settings 17

E

entertainment devices, connecting 9
 environmental compliance (China) 33

F

factory defaults reset 23
 firmware update 22
 front LEDs 6

G

GPL software 35

I

icons on My Dashboard 17

L

LAN settings 19
 language selection 26
 LEDs 6, 7
 logging in 16
 logging out 25

M

manually connecting to a router 10
 My Dashboard
 current settings 17
 icons 17
 opening 16

O

obtaining service 33
 obtaining service in Australia and New Zealand 34
 opening and closing Advanced Settings

screen 19
 operating precautions 1
 options after setup complete 15
 overview 3

P

package contents 4
 password, changing 21
 port LEDs 7
 product
 accessories 4
 overview 3
 power adapters 5
 recording information 2
 registration 2
 safety information 1
 warranty 33

R

rebooting 25
 recording product information 2
 registering the product 2, 25
 regulatory compliance 29
 Reset button 7, 24
 resetting to factory defaults 23
 restoring a configuration 23
 RoHS 33

S

safety
 compliance 30
 instructions 1
 saving a configuration 23
 service 33
 service in Australia and New Zealand 34
 settings
 administrative 21
 advanced 19
 basic 16
 firmware 22
 LAN 19
 language 26
 resetting 24
 saving and restoring 23
 setup complete options 15
 setup options 8
 software, GPL 35

T

technical specifications 36
 troubleshooting
 All front panel LEDs flash continuously.

27

Computers are unable to access the Internet. 27

How do I change wireless settings or connect a new router? 27

How do I reset the Wi-Fi bridge? 27

Power LED does not illuminate. 27

What is the IP address of the Wi-Fi bridge after configuration? 28

Wi-Fi bridge cannot connect to the router. 27

U

updating firmware 22

W

warranty 33

Wi-Fi bridge, components, views, LEDs 5

wireless settings 18

WPS button 7

WPS button connection method 10

WPS LED 6

Information furnished by WD is believed to be accurate and reliable; however, no responsibility is assumed by WD for its use nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of WD. WD reserves the right to change specifications at any time without notice.

Western Digital, WD and the WD logo are registered trademarks in the U.S. and other countries; My Net is a registered trademark of Western Digital Technologies, Inc. Adobe and Adobe Reader and the included Adobe Reader logo are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Other marks may be mentioned herein that belong to other companies.

© 2012 Western Digital Technologies, Inc. All rights reserved.

Western Digital
3355 Michelson Drive, Suite 100
Irvine, California 92612 U.S.A.

4779-705090-A00 Oct 2012