



# User's Manual

Ematic 7" Quad Core Tablet  
EGQ307

Since the tablet software updates regularly, the user manual may not cover all aspects of new features.

 
 
## Important Notices

- The new battery will be in its best condition after being fully charged and discharged 2-3 times.
- While using earphones, if the volume is excessively high it may cause hearing damage. Please adjust the volume of the player to a safe level and moderate during use.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not use the tablet while driving or walking.
- The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- Do not drop or hit the tablet against a hard surface, or the screen may be damaged or cracked.
- Do not upgrade the firmware by yourself. The tablet should be upgraded with the right firmware and right methods offered by us. If upgrade is needed, please contact us.

<b>Section 1: Tablet Overview</b>	
Tablet Overview	4
Screen Basics	5
Touch Screen Basics	5
<b>Section 2: Initial Setup</b>	6
Charging	6
Turn on	6
Getting Started	7
Setting up your Google™ Account	7
<b>Section 3: Your Home Screen</b>	8
Icons	8
Adding Icons	9
Moving Icons	9
Removing Icons	9
Take a Screenshot	9
Sleep Mode	10
Customizing Your Lock Screen	10
Notifications	11
Change the Wallpaper	11
Managing User Accounts	12
<b>Section 4: Network Connection</b>	13
Turn On/Off Wi-Fi	13
Adding a Wi-Fi Network	14
<b>Section 5: Connecting to a Computer</b>	15
PC	15
Mac	16
<b>Section 6: Using the Keyboard</b>	17
Entering Text	17
Gesture Typing	18
Basic Editing	19
Keyboard settings	19
<b>Section 7: Exploring Apps</b>	20
Clock	20
Camera	20
Included Apps	21
Uninstalling Apps	23
<b>Section 8: Google Accounts</b>	24
Why use a Google Account?	24
Add a Google Account	24
Remove a Google Account	25

Google Play™	25
Google Play recommendations	26
Google Play Store app	26
<a href="#">Section 9: Google Now</a>	27
Google Now Cards	27
Location Access	28
Google Now Settings	28
<a href="#">Section 10: Voice Actions</a>	30
Voice Commands	31
<a href="#">Section 11: Tablet Settings</a>	32
<a href="#">Section 12: Tips &amp; Tricks</a>	33
Extending Battery Life	33
Reset/Restore	34
Troubleshooting	34
Customer Support	35
Limitations of Liability State- ment	35

# 1. Tablet Overview

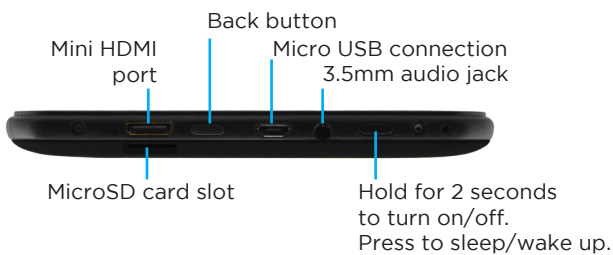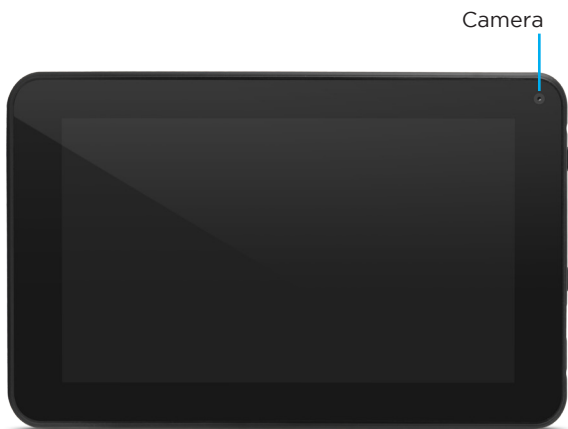

# Screen Basics



# Touch Screen Basics

Tap the screen once to activate or open something.



Touch and hold to move an item by dragging.

\*In many apps touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.



TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up.

## 2. Initial Setup

### Charging

Fully charge your tablet for 6 hours before the first use.



Use the included USB wall charger.



The battery indicator will show that your device is charging.



**Attention:** Charging by connecting to a computer will be extremely slow. We recommend only using the included wall charger.


### Turn on

 
To start your tablet, press and hold the power key for 2 seconds. The Ematic logo indicates that the tablet is loading.

Once the screen loads, you will see a Welcome Screen. Tap OK and continue to personalize your Home Screen.

OK

## Getting Started

Once your tablet loads, you will see a Welcome Screen. Tap OK to begin using your tablet. Tap  to customize your Home Screen with apps and widgets.

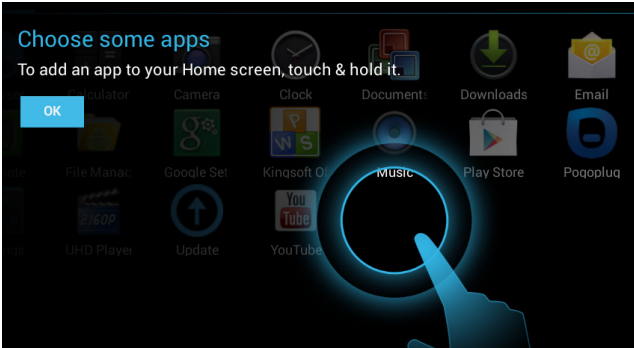

## Setting up your Google Account

Tap the Settings app and scroll down to Accounts. Tap Add Account. Sign in using the email address and password from your Google Account. If you don't have one yet, create one.

An email address that you use for any of the following counts as a Google Account:

- Gmail™
- YouTube™
- Google Apps™
- AdWords™
- Any other Google product

When you sign in with a Google Account, all your email, contacts, Calendar events, and other data associated with that account are automatically synced with your tablet. You can also add multiple Google Accounts later.



# 3. Your Home Screen

## Icons

You can fill the home screen with any combinations of shortcuts, widgets, and folders you like.

When you power up your tablet for the first time, you'll see the main home screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.



**Battery Level:** The blue battery level indicator will decrease and change to red as the battery is drained.



**Wi-Fi Signal:** As the Wi-Fi signal strength decreases, the blue bands will change to grey.



**Menu:** Tap to reveal settings and options.



**All Apps:** Tap to view all apps.



**Back:** Go back to the previous screen.



**Home:** Go back to the home screen. Hold and slide up to open Google Now.



**Recent Apps:** Open a list of recent apps. Tap an app to open or swipe left/right to remove the thumbnail.



**Screenshot:** Take a snapshot of the current screen.

 


**Increase Volume**



**Decrease Volume**

## Adding Icons

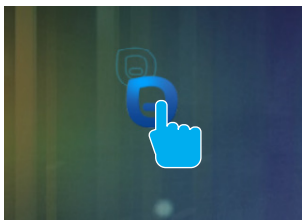

Within the All Apps menu, choose an app or swipe right to choose a widget. Tap and hold desired app or widget for about 2 seconds until the Home screen appears. Slide it wherever you want and let go.

## Moving Icons

Touch & hold the icon.

 
Slide your finger to the new position.

(To move between Home screens, slide toward the edge of the screen. To bump another icon out of the way, slide slowly towards it.)

Lift your finger to drop the icon into its new position.

## Removing Icons

Touch and hold the app or widget and drag to the X icon at the top of the screen.

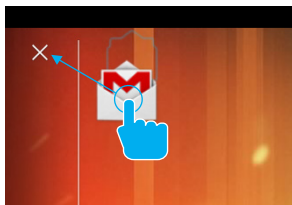

## Take a Screenshot

Make sure the image you want is displayed on the screen. Press the Power Button and the Decrease Volume Icon on your screen simultaneously.

You can also tap the  icon at the bottom of your Home Screen to take a screen shot.

The screenshot is automatically saved to your Gallery.

 
 
 
## Sleep Mode

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, press the power key and immediately release it. Do it again to bring up the lock screen.




## Customizing Your Lock Screen

You can customize your lock screen by adding widgets. Swipe to the right on the current clock widget and tap the +. Choose a widget from your library of widgets. You can add up to 4 additional widgets.

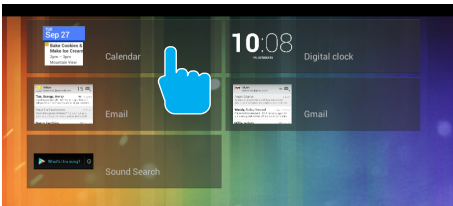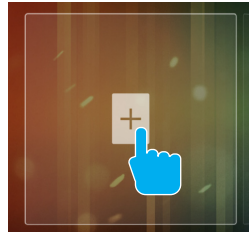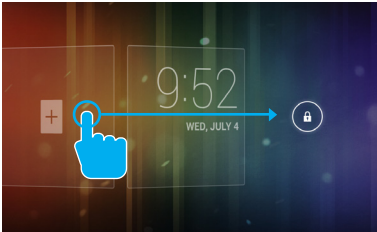


# Notifications

 Swipe down from the top right of your Home Screen to view your Quick Settings.

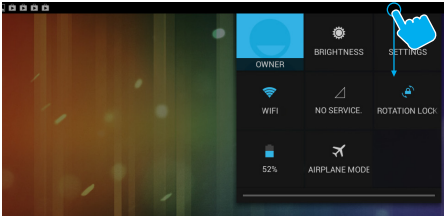


 Swipe down from the top left of your Home Screen to view your Notifications.

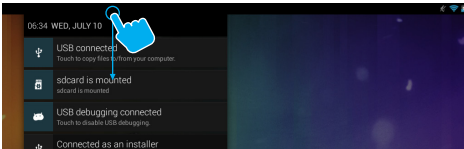

# Change the Wallpaper

 Tap and hold your finger on any open space on your home screen. A list of options appears.

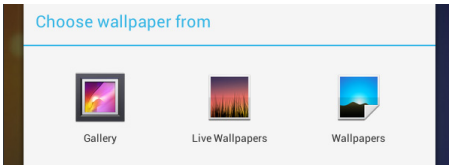

Gallery: Choose a wallpaper from your personal gallery

Live Wallpapers: Choose from a scrolling list of animated wallpapers

Wallpapers: Choose from thumbnails of default images

# 4. Network Connection

Wi-Fi can only be used when it connects with a Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot.

## Turn on Wi-Fi

 



Within the All Apps menu, tap Settings.



Under Wireless & Networks, tap the Wi-Fi switch to turn it on and scan for networks.

Your tablet will list the networks it finds within range. Tap a network to connect.

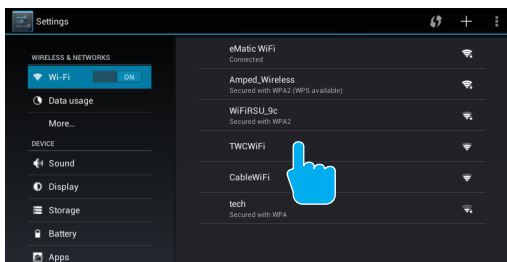


When connected, the wireless indicator appears in the status bar. The blue lines indicate connection strength. 

## Turn off Wi-Fi

 Tap the Wi-Fi ON switch under Wireless & Networks. Turn off Wi-Fi when you're not using it to extend the life of your battery between charges.

## Adding a Wi-Fi Network

Users may also add a Wi-Fi network under Wi-Fi settings.

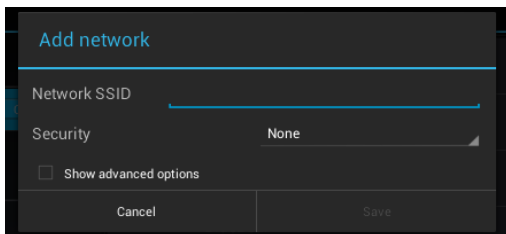


## Forget a Wi-Fi Network

In the Wi-Fi settings screen, tap the name of the network. Tap “Forget” in the dialog that opens.


# 5. Connecting to a Computer

 1

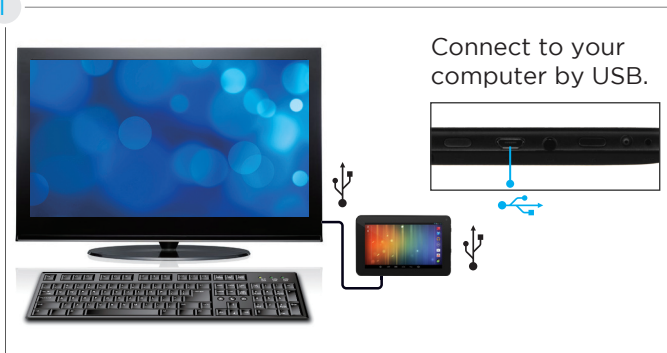

## PC

 2

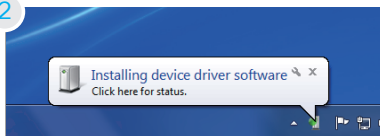


The device driver will install.

3



Choose open folder to view files or select the removable disk.

 
4

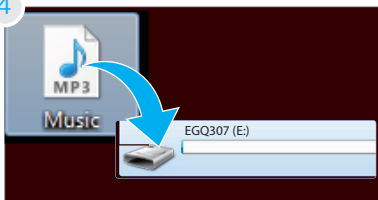

You will now be able to drag and drop the files from your computer onto your tablet just as you would with a USB flash drive.

# Mac

 2

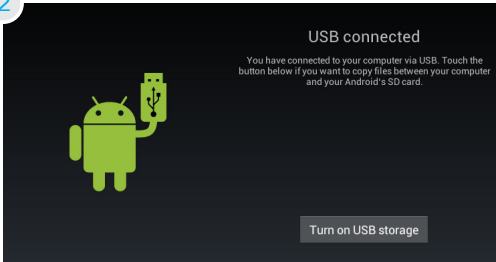

Tap Turn on USB Storage.

3

Use **Finder**<sup>®</sup> to go to **Devices** and choose EGQ307.

4

You will now be able to drag and drop files from your computer onto your tablet just as you would a USB flash drive.

5



Before turning off USB storage, make sure you have unmounted (“ejected”) the tablet and SD card from your computer. Tap Turn off USB Storage.




# 6. Using the Keyboard
 
## Entering text


Enter text using the onscreen keyboard. In most apps it will open automatically. In others, open the keyboard by touching where you want to type.

\*Depending on what you are doing, some of the keys on the keyboard may look different. Keyboard A&B appears when you are searching or browsing the net. Keyboard C appears when you are writing emails, documents, or messaging.

Keyboard A:

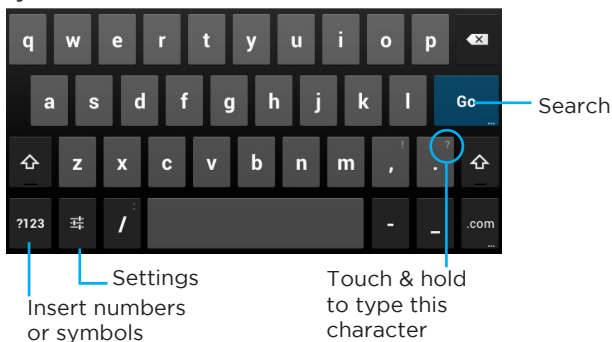


Keyboard B:

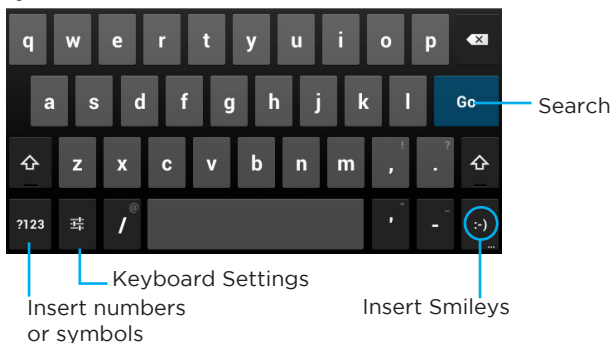 


## Keyboard C:



To make the keyboard go away, touch the modified Back button  at the bottom of the screen.

## Gesture Typing

 
Swipe your finger over letters you want to type, and lift after each word. The keyboard will anticipate and predict the next word in your sentence.

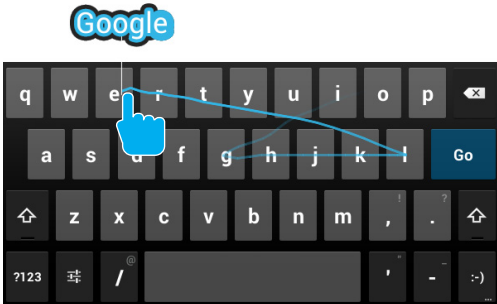





## Basic Editing




**Move the insertion point:** Touch where you want to type. The cursor will blink in the new position and a blue tab will appear below it. Drag the tab to move the cursor.

 
**Select text:** Touch & hold or double-tap within the text. The nearest word will be highlighted and blue tabs will appear. Drag tabs to edit selection.

**Delete text:** Touch  to delete characters or selected text.

**Insert Capital Letters:** Tap the  key once to insert one capital letter. Or hold  key while you type.

**Turn on caps lock:** Double-tap  key. It will turn into . Tap again to return to lowercase.

**Cut, Copy, Paste:** Select the text you want to manipulate. When highlighted, touch  Cut,  Copy, or  Paste.

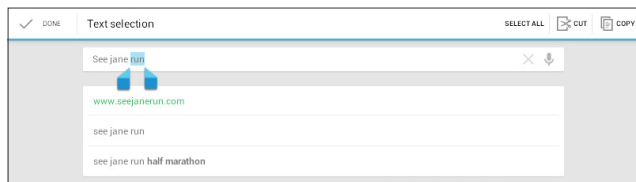

## Keyboard Settings



**Input languages:** Select different languages to be included when typing.

**Android Keyboard Settings:** Edit keyboard settings such as Auto-capitalization, Sound, Auto correction, and Input methods & styles.

 
## 7. Exploring Apps

Open up some Apps to better familiarize yourself with your new tablet.



Tap the Clock app to access your alarm clock, timer, or stopwatch.

*Timer Clock Stopwatch*

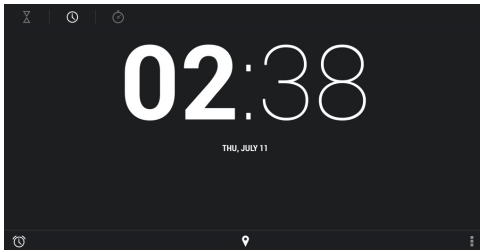

*Alarm Clock*

*Tap to change Time Zone*

*Night Mode/  
Settings*



Tap the camera app to take pictures and videos to share with your friends and family.

Taking Photos:

- Make sure the small camera icon is selected
- Tap the blue lens icon to take a photo
- To zoom pinch two fingers together on the screen.
- Tap the gear icon for Camera Settings.

Recording Video:

- Make sure the small camcorder icon is selected
- Tap the red dot to start recording
- To zoom pinch two fingers together on the screen.
- Tap the red circle again to stop recording
- While recording you can tap anywhere on the screen to take a picture.
- Tap the gear icon to access Video Settings.

## Included Apps



**Calculator:** Basic calculator functions



**Calendar:** Keep track of your schedule and set reminders



**Camera:** Take photos and record videos



**Chrome™:** Browse the web with Google Chrome.



**Clock:** Set the time and alarms



**Downloads:** Manage your downloads



**Email:** Sync your email accounts



**Evernote:** Keep notes and to-do lists



**File Manager:** Browse for files to open, delete, etc.



**Gallery:** View and edit your photos.



**Gmail:** Fast, searchable email from Google



**Google:** Stay up to date with Google Now cards



**Google Maps™:** Find directions and locations



**Google Settings:** Edit your Google Account settings



**Google+™:** Stay connected and share life as it happens with Google+



**Hangouts™:** One-on-one and group conversations with photos, emoji, and video calls for free.



**Hi-Q MP3 Recorder:** Record notes, lectures, or great ideas you might forget



**Kingsoft Office:** Type documents, make spreadsheets and presentations



**Messenger:** Keep in touch with your friends and family on Google+



**People:** Manage your contacts



**Play Books:** Read your favorite e-books



**Play Magazines:** Read magazines



**Play Movies & TV:** Stream movies & TV shows instantly



**Play Music:** Discover, play, store and share the music you love



**Play Store:** Shop for music, books, magazines, movies, TV shows, games and apps



**Pogoplug:** Connect to the internet to access and share your files. Includes 5GB of cloud storage



**Settings:** Adjust settings on your tablet



**Video:** Video Player



**Google Voice Search™:** Search the internet by speaking your search query



**YouTube:** Stream your favorite videos on the web

## Uninstalling Apps

 
To Uninstall an unwanted App:

1




Tap Settings

2

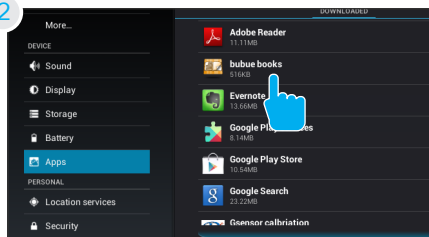

Under Device, tap Apps. Then tap the App that you want to uninstall

 3

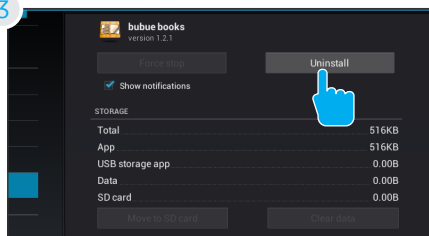

Tap Uninstall

## 8. Google Accounts

### Why use a Google Account?

Google Accounts let you organize and access your personal information from any computer or mobile device.

**Sync & Back-up:** Whether you draft an email, add a contact, or add an event to your calendar, your work continuously gets backed up and synchronizes with any computer with the same Google Account.

 
**Accessibility:** Check your latest emails, events, or text messages wherever you are on any computer or mobile device.

**Security:** Google works round the clock to ensure your private information stays secure.

 
**Shopping:** Connect your Google Account with your Google Wallet™ to easily purchase music, books, apps, and more on Google Play and other online stores.

**Services:** Your Google Account also lets you take full advantage of other Google apps and services such as YouTube, Google Play, Hangouts, Google Maps, Messaging, and more.

### Add a Google Account

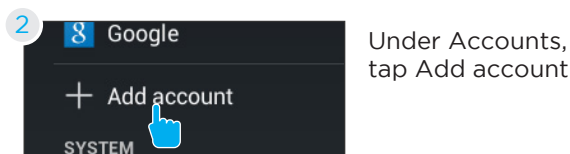



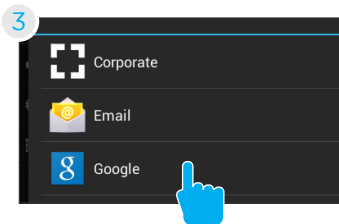


Tap what kind of account you want to add and sign in.


## Remove a Google Account



 
Tap Settings



Under Accounts, tap Google

 

 Tap the account that you want to remove.

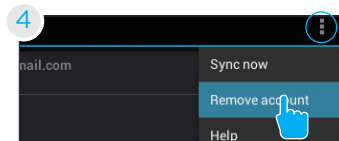

Tap Menu icon and then Remove account

## Google Play



Google Play brings together all of your favorite content in one place. Access movies, TV shows, music, books, magazines, apps, and more when you sign in with your Google Account. You can also shop for more games, books, magazines, and more in the Google Play Store app.

## Google Play

**My Library:** Displays your most recently used books, music, and so on. Tap any of the images to view your content.

**Recommended Apps:** Recommends apps that you can add to your home screen.

All Google Play recommendations work the same way:



Tap to see a different suggestion



Tap to avoid future suggestions like this



Hold and drag blue dots to resize

## Google Play



Play Store

Purchase music, games, books, magazines, movies, TV shows, and apps on the Google Play Store app



Play Books

With Google Play, shop the world's largest eBookstore now with over 5 million books- available on web, tablet, and phone.



Play Magazines

Your favorite magazines come to life on Google Play. Shop hundreds of titles and enjoy anywhere you go on any Android phone or tablet.



Play Movies & TV

Choose from thousands of movies and TV shows on Google Play and stream them instantly on your Android phone, tablet or the web.





Play Music

Buy now, listen now, sync never, with music on Google Play.

## 9. Google Now™

Google Now uses contextual data from your tablet and from other Google products to supply you with just the right information at just the right time.

 
You can download the Google Search app on Google Play.

After you have downloaded and installed the Google Search app, tap the  icon on the Home screen or swipe up from the  icon to open Google Now.

### Google Now Cards

Google Now displays cards when they're most likely to be useful and relevant based on the current time and your current location. Find out what the weather is like, how much traffic to expect before you leave for work, or how your favorite sports team is doing.


To dismiss a card from the Google Now screen, swipe it away. The card will return the next time it's relevant, which may be hours or days from now.

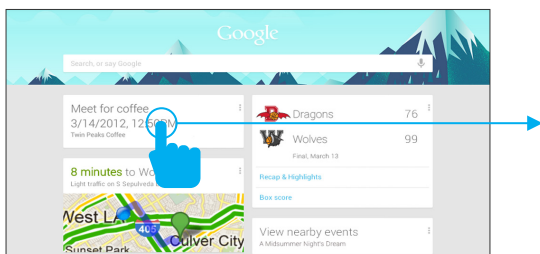

You can turn Google Now cards on or off at any time. To do so from the main Google Now screen go to Menu < Settings < Google Now and choose a specific card. You can then check or uncheck when you would like that card to appear.

## Location Access

 Find out what the weather is like or how the commute to work will be by confirming your home and work locations.

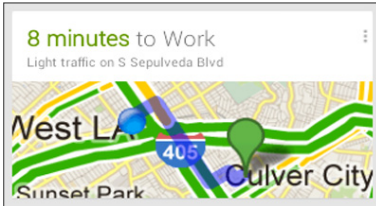

## Google Now Settings

In order to get to your Google Now settings from the Google Now Main Screen, touch the Menu icon at the bottom right of the screen. Then touch Settings. 4 types of settings will be available.

**Google Now:** These settings allow you to turn Google Now On or Off. It will also take you through a brief introduction to Google Now and you will be given the chance to opt in. From the settings screen you can also change the priority of cards and also sound settings for notifications.

**Voice settings:** Voice settings control different aspects of speech input and output.

- **Language:** Select a language to use for Voice Searches. The Voice Search language can be different from the language displayed by your tablet.
- **Speech Output:** Select Hands-free only to turn on speech output only when using a headset.
- **Block offensive words:** Check to ensure that search results with offensive language are blocked.
- **Hotword detection:** When this is checked, you can say "Google" when viewing the Google Now screen

to initiate a voice search or action.

**Tablet Search:** Select which apps in your tablet are included in Google searches.

**Privacy & Accounts:** Control search-related privacy options for your Google Account.

- **Manage location history:** Opens Google Maps settings, where you can turn location settings and location reporting on or off.
- **Location services:** Allows you to turn location access by all Google apps on or off.
- **Show recent searches:** Check if you want search suggestions based on your recent searches.
- **Manage Web History:** View your Web History after signing in

# 10. Voice Actions

After installing the Google Search app you can use Voice Actions to get directions, send messages, and perform a number of other common tasks.

To initiate a Voice Action you can:

- Tap the Microphone in the Google Search Bar on your Home Screen
- Touch the “g” icon in the Google Search Bar

Next, speak the Voice Action you want to use. Here are some typical examples:

“Set alarm for 8:30 a.m”

“Send email to Marcus Foster. Subject: Coming to-night? Message: Hope to see you later.”

“Navigate to Mike’s Bikes in Palo Alto”

As you speak, Voice Search analyzes your speech and initiates the action.

If Voice Search doesn’t understand you, it lists a set of possible meanings. Just tap the one you want.

Some Voice Actions, such as “send email” and “note to self,” open a panel that prompts you to complete the action by speaking or typing more information.

When prompted, you can:

- Touch any text already in the panel to add, or edit the text by typing. (You can tap the Microphone icon again to continue speaking instead of typing)
- Touch underlined words or phrases, drag across multiple words to view a list of alternate transcriptions, or edit by speaking or typing.
- Touch a button at the bottom of the window to add any optional fields (you can also speak the name and content of any of these fields)
- When you are done, touch the button appropriate to complete the action, such as Send.

## Voice Commands



To initiate a Voice Action touch the Microphone icon

\*Voice Actions will only be available after downloading the Google Search app.

### Some handy voice commands are:

Say	Followed By	Examples
[Words you want to search for]		"bike shoes"
"Map of"	Address, name, business name, or other destination	"Navigate to Union Square" or "1299 Colusa Ave, Berkeley, CA"
"Go to"	Search string or URL	"Go to Google.com"
"Note to self"	Message text	"Note to self: remember to buy milk"
"Define"	Word to define	"Define campanile"
"Weather"	Location	"Weather Detroit"
"Movie"	Movie location and Movie name	"Movie, Los Angeles, London After Midnight"
"Pictures of"	Topic	"Pictures of cats"
"Translate to"	Language & Phrase	"Translate to French, Where is the restroom?"
[A math phrase]		"75 divided by 6"

# 11. Tablet Settings

Wi-Fi: Turn Wi-Fi on to see available networks and connect.

Data Usage: Provides data usage information.

Sound: Adjust the volume, notifications, and alarm sounds.

Display: Adjust brightness, change your wallpaper, turn on/off screen rotation, sleep settings, and font size.

Storage: Provides storage use data.

Battery: Provides battery usage data.

Apps: Tap an app to force stop, uninstall, clear data, move to SD card, or clear data.

Users: Add additional users to the tablet.

Location services: Allow google to use data to determine your location for improved search results.

Security: Adjust settings to make your tablet more secure. Allow installation of non-Market apps.

Language & input: Set language, spelling correction, keyboard and voice settings.

Backup & reset: Backup data and factory reset your tablet.

Accounts: Tap to add or remove Email accounts.

Date & time: Set the date, time, and time zone.

Accessibility: Adjust settings for users with poor vision.

Developer options: Advanced settings for developers.

 
About tablet: Model number and general tablet information.




# 12. Tips & Tricks

## Extending Battery Life


Reducing the Brightness of your screen can help extend your battery life.

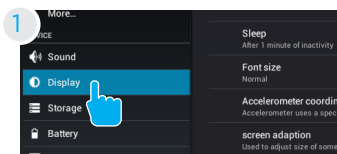

In Settings tap Display.

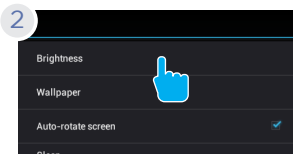 


Tap Brightness.

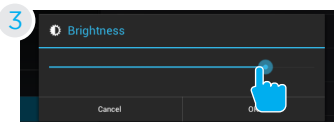 


Use the slider to adjust the brightness. Then tap OK.

 Use a Quick Screen Timeout.

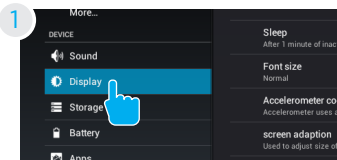


In Settings tap Display.

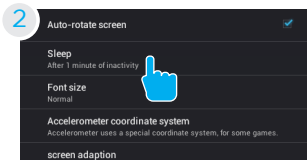 


Tap Sleep.

 
Switch off Wi-Fi if you're not close to a strong signal.



Disable Location Services.

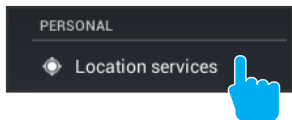 


## Reset/Restore

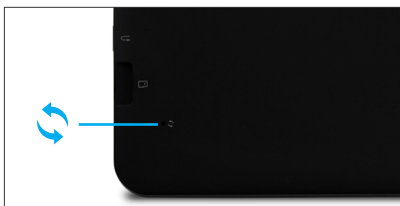 

### Reset Device

 Reset the device by pressing the button with a small object such as a paperclip.

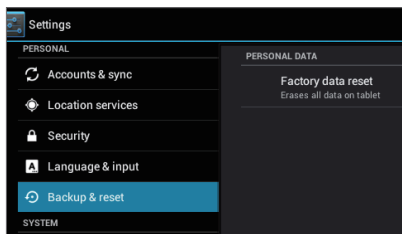

### Factory Restore

Select Backup & reset in the settings app to restore factory settings. This will erase all data on the tablet.

## Troubleshooting

### Cannot turn on the tablet.

Check the tablet's power level. Please charge it before starting it. If your tablet still cannot be turned on, you may reset it before you turn it on.

### No sound from earphones.

Check if volume is set to '0'. Or earphone may be broken, please try another one.

### Loud static noise.

Check if there is dust in the earphone or speaker. Check if the file is broken.

### Frozen to any operation.

Press and hold the power button for 6 seconds to reset the device.

### Application is not working.

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken. You may need to download a full version.

### How do I delete a Google account?

If an account is added, the account is shown in Accounts of Settings, where you may also add another account. To delete an undesired account, tap the account, then tap the menu icon in the upper right hand corner and choose Remove account.

# Customer Support

Visit [ematic.us/support](http://ematic.us/support) for customer support regarding your device.

To submit a request, fill out the required information online. You will be provided a ticket number regarding your issue which you can refer to when contacting us further.

## Limitations of Liability Statement

### Limitations of Liability Statement

The Ematic User Manual may contain or reference links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations or warranties whatsoever about any other website which you may access as a result of reading this user manual, or otherwise. When you access a website that is not owned or operated by Ematic (a “non-Ematic website”), even one that may contain an Ematic logo, please understand that it is independent from Ematic, and that Ematic has no direct control over the content on such website(s). In addition, a link to any such non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or of any functionalities or services, of such website(s). Furthermore, Ematic makes no promise, representation or warranty that any non-Ematic website you navigate to will be free of viruses, worms, Trojan horses and other items of a destructive nature. The Ematic User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result arising out of your use of the Ematic User Manual.

### Limitation of Liability and Indemnity

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach of contract or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to indemnify, hold harmless and defend Ematic, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims, costs and expenses (including, without limitation, reasonable attorneys' fees, charges and disbursements, as well as the cost of in-house counsel and appeals) arising from or related to Ematic, the use of The Ematic User Manual or any Ematic product and/or software. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Windows™ is a registered trademark of Microsoft Corp. in the United States and other countries; Mac OS® is a registered trademark of Apple Inc.; Linux™ is a registered trademark of Linus Torvalds. Android, Google, Google Play, Google Now and other marks are trademarks of Google Inc. Ematic is not affiliated with Google Inc. Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the the Wi-Fi Alliance.

Ematic is not affiliated with Microsoft, Apple, Inc., Linux, or Google, Inc., (including Android).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Ematic brand and products are owned by Shaghal, Ltd.

