

## Disposing Of Internal Rechargeable Battery

1. Make sure speaker is in open/expanded position.
2. Locate the three retaining screws inside of the lower speaker casing and loosen each one with a small Phillips screw driver.
3. Remove the speaker baffle and circuit board to locate the battery on the bottom of the lower speaker casing.
4. Clip the lead to the battery then dispose of battery in accordance with your local regulations.

## Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.



Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

## A Consumer Guide to Product Safety


### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit [www.ihomeintl.com](http://www.ihomeintl.com)

**iHome** *Model iHM62*  
**GlowTunes Portable**  
**Rechargeable Mini Speakers**

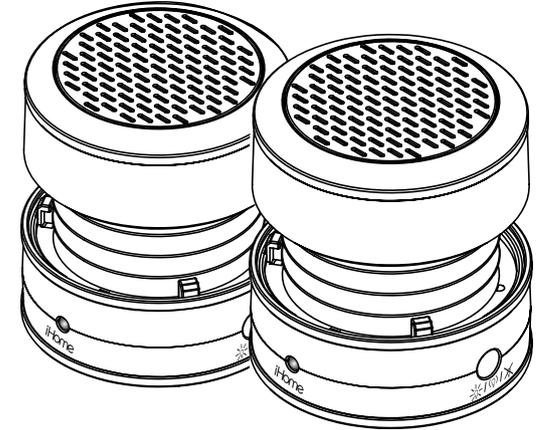

Questions? Visit [www.ihomeintl.com](http://www.ihomeintl.com)

#### IMPORTANT


##### Read before proceeding

If you have any question regarding the operation or use of this product, please visit [www.ihomeaudio.com](http://www.ihomeaudio.com) to view answers to frequently asked questions.


To learn more about this and other iHome products, please visit us online at [www.ihomeaudio.com](http://www.ihomeaudio.com)

##### For Models That Use Lithium Batteries:


- Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures & not handled appropriately
- Do not place loose batteries in a pocket, purse, or other container containing metal objects, do not mix with used or other battery types, or store with hazardous or combustible materials.
- Store in cool, dry, ventilated area.
- Follow applicable laws and regulations for transport and disposal.

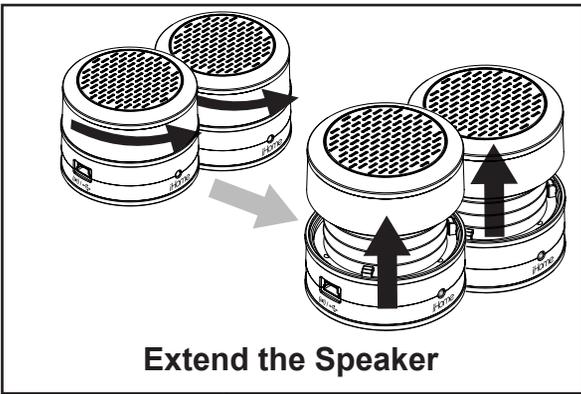

### Extend the Speaker

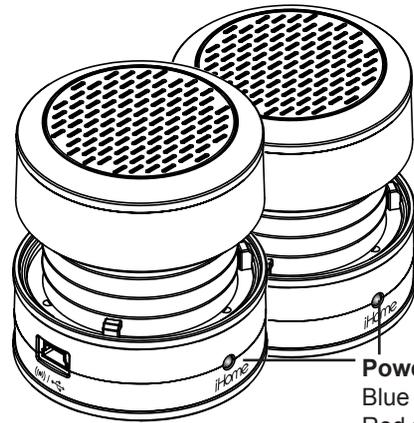


**Power/Battery LED**  
 Blue = power on/charged  
 Red = low battery OR  
 charging mode (when  
 connected to USB power source)

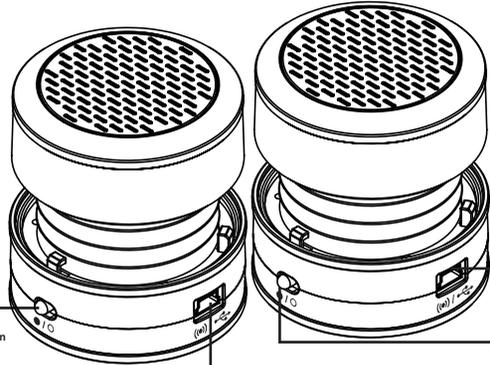

**Power Switch**  
 On Position ● / ○ Off Position

**Audio/Charge USB Connection**  
**Power Switch**  
 On Position ● / ○ Off Position

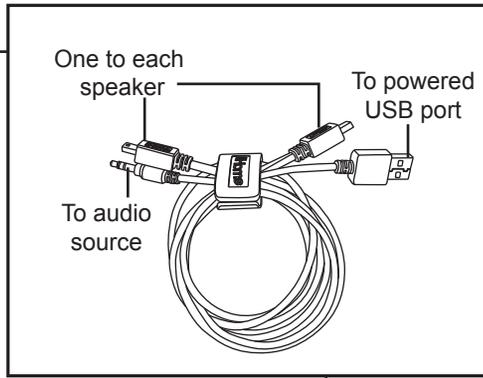

One to each  
 speaker  
 To audio  
 source  
 To powered  
 USB port

### Using the iHM62

To unlock and expand each speaker, grip the top and bottom and give a small twist counter-clockwise. DO NOT pull hard once open, as the built in spring will automatically extend the speaker to its proper position. Press speaker down from the top and twist clockwise to lock in place when not in use.

### Connecting the iHM62

- Connect a mini-USB plug to the input jack on each speaker.
- Connect the stereo 3.5mm audio plug to the headphone jack or line-out of any audio device.
- Slide the Power Switch of each speaker to the ON ● position. The blue power light will come on.
- Press play on your audio device and adjust its volume to listen to audio.

**Note: the larger USB plug is used for charging only, not for audio. Please refer to next section for charging instructions.**

### Charging the iHM62

The iHM62 is powered by a rechargeable battery in each speaker. When the blue power light turns red, or if you start to notice sound distortion at higher volumes, it's time to recharge the battery.

- Connect the larger USB plug to a powered USB port, such as that on a computer. The light on each speaker will stay red while charging and turn blue when fully charged.

**Note: you can continue to listen to the speaker and/or enjoy lighting effects while it is charging**

### LED Lighting Effects:

- Press the LED lighting effects button to cycle through 3 lighting effects modes: colors cycle, one color, none.

**Colors Cycle:**


- LEDs will fade in and out in sequence: blue, green, amber, red, repeat (color cycle is the default when the unit is powered on).

**One Color:**

- Press during cycle mode to hold the last color shown  
 Note: LED will shine at full brightness.


**None:**

- Enjoy your music without lighting effects.  
 Note: speaker is still on, indicated by power LED.

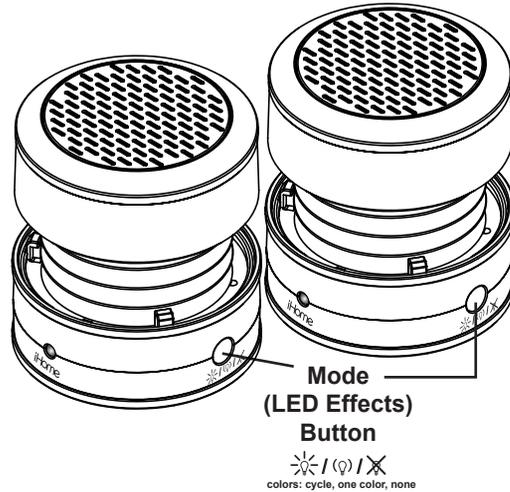


**Mode (LED Effects) Button**  
  
 colors: cycle, one color, none

**Note: When not in use, turn speaker off to save battery power**

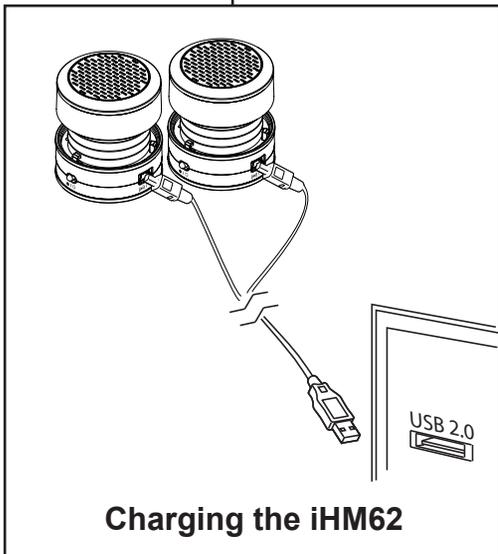

### Charging the iHM62

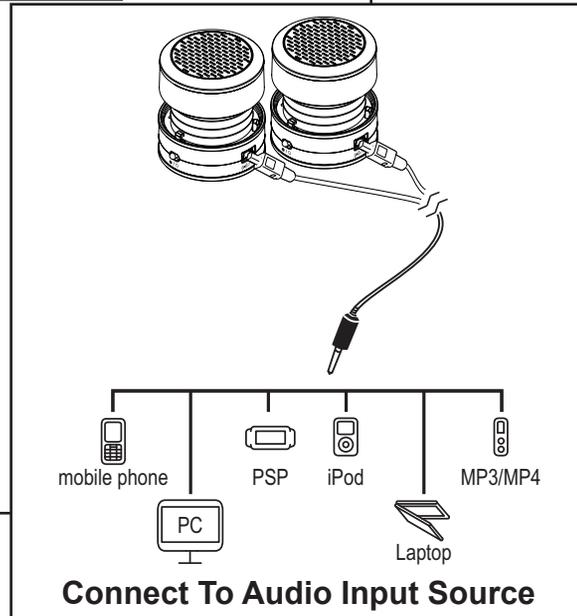

### Connect To Audio Input Source

mobile phone    PSP    iPod    MP3/MP4  
 PC    Laptop