

CRAIG®

 
ALARM CLOCK RADIO FOR iPod/ iPhone

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CMB3228

IMPORTANT SAFETY INSTRUCTIONS



WARNING

USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions

All the safety and operating instructions should be read before the product is operated.

2. Keep these instructions

The safety and operating instructions should be retained for future reference.

3. Heed all warnings

All warnings on the product and in the operating instructions should be adhered to.

4. Follow all instructions

All operating and use instructions should be followed.

5. Do not use this apparatus near water

Do not use the product near water and moisture, for example: near a bathtub, shower, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.

6. Clean only with dry cloth

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15. Power Source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure the power supply, consult your appliance dealer or local power company. For products intended to operate from battery, or other sources refer to the operating instructions in this manual.

16. Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18. Object and liquid entry

Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.



20. Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.

22. Safety check

Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition

23. Wall or ceiling mounting

This product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Damage requiring service

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions.
- Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance – this indicates a need for service.

25. Note to CATV system installer

 
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Note:


Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug-in has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

LOCATION OF CONTROLS

TOP VIEW

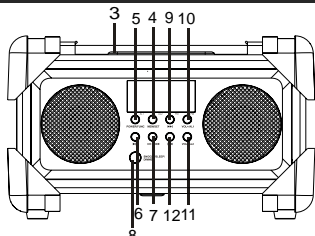

REAR VIEW

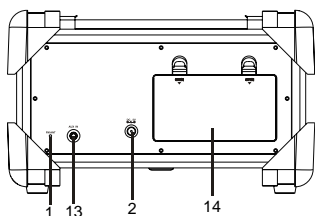 

1. FM Antenna
2. DC Input Jack
3. iPod/iPhone Docking Connector
4. MEM/SET (Memory/Set) Button
5. POWER/FUNC (Power/Function) Button
6. M Button
7. CH MODE (Channel mode) Button
8. SNOOZE/SLEEP/DIMMER Button
9. M Button
10. VOL +/AL 1 (Volume up/Alarm 1) Button
11. VOL -/AL 2 (Volume down/Alarm 2) Button
12. M Button
13. AUX IN Jack
14. Battery Door

Display and Indicators



- AL 1 Indicator: Light when Alarm 1 is on.
AL 2 Indicator: Light when Alarm 2 is on.
PM Indicator: Light when the current time is PM.

Note: To save the batteries power in battery operating mode. The display will turn off automatically when idle over than 5 minutes.

GETTING STARTED

The unit is design to use the supplied AC/DC adaptor or 6 x AA size batteries (batteries not included).

Batteries:

To install or replace batteries:

1. Open the battery door on the rear of unit.
2. Install 6 (six) AA size batteries into the battery compartment as the polarity markings inside.
3. Replace the battery door.

NOTES:

1. Alkaline batteries are recommended for longer operation time.
2. In battery operation mode, for saving the battery power the connected iPod/iPhone will not be charging.

BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.

- 4.If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- 5.Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
- 6.Do not dispose of battery in fire. Battery may explodes or leak.
- 7.Clean the battery contacts and also those of the device prior to battery installation.

AC/DC Adaptor:

1. Insert the DC Plug from the supplied AC/DC Adaptor to the DC IN Jack on the rear of unit.
2. Insert the AC/DC Adaptor into wall outlet having AC 100-240V~, 50/60Hz

NOTES:

- ~ When AC/DC Adaptor was connected, the battery power will cut off automatically.
- ~ This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.
- ~ When connected the iPod/iPhone to the docking, it will be charging automatically.
- ~ If Apparatus will not be used in a long period of time. To avoid damage the unit. Unplug the AC/DC Adaptor from the wall outlet and take out all batteries.

OPERATION

To set or reset the actual time:

- 1.Make sure the unit is in power off (standby) mode before setting.
- 2.Press and hold the MEM/SET Button on the front of unit until the digit of hour on the display is blinking. Press the ►► or ◄◄ Button to set the hour. (Make sure the PM Indicator on the display is lit if the time is PM and not light if the time is AM).
- 3.Press the MEM/SET Button again; the digit of minute on the display will blink. Press the ►► or ◄◄ Button to set the Minute.
- 4.When finished, press the MEM/SET Button to save the settings and exit.

TIME SYNCHRONIZATION

The CMB3228 features a "CH MODE" button that allows you to set the time using the internal clock of the iPod/iPhone.

With the iPod/iPhone docked and power OFF, press the "CH MODE" button once.

NOTE:

- When you first dock your iPod/iPhone, the unit will run an authentication process, so it may not respond immediately to the "CH MODE" button when pressed. Wait for a few seconds and try pressing the "CH MODE" button again.
- An iPod/iPhone can only sync time up to the nearest minute; it's possible to have up to 59 seconds difference between the unit and synced iPod/iPhone.
- The iPod internal clock is automatically updated when sync'd with iTunes. We recommend you sync the iPod with iTunes prior to docking to CMB3228 to make sure you have the current time available.
- The iPhone receives constant updates from the phone service provider, so the iPhone time will always be current.
- The sync function can only be done when the CMB3228 power is Off.

5

- 3.Press the POWER/FUNC Button to turn on the unit.
- 4.Press the POWER/FUNC Button repeatedly until "iPod" appears on the display.
- 5.Press the ►► Button to start playback.
- 6.During playback:
 - A.Press VOL+/AL 1 or VOL-/AL 2 Button to adjust volume level as desired.
 - B.Press the ►► Button to pause. Press again to resume normal playback.
 - C.Press the ►► or ◄◄ Button to skipping tracks.
 - D.Press and hold the ►► or ◄◄ Button to fast searching the desired section of current tracks.
7. To power off (Standby mode) the unit, press and hold the POWER/FUNC Button until OFF appear on the display, then release the button.

Note: If you have an earlier non-dockable iPod , connect it to the AUX IN jack as the AUX IN section follows.

AUX IN

To listen to the music from the external audio device or non-dockable iPods as follows:

- 1.Connect the external audio device or iPods/iPhone by an audio connection cable with 3.5mm stereo plug on both ends (Cable not included).
- 2.Insert one end to the AUX Jack on the rear of unit. Insert the other end to the Phones Jack; Line Out Jack or AUX Out Jack on the external audio device or iPods.
- 3.Press the POWER/FUNC Button to turn on the unit.
- 4.Press the POWER/FUNC Button repeatedly until "AU" appears on the display.
- 5.Playback the music in the connected external audio device or iPods as usual.
- 6.Press VOL+ or VOL- Button on the unit (and the connected unit) to adjust volume level as desired.
7. To power off (Standby mode) the unit, press and hold the POWER/FUNC Button until OFF appear on the display then, release the button.

ALARM SETTING

Alarm 1 setting:

- 1.Make sure the unit is in power off (standby) mode before setting.
- 2.Press and hold the VOL +/AL 1 Button for one second to enter setting mode. The AL 1 Indicator will light and Alarm 1 time will appear on the display (The digit of hour will be blinking).
- 3.Press the ►► or ◄◄ Buttons repeatedly to set the hour. (Make sure the PM Indicator on the display is light if the alarm 1 time is PM and not light if it is AM).
- 4.Press the VOL +/AL 1 Button again, the digit of minute will be blinking. Press the ►► or ◄◄ Buttons repeatedly to set the minute.
- 5.Press the ►► or ◄◄ Buttons repeatedly to set the wake up mode to buzz (b), Radio (F) or iPod/iPhone (I).
- 6.Press the VOL +/AL 1 Button to enter, the volume level (two digits) will appear on the display. Press the ►► or ◄◄ Buttons to set the volume level as desired.
- 7.Press the VOL +/AL 1 Button to save the settings and exit.

Alarm 2 setting:

Same as Alarm 1 settings above. But, press the VOL -/AL 2 Button instead of press the VOL +/AL 1 Button.

7

Radio reception

- 1.Press the POWER/FUNC Button to turn on the unit.
- 2.Press the POWER/FUNC Button repeatedly until Radio frequency appears on the display. Wait a few seconds, you will hear sounds from speakers.
- 3.Press and hold the ►► or ◄◄ Button until the displayed frequency starts running then release the button. (When a radio station was been found, the frequency on display will stop running and start to playback the searched station.) Press and release the ►► or ◄◄ repeatedly to fine tune if needed.
- 4.Repeat procedure 2 until the desired radio station was found.
- 5.Adjust the volume to the desired level by pressing VOL+/AL 1 or VOL-/AL 2 Button.
6. To power off (Standby mode) the unit, press and hold the POWER/FUNC Button until OFF appear on the display then release the button.

ANTENNAS:

The Antenna wire on the rear cabinet is for radio reception. If reception is weak, unwind and extend the wire or relocate the wire to improve the radio reception.

RADIO STATION PRESETTING

- 1.Receive the desired radio station as the previous procedure.
- 2.Press the MEM/SET Button, "P XX" (XX is the last stored number of radio station) will appear on the display and "XX" will be blinking. Press the ►► or ◄◄ Button repeatedly to select the desired location (CH 1 – CH 20) you want store to. Press the MEM/SET Button again to store.
- 3.Repeat the same procedure until all the desired radio stations were stored into the memory.
- 4.After settings, press the CH MODE Button to enter to Channel mode. "P XX" will appear on the display. Press the ►► or ◄◄ Buttons repeatedly to select the desired stored radio station.

Notes:

- If AC/DC Adaptor has been unplugged from the wall outlet or the power supply failed, the preset radio stations will be deleted.
- The stored radio station only can be deleted by storing another new radio station.
- Total 20 radio stations can be stored in the memory list.
- In Radio mode, only the frequency of current radio station will appear on the display.
- To view current time. Press Standby Button to power off the unit.

Docking and Charging The iPod/iPhone:

This unit is designed with the same connector found in most iPod and iPhone docks. When connecting the supported iPod/iPhone to the docking station on the top of the unit. The connecting iPod/iPhone will be start recharging. You can also playback the music files in the iPod/iPhone as follows:

- 1.Remove the cover of the iPod/iPhone Docking as shown on the figure below:



- 2.Insert the iPod/iPhone to the docking as shown below (If the power source of the unit is AC/DC Adaptor. When iPod/iPhone is inserted, it will recharge automatically) :



6

IMPORTANT NOTE:

- Alarm will not operate when the unit is in power on mode.
- If radio (F) was select, select the desired radio station as previous procedure before activating alarm.
- If iPod/iPhone mode was selected, make sure the iPod/iPhone was inserted in the docking properly.

SHUT OFF ALARM:

- When alarm goes off, press POWER/FUNC Button to turn it off , the alarm will reset for next day.
- To turn off the alarm completely (not reset for next day). Press the VOL +/AL 1 (VOL -/AL 2 Button), the AL 1 (AL 2) Indicator will turn off.

SNOOZE

The alarm can be temporarily turned off manually by pressing the SNOOZE/SLEEP/DIMMER Button; the alarm will turn back on automatically nine (9) minutes later. This feature can be repeated until POWER/FUNC Button was pressed.

SLEEP

In the power on mode, press the SLEEP Button to activate the sleep function, SLEEP time will appear on the display. Press the SLEEP Button repeatedly to set the sleep timer to 10 – 90 minutes as desired.

To turn off the unit before sleep timer time up, press and hold the POWER/FUNC Button until "OFF" appear on the display.

Protect Your Furniture:

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

8

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. For better Clock Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
4. Unplug the unit from the electrical power outlet immediately in case of malfunction.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

9

TROUBLESHOOTING GUIDE



If you experience difficulties in the use of this Docking System, please check the following

Symptom	Possible Problem	Solution
The unit does not respond (no power).	AC/DC Adaptor is not plugged into a wall outlet or the connector is not plugged into the DC IN jack on the back of the unit.	Plug the AC/DC adaptor into wall outlet and plug the connector into the DC IN jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
iPod/iPhone does not respond to the speaker system.	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseat it on the dock.
	Your iPod/iPhone is locked up.	Please make sure that your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for info on resetting the iPod/iPhone.
iPod/iPhone does not charge.	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseat it in the dock.
	iPod/iPhone is locked up/ frozen. iPod/iPhone battery has problem.	Please make sure your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for details on resetting.
Weak FM reception	FM antenna wire is not fully extended.	Extend or reposition the wire antenna for best reception.
Sound is distorted.	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	If the iPod/iPhone original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try others files. If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. Also try turning bass boost OFF or change the EQ setting.

10

SPECIFICATIONS

General Specifications:

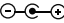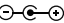Power Source of Main Unit:	DC \approx 5V, 2.5A, Center positive  or 6 x AA size batteries (Not included).
AC/DC Adaptor:	
Input:	AC 100-240V~, 50/60Hz, 0.5A 
Output:	DC \approx 5V, 2.5A, Center positive
Audio Power:	2 x 2 W
Impedence of Speakers:	4 Ohm; 3W x 2
FM Radio Frequency Range:	88 – 108 MHz

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Accessory:
1 x User's Manual
1 x AC/DC Adaptor

11

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email: service@craigelectronics.com

Printed in China

CMB3228-IB-E0AE1-B0KU

12