



RC897T

ENGLISH



Copyright © 2008, LG Electronics U.S.A., Inc.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

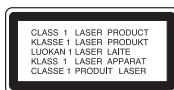

CAUTION: CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED AVOID EXPOSURE TO THE BEAM.

CAUTION: This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

Visible laser radiation when open. DO NOT STARE INTO BEAM.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

REGULATORY INFORMATION: FCC Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC COMPLIANCE: The responsible party for this product's compliance is: LG Electronics U.S.A., Inc., 1000 Sylvan Avenue, Englewood Cliffs, NJ. Phone: 1-201-816-2000.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Copyrights

- Recording equipment should be used only for lawful copying and you are advised to check carefully what is lawful copying in the area in which you are making a copy. Copying of copyright material such as films or music is unlawful unless permitted by a legal exception or consented to by the rights owner.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision corporation. Reverse engineering or disassembly is prohibited.
- CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS MODEL 525p DVD+VCR RECORDER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Contents

Before you start	5-6
Remote control	7
Main Unit	8
Hooking up the unit	9-13
Operating USB Flash Drive	13
Auto setup	14
Using the Home Menu	15
Adjust the SETUP settings	16-22
Displaying disc Information	22-23
Play a tape	24
Play a disc	24-25
Playing MPEG4 movie files	26
Listening to a music	27
Viewing a photo	28
Recording	29-30
Editing a title	31-34
Dubbing	34
Language Codes	35
Area Codes	35
Troubleshooting	36-37
Specifications	38
Warranty	Rear Cover







Before connecting, operating or adjusting this product,
please read this instruction booklet carefully and completely.



Before you start





Recordable and Playable discs

This unit can play and record all widely-used DVD types. The table below shows some specific compatibility differences depending on the disc types.

	DVD-R	DVD-RW	DVD-RAM	DVD+R	DVD+R(DL)	DVD+RW
Symbol used in this manual	-R	-RW <small>VR</small> -RW <small>Video</small>	RAM	+R	+R	+RW
Logos						
Re-Writable	No	Yes	Yes	No	No	Yes
Formatting Mode (new discs)	Video mode	Video mode	VR mode	Auto	Auto	Auto
Editing	Limited	Yes	Yes	Limited	Limited	Yes
Play on other players	The player must be compatible with corresponding media and the media has to be finalized.					
Recommended discs	Mitsubishi(8x,16x) Verbatim(8x,16x)	Mitsubishi(4x) Verbatim(4x) JVC(4x) Maxell(4x)	Mitsubishi(3x) Maxell(5x)	Mitsubishi(8, 16x) Verbatim(8x,16x)	Mitsubishi(2.4x, 8x)	Mitsubishi(4x) HP(4x) Verbatim(4x) Ricoh(4x)

Playable discs

The table below shows the file formats and media types that this unit can playback.

	DVD	Audio CD	Data disc (MPEG4, JPEG, MP3 or WMA)
Symbol used in this manual	DVD	ACD	MPEG4 JPEG MP3 WMA
Logos			 
Characteristics	Discs such as movies that can be purchased or rented.	Music CDs or CD-R/RWs in music CD format that can be purchased	CD-R/CD-RW/DVD discs that contain MPEG4, JPEG, MP3 or WMA files.

Notes on discs


- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). Doing so may result in malfunctions.
- Depending on the recording software & the finalization, some recorded discs (CD-R/RW or DVD±R/RW) may not be playable.
- DVD-R/RW, DVD+R/RW and CD-R/RW discs recorded using a personal computer or a DVD or CD Recorder may not play if the disc is damaged or dirty, or if there is dirt or condensation on the Unit's lens.
- If you record a disc using a personal computer, even if it is recorded in a compatible format, there are cases in which it may not play because of the settings of the application software used to create the disc. (Check with the software publisher for more detailed information.)
- This unit requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback.
- Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copy-right owner.

Restrictions on copying

Some video material is copy-once protected: Such material cannot be copied to VHS Tape or DVD. Copy-protected video includes DVD-Video discs and some broadcasts. If copy-protected material is encountered during a recording, recording will pause or stop automatically and an error message will be displayed on-screen.

- PAL format signals from the analog or the DV inputs is not recorded correctly with this unit.

About the Symbol Display

"  " may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific media.

Regional Codes

 

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or "ALL".

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from the unit, the message "Incorrect region code. Can't play back" appears on the TV screen.


Remote Control Operation

Point the Remote Control at the remote sensor and press the buttons.

Remote Control Battery Installation

Remove the battery cover on the rear of the Remote Control, and insert R03 (size AAA) battery with  and  matched correctly.

Remote control

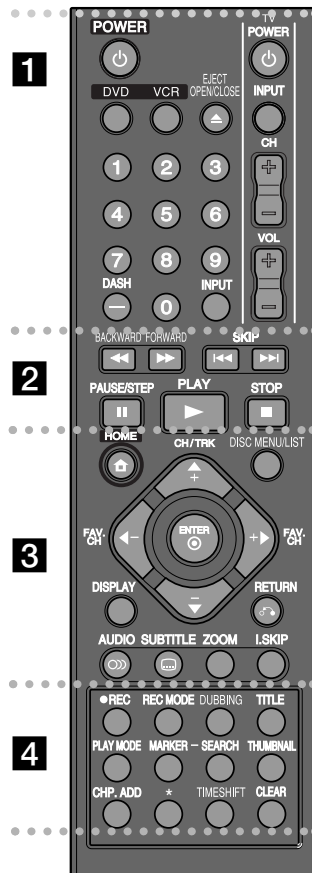

- • • • • **1** • • • • •
- POWER:** Switches the unit ON or OFF.
- DVD:** Selects the unit's mode to DVD.
- VCR:** Selects the unit's mode to VCR.
- EJECT, OPEN/CLOSE:** Opens and closes the disc tray, and ejects the tape in the VCR deck.
- 0-9 numerical buttons:** Selects numbered options in a menu.
- DASH (-):** Enters a channel number for multiple channels such as 2-1, 2-2, etc.
- INPUT:** Changes the input source (Tuner, AV1-2, or DV IN).
- TV Control Buttons:** You can control the sound level, input source, selects TV's channel and power switch of your TV.
- • • • • **2** • • • • •
- BACKWARD / FORWARD (◀▶):**
 - DVD: Search backward or forward.
 - VCR: Rewinds/Advances the tape during the STOP mode, for fast reverse/forward picture search.
- SKIP (⏮⏭):** Go to next or previous chapter or track.
- PAUSE/STEP (⏸):** Pause playback or recording temporarily.
- PLAY (▶):** Starts playback.
- STOP (■):** Stops playback or recording.
- • • • • **3** • • • • •
- HOME:** Accesses or removes the HOME menu.
- DISC MENU/LIST:** Accesses menu on a DVD disc. Switches between Title List-Original and Title List-Playlist menu.
- DISPLAY:** Accesses On-Screen Display.
- RETURN (↶):** Removes the on-screen displays.
- ◀ / ▶ / ▲ / ▼ (left/right/up/down):** Used to navigate on-screen displays.
- ENTER (⊙):** Acknowledges menu selection.
- CH/TRK (+/-):** Scans up or down through memorized channels and adjust tracking.
- FAV. CH (+/-):** Tunes to your favorite channels.
- AUDIO (🔊):** Selects an audio language or audio channel.
- SUBTITLE (📄):** Selects a subtitle language.
- ZOOM:** Enlarges DVD video image.

I.SKIP (INSTANT SKIP): Skips 30 seconds forward during playback.

- • • • • **4** • • • • •
- REC (●):** Starts recording.
- REC MODE:** Selects the recording mode.
- DUBBING:** Press to copy DVD to VCR (or VCR to DVD).
- TITLE:** Displays the disc's Title menu, if available.
- PLAY MODE:** Selects a play mode.
- MARKER:** Marks any point during playback.
- SEARCH:** Displays Marker Search menu.
- THUMBNAIL:** Selects a thumbnail picture.
- CHP. ADD:** Inserts a chapter marker when playing/recording.
- ***: Feature is not available.
- TIMESHIFT:** To play the title being recorded and also currently being recorded appears as PIP.
- CLEAR:** Removes a mark on the Marker Search menu.

Setting up the remote to control your TV


You can operate your TV with the supplied remote control. If your TV is listed in the table below, set the appropriate manufacturer code.

While holding down TV POWER button, and press the manufacturer code for your TV with the numerical buttons (see the table below). Release the TV POWER button to complete setting.

Manufacturer	Code Number
LG / GoldStar	1 (Default), 2
Zenith	1, 3, 4
Samsung	6, 7
Sony	8, 9
Hitachi	4

Depending on your TV, some or all buttons may not function on the TV, even after entering the correct manufacturer code. When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.

Main Unit

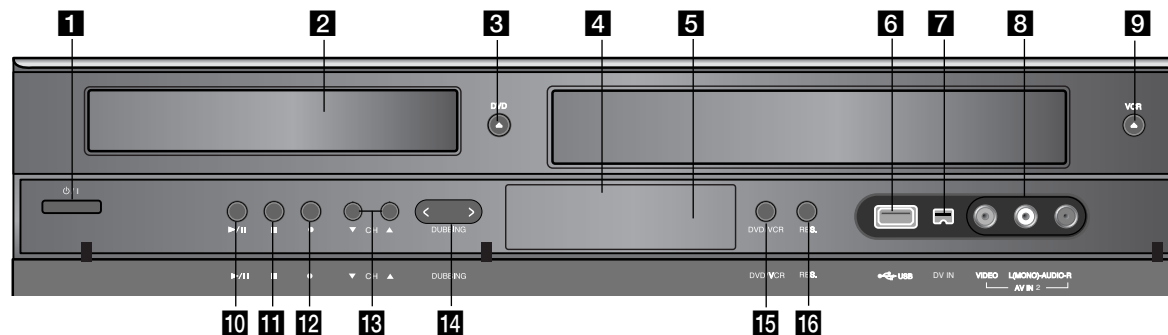

1 **⏻ / I (POWER)**

Switches the unit ON or OFF.

2 **Disc Tray**

Insert a disc here.

3 **DVD (⏮)**

Opens or closes the disc tray.

4 **Display window**

Shows the current status of the recorder.

5 **Remote Sensor**

Point the remote control here.

6 **USB Port**

Connect a USB Memory Stick.

7 **DV IN**

Connect the DV output of a digital camcorder.

8 **AV IN 2 (VIDEO IN/AUDIO IN (Left/Right))**

Connect the audio/video output of an external source (Audio system, TV/Monitor, VCR, Camcorder, etc.).

9 **VCR (⏮)**

Ejects the tape in the VCR deck.

10 **▶ / II (PLAY / PAUSE)**

Starts playback.

Pause playback or recording temporarily, press again to exit pause mode.

11 **■ (STOP)**

Stops playback or recording.

12 **● (REC)**

Starts recording. Press repeatedly to set the recording time.

13 **CH (▼ / ▲)**

Scans up or down through memorized channels.

14 **DUBBING**

Press to copy DVD to VCR (or VCR to DVD).

15 **DVD/VCR**

Toggles control between the DVD deck and the VCR deck.

16 **RES.**

Sets the output resolution for HDMI and COMPONENT OUTPUT jacks.


- HDMI: 1080p, 1080i, 720p, 480p, 480i

- COMPONENT: 480p, 480i

Hooking up the unit


1 Antenna connection

Connect the Terrestrial TV antenna to the ANTENNA IN jack on the unit.
If your antenna cable is flat wire type, use a 300-ohm to 75-ohm antenna adapter.

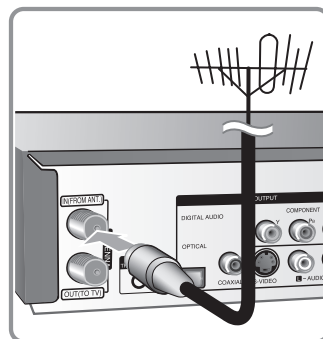

2 Antenna connection to your TV


Connect one end of the RF cable to ANTENNA OUT jack on the unit and other end to ANTENNA IN jack on your TV.
Passes the signal from the ANTENNA IN jack to your TV/monitor.

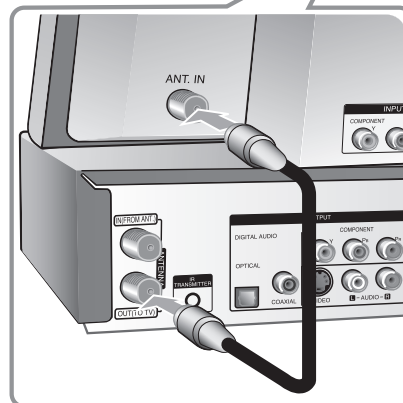

3 Audio/Video connection


Connect one end of the video (yellow) cable to the VIDEO OUTPUT jack on the unit and other end to the VIDEO INPUT jack on your TV.

Connect one ends of the audio cables (red and white) to the analog AUDIO OUTPUT jack on the unit and other ends to the AUDIO INPUT jack on your TV.

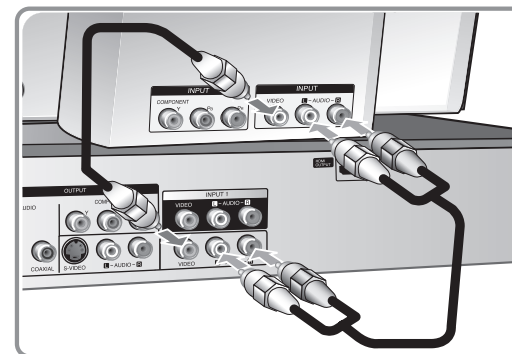

4 Power cord connection

Connect the mains lead to the AC IN terminal on the unit. Then plug the power cord into the mains.

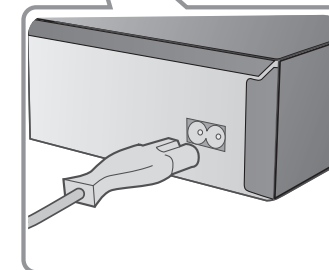

Hooking up the unit - more you can do

Connecting a Cable Box


If a cable box is required for reception the cable channels, connect a coaxial cable from the wall jack to the IN connector on the cable box and a coaxial cable from the OUT connector on the cable box to the ANT. IN on the recorder.

To view or record a cable channel through RF output from the cable box, tune the recorder to the cable box output channel (usually channel 3 or 4). Select a channel using the cable box. With this connection, you cannot record one channel while viewing another.

Component connection

Connect one end of the component (Y PB PR) cable to the COMPONENT OUTPUT jack on the unit and other end to the COMPONENT INPUT jack on your TV.

Connect one end of the audio cables (red and white) to the analog AUDIO OUTPUT jacks on the unit and other end to the AUDIO INPUT jacks on your TV.

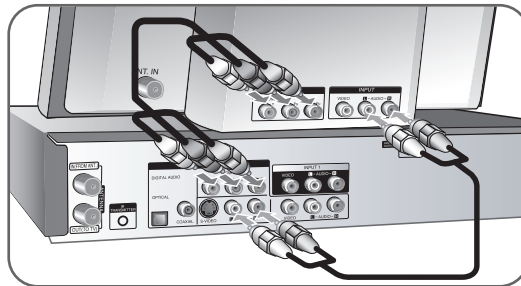


If your television is a high-definition or "digital ready" television, you may take advantage of the unit's progressive scan output for the highest video resolution possible. If your TV does not accept the Progressive Scan format, the picture will appear scrambled with the progressive signal. Set the resolution to 480p using RES. button on the front panel for progressive signal.

S-Video connection

Connect one end of the S-Video cable to the S-VIDEO OUTPUT jack on the unit and other end to the S-Video INPUT jack on your TV.


Connect one ends of the audio cables (red and white) to the analog AUDIO OUTPUT jack on the unit and other ends to the AUDIO INPUT jack on your TV.

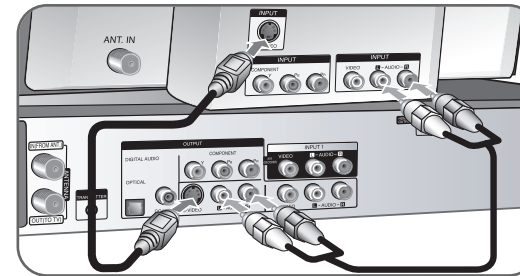

Digital audio connection

Connecting to an amplifier/receiver, Dolby Digital/MPEG/DTS decoder or other equipment with a digital input.


Connect one end of the digital audio cables (COAXIAL or OPTICAL) to the digital audio output jack (COAXIAL or OPTICAL) on the unit and other end to the digital audio input jack (COAXIAL or OPTICAL) on your amplifier.

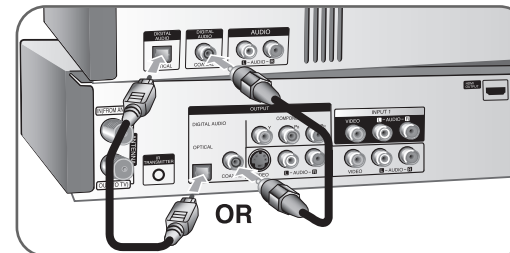

This recorder does not perform internal (2 channel) decoding of a DTS sound track. To enjoy DTS multi channel surround, you must connect this recorder to a DTS compatible receiver via one of this recorder's digital audio outputs.

HDMI connection

Connect one end of the HDMI cable to the HDMI OUTPUT jack on the unit and other end to the HDMI INPUT jack on your TV.

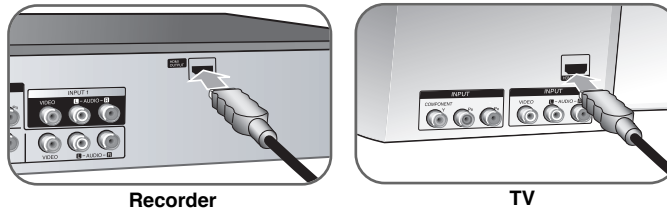

When you use the HDMI connection, you can change the resolution (480i, 480p, 720p, 1080i or 1080p) for the HDMI output using RES. button.

About HDMI

HDMI (High Definition Multimedia Interface) supports both video and audio on a single digital connection for use with DVD Players, Set-Top Boxes, and other AV devices.

HDMI was developed to provide the technologies of HDCP (High-bandwidth Digital Contents Protection). HDCP is used to protect digital content transmitted and received.

HDMI has the capability to support standard, enhanced, or high-definition video plus standard to multi-channel surround-sound audio. HDMI features include uncompressed digital video, a bandwidth of up to 5 gigabytes per second, one connector (instead of several cables and connectors), and communication between the AV source and AV devices such as DTVs.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.

Note on HDMI connection

- If your TV is NOT capable of handling 96 kHz sampling frequency, set the [Sampling Freq.] option to [48 kHz] on the setup menu (See page 18). When this choice is made, this unit will automatically convert any 96 kHz signals to 48 kHz so your system can decode them.
- If your TV is not equipped with Dolby Digital and MPEG decoder, set the [Dolby Digital] and [MPEG] options to [PCM] on the setup menu (See page 18).

- If your TV is not equipped with a DTS decoder, set the [DTS] options to [OFF] on the setup menu (See page 18). To enjoy DTS multi channel surround, you must connect this unit to a DTS compatible receiver via one of this unit's digital audio outputs.
- If a device with HDMI connection is not equipped with DTS decoder, the message is displayed with DTS signal detection. Change the audio source to solve this symptom using AUDIO.
- If there is noise or lines on the screen, please check the HDMI cable.
- Changing the resolution when the unit is connected with HDMI connector may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.
- When you connect an HDMI or DVI compatible device make sure of the followings:
 - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
 - The connected device's video input is set correctly for this unit.
 - The connected device is compatible with 720(1440)x480i, 720x480p, 1280x720p, 1920x1080i or 1920x1080p video input.
- Not all HDCP-compatible DVI devices will work with this unit.
 - The picture will not be displayed properly with non-HDCP device.

What is SIMPLINK?




Some functions of this unit are controlled by the TV's remote control when this unit and an LG TV with SIMPLINK are connected through HDMI connection.

- Controllable functions by LG TV's remote control; Play, Pause, Scan, Skip, Stop, Power Off, etc.
- Refer to the TV owner's manual for the details of SIMPLINK function.
- LG TV with SIMPLINK function has the logo as shown above.

Connecting the IR control cable

The Recorder sends commands to your connected Set-Top Box to change the channels of it through the IR control cable when AV1 timer recording starts.

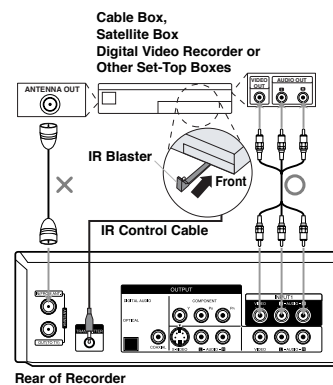

Connect the plug of the IR control cable to the IR TRANSMITTER jack on the Recorder.

Find the Set-Top Box IR Sensor. Refer to "How to find the IR sensor on the Set-Top Box" on right.

On the IR control cable, attach the adhesive tape (included) to the flat surface just below the IR Blaster on the IR control cable.

Place the IR Blaster in front of the IR sensor on your Set-Top Box approximately one inch away from the remote sensor.


After connecting, make the necessary setting (page 21).

Note on IR control cable connection


- If your Set-Top Box does not have Audio/Video Out jacks, you cannot use the AV1 timer recording using this connection.
- Important, for the Recorder to record programs received through the Set-Top Box, the Set-Top box must remain turned on at all times.
- If your Set-Top Box has IR and RF control together, set the control to IR on the Set-Top box to use this IR connection
- Do not connect an accessory other than the supplied IR control cable to the IR TRANSMITTER jack.
- Do not cover the transmitter.
- Not all Set-Top Box devices will work with this Recorder.
- Refer to the owner's manual of the connected Set-Top Box as well.
- Do not use RF coaxial cable to connect the Set-Top Box.
- Some programs may be copy-protected, the unit cannot record them.

How to find the IR sensor on the Set-Top Box

Turn off the Set-Top Box and hold the Remote Control of the Set-Top Box so that it touches the front of the device.

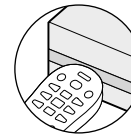


Yes

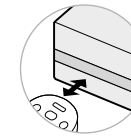

No

Slowly move the Remote Control across the front of the device while pressing POWER button On and Off.

You must press and release the POWER button each time you move the Remote Control (holding down the button will not work).

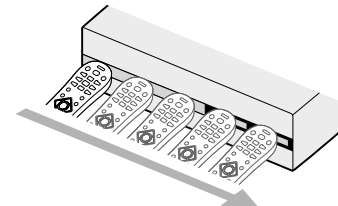


When the cable box turns on, you have found the sensor. Remember the location of the sensor.

Recommended Set-Top Box devices

- **Cable Box:** Motorola, Pioneer, Scientific Atlanta, Sony
- **Satellite Box:** DirecTV, Echostar, Dish NetWork, HTS, Hughes, JVC, Proscan, RCA, Sony
- **Digital Video Recorder:** Tivo, DirecTV, Dish NetWork, Scientific Atlanta, Motorola, Hughes, Humax, Philips, Sony

Connecting to the INPUT 1 or AV IN 2 Jacks


Connect the input jacks (INPUT 1 or AV IN 2) on the unit to the audio/video out jacks on your accessory component using audio/video cables.

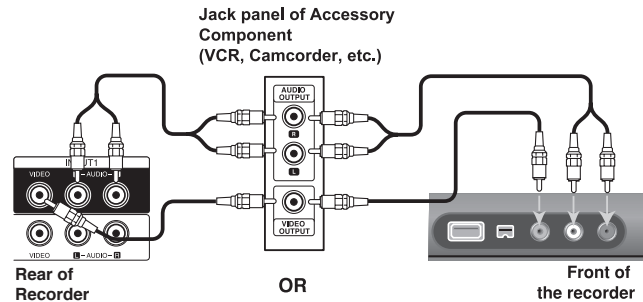

Connecting a Digital Camcorder

Using the front panel DV IN jack, it is possible to connect a DV digital camcorder and digitally transfer DV tapes to DVD.

Use a DV cable (not supplied) to connect the DV in/out jack of your DV camcorder to the front panel DV IN jack of this unit.

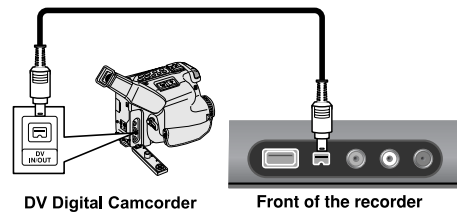

The DV IN jack is for connection to DV digital camcorder only. It is not compatible with digital satellite tuners or D-VHS video decks. Disconnecting the DV cable while recording contents of the connected digital camcorder may result in malfunction.

Operating USB Flash Drive

	ON REMOTE
1. Insert an USB Flash Drive to the USB port:	—
2. Displays the HOME menu:	HOME
3. Select a main option: [MUSIC], [PHOTO] or [MOVIE] option	◀▶
4. Select the [USB] option:	▲▼
5. Displays corresponding menu list: For details of operations on each files, refer to relevant pages.	ENTER

Using USB Flash Drive - more you can do

Using an USB Flash Drive

This unit can play the MP3/WMA/JPEG/MPEG4 files contained in the USB Flash Drive.

Inserting the USB Flash Drive – Insert straight-in until it fits into place.

Removing the USB Flash Drive – Withdraw the USB Flash Drive carefully when the connected USB Flash Drive is not operating.

Notes on USB Flash Drive

- The contents on the disc cannot be moved or copied to USB Flash Drive.
- Keep the USB Flash Drive out of reach of children. If swallowed, seek medical advice immediately.
- This unit supports only USB Flash Drive with FAT16 or FAT32 format.
- The USB Flash Drives which require additional program installation when you have connected it to a computer are not supported.
- This unit is compatible with the Flash type USB device that supports USB 1.1.
- This unit may not support some USB Flash Drives.
- **Do not extract the USB Flash Drive during operation (play, etc.). It may cause a malfunction on this unit.**
- The USB Flash Drive option in the HOME menu is not selectable if the units in VCR mode.

Auto setup

When the unit is turned on for the first time, the initial setup wizard sets the language, Channels and Clock, step by-step until the setup is complete.

ON REMOTE

1 Turn on the unit The initial setup wizard appears on the screen.	POWER
2 Choose a language:	▲ ▼
3 Select the chosen language:	ENTER
4 Check the antenna and go to the next step:	ENTER
5 Select the tuning band option (TV for over-the-air antenna reception or CATV for cable subscribers)	▲ ▼ ENTER
6 Select the [Start] and starts channel scan:	ENTER
7 Set the clock:	▲ ▼ ◀ ▶, ENTER
8 Close the initial setup:	ENTER

[Add]: Adds an unmemorized channel manually.

[Delete]: Deletes a memorized channel from channel list. A digital channel has multiple channels, so if you delete the digital channel, all multiple channels will be deleted.

[Skip On/Off] (for memorized digital channel only): Set the channel to the skipped channel. The skipped channel number will dim. The channel cannot be selected using the CH/TRK (+/-) button during normal TV viewing.

[Favorite On/Off]: Set the memorized channel to favorite channel.

(favorite channel shows **FAV** icon)

[MFT Adjust] (for memorized analog channel only): To obtain a clearer picture, tune the MFT option.


Press RETURN repeatedly to exit Channel Edit menu.

Auto setup - more you can do

Adjust the programmed channels


Press HOME, then use ◀ ▶ to select [Setup] option. Press ENTER while [Start] is selected. The SETUP menu appears on the screen. Select the [Channel Edit] on the second level options then press ▶ to move to the third level. Press ENTER while [Edit] option is selected. The channel editing screen appears on the screen.

Select which channel you would like to edit and press ENTER. An option menu appears on the left side of the screen. (You can select Analog or Digital channel using ◀ ▶).

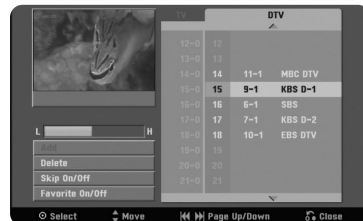

Using the Home Menu

	ON REMOTE
1 Displays the HOME menu:	HOME
2 Select a main option:	◀▶
3 Select a sub option:	▲▼
4 Execute the selected option	ENTER
5 Exit the HOME menu:	HOME

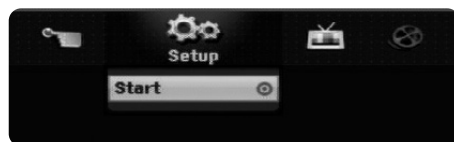

Using the Home Menu - more you can do

Setup

Start – Displays SETUP menu. (page 16-22)

TV

Auto Ch. Scan – Displays [Auto Channel Set] menu. (page 16)

Channel Edit – Displays Channel Edit setup menu. (page 16)

Channel List – Displays the Channel List menu. (page 23)

Timer Record – Displays [Timer Record] menu. (page 29-30)

MOVIE

VCR – Plays back Video tape. (page 24)

DISC

- Displays [Title List] menu, which shows recorded titles on the disc. (page 31)
- Displays [Movie List] menu, which shows MPEG4 movie files on the disc. (page 26)
- Plays back DVD-Video disc (page 24).

USB – Displays [Movie List] menu, which shows MPEG4 movie files on the USB Flash Drive. (page 26)

PHOTO

DISC – Displays [Photo List] menu, which shows photo files on the disc. (page 28)

USB – Displays [Photo List] menu, which shows photo files on the USB Flash Drive. (page 28)

MUSIC

DISC – Displays [Music List] menu, which shows music files or audio tracks on the disc. (page 27)

USB – Displays [Music List] menu, which shows music files on the USB Flash Drive. (page 27)

Easy Menu

Dubbing – Copy the contents of a DVD or VHS tape (and vice versa). (page 34)


Disc Manager: Displays the disc settings menu. (page 21-22).

Rec.Mode – Displays [Disc Record Mode] option in the SETUP Menu. (page 20-21)

DV Input: Changes to DV Input mode.


Adjust the SETUP settings

	ON REMOTE
1 Displays the HOME menu:	HOME
2 Select the [Setup] option:	◀▶
3 Select the [Start] option:	ENTER
4 Select a desired option on the first level:	▲▼
5 Move to second level:	▶
6 Select a desired option on the second level:	▲▼
7 Move to third level:	▶
8 Adjust or confirm the setting:	▲▼, ENTER
9 Go back to the previous level:	◀

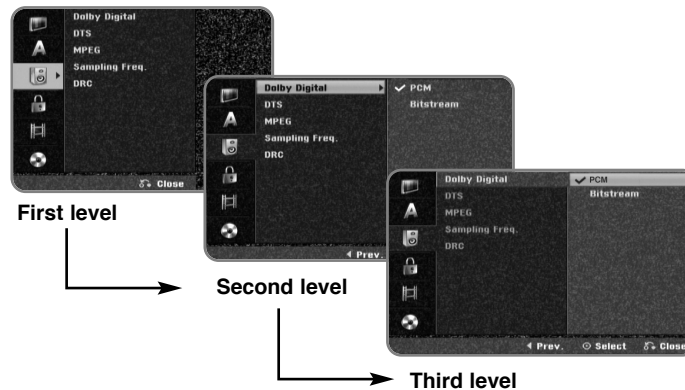

Adjust the SETUP settings - more you can do

Adjust the general settings

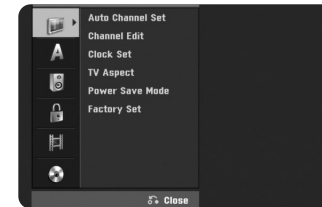

Auto Channel Set – This option automatically scans and sets the available channels.

[Band]: Select TV for over-the-air antenna reception or CATV is for cable subscribers.

[Start]: Start the channel scanning.

Channel Edit – This option allows you to add channels and edit preset channels.

[Edit]: Displays the screen which shows the preset channel list. (page 14)

Clock Set– The clock must be set in order to use [Timer record].

TV Aspect – Selects the aspect ratio of the connected TV.

[4:3 Letter Box]: Select this when connecting to a standard 4:3 screen TV and prefer the wide picture with bands on the upper and lower portions of the screen.

[4:3 Pan Scan]: Select this when connecting to a standard 4:3 screen TV and prefer the wide picture on the entire screen. Cuts off the portions that do not fit.

[16:9 Wide]: Select this when connecting to a wide-screen TV.

Power Save mode – Selects whether this unit is in power save mode when the power is turned off. This option is not available when a timer recording is set.

[ON]: The front panel display is turned off and only signals arriving at the antenna input are passed through when the unit is turned off.

[OFF]: Turns off the [Power Save Mode].

Factory Set – You can reset the unit to all its factory settings. Some options cannot be reset (Memorized channel, Rating, Password, and Area Code). The auto setup menu appears on the screen after the factory settings.

Adjust the language settings



Display Menu – Select a language for the Setup menu and on-screen display.

Disc Menu/Audio/Subtitle – Select a language for the Menu/Audio/Subtitle.

[Original]: Refers to the original language in which the disc was recorded.


[Others]: To select another language, press number buttons to enter the corresponding 4-digit number according to the language code list on page 35.

If you make a mistake while entering number, press CLEAR repeatedly to delete numbers one by one then correct it.

[OFF] (for Disc Subtitle): Turn off Subtitle.

DTV Caption – Digital channels sometimes provide caption, often in a different language. You can set a default caption language with this setting. If you select [Off], DTV Caption is not displayed. This unit cannot record the DTV caption in DVD mode.

If available, you can also select a caption language while viewing digital TV, press SUBTITLE repeatedly.

If captions are available, the DTV caption icon () appears on the channel information display to indicate that you can select one of those captions with the SUBTITLE button.

Analog Caption is not displayed on this Recorder. If your TV has the Analog Caption function, you can switch the Analog Caption through the TV. If analog and digital caption is overlapped on the TV screen, switch off one of two captions.

DTV Caption Style – Selects the style for caption.

[Set by program]: Default caption type provided by a broadcaster is shown when captions appear.

[Custom]: Customized text is shown when captions appear.

Use [DTV Caption Option] to customize the caption type.

DTV Caption Option – You can set [DTV Caption Option] only when [DTV Caption Style] is selected in [Custom].

[Font]: Selects the font type for captions.

[Size]: Selects the font size for captions.

[Color]: Selects the font color for captions.

[Opacity]: Selects the font opacity for captions.

- Solid: The text is solid (without any transparency).

- Flash: The text blinks once a second.

- Transparent: The text is transparent (In this case, whatever the color is, the color does not affect the captions display).

- Translucent: The text is translucent.

[BG (Background) Color]: Selects the background color for captions.

[BG (Background) Opacity]: Selects the background opacity for captions.

- Solid: The text background color is solid (without any transparency).

- Flash: The text background color blinks once a second.

- Transparent: The text background color is transparent (In this case, whatever the background color is, the color does not affect the captions.).

- Translucent: The text background color is translucent.

[Edge Type]: Selects the edge type for captions.

- None: The text has no edge.

- Raised: The text is raised.

- Depressed: The text is depressed.

- Uniform: The text has a uniform edge.

- Left Shadow: The text has a left-shadow edge.

- Right Shadow: The text has a right-shadow edge.

[Edge Color]: Selects the edge color for captions.

DTV Audio – Digital channels sometimes provide multiple audio tracks, often in a different language. You can set a default audio language with this setting.

If provided by the broadcaster, the **MULTILINGUAL** (DTV Multiple Audio Icon) appears on the channel information display to indicate that you can select one of those audio languages with the AUDIO button.

Adjust the audio settings



Dolby Digital / DTS / MPEG – Selects the type of digital audio signal when using the DIGITAL AUDIO OUTPUT jack.

[Bitstream] – Select this when you connect this unit's DIGITAL AUDIO OUTPUT jack to an audio component with a built-in Dolby Digital, DTS or MPEG decoder.

[PCM] (for Dolby Digital / MPEG) – Select this when you connect this unit's DIGITAL AUDIO OUTPUT jack to an audio component without a built-in Dolby Digital or MPEG decoder.

[Off] (for DTS) – Select this when you connect this unit's DIGITAL AUDIO OUTPUT jack to an audio component without a built-in DTS decoder.


Sampling Freq. – Selects the sampling frequency of the audio signal.

[48 kHz]: In case of DVD with 96kHz sampling, Output is converted to 48kHz. If your receiver or amplifier is NOT capable of handling 96 kHz signals, select [48 kHz].

[96 kHz]: The digital audio signals are output in their original sampling format.

DRC (Dynamic Range Control) – With the DVD format, you can hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). This allows you to listen to a movie at a lower volume without losing clarity of sound. Set DRC to [ON] for this effect.

Adjust the lock settings

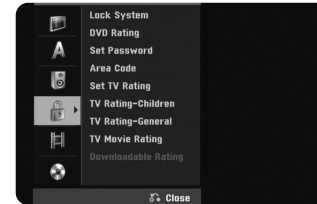

OR



[US Rating]

To access options, you must enter the 4-digit password. If you have not yet entered a password you are prompted to do so. Enter a 4-digit password. Enter it again to verify. If you make a mistake while entering number, press CLEAR repeatedly to delete numbers one by one then correct it.

If you forget your password, you can reset it. Displays the SETUP menu. Input '210499' and select [OK] to confirm. The password has now been cleared.

When you set the TV Rating, a program with a TV Rating beyond your rating setting cannot be recorded correctly. (Normal recording, Timer recording, etc.)

The default TV Rating setting is to allow all programs to be viewed.

Lock System – You can lock certain unsuitable channels to prevent children from accessing them, or set a TV Rating, so that any digital TV program classified above that rating by the broadcaster will be restricted. If the [Lock System] is set to [OFF], Lock options are not effective.

DVD Rating – Select a rating level. The lower the level, the stricter the rating. Select [No Limit] to deactivate the rating.

If you set Lock System off, rating will not be effective.

Set Password – Changes or deletes the password.

[Change]: Enter the new password twice after entering the current password.

[Delete]: Delete the current password after entering the current password.

If you delete password, All of Rating options are set to default.

Area code – Select a code for a geographic area as the playback rating level. This determines which area's standards are used to rate DVDs controlled by the parental lock. See the Area Codes on page 35.

Set TV Rating - Select [US Rating] or [Canadian Rating] to set the TV rating options according to your local broadcast system. The [Set TV Rating] option is effective for digital TV program only.

TV Rating-Children (US Rating) – Prevents children from watching certain children's TV programs according to the rating setting. This rating applies only to TV programs for children. Unless you block TV programs intended for mature audiences in the [TV Rating – General] menu, your children could view those programs.

Select the [TV Rating-Children] option then press ►.
 Input a password as shown in [Lock System] on page 18. Select the [Age] or [Fantasy Violence] option then press ►.
 [Age]: Selection applies regardless of content category of rating.
 [Fantasy Violence]: Selection applies if TV programs include rating for Fantasy Violence.
 Select a rating then press ENTER.
 [TV-Y]: All Children.
 [TV-Y7]: Directed toward children age 7 and older.
 [Blocking Off]: Permits all programs.

TV Rating-General (US Rating) – Blocks TV programs that you or your family may not wish to watch, based on the rating scheme set.

Select the [TV Rating-General] option then press ►.
 Input a password as shown in [Lock System] on page 18.
 Select the [Age], [Dialogue], [Language], [Sex], or [Violence] option then press ►.
 [Age]: Selection applies regardless of content category of rating.
 [Dialogue]: Selection applies if TV programs have rating for dialogue.
 [Language]: Selection applies if TV programs have rating for language.
 [Sex]: Selection applies if TV programs have rating for sex.
 [Violence]: Selection applies if TV programs have rating for violence.
 Select a rating then press ENTER.
 [TV-G]: General audience.
 [TV-PG]: Parental guidance suggested.
 [TV-14]: Parents strongly cautioned.
 [TV-MA]: Mature audience only.
 [Blocking Off]: Permits all programs.

TV Movie Rating (US Rating) – Blocks movies according to the movie ratings restrictions so children cannot view certain movies. You can set the ratings to block out all the movies with ratings above a specified level. Keep in mind that the movie ratings apply only to movies shown on TV, not TV programs such as soap operas.

Select the [TV Movie Rating] option then press ►.
 Follow step 2 as shown in [Lock System] above.
 Select a rating then press ENTER.
 [G]: General audiences
 All ages admitted.
 [PG]: Parental guidance suggested.
 Some material may not be suitable for children.
 [PG-13]: Parents strongly cautioned
 Some material may not be appropriate for children under 13.
 [R]: Restricted under 17 requires accompanying parent or adult guardian.
 [NC-17]: No one 17 and under admitted.
 [X]: No one 17 and under admitted (Adult only).
 [Blocking Off]: Permits all programs.

Downloadable Rating (US Rating) – The rating information can be updated if a TV station sends the downloadable rating information.

Downloadable Rating is a technology that allows digital TV stations to create and deliver new rating systems in the future if they choose.

Select the [Downloadable Rating] option then press ►.
 Follow step 2 as shown in [Lock System] above.
 Select a rating title or TV rating then press ►.
 Select a rating then press ENTER.

- If rating information is not downloaded from a TV station, the Downloadable Rating option will not be available.
- Rating information is automatically downloaded while watching DTV channels. It may take several seconds.
- The Downloadable Rating option is available for use after rating information is downloaded from a TV station. However, depending on the information from a TV station, it may not be available for use.
- Rating levels may differ depending on the broadcasting station.
- The default option name and Downloadable Rating changes depending on the downloaded information.
- The on-screen display for Downloadable Rating options will appear with a language that TV station sends.
- The rating titles (For example: Humor, etc) and TV ratings (For example: MH, H, VH, etc) may differ depending on the TV station.

TV Rating-CELR (Canadian Rating) (CELR: Canadian English Language Rating system)

Select the [TV Rating-CELR] option then press ►.
Select a rating then press ENTER.


- [E]: Exempt TV program includes: news, sports, documentaries and other information program, talk shows, music videos, and variety program.
- [C]: Program intended for children under age 8.
- [C8+]: Program generally considered acceptable for children 8 years and over to watch on their own.
- [G]: General audience.
- [PG]: Parental guidance.
- [14+]: Program contains themes or content which may not be suitable for viewers under the age of 14.
- [18+]: Adult program.
- [Blocking Off]: Permits all programs.

TV Rating-CFLR (Canadian Rating) (CFLR: Canadian French Language Rating system)

Select the [TV Rating-CFLR] option then press ►.
Select a rating then press ENTER.

- [E]: Exempt TV program
- [G]: General - Program intended for audience of all ages.
- [8 ans+]: Not recommended for young children.
- [13 ans+]: Program may not be suitable for children under the age of 13.
- [16 ans+]: Program is not suitable for children under the age of 16.
- [18 ans+]: Program restricted to adults.
- [Blocking Off]: Permits all programs.

Adjust the recording settings

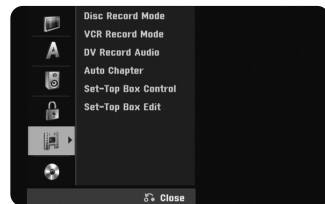

Disc Record Mode – Select the picture quality for recording from XP, SP, LP, EP or MLP. See recording time of each mode on page 38.

[XP]: Highest picture quality gives.

[SP]: Standard picture quality.

[LP]: Slightly lower picture quality than [SP] mode.

[EP]: Low picture quality.

[MLP]: The longest recording time with the lowest picture quality.

VCR Record Mode – Select the picture quality for VCR recording from; SP (Standard Play), SLP (Super Long Play).

DV Record Audio – You need to set this if you have a camcorder using 32kHz/12-bit sound connected to the front panel DV IN jack.

Some digital camcorders have two stereo tracks for audio. One is recorded at the time of shooting; the other is for overdubbing after shooting.

On the Audio 1 setting, the sound that was recorded while shooting is used.

On the Audio 2 setting, the overdubbed sound is used.

Auto Chapter – When DVD recording, chapter markers are added automatically in every specified interval (5 or 10 min.).

If you select None, switch off automatic chapter marking altogether with the No Separation setting.

Set-Top Box Control – Select [ON] when you connect a Set-Top Box (Cable Box, Satellite Box, Digital Video Recorder, etc) with IR control cable. If not, select [OFF].



Set-Top Box Edit – This setting is available only if the [Set-Top Box Control] option is set to [ON]. If you connect the Recorder to the Set-Top Box as described in page 12 so the Recorder can change the channels on the connected Set-Top Box when timer recording of AV1 input starts.

Select [Set-Top Box Edit] on the setup menu then press ►. The [Edit] icon is highlighted.

Press ENTER while the [Edit] icon is highlighted.

[Set-Top Box Control] menu shows the current settings.

If you want to edit the settings, use ◀ / ▶ to select [Edit] icon then press ENTER. The [Set-Top Box Edit] menu appears.

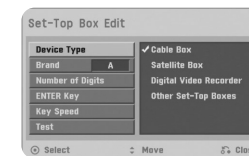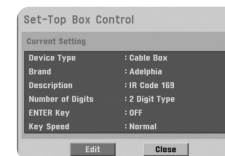

Use ▲ / ▼ to select a main option then press ENTER.

[Device Type]: Selects the device type.

[Brand]: Selects the brand of the Set-Top Box.

[Number of Digits]: Selects the number of digits of the Set-Top Box's channel.


[Enter Key]: If your device needs ENTER key to change channels, select [ON]. If not, select [OFF].

[Key Speed]: Select a Key Speed that the recorder sends commands to the connected Set-Top Box.

Use ▲ / ▼ to select a sub option then press ENTER.


Use ▲ / ▼ to select [Test] option then press ENTER to verify the connections/settings between the Set-Top Box and the Recorder. The recorder is tuned to AV1 automatically. See right for details.

Test Procedure

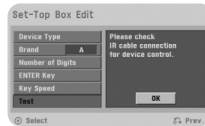


Check the IR control cable connection then press ENTER. (Refer to page 12.)

Turn on the Set-Top Box then press ENTER.

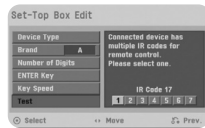


Use ◀ / ▶ to select a Remote Control Code of the device then press ENTER. **(B)**

The list of codes displayed onscreen are based on the device type and brand you selected. Each brand of the device can have multiple sets of codes. One code will be tested at a time; if the code does not work, select another code to test.

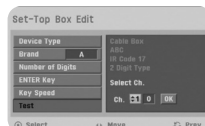

Use ▲ / ▼ / ◀ / ▶ and ENTER to select a channel. **(A)**

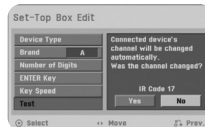


Confirm that your Set-Top Box's channel is changed to the selected channel in **(A)**.

If changed, select [Yes] then press ENTER.

If not changed, select [No] then press ENTER and repeat from **(B)**.

Some Set-Top boxes may not be controlled if the device needs sub channel input - the same as 19-1.

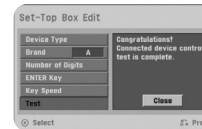

The Test procedure is complete, press ENTER to exit the menu.

If you fail to test

- Make sure IR Control Cable connection. (page 12)
- Set the [Set-Top Box Edit] options again then proceed to the [Test] option.
- If IR control is not activated even though you set again, the Recorder may not control your Set-Top Box according to the device's maker or status. Confirm recommended Set-Top Box on page 12 or contact your Set-Top Box provider.

Adjust the disc settings



Initialize – You can Initialize a DVD by pressing ENTER while [Start] is selected. The [Initialize] menu appears. The unit starts formatting after confirmation. You can select a mode between VR and Video for DVD-RW discs. The everything recorded on the DVD will be erased after formatting.

The disc format for DVD-R, DVD+R, DVD+RW, discs is always "Video" format - the same as pro-recorded DVD-Video discs. (Once you have finalized DVD-R, DVD+R and DVD+RW, you can play the discs in a regular DVD player.)

If you load a completely blank disc, the unit will initialize the disc automatically. See "Formatting mode (new disc)" on page 5 for more information.

Finalize – Finalizing is necessary when you play a disc recorded with this unit on other DVD equipment. How long finalization takes depends on the disc condition, recorded length and number of titles.

[Finalize]: The [Finalize] menu appears. The unit starts finalizing after confirmation.

[Unfinalize]: The finalized DVD-RW discs can be unfinalized after confirming on the [Unfinalize] menu. After unfinalizing, the disc can be edited and recorded.

Before finalizing, check the characteristics between the disc type in the table below.

-RW	The finalized DVD-RW discs can be unfinalized so that the disc can be edited or recorded again.
+R -R	Once you finalize a disc, you can not edit or record anything on the disc.
+RW	Discs are automatically finalized when removed from the unit. The edited contents are playable on DVD+RW compatible players only after finalization
RAM	The finalization does not needed.

Disc Label – This function allows you to change the default disc name to something more descriptive. This name appears when you load a disc and when you display disc information on-screen. The keyboard menu appears by pressing ENTER while [Edit] is selected.

Disc Protect – This function allows you to protect discs from accidental record, erasure and editing by setting this option to [ON]. The DVD-R and Video mode formatted DVD-RW are not available to protect.

Displaying disc information

	ON REMOTE
1 Play the disc loaded on the unit	PLAY
2 Displays current status of playback:	DISPLAY
3 Displays the playback menu:	DISPLAY
4 Select an item:	▲▼
5 Adjust the playback menu settings:	◀▶
6 Exit the disc playback menu	DISPLAY

Displaying disc Information - more you can do

Adjusting playback menu item

You can select an item by pressing ▲▼ and change or select the setting by pressing ◀▶.



- Current title/track/file / Total number of titles/tracks/files
- Current chapter / total number of chapters
- Elapsed playing time
- Selected audio language or audio channel
- Selected subtitle
- Selected angle / Total number of angles
- Selected sound mode

Moving to another title/file **DVD ALL MPEG4**

When a disc has more than one title, you can move to another title.

Press DISPLAY twice during playback then use ▲ / ▼ to select the title icon. Then, press the appropriate numbered button (0-9) or ◀ / ▶ to select a title number.

Starting playback from selected time **DVD ALL MPEG4**

Press DISPLAY twice during playback. The time search box shows the elapsed playing time. Select the time search box and then input the required start time in hours, minutes, and seconds from left to right. For example, to find a scene at 2 hours, 10 minutes, and 20 seconds, enter "21020" and press ENTER.

If you enter the wrong numbers, press ◀ / ▶ to move the under bar () to the wrong number. Then enter the correct numbers.

Selecting a subtitle language **DVD MPEG4**

During playback, press DISPLAY twice to display the playback menu. Use ▲▼ to select the subtitle option then use ◀▶ to select desired subtitle language.

OR

During playback, press SUBTITLE then use ◀▶ to select desired subtitle language.

Watching from a different angle **DVD**

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.

During playback, press DISPLAY twice to display the playback menu. Use ▲▼ to select the angle option then use ◀▶ to select desired angle.

Selecting a sound mode **DVD ALL MPEG4**

This unit can produce a 3D Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a home theater system.

During playback, press DISPLAY twice to display the playback menu. Use ▲▼ to select the sound option then use ◀▶ to select desired sound mode (3D SUR. or NORMAL).

Channel Selection

You can select a channel as shown below.

Number and – (dash) buttons – Use Number (0-9) and – (dash) buttons to select a channel directly.

FAV. CH +/- button – Press FAV CH +/- to scroll through your favorite channels.

To set a favorite channel, use [Channel Edit] option in the Setup menu. (See page 14 or 16.)

CH/TRK +/- buttons – Use CH/TRK +/- on the Remote Control or CH ▲▼ on the front panel to cycle the recorder through the channels in memory.

Displaying Channel List and Changing Channel

Press HOME and the Home menu appears. Select [TV] > [Channel List] and press ENTER. Select your desired channel using the ▲ / ▼ and press ENTER to change the channel.

Switching Channel List

Four types of channel lists are provided for easy and quick channel searching. You can switch the channel lists to TV (CATV), DTV (CADTV), Favorite or ALL.

Press ▲ or RETURN to move the highlight position to top of the channel list. Press ◀ / ▶ to select a [TV (CATV)], [DTV (CADTV)], [Favorite] or [ALL]. Selected channel list appears.

[TV (CATV)]: Shows all analog TV channels.


[DTV (CADTV)]: Shows all digital TV channels.

[Favorite]: Shows favorite channels. (favorite channel shows **FAV** icon)

[ALL]: Shows all analog and digital channels.

Displaying information while watching TV

While viewing the TV, press DISPLAY to display the information displayed on-screen. The information will not be displayed during VCR recording.

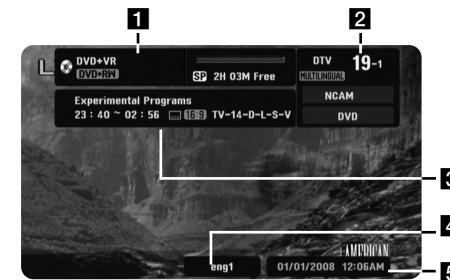

- 1 Indicates the disc format, free space, and elapsed time progress bar.
- 2 Indicates channel number, station name, and audio signal by the tuner.
- 3 Indicates program title, start time, end time, rating, etc. (Digital channel only)
- 4 Indicates audio language for digital channel or output audio signal for analog channel (Stereo, Mono, SAP, etc.).
- 5 Indicates current date and time.

Channel Information Icon

[DTV caption icon]: Indicates that the current channel contains the DTV caption. Press SUBTITLE to select a DTV caption language.

16:9 4:3 [TV Aspect]: Indicates that the current channel is wide or 4:3 picture format.

MULTILINGUAL [DTV Multiple Audio Icon]: Indicates that the current channel contains the DTV multiple audio languages. Press AUDIO to select an audio language.

Play a Tape

	ON REMOTE
1 Press VCR to control the VCR deck:	VCR
2 Insert a prerecorded video tape:	-
3 Starts playback: If a tape without a safety tab is inserted, the unit starts playback automatically.	PLAY (▶)
4 Stops playback:	STOP (■)

Play a tape - more you can do

Tracking Control **VHS**

If noise appears on the screen during playback, press either CH/TRK (▲/▼) on the remote control or CH (▲/▼) on the front panel until the noise on the screen is reduced.

Pause playback and Frame-by-Frame playback **VHS**

Press PAUSE/STEP (⏸) to pause playback.

Press PAUSE/STEP (⏸) repeatedly to play Frame-by-Frame playback. Press PLAY (▶) to continue playback.

After 5 minutes in STILL mode, the playback stops to protect the tape and video heads.

Fast forward or fast reverse **VHS**

Press BACKWARD / FORWARD (◀◀ or ▶▶) to play fast forward or fast reverse during playback. Press PLAY (▶) to continue play at normal speed. If the Recorder is left in the SEARCH mode for more than 3 minutes, the Recorder will automatically enter the PLAY mode, to protect the tape and video heads.

Slow Motion playback **VHS**

While playback is paused, press FORWARD (▶▶) to slow down forward playback. Press PLAY (▶) to continue play at normal speed. If slow motion mode continues for more than 3 minutes, the Recorder will automatically change to normal play mode.

Hearing a different audio **VHS**

Press AUDIO to set tape audio to HIFI, LEFT, RIGHT or NORMAL.

Use ◀/▶ buttons to select tape audio you want.

Counter Memory Function **VHS**

This is useful if there is a section of tape you want to view immediately after recording or if you want to return to the same point several times.

Begin playing a tape. Press DISPLAY repeatedly to display the real-time counter on the TV screen. At the point you want to locate later, reset the real-time counter to 0:00:00 by pressing CLEAR repeatedly. Continue to play or record. Press STOP when recording or playback finishes. Press RETURN (↵). The tape automatically stops when the tape counter returns to about "0:00:00".

S-VHS Quasi Playback (SQPB)

This Recorder can play back S-VHS recorded tapes, however, it cannot make recordings using S-VHS format tapes.

Play a disc

	ON REMOTE
1 Open the disc tray:	EJECT, OPEN/CLOSE(▲)
2 Insert a disc:	-
3 Close the disc tray:	EJECT, OPEN/CLOSE(▲)
4 Adjust the disc menu settings: A disc menu may not appear on the screen depending on the disc.	▲ ▼ ◀ ▶
5 Starts playback:	PLAY (▶)
6 Stops playback:	STOP (■)

Play a disc - more you can do

Playing a disc that contains a menu **DVD**

The menu screen may be displayed first after loading a DVD or Video CD which contains a menu.

DVD – Use the ◀ / ▶ / ▲ / ▼ buttons to select the title/chapter you want to view, then press ENTER to start playback. Press TITLE or DISC MENU/LIST to return to the menu screen.

Skip to the next/previous chapter/track/file**DVD ALL ACD MP3 WMA MPEG4**

Press SKIP (▶▶) to move to the next chapter/track/file.
 Press SKIP (◀◀) to return to the beginning of the current chapter/track/file.
 Press SKIP (◀◀) twice briefly to step back to the previous chapter/track/file.

Pause a playback

Press PAUSE/STEP (||) to pause playback. Press PLAY (▶) to continue playback.

Frame-by-Frame playback DVD ALL MPEG4

Press PAUSE/STEP (||) repeatedly to play Frame-by-Frame playback. You can advance or back up the picture frame-by-frame by pressing ◀ / ▶ repeatedly during PAUSE mode.

Fast forward or fast reverse DVD ALL ACD MPEG4

Press BACKWARD / FORWARD (◀◀ or ▶▶) to play fast forward or fast reverse during playback. You can change the various playback speed by pressing BACKWARD / FORWARD (◀◀ or ▶▶) repeatedly. Press PLAY (▶) to continue play at normal speed.

Hearing a different audio DVD ALL MPEG4

Press AUDIO then press ◀ or ▶ repeatedly to hear a different audio language, audio track or encoding method.

Slow down the playing speed DVD ALL MPEG4

While playback is paused, press BACKWARD / FORWARD (◀◀ or ▶▶) to slow down forward or reverse playback. You can change the various playback speed by pressing BACKWARD / FORWARD (◀◀ or ▶▶) repeatedly. Press PLAY (▶) to continue play at normal speed.

Playing repeatedly DVD ALL ACD MP3 WMA

Press PLAY MODE repeatedly to select an item to be repeated. The current title, chapter, folder or track will be played back repeatedly. To return to normal playback, press PLAY MODE repeatedly to select [Off].

Repeating a specific portion (A-B) DVD ALL ACD

Press PLAY MODE to select [A-] at the beginning of the portion you wish to repeat and press ENTER at the end of the portion. Your selected portion will be repeated continually.
 To return to normal playback, press PLAY MODE repeatedly to select [Off].

Watching a enlarged video image DVD ALL

During playback or pause mode, press ZOOM repeatedly to select zoom mode. You can move through the zoomed picture using ▲▼◀▶ buttons. Press CLEAR to exit.

Marking a favorite scene DVD ALL

You can mark positions by pressing MARKER at the desired position up to six markers. Also you can recall or clear positions by pressing SEARCH. Use ◀ / ▶ / ▲ / ▼ to select a desired marker, then press ENTER to recall it or CLEAR to clear it.

Viewing the Title menu DVD

Press TITLE to display the title menu or disc menu. If the current DVD title has a menu, the title menu appears on the screen. Otherwise, the disc menu may appear.

Last Scene Memory DVD

This unit memorizes the last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the player or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

Playing MPEG4 movie files

	ON REMOTE
1 Displays the HOME menu:	HOME
2 Selects a [MOVIE] option:	◀▶
3 Selects an option that contains MPEG4 file:	▲▼, ENTER
4 Selects a movie file from the menu:	▲▼
5 Plays the selected movie file:	PLAY
6 Stops the playback:	STOP

Playing a MPEG4 movie files - more you can do

Movie List menu options

Select which file you would like to show menu and press ENTER. An options menu appear on the left side of the screen.



[Play]: Starts playback the selected file.

[Open]: Opens the folder and a list of files in the folder appears.

Notice for displaying MPEG4 subtitle

If the subtitle does not display properly, press PAUSE/STEP when the subtitle appears. Then press and hold SUBTITLE about 3 seconds to display the language code menu. Use ◀ / ▶ to change the language code until the subtitle is displayed properly. Press PLAY (▶) to continue playback.

Displaying movie file information

Press DISPLAY while the file you want to show the file information is selected. The unit shows the various kind of file information on the screen.

MPEG4 file requirement

Available resolution size: 720x576 (W x H) pixel

MPEG4 file extensions: ".avi"

Playable MPEG4 subtitle: ".smi", ".srt", ".sub (Micro DVD format only)", ".txt (Micro DVD format only)"

Playable Codec format: "MP43"

Playable Audio format: "AC3", "PCM", "MP3", "WMA"

Sampling frequency: within 8-48 kHz (MP3), within 32-48kHz (WMA)

Bit rate: within 8 - 320kbps (MP3), within 32 - 192kbps (WMA)

CD-R Format: ISO 9660 and JOLIET.

DVD±R/RW Format: ISO 9660 (UDF Bridge format)

Maximum Files/Folder: Less than 999

Notes on MPEG4 format

- The MPEG4 subtitle file name has to be identified with the MPEG4 file name to be display on the unit.
- If the number of the screen frame is over 29.97 frames per second, this unit may not operate normally.
- If the video and audio structure of MPEG4 file is not interleaved, returns to the menu screen.
- If there is impossible code to express in the MPEG4 file name, it may be displayed as "_" mark.
- This unit does not support the MPEG4 file that is recorded with GMC (Global Motion Compensation).
- If a bitrate of MPEG4 file on the USB is over 5Mbps, the file may not be played properly.
- This unit may not support some MPEG4 files.
- DivX movie files are not playable on this unit.

Listening to a music

	ON REMOTE
1 Displays the HOME menu:	HOME
2 Select a [MUSIC] option:	◀ ▶
3 Selects an option that contains music:	▲ ▼, ENTER
4 Selects a music from the menu:	▲ ▼ ◀ ▶
5 Plays the selected music:	PLAY
6 Stops the playback:	STOP

Listening to a music - more you can do

Music List menu options

Select which file/track you would like to show menu and press ENTER.
A menu appears on the left side of the screen.



Audio CD



MP3/WMA

[Play]: Starts playback of the selected file/track.

[Random]: Starts or stops random playback.

[Open]: Opens the folder and a list of files in the folder appears.

Displaying MP3/WMA file information

Press DISPLAY while the file you want to show the file information is selected.
The unit shows the ID3-Tag information of the file. If the file does not have ID3-Tag information, [ID3-Tag: None] appears on the screen.

Playing musics in random order

When you select the [RANDOM] option on the Music List menu then press ENTER, the unit automatically begins random playback and "RANDOM" appears on the menu screen. To return to normal playback, select [Random] option again then press ENTER.

MP3/WMA audio file requirement

File extensions: ".mp3", ".wma".

Sampling frequency: within 8 - 48 kHz (MP3), within 32 - 48kHz (WMA)

Bit rate: within 8 - 320kbps (MP3), within 32 - 192kbps (WMA)

CD-R Format: ISO 9660 and JOLIET.

DVD±R/RW Format: ISO 9660 (UDF Bridge format)

Maximum Files/Disc: Less than 999 (total number of files and folders)

Viewing a photo

	ON REMOTE
1 Displays the HOME menu:	HOME
2 Selects a [PHOTO] option:	◀▶
3 Selects an option that contains photo file:	▲▼, ENTER
4 Selects a photo from the menu:	▲▼◀▶
5 Displays the selected photo in full screen:	PLAY
6 Returns to the Photo List:	STOP

Viewing a photo - more you can do

Photo List menu options

Select which file you would like to show menu and press ENTER. A menu appears on the left side of the screen.



[Full Screen]: Shows the selected file in full screen.

[Open]: Opens the folder and a list of files in the folder appears.

[Slide Show]: Displays the [Slide Show] menu.

Skip to the next/previous photo

Press SKIP (◀◀ or ▶▶) to view the previous/next photo while displayed in full screen.

Rotate a photo

Use ▲▼ to rotate the photo while displayed in full screen.

Viewing photo files as a slide show

To view slide show photos in the [Photo list], select the [Slide Show] option on the left side of the screen then press ENTER. The [Slide Show] menu appears on the screen. Set the [Object] and [Speed] options then press ENTER while [Start] option is selected. The unit starts slide show.

[Object] option:

- [Selected] Views slide show only for selected files.
Use the MARKER button to select multiple files.
- [All] Views slide show for all files.

[Speed] option:

Sets the Slide Show speed to [Slow], [Normal], or [Fast].

Pause a slide show

Press PAUSE/STEP to pause a slide show. Press PLAY to continue the slide show.

Photo file requirement

File extension: ".jpg"

Photo size: Less than 4MB recommended

CD-R Format: ISO 9660 and JOLIET.

DVD±R/RW Format: ISO 9660 (UDF Bridge format)

Maximum Files/Disc: Less than 999 (total number of files and folders)

Notes on JPEG file

- Progressive and lossless compression JPEG image files are not supported.
- Depending on the size and number of the JPEG files, it may take several minutes to read the contents of the media.

Recording

Follow the instruction below to record a TV channel or other source. The recording continues until the media is full or you stop the recording.

ON REMOTE

1 Selects a recording mode: You can select a recording mode on the SETUP menu. (DVD: XP, SP, LP, EP or MLP) or (VCR: SP, SLP)	HOME ▲▼◀▶ ENTER
2 Selects a recording media:	VCR or DVD
3 Selects a channel or source you want to record:	CH(+, -) or INPUT
4 Starts recording:	REC
5 Stops recording:	STOP

Recording - more you can do

Notes for recording

- The recording times shown are not exact because the recorder uses variable bit-rate video compression. This means that the exact recording time will depend on the material being recorded.
- The company does not hold any responsibility to compensate the contents which should have been recorded, and any losses or damages (e.g. losses of business profit, or business intermission) that may arise from malfunction of this recorder (not recording/editing as intended).
- The unit cannot record the DTV caption on the recordable DVD disc.
- The unit will automatically power off when the Timer Recording ends.

Changing TV audio channel

Before recording, you can change the TV audio channel for analog channel or audio language for digital channel by pressing AUDIO button repeatedly. The current audio channel is displayed on-screen. This unit records the audio that you are listening to.

Instant timer recording

Instant timer recording allows you to make a recording of preset length easily.



When the REC is first pressed, recording starts. Press REC repeatedly to select a certain amount of time. Each press of REC displays the increased recording time on-screen. You can set the instant timer recording within the free space available. If you press PAUSE/STEP (II) during the Instant Timer Recording, it will be canceled.

To Pause the Recording

Press PAUSE/STEP to pause recording. When you want to continue recording, press PAUSE/STEP.

Setting a timer record

This unit can be programmed to record up to 16 timer recordings within a month. The clock must be set correctly before setting a timer record.



Press HOME and select [TV] option. Press ▲▼ to select the [Timer Record] and press ENTER to display [Timer record List] menu. Use ▲▼ to select [New] and press ENTER to display [Timer Record] menu. Adjust the each field using ▲▼◀▶.

[Media]: Choose a media to record (VCR or DVD).

[Ch.]: Choose a memorized program number, or one of the external inputs from which to record.

[Date]: Choose a date up to 1 month in advance.

[Start Time]: Set the start time.

[End Time]: Set the end time.

[Mode] Choose a recording mode (DVD: XP, SP, LP, EP, MLP or AT) or (VCR: SP, SLP or AT).

AT (Auto) mode determines how much time is available on the disc or tape and switches record mode, if necessary, to complete the recording of the program.

[Set-Top Channel]: Choose a channel or [OFF] for AV1 input timer recording.

For AV1 input timer recording using [Set-Top Channel] option. (see page 30)

Press ENTER to set a timer recording. The "Rec OK" on the [Check] field on the [Timer Record List] menu indicates the timer recording is programmed correctly.



 
AV1 Timer Recording using Set-Top Channel option

Connect a Set-Top Box as shown on page 12.


Make the necessary settings for the connection as shown on page 20-21.

Important, for the Recorder to record programs received through the Set-Top Box, the Set-Top box must remain turned on at all times.

Set the [Ch.] option to [AV1].

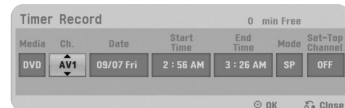

 Set the [Media], [Date], [Start Time], [End Time], and [Mode] options according to previous page (**Setting a timer record**).

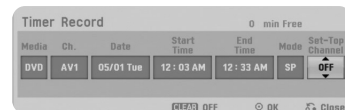

[Set-Top Channel]: Select a channel using number or ▲ / ▼ buttons, the Recorder sends commands to change the channel of the connected Set-Top Box through the IR control cable.

Select [OFF] using CLEAR button, if you do not need to change the channel of the Set-Top Box.

Canceling a timer record

- You can cancel a timer record before the timer recording actually starts. Select a timer recording that you want to cancel on the [Timer Record List] menu and press CLEAR to confirm.
- In timer recording, you can stop it by pressing STOP.

Timer Recording Troubleshooting

Even though the timer is set, the unit will not record when:

- There is no disc (or tape) loaded.
- A non-recordable disc (or tape) is loaded.
- [Disc Protect] option is set to [ON] in the Setup menu (see page 22).
- The unit is in operating (recording, deleting etc.).
- There are already 99 titles (DVD-RW, DVD-R), 49 titles (DVD+R, DVD+RW) recorded on the disc.

You cannot enter a timer program when:

- A recording is already underway.
- The time you're trying to set has already passed.
- There are already 16 timer programs set.

30

If two or more timer programs overlap:

- The earlier program takes priority.
- When the earlier program finishes, the later program starts.
- If two programs are set to start at exactly the same time, the program entered first takes priority.

If you fail the AV1 Timer Recording:

- Make sure IR Control Cable connection. (page 12)
- Set the [Set-Top Box Edit] options again then proceed the [Test] option. (page 21)
- If IR control is not activated even though you set again, the Recorder may not control your Set-Top Box according to the device's maker or status. Confirm recommended Set-Top Box on page 12 or contact your Set-Top Box provider.

Recording From an external inputs

You can record from an external component, such as a camcorder or VCR, connected to any of the recorder's external inputs.

Each press of the INPUT changes the input source as described below. Make sure that the component you want to record from is connected properly to the unit before recording an external source.

- Tuner: Built-in tuner
- AV1: INPUT 1 (VIDEO, AUDIO (L/R)) mounted on the rear panel
- AV2: AV IN 1 (VIDEO, AUDIO (L/R)) mounted on the front panel
- DV: DV IN mounted on front panel

Playing while you are recording **RAM**

You can start play from the beginning of the title while continuing to record it. While recording (in DVD mode). Play cannot be started until at least 30 seconds after recording starts. This function does not work in VCR Recording mode.

Press ► (PLAY).

Start play of the title you are recording.

Press STOP (■) to return to the current recording screen.

OR

Press TIMESHIFT.

The PIP(Picture-In-Picture) window appears on the screen. What is currently being recorded appears as a PIP and you will hear the playback audio.

Press STOP (■) to return to the current recording screen.

Editing a title

Using the Title list menu, you can edit video contents.

	ON REMOTE
1 Displays a [Title List] menu:	DISC MENU/LIST
2 Selects a title you want to edit:	▲▼◀▶
3 Displays an editing menu: The options are differ depending on the media type.	ENTER
4 Selects a menu option:	▲▼◀▶, ENTER
5 Exit the [Title List] menu:	RETURN

Editing a title - more you can do

About title list menu

Press DISC MENU/LIST to display the Title List menu. Playback should be stopped when you do this. You can also access it using HOME menu, select [MOVIE] option then select [DISC] option and press ENTER. If you are editing a VR mode disc, press DISC MENU/LIST to switch between Original and Playlist menu.



- 1 Current media
- 2 Indicates the record mode, free space, and elapsed time progress bar.
- 3 Menu options: To display menu option, select a title or chapter then press ENTER. The options displayed differ depending on the disc type.
- 4 Currently selected title.
- 5 Thumbnail
- 6 Shows the title name, recorded date, and recording length.

Before editing

This unit offers various edit options for various disc types. Before you edit, check the disc type, and select the option available for your disc.

You can enjoy advanced edit functions with VR mode formatted DVD (DVD-RW). Editing either the original recording (called the "original"), or the playback information created from the original (called a "Playlist"). Edits made to the original titles are final. If you plan to edit a title without editing the original title, you can create a Playlist title for editing.

A Playlist is a group of Playlist titles created from the original title for editing purpose.

Titles in the disc's original content contain one or more chapters. When you insert a disc's title into the Playlist, all the chapters within that title also appear. In other words, chapters in the Playlist behave exactly as chapters on a DVD-Video disc do. Parts are sections of Original or Playlist titles. From the Original and Playlist menu you can add or delete parts. Adding a chapter or title to the Playlist creates a new title made up of a section (ie., chapter) of an Original title. Deleting a part removes part of a title from the Original or Playlist menu.

Adding chapter markers -RW_{VR} +RW +R RAM

You can create chapters within a title by inserting chapter marks at the desired point. Press CHP.ADD at the desired point while playback or recording. A chapter marker icon appears on the screen.

The chapter markers can be added at regular intervals automatically by setting the [Auto Chapter] option in the SETUP menu.

Changing the thumbnail -RW_{VR} +RW +R RAM

Each title displayed in the Title List menu is represented by a thumbnail picture taken from the start of that title or chapter.

Press THUMBNAIL to make the currently displayed picture to appear in the Title List menu. You can also change the thumbnail picture of the title on the Chapter List menu of VR mode DVD-RW and DVD-RAM disc.

Deleting a title or chapter

When you delete a title or chapter from the PlayList, the title or chapter in the Original still remains. However, if you delete a chapter or title from Original, the title or chapter deleted from the Original are also removed from PlayList.

Select a title or chapter that you want to delete and press ENTER. Select [Delete] option from the menu on the left of the screen and press ENTER to confirm.

Chapter search **-RWVR** **-RWVideo** **+RW** **+R** **-R** **RAM**

You can select the start of a title by searching a chapter. Select a title that you want to search and press ENTER. Select [Chapter] in the [Search] option from the menu on the left of the screen, and press ENTER to display the [Chapter List] menu.

Use **▲▼◀▶** to find the chapter you want to start playback, and press PLAY to start playback.

Making a new PlayList **-RWVR** **RAM**

The PlayList allows you to edit or re-edit a title or chapter without changing the Original recordings. Use this function to add an Original title or chapter to a new PlayList or the registered Playlist.




Select an Original title or chapter that you want to put into the PlayList then press ENTER. Select the [Playlist Add] option and then press ENTER to display the [Select PlayList] menu. Choose a PlayList-title that you want to put the selected Original title or chapter or select the [New PlayList] to create a new PlayList.

Moving a PlayList chapter **-RWVR** **RAM**

Use this function to re-arrange the playing order of a PlayList title on the [Chapter List-Playlist] menu. Select [Move] option from the menu on the left of the [Chapter List-Playlist] screen and press ENTER. Use **▲▼◀▶** to choose the place you want to move the chapter then press ENTER. The updated menu is displayed.

Time search **-RWVR** **-RWVideo** **+RW** **+R** **-R** **RAM**

You can select the start of a title by searching time. Select a title that you want to search and press ENTER. Select [Time] in the [Search] option from the menu on the left of the screen and press ENTER to display the [Search] menu.

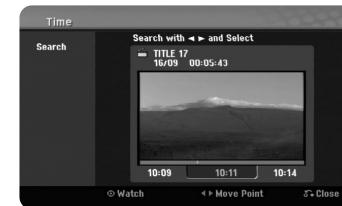

Use **◀▶** to find the time you want to start. Each press of **◀▶** moves 1 minute and press and hold **◀▶** to move 5 minutes. Press ENTER to watch a title from a selected time.

Hiding a chapter or title **+RW** **+R**

You can skip through playing chapters or titles without actually deleting them. Select a chapter or title you want to hide and press ENTER. Select [Hide] in the [Edit] option then press ENTER.

If you want to recover the hidden title or chapter, select the hidden title or chapter and press ENTER. Select [Show] in the [Edit] option then press ENTER to recover it.

Dividing a title **+RW**

Use this function to split a title up into two titles. Select a title that you want to divide and press ENTER. Select [Divide] in the [Edit] option from the menu on the left of the screen and press ENTER to display the [Divide] menu. Find the point you want to divide a title using PLAY, SCAN, PAUSE/STEP buttons and press ENTER while [Divide] option is selected. The playback screen shows the divided point. Select [Done] option and press ENTER.

Protect a title **-RWvR +RW +R RAM**


Use this function to protect a title against accidental recording, editing or deleting. Select a title you want to protect and press ENTER. Select [Protect] option from the menu on the left and press ENTER. The lock mark will appear on the title thumbnail.

If you want to unprotect the title, select the protected title and press ENTER.

Select [Unprotect] option from the menu on the left and press ENTER to unprotect it.

Deleting a part **-RWvR RAM**

You can delete a part which you do not want in the title.

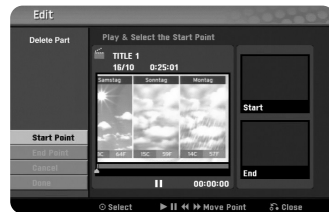

Select a title that you want to delete part and press ENTER. Select [Delete Part] in the [Edit] option from the menu on the left of the screen and press ENTER to display the [Delete part] menu. You can find the point using PLAY, SCAN, PAUSE/STEP buttons.

[Start Point]: Select starting point of a part that you want to delete then press ENTER.

[End Point]: Select ending point of a part that you want to delete then press ENTER.

[Cancel]: Press ENTER to cancel the selected part.

[Done]: Press ENTER to delete the selected part.

Naming a title

When a title is recorded by this unit, the title name will be named by a number. You can change a title name by using this function.



Select a title that you want to change a name and press ENTER. Select [Title Name] in the [Edit] option from the menu on the left of the screen and press ENTER to display the keyboard menu. Use ▲▼◀▶ to select a character then press ENTER to confirm your selection on the keyboard menu.

[OK]: Finish the naming.

[Cancel]: Cancels all entered characters.

[Space]: Inserts a space at the cursor position.

[Delete]: Deletes the previous character at the cursor position.

You can use remote control buttons for entering a name

PLAY (▶): Inserts a space at the cursor position.

⏏ (PAUSE/STEP): Deletes the character at the cursor position.

■ (STOP), CLEAR: Deletes the character before the cursor position.

◀▶ / ▶▶: Moves cursor to the left or right.

Numbers (0-9): Enters the corresponding character at the cursor position.

Combining chapters **-RWVR** **+RW** **+R** **RAM**

Use this function to merge the selected chapter with adjacent chapter. Select a chapter and press ENTER. Select [Combine] option to view combine indicator between chapter thumbnails. Press ENTER to combine indicated two chapters.

This function is not available in conditions as listed below.

- There is only one chapter within the title.
- The first chapter is selected.
- The chapters that you want to combine are created by deleting a part from an Original title.
- The chapters that you want to combine are created from different titles.
- One of the playlist chapters that you want to combine has been moved.

Overwriting **+RW**

You can overwrite a new video recording on a recorded title that is not protected. Select the TV channel or input source you want to record. Press DISC MENU/LIST to display the Title List menu. Use **▲▼◀▶** to highlight a title you want to overwrite and then press REC to start overwrite. To stop the recording, press STOP.

If you overwrite the title that is longer than the current title on the fully recorded disc, the next title is overwritten. If next title is protected, the overwriting stops at the starting point of the title.

Dubbing

	ON REMOTE
1 Selects a media that you want to dub:	VCR or DVD
2 Finds a position of video contents you want to dub from:	◀◀, ▶▶, PLAY
3 Pauses the playback:	PAUSE/STEP
4 Displays the [Dubbing] menu:	DUBBING
5 Sets the [Rec mode] option: DVD: XP, SP, LP, EP, MLP or VCR: SP, SLP	▲▼◀▶
6 Highlights the [Dubbing] icon:	DUBBING
7 Stops dubbing:	STOP

**Dubbing a title - more you can do****Notes on dubbing**

- If the video contents you are attempting to copy are copy protected, you will not be able to copy the disc. It is not permitted to copy Macrovision encoded video contents.
- If you press PAUSE/STEP during dubbing, both the DVD and VCR decks go into pause mode. While in pause mode, you can adjust the playing media position using PLAY, BACKWARD, FORWARD, PAUSE/STEP, etc. The recording media will remain in Pause mode. To resume dubbing, press the DUBBING button twice.

Language Codes

Use this list to input your desired language for the following initial settings: Disc Audio, Disc Subtitle, Disc Menu.

Language	Code	Language	Code	Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	Croatian	7282	Hausa	7265	Lingala	7678	Quechua	8185	Tajik	8471
Afrikaans	6570	Czech	6783	Hebrew	7387	Lithuanian	7684	Rhaeto-Romance	8277	Tamil	8465
Albanian	8381	Danish	6865	Hindi	7273	Macedonian	7775	Rumanian	8279	Telugu	8469
Ameharic	6577	Dutch	7876	Hungarian	7285	Malagasy	7771	Russian	8285	Thai	8472
Arabic	6582	English	6978	Icelandic	7383	Malay	7783	Samoan	8377	Tonga	8479
Armenian	7289	Esperanto	6979	Indonesian	7378	Malayalam	7776	Sanskrit	8365	Turkish	8482
Assamese	6583	Estonian	6984	Interlingua	7365	Maori	7773	Scots Gaelic	7168	Turkmen	8475
Aymara	6588	Faroese	7079	Irish	7165	Marathi	7782	Serbian	8382	Twi	8487
Azerbaijani	6590	Fiji	7074	Italian	7384	Moldavian	7779	Serbo-Croatian	8372	Ukrainian	8575
Bashkir	6665	Finnish	7073	Javanese	7487	Mongolian	7778	Shona	8378	Urdu	8582
Basque	6985	French	7082	Kannada	7578	Nauru	7865	Sindhi	8368	Uzbek	8590
Bengali; Bangla	6678	Frisian	7089	Kashmiri	7583	Nepali	7869	Singhalese	8373	Vietnamese	8673
Bhutani	6890	Galician	7176	Kazakh	7575	Norwegian	7879	Slovak	8375	Volapük	8679
Bihari	6672	Georgian	7565	Kirghiz	7589	Oriya	7982	Slovenian	8376	Welsh	6789
Breton	6682	German	6869	Korean	7579	Panjabi	8065	Spanish	6983	Wolof	8779
Bulgarian	6671	Greek	6976	Kurdish	7585	Pashto, Pushto	8083	Sudanese	8385	Xhosa	8872
Burmese	7789	Greenlandic	7576	Laotian	7679	Persian	7065	Swahili	8387	Yiddish	7473
Byelorussian	6669	Guarani	7178	Latin	7665	Polish	8076	Swedish	8386	Yoruba	8979
Chinese	9072	Gujarati	7185	Latvian, Lettish	7686	Portuguese	8084	Tagalog	8476	Zulu	9085

Area Codes

Choose an area code from this list.

Area	Code	Area	Code	Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Costa Rica	CR	Greenland	GL	Maldives	MV	Paraguay	PY	Sri Lanka	LK
Argentina	AR	Croatia	HR	Hong Kong	HK	Mexico	MX	Philippines	PH	Sweden	SE
Australia	AU	Czech Republic	CZ	Hungary	HU	Monaco	MC	Poland	PL	Switzerland	CH
Austria	AT	Denmark	DK	India	IN	Mongolia	MN	Portugal	PT	Taiwan	TW
Belgium	BE	Ecuador	EC	Indonesia	ID	Morocco	MA	Romania	RO	Thailand	TH
Bhutan	BT	Egypt	EG	Israel	IL	Nepal	NP	Russian Federation	RU	Turkey	TR
Bolivia	BO	El Salvador	SV	Italy	IT	Netherlands	NL	Saudi Arabia	SA	Uganda	UG
Brazil	BR	Ethiopia	ET	Jamaica	JM	Netherlands Antilles	AN	Senegal	SN	Ukraine	UA
Cambodia	KH	Fiji	FJ	Japan	JP	New Zealand	NZ	Singapore	SG	United States	US
Canada	CA	Finland	FI	Kenya	KE	Nigeria	NG	Slovak Republic	SK	Uruguay	UY
Chile	CL	France	FR	Kuwait	KW	Norway	NO	Slovenia	SI	Uzbekistan	UZ
China	CN	Germany	DE	Libya	LY	Oman	OM	South Africa	ZA	Vietnam	VN
Colombia	CO	Great Britain	GB	Luxembourg	LU	Pakistan	PK	South Korea	KR	Zimbabwe	ZW
Congo	CG	Greece	GR	Malaysia	MY	Panama	PA	Spain	ES		

Troubleshooting

General

The power does not turned on.

- ➔ Plug the power cord into the wall outlet securely.

There is no picture.

- ➔ Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.
- ➔ Connect the video connection securely.

Picture noise appears.

- ➔ You are playing a disc recorded in a color system that is different from your TV.
- ➔ The video signal from the external component is copy-protected.
- ➔ Set the resolution that your TV can accept.

The channel is not found or stored.

- ➔ Check your antenna connection.

There is no sound.

- ➔ Connect the audio connection securely.
- ➔ The input source setting on the amplifier or the connection to the amplifier is incorrect.
- ➔ The unit is in scan, slow motion, or pause mode.
- ➔ Try to select another audio channel or source using AUDIO button.

The remote control does not work properly.

- ➔ The remote control is not pointed at the remote sensor of the unit.
- ➔ The remote control is too far from the unit.
- ➔ There is an obstacle in the path of the remote control and the unit.
- ➔ The batteries in the remote control are exhausted.

Playback

The unit does not start playback.

- ➔ Insert a playable disc. (Check the disc type, color system, and regional code.)
- ➔ Place the disc with the playback side down.
- ➔ Place the disc on the disc tray correctly inside the guide.
- ➔ Clean the disc.
- ➔ Cancel the Rating function or change the rating level.

Cannot play a disc recorded using this unit on other player.

- ➔ Finalize the disc.
- ➔ Check the disc compatibility of the player.
- ➔ Place the disc on the disc tray correctly inside the guide.
- ➔ Discs recorded with copy-once material cannot be played on other players.

The angle cannot be changed.

- ➔ Multi-angles are not recorded on the DVD Video being played.
- ➔ The angle cannot be changed for the titles recorded on this unit.

The subtitle language cannot be changed or turned off.

- ➔ Subtitles are not recorded on the DVD Video being played.
- ➔ The subtitle cannot be changed for the titles recorded on this unit.

Cannot play MP3/WMA/JPEG/MPEG4 files.

- ➔ The files are not recorded in a format that the unit can play.
- ➔ The unit does not support the codec of the MPEG4 movie file.
- ➔ The resolution is higher than the unit can support.

Recording

Cannot record or does not record successfully.

- ➔ Check the remaining space on the disc.
- ➔ If your source is copy-protected, you cannot record it using this unit.
- ➔ Use a VR mode formatted disc for copy-once material. Video that is 'copy-once only' can only be recorded using a DVD-RW disc in VR mode or DVD-RAM disc with CPRM (see below).

What is 'CPRM'?

CPRM is a copy protection system (with scramble system) only allowing the recording of 'copy once' broadcast programs. CPRM stands for Content Protection for Recordable Media. This Recorder is CPRM compatible, which means that you can record copy-once broadcast programs, but you cannot then make a copy of those recordings. CPRM recordings can only be made on DVD-RW discs formatted in VR mode or DVD-RAM discs, and CPRM recordings can only be played on players that are specifically compatible with CPRM.

- ➔ The power may have failed during recording.

- In DVD mode, you cannot record the rated digital program, no signal, audio only, scrambled program, etc.
If the unit detects an unrecordable signal as described above during recording, the recording will be paused. The recording will be continued when recordable signal is detected in pause mode. If the paused recording is continued for an hour, the recording will be stopped automatically with the message.
- If you set a DTV rating for the unit and higher rated digital programs are received, the program cannot be recorded. Change the DTV rating level in order to record it.

Timer record does not record successfully.

- Clock is not set to correct time.
- The start time of the timer recording is past.
- Two timer recordings may have overlapped, in which case only the earlier one will record completely.
- When setting the recording channel, make sure you set the unit's built-in tuner, not the TV's built-in tuner.
- If the inserted disc is damaged, the recording may not complete successfully.

Stereo Audio Record and/or Playback is not present.

- TV is not Stereo-compatible.
- Broadcast program is not in stereo format.
- The A/V Output jacks on the unit are not connected to TV A/V In jacks.

HDMI

The connected HDMI device does not display any picture.

- Try disconnecting then reconnecting the HDMI cable.
- Try switching the power of the HDMI device off then back on.
- The video input of the connected device is set correctly for this unit.
- The HDMI cable you are using is fully HDMI-compliant . Using a non-standard cable may result in no picture being output.
- Not all HDCP-compatible DVI devices will work with this unit.

The connected HDMI device does not output sounds.

- Some HDMI-compatible devices do not output sounds (check the manual that came with the connected device).
- If your TV is not capable of handling 96 kHz sampling frequency, set the [Sampling Freq.] option to [48 kHz] on the setup menu. When this choice is made, this unit will automatically convert any 96 kHz signals to 48 kHz so your system can decode them.
- If your TV is not equipped with Dolby Digital and MPEG decoder, set the [Dolby Digital] and [MPEG] options to [PCM] on the setup menu.
- If your TV is not equipped with DTS decoder, set the [DTS] options to [OFF] on the setup menu. To enjoy DTS multi channel surround, you must connect this unit to a DTS compatible receiver via one of this unit's digital audio outputs.

Resetting the unit

If you observe any of the following symptoms.

- The unit is plugged in, but the power will not turn on or off.
- The front panel display is not working.
- The unit is not operating normally.

You can reset the unit as follows.

- Press and hold the POWER button for at least five seconds. This will force the unit to power off then turn the unit back on.
- Unplug the power cord, wait at least five seconds, and then plug it in again.

Specifications

General

Power requirements	AC 120V, 60 Hz
Power consumption	23W
Dimensions (approx.)	430 X 78.5 X 260 mm (w x h x d) without foot
Net weight (approx.)	4.2 kg
Operating temperature	5°C to 35°C (41°F to 95°F)
Operating humidity	5 % to 90 %
Signal system	NTSC, DTV standard ATSC or Clear QAM over cable

Recording

Recording format	DVD Video Recording, DVD-VIDEO
Recordable media	DVD-RW, DVD-R, DVD+RW, DVD+R, DVD+R(Double Layer), DVD-RAM
Recordable time	DVD (4.7GB): Approx. 1 hour (XP mode), 2 hours (SP mode), 4 hours (LP mode), 6 hours (EP mode), 14 hours (MLP mode) DVD+R DL (8.5GB): Approx. 1.8 hours (XP mode), 3.6 hours (SP mode), 7.3 hours (LP mode), 9.1 hours (EP mode), 21 hours (MLP mode)

Video recording format

Sampling frequency	27MHz
Compression format	MPEG2 (VBR supported)

Audio recording format

Sampling frequency	48kHz
Compression format	Dolby Digital

Playback

Frequency response	DVD (PCM 48 kHz): 8 Hz to 22 kHz, CD: 8 Hz to 20 kHz DVD (PCM 96 kHz): 8 Hz to 44 kHz
Signal-to-noise ratio	More than 100 dB (AUDIO OUT connector)
Harmonic distortion	Less than 0.008% (AUDIO OUT connector)

VCR Specifications

Head system	Four head helical scan azimuth system
Timer	12-hour display type with AM, PM
Tape speed	SP: 33.35 mm/sec, LP: 16.67 mm/sec, SLP: 11.12 mm/sec
Antenna	75 ohms (VHF/UHF)
Channel coverage	Analog (VHF: 2-13, UHF: 14-69, CATV: 1-135) Digital (Terrestrial: 2-69, Cable: 1-135)

Inputs

Dynamic range	More than 95 dB (AUDIO OUT connector)
ANTENNA IN	Antenna input, 75 ohms
VIDEO IN	1.0 Vp-p 75 ohms, sync negative, RCA jack x 2
AUDIO IN	- 6.0 dBm more than 47 kohms, RCA jack (L, R) x 2
DV IN	4 pin (IEEE 1394 standard)
USB IN	4 pin (USB 1.1 standard)

Outputs

VIDEO OUT	1 Vp-p 75 Ω, sync negative, RCA jack x 1
S-VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, sync negative, Mini DIN 4-pin x 1 (C) 0.3 V (p-p) 75 Ω
COMPONENT VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1, (PB)/(PR) 0.7 V (p-p), 75 Ω, RCA jack x 2
HDMI video/audio output	19 pin (HDMI standard, Type A)
Audio output (digital audio)	0.5 V (p-p), 75 Ω, RCA jack x 1
Audio output (optical audio)	3 V (p-p), 75 Ω, Optical connector x 1
Audio output (analog audio)	2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1
IR TRANSMITTER OUT	5 V (p-p)

Accessories

RF cable (1), Remote control (1), Batteries (1), Audio cable (1),
Video cable (1), IR control cable (1)



LG Electronics, Inc. Limited Warranty - USA

This LG Electronics product, will be repaired or replaced, at LG's option, if it proves to be defective in material or workmanship, under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original consumer purchase of the product. This warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S. Territories.

WARRANTY PERIOD:

LABOR: 90 days from the Date of Purchase.

PARTS: One Year from the Date of Purchase.

* Parts replaced are warranted for the remaining portion of the original warranty period.

HOW SERVICE IS HANDLED:

Call 1-800-243-0000 for instructions on getting the defective unit repaired or replaced.

Please retain dated sales receipt and your box to return the unit to LG for repair or replacement.

Shipping both ways will be paid by LG during the Warranty Period. After the Warranty Period, you pay inbound shipping charges and LG pays return shipping charges.

Visit our website at: <http://us.lgservice.com>

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. LG ELECTRONICS WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL OR PUNITIVE DAMAGES OF ANY NATURE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that may vary from state to state.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Damages or operating problems that result from shipping, installation, adjustment of user controls, calibration, maintenance or failure to maintain, or separate system components; and
- Damages or operating problems that result from normal wear and tear, misuse, abuse, operation outside environmental specifications or contrary to the requirements or precautions in the Operating Guide, accident, lightning strikes or other natural causes, unauthorized modification or alteration, incorrect electrical current or voltage, reception problem caused by inadequate home antenna or faulty antenna connections, computer software, institutional or commercial use, or other causes not arising out of defect in material or workmanship.

Therefore, the cost of repair or replacement of such defective product shall be borne by the consumer.

CUSTOMER INTER-ACTIVE CENTER NUMBERS:

For nearest Authorized Service Center, Where to buy, Product Assistance, or Customer Assistance

Call 1-800-243-0000 (24 hours a day, 365 days per year) and select appropriate options from the menu.

Or visit our website at <http://us.lgservice.com>

LG ELECTRONICS U.S.A., INC.
1000 SYLVAN AVENUE
ENGLEWOOD CLIFFS, NJ

P/N: MFL36995890
Issue O
Printed in Indonesia