


# Installation Instructions

# telehook

Flat Screen Wall Mount | Tilt


## Components Checklist

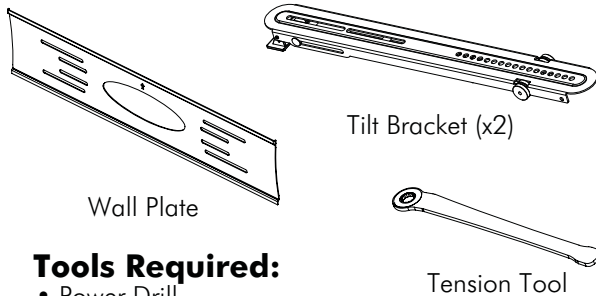

### Tools Required:

- Power Drill
- Phillips Head screwdriver
- Large Flat Head screwdriver
- 6mm (1/4") drill bit
- 10mm (3/8") drill bit
- 10mm (3/8") masonry drill bit
- 13mm (1/2") Socket Wrench or Shifter
- Spirit Level

### Hardware

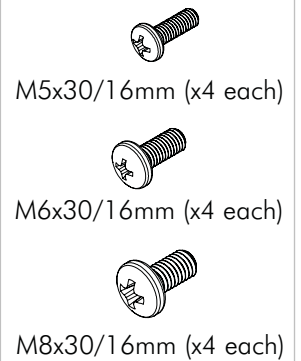

### Display Mounting Screws

## IMPORTANT INFORMATION


- ! **IMPORTANT - Install Telehook 3060 Wall Mount as per Installation Instructions.**
- ! This product supports a load from 8kg (17.6lbs) min. to 50kg (110lbs) max.
- ! This product only supports displays with mounting hole configurations from 200mm x 100mm min. to 800mm x 500mm max.
- ! The manufacturer does not accept responsibility for incorrect installation.
- ! Before installing this Telehook product, please check the display ventilation requirements with your LED/LCD manufacturer.

## Step 1. Check Components

Check you have received all parts against the Component Checklist and Hardware above.

## Step 2. Mounting the Wall Plate


### Masonry Wall

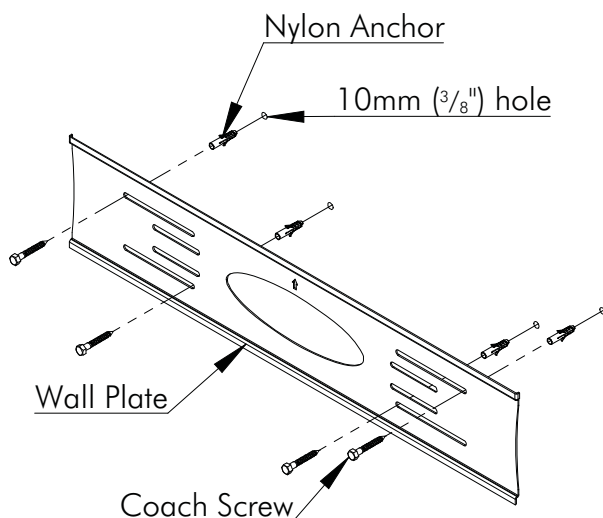

OR


### Timber Stud

**Note:** Use a stud finder to accurately locate the center of the stud. Ensure that all two screws fix securely into the stud.

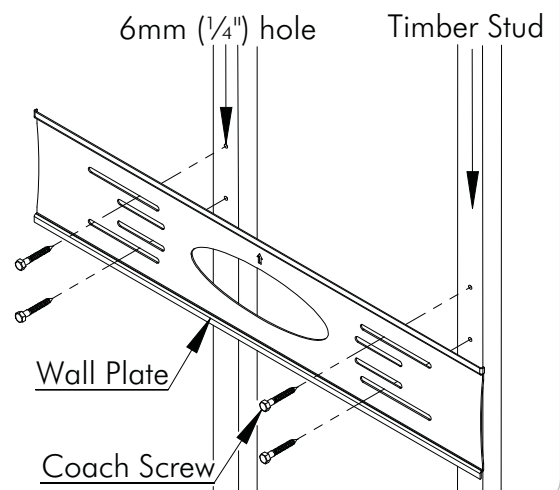

**Tip: Use a spirit level to ensure wall plate is horizontal.**

### Step 3. Attaching Tilt Brackets to Display

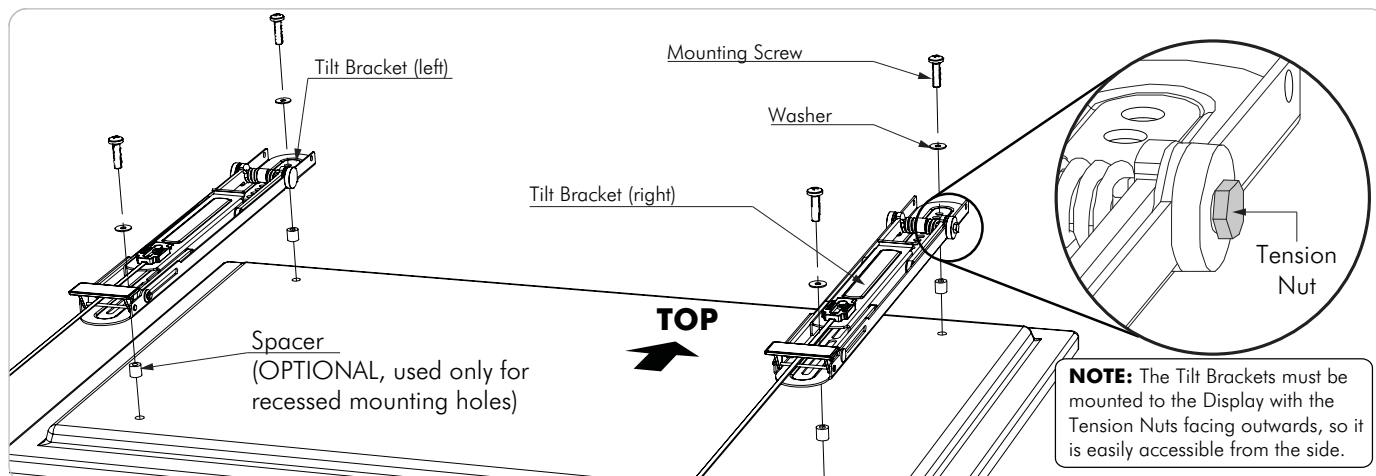


### Step 4. Attaching/Detaching Display to Wall Plate

(2 people required)


① With the Tilt Brackets attached to the Display, lower the Hook Plates onto the Wall Plate.

② Push bottom of Display to lock the Display to the Wall Plate. Listen for a 'CLICK'.

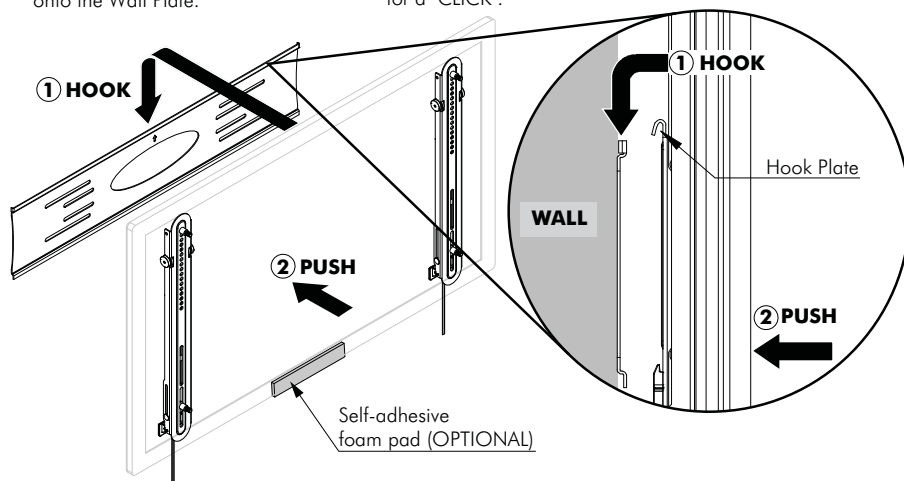

**OPTIONAL:** For larger screens, fix the protective self-adhesive foam pad (supplied) to the back of the panel. Position on the bottom edge, where the Display touches the wall.


Once the Display is securely fastened to the Wall Plate cut or fold the Release Ties so that they cannot be seen from front of screen.

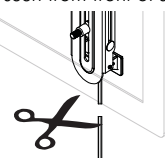

#### Detaching Display from the Wall Plate


To detach Display from wall plate, pull and hold both Release Ties to disengage the locking mechanism. Whilst pulling the Release Ties, lift the Display to unhook from the Wall Plate.

### Step 5. Cable Management

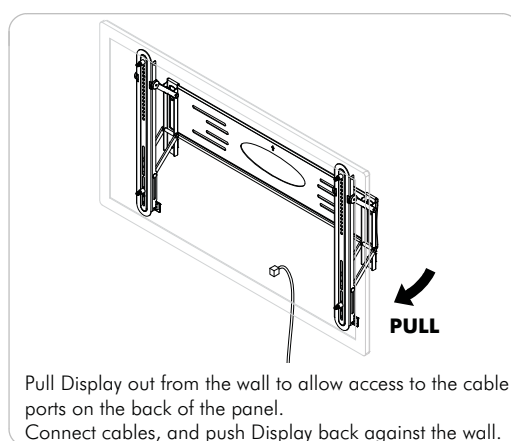


### Step 6. Set Display Tilt

- ① Holding the Display by the top and bottom edges, pull the Display straight out from the wall.
- ② Tilt Display downward as desired.

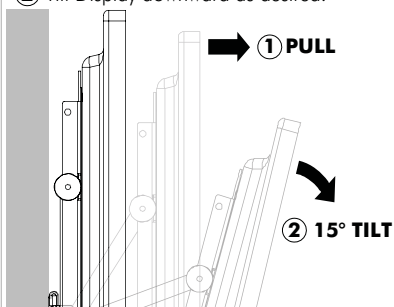

**TIP:** To push Display back against the wall, pull bottom edge outwards then push Display backwards.

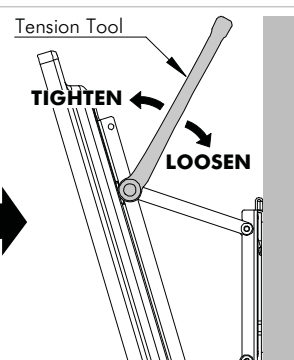

**NOTE:** If necessary use the supplied Tension Tool to adjust the tension in the tilt mechanism.

### Installation Complete

