

SAMSUNG

SM-V700

User Manual

About this manual

You can use this device as a companion device to some Samsung Android™ smartphones or tablet PCs. This user manual is specially designed to explain applications and features that are available when the device is connected to a mobile device.

- Please read this manual before using the device to ensure safe and proper use.
- Descriptions are based on the device's default settings.
- Images and screenshots may differ in appearance from the actual product.
- Content may differ from the final product, or from software provided by service providers or carriers, and is subject to change without prior notice. For the latest version of the manual, refer to the Samsung website, www.samsung.com.
- Content (high quality content) that requires high CPU and RAM usage will affect the overall performance of the device. Applications related to the content may not work properly depending on the device's specifications and the environment that it is used in.
- Available features and additional services may vary by device, software, or service provider.
- Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by applications from any provider other than Samsung.
- Samsung is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customize the operating system may cause the device or applications to work improperly.
- Software, sound sources, wallpapers, images, and other media provided with this device are licensed for limited use. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Users are entirely responsible for illegal use of media.
- Default applications that come with the device are subject to updates and may no longer be supported without prior notice. If you have questions about an application provided with the device, contact a Samsung Service Centre. For user-installed applications, contact service providers.
- Modifying the device's operating system or installing softwares from unofficial sources may result in device malfunctions and data corruption or loss. These actions are violations of your Samsung licence agreement and will void your warranty.

Instructional icons



Warning: situations that could cause injury to yourself or others



Caution: situations that could cause damage to your device or other equipment



Note: notes, usage tips, or additional information

Copyright

Copyright © 2013 Samsung Electronics Canada, Inc.

SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities. This guide is protected under international copyright laws.

No part of this guide may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- All other trademarks and copyrights are the property of their respective owners.

IC Notice

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Table of Contents

Getting started

- 6 Device layout
- 7 Button
- 7 Package contents
- 8 Charging the battery
- 11 Wearing the device
- 12 Turning the device on and off
- 13 Connecting to a mobile device
- 16 Locking and unlocking the device
- 16 Adjusting the brightness of the display
- 16 Adjusting the volume
- 17 Switching to silent mode

Basics

- 18 Indicator icons
- 18 Using the touch screen
- 21 Notifications
- 22 Home screen
- 23 Clock screen
- 23 Applications screen
- 23 Using applications
- 24 Returning to the previous screen
- 24 Securing the device
- 25 Bluetooth
- 26 Using calling features

Gear Manager

- 27 About Gear Manager
- 27 Configuring the device settings
- 27 Customizing the Home screen
- 28 Managing applications
- 29 Finding the device
- 29 Activating the auto lock feature
- 29 Activating the notification features
- 30 Setting an application shortcut
- 30 Setting up emergency messages
- 30 Smart relay
- 31 Using a wake-up gesture
- 31 Viewing help information

Applications

- 32 Camera
- 34 Gallery
- 35 Archive
- 35 Contacts
- 35 Dialer
- 36 Find my device
- 36 Logs
- 36 Media Controller
- 37 Pedometer
- 40 S Voice
- 40 Stopwatch

- 41 Timer
- 41 Today's Schedule
- 41 Voice Memo
- 42 Weather

Settings


- 43 About Settings
- 43 Clock
- 44 Sound
- 44 Volume
- 44 Display
- 45 Battery
- 45 Bluetooth
- 45 Privacy lock
- 45 Language
- 45 Reset Gear
- 45 Gear info

Troubleshooting

Health and Safety

Getting started

Device layout

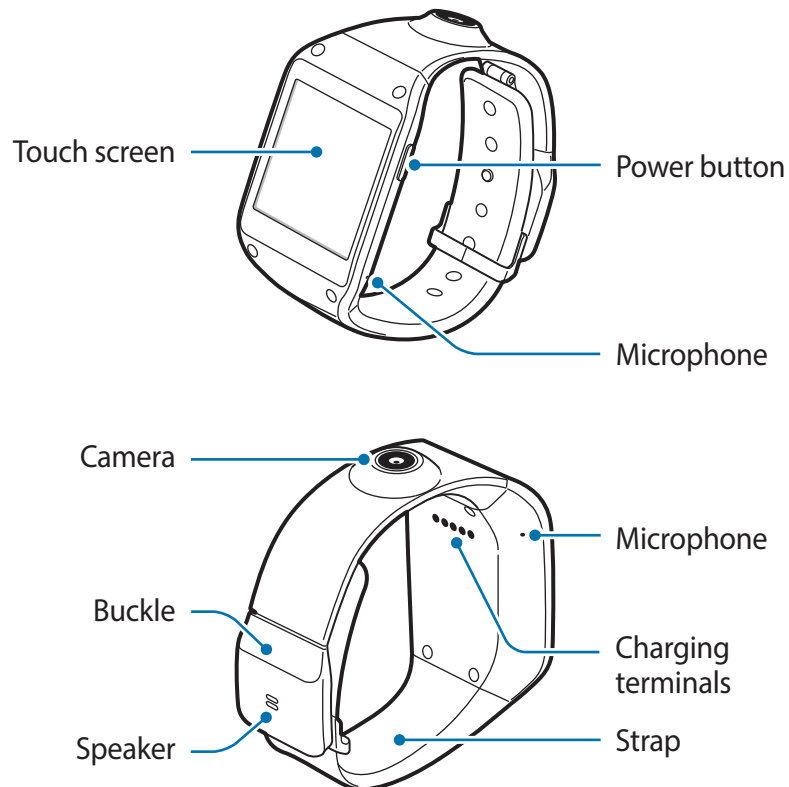


Humidity and liquids may damage your device. Keep your device dry.



- Do not use a screen protector. This causes sensor malfunctions.
- Do not allow water to contact the touch screen. The touch screen may malfunction in humid conditions or when exposed to water.
- If the speaker is wet, sound may be distorted. Ensure that the speaker is dry.

Button

Button	Function
 Power	<ul style="list-style-type: none">• Press and hold to turn the device on or off.• Press and hold for 8-10 seconds to reset the device if it has fatal errors or hang-ups, or freezes.• Press to return to the Clock screen.• Press to lock the device on the Clock screen. The device goes into lock mode when the touch screen turns off. Press again to unlock the device.

Package contents

Check the product box for the following items:

- Device
- Charging cradle
- Quick start guide



- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- The supplied items are designed only for this device and may not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- You can purchase additional accessories from your local Samsung retailer. Make sure they are compatible with the device before purchase.
- Other accessories may not be compatible with your device.
- Use only Samsung-approved accessories. Malfunctions caused by using unapproved accessories are not covered by the warranty service.
- Availability of all accessories is subject to change depending entirely on manufacturing companies. For more information about available accessories, refer to the Samsung website.

Charging the battery

Use the charging cradle to charge the battery before using it for the first time. A computer can be also used to charge the device by connecting them via the USB cable.




Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause the battery to explode or damage the device.




- When the battery power is low, the battery icon appears empty.
- If the battery is completely discharged, the device cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the device.

Charging with the charging cradle


- 1 Slide and hold the switch, and then open the cover of the charging cradle.

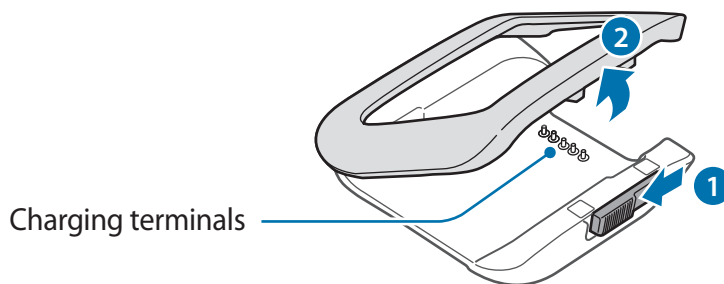


- 2 Place the device on the charging cradle with the charging terminals facing each other.

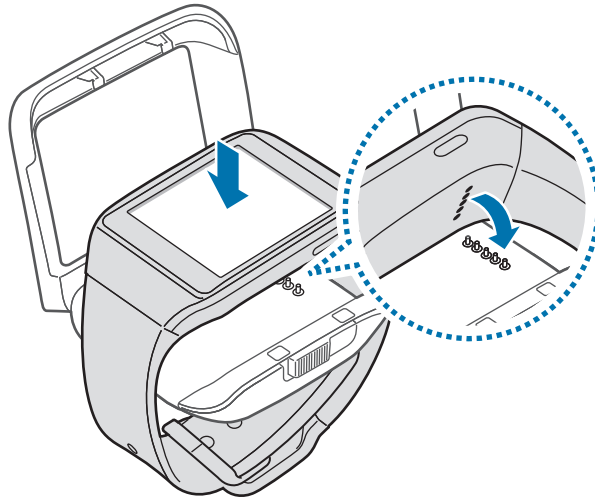

- 3 Close the cover of the charging cradle.

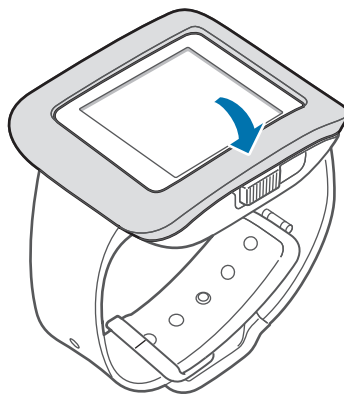

- 4 Plug the small end of the charger into the multipurpose jack of the charging cradle, and plug the large end of the charger into an electric socket.

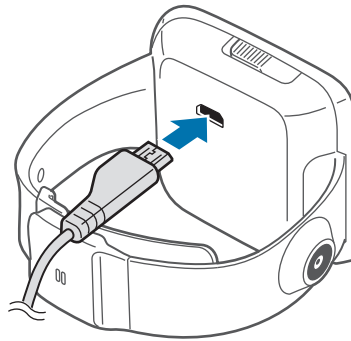

Connecting the charger improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.



- While charging, you cannot use voice recorder and camera.
- If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the charger from the device.
- While charging, the device may heat up. This is normal and should not affect the device's lifespan or performance. If the battery gets hotter than usual, the charger may stop charging.
- If the device is not charging properly, take the device and the charger to a Samsung Service Centre.

After fully charging, disconnect the device from the charging cradle.

Remove the device from the charging cradle, unplug the charger from the charging cradle, and then unplug the charger from the electric socket.



To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.


Checking the battery charge status

When you charge the battery while the device is off, the following icons will show the current battery charge status:




Wearing the device

1 Release the buckle.

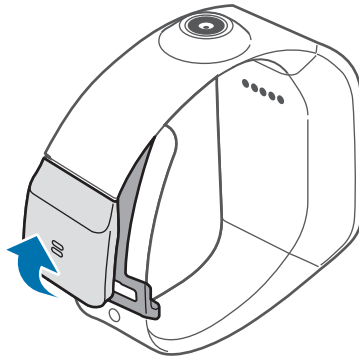


- Be careful not to damage your fingernails when you release the buckle.
- Do not bend the strap excessively. Doing so may damage the device.

2 Open the clasp and fit the strap to your wrist with the pin.

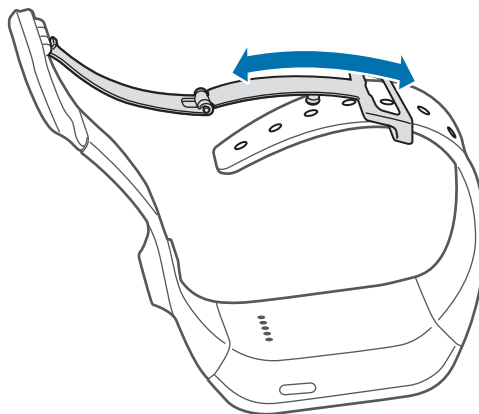


3 Press the buckle until it clicks.

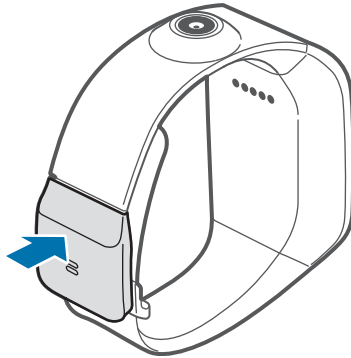

Turning the device on and off

When turning on the device for the first time, follow the on-screen instructions to connect the device to a smartphone or tablet PC and set up your device.

Press and hold the Power button for a few seconds to turn on the device.

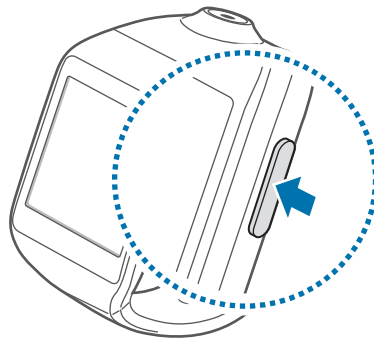

Follow all posted warnings and directions from authorized personnel in areas where the use of wireless devices is restricted, such as airplanes and hospitals.

To turn off the device, press and hold the Power button, and then tap **Power off**.

Connecting to a mobile device

By connecting the device to another mobile device, you can use applications and features on the connected mobile device.


To connect the device to another mobile device, use the charging cradle that has an NFC tag and an embedded Bluetooth address that matches your device.

1 Activate the NFC feature on the mobile device.

2 Turn on the device to access connection mode.

When turning on the device for the first time or after resetting the device, the device switches to connection mode automatically.

3 Touch the back of the charging cradle to the back of the mobile device.

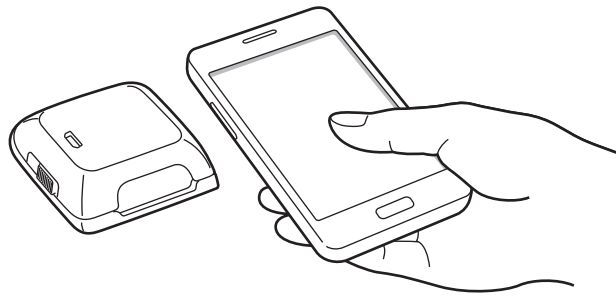

4 Follow the on-screen instructions to install Gear Manager on the mobile device and connect the devices via the Bluetooth feature.



If you connect the devices with an optional charging cradle, launch Gear Manager on the mobile device, and then tap **Connect manually** to find and connect the devices.

Connecting manually

If your mobile device does not have an NFC feature you must connect the devices manually.




The steps and screens may vary depending on the mobile devices.

- 1 Access **Samsung Apps** on the mobile device, and then download and install Gear Manager.

To install Gear Manager you must allow the device to install applications from sources other than Google Play Store. On the Applications screen, tap **Settings** → **General** → **Security** → **Unknown sources**.


- 2 Turn on the device to access connection mode.
- 3 Launch Gear Manager on the mobile device, and then tap **Connect manually**.

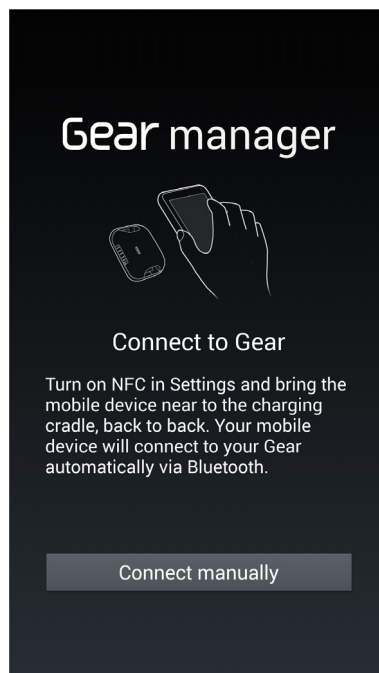

- 4 Tap **OK**.

The mobile device activates Bluetooth and shows detected devices.

- 5 Check the ID number on the device, and then select the device with the same number on the detected devices list.

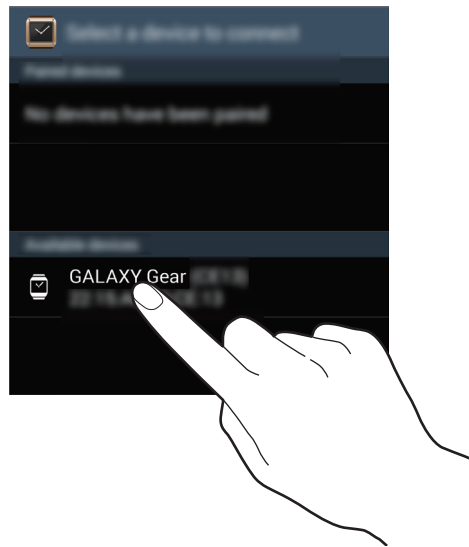

- 6 Accept the auto-generated passkey on both devices to confirm the connection.
- 7 Read and agree to the terms and conditions.

Using applications after connecting to a mobile device

When the device is connected to a mobile device using the Bluetooth feature, you can use the following features and applications:

- **Calling:** Make a call or answer a call.
- **Viewing notifications:** Receive real-time notifications of a variety of events, such as missed calls or new messages.
- **Archive:** View messages.
- **Contacts:** View contacts.
- **Dialler:** Enter a number using the keypad and make a call.
- **Find my device:** Find the connected mobile device.
- **Logs:** View call and message logs.
- **Media Controller:** Play and control media files.

- **S Voice:** Command the device by voice.
- **Today's Schedule:** View today's events.
- **Weather:** View weather information.



Locking and unlocking the device

When not in use, lock the device to prevent unwanted operation. Pressing the Power button on the Clock screen turns off the screen and puts the device into lock mode. The device is automatically locked if it is not used for a specified period.

Press the Power button to unlock the device.

Adjusting the brightness of the display

Use one of the following methods:



- Double-tap the screen with two fingers, and then tap  or  next to the brightness icon.
- On the Home screen, scroll to **Apps**, tap **Apps** → **Settings** → **Display** → **Brightness**, and then adjust the brightness.



When you use the device in bright conditions, such as under bright sunlight, you can set the brightness of the display to the maximum. Press and hold the Power button, and then tap **Outdoor mo...**

Adjusting the volume

Use one of the following methods:

- Double-tap the screen with two fingers, and then tap  or  next to the volume icon.
- On the Home screen, scroll to **Apps**, tap **Apps** → **Settings** → **Volume**, and then select a category to adjust the ringtone volume or sound volume.



Do not hold the device's speaker close to your ears. Excessive exposure to loud sounds can cause hearing damage.

Switching to silent mode




Use one of the following methods:

- Press and hold the Power button, and then tap **Sound** or **Vibrate**.
- On the Home screen, scroll to **Apps**, tap **Apps** → **Settings** → **Sound** → **Sound mode** → **Vibrate** or **Mute**.

Basics

Indicator icons

The following icons provide information about the status of the device. These icons appear when you double-tap the screen with two fingers.

Icon	Meaning
	Bluetooth feature activated
	Another Bluetooth device connected
	Battery power level

Using the touch screen

Use only fingers to operate the touch screen.



- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- To avoid damaging the touch screen, do not tap it with anything sharp or apply excessive pressure to it with your fingertips.




- The device may not recognize touch inputs close to the edges of the screen, which are outside of the touch input area.
- Leaving the touch screen idle for extended periods may result in afterimages (screen burn-in) or ghosting. Turn off the touch screen when you do not use the device.

Finger gestures


Tapping

To open an application, to select a menu item, or to press an on-screen button, tap it with a finger.

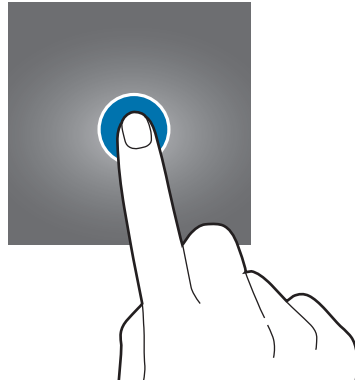


Tapping and holding

Tap and hold the screen with two fingers to open the list of recent applications.

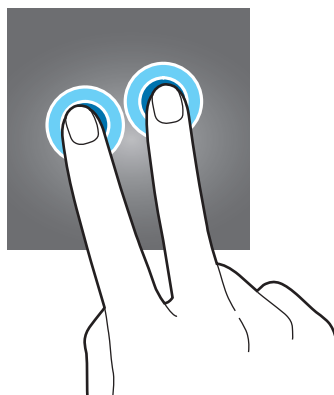


Double-tapping

- Double-tap on an image to zoom in a part. Double-tap again to return.

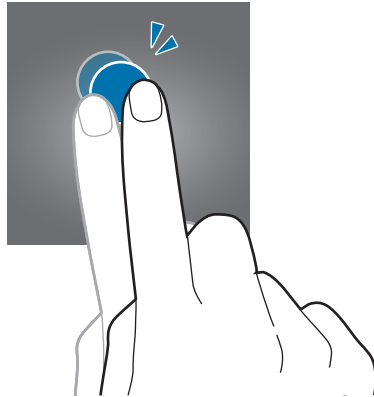


- Double-tap the screen with two fingers to access the brightness and volume control panel and view indicator icons and the remaining battery life.

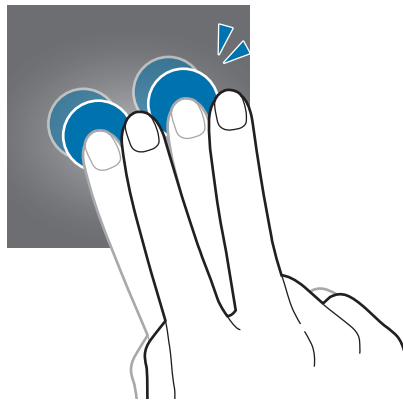


Flicking

Flick left or right on the Home screen or the Applications screen to see another panel.

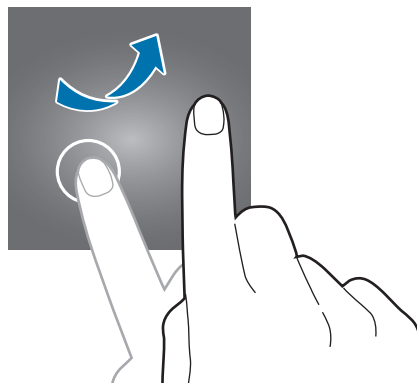

Pinching

Spread two fingers apart on an image to zoom in a part. Pinch to zoom out.

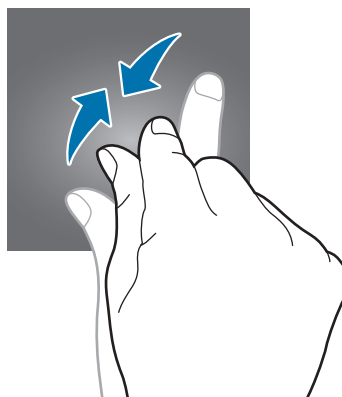

Notifications

Once the device is connected to a mobile device and the mobile device is locked, you can receive notifications of activities, such as missed calls or new messages.

When you receive notifications, tap the screen to view the details.

To view missed notifications, on the Home screen, scroll to **Notifications**, and then tap **Notifications**.


To view the notification history, on the Home screen, scroll to **Apps**, and then tap **Apps** → **Archive** or **Logs**.

Home screen

The Home screen is the starting point to access all of the device's features. It displays the clock, widgets, shortcuts to applications, and others.

The Home screen can have multiple panels. To view other panels, scroll left or right.

Panels on the Home screen

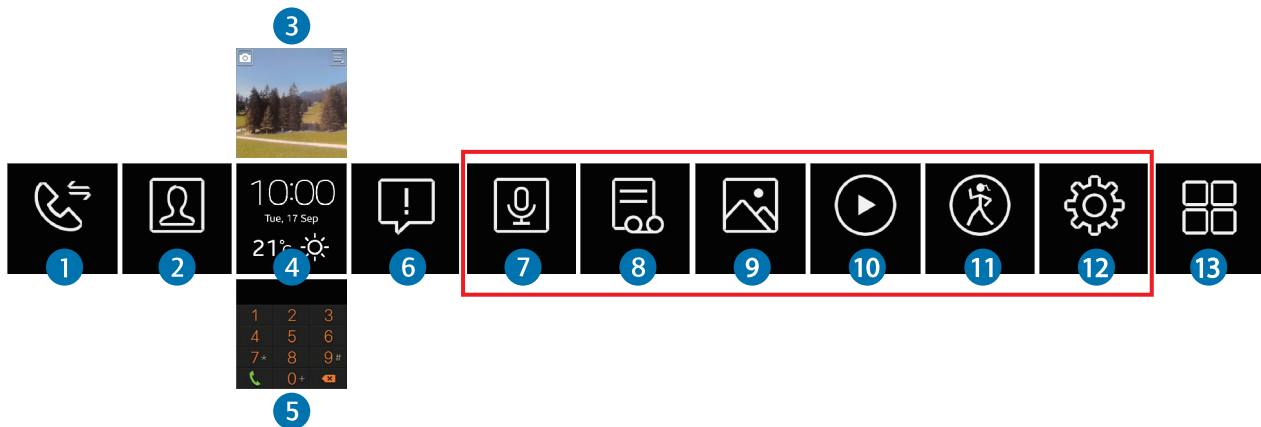

Number	Application or feature
1	Logs
2	Contacts
3	Camera
4	Clock
5	Dialer
6	Notifications
7	S Voice
8	Voice Memo
9	Gallery
10	Media Controller
11	Pedometer
12	Settings
13	Apps

You can customize the panels in the red box above. (p. 28)

Clock screen

Press the Power button to open the Clock screen.



On the Clock screen, you can launch **Dialer** by flicking up and launch **Camera** by flicking down. Tap the weather information to launch **Weather**.

Applications screen

The Applications screen displays icons for all applications.

On the Home screen, scroll to **Apps**, and then tap **Apps** to open the Applications screen.

To view other panels, scroll left or right.


Using applications

This device can run many different types of applications.

On the Home screen or the Applications screen, select a shortcut or an application icon to open it.

Returning to the previous screen

While using applications or on the Applications screen, flick down from the top of the screen.

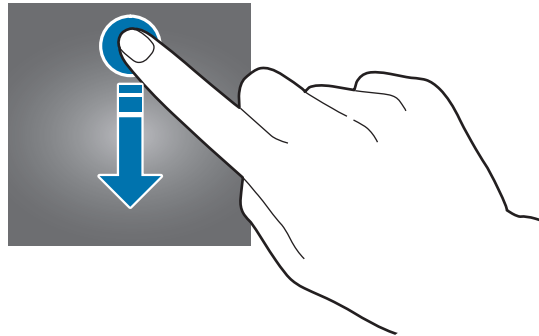


Securing the device

Prevent others from using or accessing personal data and information stored in the device by using the pattern lock.

Setting a pattern

On the Applications screen, tap **Settings** → **Privacy lock** → **Privacy lock** → **Pattern**.

Draw a pattern by connecting four dots or more, and then draw the pattern again to verify it.

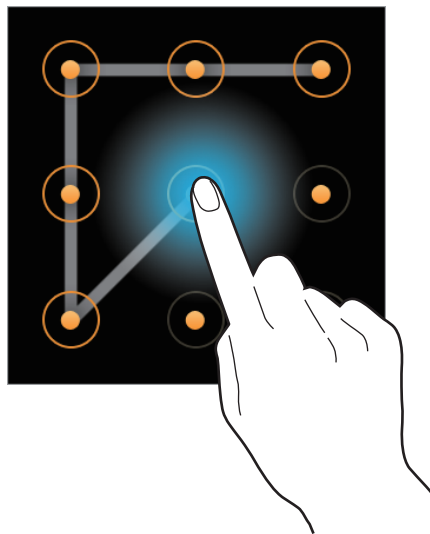

If you set a pattern lock, when the device disconnects from another mobile device, the pattern lock activates automatically.

Unlocking the device

Turn on the screen by pressing the Power button, and enter the unlock code.

Or, connect to the mobile device again to unlock the device automatically.

Bluetooth

Bluetooth creates a direct wireless connection between two devices over short distances.



- Samsung is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by the Bluetooth SIG, may be incompatible with your device.
- Do not use the Bluetooth feature for illegal purposes (for example, pirating copies of files or illegally tapping communications for commercial purposes).
Samsung is not responsible for the repercussion of illegal use of the Bluetooth feature.

To activate Bluetooth, on the Applications screen, tap **Settings** → **Bluetooth**, and then tick **Bluetooth**.

Pairing with other Bluetooth devices

When the other Bluetooth device sends a request to pair with, accept the auto-generated passkey on the device to confirm.



Sending files to a mobile device

To send images or videos, on the Applications screen, tap **Gallery**, select a file, and then tap  → **Transfer**.

To send voice memos, on the mobile device launch Gear Manager, tap **My Apps** → **Favourites** →  next to **Voice Memo** → **Auto-transfer** → **None** → **Transfer now**. To set the device to send voice memos to the mobile device automatically, tap **Auto-transfer** → **Always**.













Using calling features

Making a call

On the Applications screen, tap **Dialer**, enter a number with the keypad, and then tap . Or, tap **Logs** or **Contacts**, select a contact, and then tap  if necessary.

During a call

The following actions are available:


- : Adjust the volume by tapping  or .
-  → : Turn off the microphone so that the other party cannot hear you.
-  → : Disconnect your device and continue the call only on the mobile device.
-  → : Open the keypad.
-  → : Switch to a Bluetooth headset if it is connected to the mobile device.
- : End the current call.

Answering a call

When a call comes in, drag  to the right.

If the call waiting service is active, another call can be made. When the second call is answered, the first call is put on hold.

Rejecting a call

When a call comes in, drag  to the left.

Gear Manager

About Gear Manager

This application allows you to connect to a mobile device, customize your device settings and applications, and use features of the connected mobile device.

From the connected mobile device, tap **Gear Manager** on the Applications screen.

Configuring the device settings

Access device information and update device software.

Tap the device name, and then use the following features:

- **Rename:** Set a name for the device.
- **Disconnect:** End the connection between the device and the mobile device.
- **Connect new Gear:** Connect the mobile device to another watch.
- **Software update:** Update the device to the latest software.

Customizing the Home screen

Customize the settings to change the clock type, add frequently-used applications to the Home screen, or reorganize applications on the Home screen.

Changing the clock type

Tap **Clocks**, and then select a clock under **All**.

To select what information to show on the Clock screen, tap  next to the clock under **Idle**.

Customizing shortcuts

Adding shortcuts

Tap **My Apps** → **Favourites**. Tap , select applications, and then tap **Done**.



You can add up to 10 shortcuts.

Rearranging shortcuts

Tap **My Apps** → **Favourites**. Tap , tap and hold  next to the application name, drag it up or down to another position, and then tap **Done**.

Deleting shortcuts

Tap **My Apps** → **Favourites**. Tap , select applications, and then tap **Done**.

Managing applications

Viewing all applications

Tap **My Apps** → **Installed apps**. Scroll up or down to view all applications on the device.

Configuring applications settings

Tap **My Apps** → **Installed apps**. Tap  next to an application and configure settings.

Installing applications

Tap **Samsung Apps**. Browse applications and select an application to download. Applications are downloaded to both your device and the connected mobile device.

To browse and download suggested applications, tap **My Apps** → **Featured**.

Uninstalling applications

Tap **My Apps** → **Installed apps**. Tap  →  next to an application → **OK**.



Default applications that come with the device cannot be uninstalled.

Finding the device

If you misplace the device, Gear Manager will help you find the device by making it emit sounds and turn on the screen.

Tap **Find my Gear** → **Start**.

Activating the auto lock feature

Use this feature to set the mobile device to lock automatically when it is disconnected from your device.

Tap **Settings**, and then drag the **Auto lock** switch to the right.

Tap **Continue**, draw a pattern by connecting four dots or more, and then draw the pattern again to verify it.

When your device is not detected, the pattern lock activates automatically on the mobile device. When your device is detected again, the pattern lock is deactivated.

Activating the notification features

Stay up-to-date with a variety of events, such as missed calls or new messages, of the connected mobile device.

Tap **Settings** → **Notifications**, and then drag the **Notifications** switch to the right.

To activate notifications for each feature, select features by ticking.

Setting an application shortcut

You can launch an application quickly by pressing the Power button twice. First, set a shortcut to a frequently-used application.

Tap **Settings** → **Double pressing power key**, and then select an application.

Setting up emergency messages

Set the device to send an emergency message that includes a photo and your current location when you press the Power button 3 times.

Tap **Settings** → **Safety assistance**, and then drag the **Safety assistance** switch to the right. Read the terms and conditions, and then tap **OK** to agree to them. Then, tap **OK** → **Add contact** → an option, and then add the recipients for the message.

To edit the message that will be sent, tap **Edit emergency message**.

To set an interval for resending the message, tap **Message interval**.

To edit the recipients for the message, tap **Emergency contacts**.

Smart relay

Use this feature to view new messages, events, and other information on the mobile device when you receive notifications.



Before using this feature, make sure the motion feature of the mobile device is activated.

Tap **Settings** → **Smart relay**, and then drag the **Smart relay** switch to the right.

When you receive a notification, pick up the connected mobile device with the hand wearing the device. The mobile device shows the details. If the mobile device is locked, you must enter the unlock code first.

Using a wake-up gesture

Set the device to recognise your gesture to wake up the device when the screen is turned off.

Tap **Settings** → **Wake-up gesture**, and then drag the **Wake-up gesture** switch to the right.

To wake up the device, raise the hand wearing the device and look at the screen for a few seconds. The screen turns on and the Clock screen appears.

Viewing help information

Use this feature to access help information for the device.

Tap **Help**.

Applications

Camera

Use this application to take photos or videos. The device can save up to 50 photos and 15 videos.

Use **Gallery** to view photos and videos taken with the device's camera. (p. 34)

Tap **Camera** on the Applications screen. Alternatively, flick down on the Clock screen.



- The camera automatically shuts off when unused.
- Make sure that the lens is clean. Otherwise, the device may not work properly in some modes that require high resolutions.
- If your device saved 50 photos or 15 videos, you cannot take more photos or videos. Access **Gallery** and delete files or transfer files to the connected mobile device. After you transferred files to the mobile device and take more photos or videos, your device will delete some files that are transferred to free some memory.
- While charging, you cannot use this application.

Camera etiquette


- Do not take photos or videos of other people without their permission.
- Do not take photos or videos where legally prohibited.
- Do not take photos or videos in places where you may violate other people's privacy.

Taking photos

Taking a photo

Tap the screen to take a photo.

Switch between still and video mode.

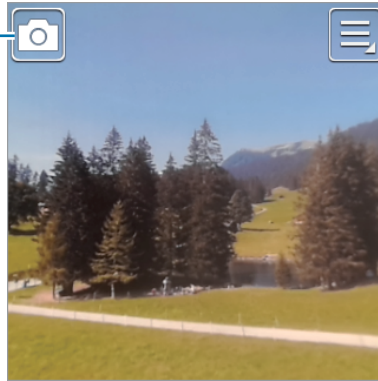

Change the camera settings.

Taking a photo with sound

Tap  → **Sound & shot** → **On**.

Tap the screen to take a photo. The device records a few seconds of audio after taking a photo. To stop recording, tap the screen again.

Taking videos


Taking a video

Tap , and then tap the screen to take a video. To stop recording, tap the screen again.

The maximum recording time is 15 seconds.

After you record videos 3 times, the camera will shut off for optimal performance.

Configuring settings for Camera

Tap  to configure settings for Camera. Not all of the following options are available in both still camera and video camera modes.

- **Focus mode:** Select a focus mode. **Auto** is camera-controlled. **Macro** is for very close subjects.



This setting will not be saved when you turn off this camera.

- **Photo size / Video size:** Select a resolution. Use higher resolution for higher quality. But it takes up more memory.
- **Sound & shot:** Use this to take a photo with sound.



This setting will not be saved when you turn off this camera.

- **Signature:** Set the device to add a signature to photos.

Gallery

Use this application to view images and videos.

Tap **Gallery** on the Applications screen.

Viewing images

Images are displayed by creation date.

Scroll left or right to view the next or previous image.

Zooming in and out

Use one of the following methods to zoom in an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.


Playing videos

Video files show the  icon on the preview. Select a video to watch it and tap .


Deleting files

When viewing a file, tap  → **Delete**.

Sharing files

When viewing a file, tap  → **Share** to send it to others or share it via social network services.

Sending files to a mobile device

When viewing a file, tap  → **Transfer** to send it to the connected mobile device.

Archive

Use this application to view messages.

Tap **Archive** on the Applications screen.

Select a category → a message to view the details.

Tap  to use options, such as replying with **S Voice** or making a call.

Contacts

Use this application to view contacts on the connected mobile device.

Tap **Contacts** on the Applications screen.

You can make a call or send a message to a contact by scrolling left or right on a log entry.

Dialer

Use this application to open the dialling keypad and make a call.

Tap **Dialer** on the Applications screen. Alternatively, flick up on the Clock screen.

Find my device

Use this application to find the connected mobile device.

Tap **Find my device** on the Applications screen.

Tap **Start**, the mobile device emits sounds, vibrates, and turns on the screen.



This application is available only when the devices are connected.

Logs

Use this application to view call and message logs on the mobile device.

Tap **Logs** on the Applications screen.


Media Controller

Use this application to play and control media files. You can launch the music player on the connected mobile device and control playback with the device. For other media files, start playback on the mobile device first.

Tap **Media Controller** on the Applications screen.

Playing media files

Tap  to play music on the connected mobile device.

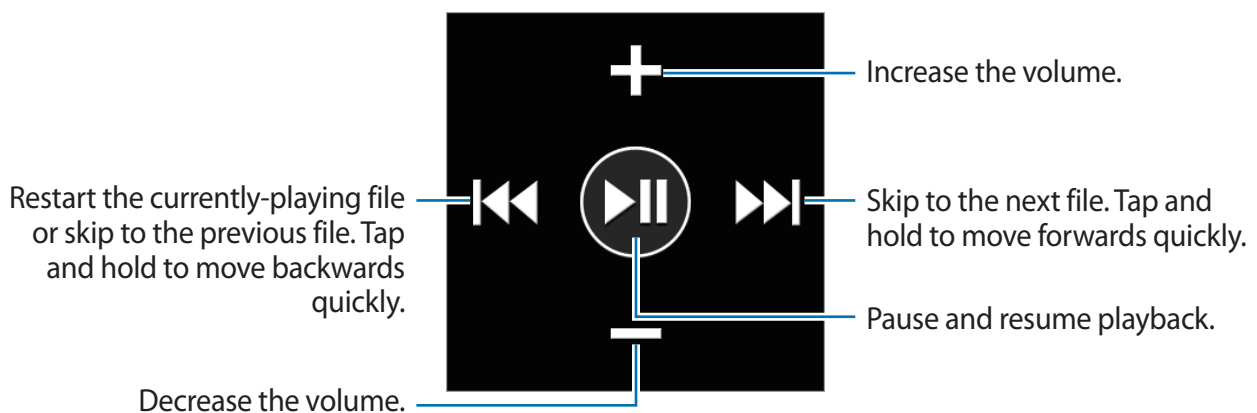

Pedometer

Use this application to track your steps and information about workouts for managing your health.

Tap **Pedometer** on the Applications screen.

Before You Start Exercising

This app can be used to monitor your exercise. While moderate physical activity, such as brisk walking, is safe for most people, health experts suggest that you talk with your doctor before you start an exercise program, particularly if you have any of the following conditions:

- Heart disease
- Asthma or lung disease
- Diabetes, or liver or kidney disease
- Arthritis

You should also check with your doctor if you have symptoms suggestive of heart, lung, or other serious disease, such as:

- Pain or discomfort in your chest, neck, jaw, or arms during physical activity
- Dizziness or loss of consciousness
- Shortness of breath with mild exertion or at rest, or when lying down or going to bed
- Ankle swelling, especially at night
- A heart murmur or a rapid or pronounced heartbeat
- Muscle pain when walking upstairs or up a hill that goes away when you rest

Finally, the American College of Sports Medicine recommends that you see your doctor before engaging in vigorous exercise if two or more of the following apply:

- You are a man older than age 45 or a woman older than age 55.
- You have a family history of heart disease before age 55.
- You smoke or quit smoking in the past six months.
- You have not exercise for three months or more.
- You are overweight or obese.
- You have high blood pressure or high cholesterol.
- You have impaired glucose tolerance, also call pre-diabetes.

When in Doubt - Check it Out


If you are unsure of your health status, have several health problems, or are pregnant, you should speak with your doctor before starting a new exercise program. Working with your doctor ahead of time is a good way to plan an exercise program that is right and safe for you. Consider it the first step on your path to physical fitness.

Setting a profile


Read and agree to the terms and conditions. Select a unit of measurement, and then enter your physical statistics.

Starting the pedometer

On the step count screen, start the pedometer to count your steps and view the walking distance and burned calories.

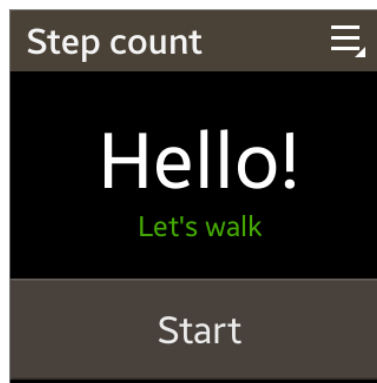

Tap **Start** to count your steps. To pause counting, tap the screen, and then tap **Pause**. To resume the pedometer, tap the screen, and then tap **Start**.

To change the step goal, tap  → **Goal**.




- You may experience a brief delay while the pedometer monitors your steps and then displays your step count.
- If you use the pedometer while travelling by car or train, vibration may affect your step count.

Checking the walking status

On the walking status screen, view the calorie burning status based on your walking pace.


On the step count screen, flick to the right to access the walking status screen while counting your steps.

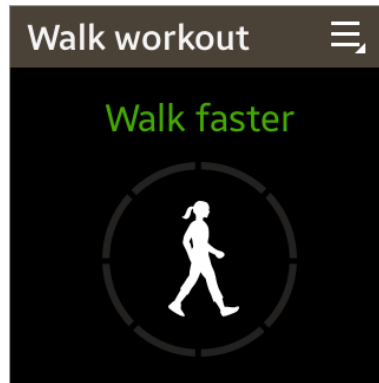

Exercising with training courses

On the S trainer screen, begin exercising by following the on-screen instructions.

On the step count screen, flick to the left to access the S trainer screen while counting your steps.

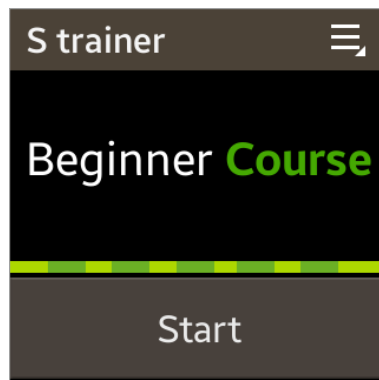

Tap **Start**, and then begin exercising. The device shows commands to help you control the intensity of your exercise. To stop exercising, tap the screen, and then tap **Stop**.

To change the training course, tap  → **Training course**, and then select a course.

S Voice

Use this application to command the device remotely by voice to dial a number, send a message, and more.

Tap **S Voice** on the Applications screen. Alternatively, press the Power button twice.



- This application may not be available depending on the region or service provider.
- This application is not supported in some languages.
- You can change the application to launch when you press the Power button twice. (p. 30)

Here are several examples of spoken commands:

- Open gallery
- Launch gallery
- Call Lulu mobile
- Check schedule

Tips for better voice recognition

- Speak clearly.
- Speak in quiet places.
- Do not use offensive or slang words.
- Avoid speaking in dialectal accents.

The device may not recognise your commands or may perform unwanted commands depending on your surroundings or how you speak.

Stopwatch

Use this application to measure the amount of elapsed time.

Tap **Stopwatch** on the Applications screen.

Tap **Start** to time an event. Tap **Lap** to record lap times.

Tap **Reset** to clear lap time records.

Timer

Use this application to use the device as a countdown timer.

Tap **Timer** on the Applications screen.

Set the duration, and then tap **Start**.

Tap **Dismiss** when the timer goes off.

Today's Schedule

Use this application to view today's events.

Tap **Today's Schedule** on the Applications screen.

Voice Memo




Use this application to record voice memos.


Tap **Voice Memo** on the Applications screen.




While charging, you cannot use this application.





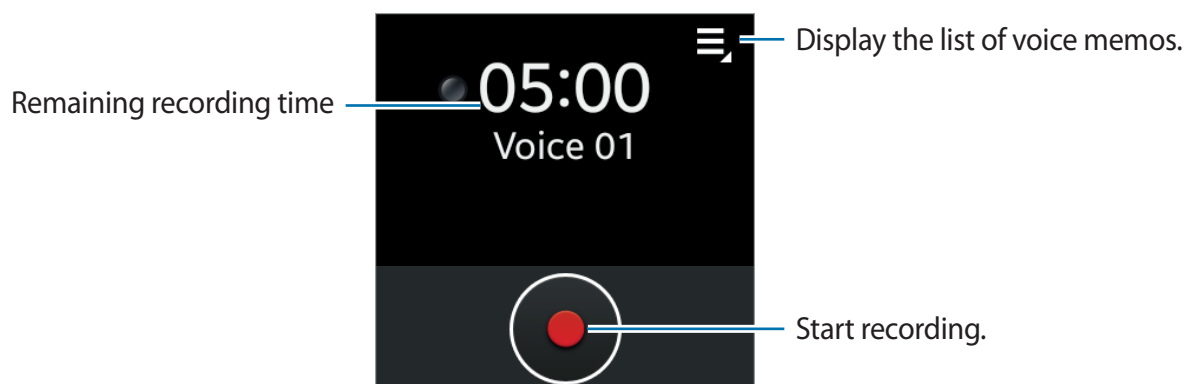

Recording voice memos

Tap  to start recording. Speak into the microphone at the top left of the device. Tap  to pause recording. Tap  to finish recording.



Playing voice memos

Select a voice memo to play. If spoken text is recorded and the text converting is finished,  appears next to the filename. The device shows the text on the screen during playback.

- : Adjust the volume by tapping  or .
- : Pause playback.
-  / : Skip to the previous or next voice memo.

Weather

Use this application to view weather information for the locations that are set on the connected mobile device.

Tap **Weather** on the Applications screen.

When you add other locations on the mobile device, you can view weather information for them by scrolling left or right.

To view the weather information for this week, tap the screen.

Settings

About Settings

Use this application to configure the device and set application options.

Tap **Settings** on the Applications screen.

Clock

Access and alter the following settings to control how the device displays the time and date.



If the battery becomes fully discharged, the time and date are reset.

- **Clock type:** Change the clock type.
- **Date and time:**
 - **Auto sync:** Automatically update the time and date when moving across time zones. To use this feature, the device must be connected to a mobile device.
 - **Set date:** Set the current date manually.
 - **Set time:** Set the current time manually.
- **Hourly alert:** Set the device to emit sounds or vibrate every hour.

Sound

Change settings for various sounds on the device.

- **Sound mode:** Activate silent mode to make your device vibrate or mute all sounds, except for media sounds.
- **Touch sounds:** Set the device to sound when selecting an application or option on the touch screen.
- **Ringtones:** Select a ringtone to alert you to incoming calls.
- **Notifications:** Select a ringtone for events, such as incoming messages and missed calls.
- **Vibration:** Select the force of the vibration notification.
- **Preferred arm:** Select the arm on which you wear the device. The main microphone will change depending on your selection.

Volume

Adjust the volume for various sounds on the device.

- **Multimedia:** Adjust the volume level for media sound.
- **Ringtones:** Adjust the volume level for call ringtones.
- **Notifications:** Adjust the volume level for notifications.
- **System:** Adjust the volume level for system sounds.

Display

Change the settings for the display.

- **Brightness:** Adjust the brightness for the display.
- **Screen timeout:** Set the length of time the device waits before turning off the display's backlight.
- **Home bg colour:** Set a colour for the Home screen.
- **Font size:** Change the font size.
- **Battery per...:** Set the device to display the remaining battery life when you double-tap the screen with two fingers.

Battery

View the remaining battery life.

Bluetooth

- **Bluetooth:** Turn the Bluetooth wireless feature on or off.
- **Visibility:** Set the device to be visible to other Bluetooth devices.

Privacy lock

- **Privacy lock:** Activate the screen lock feature.
- **Help:** Access help information about using the screen lock feature.

Language

Select a display language for all menus and applications. When your device is connected to a mobile device, the display language on the mobile device is applied to your device. You cannot change the language with your device.

Reset Gear

Reset settings to the factory default values and delete all data.

Gear info

Access device and battery information.

- **About Gear:** Access device information.
- **USB debug:** Activate the USB debugging mode to connect your device to a computer with a USB cable.

Troubleshooting

Before contacting a Samsung Service Centre, please attempt the following solutions. Some situations may not apply to your device.

Your device does not turn on

When the battery is completely discharged, your device will not turn on. Charge the battery completely before turning on the device.

The touch screen responds slowly or improperly

- If you attach a protective cover or optional accessories to the touch screen, the touch screen may not function properly.
- If you are wearing gloves, if your hands are not clean while touching the touch screen, or if you tap the screen with sharp objects or your fingertips, the touch screen may malfunction.
- The touch screen may malfunction in humid conditions or when exposed to water.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, visit a Samsung Service Centre.

Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close applications and turn on the device to regain functionality. If your device is frozen and unresponsive, press and hold the Power button for more than 8-10 seconds to reboot.

If this does not solve the problem, perform a factory data reset. On the Applications screen, tap **Settings** → **Reset Gear** → **Reset**. Before performing the factory data reset, remember to make back-up copies of all important data stored on the device.

If the problem is still not resolved, contact a Samsung Service Centre.

Another Bluetooth device cannot locate your device

- Ensure that the Bluetooth wireless feature is activated on your device.
- Reset your device and try again.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve the problem, contact a Samsung Service Centre.

A connection is not established when you connect the device to a mobile device

- Ensure that the Bluetooth feature on both devices is activated.
- Ensure that the mobile device's software is Android™ 4.3 or higher and the latest version of the Gear Manager application is installed.

Your device and the mobile device are disconnected

Restart both devices and launch the Gear Manager on the mobile device again.

Your device receives notifications at an interval different than the one you set on the mobile device

Ensure that you set the device's time and date to be updated automatically and the device is connected to the mobile device.

Calls are not connected

- Ensure that your device is connected to a mobile device.
- Ensure that the connected mobile device has accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialing on the connected mobile device.
- Ensure that you have not set call barring for the incoming phone number on the connected mobile device.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.

Sound echoes during a call

Adjust the volume or move to another area.

Audio quality is poor

You may have connectivity problems due to issues with the mobile device's network connections.

The battery icon is empty

Your battery is low. Recharge the battery.

The battery does not charge properly (For Samsung-approved chargers)

- Ensure that you place the device on the charging cradle and connect the cradle to the charger properly.
- If the charging terminals are dirty, the battery may not charge properly or the device may turn off. Wipe both gold-coloured contacts and try charging the battery again.
- The batteries in some devices are not user-replaceable. To have the battery replaced, visit a Samsung Service Centre.

The battery depletes faster than when first purchased

- When you expose the device to very cold or very hot temperatures, the useful charge may be reduced.
- Battery consumption increases when you use some applications.
- The battery is consumable and the useful charge will get shorter over time.

Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

Error messages appear when launching the camera

Your device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery.
- Free some memory by deleting files from your device.
- Restart the device. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

Photo quality is poorer than the preview

- The quality of your photos may vary, depending on the surroundings and the photography techniques you use.
- If you take photos in dark areas, at night, or indoors, image noise may occur or images may be out of focus.

A connection is not established when you connect the device to a computer

- Your device is not detected as a removable disk. You can send files only to the connected mobile using the Bluetooth feature. (p. 26)
- Ensure that the USB cable you are using is compatible with your device.
- Ensure that you have the proper driver installed and updated on your computer.
- If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer.
- Ensure that you have Samsung Kies installed on your computer.

Data stored on the device has been lost

Always make backup copies of all important data stored on the device. Otherwise, you cannot restore data if it is corrupted or lost. Samsung is not responsible for the loss of data stored on the device.

A small gap appears around the outside of the device case

- This gap is a necessary manufacturing feature and some minor rocking or vibration of parts may occur.
- Over time, friction between parts may cause this gap to expand slightly.

Health and Safety

This safety information contains content for mobile devices. Some content may be not applicable to your device. To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device.



Warning: Failure to comply with safety warnings and regulations can cause serious injury or death.

Do not use damaged power cords or plugs, or loose electrical sockets

Unsecured connections can cause electric shock or fire.

Do not touch the power cord with wet hands or disconnect the charger by pulling the cord

Doing so may result in electrocution.

Do not bend or damage the power cord

Doing so may cause electric shock or fire.

Do not use your device while it is charging or touch your device with wet hands

Doing so may cause electric shock.

Do not short-circuit the charger or the device

Doing so may cause electric shock or fire, or the battery may malfunction or explode.

Do not use your device outdoor during a thunderstorm

Doing so may result in electric shock or device malfunction.

Use manufacturer-approved chargers, accessories, and supplies

- Using generic chargers may shorten the life of your device or cause the device to malfunction. They may also cause a fire or cause the battery to explode.
- Use only Samsung-approved charger specifically designed for your device. Incompatible charger can cause serious injuries or damage to your device.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.
- Do not drop or cause an impact to the charger or the device

Handle and dispose of the device and charger with care

- Never dispose of the device in a fire. Never place the device on or in heating devices, such as microwave ovens, stoves, or radiators. The device may explode when overheated. Follow all local regulations when disposing of used battery or device.

- Never crush or puncture the device.
- Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device and charger from damage

- Avoid exposing your device to very cold or very hot temperatures.
- Extreme temperatures can damage the device and reduce the charging capacity and life of your device and battery.
- Never use a damaged charger.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not use or store your device in areas with high concentrations of dust or airborne materials

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock.

Do not bite or suck the device

- Doing so may damage the device or result in an explosion or fire.
- Children or animals can choke on small parts.
- If children use the device, make sure that they use the device properly.

Do not insert the device or supplied accessories into the eyes, ears, or mouth

Doing so may cause suffocation or serious injuries.



Caution: Failure to comply with safety cautions and regulations can cause injury or property damage

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device in a hospital, on an aircraft, or in an automotive equipment that can be interfered with by radio frequency

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimize possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemaker.

- If you use medical equipment, contact the equipment manufacturer before using your device to determine whether or not the equipment will be affected by radio frequencies emitted by the device.
- On an aircraft, using electronic devices can interfere with the aircraft's electronic navigational instruments. Make sure the device is turned off during takeoff and landing. After takeoff, you can use the device in flight mode if allowed by aircraft personnel.
- Electronic devices in your car may malfunction, due to radio interference from your device. Contact the manufacturer for more information.

Do not expose the device to heavy smoke or fumes

Doing so may damage the outside of the device or cause it to malfunction.

If you use a hearing aid, contact the manufacturer for information about radio interference

The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device.

Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio towers

Radio frequencies may cause your device to malfunction.

Turn off the device in potentially explosive environments

- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (gas stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

If you notice strange smells or sounds coming from your device or the battery, or if you see smoke or liquids leaking from the device or battery, stop using the device immediately and take it to a Samsung Service Centre

Failure to do so may result in fire or explosion.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, use your common sense and remember the following tips:

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your device.

- Position your device within easy reach. Make sure you can access your wireless device without taking your eyes off the road. If you receive an incoming call at an inconvenient time, let your voicemail answer it for you.
- Suspend use in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary.
- Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware that you are driving and suspend conversations that could potentially divert your attention from the road.

Care for and use your device properly

Keep your device dry

- Humidity and liquids may damage the parts or electronic circuits in your device.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer’s warranty.
- When your hands or wrist is wet, dry hands or wrist first. Then, wear the device on your wrist.
- Do not wear the device when the straps are wet. Wet straps can cause skin irritation. Dry the straps first.

Store your device only on flat surfaces

If your device falls, it may be damaged.

Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5 °C to 35 °C

- Do not store your device in very hot areas such as inside a car in the summertime. Doing so may cause the screen to malfunction, result in damage to the device, or cause the battery to explode.
- Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).

Do not store your device with metal objects, such as coins, keys, and necklaces

Your device may be scratched or may malfunction.

Do not wear the device when you experience skin irritation

If you experience skin irritation when you are wearing the device, stop wearing the device and consult a physician.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.

Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.
- If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device.
- If you feel discomfort, such as a muscle spasm, or disoriented, stop using the device immediately and consult a physician.
- To prevent eye strain, take frequent breaks while using the device.

Reduce the risk of repetitive motion injuries

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

Do not hold the device's speaker close to your ears

Excessive exposure to loud sounds can cause hearing damage.

Use caution when using the device while walking or moving

- Always be aware of your surroundings to avoid injury to yourself or others.
- Be careful not to bump into objects or people. You and others could be injured or the device could be damaged.

Do not carry your device in your back pockets

You could be injured or damage the device if you fall.

Do not paint or put stickers on your device

- Paint and stickers can clog moving parts and prevent proper operation.
- If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the device and consult your physician.

Do not use the device if the screen is cracked or broken

- Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Install devices and equipment with caution

- Ensure that any devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

Do not drop your device or cause impacts to your device

- Your device may be damaged or may malfunction.
- If bent or deformed, your device may be damaged or parts may malfunction.

Ensure maximum battery and charger life

- Avoid charging your device for more than a week, as overcharging may shorten battery life.
- Over time, unused device will discharge and must be recharged before use.
- Disconnect the charger from power sources when not in use.
- Leaving batteries unused over time may reduce their lifespan and performance. It may also cause the batteries to malfunction or explode, or cause a fire.
- Follow all instructions in this manual to ensure the longest lifespan of your device and battery. Damages or poor performance caused by failure to follow warnings and instructions can void your manufacturer's warranty.

- Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damages or deterioration caused by using unapproved accessories are not.

When using the device, mind the following

- Wear the device, as you would with a traditional watch.
- Speak directly into the microphone

Do not disassemble, modify, or repair your device

Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre.

When cleaning your device, mind the following

- Wipe your device or charger with a towel or an eraser.
- Clean the charging terminals with a cotton ball or a towel.
- Clean the straps by wiping them gently with mild soap or a wet towel.
- Do not use chemicals or detergents. Doing so may discolour or corrode the outside the device or may result in electric shock or fire.

Do not use the device for anything other than its intended use

Your device may malfunction.

Avoid disturbing others when using the device in public

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Protect your personal data and prevent leakage or misuse of sensitive information

- While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.
- In the event your device is lost or stolen, disconnect the device from your mobile device.

Do not distribute copyright-protected material

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Malware and viruses

To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service

- Deactivate wireless features, such as Bluetooth, when not in use.
- Install antivirus programs on your computer and run them regularly to check for infection.
- Do not edit registry settings or modify the device's operating system.

Correct disposal of this product

This product and its electronic accessories (e.g., charger, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

This device is compliant with RoHS.

Correct disposal of batteries in this product

The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose of it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

Acknowledging Special Precautions and Industry Canada Notice

Cautions

Any changes or modifications to your device not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if they cause damage or a defect to the device.

Although your device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient/relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal non-commercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIED, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and

transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

