

Code Reader™ 1000/1400/8000


Configuration Guide



Code Reader™ 1000



Code Reader™ 1400

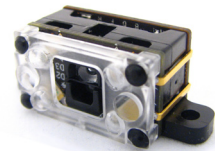

Code Reader™ 8000

code



Table of Contents

USB Settings

USB Keyboard Mode.....	6 (A1)
USB Downloader Mode.....	6 (A2)
USB Virtual COM One Way Mode.....	6 (A3)
USB Native Two Way Mode	6 (A4)
USB HID POS (Terminal 1D 131).....	6 (B1)
Reset to USB Factory Defaults.....	6 (B2)

RS-232 Settings

RS-232 Raw Mode	6 (C1)
RS-232 Packet Mode	6 (C2)
Reset to RS-232 Factory Defaults.....	6 (C3)
RS-232 Interface - 7 Data Bits.....	6 (C4)
RS-232 Interface - 8 Data Bits - Default.....	6 (D1)
RS-232 Interface - 1200 Baud Rate	6 (D2)
RS-232 Interface - 2400 Baud Rate	6 (D3)
RS-232 Interface - 4800 Baud Rate	6 (D4)
RS-232 Interface - 9600 Baud Rate	6 (E1)
RS-232 Interface - 19200 Baud Rate	6 (E2)
RS-232 Interface - 38400 Baud Rate	6 (E3)
RS-232 Interface - 57600 Baud Rate	6 (E4)
RS-232 Interface - 115200 Baud Rate - Default.....	6 (F1)
RS-232 Interface - Even Parity.....	6 (F2)
RS-232 Interface - Odd Parity	6 (F3)
RS-232 Interface - No Parity - Default.....	6 (F4)

Continuous Trigger Optimization and Settings

Continuous Scan Both Imagers.....	7 (A1)
Continuous Scan Off - Default.....	7 (A2)

Motion Detection Scanning

Enable Motion Detection with Stand Detection - Default.....	7 (B1)
Disable Motion Detection with Stand Detection.....	7 (B2)
Motion Detection On, Start Delay 0	7 (C1)
Motion Detection On, Start Delay 500ms	7 (C2)
Motion Detection On, Start Delay 0, Dark Environment	7 (C3)
Motion Detection On, Start Delay 500ms, Dark Environment	7 (C4)
Motion Detection Off.....	7 (D1)

Symbologies

Aztec On - Default	7 (D2)
Aztec Off.....	7 (D3)
Aztec Inverse On	7 (D4)
Aztec Inverse & Normal.....	7 (E1)
Codabar On - Default	7 (E2)
Codabar Off	7 (E3)
Codablock F On.....	7 (E4)
Codablock F Off - Default	7 (D1)
Code 11 On	7 (D2)
Code 11 Off - Default.....	7 (D3)
Code 11 - Checksum 1 digit	7 (D4)
Code 11 - Checksum 2 digit & Strip from Result	8 (A1)



Table of Contents

Code 11 - Checksum 1 digit & Strip from Result	8 (A2)
Code 39 On - Default	8 (A3)
Code 39 Off	8 (A4)
Code 39 Enable Checksum	8 (B1)
Code 39 Disable Checksum - Default	8 (B2)
Code 39 Enable Checksum and Strip	8 (B3)
Code 39 Extended Full ASCII On	8 (B4)
Code 39 Extended Full ASCII Off - Default	8 (C1)
Code 39 Short Margin On - Default	8 (C2)
Code 39 Short Margin Off	8 (C3)
Code 39 Trioptic On	8 (D1)
Code 39 Trioptic Off	8 (D2)
Code 93 On - Default	8 (D3)
Code 93 Off	8 (D4)
Code 128 On - Default	8 (E1)
Code 128 Off	8 (E2)
Code 128 Short Margin On - Default	8 (E3)
Code 128 Short Margin Off	8 (E4)
Composite On	8 (F3)
Composite Off - Default	8 (F4)
Data Matrix Rectangle On	9 (A1)
Data Matrix Rectangle Off - Default	9 (A2)
Data Matrix Inverse On	9 (A3)
Data Matrix Inverse Off - Default	9 (A4)
Enable improved reading capability for hard to decode Data Matrix symbols	9 (B3)
Disable improved reading capability for hard to decode Data Matrix symbols - Default	9 (B4)
GS1 Limited DataBar On	9 (C1)
GS1 DataBar 14/ Truncated 14 On	9 (C2)
GS1 DataBar Stacked On	9 (C3)
GS1 DataBar Expanded On	9 (C4)
All GS1 DataBar On - Default	9 (D1)
All GS1 DataBar Off	9 (D2)
Int 2 of 5 On - Default	9 (E1)
Int 2 of 5 Off	9 (E2)
Int 2 of 5 2 Digits On	9 (E3)
Int 2 of 5 2 Digits Off - Default	9 (E4)
Int 2 of 5 4 Digits On	9 (F1)
Int 2 of 5 4 Digits Off	9 (F2)
Int 2 of 5 with Control Character Stripped	9 (F3)
Maxicode On	10 (A1)
Maxicode Off - Default	10 (A2)
Matrix 2 of 5 On	10 (A3)
Matrix 2 of 5 Off - Default	10 (A4)
Micro PDF417 On	10 (B1)
Micro PDF417 Off - Default	10 (B2)
MSI Plessy On - Default	10 (B3)
MSI Plessy Off	10 (B4)
Macro PDF 417 On	10 (C3)
Macro PDF 417 Off - Default	10 (C4)
NEC 2 of 5 On - Default	10 (D1)
NEC 2 of 5 Off	10 (D2)
Disable OCR - Default	10 (D3)



Table of Contents

Enable OCR	10 (D4)
PDF 417 On - Default.....	10 (E1)
PDF 417 Off.....	10 (E2)
Postal Codes - Australian Post On	10 (F1)
Postal Codes - Japan Post On	10 (F2)
Postal Codes - KIX On	10 (F3)
Postal Codes - Postnet On	10 (F4)
Postal Codes - Planet On	11 (A1)
Postal Codes - Planet & Postnet On	11 (A2)
Postal Codes - Royal Mail On	11 (A3)
Postal Codes - 4 State CB On (intelligent mail).....	11 (A4)
Postal Codes - All Postal Codes Off - Default	11 (B1)
QR Code On - Default	11 (B4)
QR Code Off.....	11 (C1)
QR Code Enable Checksum	11 (C2)
QR Code Disable Checksum.....	11 (C3)
QR Code Inverse and Standard On	11 (C4)
QR Code Inverse On	11 (D1)
Enable All QR Code On (includes Micro QR).....	11 (D2)
Inverse and Micro QR Code On	11 (D3)
Telepen On - Default.....	11 (E1)
Telepen Off	11 (E2)
UPC On - Default.....	11 (E3)
UPC Off	11 (E4)
UPC Short Margin Enabled - Default.....	11 (F1)
UPC Short Margin Disabled	11 (F2)
UPC Extension On	11 (F3)
UPC Extension Off - Default.....	11 (F4)

Miscellaneous Settings

Reader ID and Firmware Version	12 (A1)
CR1400 Reset.....	12 (A2)

Keyboard Mapping

Belgium Keyboard	12 (A3)
Swiss Keyboard.....	12 (A4)
US English Keyboard Mapping - Default No Leading 0.....	12 (B1)
US English Keyboard Mapping - Leading 0.....	12 (B2)
French Keyboard	12 (B3)
German Keyboard	12 (B4)
Japanese Keyboard.....	12 (C1)
Control Characters for Non Printable ASCII	12 (C2)
Universal Keyboard Mapping	12 (C3)

Operating System Settings

Enable Alternative OS (Windows CE/MAC/Linux).....	12 (C4)
Disable Alternative OS.....	12 (D1)

Mirroring Settings

Mirroring On.....	12 (D2)
Mirroring Off - Default.....	12 (D3)



Table of Contents

Prefix/Suffix Settings

Prefix - AIM IDs On.....	12 (E1)
Prefix - AIM IDs Off - Default	12 (E2)
Prefix - Comma.....	12 (E3)
Prefix - Space.....	12 (E4)
Prefix - Tab (USB Keyboard Mode ONLY).....	12 (F1)
Prefix - Tab (RS-232 Mode ONLY)	12 (F2)
Prefix - Erase/None - Default.....	12 (F3)
Prefix - CRLF (RS-232 Mode ONLY).....	12 (F4)
Suffix - Carriage Return (RS-232 Mode ONLY).....	13 (A3)
Suffix - Comma.....	13 (A4)
Suffix - Line Feed (RS-232 Mode ONLY)	13 (B1)
Suffix - Carriage Return Line Feed (RS-232 Mode ONLY).....	13 (B2)
Suffix - Space	13 (B3)
Suffix - Enter (Keyboard Mode ONLY)	13 (B4)
Suffix - Tab (USB Keyboard Mode ONLY).....	13 (C1)
Suffix - Tab (RS-232 Mode ONLY)	13 (C2)
Suffix - Erase/None - Default.....	13 (C3)
Erase Prefix & Suffix Data	13 (C4)

Reader Text Commands

Reader Text Commands On	13 (D1)
Reader Text Commands Off - Default.....	13 (D2)

Clear Reader

Clear All Stored Data and Images	13 (D3)
Clear all JavaScript Rules.....	13 (D4)

Feedback Settings

Beep On Vibrate On - Default (CR1400 Only).....	13 (E1)
Beep Off Vibrate On (CR1400 Only)	13 (E2)
Beep On Vibrate Off (CR1400 Only)	13 (E3)
Beep Off Vibrate Off (CR1400 Only)	13 (E4)
Beep On - Default (CR1000 & CR8000; No Vibration Mode)	
Beep Volume 0% (CR1000 & CR1400 Only)	13 (F1)
Beep Volume 33% (CR1000 & CR1400 Only)	13 (F2)
Beep Volume 67% (CR1000 & CR1400 Only)	13 (F3)
Beep Volume 100% - Default (CR1000 & CR1400 Only).....	13 (F4)

Scan Delay

Duplicate Scan Disabled	14 (A1)
1 sec Duplicate Scan Delay.....	14 (A2)
2 sec Duplicate Scan Delay.....	14 (A3)
3 sec Duplicate Scan Delay.....	14 (A4)
Default Trigger Delay.....	14 (B1)

Targeting

Targeting Off	14 (B2)
Targeting On - Default.....	14 (B3)



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

USB Keyboard Mode  M0002_01 A1	USB Downloader Mode  M0004_01 A2	USB Virtual COM One Way Mode  M0005_01 A3	USB Native Two Way Mode  M0006_01 A4
USB HID POS (Terminal ID 131)  M0003_01 B1	Reset to USB Factory Defaults  M0001_02 B2	Intentionally Left Blank B3	Intentionally Left Blank B4
RS-232 Raw Mode  M0149_01 C1	RS-232 Packet Mode  M0150_01 C2	Reset to RS-232 Factory Defaults  M0017_02 C3	RS-232 Interface 7 Data Bits  M0018_01 C4
RS-232 Interface 8 Data Bits - Default  M0019_01 D1	RS-232 Interface 1200 Baud Rate  M0020_01 D2	RS-232 Interface 2400 Baud Rate  M0021_01 D3	RS-232 Interface 4800 Baud Rate  M0022_01 D4
RS-232 Interface 9600 Baud Rate  M0023_01 E1	RS-232 Interface 19200 Baud Rate  M0024_01 E2	RS-232 Interface 38400 Baud Rate  M0025_01 E3	RS-232 Interface 57600 Baud Rate  M0026_01 E4
RS-232 Interface 115200 Baud Rate - Default  M0027_01 F1	RS-232 Interface Even Parity  M0028_01 F2	RS-232 Interface Odd Parity  M0029_01 F3	RS-232 Interface No Parity - Default  M0030_01 F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Continuous Scan Both Imagers  M0127_02 A1	Continuous Scan Off - Default  M0126_03 A2	Motion Detection - CR1000 and CR1400 readers that feature stand detection will default to motion detection reading when the reader is placed in a stand. Scanning 'Disable Motion Detection with Stand Detection' (B2), will put the reader into motion detection reading when the reader is both in and out of the stand - To disable all motion detection, you must scan 'Disable Motion Detection with Stand Detection' (B2) and 'Motion Detection Scanning Off' (D1) - To enable motion detection with stand detection after all motion detection has been turned off, scan any 'Motion Detection On' (C1-C4) code, and scan 'Enable Motion Detection with Stand Detection' (B1) - To enable motion detection in readers that do not feature stand detection, scan the 'Motion Detection On' setting you prefer (C1-C4) Refer to the reader's QuickStart Guide or User Manual to determine if your reader features stand detection.	
Enable Motion Detection with Stand Detection, Start Delay 0 - Default  M0216_02 B1	Disable Motion Detection with Stand Detection  M0217_02 B2		
Motion Detection On, Start Delay 0  M0161_03 C1	Motion Detection On, Start Delay 500ms  M0162_03 C2	Motion Detection On, Start Delay 0, Dark Environment  M0163_03 C3	Motion Detection On, Start Delay 500ms, Dark Environment  M0164_03 C4
Motion Detection Scanning Off  M0129_08 D1	Aztec On - Default  M0033_01 D2	Aztec Off  M0034_01 D3	Aztec Inverse On  M0035_01 D4
Aztec Inverse & Normal  M0036_01 E1	Codabar On - Default  M0037_01 E2	Codabar Off  M0038_01 E3	Codablock F On  M0039_01 E4
Codablock F Off - Default  M0040_01 F1	Code 11 On  M0042_01 F2	Code 11 Off - Default  M0041_01 F3	Code 11 - Checksum 1 digit  M0043_01 F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Code 11 - Checksum 2 digit & Strip from Result  M0044_01 A1	Code 11 - Checksum 1 digit & Strip from Result  M0045_01 A2	Code 39 On - Default  M0046_01 A3	Code 39 Off  M0047_01 A4
Code 39 Enable Checksum  M0048_01 B1	Code 39 Disable Checksum - Default  M0049_01 B2	Code 39 Enable Checksum and Strip  M0050_01 B3	Code 39 Extended Full ASCII On  M0051_01 B4
Code 39 Extended Full ASCII Off - Default  M0052_01 C1	Code 39 Short Margin On - Default  M0053_01 C2	Code 39 Short Margin Off  M0054_01 C3	Intentionally Left Blank C4
Code 39 Trioptic On  M0056_01 D1	Code 39 Trioptic Off  M0055_01 D2	Code 93 On - Default  M0059_01 D3	Code 93 Off  M0060_01 D4
Code 128 On - Default  M0061_01 E1	Code 128 Off  M0062_01 E2	Code 128 Short Margin On - Default  M0063_01 E3	Code 128 Short Margin Off  M0064_01 E4
Intentionally Left Blank F1	Intentionally Left Blank F2	Composite On  M0065_01 F3	Composite Off - Default  M0066_01 F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Data Matrix Rectangle On  M0067_01 A1	Data Matrix Rectangle Off - Default  M0068_01 A2	Data Matrix Inverse On  M0069_01 A3	Data Matrix Inverse Off - Default  M0070_01 A4
Intentionally Left Blank B1	Intentionally Left Blank B2	Enable improved reading capability for hard to decode Data Matrix symbols  M0071_01 B3	Disable improved reading capability for hard to decode Data Matrix symbols - Default  M0072_01 B4
GS1 DataBar Limited On  M0112_01 C1	GS1 DataBar 14/ Truncated 14 On  M0113_01 C2	GS1 DataBar 14 Stacked On  M0114_01 C3	GS1 DataBar Expanded On  M0115_01 C4
All GS1 DataBar On - Default  M0116_01 D1	All GS1 DataBar Off  M0117_01 D2	Intentionally Left Blank D3	Intentionally Left Blank D4
Int 2 of 5 On - Default  M0073_01 E1	Int 2 of 5 Off  M0074_01 E2	Int 2 of 5 2 Digits On  M0075_01 E3	Int 2 of 5 2 Digits Off - Default  M0076_01 E4
Int 2 of 5 4 Digits On  M0077_01 F1	Int 2 of 5 4 Digits Off  M0078_01 F2	Int 2 of 5 with Control Character Stripped  M0151_01 F3	Intentionally Left Blank F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Maxicode On  M0079_01 A1	Maxicode Off - Default  M0080_01 A2	Matrix 2 of 5 On  M0081_01 A3	Matrix 2 of 5 Off Default  M0082_01 A4
Micro PDF417 On  M0083_01 B1	Micro PDF417 Off - Default  M0084_01 B2	MSI Plessey On - Default  M0085_01 B3	MSI Plessey Off  M0086_01 B4
Intentionally Left Blank C1	Intentionally Left Blank C2	Macro PDF 417 On  M0093_01 C3	Macro PDF 417 Off - Default  M0094_01 C4
NEC 2 of 5 On - Default  M0087_01 D1	NEC 2 of 5 Off  M0088_01 D2	Disable OCR - Default  M0089_01 D3	Enable OCR  M0090_01 D4
PDF 417 On - Default  M0091_01 E1	PDF 417 Off  M0092_01 E2	Intentionally Left Blank E3	Intentionally Left Blank E4
Postal Codes Australian Post On  M0095_01 F1	Postal Codes Japan Post On  M0096_01 F2	Postal Codes KIX On  M0097_02 F3	Postal Codes Postnet On  M0099_01 F4



CR1000/CR1400/CR8000 Configuration Guide


NOTE: The configuration change will take effect immediately and saved to memory.

Postal Codes Planet On  M0098_01 A1	Postal Codes Planet & Postnet On  M0100_01 A2	Postal Codes Royal Mail On  M0101_01 A3	4-State CB On (Intelligent Mail)  M0103_01 A4
Postal Codes All Postal Codes Off - Default  M0102_01 B1	Intentionally Left Blank B2	Intentionally Left Blank B3	QR Code On - Default  M0104_01 B4
QR Code Off  M0105_01 C1	QR Code Enable Checksum  M0106_01 C2	QR Code Disable Checksum  M0107_01 C3	QR Code Inverse and Standard On  M0109_01 C4
QR Code Inverse On  M0108_01 D1	Enable All QR Code On (includes Micro QR)  M0110_01 D2	Inverse and Micro QR Code On  M0111_01 D3	Intentionally Left Blank D4
Telepen On - Default  M0118_01 E1	Telepen Off  M0119_01 E2	UPC On - Default  M0120_01 E3	UPC Off  M0121_01 E4
UPC Short Margin Enabled - Default  M0122_01 F1	UPC Short Margin Disabled  M0123_01 F2	UPC Extension On  M0124_01 F3	UPC Extension Off - Default  M0125_01 F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

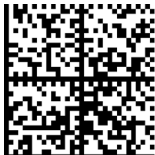Reader ID and Firmware Version  M0148_01 A1	CR1400 Reset  M0212_01 A2	Belgium Keyboard  M0189_01 A3	Swiss Keyboard  M0190_01 A4
US English Keyboard Mapping - Default No Leading 0  M0008_02 B1	US English Keyboard Mapping - Leading 0  M0007_02 B2	French Keyboard  M0010_01 B3	German Keyboard  M0011_01 B4
Japanese Keyboard  M0012_01 C1	Control Characters for Non Printable ASCII  M0009_02 C2	Universal Keyboard Mapping  M0013_01 C3	Enable Alternative OS (Windows CE/MAC/Unix/Linux)  M0015_02 C4
Disable Alternative OS  M0016_02 D1	Mirroring On  M0152_01 D2	Mirroring Off - Default  M0153_01 D3	Intentionally Left Blank D4
Prefix - AIM IDs On  M0159_01 E1	Prefix - AIM IDs Off - Default  M0160_01 E2	Prefix - Comma  M0130_02 E3	Prefix - Space  M0131_02 E4
Prefix - Tab (USB Keyboard Mode ONLY)  M0132_02 F1	Prefix - Tab (RS-232 Mode ONLY)  M0133_02 F2	Prefix - Erase/None - Default  M0134_02 F3	Prefix - CRLF RS232 Only  M0135_02 F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Intentionally Left Blank A1	Intentionally Left Blank A2	Suffix - Carriage Return RS232 Only  M0136_02 A3	Suffix - Comma  M0137_02 A4
Suffix - Line Feed RS232 Only  M0138_02 B1	Suffix - Carriage Return Line Feed RS232 Only  M0139_02 B2	Suffix - Space  M0140_02 B3	Suffix - Enter Keyboard Only  M0141_02 B4
Suffix - Tab (USB Keyboard Mode Only)  M0142_02 C1	Suffix - Tab (RS-232 Mode Only)  M0143_02 C2	Suffix - Erase/None - Default  M0144_02 C3	Erase All Prefix & Suffix Data  M0145_02 C4
Reader Text Commands On  M0146_01 D1	Reader Text Commands Off - Default  M0147_01 D2	Clear All Stored Data and Images  M0071_01 D3	Clear All JavaScript Rules  M0165_01 D4
Beep On Vibrate On - Default (CR1400 Only)  M0188_01 E1	Beep Off Vibrate On (CR1400 Only)  M0167_01 E2	Beep On Vibrate Off (CR1400 Only)  M0168_01 E3	Beep Off Vibrate Off (CR1400 Only)  M0169_01 E4
Beep Volume 0% (CR1000 and CR1400 Only)  M0309 F1	Beep Volume 33% (CR1000 and CR1400 Only)  M0310_01 F2	Beep Volume 67% (CR1000 and CR1400 Only)  M0311_01 F3	Beep Volume 100% (CR1000 and CR1400 Only)  M0312_01 F4



CR1000/CR1400/CR8000 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Duplicate Scan Disable  M0191_01 A1	1 sec Duplicate Scan Delay  M0192_01 A2	2 sec Duplicate Scan Delay  M0193_01 A3	3 sec Duplicate Scan Delay  M0194_01 A4
Default Trigger Delay  M0195_01 B1	Targeting Off  M0196_01 B2	Targeting On - Default  M0197_01 B3	Intentionally Left Blank B4
Intentionally Left Blank C1	Intentionally Left Blank C2	Intentionally Left Blank C3	Intentionally Left Blank C4
Intentionally Left Blank D1	Intentionally Left Blank D2	Intentionally Left Blank D3	Intentionally Left Blank D4
Intentionally Left Blank E1	Intentionally Left Blank E2	Intentionally Left Blank E3	Intentionally Left Blank E4
Intentionally Left Blank F1	Intentionally Left Blank F2	Intentionally Left Blank F3	Intentionally Left Blank F4

