

### Establishing a Bluetooth® Connection

1. If establishing a Bluetooth connection using the Charging Station with embedded CodeXML® Modem, slide the Communication Mode Switch (Figure 10) on the Charger/Modem Station to Bluetooth mode (the direction of the arrow). For USB communication mode information, please reference the CR2600 User Manual located at [www.codecorp.com](http://www.codecorp.com).
2. Scan the QuickConnect Code located on the front of the Charger/Modem Station or on the external CodeXML® M3 Modem. (Figures 14 and 15).
3. The wireless icon located at the top of the reader will flash as it attempts to make connection. (Figure 16) The blue LED on the Charging Station (or CodeXML® M3 Modem) will also flash as it attempts to connect and will turn solid when the connection is established. The CR2600 will beep once and the wireless icon will flash every 10 seconds. (Figures 14, 15 and 16)

For additional CodeXML® M3 Modem information, please reference the CodeXML® M3 Modem QuickStart Guide.



#### Important Note If Using a non-Code Bluetooth Device:

To connect to a Bluetooth device not manufactured by Code, you will need the Bluetooth address (often referred to as the BD\_ADDR) of that device. The 12-character Bluetooth address can be found on the device near the serial number. Then visit Code’s web site at: <http://www.codecorp.com/bdaddr.php> and enter the 12-character address to create the QuickConnect Code.

You will need to locate the Communications (COM) Port assigned to the Bluetooth serial port protocol before installing the Bluetooth Configuration Manager software that is included with your Bluetooth adapter (e.g., COM 10). This is the COM Port through which the CR2600 will connect.

### Batch Mode

When the CR2600 is in batch mode, the storage icon (Figure 16) will flash every 10 seconds to indicate data has been stored.

If the storage memory is full, the storage icon will flash 5 times every second. Data will need to be downloaded or deleted to free up memory space. Note, the storage icon will not flash if there is no data stored.

To put the CR2600 into Batch Mode, please reference the CR2600 Configuration Guide located at [www.codecorp.com](http://www.codecorp.com).

## Code Reader™ 2600 (CR2600)



CR2611

CR2612

### Included with the CR2600 (Palm and Handle Unit)

Depending on the kit purchased, a combination of the following components will be included with your reader:



### Charging Station Assembly Instructions

1. Plug the barrel side of the USB charge cable or power supply (depending on which you ordered) into the charger. (Figure 1)
2. (Optional) To attach the weighted base, place the ‘This Side Down’ (Figure 2) side of the weighted base onto the surface, place the Charging Station on top of it (Figure 3) and secure with the screws provided. (Figure 3)



Figure 1



Figure 2



Figure 3

3. Rubber feet can be placed on the corners of the weighted base (Figure 4) or directly onto the Charging Station (Figure 5) to prevent slipping from a surface.



4. (Optional) To mounting the Charging Station to a Surface place the 'This Side Down' (Figure 4) side of the weighted base onto the surface and secure with screws. Note: Because surface types differ, screws are not included to mount a Charging Station to a surface. Place the Charging Station on top of the secured weighted base (Figure 3) and secure to the base with the screws provided (Figure 3)



Figure 4



Figure 5

5. Plug the USB cable into the computer's USB port or the power adapter into the wall outlet.

## Weighted Base Adapter Plate

The weighted base has the same pre-drilled mounting holes as the ECS-H and UMC Chargers.

## Battery Installation and Removal

Place the battery into the reader as shown in Figure 6. Once in place, the battery will snap and lock to indicate proper installation. For battery removal, slide the latch (Figure 7), to unlock and release the battery.



Figure 6



Figure 7

## Powering on the Reader



Figure 8



Figure 9

Press and hold either of the buttons or trigger for one second, to power on.

## Charging a CR2600

Batteries ship with approximately 50% battery life and should be completely charged before initial use. Approximate time to charge a depleted battery is 4 hours via USB cable and 2 1/2 hours via AC power supply.

To charge a reader, remove the plastic 'Remove Before Use' cap, and place the reader into the Charging Station. (Figure 10)

When the reader is seated correctly, the Charging Indicator LED (Figure 10) will turn green.

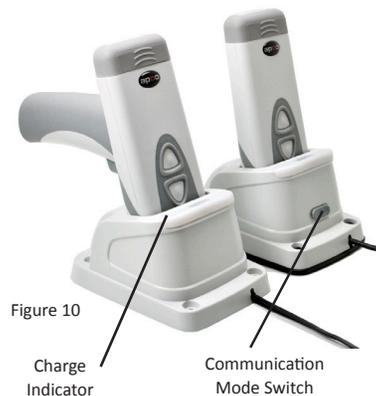


Figure 10

Charge Indicator

Communication Mode Switch

## Fuel Gauge Battery Status

### Check Battery Life

Press the fuel gauge button (Figure 11) to determine remaining battery life. If the battery has less than 10% capacity, the first LED will flash rapidly. For 25% or greater capacity, the LEDs will flash ON for 4 seconds.

### Fuel Gauge Status Indicator While Charging

If the battery has less than 10% capacity, the first LED will flash rapidly while charging. For 25% or greater capacity, the LEDs will flash ON for 4 seconds and OFF for 1 second. (Figure 12)

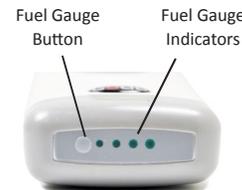


Figure 11

Battery Life	LED 1	LED 2	LED 3	LED 4	LED 5
<10%	Rapid Flashing				
<25%	ON				
25-50%	ON	ON			
50-75%	ON	ON	ON		
75%+	ON	ON	ON	ON	ON

Figure 12

## Using the CR2600

Press and hold a button or trigger on the CR2600, the two blue bars emitting from the reader are used for targeting. Center the blue bars in the middle of a bar code. When the bar code is in the reader's field of view and at the optimal distance (4" from the bar code), the reader will automatically read the code.



Figure 13

The CR2600 will beep, vibrate and the good read indicator will flash green to indicate a 'good read' has occurred. (Figure 16)

## Suffix Enter

The default setting on the CR2600 has Suffix Enter disabled. To enable Suffix Enter, scan the following configuration code. For RS232 Settings, please refer to the CR2600 Configuration Guide.

### Suffix Enter - USB



M10134\_01

## CR2600 Default Settings

Out of the box the CR2600 will read the following bar codes:

Aztec	Code 128	PDF417
Codabar	Data Matrix	QR Code
Code 39	GS1 DataBar	UPC
Code 93	Int 2 of 5	

To configure a CR2600 to read bar codes not listed, download the CR2600 Configuration Guide from [www.codecorp.com](http://www.codecorp.com) and scan the appropriate 'Enable' bar code reading symbology configuration code.