 


NESCO®

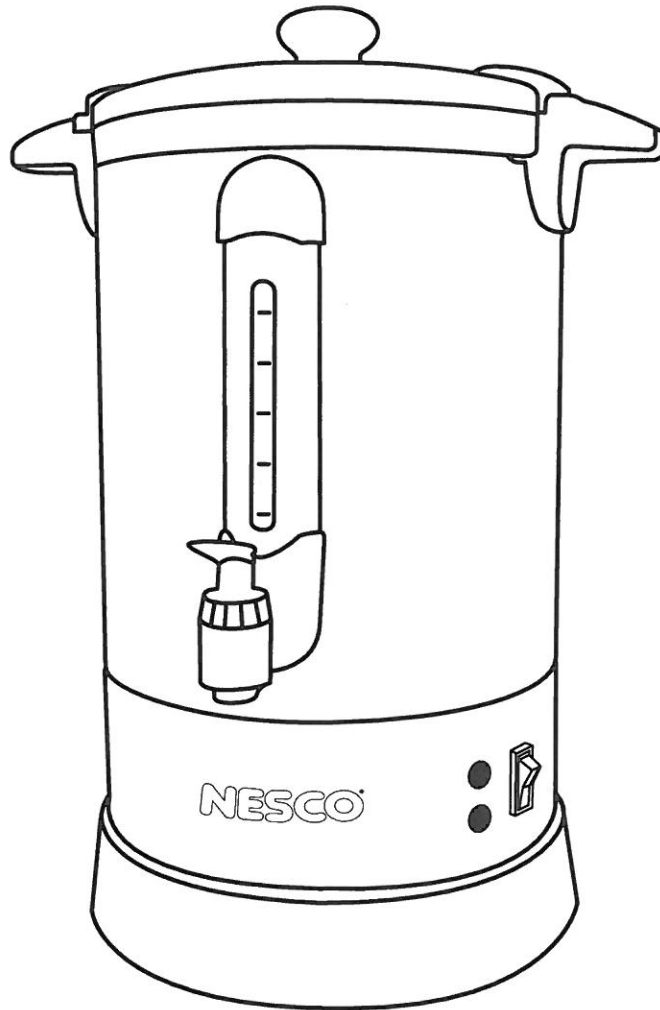

30 cup Coffee Urn (model CU-30)

User Manual

30 Tasse de Café Urn

Manuel de l'utilisateur

30 Taza Cafetera

Manual de usuario

NESCO®

30 cup Coffee Urn
Rated 950 Watts 120Volts, 60Hz

Table of Contents

Important Safeguards	1
Parts	2
Operation	3
Care and Cleaning	3
One Year Limited Warranty	4

Table des matières


Garanties importantes	5
Partes	6
Opération	7
Entretien et Nettoyage	7
Garantie restreinte d'un an	8

Índice

Salvaguardas importantes	9
Partes	10
Operación	11
Cuidado y Limpieza	11
Garantía limitada de un año	12

“NESCO®” is a registered trademark of The Metal Ware Corporation.

 The Metal Ware Corporation
1700 Monroe St., P.O. Box 237
Two Rivers, WI 54241-0237
Phone: 1-(800) 288-4545

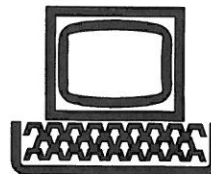

For accessories and additional products, go to
www.nesco.com

IMPORTANT SAFEGUARDS

- This product is designed for household use only -

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock and personal injury, do not immerse this appliance, including cord and plug, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. To avoid hazards, return appliance to NESCO® Factory Service Department for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electrical burner or in a heated oven.
11. Do not use appliance for other than intended use as described in the manual
12. Extreme CAUTION must be used when moving an appliance containing hot oil or or other hot liquids.
13. Scalding may occur if the lid is removed during the brewing cycles.
14. Always place appliance on a flat and sturdy surface.
15. While in use, keep appliance out of the reach of babies and children.

English

 
SAVE THESE INSTRUCTIONS

Polarized Plug: This appliance has a polarized plug (one blade is wider than the other). To reduce risk of electric shock, plug is intended to fit into polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not try to modify the plug in any way.

Short Cord Instructions: A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the tabletop where it can be pulled on by children or tripped over unintentionally.

Parts

English

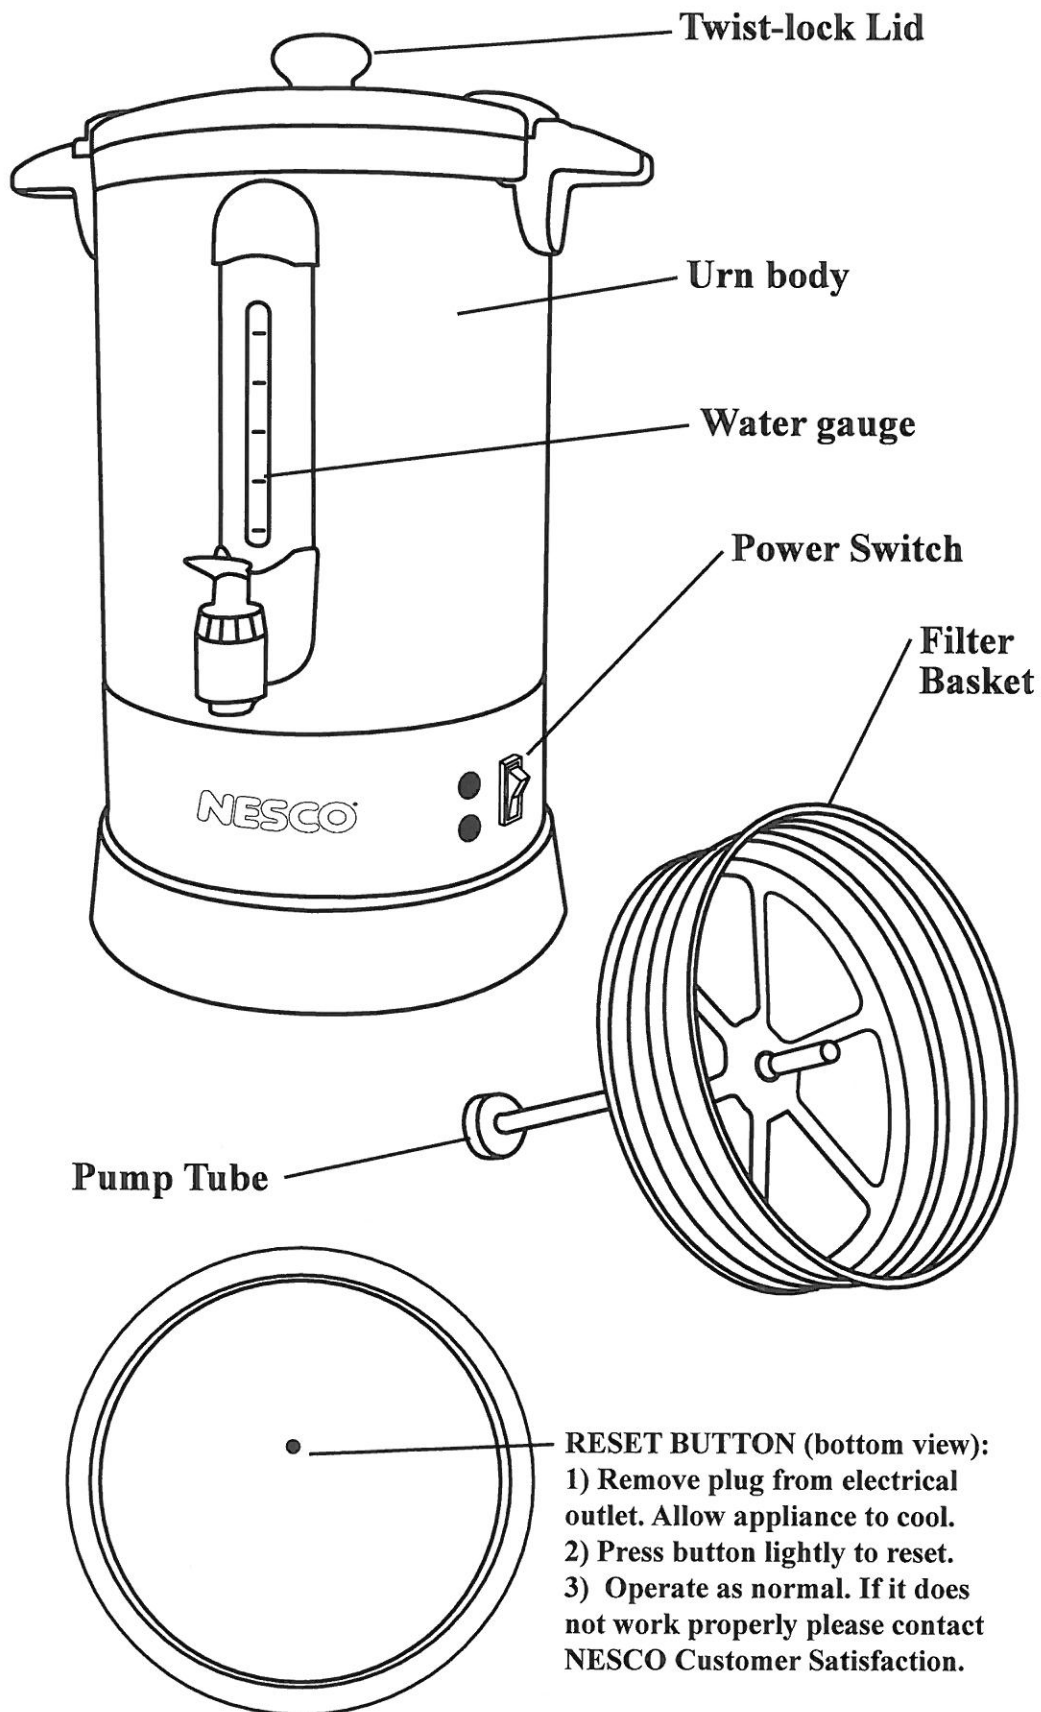

Operation

1. Before using the appliance, READ ALL INSTRUCTIONS and wash the Filter Basket, Pump Tube, and inside of Urn Body with non-abrasive detergent. Wipe dry with soft cloth. Try not to get water into the base of the appliance.
2. Remove lid and filter basket. Fill with COLD WATER to desired amount on water gauge. Do not fill more than the MAXIMUM fill mark on water gauge.
3. Insert pump tube firmly into the heating element inside the urn body to assure proper pump action. Place filter basket on tube.
4. Add regular coffee grounds evenly into filter basket. Amount of grounds used depends on your taste. To heat only water for instant drinks, do not add coffee grounds
5. Place lid in position and turn clockwise to lock into place.
6. Check power switch is OFF position. Plug cord into grounded 120V. electrical outlet. Press power switch to ON and the red HEATING light will turn on to indicate brewing.
7. Brewing will stop automatically and green KEEP WARM light will turn on. Coffee or hot water is ready to serve.
8. When the level drops below the bottom graduation of the water gauge, press power switch to OFF and unplug from electrical outlet.
9. NEVER OPERATE APPLIANCE EMPTY. This can damage the heating element and void warranty.

Resetting appliance overheat protection device

- This appliance has an overheat protection device that will automatically stop heating if it is operated without enough water or ambient temperatures too high.
- To reset switch - Cord must be removed from electrical outlet and appliance allowed to cool. Located under base is a button that must be pressed to reset device.
- Check that power switch is in OFF position and insert cord into grounded 120V electrical outlet.
- If this does not work, contact The Metal Ware Corporation Customer Service Center (800) 288-4545 or nesco.com for repair.

Care and Cleaning Instructions

1. Always turn OFF the power switch then unplug appliance before cleaning.
2. Empty remaining liquid by removing lid, basket and pump tube and pouring liquid into drain.
3. Clean the surfaces with clean, damp, soft cloth or sponge. Never place base of appliance in water or other liquids.
4. Never use abrasive cleaners or scouring pads. Do not use Baking Soda because it can pit the metal and discolor permanently.
5. Allow to dry before storage.
6. Some water has higher mineral content that can discolor the inside of the urn body. To remove these stains fill to desired level with COLD WATER use several tablespoons of vinegar or Cream of Tartar powder. Allow to heat for about 10 minutes then stop heating cycle using power switch. Drain solution and clean as noted above.

ONE YEAR LIMITED WARRANTY

This appliance is warranted for one year from date of original purchase against defects in material and workmanship. This warranty does not cover transportation damage, misuse, accident or similar incident. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. This product is intended for household use only, not for commercial use. Warranty does not cover commercial use.

Your new NESCO® appliance comes equipped with numerous safety features. Any attempt to interfere with the operation of these safety features makes this warranty null and void. In the event we receive an appliance for service that has been tampered with, we reserve the right to restore it to its original state and charge for the repair.

For service in warranty - Defective products may be returned, postage prepaid, with a description of the defect to: The Metal Ware Corporation, 1700 Monroe Street, Two Rivers, Wisconsin 54241, for no-charge repair or replacement at our option.

Must include proof of purchase or copy of original bill of sale when returning product for warranty service.

Please call Customer Satisfaction at 1-800-288-4545 to obtain a Return Authorization before shipping.

- For service in warranty, follow instructions set forth in warranty. When ordering new parts, make sure that you always mention the model number of the product.
- Call us on our toll free number, 1-800-288-4545 and tell us about your problem.
- If we instruct you to send all or part of your appliance to us for repair or replacement, our Customer Satisfaction representative will provide a Return Authorization number (this number notifies our receiving department to expedite your repair). Pack your unit carefully in a sturdy carton with sufficient padding to prevent damage because any damage caused in shipping is not covered by the warranty.
- Print your name, address and Return Authorization number on the carton.
- Write a letter explaining the problem. Include the following: your name, address and telephone number and a copy of the original bill of sale.
- Attach the sealed envelope containing the letter inside the carton. Insure the package for the value of the NESCO® appliance and ship prepaid to:

Attn: Factory Service Dept.
The Metal Ware Corporation
1700 Monroe Street
Two Rivers, WI 54241

NESCO®



1 - 800 - 288 - 4545