

 
 


upstar®

LED TV Quick Start Guide


Important Note:

- Congratulations on your new USPSTAR LED TV purchase. Thank you for your support. We hope you enjoy your new UPSTAR LED TV. To download an Instruction manual from the Internet please go to WWW.UPSTARUSA.COM and select Service.
- If you do not have an Internet connection or if you have any problems installing this product, please call the UPSTAR Toll Free:1(877)908-6777 at 9AM to 5:30PM.

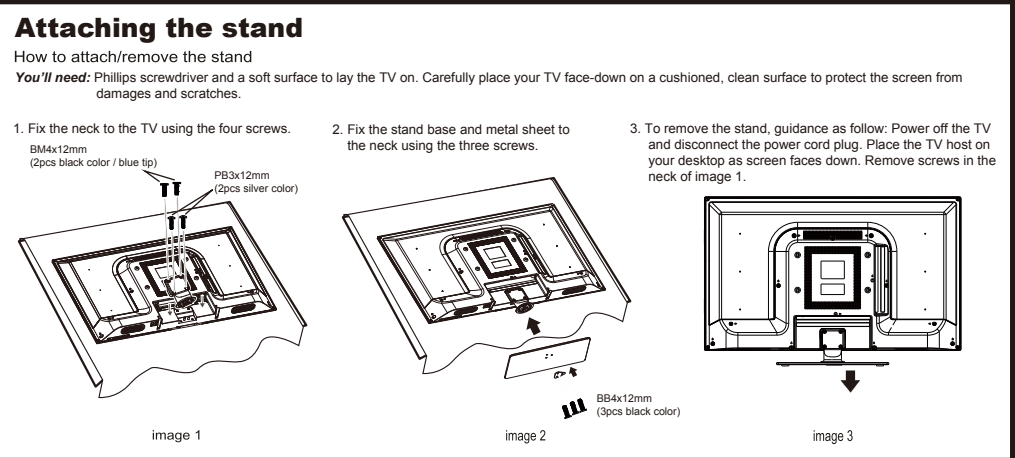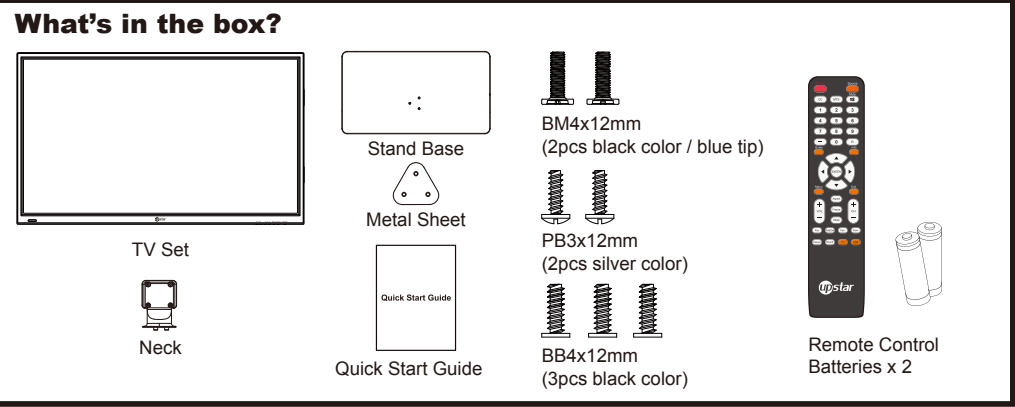


Wall Mounting Pattern

 This unit is VESA-Compliant and designed to be wall mounted with a VESA-Compliant 200x100mm mounting kit.
Mount this unit according to the instructions of the wall bracket(not supplied)

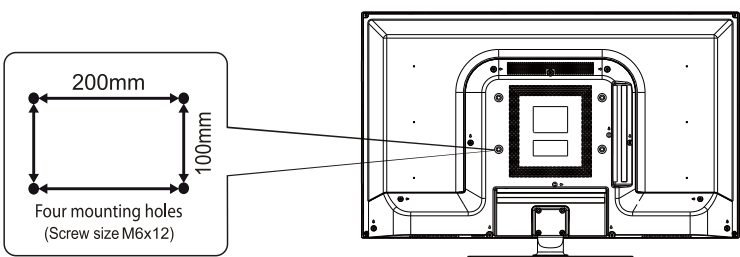


Front/Top View and Controls

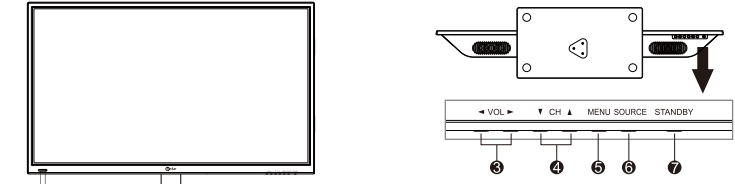 

Item	Description
1 POWER LED	Illuminates red when the TV is in standby mode.
2 IR(Infrared Receiver)	Receives IR signals from the remote control. Do not put anything near the sensor, as its function may be affected.
3 ◀VOL▶	These buttons increases/decreases the TV's volume. If a sub-menu is active, pressing these buttons will move the select right/left.
4 ◀CH▶	These buttons changes the TV channel up/down. If the OSD is active,these buttons functions as up/down for the menu.
5 MENU	This button activates the On Screen Display(OSD). If a sub-menu is active, pressing this button will exit the OSD.
6 SOURCE	This button switches between all the different sources of the TV. When the OSD is active, this button acts as the enter button and confirms the menu selection.
7 STANDBY	Turn on the TV by pressing the button once. Press the button again to turn off the TV.

 
Rear View and Sockets

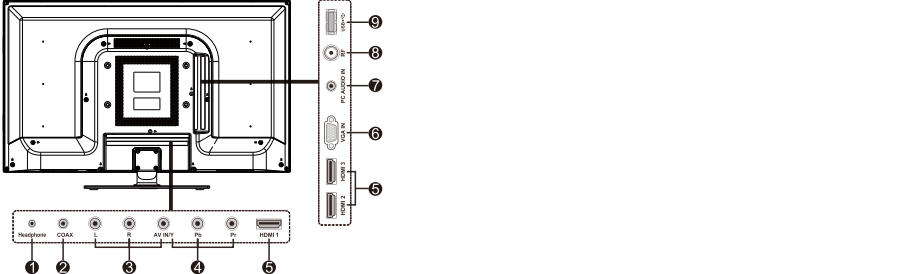


Socket	Description
1 HEADPHONE	This connection is for headphones to be attached to the TV.
2 COAX	This connection port is used for sending out digital audio signals to digital receivers. The orange (COAX SPDIF OUT) connector sends out either bit-stream or PCM digital sound signal to a home theater receiver with digital coax input.
3 AV IN/L/R	AV connects to devices that use composite video cables such as VCR or DVD player. This port shares the audio jacks with YPBPR.
4 YPBPR	This connection port is for DVD players or satellite / cable set-top boxes that use component cables. From left to right, connect green, blue, and red for video, and then connect white for left channel audio, and red for right channel audio. This port shares the audio jacks with AV.
5 HDMI 1/2/3	HDMI connects to devices that use HDMI cable,such as Blu-ray or HD DVD player, or HD cable / satellite set-top box. This connection port receives pure digital audio and high definition signal through one single cable. This port also can accept a HDCP video device for video.
6 VGA IN	This connection port connects to a PC for video using VGA cable. Be sure to connect your audio cable to the VGA Stereo input if you want sound out of VGA video source.
7 PC AUDIO IN	This connection port is for people who want to provide audio to the TV when using a PC or a DVI video device. The sources use 3.5mm mini-jack audio cable.
8 RF	This connection is for digital or analog cable without the cable box or over-the-airwave antennas.
9 USB	USB connects to USB flash drives for playing music and picture. The USB port is also used for updating the TV's firmware.

Connection Suggestions

 
If You Have Digital Cable without Cable Box or Antenna...

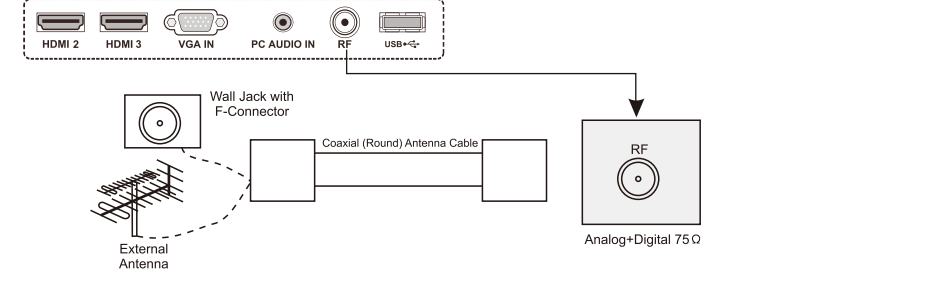

 
Connecting DVD Player with Component YpBPr...

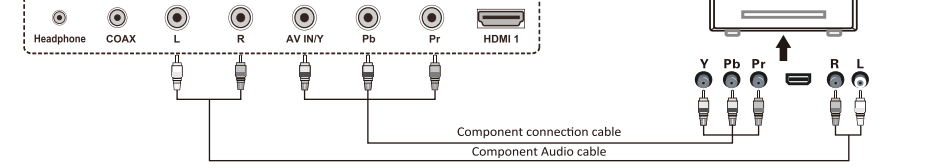


Connecting Wii™ with Composite...

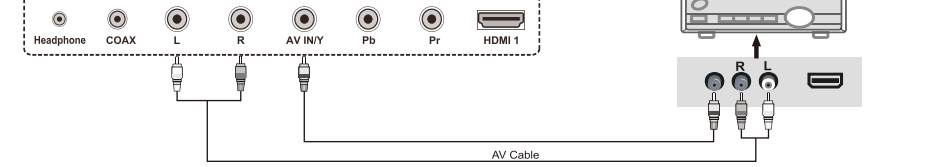 

 Connecting Cable or Satellite boxes with HDMI...

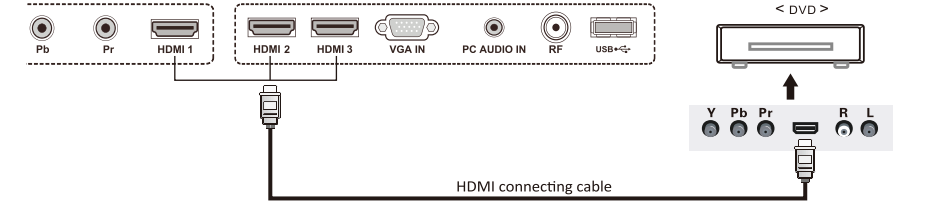

 Connecting to a PC with VGA and 3.5 mm minijack ...

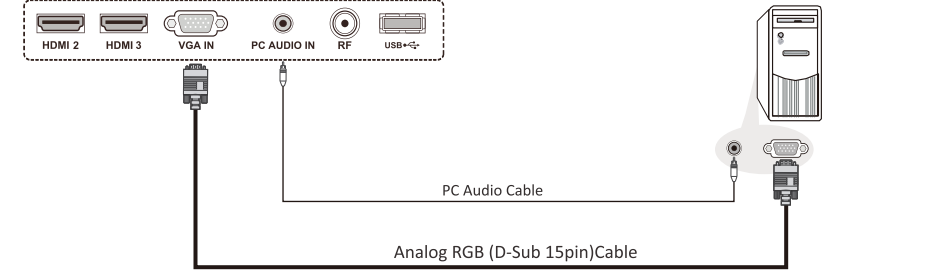

Remote Control

POWER: This button turns the TV on or off.
SOURCE: Press to display and select the available video sources.
CC: This button turns on the closed captioning system of the television. Please Note : CC only works under the sources TV, AV.

MTS: In TV mode, under ATV channel switches the Stereo, Mono and SAP. Under DTV channel switches the Audio Language.

MUTE: This button stops the TV from producing any sound.

0-9 : These buttons allow you to access the channels directly. When accessing a digital channel you would use these buttons in junction with the (-) button to switch channels.

(-) : This button allows you to access digital channels directly when used in junction with the number buttons 0-9.

R : This button allows you to swift between the current channel and the last channel you watched.

GUIDE: This button turns on the electronic program guide that is received from antenna.

INFO: This function tells you the LCD's current display information.

▲▼◀▶ENTER: These buttons allow you to navigate inside the OSD menu. They also function as CH+/- for digital channels in the tuner.

MENU: This button turns on the on screen display menu (OSD).

EXIT: This button allows you to quit from the OSD menu

VOL(+/-): These two buttons increase or decrease the volume of the TV.

CH(+/-): These two buttons change the TV channel back and forth.

ASPECT : This button changes the TV between different display modes.

FREEZE : This button freezes the video. Press the button again to unfreeze.

SLEEP : This button enables the sleep function so the TV turns itself off after the designated time.

FAV : This button opens the favorite channel list.

FAV (+/-) : Press FAV +/- to change forward/ backward Fav channel for TV.

 
ADD/DEL: This button adds/deletes a channel to the favorites list while you are using the TV tuner.

PICTURE : This button selects different optimized picture settings for the TV.

SOUND : This button selects different optimized sound settings for the TV.

TV: Press to select the TV mode directly

USB: This button enables the USB picture and MP3 playing function in the TV.

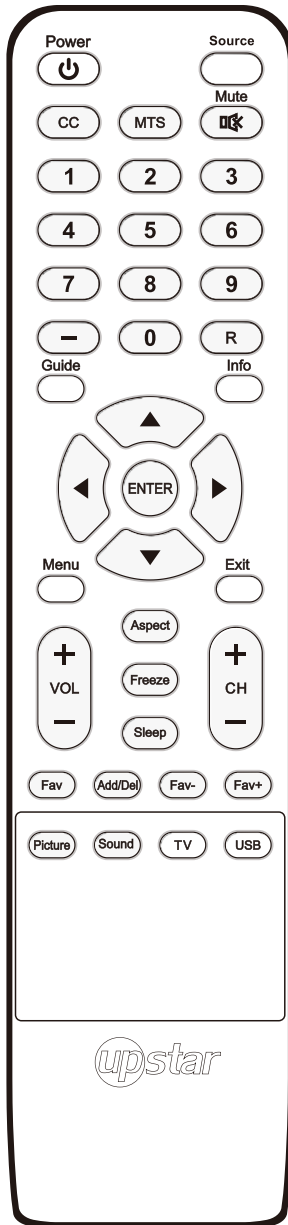

Basic Use

Starting up the HDTV

1. Make sure your power cable is connected and the standby red light in the front of the TV is lit up.
2. Check all your connection cables off the side or the back of your TV and also your AV devices. Make sure they are all connected securely.
3. Turn on your TV and other AV devices if necessary. Powering the LED TV

 
Power on /off

Press the POWER button on the TV /remote control to turn the LED TV on .
press the POWER button on the TV / remote control again to turn the LED TV off.

Selecting Input Source

- 1.Press the SOURCE button on the bottom of the TV or the SOURCE button on the remote control and you will see the picture left.

- 2.Use ▲/▼ buttons to select the source what you want to switch to . Press ENTER button to confirm .

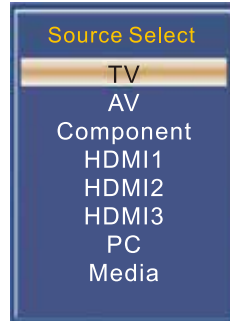

OSD (On Screen Display) Options

1. Press MENU button to open the menu,the On Screen Display(OSD) will appear on the screen



2. Use the ◀/▶ buttons to select you're your main menu option and press ENTER.

PICTURE This main option has functions for changing the picture settings for all ports, such as tint, contrast, sharpness.

SOUND This main option has functions for changing sound settings for all ports, such as Type, treble, bass, and acoustic cinema enhancement....etc.

TIME This main option has functions for changing the TV's time display, time format, and sleep timer.

SETUP This main option has functions for all ports, OSD language, caption styles, time setup, automatic synchronization, sleep timer and power on timer, power off timer.

LOCK This main options has functions for parental filter / blocking.

CHANNEL This main option has functions for the tuner port, such as scanning channels, editing channels, specific range scans, audio language, tuner mode....etc.

Safety Precautions

WARNING:TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE

WARNING:
FCC regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorith to operate this equipment.

WARNING:
A warning that an apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN


CAUTION
RISQUE CHOC ELECTRIQUE NE PAS OUVRI

CAUTION:TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
FREE SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

CAUTION:TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT .

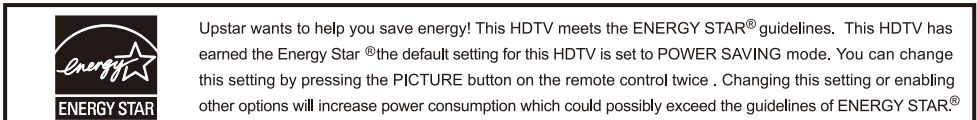

WARNING:Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION :
Do not place this product on an unstable cart, stand, tripod ,bracket or table. The product may fall causing serious personal injury and serious damage to the product. Use only a cart stand, tripod ,bracket, or table recommended by the manufacturer or sold with the product. Follow the manufacturer's recommended by the manufacturer . a product and cart combination should be moved with care. Quick stops, excessive force ,and uneven surfaces may cause the product and cart combination to overturn .

NOTE TO CATV SYSTEM INSTALLER:
This reminder is provided to call the CATV system installer's attention to Article820-40of the National Electrical Code that provides guidelines for proper grounding and , in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTICE:Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases, shall be placed on the apparatus

☐ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Warranty

1Year Limited Warranty For LCD/LED TELEVISION

Upstar USA Group warrants the accompanying LCD/LED television to be free of defects material and workmanship for the applications specified in its operation instruction for a period of One(1)year warranty for the parts, labor, and panel for One(1)year warranty from the date of original retail purchase date in the United States .

If the unit exhibits a defect in normal use, Upstar USA Group, will, at its discretion, either repair or replace it, free of charge after the unit has been returned within the warranty period.

As a condition to any warranty service obligation, the consumer must present a copy of the original purchase invoice.

Warranty is effective :

In order to receive warranty services,customer must be able to show proof of purchase, in order to obtain warranty services, please contact Upstar Support either by telephone, e-mail or fax.

What the warranty does not cover :

- 1.Any product in which the serial number has been defaced, modified or removed.
- 2.Damage, deterioration or malfunction resulting from:
 - A.Accidents, misuse, failure to follow instructios supplied with the product, neglect, unauthorized product modification, fire, water, lightning, or any other acts of nature.
 - B.Repaired or attempted to repair by anyone who arenot authorized by Upstar Group.
 - C.Damage or loss of any programs,data, or removable storage media.
 - D.Any damage of the product due to shipping.
 - E.Removal or installation of the product.
 - F.Causes external to the product, such as power fluctuations of failure.
 - H.Normal wear and tear.
 - I.Failure of the owner to perform periodic product maintenance as stated in User Guide, such as clesning of user-cleanable projector filters.
 - J.Any other reasons which does not relate to a product defect.
 - K.Damage caused by static (no-moving) images displayed for lengthy periods of time (aslo referred to as image burn-in).
 - L.Famage, or abuse of, the coating on the surface of the displayed through inappropriate cleaning as described in the product User Guide.
- 3.Removal, installatio, and set-up service charges, including wall-mounting of product.
- 4.Freight and insurance cost for warranty serice.

Warranty

ALL WARRANTIES , INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY ARE LIMITED TO A ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY .UPSTAR USA GROUP DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL ORINCIDENTAL DAMAGES , AND INNOVENTS ALL UPSTAR USA GROUP LIABILITY EXCEEDING IN THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT .

This warranty only covers new products purchased from our authorized dealers or retailers . This warranty does not cover used ,salvaged , or refurbished products .

As some states do not allow the limitation or exclusion of incidental or consequential damages , or do not allow limitations on implied warranties , the above limitations and exclusions may not apply to you . This warranty gives you specific legal rights , and you may also have other rights , and you may also have other rights that vary from state to state .

The Customer Service & Technical Support

1. To obtain warranty service , plesse contact Upstar Customer Service for a Return Material Authorization Number (RMA). You will be required to provide :

- A.A copy of the original sales receipt .
- B.Your full name
- C.Your shipping address , email address , and your telephone number .
- D.The serial number of the product .
- E.A full description of the problem .

Upstar is not responsible for any returned products that have been returned without an assigned RMA .

UPSTAR USA GROUP

1885 S. Vineyard Ave. Suite #1 Ontario , CA91761

For On-Line Registration, Service and Support
Please go to <http://www.upstarusa.com> . or call Toll Free 9AM to 5:30PM
PST 1(877)908-6777
TEL: (562)927-8098 FAX: (562)927-8068
E-mail : customerservice@upstarusa.com
E-mail : sales@upstarusa.com

Warranty Registration Card

Congratulations,and thank you for your purchase ! Please take the time to mail or fax your completed warranty registration card along with a copy of youroriginal sales receipt within thirty(30)days of your original purchase to:

Company Name: _____
First Name: _____
Last Name: _____
Address: _____
City: _____
State: _____
Zip Code: _____
Phone Number: _____
Fax Number: _____
Email IAddress: _____
Web Address: _____
Mode INumber: _____
Quantity: _____
Date of Purchase: _____
Place of Purchase: _____
Serial Number(s): _____

Important Note:

- Congratulations on your new USPSTAR LED TV purchase. Thank you for your support. We hope you enjoy your new UPSTAR LED TV. To download an instruction manual from the Internet please go to WWW.UPSTARUSA.COM and select Service.
- If you do not have an Internet connection or if you have any problems installing this product, please call the UPSTAR Toll Free:1(877)908-6777 at 9AM to 5:30PM.



UPSTAR USA GROUP

1885 S. Vineyard Ave., Suite #1, Ontario, CA 91761

Toll-free:1-877-908-6777

Tel:562-927-8098

Fax:562-927-8068

[Http://www.upstarusa.com](http://www.upstarusa.com)

E-mail: sales@upstarusa.com