

Please Read Before Purchasing **ExpressCard 1394b / Firewire 800 Host Adapter**:

ExpressCard is a new standard set by PCMCIA, to learn more, please go to <http://www.expresscard.org/web/site/>

E94B is built on this new technology to provide Firewire 800/1394b interface for 1394a & 1394b peripherals.

Firewire 800/1394b has a **9-Pin connector**, rather than Firewire 400's 4-Pin or 6-Pin connector

In order for E94B to work properly, please check the following:

- 1) Your notebook/laptop has **ExpressCard / 54** interface
- 2) Your notebook/laptop has the **latest BIOS** update from the manufacturer
- 3) For Firewire 400 / 1394a peripheral, you need either a "**4-Pin to 9-Pin**" or "**6-Pin to 9-Pin**" cable
- 4) For Firewire 800 / 1394b peripheral, you need a "**9-Pin to 9-Pin**" cable
- 5) E94B supports **Windows 98SE/ME/2000/XP** with driver (included in package or can be downloaded at <http://www.xterasys.com/drivers.htm>), and **Mac OS 8.6 or above**.