5. Carefully place the motherboard into the chassis, such that its rear I/O ports line up with the cutouts in the I/O shield. Secure the motherboard with the supplied screws. The holes should line up directly with the standoffs underneath. Ensure all system power cables are connected.



6. Install the graphics card into the x16 PCI Express slot and ensure the appropriate power connectors are used.

7. Turn system on.



- **8.** The POST screen should now appear. (See image at right) Press and hold down the DEL key on the keyboard until the BIOS screen appears. Verify that the motherboard model, CPU type and total memory are correctly shown. For those not using a recommended motherboard. please enter the system BIOS setup screen as documented by motherboard manufacturer
- 9. Enable A.M.P. Memory Profiles to set Memory Frequencies. For those without AMD Radeon[™] Memory, enable XMP in the BIOS (See image *at right*) to ensure maximum memory settings.

:=		⊆e	୍ଷ	ს	
	#1 Tweater	-0- Mounced	Mosilor	Boot	
				(D.O.C.P.) Select thi frequency. settings a	
				frequency. settings a (Manual):	CPU ratio. re auto-opt
				Select thi	s iten and
			Auto	Select thi frequency- settings c 10.8.9.1:	
			UNICE.	Select thi	s item and CPU ratio
			fato	settings a	
			Auto		
			Auto		
			Auto	11: Select	Iten
			Auto	+/-: Chang F1: Commo	e Opt. 1 Help
			Auto	F2: Previo P5: Optimi F10: Save F12: Print	
			Arto	F10: Sale F12: Print	ISC: Drit Screen
			03 2012 American N	epatrends, Inc.	-
us veri	Version 2. BIOS UTINY - Advo		03 2012 American N	-	
:=	BIOS UTINY - Adva	incea Mode	CI	cyatrendy, Inc.	T
		incea Moae	-	-	Ť
:=	BIOS UTINY - Adva	incea Mode	CI	() Boot	T
ill Nain	Al Tesker	incea Mode	CI	U Boot	
ill Nain	Al Tesker	incea Mode	CI	bot Bot Bot Select this i Frequency. Of settings are	U ratio, a
III Nain	Al Tesker	incea Mode	CI	bot Bot Bot Select this i frequency. O settings are Branall: Select this i	U ratio, a auto-optim
E Nation Accord (190 Apr Accord (190 Apr Accor	AL Tuesday AL Tuesday	Niced Mode	Cİ Bositor	U bot Blace.F.1: Select this 1 frequency. Of Select this 1 Select this 1 frequency. Of settings can	U ratio, a auto-optim tem and th U ratio, a
E Sata Sata Arrest (B) Spe arrest (B	AL Tuesday AL Tuesday	Neuscel Air Deect	Ci Basitor	bost Bost Bost Frequency, C settings are Bonall Scheet bis 1 Frequency, C settings can settings can settings can	U ratio, a auto-optim tem and th U ratio, a be customi
Rate Nate Autoret CPU Spe Autoret CPU Spe Autoret Novery Autoret Noverse Autoret	AL Tuesday AL Tuesday	Ai Deect	Ci Basitor	bot Bot Belet this if frequency, C settings are Bransil's Select this i frequency, C settings can it #.F.1:	U ratio, a auto-optim tem and th U ratio, a be customi
Raine Raine Augent CPU Spectory Augent CPU Spectory Augent Rowry Augent Rowry Augent Rowry Augent Rowry Augent Rowry Comment Comment PU Ratio	BICUS UTINITY - ACAYO III Taxabe III Taxabe	Ai Deerc	CI Horitor	bost Bost Bost Frequency, C settings are Bonall Scheet bis 1 Frequency, C settings can settings can settings can	U ratio, a auto-optim tem and th U ratio, a be customi
Rain Autoret ON Spe Autoret ON Spe Autoret ON Spe Autoret III Lind II Descelacit In C Tasse: PU Ratio HD Tesbo CORE	Al Tasaber Al Tasaber Transma	Ai Deect	CI Horitor	boxt Build.C.P.1: Select this 1 Frequency. Of settings are Select this 1 Select this 1 Select this 1 Frequency. Of settings are	U ratio, a auto-optim tem and th U ratio, a be customi tem and th U ratio, a optimized
:=	BIOS UTINIY - AGYO Ai Taske	Ai Deect	CF Positor	Und Boot Bale this I frequency. Of settings are blat. I frequency. of settings are settings are settings are settings are settings are settings are	U ratio, as auto-optim tem and the U ratio, as be customized tem and the U ratio, as optimized i
Hain Bain Autoral (19) Set Autoral (19) Set Autoral (19) Set Autoral (19) Tanas Autoral (19) Tanas Autoral (19) Tanas Autoral (19) Autoral Autoral (19) Autoral (19) Autoral Autoral (19) Autoral (19)	BIOS UTINIY - AGYO Ai Taske	Ai Deect	CF Positor	Boot Boot Bacc. P.1: Select this I frequency. Of select this I requescy. Of select this I requescy. Of select this I requescy. Of select this I requescy. Of select this I	U ratio, as auto optim tem and the U ratio, as he customi: tem and the U ratio, as optimized i room em
Hain Hain Hain Hain Hain Hain Harred King Harry	BICS Unity - AGYO II Taolor II	Ai Deect	CE Basides Acto Acto Acto	U bot Back Filt Freegency, C and State Beauti Select Unit of Freegency, C attings are Beauting are Beauting are Hartings are Hartings are Historic State II and Select Unit of Freegency, C attings are Historic State II and State II and State II and State State II and State II and State II and State State II and State II and State II and State State II and State II and State II and State State II and State II and State II and State II and State State II and State II and State II and State II and State II and State State II and State	U ratio. a auto-optim tem and th U ratio. a be customi tem and th U ratio. a optimized room m pt. elp Walares
Hain Hain Hain Hain Hain Hannel Hill Ster Harred Kinney Harred Kinney Harred Kinney Harred Hill Harred Harrison Harred Harrison Harred Harrison Harred Harrison Harred Harrison Harred Harrison Harred Harrison Harred Harred Harred Harred	SICS Uffity - Accro At Tauker At Tau	Ai Deect	Ci Bontes Bontes Sector Sector Reto Reto	bot Disc Filt Select this is frequence. Or settings are them?!! The select the settings can be A.F.1: Select Select Settings are settings are settin	U ratio, as auto-optim tem and the U ratio, as the customic tem and the U ratio, as optimized if room any tratic, as optimized if room en pt. elp Values Befoults
Tana Angelan A	SICS Uffity - Accro At Tauker At Tau	Ai Deect	CE Basides Acto Acto Acto	U bot Back Filt Freegency, C and State Beauti Select Unit of Freegency, C attings are Beauting are Beauting are Hartings are Hartings are Historic State II and Select Unit of Freegency, C attings are Historic State II and State II and State II and State State II and State II and State II and State State II and State II and State II and State State II and State II and State II and State State II and State II and State II and State II and State State II and State II and State II and State II and State II and State State II and State	U ratio, as auto-optim tem and the U ratio, as the customic tem and the U ratio, as optimized if room any tratic, as optimized if room en pt. elp Values Befoults

10. Install your Operating System.

- **11.** Download the latest chipset, network and audio drivers at the motherboard manufacturer website.
- 12. Download the latest graphics drivers and hotfixes at:

www.support.amd.com or www.microsoft.com

For Windows 7 users, please install updates specific to FX processors. http://support.microsoft.com/ kb/2645594/en-us

http://support.microsoft.com/ kb/2646060/en-us

13. Congratulations, you have successfully set up your optimized AMD-powered system.

AMD FX-9000 Series Installation Guide

FX

UNLOCKED

© 2013 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD Athlon, AMD CrossFire, AMD Phenom, Radeon and combinations thereof are trademarks of Advanced Micro Devices, Inc. PID#53985A

Recommended Components for AMD FX-9000 Series

Recommended AMD 990FX Motherboards*:

Asus SABERTOOTH 990FX R2.0 www.asus.com/Motherboards/SABERTOOTH_990FX_ R20/

Asus CROSSHAIR V FORMULA-Z www.asus.com/Motherboards/CROSSHAIR_V_ FORMULAZ/

Gigabyte GA-990FXA-UD7 www.gigabyte.com/products/product-page. aspx?pid=4658#ov

ASRock Fatal1ty 990FX Professional www.asrock.com/mb/AMD/Fatal1ty%20990FX%20 Professional/

MSI 990FXA-GD65

http://us.msi.com/product/mb/990FXA-GD65.html *The only AMD AM3+ chipset recommended for use with AMD FX-9000 Series CPUs is AMD 990FX

CPU Cooler:

Antec KUHLER H20 920 or similar cooler*

*AMD recommends a thermal solution that meets or exceeds a Theta-ca of <0.10C/W

Memory:

> AMD Radeon[™] Memory Gamer Series

- > AMD Radeon[™] Memory Performance Series
- > AMD Radeon[™] Memory Entertainment Series
- > 2x4 GB DDR3-1866 or higher*
- *For DDR3 DIMMs faster than 1866, AMD recommends the use of AMP memory profiles

Graphics Card:

- > AMD Radeon[™] HD 7970 or higher
- > 600W Power Supply or higher
- > AMD has successfully tested FX-9000 Series CPUs with the following power supplies:
 - CoolerMaster RS-700-AMBA-D3 700W
 - APEVIA ATX-AP800W 800W ATX12V

Installation

 Install the AMD FX processor into the AMD 990FX motherboard AM3+ socket and ensure it is securely locked down.



Install memory modules into the correct slots on the motherboard. To ensure maximum performance, they should be configured in dual channel mode. Refer to your motherboard manual for more information.



3.a.

Prepare the processor for the CPU cooler by wiping the processor lid. Apply a pea size amount of thermal compound at the center of the CPU chip and spread across evenly (skip this step if thermal compound is already applied onto the bottom of the CPU cooler).



- **3.b.** The thermal compound should be applied in a very thin layer, evenly spread over the entire lid of the CPU.
 - A proper application should result in the lid appearing hazy or foggy (you should not notice any streaks or clumps of thermal compound on the lid).

 Install the CPU cooler into the mounting brackets of the motherboard.

