

## USER GUIDE

flip  
video™

Consult Safety Instructions Before Use.

## Install Batteries

## Welcome to Flip UltraHD™

- 1 Slide battery latch to unlock.
- 2 Slide front panel down.
- 3 Insert two standard AA batteries.

## Optional Flip Video™ Rechargeable Battery Pack

(available at [www.theflip.com/accessories](http://www.theflip.com/accessories))

For your convenience, UltraHD works with standard AA batteries as well as the optional Flip Video Rechargeable Battery Pack.



## Get Started

- 1 Press power button to turn on. Video camera setup appears automatically the first time you power on.

## Set Language

- Use + and - to select your language.

## Set Date

- Use + and - to adjust current setting.
- Use < and > to select month/day/year.

## Set Time

- Use + and - to adjust current setting.
- Use < and > to select hour/minute/AM/PM.

## Turn Off Tones

- Use < and > to turn the tones on and off.

## Turn Off Recording Light

- Use < and > to turn the recording light on and off.

## To Return to Video Camera Setup Later

Starting with the video camera OFF:

- 1 Press power button to turn on.
- 2 When UltraHD logo appears, press and hold record button until SET LANGUAGE appears.



## Record and Play

## Record Videos

- 1 Press ● to start/stop recording.
- 2 Press and hold + and - to zoom in/out during recording.

## Play Videos

- 1 Press ► to play/pause.
- 2 Press and hold + and - to increase/decrease volume.
- 3 Press ◀ and ▶ to view previous/next video.

Note: Press and hold ◀ and ▶ during playback to rewind/fast-forward.

## Delete Videos

- 1 Press ▢ button. Select YES to confirm.

Note: Delete button is locked the first time you power on. To unlock, press and hold delete button.



## Connect to Computer

- 1 Slide USB latch down. USB arm flips up automatically.
- 2 Connect USB arm to computer's USB port.
- 3 You can install pre-loaded FlipShare™ software on your computer. If you are using the Flip Video Rechargeable Battery Pack, it will begin recharging.



## Organize, Create and Share

flipshare™

Pre-loaded FlipShare software makes editing and sharing your videos easy. Just plug in your video camera, open FLIPVIDEO and launch Setup FlipShare (PC) or Start FlipShare (Mac).

## FlipShare Features

- Save videos to your computer.
- Organize your videos.
- Capture snapshots from your videos.
- Create custom movies and greeting cards.
- Share videos privately via email, Flip Channels™ or upload directly to:



Visit the FlipShare software HELP section for detailed instructions on all features.

## View On HD Television

- 1 Power off video camera and television.
- 2 Connect video camera to television with optional HDMI™ Cable (available at [www.theflip.com/accessories](http://www.theflip.com/accessories)).
- 3 Power on video camera and television.
  - Video camera screen will be off when connected to television.
- 4 Switch your television to the appropriate VIDEO input.
  - See television manual for instructions.
- 5 Press play button to start/pause playback.



HDMI

Note: You can use any brand of HDMI Cable that has an HDMI Connector (for the HDTV) on one end and HDMI Mini Connector (for the video camera) on the other end.

## Video Camera Features



1	Power Button	Press to turn on/off.
2	Wrist Strap Hook	Attach wrist strap.
3	Battery Latch	Slide to lock/unlock.
4	Tripod Mount	Attach a tripod or other Flip Video accessory.
5	Recording Light	Red light turns on during recording. Built-in stereo microphone is also located here.
6	USB Latch /Arm	Slide down to release USB arm. Connect to a PC or Mac USB port.
7	HDMI™ Mini Port	Connect HDMI™ cable accessory to your HDTV.
8	Screen	Recording viewfinder/playback screen.
9	Recording Controls	Press buttons to record and preview videos.
	Record Button	● Press to start/stop recording. <i>During power on:</i> Hold to return to video camera setup.
	Play Button	► Press to play/pause playback. Press and hold to play all videos.
	Delete Button	▢ Press to delete. Press and hold to lock/unlock the delete button.
	Up/Down Buttons	+/- <i>While recording:</i> press and hold to zoom in/out. <i>During playback:</i> press and hold to increase/decrease volume.
	Left/Right Buttons	<> <i>While paused:</i> press to skip to previous/next video. <i>During playback:</i> press and hold to rewind/fast-forward.

Extend the fun with Flip Video accessories. Learn more at [www.theflip.com/accessories](http://www.theflip.com/accessories).

## Included In This Box:

Flip UltraHD™ Video Camera, Two AA Batteries, User Guide, Safety Instructions and Warranty Information

## Flip Video Support:

Go to [www.theflip.com/support](http://www.theflip.com/support)

## Declaration of Conformity:

Responsible Party:  
Cisco Consumer Products LLC, 185 Berry Street,  
Suite 6500, San Francisco, CA 94107 USA

## FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radio and TV Interference

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION: Changes or modifications to this device not authorized by Cisco Consumer Products LLC may void the user's authority to operate this device.

## CANADIAN ICES-003 STATEMENT:

This Class B digital apparatus complies with Canadian ICES-003.

© 2010 Cisco Systems, LLC and/or its affiliated entities. CISCO, FLIP ULTRAHD, FLIP VIDEO and the FLIP VIDEO LOGO are trademarks or registered trademarks of Cisco. and/or its affiliated entities. All other trademarks in this document or website are the property of their respective owners. Designed in the USA. Made in China. For more information, visit [www.theflip.com](http://www.theflip.com).

Facebook, Twitter, and YouTube are trademarks of their respective owners. Mac is a registered trademark of Apple Inc.

The HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

600-0164-100 / 3250-00199