

HP ProLiant ML115 G5 Server

Maintenance and Service Guide



Legal notices

© Copyright 2008, 2011 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

AMD® is a trademark of Advanced Micro Devices, Inc. Intel® is a trademark of Intel Corporation in the U.S. and other countries.

Contents

Customer self repair	5
Parts only warranty service	5
Illustrated parts catalog	16
Mechanical components	16
System components	20
HP Contact Information	24
Before You Contact HP	24
Removal and Replacement Procedures	25
Hardware Configuration Tools	25
Hardware Configuration Information	25
Non-hot-plug device	25
Electrostatic Discharge Information	26
Pre-Installation Procedure	26
Post-installation instructions	26
Server Warnings and Cautions	27
Symbols on Equipment	27
Powering Down the Server	28
System Covers	29
Access panel	29
Front bezel	30
Drives	31
Cable management	31
Cable connections	32
Drive bay configuration	34
Releasing drives	34
Optical drive	35
Optional media device	36
Hard drives	38
Drive latch	40
System board components	41
Memory	45
PCI Expansion cards	47
System battery	53
System Board Removal and Replacement Procedure	55
Power supply unit (PSU)	56
System fan	57
Install IPMI Card	59
Connectors, switches and LEDs	61
Connectors and components	61
Front panel components	61
Rear panel components	62
System board components	63
Jumpers – Password and Boot Block	64
LED indicators	65
Front panel LED indicators	65
Rear panel LED indicators	67

System board LED indicator	68
Diagnostic tools and Setup Utilities	69
BIOS Software	69
BIOS Setup Utility	69
Accessing the BIOS Setup Utility	69
Navigating through the Setup Utility	70
Setup Utility Menu Bar	72
BIOS Update	80
Clear CMOS	80
Power-On Self-Test (POST)	81
POST Error Indicators	81
POST Errors Message Definition	81
POST Related Troubleshooting	83
Physical and Operating Specifications	84
System Unit	84
Index	87

Customer self repair

HP products are designed with many Customer Self Repair (CSR) parts to minimize repair time and allow for greater flexibility in performing defective parts replacement. If during the diagnosis period HP (or HP service providers or service partners) identifies that the repair can be accomplished by the use of a CSR part, HP will ship that part directly to you for replacement. There are two categories of CSR parts:

- **Mandatory**—Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.
- **Optional**—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that HP replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

NOTE: Some HP parts are not designed for customer self repair. In order to satisfy the customer warranty, HP requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

Based on availability and where geography permits, CSR parts will be shipped for next business day delivery. Same day or four-hour delivery may be offered at an additional charge where geography permits. If assistance is required, you can call the HP Technical Support Center and a technician will help you over the telephone. HP specifies in the materials shipped with a replacement CSR part whether a defective part must be returned to HP. In cases where it is required to return the defective part to HP, you must ship the defective part back to HP within a defined period of time, normally five (5) business days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective part may result in HP billing you for the replacement. With a customer self repair, HP will pay all shipping and part return costs and determine the courier/carrier to be used.

For more information about HP's Customer Self Repair program, contact your local service provider. For the North American program, refer to the HP website (<http://www.hp.com/go/selfrepair>).

Parts only warranty service

Your HP Limited Warranty may include a parts only warranty service. Under the terms of parts only warranty service, HP will provide replacement parts free of charge.

For parts only warranty service, CSR part replacement is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.

Réparation par le client (CSR)

Les produits HP comportent de nombreuses pièces CSR (Customer Self Repair = réparation par le client) afin de minimiser les délais de réparation et faciliter le remplacement des pièces défectueuses. Si pendant la période de diagnostic, HP (ou ses partenaires ou mainteneurs agréés) détermine que la réparation peut être effectuée à l'aide d'une pièce CSR, HP vous l'envoie directement. Il existe deux catégories de pièces CSR:

- **Obligatoire** - Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.
- **Facultatif** - Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à HP de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

REMARQUE: Certaines pièces HP ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, HP exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

Les pièces CSR sont livrées le jour ouvré suivant, dans la limite des stocks disponibles et selon votre situation géographique. Si votre situation géographique le permet et que vous demandez une livraison le jour même ou dans les 4 heures, celle-ci vous sera facturée. Pour bénéficier d'une assistance téléphonique, appelez le Centre d'assistance technique HP. Dans les documents envoyés avec la pièce de rechange CSR, HP précise s'il est nécessaire de lui retourner la pièce défectueuse. Si c'est le cas, vous devez le faire dans le délai indiqué, généralement cinq (5) jours ouvrés. La pièce et sa documentation doivent être retournées dans l'emballage fourni. Si vous ne retournez pas la pièce défectueuse, HP se réserve le droit de vous facturer les coûts de remplacement. Dans le cas d'une pièce CSR, HP supporte l'ensemble des frais d'expédition et de retour, et détermine la société de courses ou le transporteur à utiliser.

Pour plus d'informations sur le programme CSR de HP, contactez votre Mainteneur Agréé local. Pour plus d'informations sur ce programme en Amérique du Nord, consultez le site Web HP (<http://www.hp.com/go/selfrepair>).

Service de garantie "pièces seules"

Votre garantie limitée HP peut inclure un service de garantie "pièces seules". Dans ce cas, les pièces de rechange fournies par HP ne sont pas facturées.

Dans le cadre de ce service, la réparation des pièces CSR par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

Riparazione da parte del cliente

Per abbreviare i tempi di riparazione e garantire una maggiore flessibilità nella sostituzione di parti difettose, i prodotti HP sono realizzati con numerosi componenti che possono essere riparati direttamente dal cliente (CSR, Customer Self Repair). Se in fase di diagnostica HP (o un centro di servizi o di assistenza HP) identifica il guasto come riparabile mediante un ricambio CSR, HP lo spedisce direttamente al cliente per la sostituzione. Vi sono due categorie di parti CSR:

- **Obbligatorie** – Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad HP, deve sostenere le spese di spedizione e di manodopera per il servizio.
- **Opzionali** – Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad HP, potrebbe dover sostenere spese aggiuntive a seconda del tipo di garanzia previsto per il prodotto.

NOTA: alcuni componenti HP non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, HP richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

In base alla disponibilità e alla località geografica, le parti CSR vengono spedite con consegna entro il giorno lavorativo seguente. La consegna nel giorno stesso o entro quattro ore è offerta con un supplemento di costo solo in alcune zone. In caso di necessità si può richiedere l'assistenza telefonica di un addetto del centro di supporto tecnico HP. Nel materiale fornito con una parte di ricambio CSR, HP specifica se il cliente deve restituire dei componenti. Qualora sia richiesta la resa ad HP del componente difettoso, lo si deve spedire ad HP entro un determinato periodo di tempo, generalmente cinque (5) giorni lavorativi. Il componente difettoso deve essere restituito con la documentazione associata nell'imballo di spedizione fornito. La mancata restituzione del componente può comportare la fatturazione del ricambio da parte di HP. Nel caso di riparazione da parte del cliente, HP sostiene tutte le spese di spedizione e resa e sceglie il corriere/vettore da utilizzare.

Per ulteriori informazioni sul programma CSR di HP contattare il centro di assistenza di zona. Per il programma in Nord America fare riferimento al sito Web HP (<http://www.hp.com/go/selfrepair>).

Servizio di garanzia per i soli componenti

La garanzia limitata HP può includere un servizio di garanzia per i soli componenti. Nei termini di garanzia del servizio per i soli componenti, HP fornirà gratuitamente le parti di ricambio.

Per il servizio di garanzia per i soli componenti è obbligatoria la formula CSR che prevede la riparazione da parte del cliente. Se il cliente invece richiede la sostituzione ad HP, dovrà sostenere le spese di spedizione e di manodopera per il servizio.

Customer Self Repair

HP Produkte enthalten viele CSR-Teile (Customer Self Repair), um Reparaturzeiten zu minimieren und höhere Flexibilität beim Austausch defekter Bauteile zu ermöglichen. Wenn HP (oder ein HP Servicepartner) bei der Diagnose feststellt, dass das Produkt mithilfe eines CSR-Teils repariert werden kann, sendet Ihnen HP dieses Bauteil zum Austausch direkt zu. CSR-Teile werden in zwei Kategorien unterteilt:

- **Zwingend** – Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von HP vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.
- **Optional** – Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von HP vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

HINWEIS: Einige Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem HP Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

CSR-Teile werden abhängig von der Verfügbarkeit und vom Lieferziel am folgenden Geschäftstag geliefert. Für bestimmte Standorte ist eine Lieferung am selben Tag oder innerhalb von vier Stunden gegen einen Aufpreis verfügbar. Wenn Sie Hilfe benötigen, können Sie das HP technische Support Center anrufen und sich von einem Mitarbeiter per Telefon helfen lassen. Den Materialien, die mit einem CSR-Ersatzteil geliefert werden, können Sie entnehmen, ob das defekte Teil an HP zurückgeschickt werden muss. Wenn es erforderlich ist, das defekte Teil an HP zurückzuschicken, müssen Sie dies innerhalb eines vorgegebenen Zeitraums tun, in der Regel innerhalb von fünf (5) Geschäftstagen. Das defekte Teil muss mit der zugehörigen Dokumentation in der Verpackung zurückgeschickt werden, die im Lieferumfang enthalten ist. Wenn Sie das defekte Teil nicht zurückschicken, kann HP Ihnen das Ersatzteil in Rechnung stellen. Im Falle von Customer Self Repair kommt HP für alle Kosten für die Lieferung und Rücksendung auf und bestimmt den Kurier-/Frachtdienst.

Weitere Informationen über das HP Customer Self Repair Programm erhalten Sie von Ihrem Servicepartner vor Ort. Informationen über das CSR-Programm in Nordamerika finden Sie auf der HP Website unter (<http://www.hp.com/go/selfrepair>).

Parts-only Warranty Service (Garantieservice ausschließlich für Teile)

Ihre HP Garantie umfasst möglicherweise einen Parts-only Warranty Service (Garantieservice ausschließlich für Teile). Gemäß den Bestimmungen des Parts-only Warranty Service stellt HP Ersatzteile kostenlos zur Verfügung.

Für den Parts-only Warranty Service ist das CSR-Verfahren zwingend vorgegeben. Wenn Sie den Austausch dieser Teile von HP vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

Reparaciones del propio cliente

Los productos de HP incluyen muchos componentes que el propio usuario puede reemplazar (*Customer Self Repair, CSR*) para minimizar el tiempo de reparación y ofrecer una mayor flexibilidad a la hora de realizar sustituciones de componentes defectuosos. Si, durante la fase de diagnóstico, HP (o los proveedores o socios de servicio de HP) identifica que una reparación puede llevarse a cabo mediante el uso de un componente CSR, HP le enviará dicho componente directamente para que realice su sustitución. Los componentes CSR se clasifican en dos categorías:

- **Obligatorio:** componentes para los que la reparación por parte del usuario es obligatoria. Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.
- **Opcional:** componentes para los que la reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que HP realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

NOTA: Algunos componentes no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, HP pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

Según la disponibilidad y la situación geográfica, los componentes CSR se enviarán para que lleguen a su destino al siguiente día laborable. Si la situación geográfica lo permite, se puede solicitar la entrega en el mismo día o en cuatro horas con un coste adicional. Si precisa asistencia técnica, puede llamar al Centro de asistencia técnica de HP y recibirá ayuda telefónica por parte de un técnico. Con el envío de materiales para la sustitución de componentes CSR, HP especificará si los componentes defectuosos deberán devolverse a HP. En aquellos casos en los que sea necesario devolver algún componente a HP, deberá hacerlo en el periodo de tiempo especificado, normalmente cinco días laborables. Los componentes defectuosos deberán devolverse con toda la documentación relacionada y con el embalaje de envío. Si no enviara el componente defectuoso requerido, HP podrá cobrarle por el de sustitución. En el caso de todas sustituciones que lleve a cabo el cliente, HP se hará cargo de todos los gastos de envío y devolución de componentes y escogerá la empresa de transporte que se utilice para dicho servicio.

Para obtener más información acerca del programa de Reparaciones del propio cliente de HP, póngase en contacto con su proveedor de servicios local. Si está interesado en el programa para Norteamérica, visite la página web de HP siguiente (<http://www.hp.com/go/selfrepair>).

Servicio de garantía exclusivo de componentes

La garantía limitada de HP puede que incluya un servicio de garantía exclusivo de componentes. Según las condiciones de este servicio exclusivo de componentes, HP le facilitará los componentes de repuesto sin cargo adicional alguno.

Para este servicio de garantía exclusivo de componentes, es obligatoria la sustitución de componentes por parte del usuario (CSR). Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

Customer Self Repair

Veel onderdelen in HP producten zijn door de klant zelf te repareren, waardoor de reparatieduur tot een minimum beperkt kan blijven en de flexibiliteit in het vervangen van defecte onderdelen groter is. Deze onderdelen worden CSR-onderdelen (Customer Self Repair) genoemd. Als HP (of een HP Service Partner) bij de diagnose vaststelt dat de reparatie kan worden uitgevoerd met een CSR-onderdeel, verzendt HP dat onderdeel rechtstreeks naar u, zodat u het defecte onderdeel daarmee kunt vervangen. Er zijn twee categorieën CSR-onderdelen:

- **Verplicht:** Onderdelen waarvoor reparatie door de klant verplicht is. Als u HP verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.
- **Optioneel:** Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter HP verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garantieservice voor het product.

OPMERKING: Sommige HP onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorwaarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

Afhankelijk van de leverbaarheid en de locatie worden CSR-onderdelen verzonden voor levering op de eerstvolgende werkdag. Levering op dezelfde dag of binnen vier uur kan tegen meerkosten worden aangeboden, indien dit mogelijk is gezien de locatie. Indien assistentie gewenst is, belt u een HP Service Partner om via de telefoon technische ondersteuning te ontvangen. HP vermeldt in de documentatie bij het vervangende CSR-onderdeel of het defecte onderdeel aan HP moet worden geretourneerd. Als het defecte onderdeel aan HP moet worden teruggezonden, moet u het defecte onderdeel binnen een bepaalde periode, gewoonlijk vijf (5) werkdagen, retourneren aan HP. Het defecte onderdeel moet met de bijbehorende documentatie worden geretourneerd in het meegeleverde verpakkingsmateriaal. Als u het defecte onderdeel niet terugzendt, kan HP u voor het vervangende onderdeel kosten in rekening brengen. Bij reparatie door de klant betaalt HP alle verzendkosten voor het vervangende en geretourneerde onderdeel en kiest HP zelf welke koerier/transportonderneming hiervoor wordt gebruikt.

Neem contact op met een Service Partner voor meer informatie over het Customer Self Repair programma van HP. Informatie over Service Partners vindt u op de HP website (<http://www.hp.com/go/selfrepair>).

Garantieservice "Parts Only"

Het is mogelijk dat de HP garantie alleen de garantieservice "Parts Only" omvat. Volgens de bepalingen van de Parts Only garantieservice zal HP kosteloos vervangende onderdelen ter beschikking stellen.

Voor de Parts Only garantieservice is vervanging door CSR-onderdelen verplicht. Als u HP verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.

Reparo feito pelo cliente

Os produtos da HP são projetados com muitas peças para reparo feito pelo cliente (CSR) de modo a minimizar o tempo de reparo e permitir maior flexibilidade na substituição de peças com defeito. Se, durante o período de diagnóstico, a HP (ou fornecedores/parceiros de serviço da HP) concluir que o reparo pode ser efetuado pelo uso de uma peça CSR, a peça de reposição será enviada diretamente ao cliente. Existem duas categorias de peças CSR:

- **Obrigatória** – Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.
- **Opcional** – Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a HP as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

OBSERVAÇÃO: Algumas peças da HP não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a HP exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

Conforme a disponibilidade e o local geográfico, as peças CSR serão enviadas no primeiro dia útil após o pedido. Onde as condições geográficas permitirem, a entrega no mesmo dia ou em quatro horas pode ser feita mediante uma taxa adicional. Se precisar de auxílio, entre em contato com o Centro de suporte técnico da HP para que um técnico o ajude por telefone. A HP especifica nos materiais fornecidos com a peça CSR de reposição se a peça com defeito deve ser devolvida à HP. Nos casos em que isso for necessário, é preciso enviar a peça com defeito à HP dentro do período determinado, normalmente cinco (5) dias úteis. A peça com defeito deve ser enviada com a documentação correspondente no material de transporte fornecido. Caso não o faça, a HP poderá cobrar a reposição. Para as peças de reparo feito pelo cliente, a HP paga todas as despesas de transporte e de devolução da peça e determina a transportadora/serviço postal a ser utilizado.

Para obter mais informações sobre o programa de reparo feito pelo cliente da HP, entre em contato com o fornecedor de serviços local. Para o programa norte-americano, visite o site da HP (<http://www.hp.com/go/selfrepair>).

Serviço de garantia apenas para peças

A garantia limitada da HP pode incluir um serviço de garantia apenas para peças. Segundo os termos do serviço de garantia apenas para peças, a HP fornece as peças de reposição sem cobrar nenhuma taxa.

No caso desse serviço, a substituição de peças CSR é obrigatória. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

顧客自己修理保証サービス

修理時間を短縮し、故障部品の交換における高い柔軟性を確保するために、HP製品には多数の顧客自己修理（CSR）部品があります。診断の際に、CSR部品を使用すれば修理ができるとHP（HPまたはHP正規保守代理店）が判断した場合、HPはその部品を直接、お客様に発送し、お客様に交換していただきます。CSR部品には以下の2通りがあります。

- 必須 - 顧客自己修理が必須の部品。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。
- 任意 - 顧客自己修理が任意である部品。この部品も顧客自己修理用です。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

注：HP製品の一部の部品は、顧客自己修理用ではありません。製品の保証を継続するためには、HPまたはHP正規保守代理店による交換作業が必須となります。部品カタログには、当該部品が顧客自己修理除外品である旨が記載されています。

部品供給が可能な場合、地域によっては、CSR部品を翌営業日に届くように発送します。また、地域によっては、追加費用を負担いただくことにより同日または4時間以内に届くように発送することも可能な場合があります。サポートが必要なときは、HPの修理受付窓口に電話していただければ、技術者が電話でアドバイスします。交換用のCSR部品または同梱物には、故障部品をHPに返送する必要があるかどうかが表示されています。故障部品をHPに返送する必要がある場合は、指定期限内（通常は5営業日以内）に故障部品をHPに返送してください。故障部品を返送する場合は、届いた時の梱包箱に関連書類とともに入れてください。故障部品を返送しない場合、HPから部品費用が請求されます。顧客自己修理の際には、HPは送料および部品返送費を全額負担し、使用する宅配便会社や運送会社を指定します。

部品のみ保証サービス

HP保証サービスには、部品のみ保証サービスが適用される場合があります。このサービスでは、交換部品は無償で提供されます。

部品のみ保証サービスにおいては、CSR部品をお客様により交換作業していただくことが必須となります。当該部品については、もしもお客様がHPに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費はお客様の負担となります。

客户自行维修

HP 产品提供许多客户自行维修 (CSR) 部件，以尽可能缩短维修时间和在更换缺陷部件方面提供更大的灵活性。如果在诊断期间 HP（或 HP 服务提供商或服务合作伙伴）确定可以通过使用 CSR 部件完成维修，HP 将直接把该部件发送给您进行更换。有两类 CSR 部件：

- **强制性的** — 要求客户必须自行维修的部件。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。
- **可选的** — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 HP 为您更换这些部件，则根据为您的产品指定的保修服务类型，HP 可能收取或不再收取任何附加费用。

注：某些 HP 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，HP 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

CSR 部件将在下一个工作日发运（取决于备货情况和允许的地理范围）。在允许的地理范围内，可在当天或四小时内发运，但要收取额外费用。如果需要帮助，您可以致电 HP 技术支持中心，将会有技术人员通过电话为您提供帮助。HP 会在随更换的 CSR 部件发运的材料中指明是否必须将有缺陷的部件返还给 HP。如果要求您将有缺陷的部件返还给 HP，那么您必须在规定期限内（通常是五 (5) 个工作日）将缺陷部件发给 HP。有缺陷的部件必须随所提供的发运材料中的相关文件一起返还。如果未能送还有缺陷的部件，HP 可能会要求您支付更换费用。客户自行维修时，HP 将承担所有相关运输和部件返回费用，并指定快递商/承运商。

有关 HP 客户自行维修计划的详细信息，请与您当地的服务提供商联系。有关北美地区的计划，请访问 HP 网站 (<http://www.hp.com/go/selfrepair>)。

仅部件保修服务

您的 HP 有限保修服务可能涉及仅部件保修服务。根据仅部件保修服务条款的规定，HP 将免费提供更换的部件。

仅部件保修服务要求进行 CSR 部件更换。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。

客戶自行維修

HP 產品設計了許多「客戶自行維修」(CSR) 的零件以減少維修時間，並且使得更換瑕疵零件時能有更大的彈性。如果在診斷期間 HP (或 HP 服務供應商或維修夥伴) 辨認出此項維修工作可以藉由使用 CSR 零件來完成，則 HP 將直接寄送該零件給您作更換。CSR 零件分為兩種類別：

- **強制的** — 客戶自行維修所使用的零件是強制性的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。
- **選購的** — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 HP 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

備註：某些 HP 零件沒有消費者可自行維修的設計。為符合客戶保固，HP 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

基於材料取得及環境允許的情況下，CSR 零件將於下一個工作日以快遞寄送。在環境的允許下當天或四小時內送達，則可能需要額外的費用。若您需要協助，可致電「HP 技術支援中心」，會有一位技術人員透過電話來協助您。不論損壞的零件是否必須退回，HP 皆會在與 CSR 替換零件一起運送的材料中註明。若要將損壞的零件退回 HP，您必須在指定的一段時間內（通常為五 (5) 個工作天），將損壞的零件寄回 HP。損壞的零件必須與寄送資料中隨附的相關技術文件一併退還。如果無法退還損壞的零件，HP 可能要向您收取替換費用。針對客戶自行維修情形，HP 將負責所有運費及零件退還費用並指定使用何家快遞/貨運公司。

如需 HP 的「客戶自行維修」方案詳細資訊，請連絡您當地的服務供應商。至於北美方案，請參閱 HP 網站 (<http://www.hp.com/go/selfrepair>)。

僅限零件的保固服務

您的「HP 有限保固」可能包含僅限零件的保固服務。在僅限零件的保固服務情況下，HP 將免費提供替換零件。

針對僅限零件的保固服務，CSR 零件替換是強制性的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。

고객 셀프 수리

HP 제품은 수리 시간을 최소화하고 결함이 있는 부품 교체 시 더욱 융통성을 발휘할 수 있도록 하기 위해 고객 셀프 수리(CSR) 부품을 다량 사용하여 설계되었습니다. 진단 기간 동안 HP(또는 HP 서비스 공급업체 또는 서비스 협력업체)에서 CSR 부품을 사용하여 수리가 가능하다고 판단되면 HP는 해당 부품을 바로 사용자에게 보내어 사용자가 교체할 수 있도록 합니다. CSR 부품에는 두 가지 종류가 있습니다.

- **고객 셀프 수리가 의무 사항인 필수 부품.** 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.
- **고객 셀프 수리가 선택 사항인 부품.** 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 HP에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

참고: 일부 HP 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. HP는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

CSR 부품은 재고 상태와 지리적 조건이 허용하는 경우 다음 영업일 납품이 가능하도록 배송이 이루어집니다. 지리적 조건이 허용하는 경우 추가 비용이 청구되는 조건으로 당일 또는 4시간 배송이 가능할 수도 있습니다. 도움이 필요하시면 HP 기술 지원 센터로 전화하십시오. 전문 기술자가 전화로 도움을 줄 것입니다. HP는 결함이 발생한 부품을 HP로 반환해야 하는지 여부를 CSR 교체 부품과 함께 배송된 자료에 지정합니다. 결함이 발생한 부품을 HP로 반환해야 하는 경우에는 지정된 기간 내(통상 영업일 기준 5일)에 HP로 반환해야 합니다. 이 때 결함이 발생한 부품은 제공된 포장 재료에 넣어 관련 설명서와 함께 반환해야 합니다. 결함이 발생한 부품을 반환하지 않는 경우 HP가 교체 부품에 대해 비용을 청구할 수 있습니다. 고객 셀프 수리의 경우, HP는 모든 운송 및 부품 반환 비용을 부담하며 이용할 운송업체 및 택배 서비스를 결정합니다.

HP 고객 셀프 수리 프로그램에 대한 자세한 내용은 가까운 서비스 제공업체에 문의하십시오. 북미 지역의 프로그램에 대해서는 HP 웹 사이트(<http://www.hp.com/go/selfrepair>)를 참조하십시오.

부품 제공 보증 서비스

HP 제한 보증에는 부품 제공 보증 서비스가 포함될 수 있습니다. 이러한 경우 HP는 부품 제공 보증 서비스의 조건에 따라 교체 부품만을 무료로 제공합니다.

부품 제공 보증 서비스 제공 시 CSR 부품 교체는 의무 사항입니다. 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

Illustrated parts catalog

Mechanical components

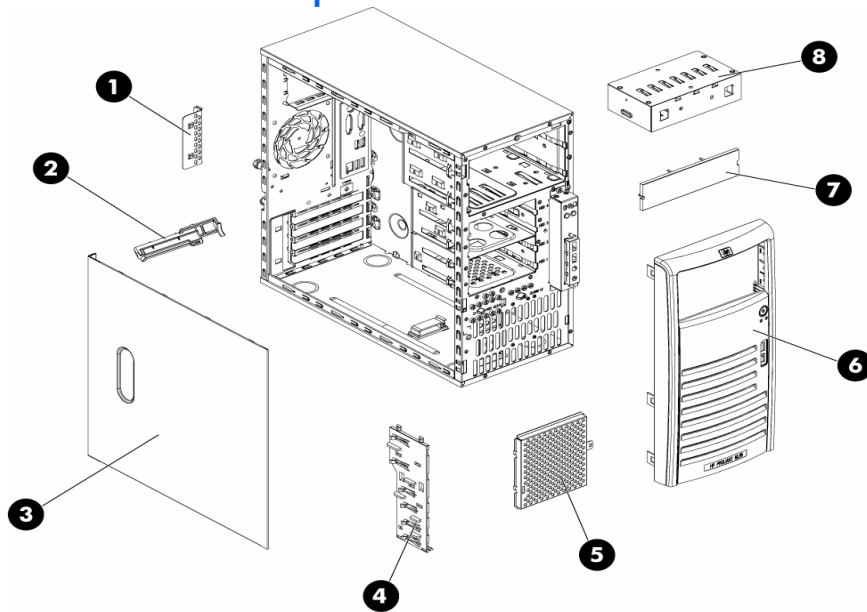


Table 1 Mechanical components spare parts list

Item	Description	Spare part number	Customer self repair
1	PCI slot cover lock	480989-001	Mandatory ¹
2	PCI card holder	480989-001	Mandatory ¹
3	Access panel	440223-001	Mandatory ¹
4	Drive release latch	480989-001	Mandatory ¹
5	Hard drive EMI shield	430412-001	Mandatory ¹
6	Front bezel	480987-001	Mandatory ¹
7	Blank bezel	335937-001 335937-005	Mandatory ¹
8	Optical drive shield	395625-001	Mandatory ¹

¹Mandatory—Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.

²Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that HP replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

³No—Some HP parts are not designed for customer self repair. In order to satisfy the customer warranty, HP requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

¹Mandatory: Obligatoire—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

²Optional: Facultatif—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à HP de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

³No: Non—Certaines pièces HP ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, HP exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

¹Mandatory: Obbligatorie—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad HP, deve sostenere le spese di spedizione e di manodopera per il servizio.

²Optional: Opzionali—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad HP, potrebbe dover sostenere spese aggiuntive a seconda del tipo di garanzia previsto per il prodotto.

³No: Non CSR—Alcuni componenti HP non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, HP richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

¹Mandatory: Zwingend—Teile, die im Rahmen des Customer Self Repair Programms ersetzt werden müssen. Wenn Sie diese Teile von HP ersetzen lassen, werden Ihnen die Versand- und Arbeitskosten für diesen Service berechnet.

²Optional: Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von HP vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

³No: Kein—Einige Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem HP Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

¹Mandatory: Obligatorio—componentes para los que la reparación por parte del usuario es obligatoria. Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

²Optional: Opcional— componentes para los que la reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que HP realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

³No: No—Algunos componentes no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, HP pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra “No” en el catálogo ilustrado de componentes.

¹Mandatory: Verplicht—Onderdelen waarvoor Customer Self Repair verplicht is. Als u HP verzoekt deze onderdelen te vervangen, komen de reiskosten en het arbeidsloon voor uw rekening.

²Optional: Optioneel—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter HP verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garanteservice voor het product.

³No: Nee—Sommige HP onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorwaarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

¹Mandatory: Obrigatória—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

²Optional: Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a HP as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

³No: Nenhuma—Algumas peças da HP não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a HP exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca “No” (Não), no catálogo de peças ilustrado.

¹Mandatory: 必須 - 顧客自己修理が必須の部品。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

²Optional: 任意 - 顧客自己修理が任意である部品。この部品も顧客自己修理用です。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、費用を負担していただくことなく保証サービスを受けることができます。

³No: 除外 - HP製品の一部の部品は、顧客自己修理用ではありません。製品の保証を継続するためには、HPまたはHP正規保守代理店による交換作業が必須となります。部品カタログには、当該部品が顧客自己修理除外品である旨が記載されています。

¹Mandatory: 強制的 — 要求客户必须自行维修的部件。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。

²Optional: 可选的 — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 HP 为您更换这些部件，则根据您的产品指定的保修服务类型，HP 可能收取或不再收取任何附加费用。

³No: 否 — 某些 HP 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，HP 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

¹Mandatory: 強制的 — 客戶自行維修所使用的零件是強制的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。

²Optional: 選購的 — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 HP 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

³No: 否 — 某些 HP 零件沒有消費者可自行維修的設計。為符合客戶保固，HP 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

¹ Mandatory: 필수 — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

² Optional: 옵션 — 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 HP에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

³ No: No — 고객 셀프 수리가 불가능하도록 설계된 HP 부품. 이 부품들은 고객 셀프 수리가 불가능하도록 설계되었습니다. HP는 고객 보증을 만족시키기 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다.

System components

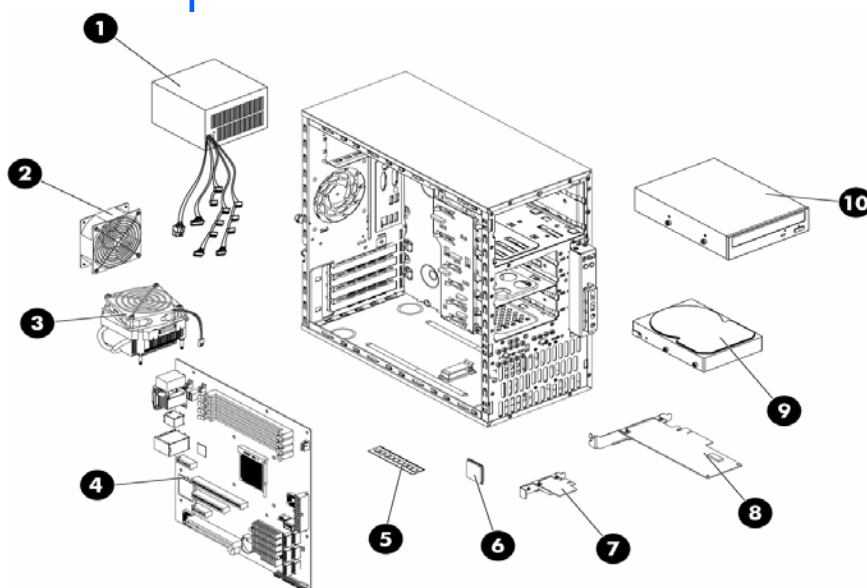


Table 2 System Components Spare Parts List

Item	Description	Spare part number	Customer self repair
1	365-w power supply unit with cable assembly	460025-001	Mandatory ¹
2	System fan	392172-001	Mandatory ¹
3	Processor cooler assembly	480506-001	Optional ²
4	System board	480505-001	Optional ²
5	Memory module		Mandatory ¹
	DIMM, 512MB PC2-6400 ECC RoHS	459931-001	Mandatory ¹
	DIMM, 1GB PC2-6400 ECC RoHS	459932-001	Mandatory ¹
6	Processor		Optional ²
	IC, uP, Opteron 1210, 1.8 GHz, 103W, F3	441244-001	Optional ²
	IC, uP, Opteron 1214, 2.2 GHz, 103W, F3	441245-001	Optional ²
	IC, uP, Opteron 1222, 3.0 GHz, 103W, F3	480990-001	Optional ²
	IC, uP, Opteron 1218, 2.6 GHz, 103W, F3	459825-001	Optional ²
	IC, uP, Athlon-1C, 1640B, 2.7 GHz, 45W, G2	480994-001	Optional ²
	IC, uP, Athlon-64, 4450B, 2.3 GHz, 45W, G2	480995-001	Optional ²
	IC, uP, Sempron-64, LE-1250, 2.2 GHz, 45W, G2	480993-001	Optional ²
	IC, uP, Budapest 1352 2.1 GHz, 120W	480991-001	Optional ²
	IC, uP, Budapest 1354 2.2 GHz, 75W, B3	580998-001	Optional ²
	IC, uP, Budapest 1356 2.3 GHz, 75W	480992-001	Optional ²

Table 2 System Components Spare Parts List

Item	Description	Spare part number	Customer self repair
7	IPMI card	457885-001	Mandatory ¹
8	SAS card	447430-001	Mandatory ¹
9	SAS/SATA hard drive		Mandatory ¹
	250GB 7.2K NHP FIO SATA	399969-001	Mandatory ¹
	160GB 7.2K NHP FIO SATA	399968-001	Mandatory ¹
10	DVD-ROM drive	447464-001	Mandatory ¹

¹Mandatory—Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.

²Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that HP replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

³No—Some HP parts are not designed for customer self repair. In order to satisfy the customer warranty, HP requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

¹Mandatory: Obligatoire—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

²Optional: Facultatif—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à HP de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

³No: Non—Certaines pièces HP ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, HP exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

¹Mandatory: Obbligatorie—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad HP, deve sostenere le spese di spedizione e di manodopera per il servizio.

²Optional: Opzionali—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad HP, potrebbe dover sostenere spese aggiuntive a seconda del tipo di garanzia previsto per il prodotto.

³No: Non CSR—Alcuni componenti HP non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, HP richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

¹Mandatory: Zwingend—Teile, die im Rahmen des Customer Self Repair Programms ersetzt werden müssen. Wenn Sie diese Teile von HP ersetzen lassen, werden Ihnen die Versand- und Arbeitskosten für diesen Service berechnet.

²Optional: Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von HP vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

³No: Kein—Einige Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem HP Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

¹Mandatory: Obligatorio—componentes para los que la reparación por parte del usuario es obligatoria. Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

²Optional: Opcional— componentes para los que la reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que HP realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

³No: No—Algunos componentes no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, HP pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra “No” en el catálogo ilustrado de componentes.

¹Mandatory: Verplicht—Onderdelen waarvoor Customer Self Repair verplicht is. Als u HP verzoekt deze onderdelen te vervangen, komen de reiskosten en het arbeidsloon voor uw rekening.

²Optional: Optioneel—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter HP verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garanteservice voor het product.

³No: Nee—Sommige HP onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorwaarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met “Nee”.

¹Mandatory: Obrigatória—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

²Optional: Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a HP as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

³No: Nenhuma—Algumas peças da HP não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a HP exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca “No” (Não), no catálogo de peças ilustrado.

¹Mandatory: 必須 - 顧客自己修理が必須の部品。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

²Optional: 任意 - 顧客自己修理が任意である部品。この部品も顧客自己修理用です。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、費用を負担していただくことなく保証サービスを受けることができます。

³No: 除外 - HP製品の一部の部品は、顧客自己修理用ではありません。製品の保証を継続するためには、HPまたはHP正規保守代理店による交換作業が必須となります。部品カタログには、当該部品が顧客自己修理除外品である旨が記載されています。

¹Mandatory: 強制的 — 要求客户必须自行维修的部件。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。

²Optional: 可选的 — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 HP 为您更换这些部件，则根据为您的产品指定的保修服务类型，HP 可能收取或不再收取任何附加费用。

³No: 否 — 某些 HP 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，HP 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

¹Mandatory: 強制的 — 客戶自行維修所使用的零件是強制的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。

²Optional: 選購的 — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 HP 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

³No: 否 — 某些 HP 零件沒有消費者可自行維修的設計。為符合客戶保固，HP 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

¹ Mandatory: 필수 — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

² Optional: 옵션 — 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 HP에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

³ No: No — 고객 셀프 수리가 불가능하도록 설계된 HP 부품. 이 부품들은 고객 셀프 수리가 불가능하도록 설계되었습니다. HP는 고객 보증을 만족시키기 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다.

HP Contact Information

For the name of the nearest HP authorized reseller:

- In the United States, call 1-800-345-1518.
- In Canada, call 1-800-263-5868.
- In other locations, refer to the HP website at <http://www.hp.com/>.

For HP technical support:

- In North America:
 - Call 1-800-HP-INVENT (1-800-474-6836). This service is available 24 hours a day, 7 days a week. For continuous quality improvement, calls may be recorded or monitored.
 - If you have purchased a Care Pack (service upgrade), call 1-800-633-3600. For more information about Care Packs, refer to the HP website at <http://www.hp.com/>.
- Outside North America, call the nearest HP Technical Support Phone Center. For telephone numbers for worldwide Technical Support Centers, refer to the HP website at <http://www.hp.com/>.

Before You Contact HP

Be sure to have the following information available before you call HP:

- Technical support registration number (if applicable)
- Product serial number
- Product model name and number
- Applicable error messages
- Add-on boards or hardware
- Third-party hardware or software
- Operating system type and revision level

Removal and Replacement Procedures

This chapter provides subassembly/module-level removal and replacement procedures for the HP ProLiant ML115 G5 server.

Review the specifications of a new component before installing it to make sure it is compatible with the server. When you integrate new components into the system, record its model and serial number, and any other pertinent information for future reference. After completing any removal or replacement procedure, run the diagnostics program to verify that all components operate properly.

NOTE: The figures used in this chapter to illustrate procedural steps are labeled numerically (i.e., 1, 2...). When these figures are used in substep items, the alphabetically labeled instructions correspond to the numbered labels on the related figure (i.e., label 1 corresponds to step a, label 2 corresponds to step b, etc.).

Hardware Configuration Tools

You need the following items for some procedures:

- T-15 screwdriver
- Flat-blade screwdriver

The following references and software tools may also be used:

- HP ProLiant ML115 G5 Easy Set-up CD
- IPMI Event Log
- Diagnostics Software

Hardware Configuration Information

⚠ WARNING: Only authorized technicians trained by HP should attempt to repair this equipment. Because of the complexity of the individual boards and subassemblies, no one should attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create a safety hazard.

⚠ CAUTION: Electrostatic discharge (ESD) can damage electronic components. Be sure that you are properly grounded (earthed) before beginning any installation procedure. Refer to the “Electrostatic Discharge Information” section for more information.

Non-hot-plug device

Before removing any serviceable parts, determine whether the part is hot-plug or non-hot-plug. If the device is non-hot-plug, you must power down the server. Non-hot-plug devices in the server include the processor, all boards, memory modules, fans, PCI option cards, and all hard drives.


Electrostatic Discharge Information

An electrostatic discharge (ESD) can damage static-sensitive devices or microcircuitry. Proper packaging and grounding techniques are necessary precautions to prevent damage. To prevent electrostatic damage, observe the following precautions:


- Transport products in static-safe containers such as conductive tubes, bags, or boxes.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Cover workstations with approved static-dissipating material. Use a wrist strap connected to the work surface, and properly grounded (earthed) tools and equipment.
- Keep work area free of nonconductive materials, such as ordinary plastic assembly aids and foam packing.
- Make sure that you are always properly grounded (earthed) when touching a static-sensitive component or assembly.
- Avoid touching pins, leads, or circuitry.
- Always place drives with the Printed Circuit Board (PCB) assembly-side down.
- Use conductive field service tools.

Pre-Installation Procedure

Perform the steps below before you open the server or before you remove or replace any component.

 **WARNING:** Failure to properly turn off the server before you open the server or before you start installing/ removing components may cause serious damage as well as bodily harm.

1. Turn off the server and all the peripherals connected to it.
Refer to the Powering down the server section in this chapter for detailed instructions on how to completely power down the server.
2. Unplug all cables from the power outlets to avoid exposure to high energy levels that may cause burns when parts are short-circuited by metal objects such as tools or jewelry.
If necessary, label each one to expedite reassembly.
3. Disconnect telecommunication cables to avoid exposure to shock hazard from ringing voltages.
4. Open the server according to the instructions described in the System covers section in this chapter.
5. Follow the ESD precautions listed previously in this chapter when handling a server component.

 **IMPORTANT:** To streamline the configuration process, read through the entire installation/removal procedure first and make sure you understand them before you begin.

Post-installation instructions

Observe the following items after installing or removing a server component:

1. Be sure all components are installed according to the described step-by-step instructions.
2. Make sure not to leave loose tools or parts inside the server.
3. Reinstall any expansion board(s), peripheral(s), and system cable(s) that have previously been removed.
4. Reinstall the system covers.

5. Connect all external cables and the AC power cord to the system.
6. Press the power button on the front panel to turn on the server.

Server Warnings and Cautions

Before installing a server, be sure that you understand the following warnings and cautions.

-
- ⚠ WARNING:** To reduce the risk of electric shock or damage to the equipment:
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
 - Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
 - Unplug the power cord from the power supply to disconnect power to the equipment.
 - Do not route the power cord where it can be walked on or pinched by items placed against it. Pay particular attention to the plug, electrical outlet, and the point where the cord extends from the server.
-
- ⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.
-
- ⚠ CAUTION:** Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.
-

Symbols on Equipment

The following symbols may be placed on equipment to indicate the presence of potentially hazardous conditions.



This symbol indicates the presence of hazardous energy circuits or electric shock hazards. Refer all servicing to qualified personnel.

WARNING: To reduce the risk of injury from electric shock hazards, do not open this enclosure. Refer all maintenance, upgrades, and servicing to qualified personnel.



This symbol indicates the presence of electric shock hazards. The area contains no user or field serviceable parts. Do not open for any reason.

WARNING: To reduce the risk of injury from electric shock hazards, do not open this enclosure.




This symbol on an RJ-45 receptacle indicates a network interface connection.

WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



This symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.

WARNING: To reduce the risk of injury from a hot component, allow the surface to cool before touching.

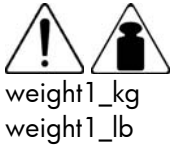

This symbol indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



These symbols, on power supplies or systems, indicate that the equipment is supplied by multiple sources of power.

WARNING: To reduce the risk of injury from electric shock, remove all power cords to completely disconnect power from the system.

Powering Down the Server

The server does not completely power down when the power button on the front panel is pressed. The button toggles between On and Standby. The standby position removes power from most electronics and the drives, but some internal circuitry remains active. To completely remove all power from the system, disconnect all power cords from the server.

⚠ WARNING: Hazardous voltages are present inside the server. Always disconnect AC power from the server and other associated assemblies while working inside the unit. Serious injury may result if this warning is not observed.

⚠ CAUTION: Protect the server from power fluctuations and temporary interruptions with a regulating uninterruptible power supply. This device protects the hardware from damage caused by power surges and voltage spikes, and keeps the system in operation during a power failure.

⚠ CAUTION: The server must always be operated with the system covers on. Proper cooling is not achieved when the system covers are removed.

To power down the server:

1. Shut down server as directed by the operating system documentation.
2. Press the power button to toggle to Standby.
This places the server in standby mode changing the power LED indicator to amber. In this mode, the main power supply output is disabled. Standby does not completely disable or remove power from the system.
3. Disconnect the AC power cord from the AC outlet and then from the server.
4. Be sure that the power LED indicator is turned off and that the fan noise has stopped.
5. Disconnect all external peripheral devices from the server.

System Covers

The access panel and the front bezel are both detachable. You must remove these system covers before you can remove or replace a server component.


Access panel

△ CAUTION: You must remove the access panel to access internal components and mass storage devices.

To remove the access panel:

1. Loosen the captive screw on the access panel with a T-15 screwdriver.
2. Slide the access panel toward the rear of the unit and then lift the access panel to detach it from the chassis.


Figure 1 Removing the access panel

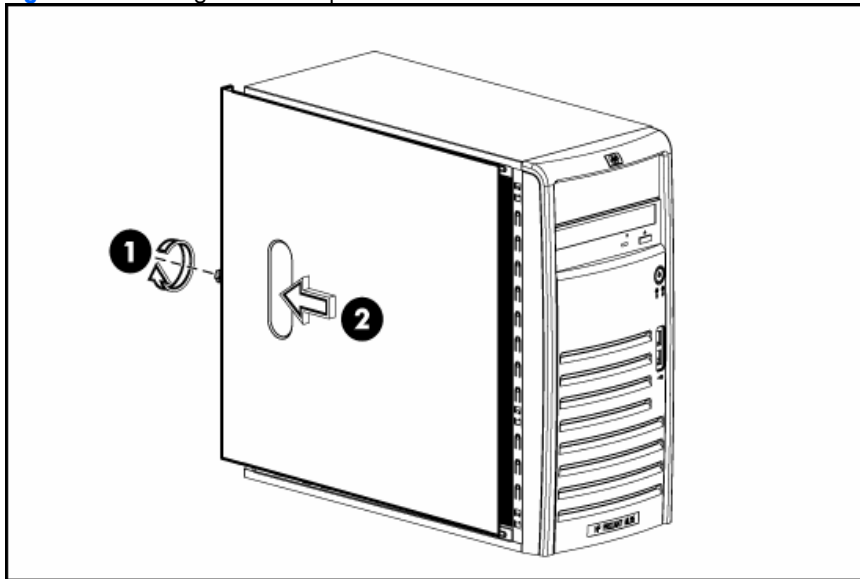

To reinstall the access panel:

1. Make sure the access panel is flat against the chassis, the back of the access panel extending about 2.5 cm (1.0 in) behind the back of the server. Make sure the hooks on the access panel align with the holes on the edges of the chassis.
2. Slide the access panel toward the front of the chassis to position it into place.
3. Tighten the captive thumbscrew to secure the access panel.

Figure 2 Installing the access panel

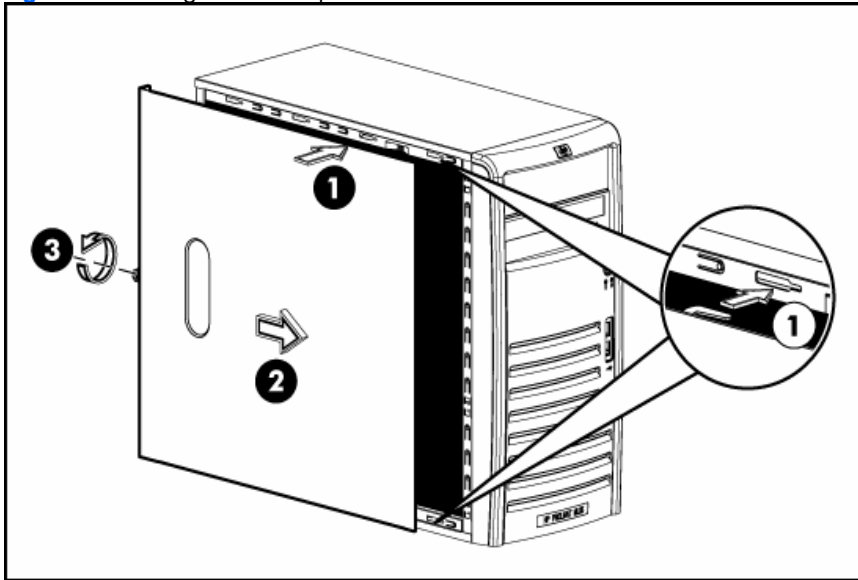


Front bezel

△ **CAUTION:** You must remove the front bezel to access the hard drives and optical drives.

To remove the front bezel:

1. Press in the three bottom tabs on the side of the bezel to release them from the chassis.
2. Rotate the bezel out slightly.
3. Pull the bezel away from the front panel.


Figure 3 Removing the front bezel

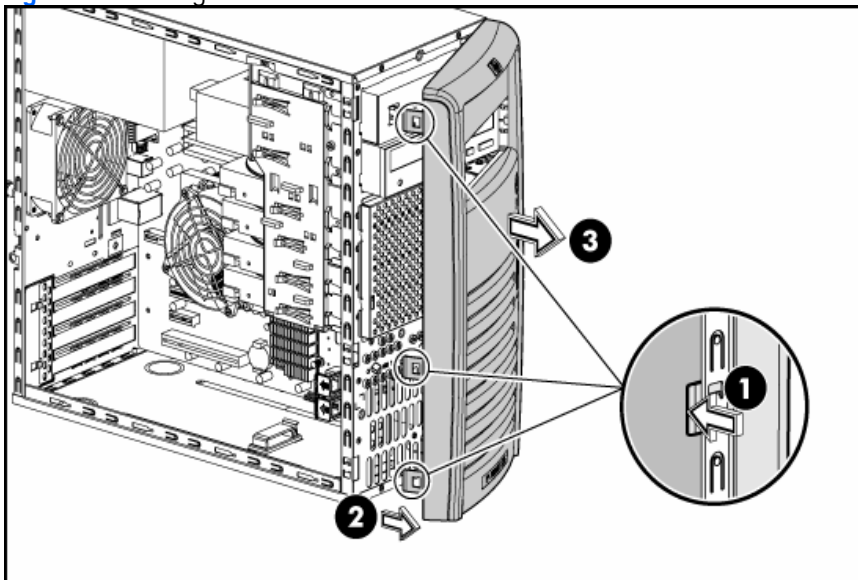

To replace the front bezel:

1. Insert the two hooks on the right side of the bezel into the rectangular holes on the chassis.
2. Rotate the bezel into place so that the three tabs on the left side of the bezel snap into the slots on the chassis.

Figure 4 Reinstalling the front bezel

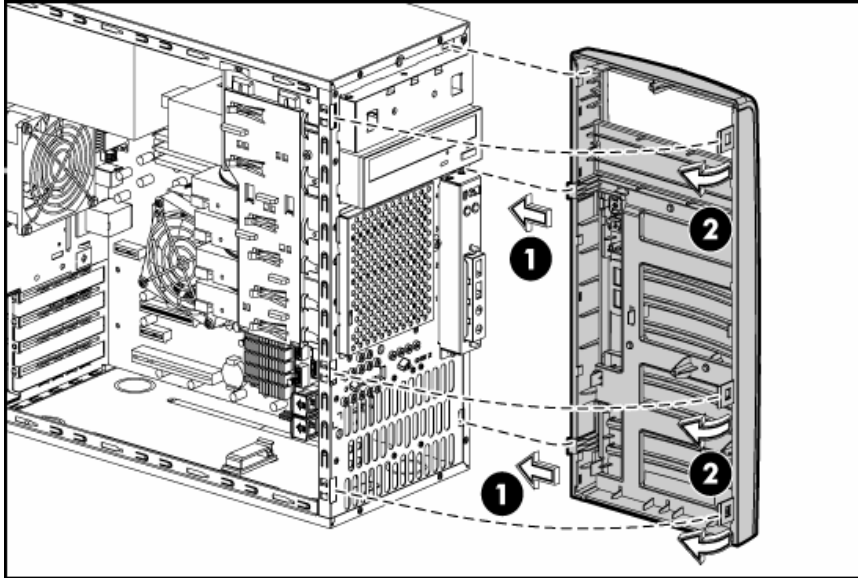

Drives

The server supports 6 drives -- you can install up to two optical drives and up to four hard drives in the server.

Cable management

Always follow good cable management practices when working inside the computer.


- Keep cables away from major heat sources like heat sinks.
- Do not jam cables on top of expansion cards or memory modules. Printed circuit cards are not designed to withstand excessive pressure.
- Keep cables clear of sliding or moveable parts to prevent cutting or crimping.
- When folding a flat ribbon cable, never fold to a sharp crease. Sharp creases may damage the wires.
- Some flat ribbon cables come pre-folded. Never change the folds on these cables.
- Do not sharply bend any cable. A sharp bend can break the internal wires.
- Never bend a SATA data cable tighter than a 30 mm (1.18 inch) radius.
- Never crease a SATA data cable.
- Do not rely on components like the drive cage, power supply, or system cover in order not to push cables down into the chassis.

Removing power supply power cables from the system board connectors follow below steps:

1. Squeeze on the top of the retaining latch attached to the cable end of the connector.
2. Grasp the cable end of the connector and pull it straight up.

△ CAUTION: Always pull the connector. Never pull on the cable. Pulling on the cable could damage the cable and result in a failed power supply.

Figure 5 Unplugging power cables

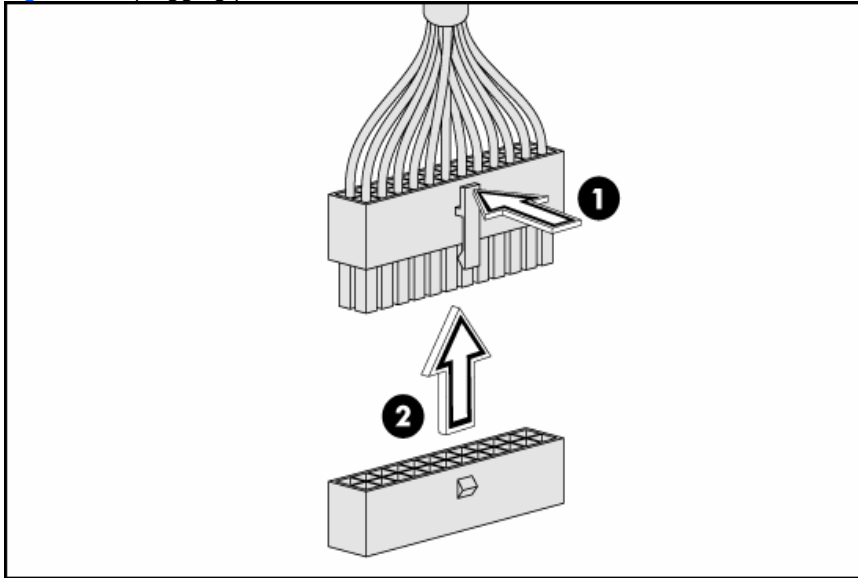

Cable connections

The following table provides information about switching power supply cable connector labels.

Table 3 Cable connections

Cable	To	Cable Designator
Switching Power Supply	System board	P1
Switching Power Supply	System board CPU power	P2
Switching Power Supply	1 st SATA hard drive	P12
Switching Power Supply	2 nd SATA hard drive	P10
Switching Power Supply	3 rd SATA hard drive	P8
Switching Power Supply	4 th SATA hard drive	P6
Switching Power Supply	1 st SAS hard drive	P11
Switching Power Supply	2 nd SAS hard drive	P9
Switching Power Supply	3 rd SAS hard drive	P7
Switching Power Supply	4 th SAS hard drive	P5
Switching Power Supply	1 st optical drive	P13
Switching Power Supply	2 nd optical drive	P14

The following table provides the system board designators that various cables plug into. For more detailed information about system board components, see System board components on page 62.


Table 4 Cable connections

Cable	To	System board designator
4-pin Cooler connector	System board	CPU_FAN
4-pin rear fan connector	System board	P14
Front USB connector	System board	USB_H1
Front panel connector	System board	P5
1 st SATA connector	System board	SATA1
2 nd SATA connector	System board	SATA2
3 rd SATA connector	System board	SATA3
4 th SATA connector	System board	SATA4
5 th SATA connector	System board	SATA5
6 th SATA connector	System board	SATA6
Intel USB connector	System board	J3
Intel USB connector for tape drive	System board	J4
24-pin power connector	System board	J16
4-pin power connector	System board	PWR2

Drive bay configuration

The server supports a maximum of six internal drives. The two upper drive bays are primarily for removable media devices, while the four lower drive bays are only for hard drives. The two upper bays are half height optical bays. The four lower drive bays can accommodate non-hot-plug hard drives.

Figure 6 Drive bay configuration

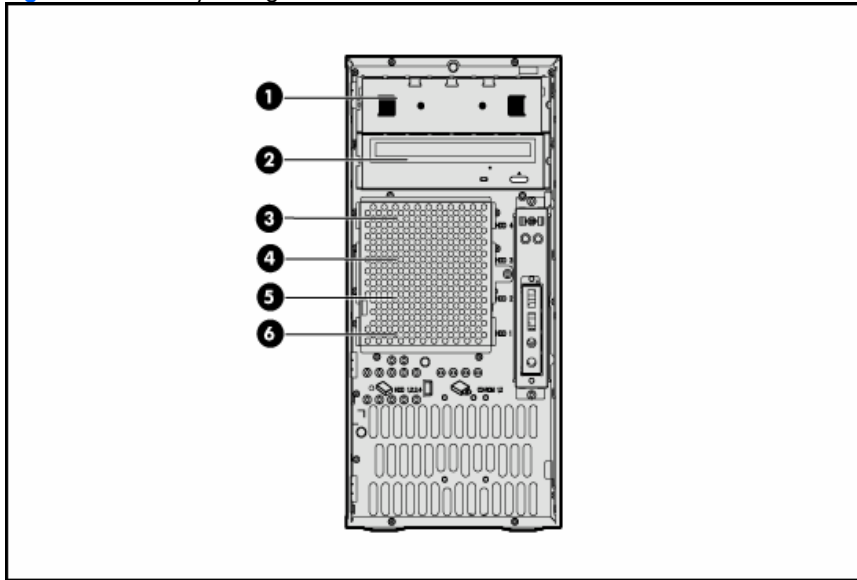


Item	Description
1	1 st Optical drive
2	2 nd Optical drive
3	4 th SAS/SATA hard drive
4	3 rd SAS/SATA hard drive
5	2 nd SAS/SATA hard drive
6	1 st SAS/SATA hard drive

Releasing drives

1. A drive latch with release tabs secures the drives in the drive bay. Lift the release tab on the drive you want to remove.
2. Slide the drive out from its bay.

Figure 7 Releasing drives

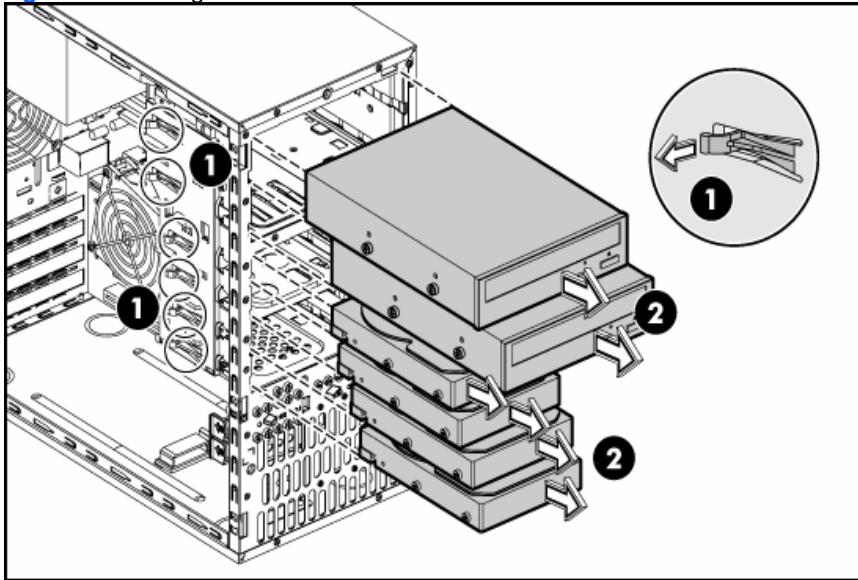


3. When replacing drives, remove the four guide screws (two on each side) from the old drive. You will need these screws to install a new drive.

Optical drive

To install an optical drive:

1. Fasten four screws (two on each side) into the optical drive.
2. Slide the optical drive into the optical bay, with the cable connectors of the drive facing the rear of the chassis and then push the drive all the way into the drive bay until the drive clicks into place.
3. Connect the power and data cables to the connectors on the rear of the drive.

Figure 8 Installing the optical drive

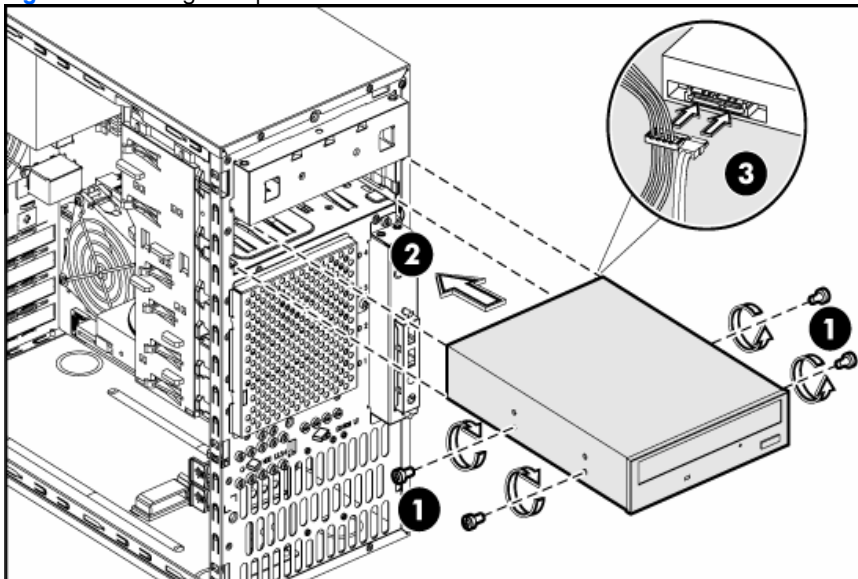


To remove an optical drive:

1. Disconnect the power and data cables from the rear of the optical drive.

2. A drive latch with release tabs secures the drives in the drive bay. Lift the release tab on the drive latch.
3. Slide the drive from the drive bay.

Figure 9 Removing the optical drive

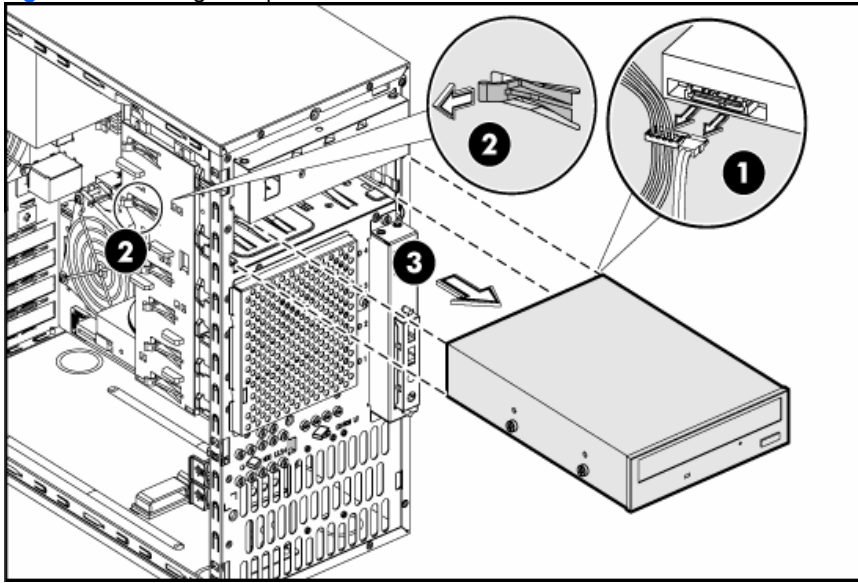

Optional media device


The upper drive bay on the front panel can be used for an optional optical drive.

To install an optional optical drive:

1. Remove the drive shield to prepare the bay for drive installation.
 - a. Remove the screw that secures the drive shield on the side.
 - b. Pull the shield out of the chassis. Store it for later use.


CAUTION: Do not discard the shield. If the drive is removed in the future, you must reinstall the shield to maintain proper system function.

Figure 10 Removing the optical drive shield

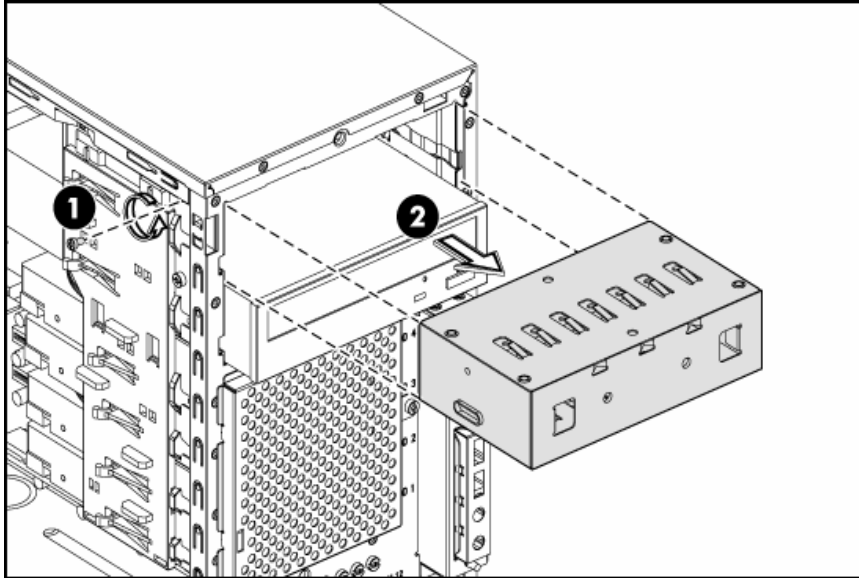

2. Install the new optical drive.
 - a. Fasten four screws (two on each side) into the new optical drive.
 - b. Slide the new optical drive into the bay, with the cable connectors of the drive facing the rear of the chassis and then push the drive all the way into the chassis until the drive clicks into place.
 - c. Connect the power and data cables to the connectors on the rear of the drive.

Figure 11 Installing an optional media drive

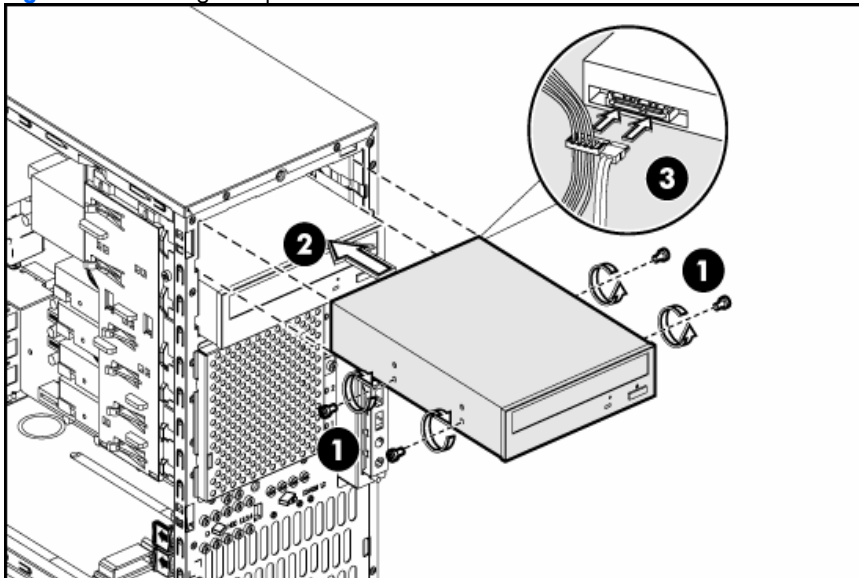

Hard drives


The drive bays on the bottom can accommodate up to four hard drives. You can install either SAS hard drives or SATA hard drives in the server.

To remove the hard drive:

1. Disconnect the power and data cables from the back of the installed drive.
2. A drive latch with release tabs secures the hard drives in the drive bay. Lift the release tab on the drive latch.
3. Slide the hard drive from the drive bay.

NOTE: Remove the four screws from the sides of the drive. You will reuse these screws when you install the new hard drive.


Figure 12 Removing a hard drive

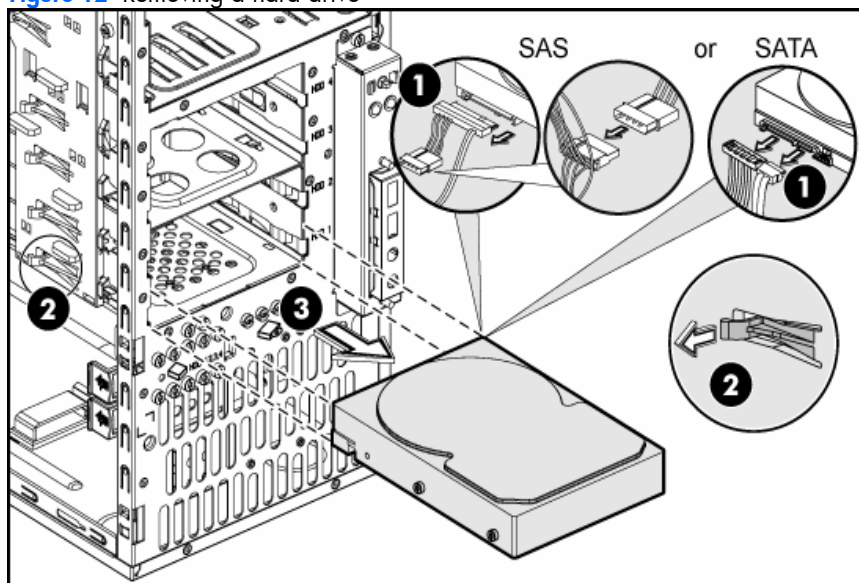

To install a hard drive:

1. Fasten the four drive screws (two on each side) into the hard drive.
2. Slide the hard drive into the selected bay until it clicks into place.
3. For SATA hard drive, connect the power cable from the power supply and the SATA cable to the back of the hard drive. For SAS hard drive, connect the SAS cable to the back of the hard drive and then connect the power cable to the SAS 4-pin connector.

Figure 13 Installing a hard drive

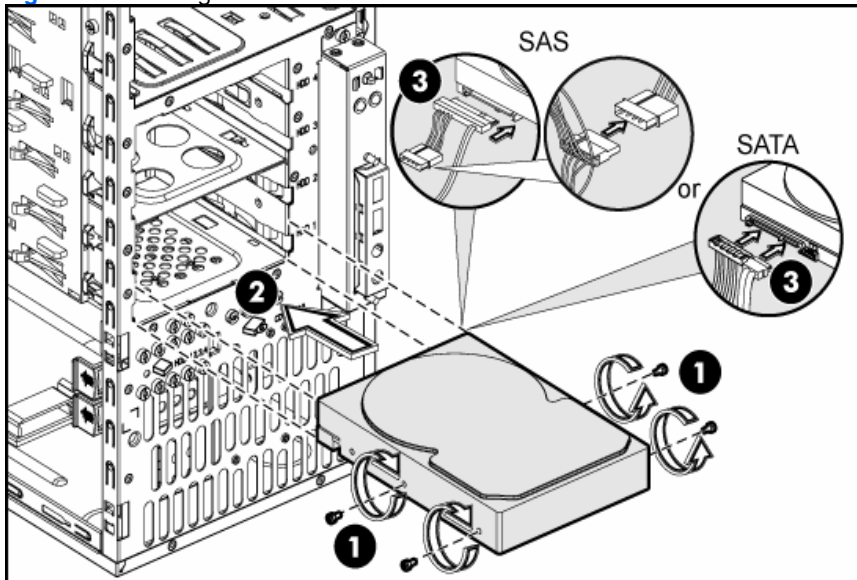


△ **CAUTION:** If you are installing a SATA hard drive, connect the data cables from the system board to the back of the hard drive and connect the power cable from the power supply to the back of the hard drive.

△ **CAUTION:** If you are installing a SAS hard drive, connect the data cable from the SAS expansion card to the back of the hard drive.

NOTE: If you want to install a new hard drive in an empty drive bay, remove four screws from the front of the chassis labeled 'HDD SCREWS' in the below figure for the location of these spare screws.

Figure 14 Drive screws location

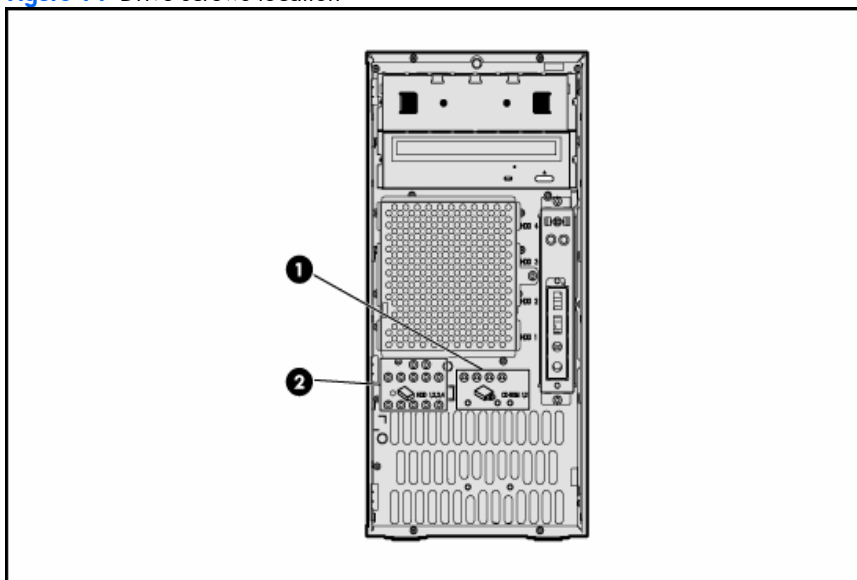

Drive latch


You can remove the latch that secures and allows removal of the drives.

To remove the drive latch:

1. Pull the latch to loosen the two tabs that secure the latch to the chassis.
2. Slide the latch straight down and remove it from the chassis.

NOTE: To loosen the latch, you may also have to pull the tabs that secure inserted drives. Drive latch tabs may break during removal.


Figure 15 Removing the drive latch

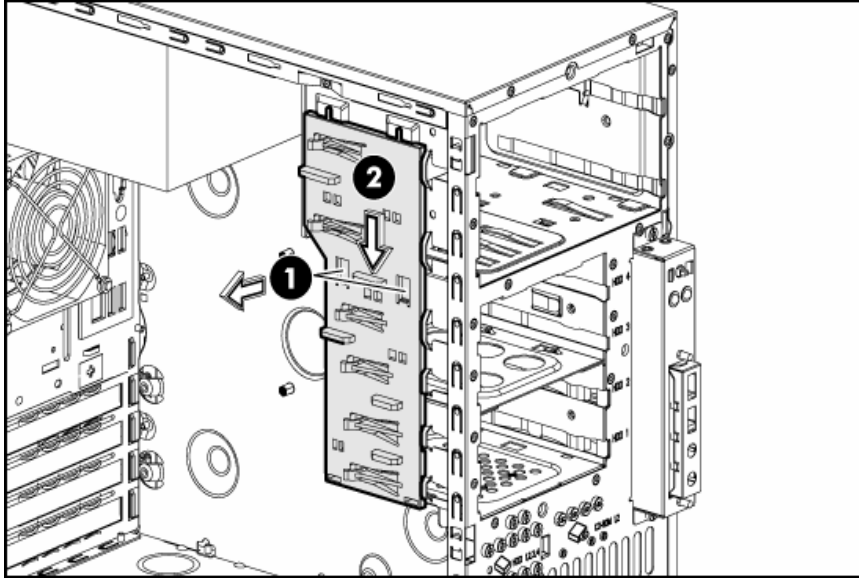

To install the drive latch:

1. Insert the two tabs on the top of the latch into their holders near the top of the chassis.
2. Slide the latch upward until the two tabs in the middle of the latch click into place.

Figure 16 Installing the drive latch

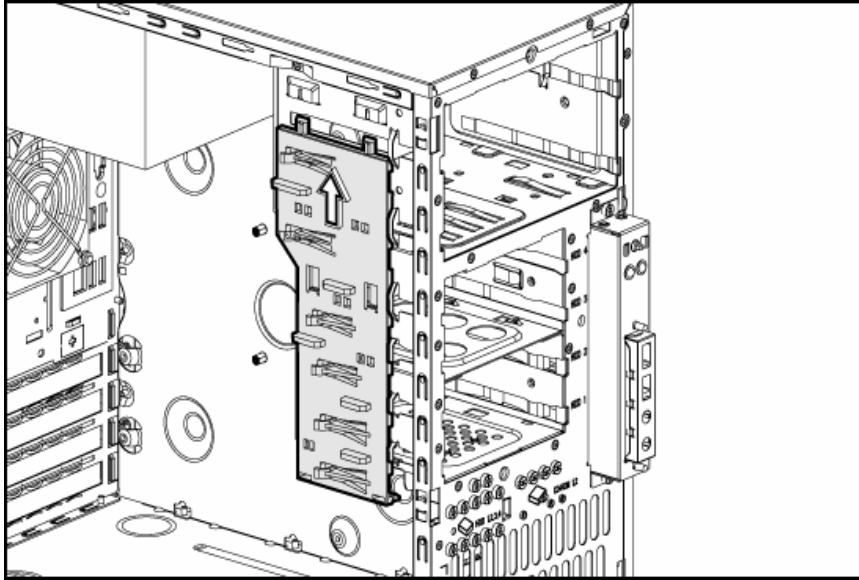


System board components

Refer to the following sections for instructions about how to remove or replace the processor, the memory modules, the expansion cards and the system battery.

Processor

The AMD socket AM2 in the HP ProLiant ML115 G5 supports AMD Opteron 1XXX, AMD Athlon 4450B & LE 1640, and AMD Sempron LE 1250 processors. (For the specific Opteron 1XXX processors, see page 20).

Figure 17 Processor location

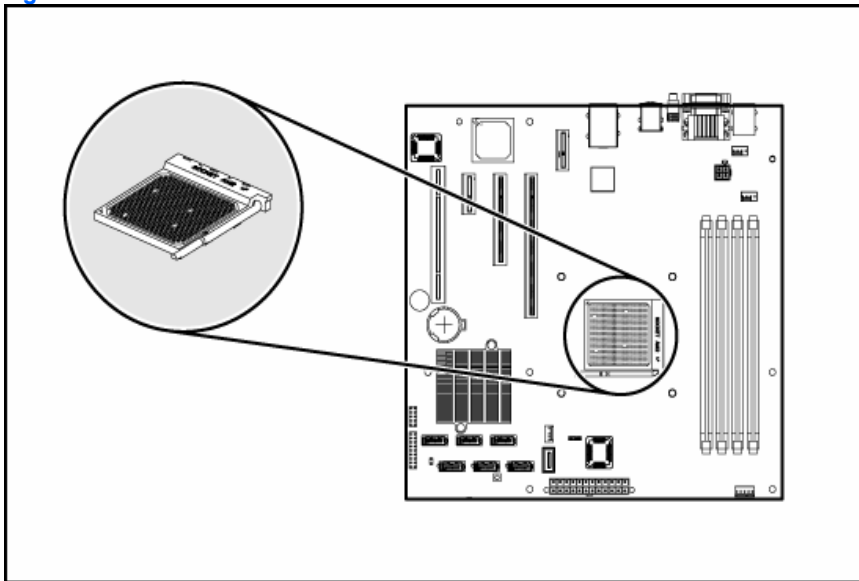


⚠ WARNING: To reduce the risk of injury from a hot component, allow the surface to cool before touching.

NOTE: Lay the server on its side with the open side facing up. If necessary, remove any accessory boards or cables that prevent access to the processor socket.

To remove cooler assembly:

1. Disconnect the cooler cable from the connector on the system board.
2. Twist the mounting pins counterclockwise to loosen them.
3. After you loosen all four mounting pins, lift the cooler away from the system board.

Figure 18 Removing cooler assembly

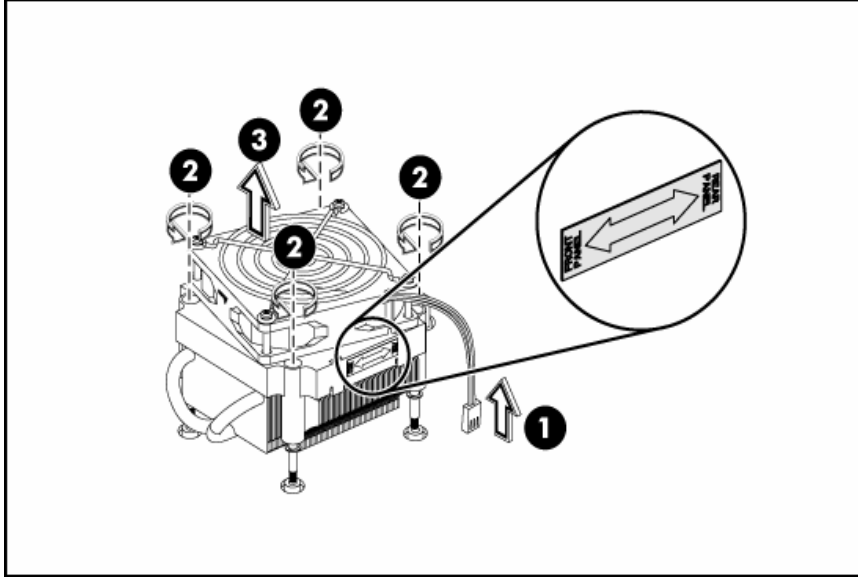


CAUTION: Place cooler down in an upright position with the thermal patch facing upward. Do not let the thermal patch touch the work surface.

To remove the processor:

1. Disengage the release lever.
2. Grasp the processor by its edges and lift it out of the socket.

Figure 19 Removing the processor

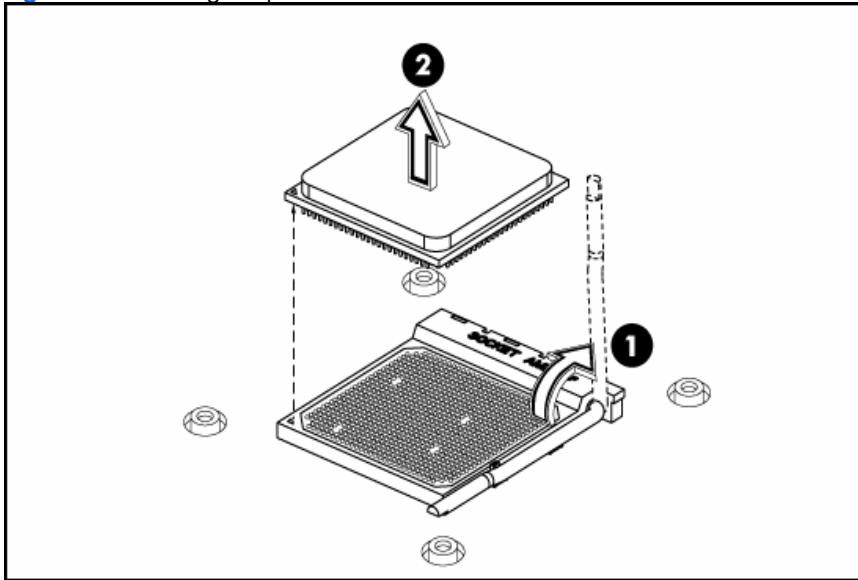

△ **CAUTION:** Place the processor on a static-dissipating work surface or in an anti-static bag.

△ **CAUTION:** To allow cooler to draw as much heat as possible from the processor base, there must be good contact between the cooler base and the top of the processor. To ensure good contact, you must apply thermal grease compound.

To apply the thermal grease compound:

1. Use a clean cloth dipped in rubbing alcohol to clean the contact surface on the cooler and on the new processor. Wipe the contact surfaces several times to make sure they are free of particles or dust contaminants.
 2. Apply the thermal grease compound to the CPU contact surface.
 3. Use a proper tool to spread the grease throughout the entire contact surface and lightly scrape off any excess grease.
-

△ **CAUTION:** Never touch the bottom side of the processor; any contaminant could prevent the processor contact pads from making contact with the socket.


△ **CAUTION:** HP recommends using Shin-Etsu X-23-7783D thermal grease compound for your ProLiant server.

△ **CAUTION:** Applying too much grease creates a gap between the contact surfaces, significantly reducing the ability of the cooler to draw out heat. Installing the cooler with excessive grease can also cause the grease to spread over the processor pins or the system board base, which can cause electrical shorts that damage the system.

To install the processor:

1. With the release lever disengaged, hold the processor by its edges and align it over the empty processor socket. Note the triangle locator on the socket and the processor for proper orientation.
2. Insert the processor into the socket then completely close the release lever.

Figure 20 Installing the processor

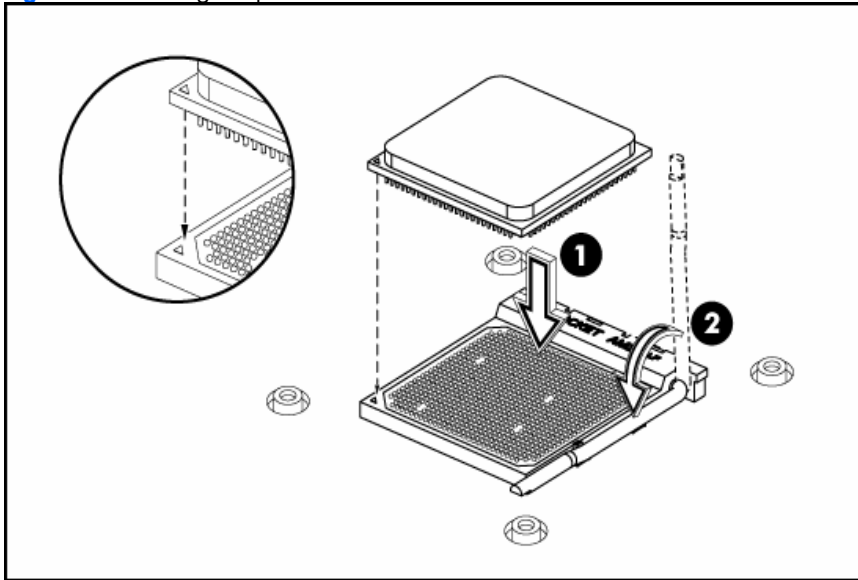

△ **CAUTION:** After you install the processor, you must reinstall the cooler on top of the processor socket. The thermal grease you applied on the contact surfaces of the cooler and the processor provides the necessary thermal bonding to allow the cooler to draw heat from the processor.


△ **CAUTION:** To prevent processor overheating or system instability, use only a cooler assembly specified for the HP ProLiant ML115 G5 server.

To replace cooler assembly:

1. See the label on the side of the cooler to find the cooler direction. Properly align the cooler mounting screws to the system board mounting holes and press down.
 2. Twist the mounting screws clockwise to secure the cooler to the system board.
 3. Connect the cooler cable to the connector on the system board.
-

△ **CAUTION:** Failure to connect the cooler cable to the system board may result in damage to the processor and could cause the server to shut down without displaying messages.

Figure 21 Installing the cooler assembly

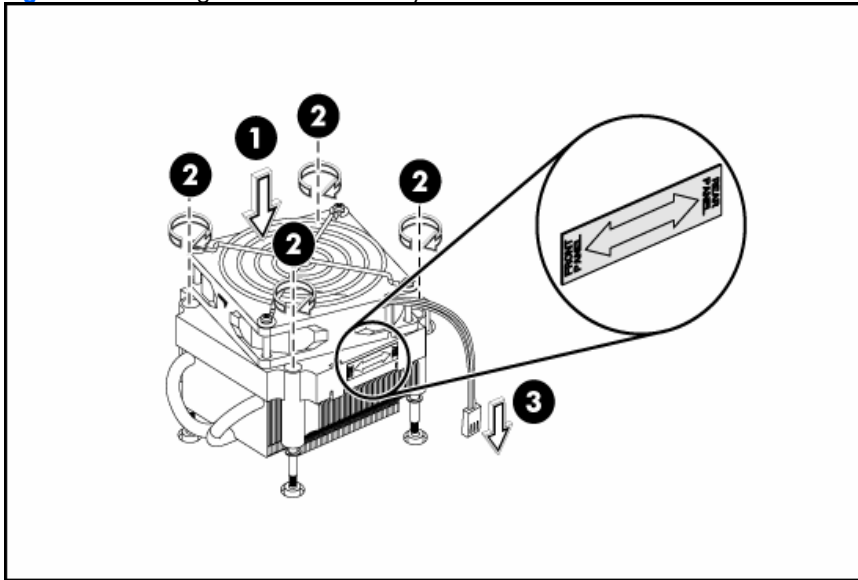


CAUTION: There is the arrow mark on the side of cooler that shows you the correct installation.

Memory

The HP ProLiant ML115 G5 server has four DIMM slots that support up to 8 GB maximum system memory (2 GB in each of the four DIMM slots).

Figure 22 DIMM slots location

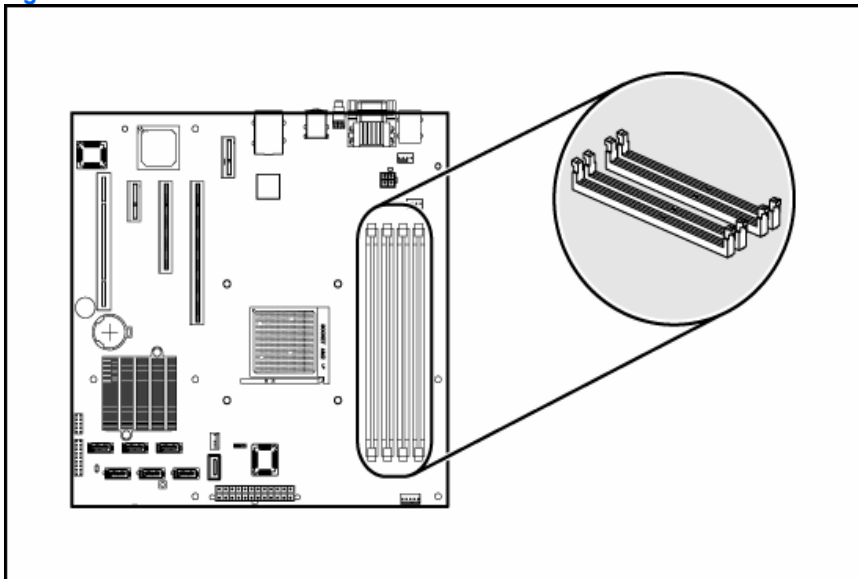

You must adhere to the following guidelines when adding or replacing memory modules:

- Use only DDRII 667/800 unbuffered ECC DIMMs in 512 MB, 1 GB or 2 GB configuration.
- Supported DIMM configurations are single DIMM, one pair (two DIMMs), or two pairs (4 DIMMs). Channel A corresponds to the 1A and 3B slots, while channel B corresponds to the 2A and 4B slots.
- For optimal 2 DIMMs configuration, populate 1A and 2A slot.


△ **CAUTION:** DIMMs can be damaged by improper handling. Always use an anti-static wrist strap and grounding mat, and discharge static electricity before touching DIMMs.

To remove a memory module:

NOTE: Lay the server on its side with the open side facing up. If necessary, remove any accessory boards or cables that prevent access to the memory socket.

1. Completely open the holding clips securing the module.
2. Gently pull the memory module upward to remove it from the socket.

Figure 23 Removing a memory module

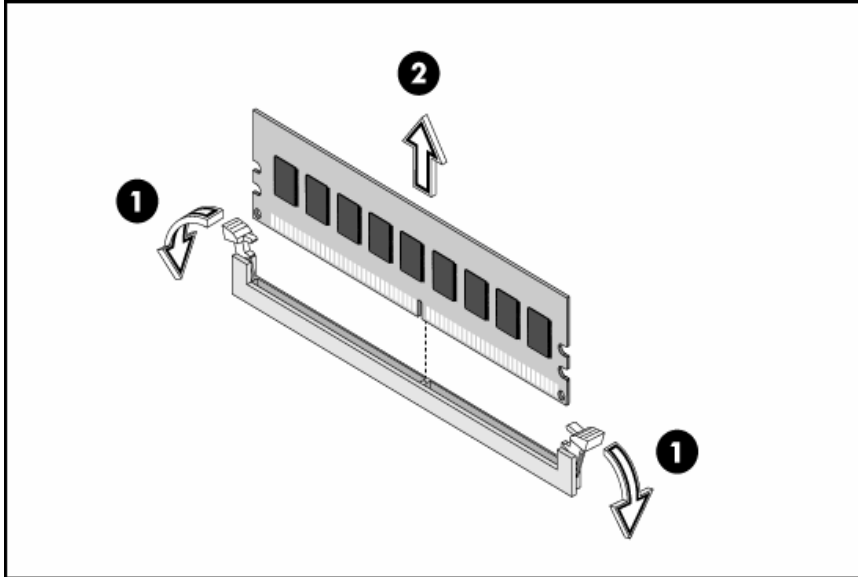


△ **CAUTION:** Place the memory module on a static-dissipating work surface or inside of an anti-static bag.

To install a memory module:

1. Align the notch on the bottom edge of the module with the keyed surface of the DIMM slot and then press the module fully into the slot.
2. Firmly press the holding clips inward to secure the memory module in place.

Figure 24 Installing a memory module

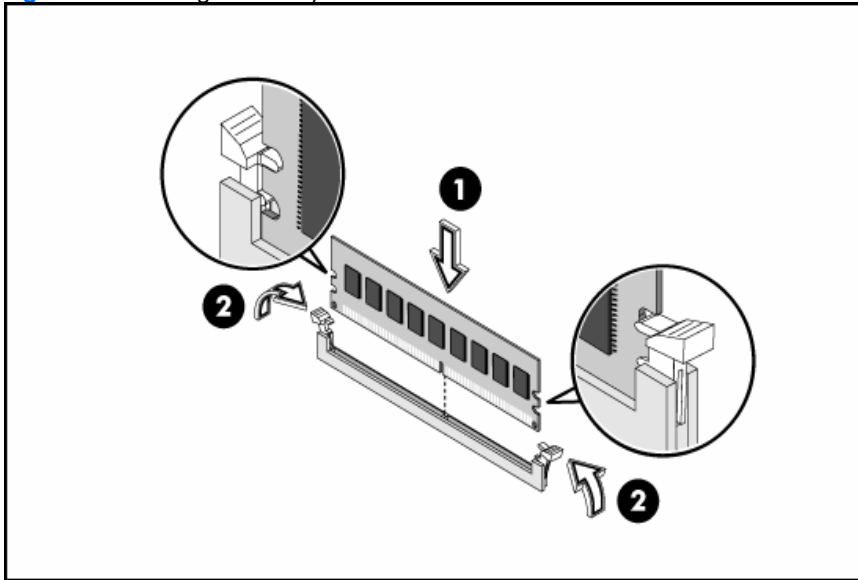

⚠ **CAUTION:** The memory sockets are structured to ensure proper installation. If you insert a memory module but it does not fit easily into the socket, you may have inserted it incorrectly. Double-check the orientation of the module and reinsert. If the latches do not close, the module is not inserted correctly.

⚠ **CAUTION:** There would be short beep sounds as warning if there is ECC error in the DIMMs during the system start-up.

PCI Expansion cards


PCI cards

You must remove the PCI expansion slot cover lock and PCI bracket before installing or removing expansion cards.

The server supports the following PCI bus slots:

- One 32-bit/33-MHz 3.3V PCI bus slot
- One PCI Express x16 lane with x16 slot
- One PCI Express x8 lane with x8 slot
- One PCI Express x1 lane with x1 slot


Figure 25 PCI slots location

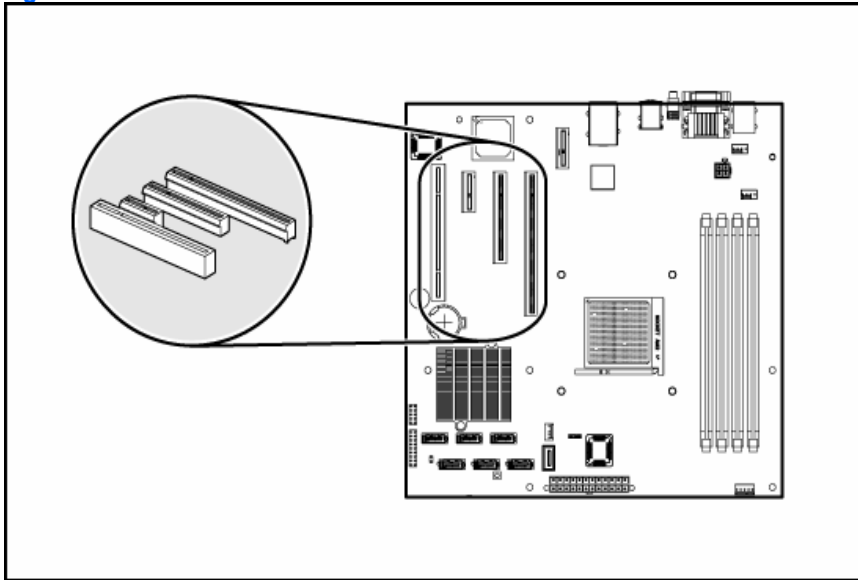

To remove the PCI slot cover lock:

1. Remove the retaining screw that secures the slot cover lock to the chassis.
2. Remove the slot cover lock from the chassis.
3. Remove the PCI bracket from the chassis.

Figure 26 Removing the PCI slot cover lock

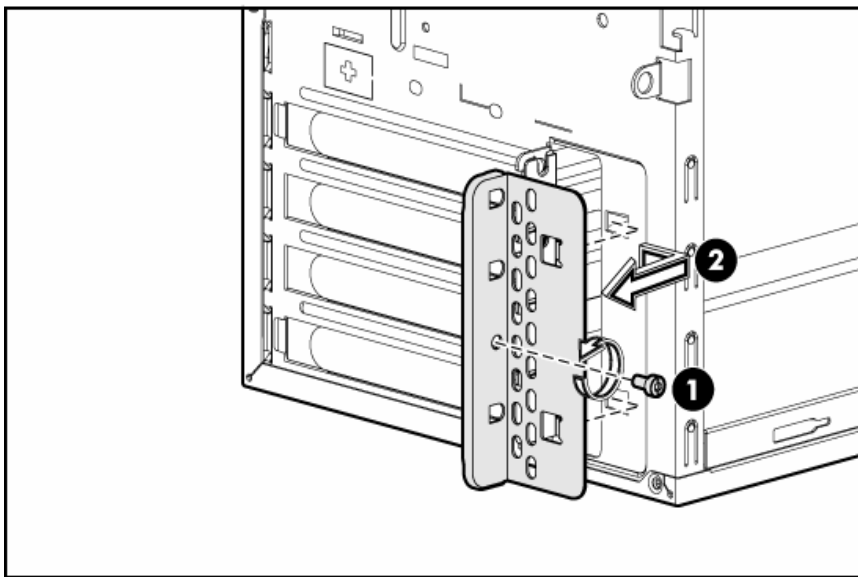


NOTE: If necessary, remove any accessory boards or cables that prevent access to the PCI slots.

CAUTION: Do not discard the PCI bracket. If the PCI expansion card is removed in the future, the PCI bracket must be reinstalled.

To remove the PCI card:

1. Hold the card at both ends and then carefully rock the card back and forth until the expansion cards pull free from the slot.
2. Store the old card in the anti-static packaging.


Figure 27 Removing the PCI card

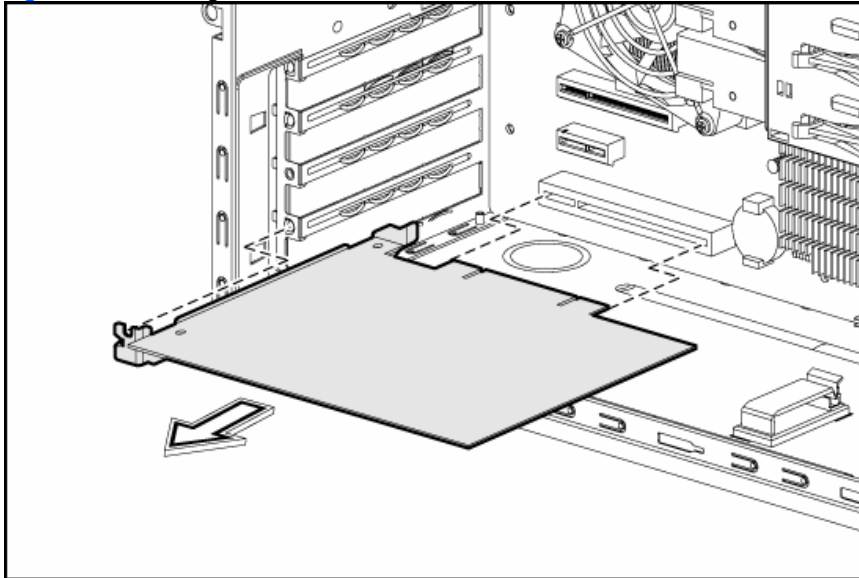

To install the PCI card:

1. Hold the card above the expansion slot on the system board and then move the card toward the rear of the chassis so that the bracket on the card is aligned with the open slot on the rear of the chassis.
2. Press the card straight down into the expansion slot on the system board.


Figure 28 Installing the PCI card

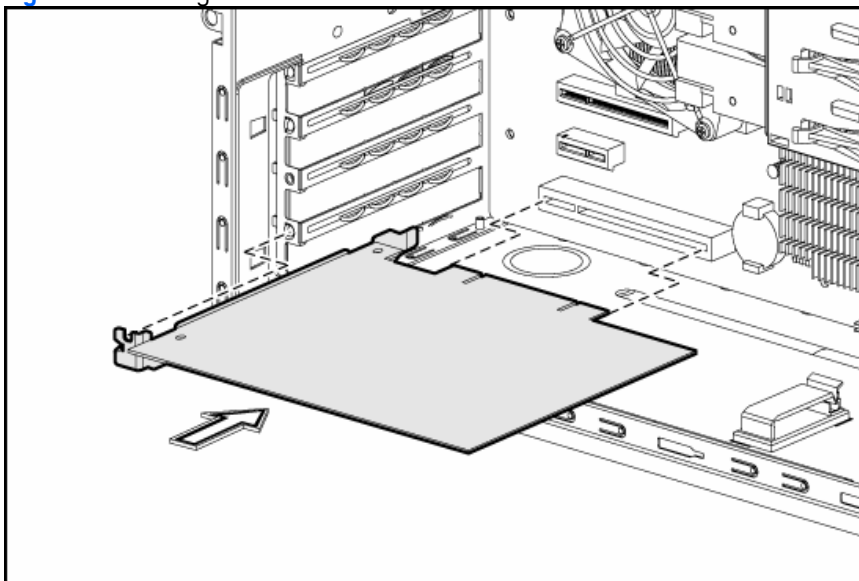

To replace the PCI slot cover lock:

1. Slide the PCI slot cover lock onto the rails toward the server.
2. Replace the slot cover lock retaining screw.


Figure 29 Replacing the PCI slot cover

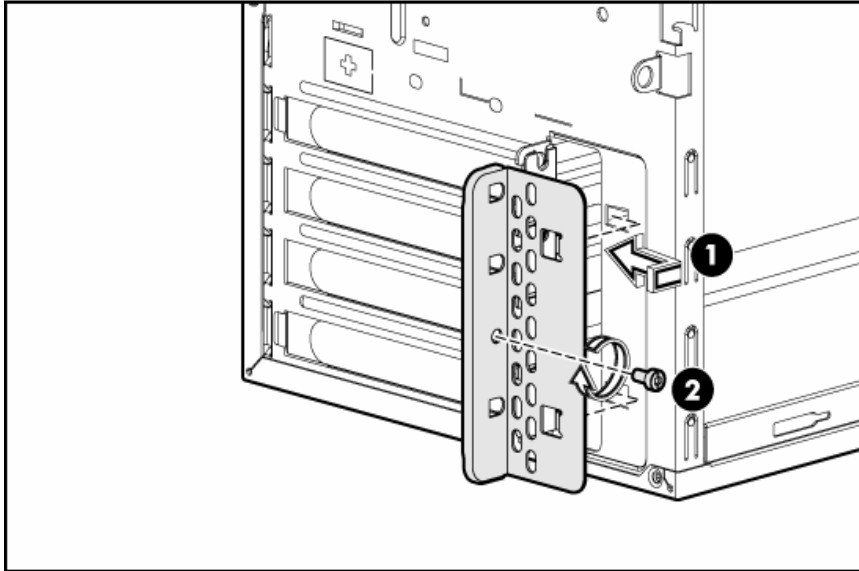

HP Smart Array E200 controller card

You must remove the PCI expansion slot cover lock, PCI bracket and the PCI card holder before installing HP Smart Array E200 controller card.


Figure 30 HP Smart Array E200 controller card slot location

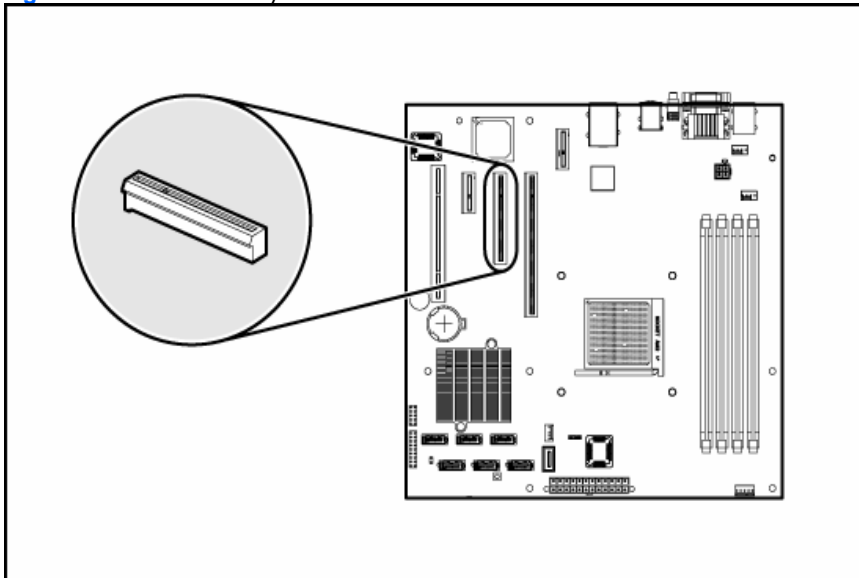

To remove the PCI slot cover lock:

1. Remove the retaining screw that secures the lock to the chassis.
2. Remove the slot cover lock from the chassis.

Figure 31 Removing the PCI slot cover lock

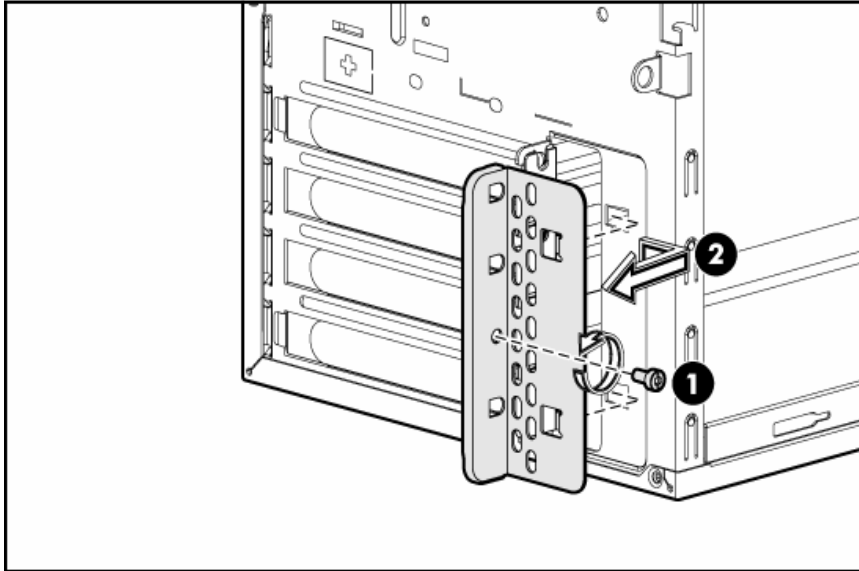

3. Remove the PCI bracket from the chassis.


NOTE: If necessary, remove any accessory boards or cables that prevent access to the PCI slots.

CAUTION: Do not discard the PCI bracket. If the PCI expansion card is removed in the future, the PCI bracket must be reinstalled.

To install a HP Smart Array E200 controller card:

1. Hold the card above the expansion slot on the system board and then move the card toward the rear of the chassis so that the bracket on the card is aligned with the open slot on the rear of the chassis.
2. Press the card straight down into the expansion slot on the system board.


Figure 32 Installing the HP Smart Array E200 controller card

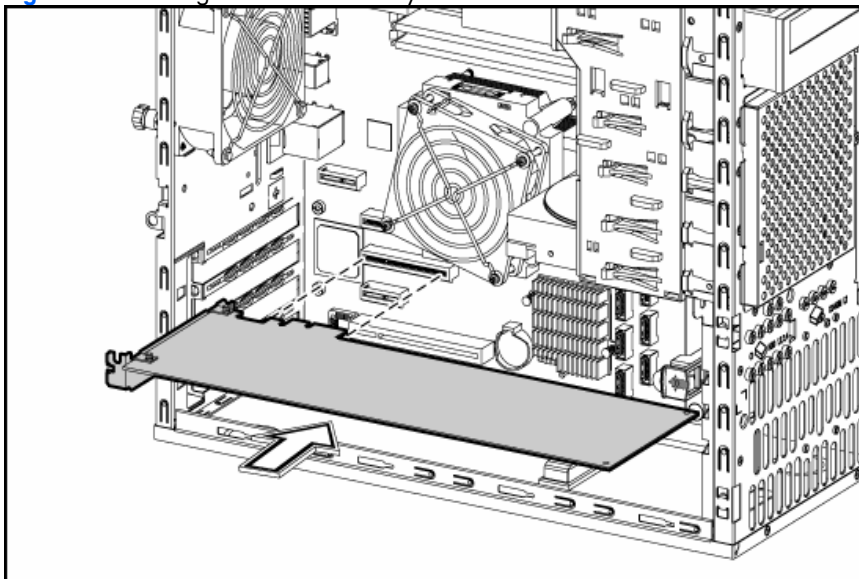

To install the PCI card holder to secure the HP Smart Array E200 controller card:


1. Properly align the PCI holder to the edge of HP Smart Array E200 controller card and hard drive cage support.
2. Click the PCI card into place.

Figure 33 Installing the PCI card holder

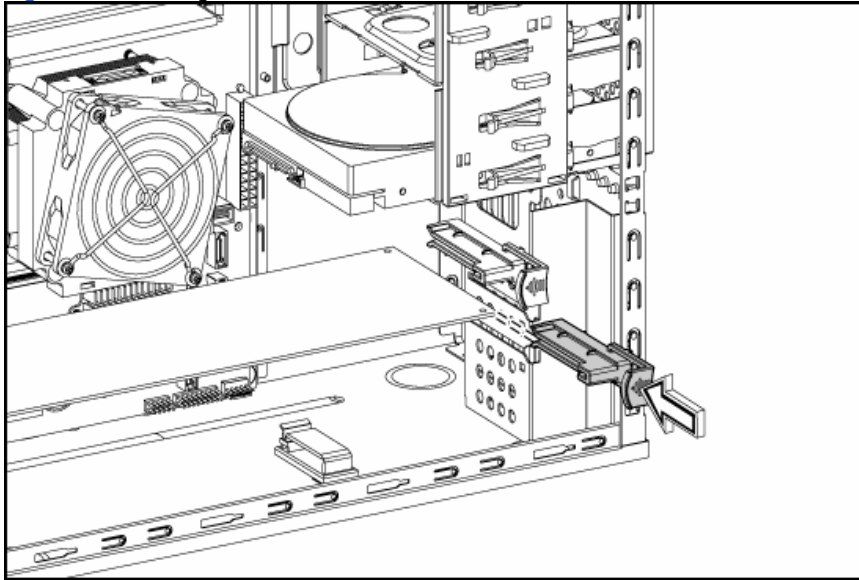

To remove the PCI card holder, pull it out the hard drive cage.


Figure 34 Removing the PCI card holder

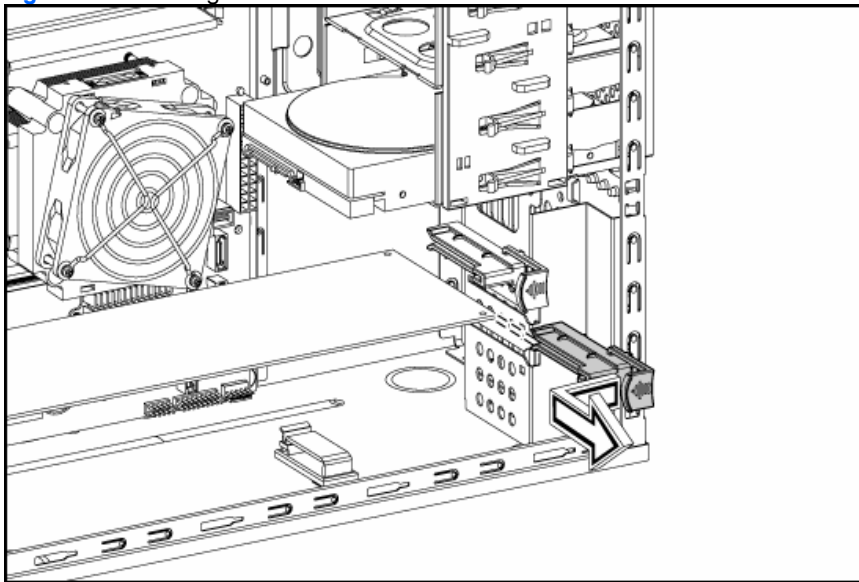

To remove a HP Smart Array E200 controller card:


1. Hold the card at both ends and then carefully rock the card back and forth until the expansion cards pull free from the slot.
2. Store the old card in the anti-static packaging.

Figure 35 Removing the HP Smart Array E200 controller card

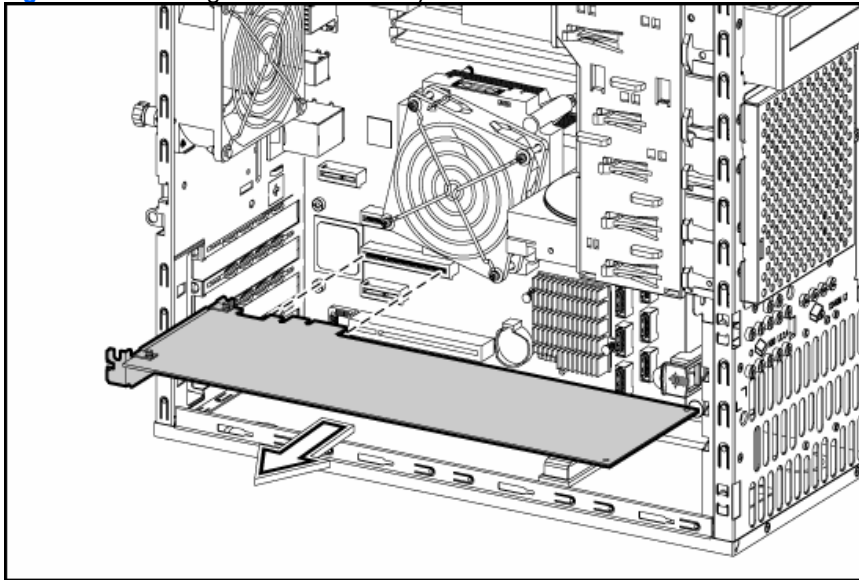

3. Replace the PCI slot cover lock:
 - a. Slide the PCI slot cover lock onto the rails toward the server.
 - b. Replace the slot cover lock retaining screw.


Figure 36 Replacing the PCI slot cover

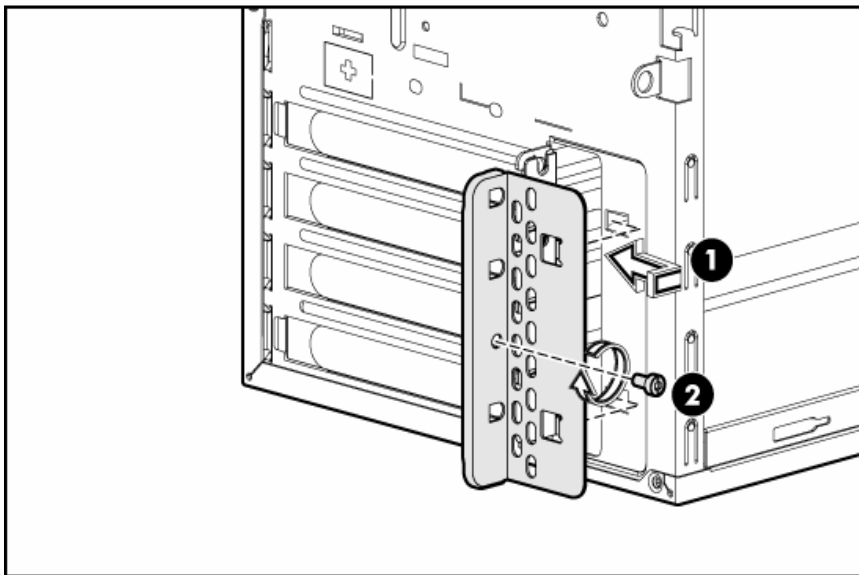

System battery

The server uses volatile memory that requires a battery to retain system information when power is removed. This 3-volt lithium coin cell battery is located on the system board.

Figure 37 System battery location

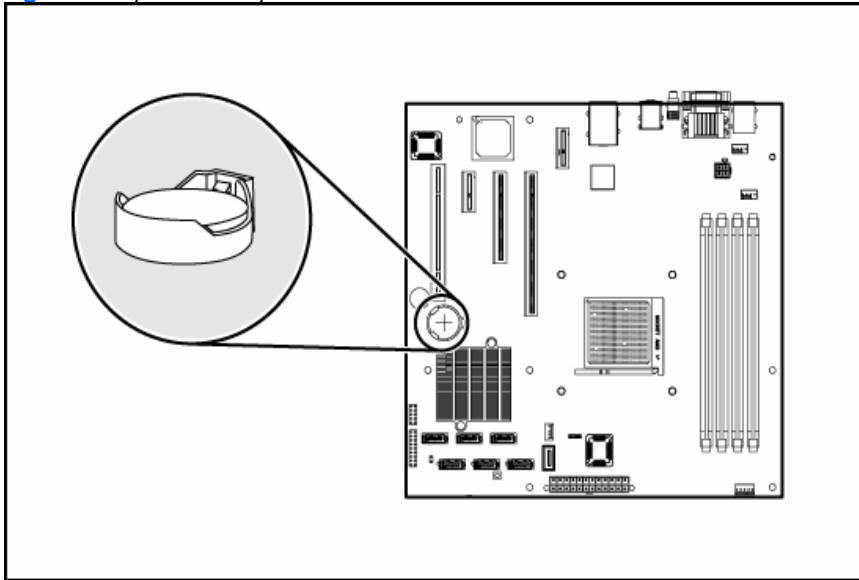

If the server no longer automatically displays the correct date and time, you may need to replace the system battery. Under normal use, battery life is five to ten years.

-
- ⚠ WARNING:** Note the following reminders when replacing the system battery:
- Replace the battery with the same type as the battery recommended by HP. Used of another battery may present a risk of fire or explosion.
 - A risk of fire and chemical burn exists if the battery is not handled properly. Do not disassemble, crush, puncture, or short external contacts, or expose the battery to temperatures higher than 60°C (140°F).
 - Do not dispose of used battery in water or fire. Dispose of used battery according to the manufacturer's instructions.
-


- ⚠ CAUTION:** Loss of BIOS settings occurs when the battery is removed. You must reconfigure BIOS settings whenever you replace the battery.
-

To replace the system battery:

NOTE: Lay the server on its side for better access to the battery holder. If necessary, remove any accessory boards or cables that prevent access to the battery holder.

1. To release the battery from its holder, squeeze the metal clamp that extends above one edge of the battery. When the battery pops up, lift it out.
2. To insert the new battery, slide one edge of the replacement battery under the holder's lip with the positive side up. Push the other edge down until the clamp snaps over the other edge of the battery.

Figure 38 Replacing the battery

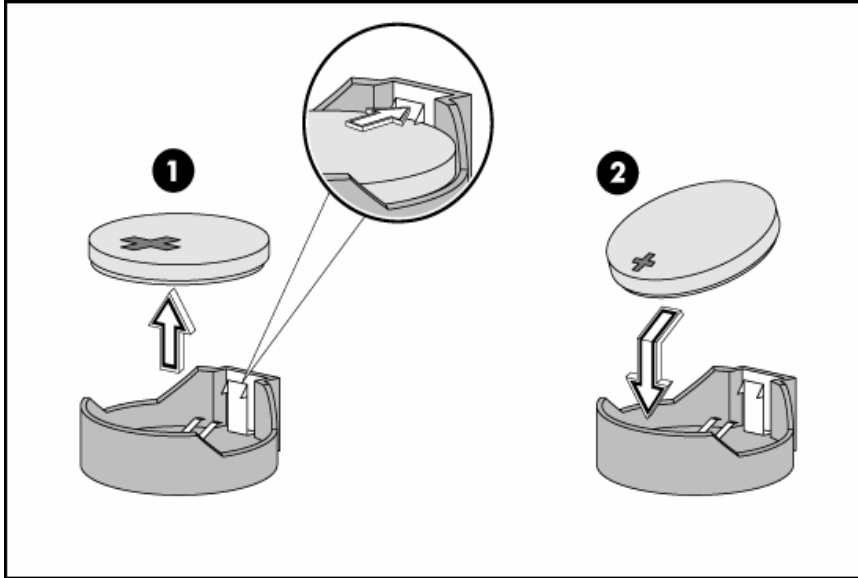


System Board Removal and Replacement Procedure

To remove the system board:

1. Loosen the screws that secure the system board to the chassis.
2. Remove the system board from the chassis.

Figure 39 Removing the system board

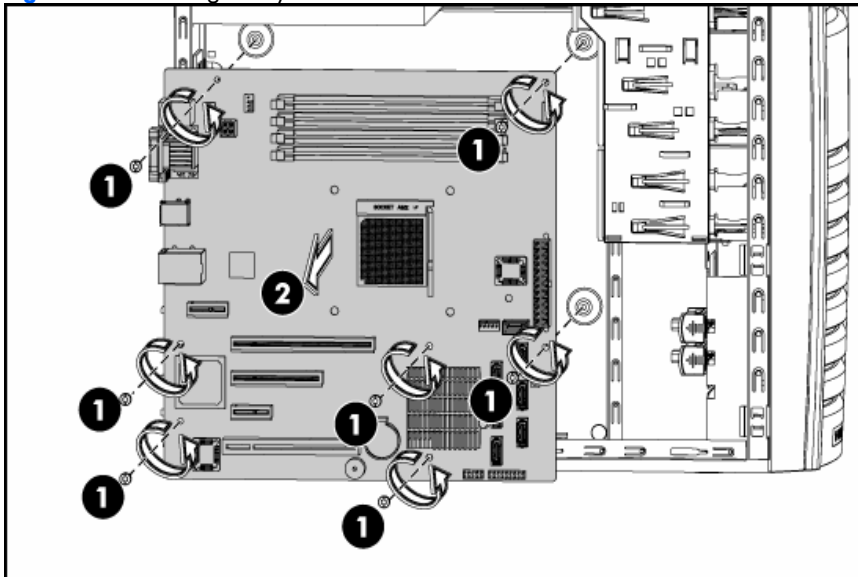


To install the system board:

1. Align the system board with the screw holes on the chassis.
2. Fasten the two screws on the system board to secure the system board to the chassis.
3. Fasten the screws on the system board.

CAUTION: When install the system board, these two screws should be installed first for board orientation guiding.

Figure 40 Installing the system board

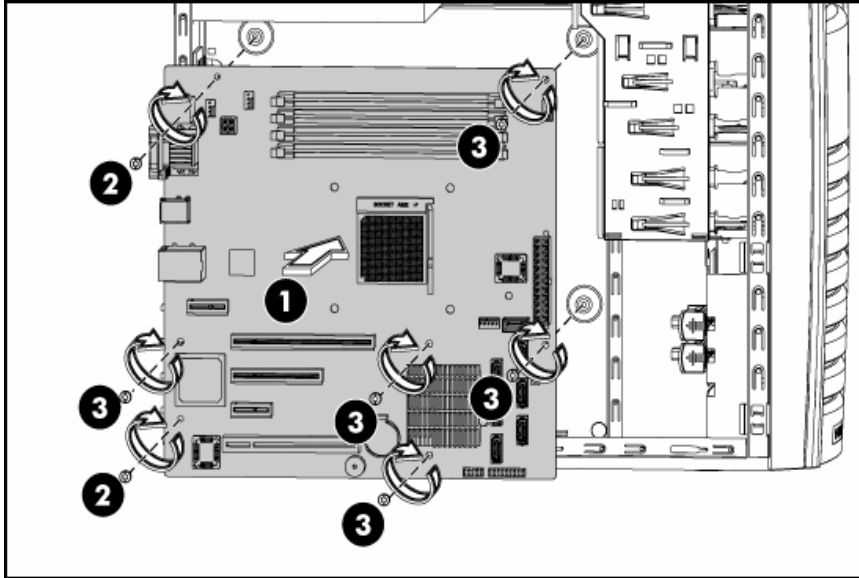

Power supply unit (PSU)

Located on the rear panel of the server power supply is a single standard auto-range 365-watt PSU with PFC (power factor correction) function.

⚠ WARNING: Note the following reminders are to reduce the risk of personal injury from electric shock hazards and/or damage to the equipment.


- Installation of power supply unit should be referred to individuals who are qualified to service server systems and are trained to deal with equipment capable of generating hazardous energy levels.
- DO NOT open the power supply unit. There are no serviceable parts inside it.

To remove the power supply:

NOTE: Lay the server on its side with the open side facing up.

1. Disconnect the power cables of all installed drives from the power supply.
2. Remove the four screws that secure the power supply to the chassis.
3. Lift the power supply out of the chassis.


Figure 41 Removing the power supply

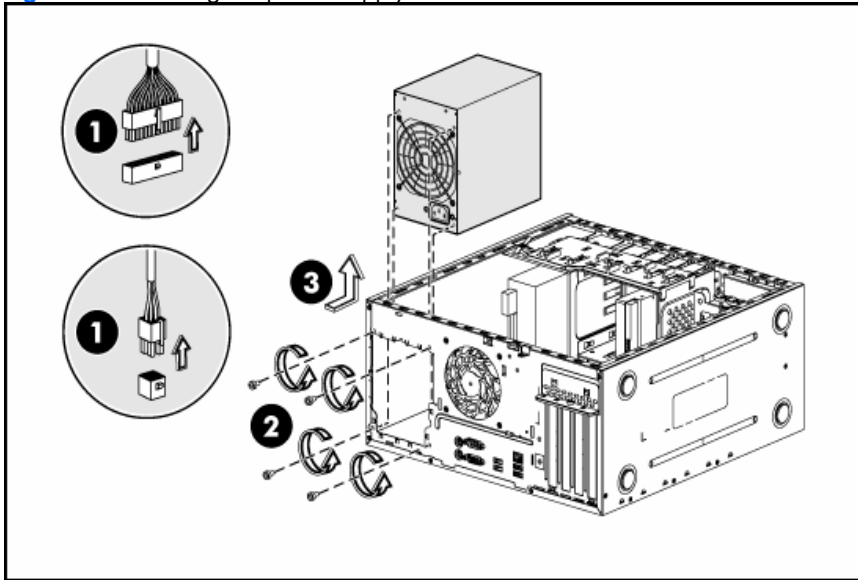

To install the power supply:

1. Align the power supply to the support edges inside of the chassis.
2. Secure the power supply to the chassis using four screws.
3. Reconnect the processor and system board power cables to the system board connectors and then connect the power cables to all installed drives.

Figure 42 Installing the power supply

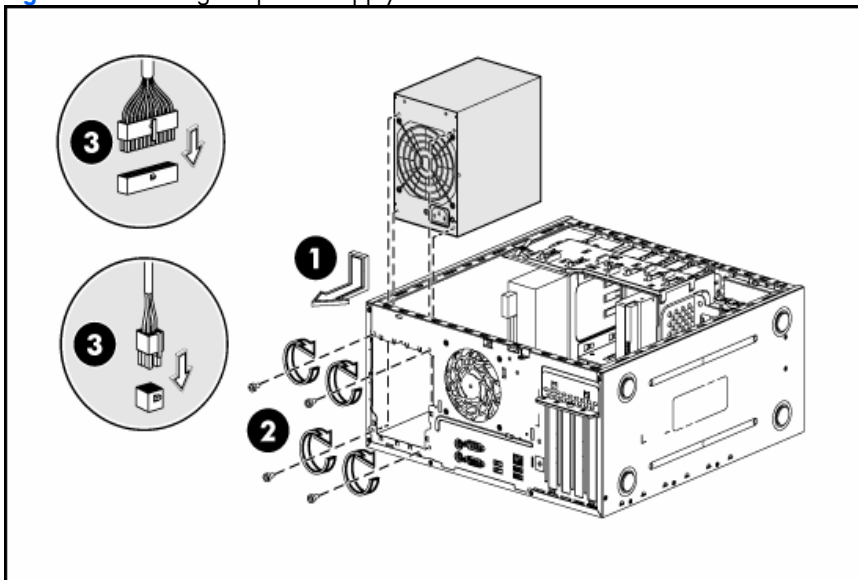

System fan


A new system fan can be installed to allow the server to operate properly in case the default system fan becomes defective.

To remove the system fan:

⚠ WARNING: Be sure to support the system fan with your hand when removing screws from the chassis. The fan could fall onto the system board or an accessory board causing damage if not supported.

1. Disconnect the system fan cable from its connector on the system board.
2. Remove the four screws from the rear of the chassis that secure the fan.
3. Remove the fan from the chassis.


Figure 43 Removing the system fan

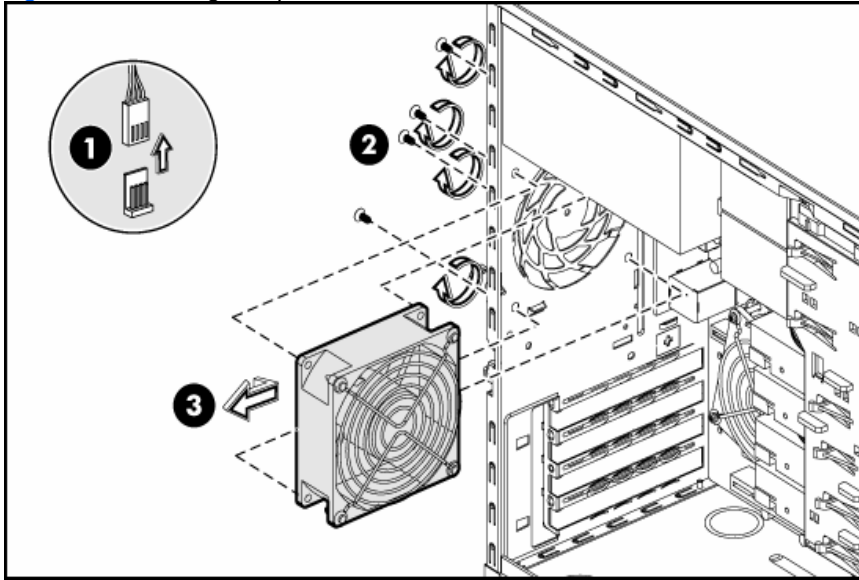

To install the system fan:

1. Align the system fan to the screw holes inside of the chassis.
2. While holding the system fan against the chassis, replace the four screws that secure the fan to the chassis.
3. Connect the system fan cable to its connector on the system board.


Figure 44 Installing the system fan

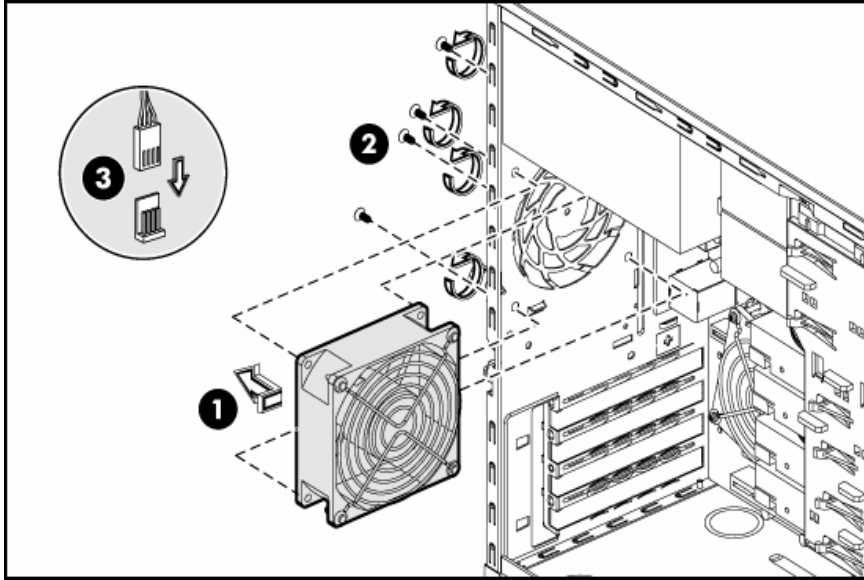

Install IPMI Card

IPMI card is a suite of products that enable remote management of ProLiant servers. IPMI card allows customers or their service providers to remotely manage ProLiant ML115 G5 server over a LAN or the Internet. With IPMI card, users can access a system's text console, control system power, and monitor system environmental conditions from a browser or command line.

Figure 45 IPMI card slot location

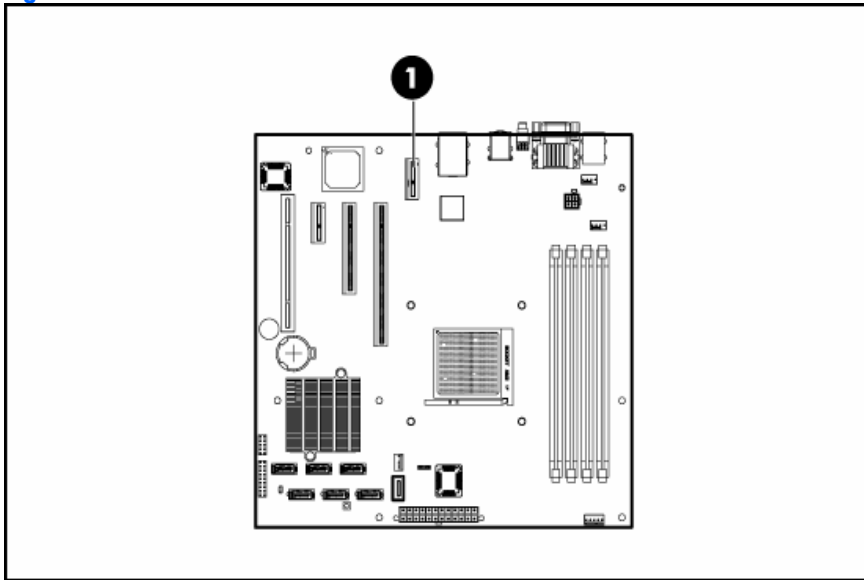

To install the IPMI card:

1. Back up the server data.
2. Shut down the operating system in an orderly manner, as directed in the operating system instruction.
3. If the server is on, press the power button to power down the server.
4. All power cords must be disconnected.

5. Remove the access panel.
6. Remove knock-out feature from chassis. (see figure 46)
7. Press the card straight down into the expansion slot on the system board.
8. Be sure the card is at the correct position and the bracket on the card is aligned with the open slot on the rear of the chassis.
9. Fasten the expansion card bracket on the rear panel with screw.
10. Replace the access panel.
11. Reconnect all power cords.

Figure 46 Remove the knock-out feature


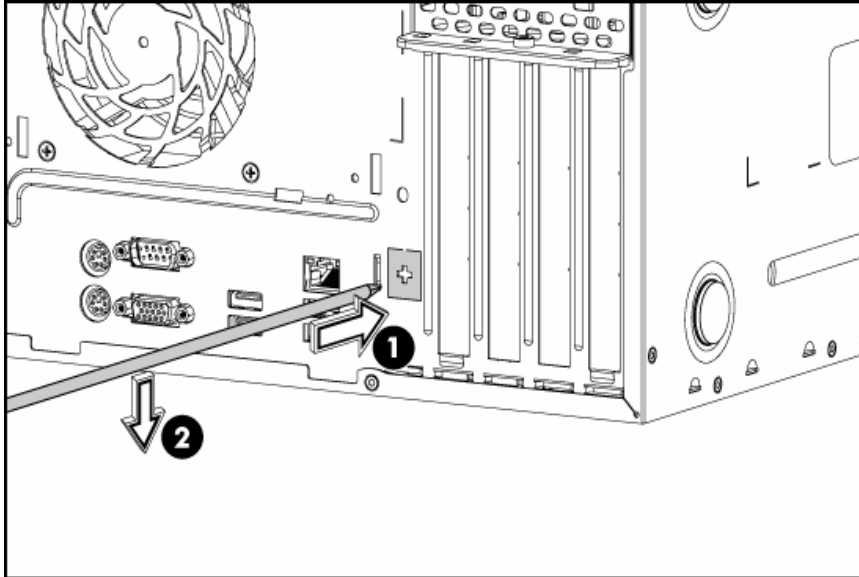


Figure 47 Installing the IPMI card

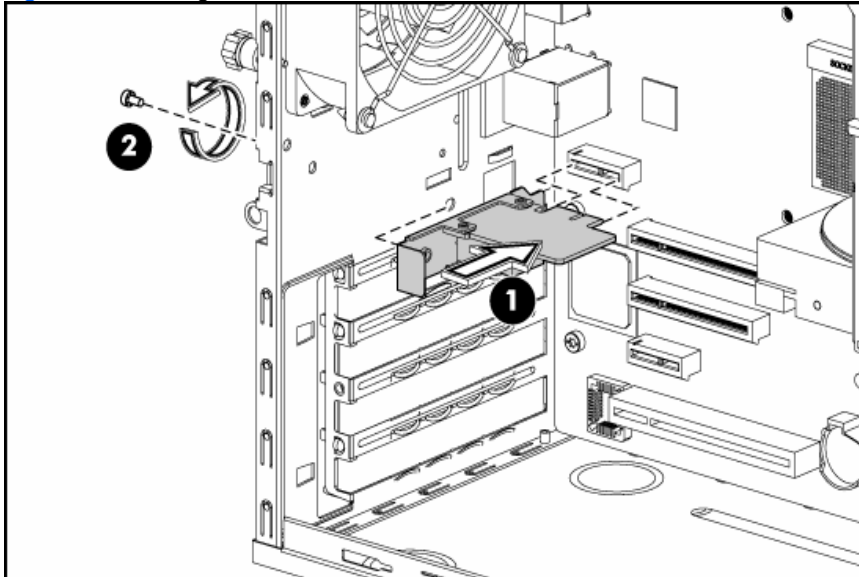

CAUTION: Do not discard the IPMI card bracket dummy. If the IPMI card is removed in the future, the IPMI card bracket dummy must be reinstalled.

Connectors, switches and LEDs


This chapter contains illustrations and tables identifying and describing the connectors, switches, buttons, and LED indicators located on the front panel, rear panel, system board and hard drives of the HP ProLiant ML115 G5 server.

Connectors and components

This section contains illustrations and tables identifying connectors and components on the front and rear panels of the server, as well as those located on the system board.

Front panel components

Figure 48 Front panel components

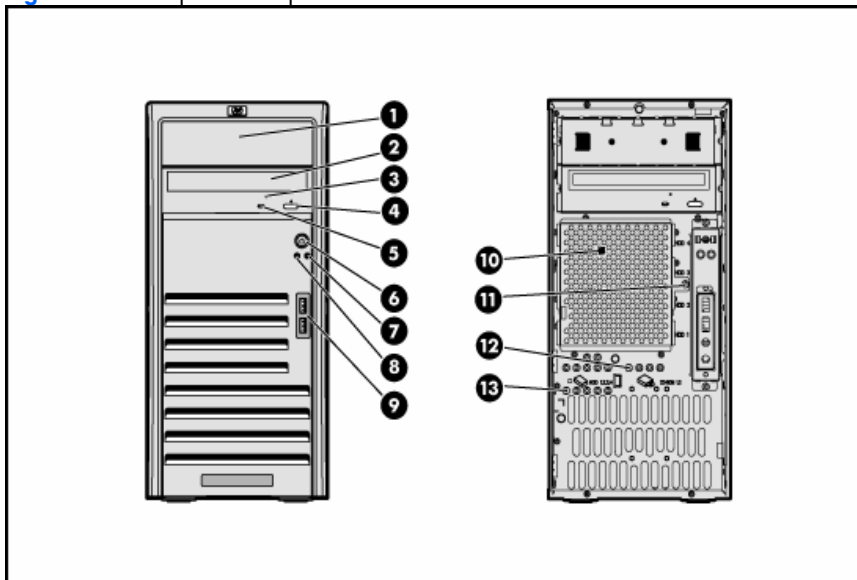


Item	Description
1	Half height common bay
2	Optical drive
3	Optical drive activity indicator
4	Optical drive activity eject button
5	Optical drive manual eject hole
6	Power button
7	Power LED indicator
8	Drive activity indicator
9	Front USB 2.0 ports

Item	Description
10	Hard drive EMI shield
11	Hard drive EMI shield screw
12	Optical drive spare screws
13	Hard drive spare screws

Rear panel components

Figure 49 Rear panel components

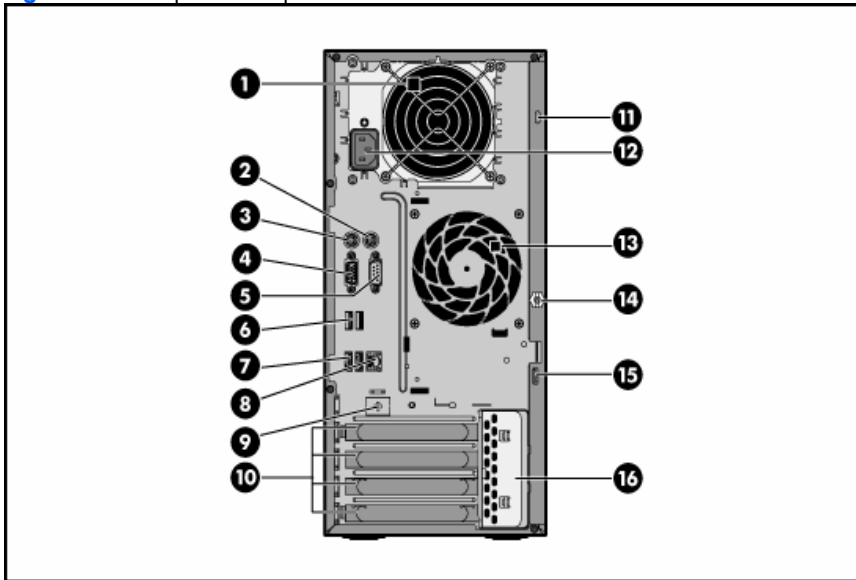


Item	Description
1	PSU fan
2	PS/2 mouse port
3	PS/2 keyboard port
4	VGA port
5	Serial port A
6	Rear USB 2.0 port
7	Rear USB 2.0 port
8	LAN port (RJ-45)
9	HP LO100c Remote Management Card Port
10	PCI slot covers
11	Kensington lock notch
12	Power supply outlet
13	Rear system fan

Item	Description
14	Thumbscrew for access panel
15	Padlock tab
16	PCI slot cover lock

System board components

Figure 50 System board components

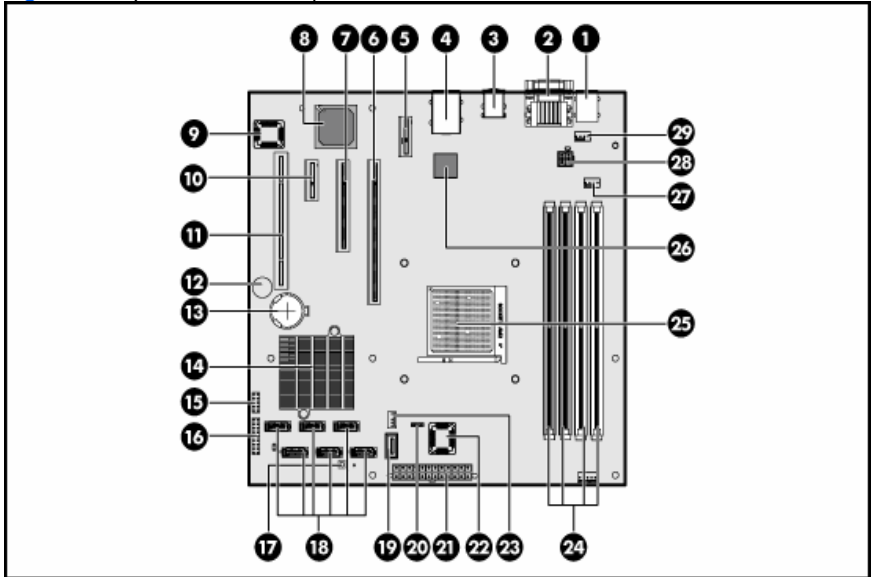

Item	Designator	Description
1	J68	Top: PS/2 mouse port Bottom: PS/2 keyboard port
2	CNN1	Top: Serial port A Bottom: VGA port
3	CN8	USB 2.0 port
4	J19	Top: LAN port Bottom: USB 2.0 port
5	J12	IPMI slot
6	J9	PCI-E x16 slot
7	J8	PCI-E x8 slot
8	U1044	Server Engines Chip
9	J11	SMC FW
10	J7	PCI-E x1 slot
11	J6	PCI slot
12	BZ1	Internal Buzzer

Item	Designator	Description
13	BT1	Battery
14	U7	NVIDIA NFP3400
15	USB_H1	Front USB connector
16	P5	Front panel connector
17	SW2	Clear CMOS
18	SATA1~SATA6	SATA connectors
19	J3	Internal USB connector
20	J45	TPM connector
21	J16	24-pin power connector
22	U37	System BIOS
23	J4	Internal USB connector for tape drive
24	1A/2A/3B/4B	DDRII slots
25	U1	Processor socket
26	U36	LAN chip
27	CPU_FAN	4-pin cooler connector
28	PWR2	4-pin power connector
29	P14	4-pin rear fan connector

Jumpers – Password and Boot Block

The system board password (P137) and boot block (JP4) jumpers. Table 5 describes the jumper settings.

Table 5 System configuration switch settings

Jumper	Status	Function
P137	On(default)	Password enabled
	Off	Password reset/disabled
JP4	On	Boot block protected
	Off(default)	Boot block unprotected

Clear CMOS button (SW2)

The system board has a system configuration (CMOS) button (SW2). To clear system configuration, remove AC power cord and press the CMOS button for seconds.

LED indicators

This section contains illustration and descriptions of internal and external status LED indicators located on the:

- Front panel
- Rear panel
- System board

These LED indicators aid in problem diagnosis by indicating the status of system components and operations of the server.


Front panel LED indicators

The front panel LED indicators allow constant monitoring of basic system functions while the server is operating.

Optical drive activity LED indicator

The optical drive has an activity indicator that indicates when the drive is reading media.

Figure 51 Optical drive activity LED indicator location

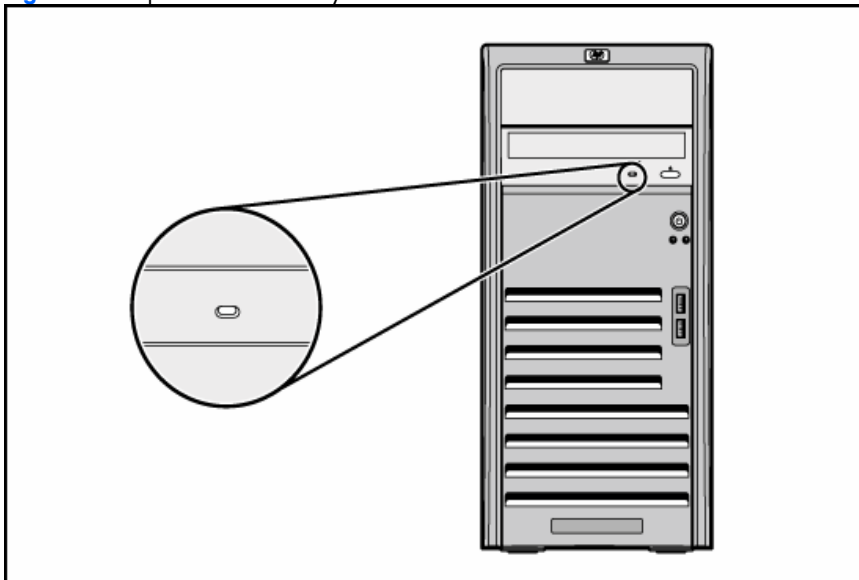

Activity states for the optical drive are as follows:

- Flashing green – Ongoing drive activity
- Off – No drive activity

Power/system health LED indicator

The power status and health condition of the server is indicated by the bicolor LED indicator found on the front panel.

Figure 52 Power/system health LED indicator

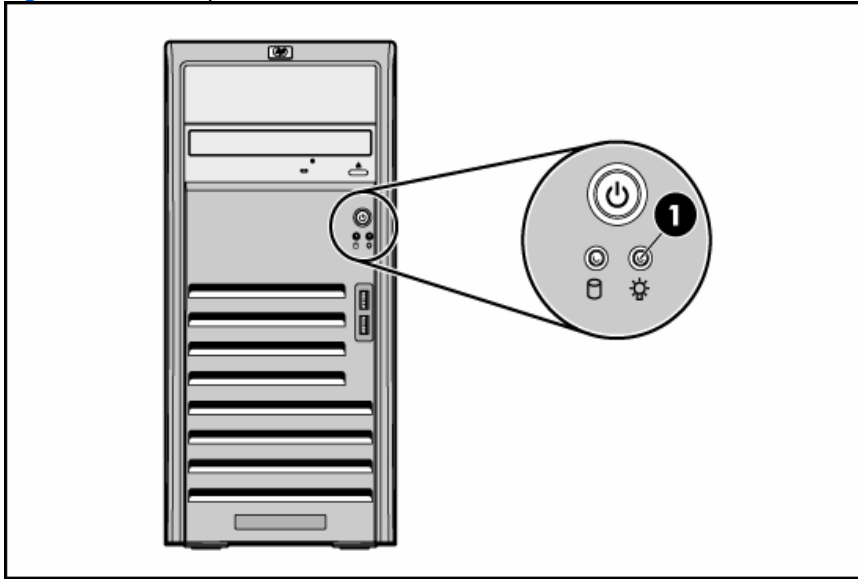



Table 6 Power/system health LED indicator status

Component	Status	Description
Power/system health LED indicator	Steady green	The server is operating normally.
	Steady Amber	The server is shut down, but with A/C power plugged in or the server hibernates.
	Off	The server is system off without A/C power.

Hard drive activity LED indicators

The status of hard drives installed in the server is indicated by the drive activity LED indicator located on the front panel of the server.

Figure 53 Drive activity LED indicator

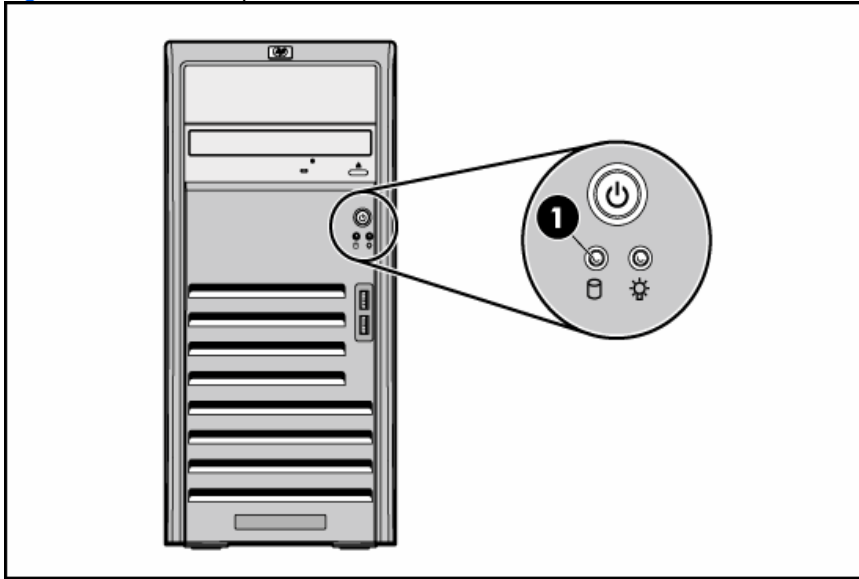

Activity states for hard drives are as follows:

- Flashing green – Ongoing drive activity
- Off – No drive activity

Rear panel LED indicators

The LAN port on the rear panel has two LED indicators that allow monitoring of network activity.

Figure 54 LAN/LED indicators location

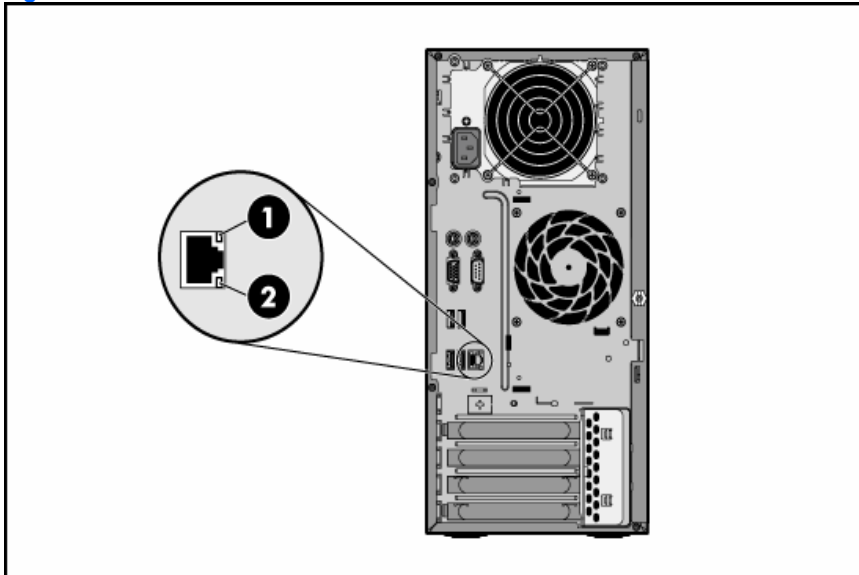


Table 7 LAN/LED indicator states

Item	Component	Status	Description
1	LAN activity status LED indicator	Flashing green	Ongoing network data activity.
		Off	No network data activity or no connection.
2	LAN network speed LED indicator	Steady green	The LAN connection is using a GbE link.
		Steady amber	The LAN connection is using 10Mbps/100 Mbps link.
		Off	No connection.

System board LED indicator

The system board contains one internal status LED indicator for use during troubleshooting operations.

Figure 55 System board LED indicator

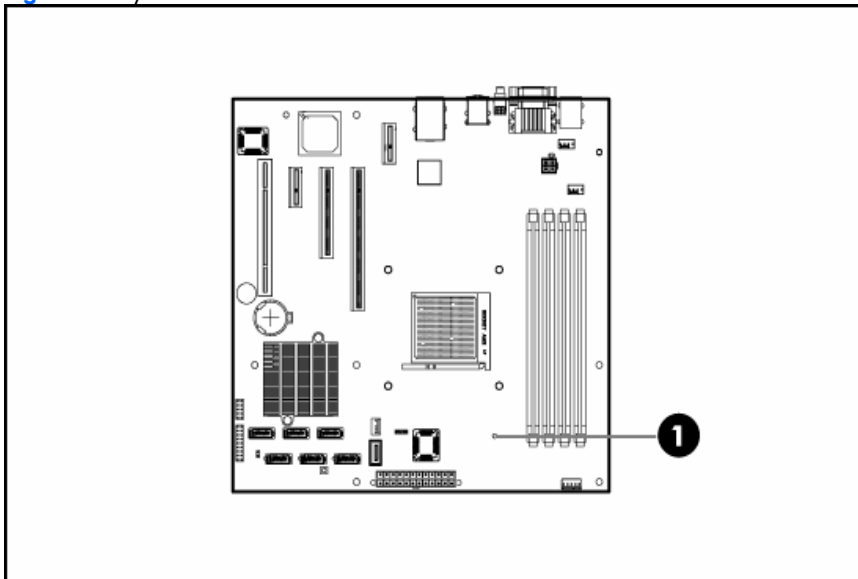


Table 8 System board LED indicator

Item	Component	Status	Description
1	3.3V aux power indicator	Off	The server is powered off (AC power disconnected).
		Green	AC power action.

Diagnostic tools and Setup Utilities

This chapter provides an overview of the Power-On Self-Test (POST), the POST error messages, and BIOS, SAS and SATA setup utilities.

BIOS Software

The server uses BIOS to boot up the system. BIOS software is a ROM-based firmware that allows reliability, manageability, and connectivity for server platforms. This software contains a set of programs permanently stored in an EEPROM chipset located on the system board. These programs assist in managing, initializing, and testing the hardware devices installed on the computer. BIOS software allows you to:

- Perform configuration from the BIOS Setup Utility
Using the Setup Utility, you can install, configure, and optimize the hardware devices on the system board. In addition, you can set various features such as serial console redirection, PXE boot, and much more.
- Initialize hardware at boot up using POST routines
During power-on or warm reset, the BIOS perform Power-On Self-Test (POST) routines to test system components, to allocate resource for various hardware devices, and to prepare the system to boot to various operating systems.

BIOS Setup Utility

The HP server BIOS Setup Utility is used to configure five primary menu selections:

- Main
- Advanced
- Boot
- Security
- Exit

Accessing the BIOS Setup Utility

1. Turn on the monitor and server. If the server is already turned on, save your data and exit all open applications, then restart the server.
2. When the HP logo is displayed during POST, press **F10** into BIOS Setup Utility. If you fail to press **F10** before POST is completed, you will need to restart the server.
3. The first page displayed is the Main menu showing the Setup Utility menu bar. Use the left (←) and right (→) arrow keys to move between selections on the menu bar. Use the up (↑) and down (↓) arrow keys to select items within a menu.


Navigating through the Setup Utility

Use the keys listed in the legend bar on the right of the Setup screen to navigate through the various menu and submenu screens of the Setup Utility. Table 9 lists these legend keys and their respective functions.

Table 9 Setup Utility Navigation Keys

Key	Function
← and →	To move between selections on the menu bar.
↑ and ↓	To move the cursor to the field you want. The currently selected field is highlighted. The right side of each menu screen displays a field help panel—Item Specific Help panel. This panel displays the help text for the currently selected field. It updates as you move the cursor to each field.
<+>, <->	To select a value for the currently selected field (only if it is user-configurable). A parameter that is enclosed in square brackets is user-configurable. Grayed-out parameters are not user-configurable for one of the following reasons: <ul style="list-style-type: none">• The field value is auto-configured or auto-detected.• The field value is informational only.• The field is password-protected.
Enter	To select a field value or display a submenu screen. Displays more option for items marked with ►
Esc	If you press this key: <ul style="list-style-type: none">• On one of the primary menu screens, the Exit menu displays.• On a submenu screen, the previous screen displays.• When you are making selections from a pop-up menu, the pop-up closes without making a selection.
F1	To bring up the General Help window. The General Help window describes other Setup navigation keys that are not displayed on the legend bar.
F2, F3	To change BIOS Setup Utility screen colours.
F7	Discard any changes you have made.
<Page Up> and <Page Down>	Moves the cursor to the first/last item (each menu). The item will be highlighted.
<Home> and <End>	Moves the cursor to the first/last item (each menu). The item will be highlighted.
F9	To load default system values.
F10	To save changes and close the Setup Utility.

Figure 56 Setup Utility General Help screen

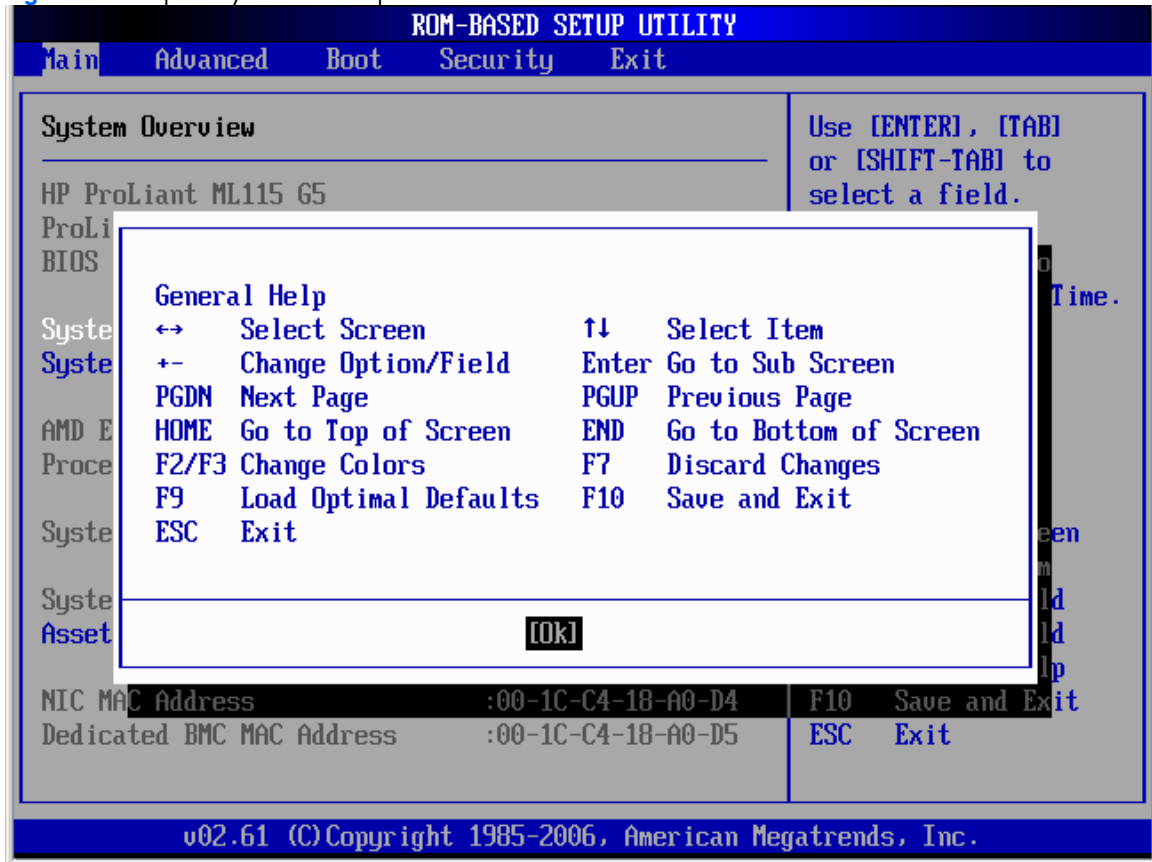

Press **F1** to get the general help message box.

Setup Utility Menu Bar

The BIOS Setup Utility provides a menu bar with the menu selections. The menu bar choices are described in the topics below.

Main Menu

Figure 57 Main menu of the BIOS Setup Utility


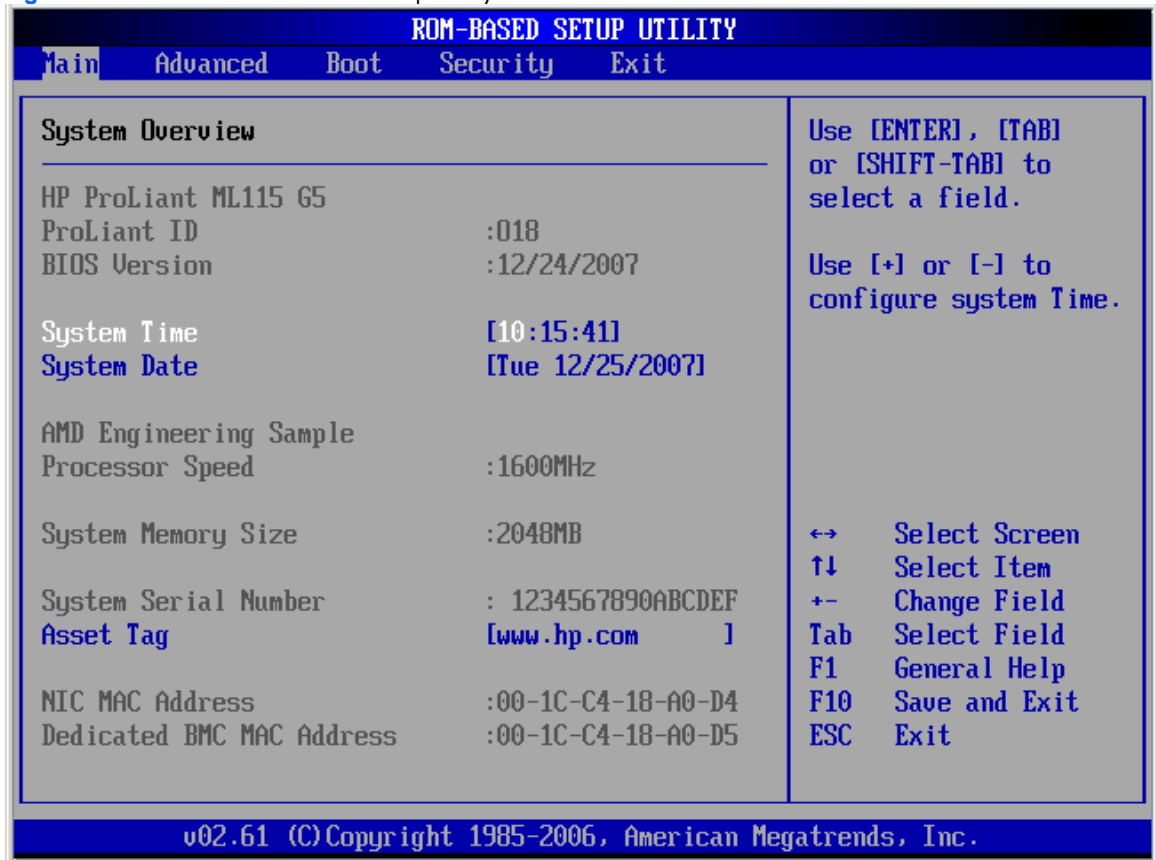


Figure 58 Main menu of the BIOS Setup Utility

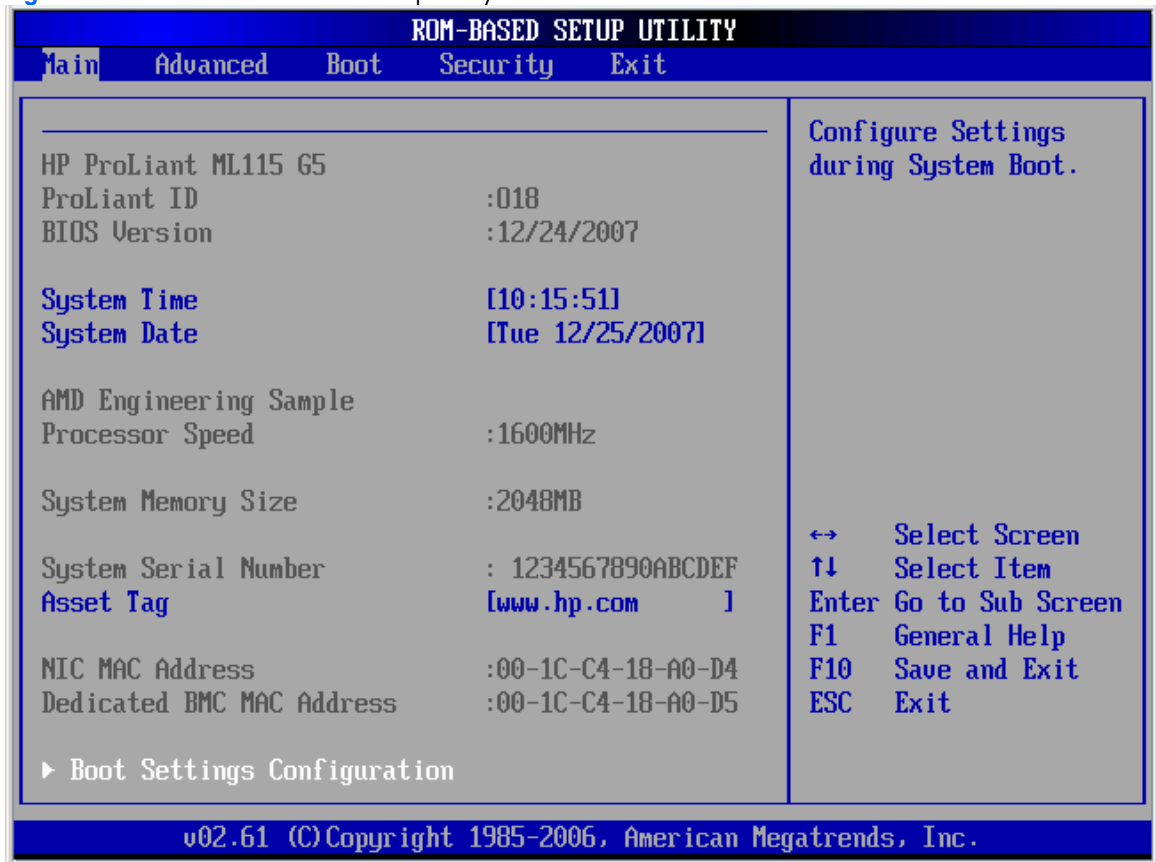


Use this menu to set the system time and date, and configure the following items:

- View BIOS build date and version.
- View CPU type / CPU speed.
- View System memory size.
- View System serial number.
- View MAC address for the embedded NIC.
- Set Server Asset Tag.
- Set system time and date.
- Set boot features:
 - Enable or Disable the BIOS summary display.
 - Turn on or off Bootup Num-Lock.
 - Set restore on AC power loss options, such as last state, power off, and power on.
 - If BIOS displays an error message, set POST F1 Prompt for selections, such as delayed, enabled, or disabled.

Advanced Menu


Figure 59 Advanced menu of the BIOS Setup Utility

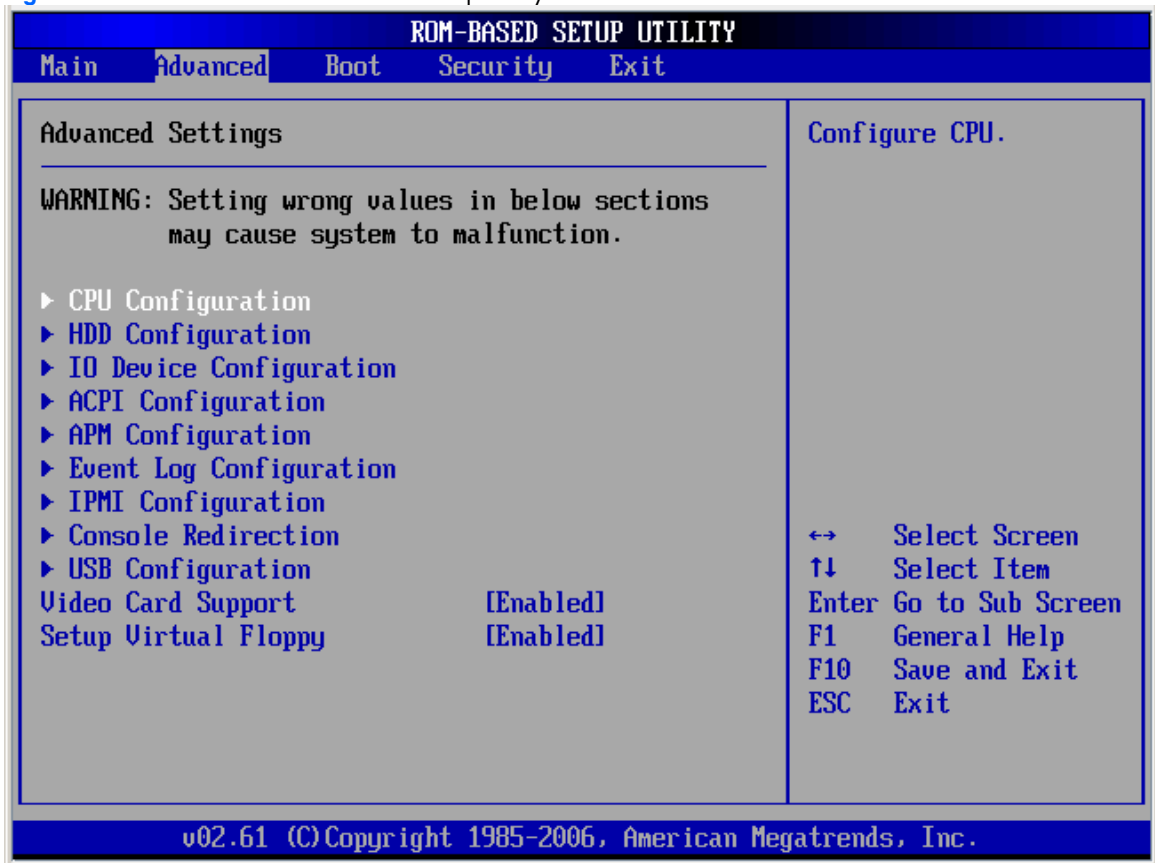

⚠ WARNING: Incorrect settings may cause the server to malfunction. To correct the settings, press F9 key to restore the default settings.

- **CPU Configuration** -- Configure and view the current CPU configuration and settings.
- **HDD Configuration** -- Configure the hard disk setting of the server.
- **IO Device Configuration** -- Configure Super IO chipset SCH4307.
- **ACPI Configuration** -- Section for Advanced ACPI configuration.
- **APM Configuration** -- Section for Advanced APM configuration.
- **Event Log Configuration** -- Mark as read, clear or View Event Log.
- **IPMI Configuration** -- IPMI Configuration including server monitoring and event log.
- **Console Redirection** -- Configure options for Console Redirection.
- **USB Configuration** -- Configure the USB support.

Figure 60 IPMI submenu of the BIOS Setup Utility

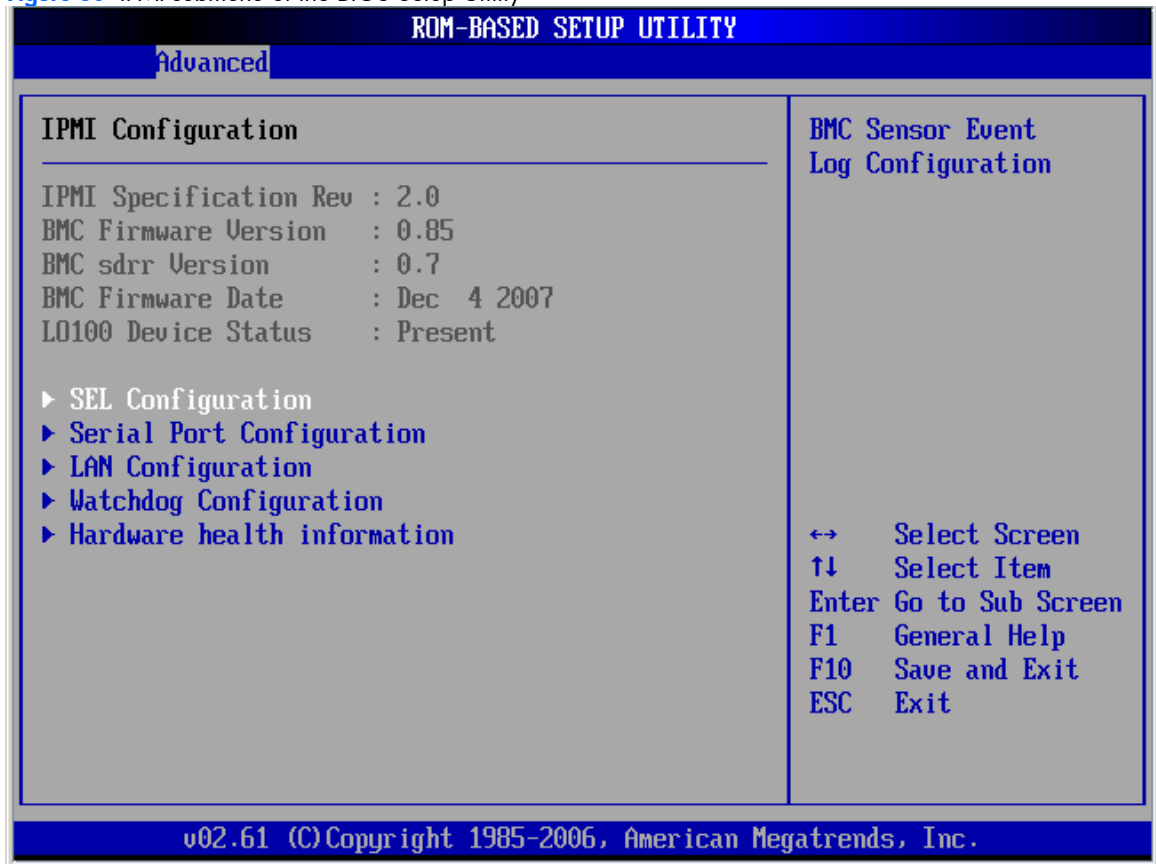

Boot menu

Figure 61 Boot menu of the BIOS Setup Utility



Use this menu to configure the boot priority.

Set boot device priority. By default, the server searches for boot devices in the following order:

1. CD-ROM/DVD-ROM
2. Removable Devices
3. Hard Disk Drives
4. Embedded NIC

Security Menu

Figure 62 Security menu of the BIOS Setup Utility 1



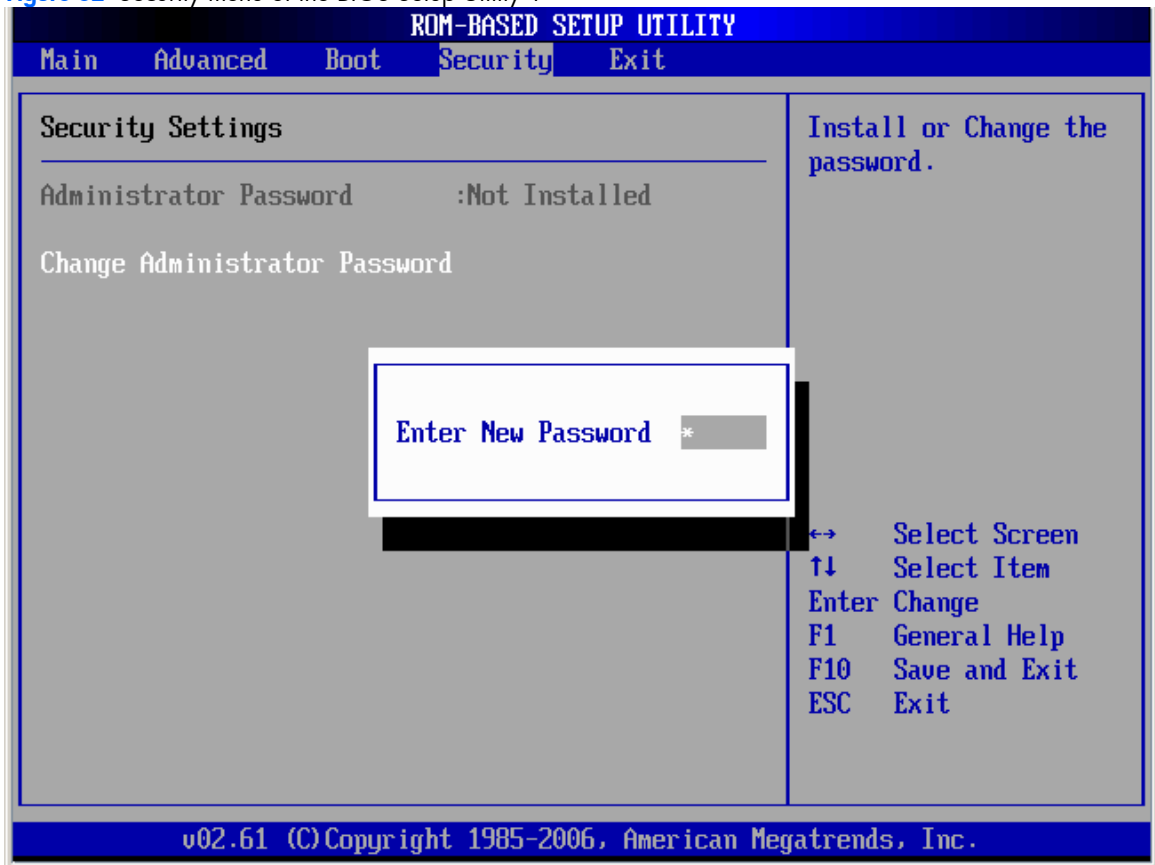


Figure 63 Security menu of the BIOS Setup Utility 2

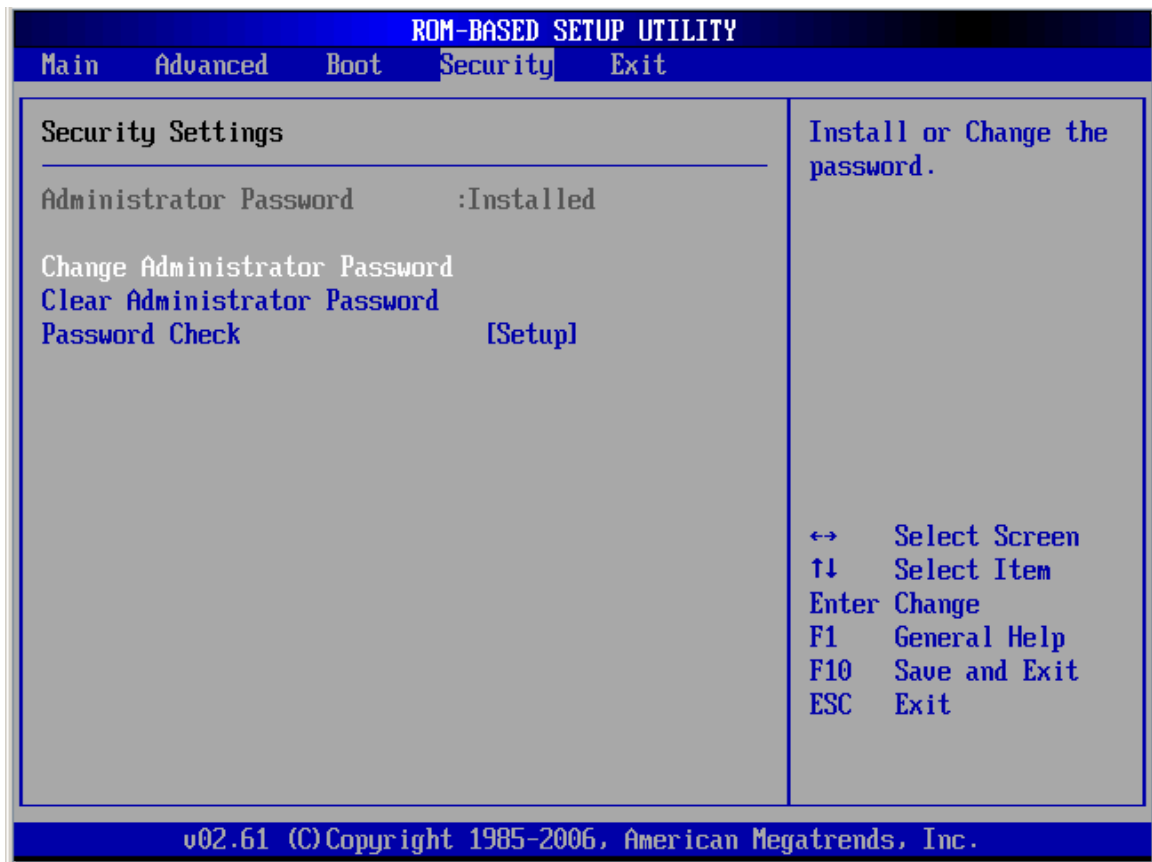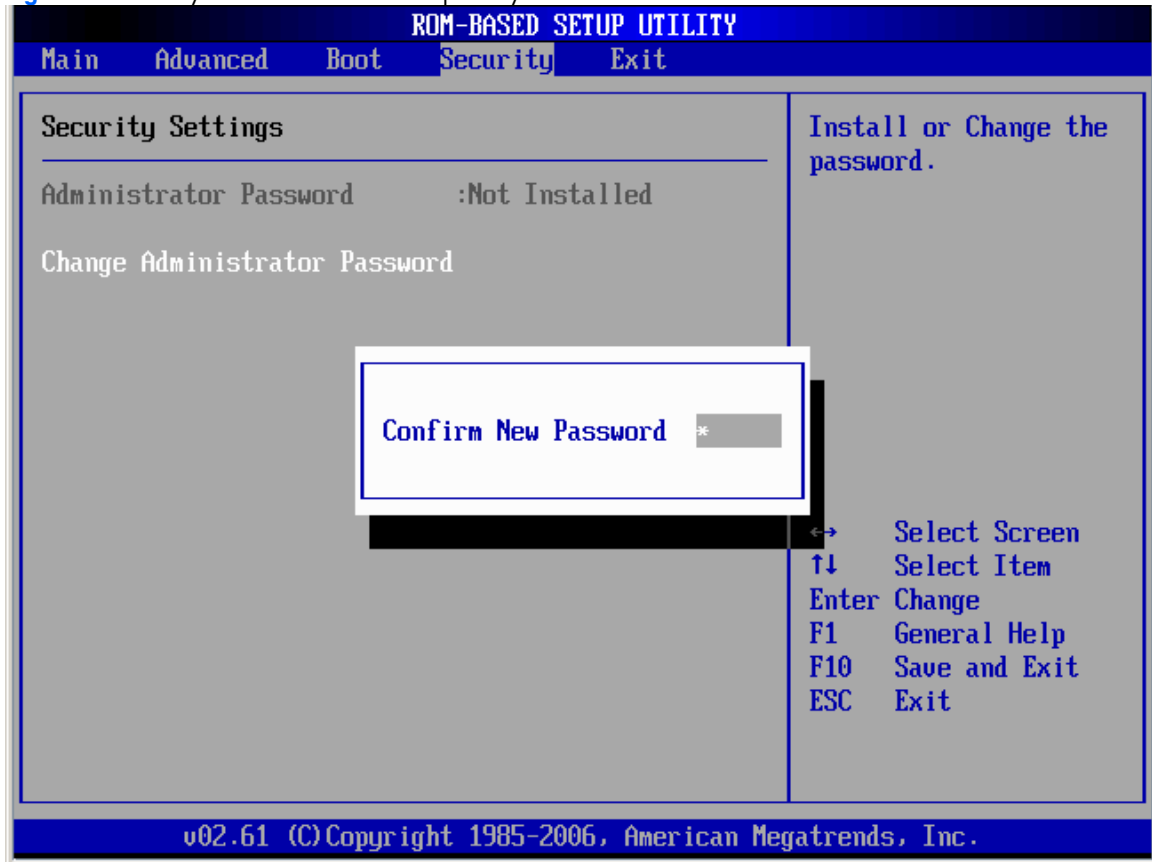

Use this menu to configure the following items:


- **Administrator Password** -- Display if an administrator password is Set or Not.
- **Change Administrator Password** -- Allows you to access and change all settings in the Setup Utility. The administrator password allows you to configure access for system users.

To set a new administrator password:

1. In the Security screen, select a set password field **Change Administrator Password** and then press **Enter**.
2. Type a new password in the **Enter New Password** box.
3. The password may consist of up to six characters. Alphanumeric characters (A-Z, a-z, 0-9) are recommended to avoid system error.
4. Retype the password to verify the first entry and then press **Enter**.
5. Press **F10** to close the Setup Utility.
6. After setting the password, Setup automatically sets the password check to **Setup**.

Exit menu

Figure 64 Exit menu of the BIOS Setup Utility

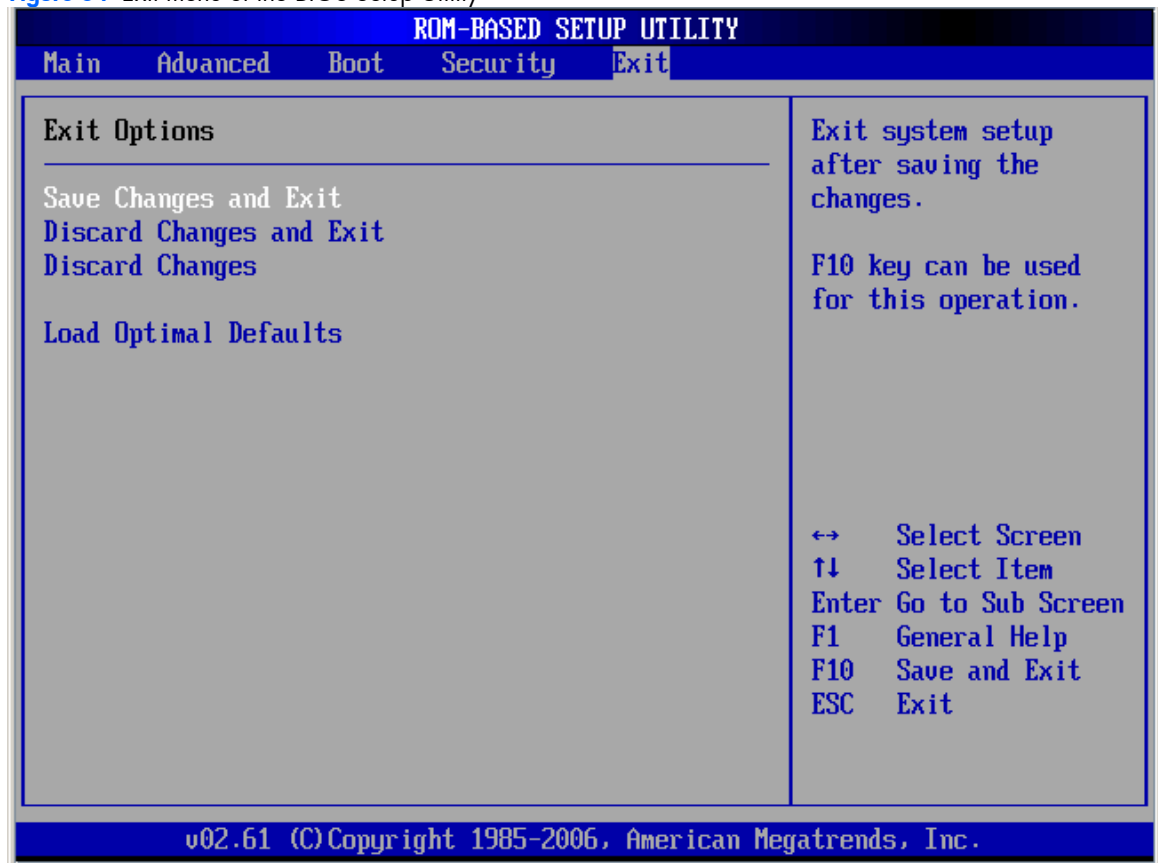

Use this menu to save changes or discard changes. When you save and exit, the server reboots.

- **Save Changes and Exit** -- Save the changes you have made and exit the BIOS Setup Utility. (You can also press **F10** key.)
- **Discard Changes and Exit** -- Exit the BIOS Setup Utility without saving the changes you have made. (You can also press **Esc** key.)

- **Discard Changes** -- Discard any changes you have made. (You can also press **F7** key.)
- **Load Optimal Defaults** -- Load the factory default values for all items. (You can also press **F9** key.)

BIOS Update

Perform the steps below to update BIOS:

1. Download the Smart Component (SPxxxxx.exe) to a directory on your hard drive.
2. Execute (SPxxxxx.exe) and followed with direction to complete the steps. "ProLiant Flash Update" interface will appear.
3. Select items which need to execute:
 - Create a bootable ROMPaq diskette
 - Create a bootable ROMPaq USB Key
 - Create a bootable ROMPaq CD
 - ROMPaq Diskette Flat Files
 - Create a label for the ROMPaq diskette
 - Network ROM Flashing Capabilities
4. Reboot ML115 G5 Server with one of the above bootable devices and make sure the BIOS setting allows booting from the USB disk.
5. Follow the on-screen instructions to finish the flashing of the BIOS.

Clear CMOS

You may need to clear the Setup configuration values (CMOS) if the configuration has been corrupted, or if incorrect settings made in the Setup Utility have caused error messages to be unreadable.

To clear CMOS:

1. Perform the Pre-Installation Procedure.
2. If necessary, remove any accessory boards or cables that prevent access to the system configuration switch.
3. Locate the system configuration button (SW2) on the system board.
4. Press the button. AC power must not be connected.
5. Perform the Post-installation instructions.
6. During POST, press **F10** to access the Setup Utility.
7. Load setup defaults by pressing **F9**.
8. Set time, date, and other system values.
9. Press **F10** to close the Setup Utility.

NOTE: Clearing CMOS restore all system configurations and password default settings.

Power-On Self-Test (POST)

Before you can use a server, all devices must be tested and initialized, and the operating system must be bootstrapped to the memory. This is referred to as Power-On Self-Test or POST. POST is a series of diagnostic tests that checks firmware and hardware components on the system to ensure that the server is properly functioning. This diagnostic function automatically runs each time the server is powered on.

These diagnostics, which reside in the BIOS ROM, isolate server-related logic failures and indicate the board or component that you need to replace, as indicated by the error messages. Most server hardware failures will be accurately isolated during POST. The number of tests displayed depends on the configuration of the server.

During POST you can:

- Press **ESC** to skip the HP logo and go to POST boot progress display system summary screen.
- Press **F10** to access the Setup Utility.
- Press **F12** to request a network boot (PXE).

POST Error Indicators

When POST detects a system failure, it displays a POST error message.

POST Errors Message Definition

Whenever a non-fatal error occurs during POST, an error message describing the problem appears onscreen. These error messages are displayed in normal video (white text on black background), and show the details of the error. The following is an example of a POST error message:

```
012 --- CMOS Date/Time not set
```

Table 10 lists the most common POST error messages with corresponding troubleshooting recommendation. HP recommends that you correct the error, even if the server appears to boot successfully.

Table 10 POST Error Messages

Error-Code	Error Message	Description / Corrective Action
000	Timer Error	Indicates an error while programming the count register of channel 2 of the 8254 timer. This may indicate a problem with system hardware. Requires repair of the system board.
003	CMOS Battery Low	CMOS Battery is low. This message usually indicates that the CMOS battery needs to be replaced. It could also appear when the users intentionally discharge the CMOS battery.
004	CMOS setting Wrong	CMOS settings are invalid. This error can be resolved by using F9 to load optimal default in the Setup Utility.
005	CMOS checksum bad and boot in a safe configuration please reboot again for optimal default settings.	CMOS contents failed the Checksum check. Indicates that the CMOS data has been changed by a program other than the BIOS or that the CMOS is not retaining its data due to malfunction. This error can be resolved by using F9 to load optimal default in the Setup Utility.

Table 10 POST Error Messages

Error-Code	Error Message	Description / Corrective Action
012	CMOS Date/Time not Set	The CMOS Date and/or Time are invalid. This error can be resolved by readjusting the system time in the Setup Utility.
048	Password check failed	Password is incorrect after retried a few times. Users might need to reset the password.
04D	Primary Master Hard Disk Error	The IDE/ATAPI device configured as Primary Master could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
04E	Primary Slave Hard Disk Error	The IDE/ATAPI device configured as Primary Slave could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
04F	Secondary Master Hard Disk Error	The IDE/ATAPI device configured as Secondary Master could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
050	Secondary Slave Hard Disk Error	The IDE/ATAPI device configured as Secondary Slave could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
051	Master Hard Disk Error	The IDE/ATAPI device configured as Master in the 3rd IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
052	Master Slave Disk Error	The IDE/ATAPI device configured as Slave in the 3rd IDE controller could not be properly initialized by the BIOS. This message is typically displayed When the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
05E	Password check failed	If user input incorrect password more than three times, then display this error information and continue to boot.
	Uncorrectable memory error	System halts after displaying this message. If the problem persists, contact HP Customer Support.
	Microcode Error	BIOS could not find or load the CPU Microcode Update to the CPU. The message is most likely to appear when a new CPU is installed in a system board with outdated BIOS. In this situation, you must update the BIOS to include the Microcode Update for the new CPU.
	Checking NVRAM Update Failed	BIOS could not write to the NVRAM block. This message appears when the FLASH part is malfunctioning.

Table 10 POST Error Messages

Error-Code	Error Message	Description / Corrective Action
	Operating system not found	Operating system cannot be located on any of the boot drives Verify that the priority boot drive has power and that the IDE cable is connected properly. Verify that the desired boot drive has power. Verify that the IDE cable is securely plugged into the respective system board connectors. Verify that the boot device is enabled in the Setup Utility. Verify that the boot device has an operating system installed. If the problem persists, contact your HP Customer Support provider.
601	BMC Not Responding	BMC not responding, you can load the optimal default value, or you must change the LO100 card.
603	CPU Fan Missing	CPU fan is not installed, user should install the CPU fan. This could cause thermal issues with the CPU.
604	Rear Fan Missing	System fan is not installed, user should install the system fan.
610	Temperature violation Detected	Wait 5 minutes for system to cool. Press ESC key is not recommended as system may shutdown unexpectedly.
611	System Event Log full	You must enter BIOS SETUP UTILITY and then Clean the System Event Log.

POST Related Troubleshooting

Perform the following procedures when POST fails to run, displays error messages.

If the POST failure is during a routine boot up, check the following:

- All external cables and power cables should be firmly plugged in.
- The power outlet to the server should be connected and works correctly.
- The server and monitor are both turned on. The bicolour status LED indicator on the front panel must be lit up green.
- The monitor's contrast and brightness settings are correct.
- All internal cables are properly connected and all boards firmly seated.
- The processor is fully seated in its socket on the system board.
- The cooler assembly is properly installed on top of the processor.
- All memory modules are properly installed.
- If you have installed a PCI accessory board, verify that the board is firmly seated and any switches or jumpers on the board are properly set. Refer to the documentation provided with the accessory board.
- All internal cabling and connections are in their proper order.
- If you have changed any switches on the system board, verify that each is properly set.

Physical and Operating Specifications

This chapter provides physical and operating specifications for the HP ProLiant ML115 G5 server. Specifications include:

System Unit

Table 11 Hardware Specifications

Item	Components
Processor socket	AMD socket AM2
Processor support	AMD Opteron 1XXX series and Athlon 64 processor
Chipset	NVIDIA NFP3400
Super I/O chipset	Integrated in the Server Engines Chip
Hardware monitoring device	Integrated in the Server Engines Chip
Gigabit Ethernet controller	Broadcom 5722 GbE LAN Chip
Memory controller	Integrated in CPU
SATA and IDE controllers	Integrated NVIDIA NFP3400
VGA controller	Integrated in the Server Engines Chip
I/O subsystem	<ul style="list-style-type: none">• One PCI-E x8 lane with x8 slot• One PCI-E x16 lane with x16 slot• One PCI-E x1 lane with x1 slot• One 32-bit/33-MHz 3.3V PCI bus slot
Memory	Four DDRII DIMMs
Storage Bay	<ul style="list-style-type: none">• Two half-height storage bays for DVD-ROM drive• Four 3.5-in bays for non-hot plug SAS or non-hot plug SATA HDD
I/O ports	PS/2 keyboard port, PS/2 mouse port, USB 2.0 ports (two front ports, four rear ports, and two internal connectors), One video port, One serial port, and One GbE LAN port.
Status LED indicators	
Front panel	<ul style="list-style-type: none">• Power/system health status• Hard drive activity
Rear panel	<ul style="list-style-type: none">• LAN activity• LAN link status
System board	<ul style="list-style-type: none">• Auxiliary power indicators
Power supply unit (PSU)	ATX 365W
Thermal solution	<ul style="list-style-type: none">• One system fan• One processor cooler

Table 12 Physical Dimensions

Item	Description
System board platform	Micro ATX (Advanced Technology Extended)
System board dimension	9.6" x 9.6"
Server dimensions	
Height	367 mm (14.5 in)
Width	175 mm (6.9 in)
Length	With bezel – 426 mm (16.8 in) Without bezel – 386 mm (15.2 in)
Server weight	<ul style="list-style-type: none"> • Basic configuration (excludes keyboard and mouse) – approximately 10.5 kg (23.3 lb) • Fully loaded configuration (includes keyboard, mouse, kits in the box) – approximately 18 kg (40 lb)

Table 13 Environmental Specifications

Item	Description
Temperature:	
Operating	+10 to +35° (+50 to +95°F)
Shipping	-30 to 60° (-22 to 140°F)
Relative humidity:	
Operating	10% to 90% (non-condensing)
Non-operating	5% to 95%
Acoustic noise:	
Idle (Fixed disk drives spinning)	
L Wad (BELS)	5.39
L pA (dBA)	35.72
Operating (Random seeks to fixed disks)	
L Wad (BELS)	5.89
L pA (dBA)	38.36

Table 14 Power Supply Specifications

Item	Description
Dimensions (H x W x D)	150 mm x 97.6 mm x 153.7 mm
Weight (approximate)	1.78 kg
Input requirements:	
Rated input voltage	100-127VAC/200-240VAC
Normal line voltage	115VAC, 230VAC
Line frequency	47 – 63 Hz
Rated input current	Less than 6A at 100VAC, 3A at 200VAC
BTU rating	N/A
Power supply output power:	
Rated steady state power	365W
Maximum peak power	385W
Temperature range:	
Operating	+10°C to +50°C
Shipping	-40°C to +66°C
Relative humidity:	
Operating	8% to 90% non-condensing for operation
Non-operating	Up to 95% for non operation

Index

A

- AC power
 - power-down procedures, 28

B

- BIOS Setup Utility
 - accessing, 69
- BIOS software
 - Overview, 69

C

- CSR (customer self repair), 5
- customer self repair (CSR), 5

D

- Diagnostic tools and Setup Utilities
 - BIOS Setup Utility, 86
 - BIOS software, 69
 - BIOS update, 80
 - clear CMOS, 80
 - POST, 81

E

- electric shock
 - symbol, 27
 - warning, 27

H

- hardware configuration
 - references, 25
- hardware monitoring
 - onboard controller, 84
- hardware specifications
 - chipset, 84
 - hardware monitoring controller, 84
 - I/O ports, 84
 - I/O subsystem, 84
 - LAN controller, 84
 - memory, 84
 - optional media storage, 84
 - power supply unit, 84
 - processor socket, 84
 - processor support, 84
 - status LED indicators, 84

- super I/O chipset, 84
- thermal solution, 84
- VGA controller, 84

hazardous conditions. *See* symbols on equipment

- hazardous energy circuits
 - symbol, 27

height, 85

- hot surface
 - symbol, 27
 - warning, 27

HP

- authorized reseller, 24
- contact information, 24
- technical support, 24
- technical support requirements, 24

I

- I/O subsystem, 84
- improper airflow
 - caution, 27

L

- LAN controller, 84
- length, 85
 - with bezel, 85
 - without bezel, 85

M

- media storage
 - optional, 84
- memory controller, 84
- memory modules
 - module orientation, 47

O

- onboard controllers
 - LAN, 84
 - memory controller, 84
 - storage controller, 84
 - VGA, 84
- optical drive
 - activity indicator, 65

P

- PCI devices
 - bus channels, 47
- Peripheral Component Interconnect. See PCI devices
- physical dimensions
 - server, 85
 - system board, 85
- Power-On Self Test
 - POST error indicators, 81
 - POST related troubleshooting, 83
 - recoverable POST errors, 81
- processor
 - applying thermal grease, 43
- processor socket
 - specification, 84
- PSU
 - type, 84

S

- server dimensions
 - height, 85
 - length, 85
 - width, 85
- server warnings and cautions, 27
- Setup Utility menu bar
 - advanced menu, 74
 - main menu, 72
 - security menu, 77
- specifications
 - physical and operating, 84
- status LEDs
 - HDD activity, 67

- LAN, 67
 - optical drive activity, 65
 - system board LEDs, 68
- storage controller, 84
- super I/O chipset, 84
- symbols on equipment, 27
- system board
 - dimensions, 85
 - LEDs, 68
 - platform, 85
- system covers
 - top cover, 29
- system health
 - hardware monitoring chipset, 84
- System Unit
 - specifications, 84

T

- the IPMI card bracket dummy
 - removing, 60
- thermal solution, 84
- top cover
 - reinstalling, 29

V

- VGA controller, 84

W

- warranty, 5
- weight
 - basic configuration, 85
 - full configuration, 85
- width, 85