








## **Cisco Unified IP Phone 7965G and 7945G Phone Guide for Cisco Unified Communications Manager 6.1 (SCCP and SIP)**


### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883



## Common Phone Tasks

View online help on phone	Press  .
Place a call	Go off-hook before or after dialing a number.
Redial a number	Press <b>Redial</b> . Or press the Navigation button while on-hook to see your Placed Calls log.
Switch to handset during a call	Pick up the handset.
Switch to speaker or headset during a call	Press  or  , then hang up the handset.
Mute your phone	Press  .
Use your call logs	Press  to choose a call log. To dial, highlight a listing and go off-hook.
Edit a number	Press <b>EditDial</b> , << or >>.
Hold/resume a call	Press <b>Hold</b> or <b>Resume</b> .
Transfer call to new number	Press <b>Transfer</b> , enter the number, then press <b>Transfer</b> again.
Place an intercom call	Press <b>intercom button</b> , <b>enter a number if necessary</b> , and <b>speak after you hear the tone</b> .
Start a standard (ad hoc) conference call	Press <b>more &gt; Confrn</b> , dial the participant, then press <b>Confrn</b> again.

 Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)  
© 2007 Cisco Systems, Inc. All rights reserved.

OL-14622-01



### QUICK REFERENCE



## Cisco Unified IP Phone 7965G and 7945G Phone Guide for Cisco Unified Communications Manager 6.1 (SCCP and SIP)





















Softkey Definitions  
Phone Screen Icons  
Button Icons  
Common Phone Tasks











## Softkey Definitions

<b>AbbrDial</b>	Dial using a speed dial index number
<b>Answer</b>	Answer a call
<b>Back</b>	Return to the previous Help topic
<b>Barge</b>	Add yourself to a call on a shared line
<b>CallBack</b>	Receive notification when a busy extension becomes available
<b>Cancel</b>	Cancel an action or exit a screen without applying changes
<b>cBarge</b>	Add yourself to a call on a shared line and establish a conference
<b>CFwdALL</b>	Setup/cancel call forwarding
<b>Clear</b>	Delete records or settings
<b>Close</b>	Close the current window
<b>ConfList</b>	View conference participants
<b>Confrn</b>	Create a conference call
<b>Delete</b>	Remove characters to the right of the cursor when using <b>EditDial</b>
<b>Details (SCCP only)</b>	Open the Details record for a multiparty call in the Missed Calls and Received Calls logs
<b>Dial</b>	Dial a phone number
<b>DirTrfr (SCCP only)</b>	Transfer two calls to each other
<b>DND</b>	Turn on/off Do Not Disturb (DND)
<b>EditDial</b>	Edit a number in a call log
<b>EndCall</b>	Disconnect the current call or the current intercom call
<b>Erase</b>	Reset settings to their defaults
<b>Exit</b>	Return to the previous screen










<b>GPickUp</b>	Answer a call ringing in another group
<b>iDivert</b>	Divert or redirect a call to a voice message system
<b>Join (SCCP only)</b>	Join together existing calls to create a conference
<b>Links</b>	View related Help topics
<b>Main</b>	Display the Help main menu
<b>MeetMe</b>	Host a Meet-Me conference call
<b>more</b>	Display additional softkeys
<b>New Call</b>	Make a new call
<b>OPickUp</b>	Answer a call ringing in an associated group
<b>Park</b>	Store a call using Call Park
<b>PickUp</b>	Answer a call in your group
<b>QRT</b>	Submit call problems to the system administrator
<b>Redial</b>	Redial the most recently dialed number
<b>Remove</b>	Remove a conference participant
<b>Resume</b>	Resume a call on hold
<b>RmLstC</b>	Drop the last party added to a conference call
<b>Save</b>	Save the chosen settings
<b>Search</b>	Search for a directory listing
<b>Select</b>	Select a menu item or call
<b>Transfer</b>	Transfer a call
<b>Update</b>	Refresh content
<b>VidMode (SCCP only)</b>	Choose a video display mode
<b>&lt;&lt;</b>	Delete entered characters
<b>&gt;&gt;</b>	Move through entered characters

## Phone Screen Icons

Line and Call Status	
	Call Forwarding enabled
	Call on hold
	Connected call
	Incoming call
	Off-hook
	On-hook
	Shared line in use
	Message waiting
	Authenticated call
	Encrypted call
	Busy line in a speed-dial, call log, or directory listing (BLF feature)
	Idle line in a speed-dial, call log, or directory listing (BLF feature)
	Speed-dial, call log, or directory listing (line status unknown)
	Line in Do Not Disturb (BLF feature)
	Intercom line in idle state
	Intercom line in one-way audio
	Intercom line in two-way audio
Audio or Video Mode	
	Handset in use
	Headset in use
	Speakerphone in use

	Video enabled (SCCP only)
Feature Access	
	Feature assigned to button
	Mobility assigned to button
	Hold assigned to button
	Conference assigned to button
	Transfer assigned to button
	Phone service URL assigned to button
	URL entry in a call log is ready to edit (SIP only)
	Option selected
	Feature enabled

## Button Icons

	Messages
	Services
	Help
	Directories
	Settings
	Volume
	Speaker
	Mute
	Headset

# Contents

---

## **Getting Started 1**

- Using this Guide 1
- Finding Additional Information 2
- Safety and Performance Information 2
- Cisco Product Security Overview 3
- Accessibility Features 3

## **Connecting Your Phone 4**

### **An Overview of Your Phone 8**

- Understanding Buttons and Hardware 8
- Understanding Lines and Calls 12
  - Understanding Line and Call Icons 12
- Understanding Phone Screen Features 14
  - Choosing Phone Screen Items 15
  - Cleaning and Maintaining the Phone Screen 15
  - Waking the Phone Screen from Sleep Mode 15
- Understanding Feature Buttons and Menus 16
  - Accessing the Help System on Your Phone 16
- Understanding Feature Availability 17
- Understanding SIP vs. SCCP 18

### **Basic Call Handling 19**

- Placing a Call—Basic Options 19
- Placing a Call—Additional Options 20
- Answering a Call 22
- Ending a Call 23
- Using Hold and Resume 24

Using Mute	25
Switching Between Multiple Calls	25
Switching an In-Progress Call to Another Phone	26
Viewing Multiple Calls	26
Transferring Calls	27
Sending a Call to a Voice Message System	28
Forwarding Calls to Another Number	28
Using Do Not Disturb	29
Making Conference Calls	30
Using Conference Features	30
Using Conference	31
Using Join	32
Using cBarge	32
Using Meet-Me	33
Viewing or Removing Conference Participants	34
Starting or Joining a Meet-Me Conference Call	34
Placing or Receiving Intercom Calls	35
<b>Advanced Call Handling</b>	<b>37</b>
Speed Dialing	37
Picking Up a Redirected Call on Your Phone	38
Storing and Retrieving Parked Calls	39
Logging Out of Hunt Groups	40
Using a Shared Line	40
Understanding Shared Lines	41
Using Barge to Add Yourself to a Shared-Line Call	41
Understanding Barge Features	41
Using Barge Features	42
Preventing Others from Viewing or Barging a Shared-Line Call	43
Using BLF to Determine a Line State	44
Making and Receiving Secure Calls	44
Tracing Suspicious Calls	45
Prioritizing Critical Calls	45

Using Cisco Extension Mobility	47
Managing Business Calls Using a Single Phone Number	47
<b>Using a Handset, Headset, and Speakerphone</b>	<b>50</b>
Obtaining a Headset	51
Using AutoAnswer	51
<b>Changing Phone Settings</b>	<b>52</b>
Customizing Rings and Message Indicators	52
Customizing the Phone Screen	53
<b>Using Call Logs and Directories</b>	<b>54</b>
Using Call Logs	54
Directory Dialing	56
Using Corporate Directory on Your Phone	56
Using Personal Directory on Your Phone	57
<b>Accessing Voice Messages</b>	<b>60</b>
<b>Using the User Options Web Pages</b>	<b>61</b>
Accessing Your User Options Web Pages	61
Configuring Features and Services on the Web	62
Using Personal Directory on the Web	62
Using Your Personal Address Book on the Web	62
Configuring Fast Dials on the Web	63
Using the Address Book Synchronization Tool	64
Setting Up Speed Dials on the Web	64
Setting Up Phone Services on the Web	65
Controlling User Settings on the Web	66
Controlling Line Settings on the Web	67
Setting Up Phones and Access Lists for Mobile Connect	69
Using Cisco WebDialer	72

**Understanding Additional Configuration Options 74**

**Troubleshooting Your Phone 76**

General Troubleshooting 76

Viewing Phone Administration Data 77

Using the Quality Reporting Tool 77

**Cisco One-Year Limited Hardware Warranty Terms 79**

**Index 81**




# Getting Started

---

## Using this Guide

This guide provides you with an overview of the features available on your phone. You can read it completely for a solid understanding of your phone's capabilities or refer to the table below for pointers to commonly used sections.

<b>If you want to...</b>	<b>Then...</b>
Explore your phone on your own	Press  on the phone when you need assistance.
Review safety information	See <a href="#">Safety and Performance Information</a> , page 2.
Connect your phone	See <a href="#">Connecting Your Phone</a> , page 4.
Use your phone after it is installed	Start with <a href="#">An Overview of Your Phone</a> , page 8.
Learn what the button lights mean	See <a href="#">Understanding Buttons and Hardware</a> , page 8.
Learn about the phone screen	See <a href="#">Understanding Phone Screen Features</a> , page 14.
Make calls	See <a href="#">Placing a Call—Basic Options</a> , page 19.
Put calls on hold	See <a href="#">Using Hold and Resume</a> , page 24.
Mute calls	See <a href="#">Using Mute</a> , page 25.
Transfer calls	See <a href="#">Transferring Calls</a> , page 27.
Make conference calls	See <a href="#">Making Conference Calls</a> , page 30.
Set up speed dialing	See <a href="#">Speed Dialing</a> , page 37.
Share a phone number	See <a href="#">Using a Shared Line</a> , page 40.
Use your phone as a speakerphone	See <a href="#">Using a Handset, Headset, and Speakerphone</a> , page 50.
Change the ring volume or tone	See <a href="#">Changing Phone Settings</a> , page 52.
View your missed calls	See <a href="#">Using Call Logs</a> , page 54.
Listen to your voice messages	See <a href="#">Accessing Voice Messages</a> , page 60.
See softkey and icon definitions	Refer to the Quick Reference Card in the front of this guide.

## Finding Additional Information

You can access the most current Cisco Unified IP Phone documentation on the World Wide Web at this URL:

[http://www.cisco.com/en/US/products/hw/phones/ps379/products\\_user\\_guide\\_list.html](http://www.cisco.com/en/US/products/hw/phones/ps379/products_user_guide_list.html)

You can access the Cisco website at this URL:

<http://www.cisco.com/>

International Cisco websites can be accessed from this URL:

[http://www.cisco.com/public/countries\\_languages.shtml](http://www.cisco.com/public/countries_languages.shtml)

## Safety and Performance Information

Refer to these sections for information about the impact of power outages and other devices on your Cisco Unified IP Phone.

### Power Outage

Your accessibility to emergency service through the phone is dependent on the phone being powered. If there is an interruption in the power supply, Service and Emergency Calling Service dialing will not function until power is restored. In the case of a power failure or disruption, you may need to reset or reconfigure equipment before using the Service or Emergency Calling Service dialing.

### Using External Devices

The following information applies when you use external devices with the Cisco Unified IP Phone:

Cisco recommends the use of good quality external devices (such as headsets) that are shielded against unwanted radio frequency (RF) and audio frequency (AF) signals.

Depending on the quality of these devices and their proximity to other devices such as mobile phones or two-way radios, some audio noise may still occur. In these cases, Cisco recommends that you take one or more of the following actions:

- Move the external device away from the source of the RF or AF signals.
- Route the external device cables away from the source of the RF or AF signals.
- Use shielded cables for the external device, or use cables with a better shield and connector.
- Shorten the length of the external device cable.
- Apply ferrites or other such devices on the cables for the external device.

Cisco cannot guarantee the performance of the system because Cisco has no control over the quality of external devices, cables, and connectors. The system will perform adequately when suitable devices are attached using good quality cables and connectors.

**Caution**

---

In European Union countries, use only external headsets that are fully compliant with the EMC Directive [89/336/EC].

---

## Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.


A summary of U.S. laws governing Cisco cryptographic products may be found at: <http://www.cisco.com/wwl/export/crypto/tool/stqrg.html>. If you require further assistance please contact us by sending email to [export@cisco.com](mailto:export@cisco.com).

## Accessibility Features

A list of accessibility features is available upon request.

# Connecting Your Phone

Your system administrator will likely connect your new Cisco Unified IP Phone to the corporate IP telephony network. If that is not the case, refer to the graphic and table below to connect your phone.

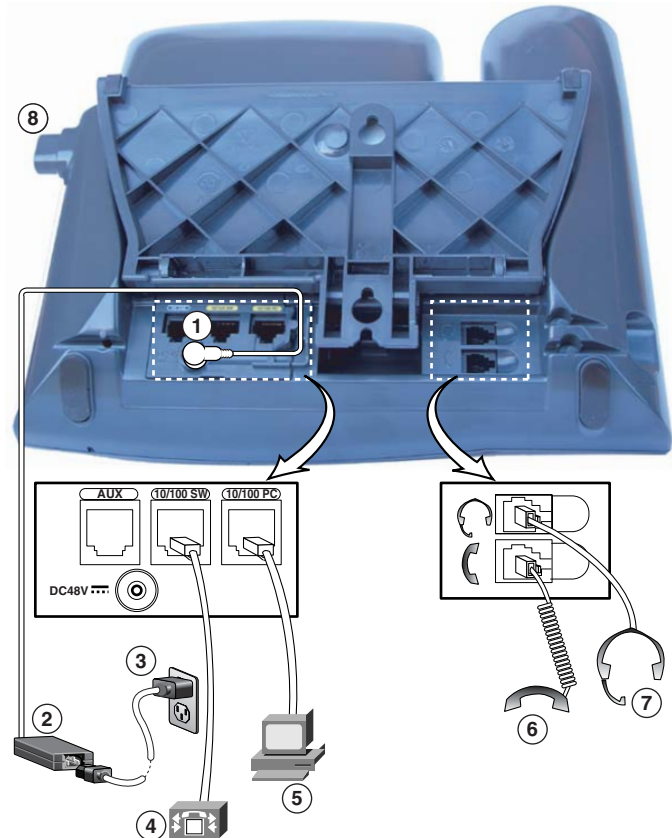


113950

<b>1</b>	DC adaptor port (DC48V)	<b>5</b>	Access port (10/100/1000 PC)
<b>2</b>	AC-to-DC power supply	<b>6</b>	Handset port
<b>3</b>	AC power cord	<b>7</b>	Headset port
<b>4</b>	Network port (10/100/1000 SW)	<b>8</b>	Footstand button


## Removing the Hookswitch Clip (Required)

Before you use your phone, remove the hookswitch clip from the cradle area. With the clip removed, the hookswitch lifts slightly when you pick up the handset.

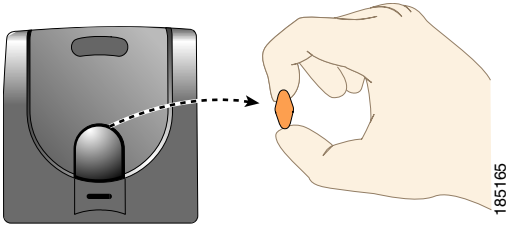

## Adjusting the Handset Rest (Optional)

Cisco recommends adjusting the handset rest, particularly when wall-mounting the phones, as this will ensure that the receiver will not readily slip out of the cradle. See the table below for instructions.

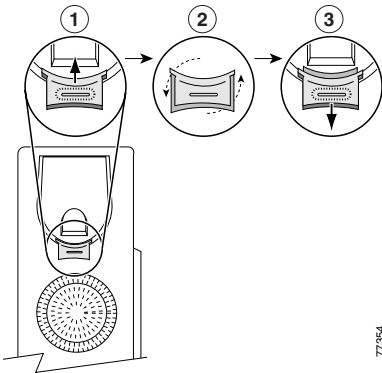

<b>1</b>	Set the handset aside and pull the square plastic tab from the handset rest.
<b>2</b>	Rotate the tab 180 degrees.
<b>3</b>	Slide the tab back into the handset rest. An extension protrudes from the top of the rotated tab. Return the handset to the handset rest.

## **Adjusting the Footstand (Optional)**

To change the angle of the phone base, adjust the footstand while pressing the footstand button.

## **Registering with TAPS**

After your phone is connected to the network, your system administrator might ask you to auto-register your phone using TAPS (Tool for Auto-Registered Phones Support). TAPS might be used either for a new phone or to replace an existing phone.

To register with TAPS, pick up the handset, enter the TAPS extension provided by your system administrator, and follow the voice prompts. You might need to enter your entire extension, including the area code. After your phone displays a confirmation message, hang up. The phone will re-start.

## **Headset Information**

To use a headset, connect it to the headset port on the back of your phone.

Although Cisco Systems performs some internal testing of third-party headsets for use with the Cisco Unified IP Phones, Cisco does not certify or support products from headset or handset vendors. Because of the inherent environmental and hardware inconsistencies in the locations where Cisco Unified IP Phones are deployed, there is not a single “best” solution that is optimal for all environments. Cisco recommends that customers test the headsets that work best in their environment before deploying a large number of units in their network.

In some instances, the mechanics or electronics of various headsets can cause remote parties to hear an echo of their own voice when they speak to Cisco Unified IP Phone users.

Cisco Systems recommends the use of good quality external devices, like headsets that are screened against unwanted radio frequency (RF) and audio frequency (AF) signals. Depending on the quality of these devices and their proximity to other devices such as cell phones and two-way radios, some audio noise may still occur.

The primary reason that support of a headset would be inappropriate for the Cisco Unified IP Phone is the potential for an audible hum. This hum can either be heard by the remote party or by both the remote party and you, the Cisco Unified IP Phone user. Some potential humming or buzzing sounds can be caused by a range of outside sources, for example, electric lights, being near electric motors, large PC monitors. In some cases, a hum experienced by a user may be reduced or eliminated by using a local power cube or power injector.

### **Audio Quality Subjective to the User**

Beyond the physical, mechanical and technical performance, the audio portion of a headset must sound good to you (the user) and to the party on the far end. Sound is subjective and Cisco cannot guarantee the performance of any headsets or handsets, but some of the headsets and handsets on the sites listed below have been reported to perform well with Cisco Unified IP Phones.

Nevertheless, it is ultimately still the customer's responsibility to test this equipment in their own environment to determine suitable performance.

For information about headsets, see:

<http://www.vxicorp.com/cisco>

<http://www.plantronics.com/cisco>

<http://www.jabra.com>

# An Overview of Your Phone

Your Cisco Unified IP Phone is a full-feature telephone that provides voice communication over the same data network that your computer uses, allowing you to place and receive phone calls, put calls on hold, transfer calls, make conference calls, and so on.

In addition to basic call-handling features, your Cisco Unified IP Phone can provide enhanced productivity features that extend your call-handling capabilities. Depending on configuration, your phone supports:

- Access to network data, XML applications, and web-based services.
- Online customizing of phone features and services from your User Options web pages.
- A comprehensive online help system that displays information on the phone screen.

## Understanding Buttons and Hardware

You can use the graphics below to identify buttons and hardware on your phone.

### Cisco Unified IP Phone 7965G














18-0913
















# Cisco Unified IP Phone 7945G



184912


	Item	Description	For more information, see...
1	Programmable buttons 	Depending on configuration, programmable buttons provide access to: <ul style="list-style-type: none"> <li>• Phone lines and intercom lines (line buttons)</li> <li>• Speed-dial numbers (speed-dial buttons, including the BLF speed-dial feature)</li> <li>• Web-based services (for example, a Personal Address Book button)</li> <li>• Phone features (for example, a Privacy, Hold, or Transfer button)</li> </ul> Buttons illuminate to indicate status: <ul style="list-style-type: none"> <li> Green, steady—Active call or two-way intercom call</li> <li> Green, flashing—Held call</li> <li> Amber, steady—Privacy in use, one-way intercom call, DND active, or logged into Hunt Group</li> <li> Amber, flashing—Incoming call or reverting call</li> <li> Red, steady—Remote line in use (shared line or BLF status)</li> </ul>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Phone Screen Features, page 14</a></li> <li>• <a href="#">Basic Call Handling, page 19</a></li> <li>• <a href="#">Speed Dialing, page 37</a></li> <li>• <a href="#">Using a Shared Line, page 40</a></li> <li>• <a href="#">Using BLF to Determine a Line State, page 44</a></li> <li>• <a href="#">Placing or Receiving Intercom Calls, page 35</a></li> </ul>
2	Footstand button	Allows you to adjust the angle of the phone base.	<a href="#">Adjusting the Handset Rest (Optional), page 5</a>
3	Display button 	Awakens the phone screen from sleep mode. <ul style="list-style-type: none"> <li> No color—Ready for input</li> <li> Green steady—Sleep mode</li> </ul>	<a href="#">Cleaning and Maintaining the Phone Screen, page 15</a>
4	Messages button 	Auto-dials your voice message service (varies by service).	<a href="#">Accessing Voice Messages, page 60</a>
5	Directories button 	Opens/closes the Directories menu. Use it to access call logs and directories.	<a href="#">Using Call Logs, page 54</a>

6	 <p>Help button</p>	Activates the Help menu.	<a href="#">Accessing the Help System on Your Phone, page 16</a>
7	 <p>Settings button</p>	Opens/closes the Settings menu. Use it to change phone screen and ring settings.	<a href="#">Changing Phone Settings, page 52</a>
8	 <p>Services button</p>	Opens/closes the Services menu.	<a href="#">Using the User Options Web Pages, page 61</a>
9	 <p>Volume button</p>	Controls the handset, headset, and speakerphone volume (off-hook) and the ringer volume (on-hook).	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
10	 <p>Speaker button</p>	Toggles the speakerphone on or off. When the speakerphone is on, the button is lit.	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
11	 <p>Mute button</p>	Toggles the microphone on or off. When the microphone is muted, the button is lit.	<a href="#">Using Mute, page 25</a>
12	 <p>Headset button</p>	Toggles the headset on or off. When the headset is on, the button is lit.	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
13	 <p>4-way navigation pad and Select button (center)</p>	<p>Allows you to scroll through menus and highlight items. Use the Select button to select an item that is highlighted on the screen.</p> <p>Navigation button</p> <ul style="list-style-type: none"> <li>• Scroll up and down to see menus and highlight items.</li> <li>• Scroll right and left to scroll horizontally in multi-column displays.</li> </ul> <p>Select button—scroll to highlight a line using the Navigation button, and then:</p> <ul style="list-style-type: none"> <li>• Press  to open a menu.</li> <li>• Press  to play a ringer item.</li> <li>• Press  to access other features as described on the screen.</li> </ul> <p><b>Note</b> The Select button does not take action.</p>	<a href="#">Using Call Logs, page 54</a>
14	 <p>Keypad</p>	Allows you to dial phone numbers, enter letters, and choose menu items.	<a href="#">Basic Call Handling, page 19</a>
15	 <p>Softkey buttons</p>	Each activates a softkey option (displayed on your phone screen).	<a href="#">Understanding Phone Screen Features, page 14</a>

<b>16</b>	Handset light strip	Indicates an incoming call or new voice message.	<a href="#">Accessing Voice Messages, page 60</a>
<b>17</b>	Phone screen	Shows phone features.	<a href="#">Understanding Phone Screen Features, page 14</a>









## Understanding Lines and Calls








To avoid confusion about lines and calls, refer to these descriptions:

- **Lines**—Each corresponds to a directory number or intercom number that others can use to call you. Each line corresponds to a directory number or intercom number that others can use to call you. The Cisco Unified IP Phone 7965G supports one to six lines and the Cisco Unified IP Phone 7945G supports one to two lines, depending on configuration. To see your phone lines, look at the right side of your phone screen. You have as many lines as you have directory numbers and phone line icons: .
- **Calls**—Each line can support multiple calls. By default, your phone supports four connected calls per line, but your system administrator can adjust this number according to your needs. Only one call can be active at any time; other calls are automatically placed on hold.

## Understanding Line and Call Icons

Your phone displays icons to help you determine the line and call state.


<b>Icon</b>	<b>Line or call state</b>	<b>Description</b>
	On-hook line	No call activity on this line.
	Off-hook line	You are dialing a number or an outgoing call is ringing.
	Connected call	You are connected to the other party.
	Ringing call	A call is ringing on one of your lines.
	Call on hold	You have put the call on hold. See <a href="#">Using Hold and Resume, page 24</a> .
	Remote-in-use	Another phone that shares your line has a connected call. See <a href="#">Using a Shared Line, page 40</a> .
	Reverting call	A holding call is reverting to your phone. See <a href="#">Using Hold and Resume, page 24</a> .
	Authenticated call	See <a href="#">Making and Receiving Secure Calls, page 44</a> .

Icon	Line or call state	Description
	Encrypted call	See <a href="#">Making and Receiving Secure Calls, page 44</a> .
	Idle line (BLF)	See <a href="#">Using BLF to Determine a Line State, page 44</a> .
	Busy line (BLF)	See <a href="#">Using BLF to Determine a Line State, page 44</a> .
	Line in Do Not Disturb (BLF)	See <a href="#">Using BLF to Determine a Line State, page 44</a> .
	Idle Intercom line	The intercom line is not in use. See <a href="#">Placing or Receiving Intercom Calls, page 35</a> .
	One-way intercom call	The intercom line is sending or receiving one-way audio. <a href="#">Placing or Receiving Intercom Calls, page 35</a> .
	Two-way intercom call	The recipient pressed the intercom line to activate two-way audio with the caller. <a href="#">Placing or Receiving Intercom Calls, page 35</a> .

# Understanding Phone Screen Features

This is what your main phone screen might look like with active calls and several feature menus open.



1	Primary phone line	Displays the phone number (directory number) for your primary phone line.
2	Programmable button indicators	Programmable buttons  can serve as phone line buttons, intercom line buttons, speed-dial buttons, phone service buttons or phone feature buttons. Icons and labels indicate how these buttons are configured. For an icon reference, see the “ <a href="#">Phone Screen Icons</a> ” section in the Quick Reference Card at the front of this guide.
3	Softkey labels	Each displays a softkey function.
4	Status line	Displays audio mode icons, status information, and prompts.
5	Call activity area	Displays current calls per line, including caller ID, call duration, and call state for the highlighted line (standard view). See <a href="#">Understanding Line and Call Icons, page 12</a> , and <a href="#">Viewing Multiple Calls, page 26</a> .
6	Phone tab	Indicates call activity. Press this tab to return to the call activity area, if needed.
7	Feature tabs	Each indicates an open feature menu. See <a href="#">Understanding Feature Buttons and Menus, page 16</a> .

## Choosing Phone Screen Items

There are two ways to choose items on your phone's screen.


<b>To choose a phone screen item...</b>	<b>Do this...</b>
By item number	Press the corresponding number on your keypad. For example, press <b>4</b> to choose the fourth item in a menu.
By scrolling	Use the Navigation button to highlight an item. Press the Select button to select the item, or a softkey to finish the action.

## Cleaning and Maintaining the Phone Screen

Use only a soft, dry cloth to wipe the phone screen. Do not use any liquids or powders on the phone, as they can contaminate phone components and cause failures.






## Waking the Phone Screen from Sleep Mode

You can wake the phone screen from sleep mode.

<b>If you want to...</b>	<b>Then...</b>
Wake the phone screen from sleep mode	Press any button or lift the handset. After a period of inactivity (determined by your system administrator), the phone screen enters sleep mode to save power. In this mode, the phone screen appears blank and the Display button  remains lit.







# Understanding Feature Buttons and Menus

Press a feature button to open or close a feature menu.

If you want to...	Then...
Open or close a feature menu	Press a feature button: <ul style="list-style-type: none"> <li> Messages</li> <li> Services</li> <li> Help</li> <li> Directories</li> <li> Settings</li> </ul>
Scroll through a list or menu	Press the Navigation button.
Go back one level in a feature menu	Press <b>Exit</b> . Pressing <b>Exit</b> from the top level of a menu closes the menu.
Switch between open feature menus	Press a feature button on your phone.

## Accessing the Help System on Your Phone

Your phone provides a comprehensive online help system. Help topics appear on the phone screen.

If you want to...	Then...
View the main menu	Press  on your phone and wait a few seconds for the menu to display. Main menu topics include: <ul style="list-style-type: none"> <li>• About Your Cisco Unified IP Phone—Details about your phone</li> <li>• How do I...?—Procedures for common phone tasks</li> <li>• Calling Features—Descriptions and procedures for calling features</li> </ul>
Learn about a button or softkey	Press  , then quickly press a button or softkey.
Learn about a menu item	Press  , then quickly press the menu item on the phone screen. Or, press  twice quickly with the menu item highlighted.
Get help using Help	Press  . After a second or two, press  again, or choose <b>Help</b> from the main menu.


























## Understanding Feature Availability

Depending on your phone system configuration, features included in this Phone Guide might not be available to you or might work differently on your phone. Contact your support desk or system administrator for information about feature operation or availability.


You can access many features either by using a softkey or by pressing a line button. You can configure some features but your system administrator controls most of them.

Here are some details about using softkeys and line buttons to access features:

Feature	Softkey	Line Button Label and Icon
Call Back	CallBack	CallBack 
Call Forward	CFwdALL	Forward All 
Call Park	Park	Park 
Call Pickup	PickUp	PickUp 
Conference	Confrn	Conference 
Conference List	ConfList	Conference List 
Do Not Disturb	DND	Do Not Disturb  or Do Not Disturb 
End Call	EndCall	End Call 
Group Pickup	GPickUp	Group Pickup 
Hold	Hold	Hold 
Hunt Group	HLog	Hunt Group  or Hunt Group 
Malicious Call Identification	MCID	Malicious Call ID 
Meet Me Conferencing	MeetMe	MeetMe 
Mobility	Mobility	Mobility 
New Call	New Call	New Call 
Other Pickup	OPickUp	Other Pickup 
Quality Reporting Tool	QRT	Quality Reporting Tool 
Redial	Redial	Redial 
Remove Last Conference Party	RmLstC	Remove Last Participant 
Transfer	Transfer	Transfer 
Video Mode Command	VidMode	Video 

## Understanding SIP vs. SCCP

Your phone can be configured to work with one of two signaling protocols: SIP (Session Initiation Protocol) or SCCP (Skinny Call Control Protocol). Your system administrator determines this configuration.

Phone features can vary depending on the protocol. This Phone Guide indicates which features are protocol-specific. To learn which protocol your phone is using, you can ask your system administrator or you can choose  > **Model Information** > **Call Control Protocol** on your phone.





# Basic Call Handling

---



You can perform basic call-handling tasks using a range of features and services. Feature availability can vary; see your system administrator for more information.

## Placing a Call—Basic Options

Here are some easy ways to place a call on your Cisco Unified IP Phone.




If you want to...	Then...	For more information, see...
Place a call using the handset	Pick up the handset and enter a number.	<a href="#">An Overview of Your Phone, page 8</a>
Place a call using the speakerphone	Press  and enter a number.	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
Place a call using a headset	Press  and enter a number. Or, if  is lit, press <b>New Call</b> and enter a number.	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
Redial a number	Press <b>Redial</b> to dial the last number, or press the Navigation button (with the phone idle) to see your Placed Calls.	<a href="#">Using Call Logs, page 54</a>
Place a call while another call is active (using the same line)	<ol style="list-style-type: none"><li>1. Press <b>Hold</b>.</li><li>2. Press <b>New Call</b>.</li><li>3. Enter a number.</li></ol>	<a href="#">Using Hold and Resume, page 24</a>
Dial from a call log	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Missed Calls, Received Calls, or Placed Calls</b>.</li><li>2. Scroll to the item using the navigation keys, and select the item using the select button.</li></ol>	<a href="#">Using Call Logs, page 54</a>


## Tips

- You can dial on-hook, without a dial tone (pre-dial). To pre-dial, enter a number, then go off-hook by lifting the handset or by pressing **Dial**, , or .
- When you pre-dial, your phone tries to anticipate the number you are dialing by displaying matching numbers (if available) from your Placed Calls log. This is called Auto Dial. To call a number displayed with Auto Dial, press the number, or scroll to it and go off-hook.
- If you make a mistake while dialing, press << to erase digits.

## Placing a Call—Additional Options







You can place calls using special features and services that might be available on your phone. See your system administrator for more information about these additional options.

If you want to...	Then...	For more information, see...
Place a call while another call is active (using a different line)	<ol style="list-style-type: none"><li>1. Press  for a new line. The first call is automatically placed on hold.</li><li>2. Enter a number.</li></ol>	<a href="#">Using Hold and Resume, page 24</a>
Speed dial a number	Do one of the following: <ul style="list-style-type: none"><li>• Press  (a speed-dial button).</li><li>• Use the Abbreviated Dial feature.</li><li>• Use the Fast Dial feature.</li></ul>	<a href="#">Speed Dialing, page 37</a>
Dial from a corporate directory on your phone	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Corporate Directory</b> (name can vary).</li><li>2. Enter a name and press <b>Search</b>.</li><li>3. Highlight a listing and go off-hook.</li></ol>	<a href="#">Using Call Logs, page 54</a>
Dial from a corporate directory on your personal computer using Cisco WebDialer	<ol style="list-style-type: none"><li>1. Open a web browser and go to a WebDialer-enabled corporate directory.</li><li>2. Click the number that you want to dial.</li></ol>	<a href="#">Setting Up Phones and Access Lists for Mobile Connect, page 69</a>
Use Cisco CallBack to receive notification when a busy or ringing extension is available	<ol style="list-style-type: none"><li>1. Press <b>CallBack</b> while listening to the busy tone or ring sound.</li><li>2. Hang up. Your phone alerts you when the line is free.</li><li>3. Place the call again.</li></ol>	Your system administrator

If you want to...	Then...	For more information, see...
See if a line associated with a speed-dial, call record, or directory listing is busy before placing a call to that line	Look for Busy Line Feature indicators.	<a href="#">Using BLF to Determine a Line State, page 44</a>
Make a priority (precedence) call (SCCP phones only)	Enter the MLPP access number, then enter a phone number.	<a href="#">Prioritizing Critical Calls, page 45</a>
Dial from a Personal Address Book (PAB) entry	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Personal Directory</b> to log in.</li> <li>2. Choose <b>Personal Address Book</b> and search for a listing.</li> </ol>	<a href="#">Using Personal Directory on Your Phone, page 57</a>
Place a call using a billing or tracking code (SCCP phones only)	<ol style="list-style-type: none"> <li>1. Dial a number.</li> <li>2. After the tone, enter a client matter code (CMC) or a forced authorization code (FAC).</li> </ol>	Your system administrator
Place a call using your Cisco Extension Mobility profile	Log in to the Cisco Extension Mobility service on a phone.	<a href="#">Using Cisco Extension Mobility, page 47</a>
Make a call from a cellular phone using Mobile Voice Access	<ol style="list-style-type: none"> <li>1. Dial your assigned Mobile Voice access number.</li> <li>2. Enter your cellular phone number (if requested) and PIN.</li> <li>3. Press <b>1</b> to make a call to an enterprise IP phone.</li> <li>4. Dial a desktop phone number other than your desktop phone number.</li> </ol> <p><b>Note</b> Before using Mobile Voice Access to make a call, obtain your Mobile Voice Access number and End user PIN from your system administrator.</p>	<a href="#">Using Cisco Extension Mobility, page 47</a>

## Answering a Call

You can answer a call by simply lifting the handset, or you can use other options if they are available on your phone.

<b>If you want to...</b>	<b>Then...</b>	<b>For more information, see...</b>
Answer with a headset	Press  , if unlit. Or, if  is lit, press <b>Answer</b> or  (flashing).	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
Answer with the speakerphone	Press  , <b>Answer</b> , or  (flashing).	<a href="#">Using a Handset, Headset, and Speakerphone, page 50</a>
Switch from a connected call to answer a new call	Press <b>Answer</b> or, if the call is ringing on a different line, press  (flashing).	<a href="#">Using Hold and Resume, page 24</a>
Answer using call waiting	Press <b>Answer</b> .	<a href="#">Using Hold and Resume, page 24</a>
Send a call to a voice message system	Press <b>iDivert</b> .	<a href="#">Sending a Call to a Voice Message System, page 28</a>
Auto-connect calls	Use AutoAnswer.	<a href="#">Using AutoAnswer, page 51</a>
Retrieve a parked call on another phone	Use Call Park or Directed Call Park.	<a href="#">Storing and Retrieving Parked Calls, page 39</a>
Use your phone to answer a call ringing elsewhere	Use Call Pickup.	<a href="#">Picking Up a Redirected Call on Your Phone, page 38</a>



If you want to...	Then...	For more information, see...
Answer a priority call (SCCP phones only)	Hang up the current call and press <b>Answer</b> .	<a href="#">Prioritizing Critical Calls, page 45</a>
Answer a call on your cellular phone or other remote destination	Set up Mobile Connect and answer your phone. When you enable Mobile Connect: <ul style="list-style-type: none"> <li>• Your desktop and remote destinations receive calls simultaneously.</li> <li>• When you answer the call on your desktop phone, the remote destinations stop ringing, are disconnected, and display a missed call message.</li> <li>• When you answer the call on one remote destination, the other remote destinations stop ringing, are disconnected, and a missed call message is shown on the other remote destinations.</li> </ul>	<a href="#">Using Cisco Extension Mobility, page 47</a>

### Tip



If parties on a call hear a beep tone, the call might be monitored or recorded. Ask your system administrator for more information.

## Ending a Call

To end a call, simply hang up. Here are some more details.



If you want to...	Then...
Hang up while using the handset	Return the handset to its cradle. Or press <b>EndCall</b> .
Hang up while using a headset	Press  . Or, to keep headset mode active, press <b>EndCall</b> .
Hang up while using the speakerphone	Press  or <b>EndCall</b> .
Hang up one call, but preserve another call on the same line	Press <b>EndCall</b> . If necessary, remove the call from hold first.



## Using Hold and Resume

You can hold and resume calls. When you put a call on hold, the Hold icon  appears next to the caller ID and the corresponding line button flashes green .

If the Hold Reversion feature is enabled for your phone, a call that you put on hold reverts back to ringing after a certain period of time. The 'reverting' call remains on hold until you resume it or until Hold Reversion times out.

Your phone indicates the presence of a reverting call by:

- Alerting you at intervals with a single ring (or flash or beep, depending on your phone line setting).
- Briefly displaying a “Hold Reversion” message in the status bar at the bottom of the phone screen.
- Displaying the animated Hold Reversion icon  next to the caller ID for the held call.
- Displaying a flashing amber line button  (depending on the line state).

If you want to...	Then...
Put a call on hold	<ol style="list-style-type: none"><li>1. Make sure the appropriate call is highlighted.</li><li>2. Press <b>Hold</b>.</li></ol>
Remove a call from hold on the current line	<ol style="list-style-type: none"><li>1. Make sure the appropriate call is highlighted.</li><li>2. Press <b>Resume</b>.</li></ol>
Remove a call from hold on a different line	<ol style="list-style-type: none"><li>1. Press the appropriate line button:  or  (flashing). Doing so might cause a held call to resume automatically:<ul style="list-style-type: none"><li>• If there is a reverting call on the line, that call will resume.</li><li>• If there is more than one reverting call on the line, the oldest reverting call will resume.</li><li>• If a non-reverting held call is the only call on the line, it will resume.</li></ul></li><li>2. If necessary, scroll to the appropriate call and press <b>Resume</b>.</li></ol>



### Tips

- Engaging the Hold feature typically generates music or a beeping tone.
- If you receive an alert for an incoming call and a reverting call at the same time, by default your phone will shift the focus of the phone screen to display the incoming call. Your system administrator can change this focus priority setting.
- If you use a shared line, Hold Reversion rings only on the phone that put the call on hold, not on the other phones that share the line.
- Your system administrator determines the duration between Hold Reversion alerts.





## Using Mute

With Mute enabled, you can hear other parties on a call but they cannot hear you. You can use Mute with the handset, speakerphone, or a headset.

If you want to...	Then...
Toggle Microphone on	Press  .
Toggle Microphone off	Press  .


## Switching Between Multiple Calls

You can switch between multiple calls on one or more lines. If the call that you want to switch to is not automatically highlighted, scroll to it.

If you want to...	Then...
Switch between connected calls on one line	<ol style="list-style-type: none"><li>1. Make sure the call that you want to switch to is highlighted.</li><li>2. Press <b>Resume</b>.</li></ol> Any active call is placed on hold and the selected call is resumed.
Switch between connected calls on different lines	Press  for the line that you are switching to. If a single call is holding on the line, the call automatically resumes. If multiple calls are holding, highlight the appropriate call and press <b>Resume</b> .
Switch from a connected call to answer a ringing call	Press <b>Answer</b> , or if the call is ringing on a different line, press  (flashing). Any active call is placed on hold and the selected call is resumed.

## Switching an In-Progress Call to Another Phone

You can switch in-progress calls between the desktop phone and your cellular phone or other remote destination.

If you want to...	Then...
Switch an in-progress call on your desktop phone to a cellular phone	<ol style="list-style-type: none"><li>1. Press the <b>Mobility</b> softkey and select <b>Send call to mobile</b>.</li><li>2. Answer the in-progress call on your cellular phone.</li></ol> <p>The desktop phone line button turns red  and handset icons and the calling party number appear on the phone display. You cannot use same phone line for any other calls, but if your desk phone supports multiple lines, you can use another line to make or receive calls.</p>
Switch an in-progress call from a cellular phone to your desktop phone	<ol style="list-style-type: none"><li>1. Hang up the call on your cellular phone to disconnect the cellular phone, but not the call.</li><li>2. Press <b>Resume</b> on your desk phone within 4 seconds and start talking on the desk phone.</li></ol>





## Viewing Multiple Calls

Understanding how multiple calls are displayed on your phone can help you organize your call-handling efforts.

In standard viewing mode, your phone displays calls as follows for the highlighted line:

- Calls with the highest precedence and longest duration display at the top of the list.
- Calls of a similar type are grouped together. For example, calls that you have interacted with are grouped near the top, and calls on hold are grouped last.

You can use these additional methods to view multiple calls on multiple lines:

If you want to...	Then...
View calls on another line	<ol style="list-style-type: none"><li>1. Press .</li><li>2. Immediately press the line button .</li></ol>
Switch to call overview mode	<p>Press  for the highlighted line.</p> <p>The phone switches to call overview mode, displaying only one call per line. The displayed call is either the active call or the held call with the longest duration.</p> <p>To return to standard viewing mode, press , then immediately press the line button.</p>

# Transferring Calls

Transfer redirects a connected call. The *target* is the number to which you want to transfer the call.

If you want to...	Then...
Transfer a call without talking to the transfer recipient	<ol style="list-style-type: none"><li>1. From an active call, press <b>Transfer</b>.</li><li>2. Enter the target number.</li><li>3. Press <b>Transfer</b> again to complete the transfer or <b>EndCall</b> to cancel.</li></ol> <p><b>Note</b> If your phone has on-hook transfer enabled, complete the transfer by hanging up</p>
Talk to the transfer recipient before transferring a call (consult transfer)	<ol style="list-style-type: none"><li>1. From an active call, press <b>Transfer</b>.</li><li>2. Enter the target number.</li><li>3. Wait for the transfer recipient to answer.</li><li>4. Press <b>Transfer</b> again to complete the transfer or <b>EndCall</b> to cancel.</li></ol> <p><b>Note</b> If your phone has on-hook transfer enabled, complete the transfer by hanging up</p>
Transfer two current calls to each other (direct transfer) without staying on the line (SCCP phones only)	<ol style="list-style-type: none"><li>1. Scroll to highlight any call on the line.</li><li>2. Press <b>Select</b>.</li><li>3. Repeat this process for the second call.</li><li>4. With one of the selected calls highlighted, press <b>DirTrfr</b>. (To display <b>DirTrfr</b> you might need to press <b>more</b>.)</li></ol> <p>The two calls connect to each other and drop you from the call.</p> <p><b>Note</b> If you want to stay on the line with the callers, use <b>Join</b> instead.</p>
Redirect a call to a voice message system	Press <b>iDivert</b> . For more information, see <a href="#">Sending a Call to a Voice Message System, page 28</a> .

## Tips

- If your phone has on-hook transfer enabled, complete the call by hanging up.
- If on-hook transfer is *not* enabled on your phone, hanging up without pressing **Transfer** again places the call on hold.
- You cannot use **Transfer** to redirect a call on hold. Press **Resume** to remove the call from hold before transferring it.

## Sending a Call to a Voice Message System

You can use **iDivert** to send an active, ringing, or on-hold call to your voice message system. Depending on the type of call and your phone configuration, you can also use **iDivert** to send the call to another party's voice message system.

- If the call was originally sent to someone else's phone, **iDivert** allows you to redirect the call either to your own voice message system or to the original called party's voice message system. Your system administrator must make this option available to you.
- If the call was sent to you directly (not transferred or forwarded to you), or if your phone does not support the option described above, using **iDivert** redirects the call to your voice message system.

If you want to...	Then...
Send an active, ringing, or on-hold call to a voice message system	Press <b>iDivert</b> . One of two things occurs: <ul style="list-style-type: none"><li>• The call is transferred to your voice message system.</li><li>• Your phone screen displays a menu that allows you to choose between your voice message system or the voice message system of the original called party. Choose an option to redirect the call.</li></ul>

### Tip

If your phone displays a menu that disappears before you make your selection, you can press **iDivert** again to re-display the menu. You can also ask your system administrator to configure a longer timeout value.

## Forwarding Calls to Another Number

You can use the call forwarding features to redirect incoming calls from your phone to another number.

Your system administrator might allow you to choose from two types of call forwarding features:

- Unconditional call forwarding (Call Forward All)—Applies to all calls that you receive.
- Conditional call forwarding (Call Forward No Answer, Call Forward Busy, Call Forward No Coverage)—Applies to certain calls that you receive, according to conditions.

You can access Call Forward All on your phone; other call forwarding features are accessible only on your User Options web pages. Your system administrator determines which call forwarding features are available to you.

If you want to...	Then...
Set up Call Forward All on your primary line	Press CFwdALL or Forward All and enter a target phone number.
Cancel Call Forward All on your primary line	Press CFwdALL or Forward All.
Verify that Call Forward All is enabled on your primary line	Look for: <ul style="list-style-type: none"> <li>• The call forward icon above the primary phone number.</li> <li>• The call forward target number in the status line.</li> </ul>

### Tips



- Enter the call forward target number exactly as you would dial it from your phone. For example, enter an access code or the area code, if necessary.
- You can forward your calls to a traditional analog phone or to another IP phone, although your system administrator might restrict the call forwarding feature to numbers within your company.
- Call forwarding is phone line specific. If a call reaches you on a line where call forwarding is not enabled, the call will ring as usual.
- Your system administrator can enable a call forward override feature that allows the person receiving your forwarded calls to reach you. With override enabled, a call placed from the target phone to your phone is not forwarded, but rings through.
- Your system administrator can change call forwarding conditions for your phone lines.


## Using Do Not Disturb

You can use the Do Not Disturb (DND) feature to block incoming calls from ringing your phone. Your system administrator enables DND for your phone.

When DND and Call Forward are both enabled on your phone, calls are forwarded and the caller does not hear a busy tone.

Your intercom lines still ring when DND is active.

If you want to...	Then...
Turn on DND	Press Do Not Disturb  or DND. “Do Not Disturb” displays on the phone, the DND  lights, and the ring tone is turned off.

Turn off DND	Press Do Not Disturb  or DND.
Customize DND settings	<p>If your system administrator configured DND settings to appear on the User Options page, follow these steps:</p> <ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. See <a href="#">Accessing Your User Options Web Pages, page 61</a>.</li> <li>2. From the drop-down menu, choose <b>User Options &gt; Device</b>.</li> <li>3. You can set the following options <ul style="list-style-type: none"> <li>• Do Not Disturb—Turn DND on/off.</li> <li>• DND Incoming Call Alert—Set the alert to beep only, flash only, or disable all visible and audible alert notifications.</li> </ul> </li> </ol>

## Making Conference Calls

Your Cisco Unified IP Phone allows you to talk simultaneously with multiple parties in a conference call.

## Using Conference Features

You can create a conference in various ways, depending on your needs and the features that are available on your phone.

- **Conference**—Allows you to create a standard (ad hoc) conference by calling each participant. Use the **Confrn** softkey or the **Conference** button. Conference is available on most phones.
- **Join**—Allows you to create a standard (ad hoc) conference by combining existing calls. Use the **Join** softkey or button. Join is available on SCCP phones only.
- **cBarge**—Allows you to create a standard (ad hoc) conference by adding yourself to a call on a shared line. Press a line button or use the **cBarge** softkey or button. cBarge is only available on phones that use shared lines.
- **Meet-Me**—Allows you to create or join a conference by calling a conference number. Use the **MeetMe** softkey or button.

## Using Conference



Conference allows you to call each participant. Conference is available on most phones.

If you want to...	Then...
Create a conference	<ol style="list-style-type: none"><li data-bbox="485 285 1255 347">1. From a connected call, press <b>Confrn</b> or <b>Conference</b>. (You may need to press the <b>more</b> softkey to see <b>Confrn</b>.)</li><li data-bbox="485 347 959 386">2. Enter the participant's phone number.</li><li data-bbox="485 386 852 425">3. Wait for the call to connect.</li><li data-bbox="485 425 1255 487">4. Press <b>Confrn</b> or <b>Conference</b> again to add the participant to your call.</li><li data-bbox="485 487 959 548">5. Repeat to add additional participants.</li></ol>
Add new participants to an existing conference	Repeat the steps listed above. Your system administrator determines whether non-initiators of a conference can add or remove participants.
See a list of participants or remove participants	See <a href="#">Viewing or Removing Conference Participants, page 34</a> .

## Using Join

(SCCP phones only)

Join allows you to combine two or more existing calls to create a conference in which you are a participant.

If you want to...	Then...
Create a conference by joining together existing calls that are on a single phone line	<ol style="list-style-type: none"><li data-bbox="439 363 1161 461">1. From an active call, highlight another call that you want to include in the conference and press <b>Select</b>. Selected calls display this icon .</li><li data-bbox="439 472 1069 500">2. Repeat this step for each call that you want to add.</li><li data-bbox="439 511 1213 539">3. Press <b>Join</b>. (You may need to press the <b>more</b> softkey to see <b>Join</b>.)</li></ol>
Create a conference by joining together existing calls that are on multiple phone lines	<ol style="list-style-type: none"><li data-bbox="439 558 1206 613">1. From an active call, press <b>Join</b>. (You may need to press the <b>more</b> softkey to see <b>Join</b>.)</li><li data-bbox="439 625 1197 870">2. Press the green flashing line button  for the call(s) that you want to include in the conference. One of the following occurs:<ul style="list-style-type: none"><li data-bbox="447 740 713 768">• The calls are joined.</li><li data-bbox="447 779 1205 870">• A window opens on your phone screen prompting you to select the call(s) that you want to join. Highlight the call(s) and press <b>Select</b>, then press <b>Join</b> to complete the action.</li></ul></li></ol> <p data-bbox="434 881 1201 937"><b>Note</b> If your phone does not support Join for calls on multiple lines, transfer the calls to a single line before using Join.</p>
Join together two existing conferences	Use the <b>Join</b> or <b>DirTrfr</b> softkeys. Check with your system administrator to see if this feature is available to you.
See a list of participants or remove participants	See <a href="#">Viewing or Removing Conference Participants, page 34</a> .

## Using cBarge

You can create a conference by using cBarge to add yourself to a call on a shared line.



If you want to...	Then...
Create a conference by barging a call on a shared line	<p>Press the line button for the shared line.</p> <p>In some cases, you must highlight the call and press <b>cBarge</b> to complete the action.</p> <p>See <a href="#">Using Barge to Add Yourself to a Shared-Line Call</a>, page 41 for more information.</p>
See a list of participants or remove participants	See <a href="#">Viewing or Removing Conference Participants</a> , page 34.

## Using Meet-Me

Meet-Me conferencing allows you to start or join a conference by calling the conference number.





If you want to...	Then...
Start a Meet-Me conference	<ol style="list-style-type: none"> <li>1. Obtain a Meet-Me phone number from your system administrator.</li> <li>2. Distribute the number to participants.</li> <li>3. When you are ready to start the meeting, go off-hook to get a dial tone, then press <b>MeetMe</b>.</li> <li>4. Dial the Meet-Me conference number.</li> </ol> <p>Participants can now join the conference by dialing in.</p> <p><b>Note</b> Participants hear a busy tone if they call the conference before the initiator has joined. In this case, participants must call back.</p>
Join a Meet-Me conference	<p>Dial the Meet-Me conference number (provided by the conference initiator).</p> <p><b>Note</b> You will hear a busy tone if you call the conference before the initiator has joined. In this case, try your call again.</p>
End a Meet-Me conference	<p>All participants must hang up.</p> <p>The conference does not automatically end when the conference initiator disconnects.</p>

### Tip

If you call a secure Meet-Me conference number from a non-secure phone, your phone displays the message, “Device Not Authorized.” For more information, see [Making and Receiving Secure Calls](#), page 44.

## Viewing or Removing Conference Participants

During a standard (ad hoc) conference, you can view a list of participants and remove participants.

View a list of conference participants	Press <b>ConfList</b> or <b>Conference List</b> . Participants are listed in the order in which they join the conference with the most recent additions at the top.
Get an updated list of conference participants	While viewing the conference list, press <b>Update</b> .
See who initiated the conference	While viewing the conference list, locate the participant listed at the bottom of the list with an asterisk (*) next to the name.
Remove any conference participant	While viewing the conference list, highlight the participant's name and press <b>Remove</b> .
Drop the last participant added to the conference	While viewing the conference list, press <b>RMLstC</b> or <b>Remove Last Participant</b> .
Verify that a conference call is secure	Look for the  or  icon after "Conference" on the phone screen.
Verify that a participant is calling from a secure phone	Look for the  or  icon beside the participant's name on the phone screen.
Add more participants	See <a href="#">Using Conference, page 31</a> .

## Starting or Joining a Meet-Me Conference Call

Meet-Me conferencing allows you to start or join a conference by calling the conference number.

<b>If you want to...</b>	<b>Then...</b>
Start a Meet-Me conference	<ol style="list-style-type: none"><li>1. Obtain a Meet-Me phone number from your system administrator.</li><li>2. Distribute the number to participants.</li><li>3. When you are ready to start the meeting, go off-hook to invoke a dial tone, then press <b>MeetMe</b>.</li><li>4. Dial the Meet-Me conference number. Participants can now join the conference by dialing in.</li></ol> <p><b>Note</b> Participants hear a busy tone if they call the conference before the initiator has joined. In this case, participants must call back.</p>

If you want to...	Then...
Join a Meet-Me conference	Dial the Meet-Me conference number (provided by the conference initiator). <b>Note</b> You will hear a busy tone if you call the conference before the initiator has joined. In this case, try your call again.
End a Meet-Me conference	All participants must hang up. The conference does not automatically end when the conference initiator disconnects.

### Tip

If you call a secure Meet-Me conference number from a non-secure phone, your phone displays the message, “Device Not Authorized.” For more information, see [Making and Receiving Secure Calls, page 44](#).

## Placing or Receiving Intercom Calls

You can make an intercom call to a target phone that auto-answers the call in speakerphone mode with mute activated. The one-way intercom call allows you to deliver a short message to the recipient. If the recipient’s handset or headset is in use, the audio is sent to the device that is use. Any current call activity that your recipient is engaged in continues simultaneously.

The target destination receives an intercom-alert tone and can then choose to:

- Listen to the caller with your microphone muted (you can hear the caller but the caller cannot hear you).
- End the intercom call by pressing the EndCall softkey with the intercom call in focus. Do this if you do not want to hear the message.
- Talk to the caller by pressing the active intercom button, and use either the handset, headset or speaker. The intercom call becomes a two-way connection so that you can converse with the caller.




When using the intercom feature, be aware of the following:

- From an intercom line, you can only dial other intercom lines.
- You can use only one intercom line at a time.
- When your active call is being monitored or recorded, you cannot receive or place intercom calls.
- You cannot place an intercom call on hold.



### Note

If you log into your desk phone every day using your Extension Mobility profile, make sure that your system administrator configures your Extension Mobility profile to include the intercom feature.

If you want to...	Then...
Place an intercom call to a preconfigured intercom target	Press  and, after you hear the intercom-alert tone, begin speaking.
Place an intercom call to any intercom number	Press  (an intercom line). Enter the intercom target number or press a speed-dial number for your target. After you hear the intercom-alert tone, begin speaking.
Receive an intercom call	<p>When you hear the intercom-alert tone, handle the call in one of these ways:</p> <ul style="list-style-type: none"> <li>• Listen to the message in one-way audio.</li> <li>• Speak to the caller by pressing  (the active intercom line).</li> <li>• Press <b>EndCall</b> with the intercom call in focus.</li> </ul>

# Advanced Call Handling

---

Advanced call-handling tasks involve special features that your system administrator might configure for your phone depending on your call-handling needs and work environment.

## Speed Dialing

Speed dialing allows you to enter an index number, press a button, or select a phone screen item to place a call. Depending on configuration, your phone can support several speed-dial features:


- Speed-dial buttons
- Abbreviated Dialing
- Fast Dials



---

**Note**

- To set up speed-dial buttons and Abbreviated Dial, you must access your User Options web pages. See [Accessing Your User Options Web Pages, page 61](#).
  - To set up Fast Dials, you must access the Personal Directory feature. See [Using Personal Directory on Your Phone, page 57](#).
  - Alternately, your system administrator can configure speed-dial features for you.
- 

If you want to...	Then...
Use speed-dial buttons	<ol style="list-style-type: none"><li>1. Set up speed-dial buttons. See the <a href="#">“Setting Up Speed Dials on the Web” section on page 64</a>.</li><li>2. To place a call, press  (a speed-dial button).</li></ol> <p><b>Note</b> If your phone supports the Busy Lamp Field (BLF) speed-dial feature, you can see if the speed-dial number is busy before dialing. See <a href="#">Using BLF to Determine a Line State, page 44</a>.</p>
Use Abbreviated Dial	<ol style="list-style-type: none"><li>1. Set up Abbreviated Dialing codes. See <a href="#">Setting Up Speed Dials on the Web, page 64</a>.</li><li>2. To place a call, enter the Abbreviated Dialing code and press <b>AbbrDial</b>.</li></ol>
Use Fast Dial	<ol style="list-style-type: none"><li>1. Create a Personal Address Book entry and assign a Fast Dials code. See <a href="#">Using Personal Directory on the Web, page 62</a>.</li><li>2. To place a call, access the Fast Dial service on your phone. See <a href="#">Using Personal Directory on Your Phone, page 57</a>.</li></ol>


# Picking Up a Redirected Call on Your Phone

Call PickUp allows you to answer a call that is ringing on a coworker's phone by redirecting the call to your phone. You might use Call PickUp if you share call-handling with coworkers.

If you want to...	Then...
Answer a call that is ringing on another extension within your call pickup group	<ol style="list-style-type: none"><li>1. Do one of the following:<ul style="list-style-type: none"><li>• If the <b>PickUp</b> button or softkey is available, press it.</li><li>• If the <b>PickUp</b> button or softkey is not available, go off-hook to display the <b>PickUp</b> softkey, then press it.</li></ul>If your phone supports auto-pickup, you are now connected to the call.</li><li>2. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>
Answer a call that is ringing on another extension outside of your group	<ol style="list-style-type: none"><li>1. Do one of the following:<ul style="list-style-type: none"><li>• If the <b>GPickUp</b> softkey or <b>Group PickUp</b> button is available, press it.</li><li>• If the <b>GPickUp</b> softkey or <b>Group PickUp</b> button is not available, go off-hook to display the <b>GPickUp</b> softkey, then press it.</li></ul></li><li>2. Enter the group pickup code. If your phone supports auto-pickup, you are now connected to the call.</li><li>3. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>
Answer a call that is ringing on another extension in your group or in an associated group	<ol style="list-style-type: none"><li>1. Do one of the following:<ul style="list-style-type: none"><li>• If the <b>OPickUp</b> softkey or <b>Other PickUp</b> button is available, press it.</li><li>• If the <b>OPickUp</b> softkey or <b>Other PickUp</b> button is not available, go off-hook to display the <b>OPickUp</b> softkey, then press it.</li></ul>If your phone supports auto-pickup, you are now connected to the call.</li><li>2. If the call rings, press <b>Answer</b> to connect to the call.</li></ol>

## Tips







- Depending on how your phone is configured, you might receive an audio and/or visual alert about a call to your pickup group.

- Pressing **PickUp**, **GPickUp** or **Group PickUp** connects you to the call that has been ringing for the longest time.
- Pressing **OPickUp** or **Other PickUp** connects you to the call in the pickup group with the highest priority.
- If you have multiple lines and want to pick up the call on a non-primary line, first press  for the desired line, then press a Call PickUp button or softkey.

## Storing and Retrieving Parked Calls

You can park a call when you want to store the call so that you or someone else can retrieve it from another phone in the Cisco Unified Communications Manager system (for example, a phone at a co-worker's desk or in a conference room). You can park a call by using these methods:

- **Call Park**—Use the **Park** softkey to store the call. Your phone displays the call park number where the system stored your call. You must record this number and then use the same number to retrieve the call.
- **Directed Call Park**—Use the **Transfer** softkey to direct the call to an available directed call park number that you dial or speed dial. To retrieve the call from a directed call park number, dial the park retrieval prefix, then dial or speed dial the same directed call park number. You can use a Directed Call Park button to speed-dial the directed call park number and to monitor whether a directed call park number is occupied or available.

If you want to...	Then...
Store an active call using Call Park	<ol style="list-style-type: none"> <li>1. During a call, press <b>Park</b>. (You may need to press the <b>more</b> softkey to see <b>Park</b>.)</li> <li>2. Note the call park number displayed on your phone screen.</li> <li>3. Hang up.</li> </ol>
Retrieve a parked call	Enter the call park number from any Cisco Unified IP Phone in your network to connect to the call.
Direct and store an active call at a directed call park number	<ol style="list-style-type: none"> <li>1. During a call, press <b>Transfer</b>.</li> <li>2. Press Directed Call Park  with the park-unoccupied icon  to speed dial the directed call park number. A Directed Call Park  (flashing) with park-occupied icon  indicates the directed call park number is not available.</li> <li>3. Press <b>Transfer</b> again to finish storing the call.</li> </ol>
Retrieve a parked call from a directed call park number	From any Cisco Unified IP Phone in your network, enter the park retrieval prefix and dial the directed call park number. Or after entering the park retrieval prefix, press the  (flashing) with  to connect to the call.


## Tips

- You have a limited time to retrieve a parked call before it reverts to ringing at the original number. See your system administrator for details.
- Your system administrator can assign Directed Call Park buttons to available line buttons on your Cisco Unified IP Phone 7965G that has a Cisco Unified IP Phone 7914 Expansion Module (the Cisco Unified IP Phone 7945G does not support the Cisco Unified IP Phone 7914 Expansion Module).
- You can dial directed call park numbers if you do not have Directed Call Park buttons on your phone. However, you will not be able to see the status of the directed call park number.

## Logging Out of Hunt Groups

If your organization receives a large number of incoming calls, you might be a member of a hunt group. A hunt group includes a series of directory numbers that share the incoming call load. When the first directory number in the hunt group is busy, the system hunts for the next available directory number in the group and directs the call to that phone.

When you are away from your phone, you can prevent hunt group calls from ringing your phone by logging out of hunt groups.

If you want to...	Then...
Log out of hunt groups to temporarily block hunt group calls	Press <b>HLog</b> or <b>Hunt Group</b> . Your phone screen displays, “Logged out of Hunt Group.”
Log in to receive hunt group calls	Press <b>HLog</b> or <b>Hunt Group</b> softkey. When logged in, the Hunt Group  button is lit.

## Tip

Logging out of hunt groups does not prevent non-hunt group calls from ringing your phone.

## Using a Shared Line


Your system administrator might ask you to use a shared line if you:

- Have multiple phones and want one phone number
- Share call-handling tasks with coworkers
- Handle calls on behalf of a manager



# Understanding Shared Lines

## Remote-in-Use Icon

The remote-in-use icon  appears when another phone that shares your line has a connected call. You can place and receive calls as usual on the shared line, even when the remote-in-use icon appears.

## Sharing Call Information and Barging

Phones that share a line each display information about calls that are placed and received on the shared line. This information might include caller ID and call duration. (See the [Privacy](#) section for exceptions.)

When call information is visible in this way, you and coworkers who share a line can add yourselves to calls using either **Barge** or **cBarge**. See [Using Barge to Add Yourself to a Shared-Line Call](#), page 41.

## Privacy

If you do not want coworkers who share your line to see information about your calls, enable the Privacy feature. Doing so also prevents coworkers from barging your calls. See [Preventing Others from Viewing or Barging a Shared-Line Call](#), page 43.



### Note

---

The maximum number of calls that a shared line supports can vary by phone.

---

# Using Barge to Add Yourself to a Shared-Line Call

You can use barge features (cBarge or Barge) to add yourself to calls on your shared line. (Calls must be non-private calls. See [Using a Shared Line](#), page 40.)

## Understanding Barge Features

### cBarge and Barge

Depending on how your phone is configured, you can add yourself to a call on a shared line using either cBarge or Barge:

- cBarge converts the call into a standard conference, allowing you to add new participants. (See [Making Conference Calls](#), page 30 for information about standard conferences.)
- Barge allows you to add yourself to the call but does not convert the call into a conference or allow you to add new participants.




### Single-button and Multi-touch Barge

Your system administrator determines whether the barge feature on your phone (cBarge or Barge) operates as a single-button or multi-touch feature.

- Single button barge allows you to press a line button to barge a call.
- Multi-touch barge allows you to view call information before barging.

## Using Barge Features

The table below describes how to use barge features to add yourself to a call on a shared line.







If you want to...	Then...
See if the shared line is in use	Look for the remote-in-use icon  next to a red line button  .
Add yourself to a call on a shared line	<p>Press the red line button  for the shared line.</p> <p>One of the following occurs:</p> <ul style="list-style-type: none"> <li>• You are added to the call.</li> <li>• A window opens on your phone screen prompting you to select the call that you want to barge. Press <b>Barge</b> or <b>cBarge</b> to complete the action. (You may need to press the <b>more</b> softkey to display <b>Barge</b> or <b>cBarge</b>.)</li> </ul>
View conference participants (if you used cBarge)	See <a href="#">Viewing or Removing Conference Participants, page 34</a> .

### Tips

- When you barge a call, other parties hear a beep tone announcing your presence. With cBarge, other parties hear a brief audio interruption and the phone screen changes to display conference details.
- If a phone that is using the shared line has Privacy enabled, call information and barge softkeys will not appear on the other phones that share the line.
- You will be disconnected from a call that you have joined using Barge if the call is put on hold, transferred, or turned into a conference call.

# Preventing Others from Viewing or Barging a Shared-Line Call

If you share a phone line, you can use the Privacy feature to prevent others who share the line from viewing or barging (adding themselves to) your calls.












If you want to...	Then...
Prevent others from viewing or barging calls on a shared line	<ol style="list-style-type: none"><li data-bbox="534 331 776 363">1. Press <b>Private</b> .</li><li data-bbox="534 370 1224 435">2. To verify that Privacy is on, look for the feature-enabled icon  next to an amber line button .</li></ol>
Allow others to view or barge calls on a shared line	<ol style="list-style-type: none"><li data-bbox="534 444 776 477">1. Press <b>Private</b> .</li><li data-bbox="534 483 1233 548">2. To verify that Privacy is off, look for the feature-disabled icon  next to an unlit line button .</li></ol>

## Tips

- If the phone that shares your line has Privacy enabled, you can make and receive calls using the shared line as usual.
- The Privacy feature applies to all shared lines on your phone. Consequently, if you have multiple shared lines and Privacy is enabled, coworkers cannot view or barge calls on any of your shared lines.

## Using BLF to Determine a Line State

Depending on configuration, you can use the Busy Lamp Field (BLF) feature to determine the state of a phone line associated with a speed-dial button, call log, or directory listing on your phone. You can place a call to this line, regardless of the BLF status. This feature does not prevent dialing.

If you want to...	Then...
See the state of a speed-dial line	Look for one of these indicators next to the line number:  +  Line is in-use.  +  Line is idle.  BLF indicator unavailable for this line.  +  Line is in Do Not Disturb state.
See the state of a line listed in a call log or directory	Look for one of these indicators next to the line number:  Line is in-use.  Line is idle.  BLF indicator unavailable for this line.  Line is in Do Not Disturb state.




## Making and Receiving Secure Calls

Depending on how your system administrator has configured your phone system, your phone might support making and receiving secure calls.

Your phone can support these types of calls:

- *Authenticated* call—The identities of all phones participating in the call have been verified.
- *Encrypted* call—The phone is receiving and transmitting encrypted audio (your conversation) within the Cisco IP network. Encrypted calls are also authenticated.

- *Non-secure call*—At least one of the participating phones or the connection does not support these security features, or the phones cannot be verified.

If you want to...	Then...
Check the security level of a call or conference	Look for a security icon in the top right corner of the call activity area, next to the call duration timer: <ul style="list-style-type: none"> <li data-bbox="557 337 987 375"> Authenticated call or conference</li> <li data-bbox="557 380 947 417"> Encrypted call or conference</li> <li data-bbox="557 422 960 459"> Non-secure call or conference</li> </ul>
Determine if secure calls can be made in your company	Contact your system administrator.



**Note**

There are interactions, restrictions, and limitations that affect how security features work on your phone. For more information, ask your system administrator.

## Tracing Suspicious Calls

(SCCP phones only.)

If you are receiving suspicious or malicious calls, your system administrator can add the Malicious Call Identification (MCID) feature to your phone. This feature enables you to identify an active call as suspicious, which initiates a series of automated tracking and notification messages.

If you want to...	Then...
Notify your system administrator about a suspicious or harassing call	Press <b>MCID</b> or <b>Malicious Call ID</b> . Your phone plays a tone and displays the message, “MCID successful.”





## Prioritizing Critical Calls

(SCCP phones only.)

In some specialized environments, such as military or government offices, you might need to make and receive urgent or critical calls. If you have the need for this specialized call handling, your system administrator can add Multilevel Precedence and Preemption (MLPP) to your phone.

Keep these terms in mind:

- *Precedence* indicates the priority associated with a call.
- *Preemption* is the process of ending an existing, lower priority call while accepting a higher priority call that is sent to your phone.



If you...	Then...
Want to choose a priority (precedence) level for an outgoing call	Contact your system administrator for a list of corresponding precedence numbers for calls.
Want to make a priority (precedence) call	Enter the MLPP access number (provided by your system administrator) followed by the phone number.
Hear a special ring (faster than usual) or special call waiting tone	You are receiving a priority (precedence) call. An MLPP icon on your phone screen indicates the priority level of the call.
Want to view priority level of a call	<p>Look for an MLPP icon on your phone screen:</p> <ul style="list-style-type: none"> <li> Priority call</li> <li> Medium priority (immediate) call</li> <li> High priority (flash) call</li> <li> Highest priority (flash override) or Executive Override call</li> </ul> <p>Higher priority calls are displayed at the top of your call list. If you do not see an MLPP icon, the priority level of the call is normal (routine).</p>
Hear a continuous tone interrupting your call	You or the other party are receiving a call that must preempt the current call. Hang up immediately to allow the higher priority call to ring through.

## Tips

- When you make or receive an MLPP-enabled call, you will hear special ring tones and call waiting tones that differ from the standard tones.
- If you enter an invalid MLPP access number, a verbal announcement will alert you of the error.
- An MLPP-enabled call retains its priority and preemptive status when you:
  - Put the call on hold
  - Transfer the call
  - Add the call to a three-way conference
  - Answer the call using PickUp
- MLPP overrides the Do Not Disturb feature.

# Using Cisco Extension Mobility

Cisco Extension Mobility (EM) allows you to temporarily configure a Cisco Unified IP Phone as your own. Once you log in to EM, the phone adopts your user profile, including your phone lines, features, established services, and web-based settings. Your system administrator must configure EM for you.

If you want to...	Then...
Log in to EM	<ol style="list-style-type: none"><li>1. Choose  &gt; EM Service (name can vary).</li><li>2. Enter your user ID and PIN (provided by your system administrator).</li><li>3. If prompted, select a device profile.</li></ol>
Log out of EM	<ol style="list-style-type: none"><li>1. Choose  &gt; EM Service (name can vary).</li><li>2. When prompted to log out, press Yes.</li></ol>

## Tips

- EM automatically logs you out after a certain amount of time. Your system administrator establishes this time limit.
- Changes that you make to your EM profile from your User Options web pages take effect immediately if you are logged in to EM on the phone; otherwise, changes take effect the next time you log in.
- Changes that you make to the phone from your User Options web pages take effect immediately if you are logged out of EM; otherwise, changes take effect after you log out.
- Local settings controlled by the phone are not maintained in your EM profile.

# Managing Business Calls Using a Single Phone Number

With Mobile Connect and Mobile Voice Access installed, you can use your cellular phone to handle calls associated with your desktop phone number. A *smartphone* is a mobile phone with personal computer capabilities such as web browsing, email, address book, and calendar.

If you want to...	Then...
Configure Mobile Connect	Use the User Options web pages to set up remote destinations and create access lists to allow or block calls from specific phone numbers from being passed to the remote destinations. See <a href="#">Setting Up Phones and Access Lists for Mobile Connect</a> , page 69.
Answer a call using your cellular phone	See <a href="#">Answering a Call</a> , page 22.
Switch an in-progress call between your desk phone and cellular phone	See <a href="#">Switching an In-Progress Call to Another Phone</a> , page 26.

If you want to...	Then...
Put a call that has been picked up on a smartphone on hold	<ol style="list-style-type: none"> <li>1. Press the <i>Enterprise Hold</i> (exact softkey name can vary) softkey on the smartphone. The other party is placed on hold.</li> <li>2. Press the <i>Resume</i> (exact softkey name can vary) softkey on the smartphone. See <a href="#">Switching an In-Progress Call to Another Phone, page 26</a>.</li> </ol>
Transfer a call that has been picked up on a smartphone to another number	<ol style="list-style-type: none"> <li>1. Press the <i>Enterprise Transfer</i> (exact softkey name can vary) softkey on the smartphone.</li> <li>2. Dial your enterprise access code for transferring calls to initiate a new call. The other party is placed on hold.</li> <li>3. Press the <i>Enterprise Transfer</i> softkey to complete the call transfer.</li> </ol>
Initiate a conference call on a call that has been picked up on a smartphone	<ol style="list-style-type: none"> <li>1. Press the <i>Enterprise Conference</i> (exact softkey name can vary) softkey on the smartphone.</li> <li>2. Dial your enterprise access code for conferencing to initiate a new call. The other party is placed on hold.</li> <li>3. Press the <i>Enterprise Conference</i> softkey to complete the conference set-up and include both callers in the conference.</li> </ol>
Connect to Mobile Voice Access	<ol style="list-style-type: none"> <li>1. From any phone, dial your assigned Mobile Voice Access number.</li> <li>2. Enter the number you are calling from, if prompted, and your PIN.</li> </ol>
Turn on Mobile Connect from your cellular phone	<ol style="list-style-type: none"> <li>1. Dial your assigned Mobile Voice access number.</li> <li>2. Enter your cellular phone number (if requested) and PIN.</li> <li>3. Press <b>2</b> to enable Mobile Connect.</li> <li>4. Choose whether to turn Mobile Connect on for all configured phones or just one: <ul style="list-style-type: none"> <li>- All phones—Enter <b>2</b>.</li> <li>- One phone—Enter <b>1</b> and enter the number you want to add as a remote destination, followed by <b>#</b>.</li> </ul> </li> </ol>












If you want to...	Then...
Make a call from your cellular phone	See <a href="#">Placing a Call—Additional Options, page 20</a> .
Turn off Mobile Connect from your cellular phone	<ol style="list-style-type: none"> <li>1. Dial your assigned Mobile Voice access number.</li> <li>2. Enter your cellular phone number (if requested) and PIN.</li> <li>3. Press 3 to disable Mobile Connect.</li> <li>4. Choose whether to turn Mobile Connect off for all configured phones or just one: <ul style="list-style-type: none"> <li>– All phones—Enter 2.</li> <li>– One phone—Enter 1 and enter the number you want to remove as a remote destination, followed by #.</li> </ul> </li> </ol>

### Tips

- When calling Mobile Voice Access, you need to enter the number you are call from in addition to the PIN if any of the following are true:
  - The number you are calling from is not one of your remote destinations.
  - The number is blocked by you or your carrier (shown as “Unknown Number”).
  - The number is not accurately matched in the Cisco Unified Communications Manager database; for example, if your number is 510-666-9999, but it is listed as 666-9999 in the database, or your number is 408-999-6666, but it is entered as 1-408-999-6666 in the database.
- If you incorrectly enter any requested information (such as cellular phone number or PIN) three times in a row, the Mobile Voice Access call disconnects, and you are locked out for a period of time. Contact your system administrator if you need assistance.

# Using a Handset, Headset, and Speakerphone

You can use your phone with a handset, headset, or speakerphone.




If you want to...	Then...
Use the handset	Lift it to go off-hook; replace it to go on-hook.
Use a headset	<p>Press  to toggle headset mode on and off. You can use a headset with all of the controls on your phone, including  and .</p> <p>If you use AutoAnswer, see <a href="#">Using AutoAnswer, page 51</a>.</p> <p>If you use a headset that supports wideband, you might experience improved audio sensitivity if you enable the wideband setting on your phone (this setting is disabled by default). To access the setting, choose  &gt; <b>User Preferences &gt; Audio Preferences &gt; Wideband Headset</b>. If the Wideband Headset setting is disabled (shows as dimmed), then this setting is not user controllable.</p> <p>Check with your system administrator to be sure your phone system is configured to use wideband. If the system is not configured for wideband, you may not detect any additional audio sensitivity even when using a wideband headset. To learn more about your headset, refer to the headset documentation or ask your system administrator for assistance.</p>
Use the speakerphone	<p>Press  to toggle speakerphone mode on or off.</p> <p>Many of the actions you can take to dial a number or answer a call will automatically trigger speakerphone mode, assuming that the handset is in its cradle and  is not lit.</p>
Switch to the speakerphone or a headset (from the handset) during a call	Press  or  , then hang up the handset.
Switch to the handset (from the speakerphone or headset) during a call	Lift the handset (without pushing any buttons).
Adjust the volume level for a call	<p>Press  during a call or after invoking a dial tone.</p> <p>This action adjusts the volume for the handset, speakerphone, or headset, depending on which device is in use.</p> <p>Press <b>Save</b> to preserve the volume level for future calls.</p>

# Obtaining a Headset

Your phone supports four- or six-wire headset jacks. For information about purchasing headsets, see [Headset Information, page 6](#).

## Using AutoAnswer

When AutoAnswer is enabled, your phone answers incoming calls automatically after a few rings. Your system administrator configures AutoAnswer to use either the speakerphone or a headset. You might use AutoAnswer if you receive a high volume of incoming calls.

If you...	Then...
Use AutoAnswer with a headset	Keep headset mode active (in other words, keep  illuminated), even when you are not on a call.  To keep headset mode active, do the following: <ul style="list-style-type: none"><li>• Press <b>EndCall</b> to hang up.</li><li>• Press <b>New Call</b> or <b>Dial</b> to place new calls.</li></ul> If your phone is set up to use AutoAnswer in headset mode, calls are automatically answered only if  is illuminated. Otherwise, calls ring normally and you must manually answer them.
Use AutoAnswer with the speakerphone	Keep the handset in the cradle and headset mode inactive (  unlit). Otherwise, calls ring normally and you must manually answer them.

### Tip

AutoAnswer is disabled when Do Not Disturb is active.



# Changing Phone Settings

---

You can personalize your Cisco Unified IP Phone by adjusting the ring tone, background image, and other settings.






## Customizing Rings and Message Indicators

You can customize how your phone indicates an incoming call and a new voice mail message. You can also adjust the ringer volume for your phone.


If you want to...	Then...
Change the ring tone per line	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>User Preferences</b> &gt; <b>Rings</b>.</li><li>2. Choose a phone line or the default ring setting.</li><li>3. Choose a ring tone to play a sample of it.</li><li>4. Press <b>Select</b> and <b>Save</b> to set the ring tone, or press <b>Cancel</b>.</li></ol>
Change the ring pattern per line (flash-only, ring once, beep-only, etc.)	<ol style="list-style-type: none"><li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 61.</a>)</li><li>2. Access your call ring pattern settings. (See <a href="#">Controlling Line Settings on the Web, page 67.</a>)</li></ol> <p><b>Note</b> Before you can access this setting, your system administrator might need to enable it for you.</p>
Adjust the volume level for the phone ringer	Press  while the handset is in the cradle and the headset and speakerphone buttons are off. The new ringer volume is saved automatically.
Change the way that the voice message light on your handset works	<ol style="list-style-type: none"><li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 61.</a>)</li><li>2. Access your message indicator settings. (See <a href="#">Controlling Line Settings on the Web, page 67.</a>)</li></ol> <p><b>Note</b> Typically, the default system policy is to indicate a new voice message by displaying a steady light on the handset light strip.</p>

# Customizing the Phone Screen

You can adjust the characteristics of the phone screen.







If you want to...	Then...
Change the phone screen brightness	<ol style="list-style-type: none"> <li>1. Choose  &gt; User Preferences &gt; Brightness.</li> <li>2. To make adjustments, press Up, Down or .</li> <li>3. Press Save, or press Cancel.</li> </ol>
Change the background image	<ol style="list-style-type: none"> <li>1. Choose  &gt; User Preferences &gt; Background Images.</li> <li>2. Scroll through available images and press Select to choose an image.</li> <li>3. Press Preview to see a larger view of the background image.</li> <li>4. Press Exit to return to the selection menu.</li> <li>5. Press Save to accept the new image, or press Cancel.</li> </ol>
Change the language on your phone screen	<ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 61.</a>)</li> <li>2. Access your user settings. (See <a href="#">Controlling User Settings on the Web, page 66.</a>)</li> </ol>
Change the line text label	<ol style="list-style-type: none"> <li>1. Log in to your User Options web pages. (See <a href="#">Accessing Your User Options Web Pages, page 61.</a>)</li> <li>2. Access your line label settings. (See <a href="#">Controlling Line Settings on the Web, page 67.</a>)</li> </ol>
Adjust contrast for your Cisco Unified IP Phone Expansion Module 7914 (SCCP phones with Expansion Modules only)	<ol style="list-style-type: none"> <li>1. Choose  &gt; User Preferences &gt; Contrast.</li> <li>2. To make adjustments, press Up, Down or .</li> <li>3. Press Save, or press Cancel.</li> </ol> <p><b>Note</b> The Cisco Unified IP Phone 7945G does not support the Cisco Unified IP Phone 7914 Expansion Module.</p>
Turn off illumination of the phone screen	<p>Contact your system administrator to see if this optional feature is available to you. This feature allows you to turn off phone screen illumination for a pre-determined time (as set by your system administrator).</p>





# Using Call Logs and Directories

This section describes how you can use call logs and directories. To access both features, use the Directories button .

## Using Call Logs

Your phone maintains call logs. Call logs contain records of your missed, placed, and received calls.

If you want to...	Then...
View your call logs	Choose  > <b>Missed Calls, Placed Calls, or Received Calls</b> . Each stores up to 100 records.
Display details for a single call record	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Missed Calls, Placed Calls, or Received Calls</b>.</li><li>2. Highlight a call record.</li><li>3. <b>Press Details</b>. Doing so displays information such as called number, calling number, time of day, and call duration (for placed and received calls only).</li></ol>
Erase all call records in all logs	Press  , then press <b>Clear</b> .
Erase all call records in a single log	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Missed Calls, Placed Calls, or Received Calls</b>.</li><li>2. Highlight a call record.</li><li>3. <b>Press Clear</b>. (You may need to press the <b>more</b> softkey to display <b>Clear</b>.)</li></ol>
Erase a single call record	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Missed Calls, Placed Calls, or Received Calls</b>.</li><li>2. Highlight a call record.</li><li>3. <b>Press Delete</b>.</li></ol>
Dial from a call log (while not on another call)	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Missed Calls, Placed Calls, or Received Calls</b>.</li><li>2. Highlight a call record.</li></ol> <p><b>Note</b> If the <b>Details</b> softkey appears, the call is the primary entry of a multiparty call. See the <a href="#">Tip</a> section below.</p> <ol style="list-style-type: none"><li>3. If you need to edit the displayed number, press <b>EditDial</b> followed by &lt;&lt; or &gt;&gt;. To delete the number, press <b>EditDial</b> followed by <b>Delete</b>. (You may need to press the <b>more</b> softkey to display <b>Delete</b>.)</li><li>4. Go off-hook to place the call.</li></ol>

If you want to...	Then...
Dial from a call log (while connected to another call)	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Missed Calls, Placed Calls, or Received Calls.</b></li> <li>2. Highlight a call record.</li> </ol> <p><b>Note</b> If the Details softkey appears, the call is the primary entry of a multiparty call. See the <a href="#">Tip</a> section below.</p> <ol style="list-style-type: none"> <li>3. If you need to edit the displayed number, press <b>EditDial</b> followed by &lt;&lt; or &gt;&gt;. To delete the number, press <b>EditDial</b> followed by <b>Delete</b>. (You may need to press the <b>more</b> softkey to display <b>Delete</b>.)</li> <li>4. Press <b>Dial</b>.</li> <li>5. Choose a menu item to handle the original call: <ul style="list-style-type: none"> <li>• <b>Hold</b>—Puts the first call on hold and dials the second.</li> <li>• <b>Transfer</b>—Transfers the first party to the second and drops you from the call. (Press <b>Transfer</b> again after dialing to complete the action.)</li> <li>• <b>Conference</b>—Creates a conference call with all parties, including you. (<b>Confrn</b> or <b>Conference</b> again after dialing to complete the action.)</li> <li>• <b>EndCall</b>—Disconnects the first call and dials the second.</li> </ul> </li> </ol>
See if the line in the call log is busy before placing a call to that line	Look for Busy Lamp Field indicators. See <a href="#">Using BLF to Determine a Line State, page 44</a> .
Place a call from a URL entry in a call log (SIP phones only)	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Missed Calls, Placed Calls, or Received Calls.</b></li> <li>2. Highlight the URL entry that you want to dial.</li> <li>3. If you need to edit the entry, press <b>EditDial</b>.</li> <li>4. The  icon appears to indicate that you can begin editing characters in the URL entry.</li> <li>5. Press <b>Dial</b>.</li> </ol>
View intercom call history	Choose  > <b>Intercom History</b> . Details of the 25 most recent intercom calls are logged. You cannot dial intercom numbers from this screen.

## Tip

(SCCP phones only)

To view the complete call record of a multiparty call (for example, of call that has been forwarded or transferred to you), highlight the call record and press **Details**. The Details record shows two entries for each missed or received multiparty call. The entries are listed in reverse chronological order:

- The first logged entry is the name/number of the last completed call of a multiparty call received on your phone.

- The second logged entry is the name/number of the first completed call of a multiparty call received on your phone.



## Directory Dialing

Depending on configuration, your phone can provide corporate and personal directory features:

- **Corporate Directory**—Corporate contacts that you can access on your phone. Your system administrator sets up and maintains your Corporate Directory.
- **Personal Directory**—If available, personal contacts and associated speed-dial codes that you can configure and access from your phone and User Options web pages. Personal Directory is comprised of Personal Address Book (PAB) and Fast Dials:
  - PAB is a directory of your personal contacts.
  - Fast Dials allows you to assign codes to PAB entries for quick dialing.

## Using Corporate Directory on Your Phone

You can use a corporate directory to place calls to coworkers.

If you want to...	Then...
Dial from a corporate directory (while not on another call)	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Corporate Directory</b> (exact name can vary).</li> <li>2. User your keypad to enter a full or partial name and press <b>Search</b>.</li> <li>3. To dial, press the listing, or scroll to the listing and go off-hook.</li> </ol>
Dial from a corporate directory (while on another call)	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Corporate Directory</b> (exact name can vary).</li> <li>2. User your keypad to enter a full or partial name and press <b>Search</b>.</li> <li>3. Scroll to a listing and press <b>Dial</b>.</li> <li>4. Choose a menu item to handle the original call:           <ul style="list-style-type: none"> <li>• <b>Hold</b>—Puts the first call on hold and dials the second.</li> <li>• <b>Transfer</b>—Transfers the first party to the second and drops you from the call. (Press <b>Transfer</b> again after dialing to complete the action.)</li> <li>• <b>Conference</b>—Creates a conference call with all parties, including you. (Press <b>Confrn</b> or <b>Conference</b> again after dialing to complete the action.)</li> <li>• <b>EndCall</b>—Disconnects the first call and dials the second.</li> </ul> </li> </ol>
See if the phone line in the directory is busy	Look for Busy Lamp Field (BLF) indicators. See <a href="#">Using BLF to Determine a Line State, page 44</a> .







## Tip

Use the numbers on your keypad to enter characters on your phone screen. Use the Navigation button on your phone to move between input fields.

## Using Personal Directory on Your Phone

The Personal Directory feature set contains your Personal Address Book (PAB) and Fast Dials. This section describes how to set up and use Personal Directory on your phone. Alternately, see the [“Using Personal Directory on the Web”](#) section on page 62.


If you want to...	Then...
Access Personal Directory (for PAB and Fast Dial codes)	<ol style="list-style-type: none"><li>1. Choose  &gt; <b>Personal Directory</b> (exact name can vary).</li><li>2. Enter your Cisco Unified Communications Manager user ID and PIN, then press <b>Submit</b>.</li></ol>
Search for a PAB entry	<ol style="list-style-type: none"><li>1. Access Personal Directory, then choose <b>Personal Address Book</b>.</li><li>2. Enter search criteria and press <b>Submit</b>.</li><li>3. You can choose <b>Previous</b> or <b>Next</b> to move through listings.</li><li>4. Highlight the PAB listing that you want and press <b>Select</b>.</li></ol>
Dial from PAB entry	<ol style="list-style-type: none"><li>1. Search for a listing.</li><li>2. Highlight the listing and press <b>Select</b>.</li><li>3. Press <b>Dial</b>. (You may need to press the <b>more</b> softkey to see <b>Dial</b>.)</li><li>4. Enter the participant’s phone number.</li><li>5. Highlight the number that you want to dial and press <b>OK</b>.</li><li>6. Press <b>OK</b> again to dial the number.</li></ol>
Delete a PAB entry	<ol style="list-style-type: none"><li>1. Search for a listing.</li><li>2. Highlight the listing and press <b>Select</b>.</li><li>3. Press <b>Delete</b>.</li><li>4. Choose <b>OK</b> to confirm the deletion.</li></ol>
Edit a PAB entry	<ol style="list-style-type: none"><li>1. Search for a listing.</li><li>2. Highlight the listing and press <b>Edit</b> to modify a name or email address.</li><li>3. If necessary, choose <b>Phones</b> to modify a phone number.</li><li>4. Press <b>Update</b>.</li></ol>

If you want to...	Then...
Add a new PAB entry	<ol style="list-style-type: none"> <li>1. Access Personal Directory, then choose <b>Personal Address Book</b>.</li> <li>2. Access the Search page by choosing <b>Submit</b>. (You do not need to input search information first.)</li> <li>3. Press <b>New</b>.</li> <li>4. Use your phone keypad to enter a name and email information.</li> <li>5. Choose <b>Phones</b> and use the keypad to enter phone numbers. Be sure to include any necessary access codes such as a 9 or 1.</li> <li>6. Choose <b>Submit</b> to add the entry to the database.</li> </ol>
Assign a Fast Dial code to a PAB entry	<ol style="list-style-type: none"> <li>1. Search for a PAB entry.</li> <li>2. Highlight the listing and press <b>Select</b>.</li> <li>3. Press <b>Fast Dial</b>.</li> <li>4. Highlight the number that you want to dial and press <b>Select</b>.</li> <li>5. Highlight the Fast Dial code that you want to assign to the number and press <b>Select</b>.</li> </ol>
Add a new Fast Dial code (not using a PAB entry)	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Personal Directory</b> &gt; <b>Personal Fast Dials</b>.</li> <li>2. Press <b>Fast Dial</b>.</li> <li>3. Highlight a Fast Dial code that is unassigned and press <b>Select</b>.</li> <li>4. Press <b>Assign</b>.</li> <li>5. Enter a phone number.</li> <li>6. Press <b>Update</b>.</li> </ol>
Search for Fast Dial codes	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Personal Directory</b> &gt; <b>Personal Fast Dials</b>.</li> <li>2. You can choose <b>Previous</b> or <b>Next</b> to move through listings.</li> <li>3. Highlight the listing that you want and press <b>Select</b>.</li> </ol>
Place a call using a Fast Dial code	<ol style="list-style-type: none"> <li>1. Search for a Fast Dial code.</li> <li>2. Highlight the listing you want and press <b>Select</b>.</li> <li>3. Press <b>Dial</b>.</li> <li>4. Choose <b>OK</b> to complete the action.</li> </ol>
Delete a Fast Dial code	<ol style="list-style-type: none"> <li>1. Search for a Fast Dial code.</li> <li>2. Highlight the listing you want and press <b>Select</b>.</li> <li>3. Press <b>Remove</b>.</li> </ol>
Log out of Personal Directory	<ol style="list-style-type: none"> <li>1. Choose  &gt; <b>Personal Directory</b> (exact name can vary).</li> <li>2. Choose <b>Logout</b>.</li> </ol>

**Tips**




- Your system administrator can provide you the user ID and PIN that you need to log in to Personal Directory.
- Personal Directory automatically logs you out after a certain amount of time. This time limit can vary. Ask your system administrator for more information.
- Use the numbers on your keypad to enter characters on your phone screen. Use the Navigation button on your phone to move between input fields.

# Accessing Voice Messages

To access voice messages, use the Messages button .



**Note** Your company determines the voice message service that your phone system uses. For the most accurate and detailed information, refer to the documentation that came with your voice message service.

If you want to...	Then...
Set up and personalize your voice message service	Press  and follow the voice instructions. If a menu appears on your phone screen, choose an appropriate menu item.
Check for your new voice messages	Look for: <ul style="list-style-type: none"> <li>• A steady red light on your handset. (This indicator can vary. See <a href="#">Customizing Rings and Message Indicators, page 52.</a>)</li> <li>• A flashing message waiting icon  and text message on your phone screen.</li> </ul> <p><b>Note</b> The red light and message waiting icon display only when you have a voice message on your primary line, even if you receive voice messages on other lines.</p> Listen for: <ul style="list-style-type: none"> <li>• A stutter tone from your handset, headset, or speakerphone when you place a call.</li> </ul> <p><b>Note</b> The stutter tone is line-specific. You hear it only when using the line with the waiting messages.</p>
Listen to your voice messages or access the voice messages menu	Press  . Depending on your voice message service, doing so either auto-dials the message service or provides a menu on your phone screen.
Send a call to a voice message system	Press <b>iDivert</b> . For more information, see the <a href="#">Sending a Call to a Voice Message System, page 28.</a>

# Using the User Options Web Pages

---

Your Cisco Unified IP Phone is a network device that can share information with other network devices in your company, including your personal computer. You can use your computer to log in to your Cisco Unified CM User Options web pages, where you can control features, settings, and services for your Cisco Unified IP Phone. For example, you can set up speed-dial buttons from your User Options web pages.

## Accessing Your User Options Web Pages

This section describes how to log in and select a phone device.

If you want to...	Then do this...
Log in to your User Options web pages	<ol style="list-style-type: none"><li data-bbox="370 675 1264 737">1. Obtain a User Options URL, user ID, and default password from your system administrator.</li><li data-bbox="370 743 1264 776">2. Open a web browser on your computer, enter the URL, and log on.</li><li data-bbox="370 782 1264 815">3. If prompted to accept security settings, click <b>Yes</b> or <b>Install Certificate</b>.</li></ol> <p data-bbox="411 821 1251 915">The Cisco Unified Communications Manager User Options main web page displays. From this page you can choose <b>User Options</b> to access User Settings, Directory features, a Personal Address Book, and Fast Dials.</p> <p data-bbox="411 922 1137 954">Or, to access phone-specific options, select a device (see below).</p>
Select a device after logging in	<ol style="list-style-type: none"><li data-bbox="370 977 1264 1071">1. After you have logged in to your User Options web pages, choose <b>User Options &gt; Device</b>.</li></ol> <p data-bbox="411 1078 874 1110">The Device Configuration page displays.</p> <ol style="list-style-type: none"><li data-bbox="370 1117 1264 1179">2. If you have multiple devices assigned to you, choose the appropriate device (phone model, Extension Mobility profile, or Remote Destination profile) from the Name drop-down menu.</li></ol> <p data-bbox="365 1185 1264 1247"><b>Note</b> Toolbar buttons located at the top of the Device Configuration page are specific to the selected device type.</p>
Select a configuration option after logging in	<ol style="list-style-type: none"><li data-bbox="370 1260 1264 1354">1. After you have logged in to your User Options web pages, choose <b>User Options</b> to access User Settings, Directory, Personal Address Book, Fast Dials, and Mobility Settings.</li><li data-bbox="370 1360 1264 1416">2. To return to the Device Configuration page from another page, choose <b>User Options &gt; Device</b>.</li></ol>

# Configuring Features and Services on the Web

The topics in this section describe how to configure features and services from your User Options web pages after logging in. See [Accessing Your User Options Web Pages, page 61](#).

## Using Personal Directory on the Web

The Personal Directory feature set that you can access on your computer consists of:

- A Personal Address Book (PAB)
- Fast Dials
- Cisco Unified Communications Manager Address Book Synchronizer



---

**Note** You can also access PAB and Fast Dials from your phone. See [Using Personal Directory on Your Phone, page 57](#).

---

## Using Your Personal Address Book on the Web

This section describes how to use your PAB from your User Options web pages.

<b>If you want to...</b>	<b>Then do this after you log in...</b>
Add a new PAB entry	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Personal Address Book</b>.</li><li>2. Click <b>Add New</b>.</li><li>3. Enter information for the entry.</li><li>4. Click <b>Save</b>.</li></ol>
Search for a PAB entry	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Personal Address Book</b>.</li><li>2. Specify search information and click <b>Find</b>.</li></ol>
Edit a PAB entry	<ol style="list-style-type: none"><li>1. Search for a PAB entry.</li><li>2. Click a name or nickname.</li><li>3. Edit the entry as needed and click <b>Save</b>.</li></ol>
Delete a PAB entry	<ol style="list-style-type: none"><li>1. Search for a PAB entry.</li><li>2. Select one or more entries.</li><li>3. Click <b>Delete Selected</b>.</li></ol>

## Configuring Fast Dials on the Web

This section describes how to assign Fast Dials from your User Options web pages.

If you want to...	Then do this after you log in...
Assign a Fast Dial code to a PAB entry	<ol style="list-style-type: none"><li>1. Create a PAB entry. See <a href="#">Using Your Personal Address Book on the Web, page 62</a>.</li><li>2. Choose <b>User Options &gt; Fast Dials</b>.</li><li>3. Click <b>Add New</b>.</li><li>4. Use the Search Options area to find the appropriate PAB entry.</li><li>5. Click a phone number in the Search Results area.</li><li>6. Change the Fast Dial code, if desired.</li><li>7. Click <b>Save</b>.</li></ol>
Assign a Fast Dial code to a phone number (without using a PAB entry)	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Fast Dials</b>.</li><li>2. Click <b>Add New</b>.</li><li>3. Change the Fast Dial code, if desired.</li><li>4. Enter a phone number.</li><li>5. Click <b>Save</b>.</li></ol>
Search for a Fast Dial entry	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Fast Dials</b>.</li><li>2. Specify search information and click <b>Find</b>.</li></ol>
Edit a Fast Dial phone number	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Fast Dials</b>.</li><li>2. Search for the Fast Dial entry that you want to edit.</li><li>3. Click on a component of the entry.</li><li>4. Change the phone number.</li><li>5. Click <b>Save</b>.</li></ol>
Delete a Fast Dial entry	<ol style="list-style-type: none"><li>1. Search for a Fast Dial.</li><li>2. Select one or more entries.</li><li>3. Click <b>Delete Selected</b>.</li></ol>

### Tips

- You can create up to 500 Fast Dial and PAB entries.
- You can create a new Fast Dial entry without using a PAB entry. Such Fast Dial entries are labeled “raw” in the User Options web pages and do not display a configurable text label.

## Using the Address Book Synchronization Tool

You can use the Address Book Synchronization Tool (TABSynch) to synchronize your existing Microsoft Windows Address Book (if applicable) with your PAB. Entries from your Microsoft Windows Address Book will then be accessible on your Cisco Unified IP Phone and User Options web pages. Your system administrator can give you access to TABSynch and provide detailed instructions.

## Setting Up Speed Dials on the Web

Depending on configuration, your phone can support several speed-dial features:

- Speed-dial buttons
- Abbreviated Dialing
- Fast Dials



**Note** For help using speed-dial features, see [Speed Dialing, page 37](#).

If you want to...	Then do this after you log in...
Set up speed-dial buttons	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Speed Dials</b>.</li><li>4. Enter a number and label for a speed-dial button (programmable button) on your phone.</li><li>5. Click <b>Save</b>.</li></ol> <p><b>Note</b> Your phone uses the ASCII Label field.</p>
Set up Abbreviated Dialing	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Speed Dials</b>.</li><li>4. Enter a number and label for an Abbreviated Dialing code.</li><li>5. Click <b>Save</b>.</li></ol>
Set up Fast Dials	See <a href="#">Configuring Fast Dials on the Web, page 63</a> . You can also set up Fast Dials on your phone. See <a href="#">Using Personal Directory on Your Phone, page 57</a> .






**Tip** You can set up a speed-dial button for each programmable button on your phone that is not reserved as line button. Alternately, use Abbreviated Dial or Fast Dial.



## Setting Up Phone Services on the Web

Phone services can include special phone features, network data, and web-based information (such as stock quotes and movie listings). You must first subscribe to a phone service before accessing it on your phone.

<b>If you want to...</b>	<b>Then do this after you log in...</b>
Subscribe to a service	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Phone Services</b>.</li><li>4. Click <b>Add New</b>.</li><li>5. Choose a service from the drop-down list and click <b>Next</b>.</li><li>6. Change the service label and/or enter additional service information, if available (optional).</li><li>7. Click <b>Save</b>.</li></ol>
Search for services	<ol style="list-style-type: none"><li>1. Select a device.</li><li>2. Click <b>Phone Services</b>.</li><li>3. Click <b>Find</b>.</li></ol>
Change or end services	<ol style="list-style-type: none"><li>1. Search for services.</li><li>2. Select one or more entries.</li><li>3. Click <b>Delete Selected</b>.</li></ol>
Change a service name	<ol style="list-style-type: none"><li>1. Search for services.</li><li>2. Click on the service name.</li><li>3. Change the information and click <b>Save</b>.</li></ol>

If you want to...	Then do this after you log in...
Add a service to an available programmable phone button 	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Service URL</b>.</li> </ol> <p><b>Note</b> If you do not see this option, ask your system administrator to configure a service URL button for your phone.</p> <ol style="list-style-type: none"> <li>4. Choose a service from the Button Service drop-down list.</li> <li>5. If you want to rename the service, edit the label fields.</li> </ol> <p><b>Note</b> Your phone uses the ASCII Label field if the phone does not support double-byte character sets.</p> <ol style="list-style-type: none"> <li>6. Click <b>Save</b>.</li> <li>7. Click <b>Reset</b> to reset your phone (necessary to see the new button label on your phone).</li> </ol>
Access a service on your phone	Choose  (  ) > <b>Services</b> .

## Controlling User Settings on the Web

User settings include your password, PIN, and language (locale) settings.

If you want to...	Then do this after you log in...
Change your password	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; User Settings</b>.</li> <li>2. In the Browser Password area, enter information.</li> <li>3. Click <b>Save</b>.</li> </ol>
Change your PIN	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; User Settings</b>.</li> <li>2. In the Phone PIN area, enter information.</li> <li>3. Click <b>Save</b>.</li> </ol>
Change the language (locale) for your User Options web pages	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; User Settings</b>.</li> <li>2. In the User Locale area, choose an item from the Locale drop-down list.</li> <li>3. Click <b>Save</b>.</li> </ol>
Change the language (locale) for your phone screen	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; User Settings</b>.</li> <li>2. Choose an item from the User Locale drop-down list.</li> <li>3. Click <b>Save</b>.</li> </ol>

## Tip

Your PIN and password allow you to access different features and services. For example, use your PIN to log in to Cisco Extension Mobility or Personal Directory on your phone. Use your password to log in to your User Options web pages and Cisco WebDialer on your personal computer. For more information, ask your system administrator.

## Controlling Line Settings on the Web

Line settings affect a specific phone line (directory number) on your phone. Line settings can include call-forwarding, voice message indicators, ring patterns, and line labels.

You can set up other line settings directly on your phone:

- Set up call forwarding for your primary phone line—see [Forwarding Calls to Another Number, page 28](#).
- Change rings, display, and other phone-model specific settings—see [Changing Phone Settings, page 52](#).

If you want to...	Then do this after you log in...
Set up call forwarding per line	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Line Settings</b>.</li><li>4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu.</li><li>5. In the Incoming Call Forwarding area, choose call forwarding settings for various conditions.</li><li>6. Click <b>Save</b>.</li></ol>
Change the voice message indicator (lamp) setting per line	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Device</b>.</li><li>2. Choose a phone from the Name drop-down menu.</li><li>3. Click <b>Line Settings</b>.</li><li>4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu.</li><li>5. In the Message Waiting Lamp area, choose from various settings.</li></ol> <p><b>Note</b> Typically, the default message waiting setting prompts your phone to display a steady red light from the handset light strip to indicate a new voice message.</p> <ol style="list-style-type: none"><li>6. Click <b>Save</b>.</li></ol>

If you want to...	Then do this after you log in...
<p>Change the audible voice message indicator setting per line</p>	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Line Settings</b>.</li> <li>4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu.</li> <li>5. In the Audible Message Waiting Indicator area, choose from various settings.</li> </ol> <p><b>Note</b> Typically, the default message waiting setting prompts your phone to display a steady red light from the handset light strip to indicate a new voice message.</p> <ol style="list-style-type: none"> <li>6. Click <b>Save</b>.</li> </ol>
<p>Change or create a line text label that appears on your phone screen</p>	<ol style="list-style-type: none"> <li>1. Choose <b>User Options &gt; Device</b>.</li> <li>2. Choose a phone from the Name drop-down menu.</li> <li>3. Click <b>Line Settings</b>.</li> <li>4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu.</li> <li>5. In the Line Text Label area, enter a text label.</li> <li>6. Click <b>Save</b>.</li> </ol> <p><b>Note</b> Your phone uses the ASCII Label field if the phone does not support double-byte character sets.</p>

## Setting Up Phones and Access Lists for Mobile Connect

When using Cisco Mobile Connect, you must add your cellular and other phones that you want to use to make and receive calls using the same directory numbers as your desk phone. These phones are called *remote destinations*. You can also define access lists to restrict or allow calls from certain numbers to be sent to your cellular phone.

<b>If you want to...</b>	<b>Then do this after you log in...</b>
Create an access list	<ol style="list-style-type: none"><li>1. Choose <b>User Options &gt; Mobility Settings &gt; Access Lists</b>.</li><li>2. Click <b>Add New</b>.</li><li>3. Enter the following information:<ul style="list-style-type: none"><li>- Name—Identifies the access list.</li><li>- Description—Describes the access list.</li></ul></li><li>4. Choose one of these options:<ul style="list-style-type: none"><li>- Blocked Access List—Creates list for numbers to be blocked</li><li>- Allowed Access List—Creates list for numbers that will be permitted</li></ul></li><li>5. Click <b>Save</b>.</li></ol>

If you want to...	Then do this after you log in...
Add members to an access list.	<ol style="list-style-type: none"> <li>1. Create an access list.</li> <li>2. Click <b>Add Member</b> to add phone numbers or filters to the list.</li> <li>3. Select an option from the Filter Mask drop-down list box. You can filter a directory number, calls with restricted caller ID (Not Available), or calls with anonymous caller ID (Private).</li> <li>4. If you select a directory number from the Filter Mask drop-down list box, enter a phone number or filter in the DN Mask field. You can use the following wild cards to define a filter: <ul style="list-style-type: none"> <li>- X (upper or lower case)—Matches a single digit. For example, 408555123X matches any number between 4085551230 and 4085551239.</li> <li>- !—Matches any number of digits. For example, 408! matches any number starts with 408.</li> <li>- #—Used as a single digit for exact match.</li> </ul> </li> <li>5. To add this member to the access list, click <b>Save</b>.</li> <li>6. To save the access list, click <b>Save</b>.</li> </ol>


If you want to...	Then do this after you log in...
Add a new remote destination	<ol style="list-style-type: none"> <li><b>1.</b> Choose <b>User Options &gt; Mobility Settings &gt; Remote Destinations</b>.</li> <li><b>2.</b> Select the device from the Name drop-down list box.</li> <li><b>3.</b> Click <b>Remote Destinations</b>.</li> <li><b>4.</b> Click <b>Add New</b>.</li> <li><b>5.</b> Enter the following information: <ul style="list-style-type: none"> <li>– Name—Enter a name for the cellular (or other) phone.</li> <li>– Destination Number—Enter your cellular phone number.</li> <li>– Answer Too Soon Timer—Enter the amount of time before you can pick up a call on the remote destination (in milliseconds).</li> <li>– Answer Too Late Timer—Enter the amount of time after which it is too late to pick up a call on the remote destination (in milliseconds).</li> <li>– Delay Before Ringing Timer—Enter the amount of time before the call rings on the remote destination (in milliseconds).</li> <li>– Remote Destination Profile—Select a remote destination profile, which contains the settings that apply to all of your remote destinations.</li> <li>– Allowed Access List—Select a phone number or rule that allows your cellular phone to ring when a call comes in to your desktop phone. You can select an allowed access list or blocked access list, but not both.</li> <li>– Blocked Access List—Select a phone number or rule for which your cellular phone does not ring when a call comes in to your desktop phone. You can select an allowed access list or blocked access list, but not both.</li> <li>– Mobile Phone—Select to allow your cellular phone can accept a call sent from your desktop phone.</li> <li>– Enable Mobile Connect—Select to allow your cellular phone to ring simultaneously with your desktop phone.</li> <li>– Smart Client Installed—Select to indicate that the remote destination you are setting up is a smartphone.</li> </ul> </li> <li><b>6.</b> Click <b>Save</b>.</li> </ol>

## Using Cisco WebDialer

Cisco WebDialer allows you to make calls on your Cisco Unified IP Phone to directory contacts by clicking items in a web browser. Your system administrator must configure this feature for you.

If you want to...	Then...
Use WebDialer with your User Options directory	<ol style="list-style-type: none"><li data-bbox="346 337 1214 397">1. Log in to your User Options web pages. See <a href="#">Accessing Your User Options Web Pages, page 61</a>.</li><li data-bbox="346 406 1214 435">2. Choose <b>User Options &gt; Directory</b> and search for a coworker.</li><li data-bbox="346 443 1214 472">3. Click the number that you want to dial.</li><li data-bbox="346 480 1214 540">4. If this is your first time using WebDialer, set up preferences and click <b>Submit</b>. (See the last row in this table for details.)</li><li data-bbox="346 548 1214 657">5. If the Make Call page appears, click <b>Dial</b>. (See the last row in this table to learn how to suppress this page in the future, if desired.) The call is now placed on your phone.</li><li data-bbox="346 665 1214 706">6. To end a call, click <b>Hangup</b> or hang up from your phone.</li></ol>
Use WebDialer with another online corporate directory (not your User Options directory)	<ol style="list-style-type: none"><li data-bbox="346 717 1214 777">1. Log in to a WebDialer-enabled corporate directory and search for coworkers.</li><li data-bbox="346 786 1214 815">2. Click the number that you want to dial.</li><li data-bbox="346 823 1214 852">3. When prompted, enter your user ID and password.</li><li data-bbox="346 860 1214 920">4. If this is your first time using WebDialer, set up preferences and click <b>Submit</b>. (See the last row in this table for details.)</li><li data-bbox="346 928 1214 1037">5. If the Make Call page appears, click <b>Dial</b>. (See the last row in this table to learn how to suppress this page in the future, if desired.) The call is now placed on your phone.</li><li data-bbox="346 1045 1214 1086">6. To end a call, click <b>Hangup</b> or hang up from your phone.</li></ol>



If you want to...	Then...
Log out of WebDialer	Click the logout icon in the Make Call or Hang Up page.
Set up, view, or change WebDialer preferences	<p data-bbox="387 233 709 259">Access the Preferences page.</p> <p data-bbox="387 272 1253 331">The Preferences page appears the first time that you use WebDialer (after you click the number that you want to dial.)</p> <p data-bbox="387 344 1220 402">To return to Preferences in the future, click the preferences icon from the Make Call or Hang Up page.</p> <p data-bbox="387 415 989 441">The Preferences page contains the following options:</p> <ul data-bbox="400 454 1253 912" style="list-style-type: none"> <li data-bbox="400 454 1184 513">• Preferred language—Determines the language used for WebDialer settings and prompts.</li> <li data-bbox="400 526 1253 708">• Use permanent device—Identifies the Cisco Unified IP Phone and directory number (line) that you will use to place WebDialer calls. If you have one phone with a single line, the appropriate phone and line are automatically selected. Otherwise, choose a phone and/or line. Phones are specified by host name. (To display the host name on your phone, choose  &gt; <b>Network Configuration</b> &gt; <b>Host Name</b>.)</li> <li data-bbox="400 721 1253 805">• Use Extension Mobility—If selected, prompts WebDialer to use the Cisco Unified IP Phone that is associated with your Extension Mobility profile (if available).</li> <li data-bbox="400 818 1253 912">• Do not display call confirmation—If selected, prompts WebDialer to suppress the Make Call page. This page appears by default after you click a phone number in a WebDialer-enabled online directory.</li> </ul>

# Understanding Additional Configuration Options

Your system administrator can configure your phone to use specific button and softkey templates along with special services and features, if appropriate. This table provides an overview of some configuration options that you might want to discuss with your phone system administrator based on your calling needs or work environment.



**Note** You can locate Phone Guides and other documents listed in this table on the web:  
[http://www.cisco.com/en/US/products/hw/phones/ps379/tsd\\_products\\_support\\_series\\_home.htm](http://www.cisco.com/en/US/products/hw/phones/ps379/tsd_products_support_series_home.htm)

If you...	Then...	For more information...
Need to handle more calls on your phone line	Ask your system administrator to configure your line to support more calls.	Talk to your system administrator or phone support team.
Need more than one phone line	Ask your system administrator to configure one or more additional directory numbers for you.	Talk to your system administrator or phone support team.
Need more speed-dial buttons	First make sure that you are using all of your currently available speed-dial buttons.  If you need additional speed-dial buttons, try using Abbreviated Dialing or subscribing to the Fast Dial service.  Another option is to attach the Cisco Unified IP Phone Expansion Module 7914 to your Cisco Unified IP Phone 7965G.	See: <ul style="list-style-type: none"><li>• <a href="#">Speed Dialing, page 37</a></li><li>• <i>Cisco Unified IP Phone Expansion Module 7914 Phone Guide (7965G SCCP phone only. The Cisco Unified IP Phone 7945G does not support the Cisco Unified IP Phone 7914 Expansion Module)</i></li></ul>
Work with (or work as) an administrative assistant	Consider using: <ul style="list-style-type: none"><li>• Cisco Unified Communications Manager Assistant</li><li>• A shared line</li></ul>	See: <ul style="list-style-type: none"><li>• <a href="#">Using a Shared Line, page 40</a></li><li>• <i>Cisco Unified Communications Manager Assistant User Guide</i></li></ul>
Want to use one extension for several phones	Request a shared line. This allows you to use one extension for your desk phone and lab phone, for example.	See <a href="#">Using a Shared Line, page 40</a> .



If you...	Then...	For more information...
Share phones or office space with coworkers	Consider using: <ul style="list-style-type: none"> <li>• Call Park to store and retrieve calls without using the transfer feature.</li> <li>• Call Pickup to answer calls ringing on another phone.</li> <li>• A shared line to view or join coworkers' calls.</li> <li>• Cisco Extension Mobility to apply your phone number and user profile to a shared Cisco Unified IP Phone.</li> </ul>	Ask your system administrator about these features and see the: <ul style="list-style-type: none"> <li>• <a href="#">Advanced Call Handling, page 37.</a></li> <li>• <a href="#">Using a Shared Line, page 40.</a></li> <li>• <a href="#">Using Cisco Extension Mobility, page 47.</a></li> </ul>
Answer calls frequently or handle calls on someone's behalf	Ask your system administrator to set up the AutoAnswer feature for your phone.	See <a href="#">Using AutoAnswer, page 51.</a>
Need to make video calls (SCCP phones only)	Consider using Cisco Unified Video Advantage, which enables you to make video calls using your Cisco Unified IP Phone, your personal computer, and an external video camera.	Contact your system administrator for additional assistance and see the <i>Cisco Unified Video Advantage Quick Start Guide</i> and <i>User Guide</i> .
Determine the state of a phone line associated with a speed-dial button, call log, or directory listing on your phone	Ask your administrator to set up the Busy Lamp Field (BLF) feature for your phone.	See <a href="#">Using BLF to Determine a Line State, page 44.</a>
Want to temporarily apply your phone number and settings to a shared Cisco Unified IP Phone	Ask your system administrator about the Cisco Extension Mobility Service.	See <a href="#">Using Cisco Extension Mobility, page 47.</a>

# Troubleshooting Your Phone

This section provides troubleshooting information for your Cisco Unified IP Phone.

## General Troubleshooting





This section provides information to help you troubleshoot general problems with your phone. For more information, see your system administrator.

Symptom	Explanation
You cannot hear a dial tone or complete a call	One or more of the following factors might apply: <ul style="list-style-type: none"><li>You must log into the Extension Mobility service.</li><li>You must enter a client matter code (CMC) or forced authorization code (FAC) after dialing a number. (SCCP phones only)</li><li>Your phone has time-of-day restrictions that prevent you from using some features during certain hours of the day.</li></ul>
The Settings button is unresponsive	Your system administrator might have disabled  on your phone.
The phone screen appears blank	The phone screen has gone into sleep mode to save power after a period of inactivity. Wake the phone screen by lifting the handset, or by pressing any button, such as  . See <a href="#">Cleaning and Maintaining the Phone Screen, page 15</a> .
The phone screen does not illuminate under any circumstances	You might have disabled phone screen illumination on your phone. Contact your system administrator to determine if this feature is available to you.
The softkey that you want to use does not appear	One or more of the following factors might apply: <ul style="list-style-type: none"><li>You must press <b>more</b> to reveal additional softkeys.</li><li>You must change the line state (for example, go off-hook or have a connected call).</li><li>Your phone is not configured to support the feature associated with that softkey.</li></ul>
Barge fails and results in a fast busy tone	You cannot barge an encrypted call if the phone you are using is not configured for encryption. When your barge attempt fails for this reason, your phone plays a fast busy tone.

Symptom	Explanation
You are disconnected from a call that you joined using <b>Barge</b>	You will be disconnected from a call that you have joined using <b>Barge</b> if the call is put on hold, transferred, or turned into a conference call.
Cisco <b>CallBack</b> fails	The other party might have call forwarding enabled.

## Viewing Phone Administration Data

Your system administrator might ask you to access administration data on your phone for troubleshooting purposes.

If you are asked to...	Then...
Access network configuration data	Choose  > <b>Network Configuration</b> and select the network configuration item that you want to view.
Access status data	Choose  > <b>Status</b> and select the status item that you want to view.
Access phone model information	Choose  > <b>Model Information</b> .
Access phone call and voice quality information	Choose  > <b>Status</b> > <b>Call Statistics</b> .

## Using the Quality Reporting Tool

Your system administrator may temporarily configure your phone with the Quality Reporting Tool (QRT) to troubleshoot performance problems. You can press **QRT** or **Quality Reporting Tool** to submit information to your system administrator. Depending on configuration, use the QRT to:

- Immediately report an audio problem on a current call.
- Select a general problem from a list of categories and choose reason codes.



# Cisco One-Year Limited Hardware Warranty Terms

---

There are special terms applicable to your hardware warranty and various services that you can use during the warranty period. Your formal Warranty Statement, including the warranties and license agreements applicable to Cisco software, is available on Cisco.com. Follow these steps to access and download the *Cisco Information Packet* and your warranty and license agreements from Cisco.com.

1. Launch your browser, and go to this URL:

[http://www.cisco.com/univercd/cc/td/doc/es\\_inpck/cetrans.htm](http://www.cisco.com/univercd/cc/td/doc/es_inpck/cetrans.htm)

The Warranties and License Agreements page appears.

2. To read the *Cisco Information Packet*, follow these steps:

- a. Click the **Information Packet Number** field, and make sure that the part number 78-5235-03B0 is highlighted.
- b. Select the language in which you would like to read the document.
- c. Click **Go**.

The Cisco Limited Warranty and Software License page from the Information Packet appears.

- d. Read the document online, or click the **PDF** icon to download and print the document in Adobe Portable Document Format (PDF).

**Note** You must have Adobe Acrobat Reader to view and print PDF files. You can download the reader from Adobe's website: <http://www.adobe.com>

3. To read translated and localized warranty information about your product, follow these steps:

- a. Enter this part number in the Warranty Document Number field:  
78-10747-01C0
- b. Select the language in which you would like to view the document.
- c. Click **Go**.

The Cisco warranty page appears.

- d. Read the document online, or click the **PDF** icon to download and print the document in Adobe Portable Document Format (PDF).

You can also contact the Cisco service and support website for assistance:

[http://www.cisco.com/public/Support\\_root.shtml](http://www.cisco.com/public/Support_root.shtml).

## Duration of Hardware Warranty

One (1) Year

## **Replacement, Repair, or Refund Policy for Hardware**

Cisco or its service center will use commercially reasonable efforts to ship a replacement part within ten (10) working days after receipt of a Return Materials Authorization (RMA) request. Actual delivery times can vary, depending on the customer location.

Cisco reserves the right to refund the purchase price as its exclusive warranty remedy.

## **To Receive a Return Materials Authorization (RMA) Number**

Contact the company from whom you purchased the product. If you purchased the product directly from Cisco, contact your Cisco Sales and Service Representative.

Complete the information below, and keep it for reference.

Company product purchased from	
Company telephone number	
Product model number	
Product serial number	
Maintenance contract number	



# Index

---

## A

Abbreviated Dialing [37, 64](#)  
Address Book Synchronization Tool [64](#)  
answering calls [22](#)  
ASCII label field support [64](#)  
audible message waiting indicator [60](#)  
audio, quality of [6](#)  
authenticated calls [44](#)  
Auto Dial [20](#)  
AutoAnswer [51](#)

## B

barge  
    and privacy [43](#)  
    and shared lines [41](#)  
    using [41](#)  
BLF [44](#)  
Busy Lamp Field [44](#)  
button [36](#)  
buttons, identifying [8](#)

## C

call activity area [14](#)  
call forwarding  
    configuring from web page [67](#)

call logs  
    dialing from a URL entry in [55](#)  
    erasing [54](#)  
    viewing and dialing from [54](#)  
call overview mode [26](#)  
call park [39](#)  
call pickup [38](#)  
call waiting [22](#)  
CallBack [20](#)  
caller ID [14](#)  
call-handling  
    advanced [37](#)  
    basic [19](#)  
calls  
    answering [22](#)  
    barging [41](#)  
    blocking [29](#)  
    compared to lines [12](#)  
    conference features for [30](#)  
    ending [23](#)  
    forwarding [67](#)  
    handling multiple [25](#)  
    holding and resuming [24](#)  
    icons for [12](#)  
    maximum per line [12](#)  
    multiple parties on [30](#)  
    multiple, switching between [25](#)

- muting [25](#)
- parking [39](#)
- placing [19, 20](#)
- prevent barging of [43](#)
- prioritizing [45](#)
- redirecting while ringing [38](#)
- reporting problems with [77](#)
- secure [44](#)
- storing and retrieving [39](#)
- transferring [27](#)
- using DND [29](#)
- viewing [14, 26](#)

Cisco Extension Mobility [47](#)

Cisco Unified Communications Manager  
Address Book Synchronizer [64](#)

Cisco Unified IP Phone

- adjusting height of [6](#)
- connecting [4](#)
- documentation for [2](#)
- feature configuration for [17, 74](#)
- illustration of [8, 9](#)
- online help for [16](#)
- registering [6](#)
- securing handset rest [5](#)
- troubleshooting [76](#)
- web-based services for [61](#)

Cisco Unified IP Phone Expansion Module  
7914 [40, 53, 74](#)

Cisco Unified Video Advantage [75](#)

Cisco WebDialer [72](#)

Client Matter Code, see CMC

CMC [21, 76](#)

conference calls

- Meet-Me [33, 34](#)

- removing participants from [34](#)
- security-level for [34](#)
- types of [30](#)
- viewing participants for [34](#)

connected [13](#)

corporate directory

- using from web page [72](#)
- using on phone [54, 56](#)

## D

Details softkey, viewing multiparty calls with  
[54, 55](#)

device configuration page [61](#)

dialing, options for [19, 20](#)

directories button [10](#)

directory

- corporate [56](#)
- personal [56, 57](#)
- using from web page [72](#)
- using on phone [56](#)

display button [10, 15](#)

DND [29](#)

Do Not Disturb [29](#)

documentation, accessing [2](#)

## E

EM [47](#)

encrypted calls [44](#)

ending a call, options for [23](#)

Extension Mobility [47](#)

## F

FAC [21, 76](#)

Fast Dials

- configuring from web page [63](#)

- using on phone [57](#)

feature buttons

- directories [10](#)

- display of [16](#)

- help [11](#)

- messages [10](#)

- services [11](#)

- settings [11](#)

feature menus [16](#)

feature tabs [14](#)

features, availability of [17, 74](#)

footstand

- adjusting [6](#)

- button for [10](#)

Forced Authorization Code, see FAC

## G

group call pickup [38](#)

## H

handset

- light strip [12](#)

- securing in cradle [5](#)

- using [50](#)

hanging up, options for [23](#)

headset

- answering calls with [22](#)

- button for [11](#)

- hanging up with [23](#)

- placing calls with [19](#)

- using [50](#)

headset performance, general [6](#)

help button [11, 26](#)

help, using [16](#)

hold

- and switching calls [25](#)

- and transferring [27](#)

- using [24](#)

hold reversion indicators, reverting calls [24](#)

hookswitch clip, removing [5](#)

Hunt groups, logging out [40](#)

## I

icons

- for call states [12](#)

- for lines [12](#)

idle [13](#)

installing, Cisco Unified IP Phone [4](#)

intercom calls [35](#)

intercom line [13, 36](#)

## K

keypad [11](#)

## L

language (locale) settings [66](#)

line buttons [10](#)

- lines
  - and call forwarding [67](#)
  - and call states [12](#)
  - and using BLF [44](#)
  - buttons for [10](#)
  - description of [12](#)
  - icons for [12](#)
  - number of calls supported on [12](#), [74](#)
  - ring patterns for [67](#)
  - ring tones for [52](#)
  - shared [40](#)
  - switching between [25](#)
  - text label for [67](#)
  - viewing [14](#)
  - voice message indicator setting for [67](#)
- logging out of hunt groups [40](#)

## **M**

- Malicious Call Identification [45](#)
- MCID [45](#)
- Meet-Me conferences [33](#), [34](#)
- menus, using [16](#)
- messages
  - indicator for [52](#), [60](#)
  - listening to [60](#)
- messages button [10](#)
- missed calls, records of [54](#)
- MLPP, using [45](#)
- multiparty calls
  - identifying in call logs [54](#), [55](#)
  - viewing details of [54](#), [55](#)
- multiple calls, handling [25](#)

- mute button [11](#)
- mute, using [25](#)

## **N**

- Navigation button [11](#)
- network configuration data, locating [76](#)

## **O**

- one-way [13](#)
- on-hook dialing [20](#)
- online help, using [16](#)

## **P**

- PAB
  - using from web page [62](#)
  - using on phone [57](#)
- password, changing [66](#)
- Personal Address Book, see PAB
- Personal Directory
  - using from web page [62](#)
  - using on phone [57](#)
- phone lines
  - buttons for [10](#)
  - description of [12](#)
  - viewing [14](#)
- phone screen
  - adjusting contrast [53](#)
  - changing language [53](#)
- phone services
  - configuring

see also User Options web pages

phone tab [14](#)

PIN, changing [66](#)

placed calls, records of [54](#)

placing calls, options for [19, 20](#)

pre-dial [20](#)

prioritizing calls [45](#)

privacy

and shared lines [41](#)

using [43](#)

programmable buttons

description of [10](#)

labels for [14](#)

## Q

QRT [77](#)

Quality Reporting Tool [77](#)

## R

received calls, records of [54](#)

redial [19](#)

remote-in-use icon for shared lines [41](#)

resume, using [24](#)

ring patterns, changing [67](#)

ring tones, changing [52](#)

ringer

customizing [52](#)

indicator for [12](#)

volume for [52](#)

## S

safety, warnings [2](#)

screen

cleaning [15](#)

features of [14](#)

illumination setting [53](#)

sleep mode [15](#)

secure calls [44](#)

secure conferences [34](#)

security, for calls [44](#)

Select button [11](#)

services button [11](#)

services, subscribing to [65](#)

settings button [11](#)

settings, customizing [52](#)

shared lines

and remote-in-use icon [41](#)

description of [40](#)

with barge [41](#)

with privacy [43](#)

sleep mode, waking phone screen from [15](#)

softkey buttons

description of [11](#)

labels for [14](#)

speakerphone

answering calls with [22](#)

button for [11](#)

hanging up with [23](#)

placing calls with [19](#)

using [50](#)

speed dial

buttons for [10](#)

configuring [37, 64](#)

- description of [37](#)
- labels [14](#), [64](#)
- using [20](#)
  - using BLF with [37](#)
- status data, locating [76](#)
- status line, viewing [14](#)
- subscriptions, for phone services [65](#)
- suspicious calls, tracing [45](#)
- switching calls [25](#)

## T

- tabs, on touchscreen [14](#)
- TABSynch [64](#)
- TAPS [6](#)
- telephony features
  - audible message waiting indicator [60](#)
- Tool for Auto-Registered Phones Support [6](#)
- transferring, options for [27](#)
- troubleshooting
  - general [76](#)
  - see also QRT
- two-way [13](#)

## U

- URL dialing, from call log [55](#)
- User Options web pages
  - accessing [61](#)
  - configuring features and services with [62](#)
  - subscribing to phone services with [65](#)

## V

- voice message indicator
  - changing setting for [67](#)
  - description of [60](#)
- voice message service [60](#)
- volume
  - for handset, headset or speakerphone [50](#)
  - for phone ringer [52](#)
- volume button [11](#)

## W

- warnings, safety [2](#)
- web-based services
  - configuring [61](#)
  - see also User Options web pages
- WebDialer [72](#)
- whisper [13](#)
- wideband headset [50](#)



**Americas Headquarters**  
Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
[www.cisco.com](http://www.cisco.com)  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

**Asia Pacific Headquarters**  
Cisco Systems, Inc.  
168 Robinson Road  
#28-01 Capital Tower  
Singapore 068912  
[www.cisco.com](http://www.cisco.com)  
Tel: +65 6317 7777  
Fax: +65 6317 7799

**Europe Headquarters**  
Cisco Systems International  
BV  
Haarlerbergpark  
Haarlerbergweg 13-19  
1101 CH Amsterdam  
The Netherlands  
[www-europe.cisco.com](http://www-europe.cisco.com)  
Tel: 31 0 800 020 0791  
Fax: 31 0 20 357 1100

**Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the  
Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).**

CCVP, the Cisco logo, and the Cisco Square Bridge logo are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0709R)



© 2007 Cisco Systems, Inc. All rights reserved.

The Java logo is a trademark or registered trademark of Sun Microsystems, Inc. in the U.S. or other countries.