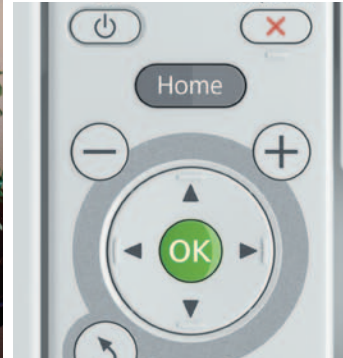# EPSON®
EXCEED YOUR VISION

PictureMate Show™

Digital Frame and Photo Printer

The best of both worlds.

Features and Benefits

- **2-in-1, digital photo frame and compact photo printer** — ultra bright, 7", widescreen photo frame; doubles as an editing and preview monitor

- **12 slideshow options for added versatility** — choose from book, calendar, clock or museum options for the home office or animated slideshow options for the kids' room — ideal for any family

- **Convenient and easy to use** — access all commands — print and edit images, run a slideshow — with the fully functional remote control

- **Store photos to print or display any time** — large, 270MB internal memory lets you automatically store hundreds of photos and run a slideshow or reprint

- **Print your favorite photos, PC-free** — print and archive photos directly from your memory card[1], digital camera or USB flash drive

- **Get pro quality photos, fast** — print vibrant, 4" x 6" photos in as fast as 37 seconds[†]

- **Print wirelessly** — optional Bluetooth® adapter[2]

- **Share prints for generations to come** — durable prints that last up to 4x longer than traditional, film-processed photos[3]

- **Get your photos, your way** — print various sizes from 0.3" x 0.3" to 4" x 6", in black-and-white or sepia; great for filling unusual frame sizes, photo key chains, photo bracelets and more

- **Easily edit photos** — get perfect prints with Auto Photo Correction; crop, remove red eye and more

Printing Technology	Advanced MicroPiezo®, optimized for photo printing
Nozzle Configuration	90 nozzles x 4
Ink Type	4-color dye
Maximum Resolution (dots per inch)	5760 x 1440 dpi
Minimum Ink Droplet Size	2 picoliters
Print Speed†	4" x 6" photo in as fast as 37 seconds
Built-in Memory Card Slots Compatibility	Supports CompactFlash® (Type I and II), Secure Digital (SD™), SDHC,™ MMC, Memory Stick®, Microdrive® and xD-Picture Card™ (Type M/H)
Connectivity[4]	USB connection between printer and PC, USB connection for external CD-R/RW drives, zip drives, flash memory (thumb drives), Bluetooth[2] (with optional Bluetooth Photo Print Adapter for Epson), PictBridge™ and USB Direct Print-enabled digital cameras. USB 2.0 connection cable not included.
Supported Digital Camera Technologies	Exif Print, reads Digital Print Order Format (DPOF) from digital camera memory cards
Operating Systems	Windows® 7, Windows Vista®, Windows XP Professional x64, Windows 2000, Mac OS® X 10.3.9, 10.4.x, 10.5.x, 10.6.x For the latest information on Windows 7, please visit www.epson.com/support/windows 7. For the latest information on Snow Leopard, please visit www.epson.com/support/snowleopard For all other operating systems, please visit www.epson.com/ support for the latest in compatibility and drivers.
Layout Options	16 per page, 4 per page, wallet size, mini-wallet, proofsheet, custom layouts
Bonus Software Included	ArcSoft® PhotoImpression™ (PC and Macintosh® compatible and Exif Print-enabled)
Maximum Printable Area	4" x 6" Top/bottom margin 0" Left/right margin 0"
Paper Capacity	Input paper tray — 20 sheets of PictureMate® photo paper
Weight and Dimensions (W x D x H)	Weight 5.7 lb Storage 9.00" x 7.50" x 6.30" Printing 9.00" x 12.4" x 7.9"
Sound Level	45 dB

Temperature	Operating 50 º to 95 ºF (10 º to 35 ºC) Storage -4 º to 104 ºF (-20 º to 40 ºC)	
Safety Approvals	Safety standards UL60950, CSA 22.2 No. 950 RFI FCC part 15 subpart B class B, CSA C108.8 class B Caution: To avoid damaging your PictureMate, keep it out of the sun and don't leave it in locations where it can get too hot or cold.	
Power Requirements	Rated voltage 120 VAC Rated frequency 50 – 60 Hz Rated current 0.4 Amp (Max 0.5 Amp)	
Power Consumption	Approx. 13.5 W ISO 10561 (ENERGY STAR® qualified), approx. 5.0 W in Sleep Mode	
Warranty	Standard, one-year, limited warranty in the U.S. and Canada including Epson Exchange program. Extended warranties available beyond one year.	
PictureMate Satisfaction Guarantee	If you are dissatisfied because you receive fewer prints than the total sheets of photo paper included in your Print Pack, return the remaining sheets and Epson will give you a pro-rated refund. This guarantee covers only end-user claims in the U.S. and Canada, and does not cover any non-Epson ink or paper, or commercial use of the printer. Call (562) 276-1347 (U.S.) or (905) 709-8676 (Canada). See www.MyPictureMate.com/satisfactionguarantee for more information about this satisfaction guarantee. For print quality, a variable amount of ink remains in the cartridge after the "Replace Print Pack" indicator.	
What's in the Box	PictureMate Show digital frame and photo printer remote control with battery included, initial photo cartridge and paper for about 20 4" x 6" photos, detachable paper tray, power cord, and Quick Start guide and CD	

Better Products for a Better Future™

eco.epson.com

† Color photo without a PC in borderless layout, measured from start of paper feed.
Actual print time will vary based on system configuration, software, and page complexity.
See www.epson.com/printspeed for details.

1 Prints from CompactFlash (Type I and II), Secure Digital (SD), SDHC, MMC, xD-Picture Card (Type M/H), Microdrive and Memory Stick

2 Bluetooth adapter sold separately; please visit www.MyPictureMate.com for ordering information.

3 Based on accelerated testing of prints displayed under glass in indoor display conditions. Actual print stability will vary according to media, printed image, display conditions, light intensity, temperature, humidity and atmospheric conditions. Epson does not guarantee the longevity of prints. For maximum print life, display all prints under glass or UV filter or properly store them.

4 For a complete list of compatible drives, visit www.MyPictureMate.com/support

EPSON®
EXCEED YOUR VISION

Epson America, Inc.
3840 Kilroy Airport Way, Long Beach, CA 90806

Epson Canada, Ltd.
3771 Victoria Park Avenue, Toronto, Ontario M1W 3Z5

www.epson.com
www.epson.ca