


IOGEAR USB to Serial Adapter
Mac OS (8.6 through 9.2) Installation Procedure

NOTE: Please do not plug in the USB to Serial Adapter until **after** you have completed the following instructions.

- 1) Insert the IOGEAR CD-ROM that came with your USB to Serial Adapter Cable. You will see an IOGEAR CD icon appear on your desktop.



- 2) Double-Click the IOGEAR CD-ROM icon, you will see two folders: one for Mac OS 9 and one for Mac OS 10. Double-click the OS 9 folder.



- 3) Inside the Mac OS 9 folder, you will see the UC232-AC Extention. This is the extension for the IOGEAR USB to Serial Adapter and it must be placed in your Extensions folder in Mac OS.



- 4) Open your Macintosh HD




- 5) Open the System folder




- 6) Open the Extensions folder



- 7) Drag-and-drop the UC-232AC extension into you Macintosh Extensions folder.

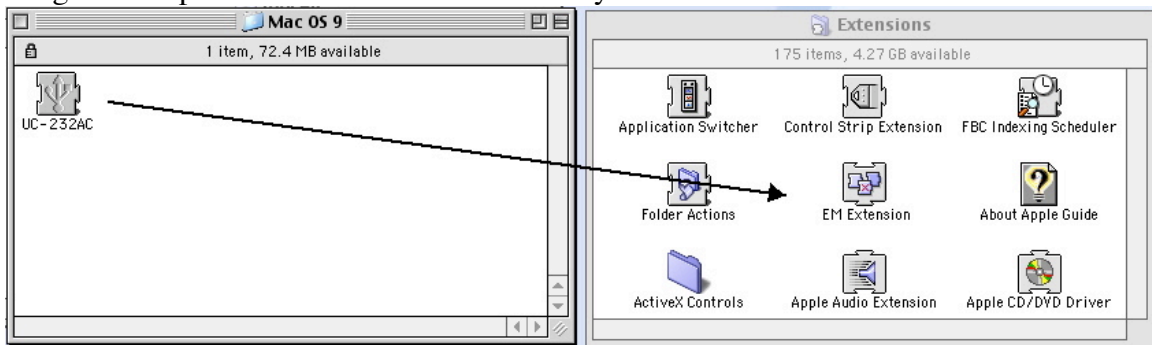

If you have done this successfully, it will show up under the Extensions folder below

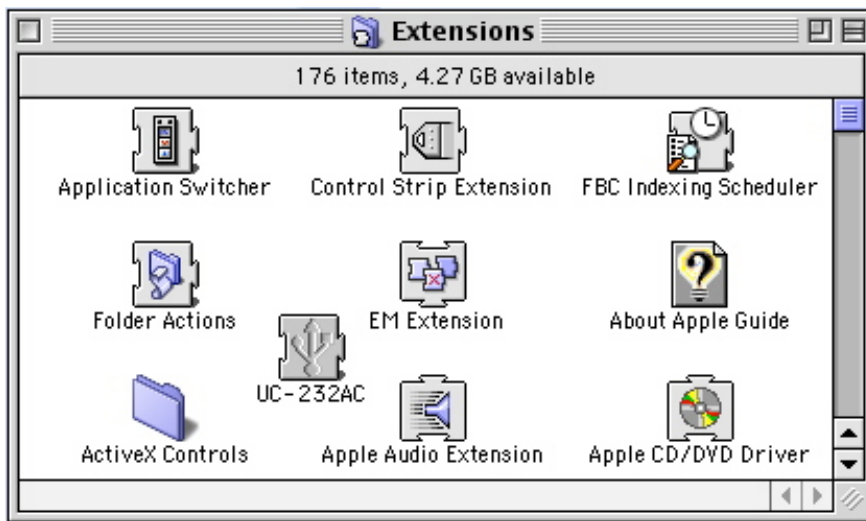

- 8) Close all your open windows, and restart your Mac.

The USB to Serial Adapter is now installed on you Macintosh computer.