



# 6779-4511 Deluxe Double Rod Organizer ©2014 Whitmor, Inc.


**A 24 ea**  
End connector




**B 4 ea**  
Bottom vertical long pole with taper




**C 4 ea**  
Bottom vertical long pole without taper




**D 4 ea**  
Horizontal pole




**E 36 ea**  
Vertical short pole




**F 10 ea**  
Wire shelf

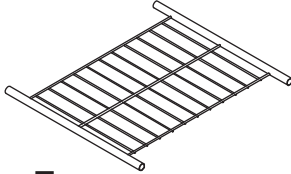


**G 2 ea**  
Extending hanging bar




**H 1 ea**  
Shoe shelves

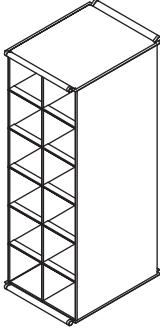


**I 3 ea**  
Bin

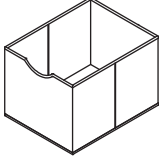


**J 3 ea**  
Bin bottom




**K 2 ea**  
Hanging bar bracket with large hole



**L 2 ea**  
Hanging bar bracket with small hole



**M 4 ea**  
Hanging bar screw




**Assembly Time:**  
Less than 45 minutes.

This product's intended use is for storing clothing and accessories.

**Tools Needed:** No tools required.

## Bottom Left Section:


**STEP 1.** Start by inserting four horizontal poles (D) into loops in shoe shelves (H). Set this assembly aside for now. Starting at the bottom, insert two part (B) poles into top of each end connector (A). Insert part (C) poles into top of part (B) poles. Insert two more end connectors (A) onto top of (C). Now take the shoe shelf assembly and insert the 4 poles (D) into the side of End connectors (A).

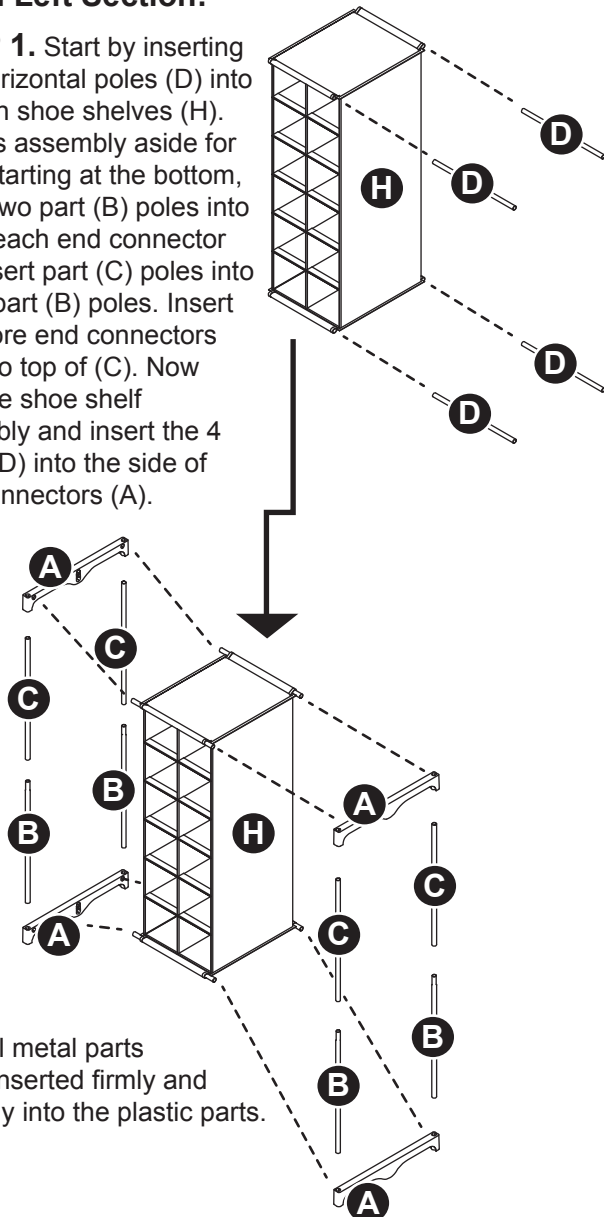

**Note:** All metal parts must be inserted firmly and completely into the plastic parts.

## Bottom Right Section:

**STEP 2.** Working from the bottom, insert a wire shelf (F) into side of two end connectors (A). Insert four poles (E) into top of end connectors (A). Repeat this process 3 more times until four tiers are complete. Insert three bins bottoms (J) into bins (I). Insert the bins (I) onto bottom three shelves.

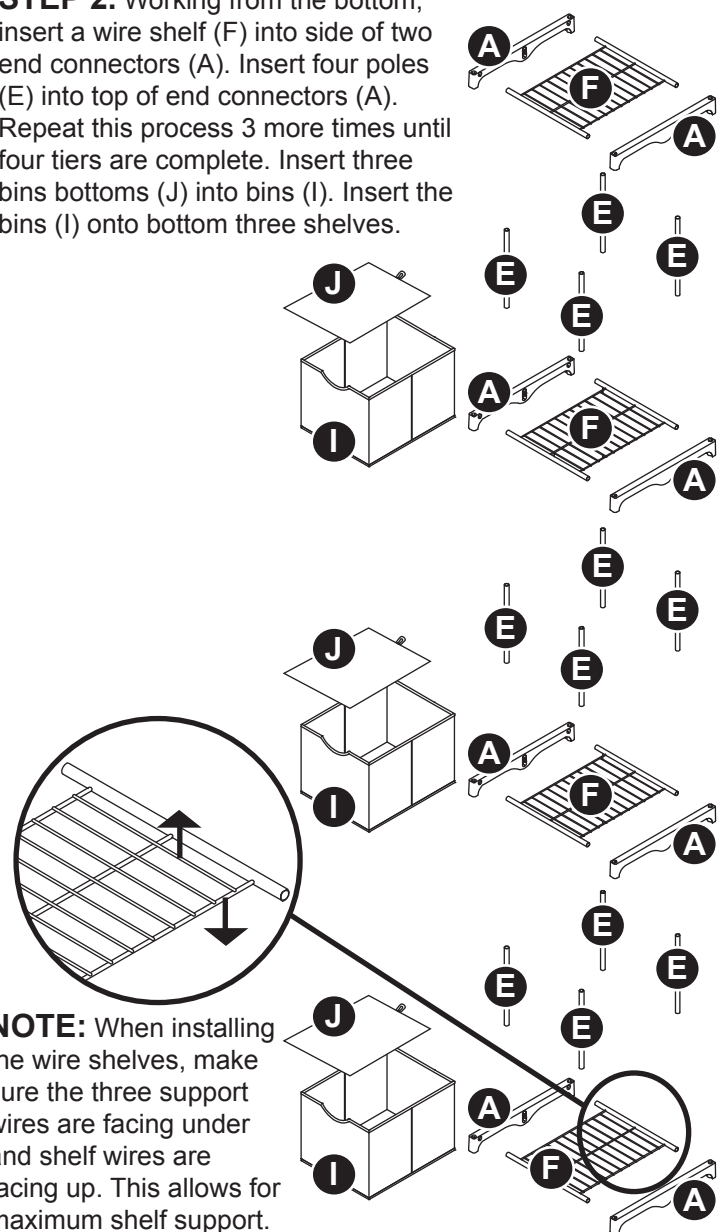


**NOTE:** When installing the wire shelves, make sure the three support wires are facing under and shelf wires are facing up. This allows for maximum shelf support.



# 6779-4511 Deluxe Double Rod Organizer (Continued)

## Top Left and Right Sections:


**STEP 3.** For the left section, insert a wire shelf (F) into side of two end connectors (A). Insert four poles (E) into top of end connectors (A). Repeat this process 2 more times until three tiers are complete. Repeat process for the right section. Hang two hanging bars (G) by placing at desired height. Each end of hanging bar should straddle the middle of an end connector (A) bridging left and right sections together.

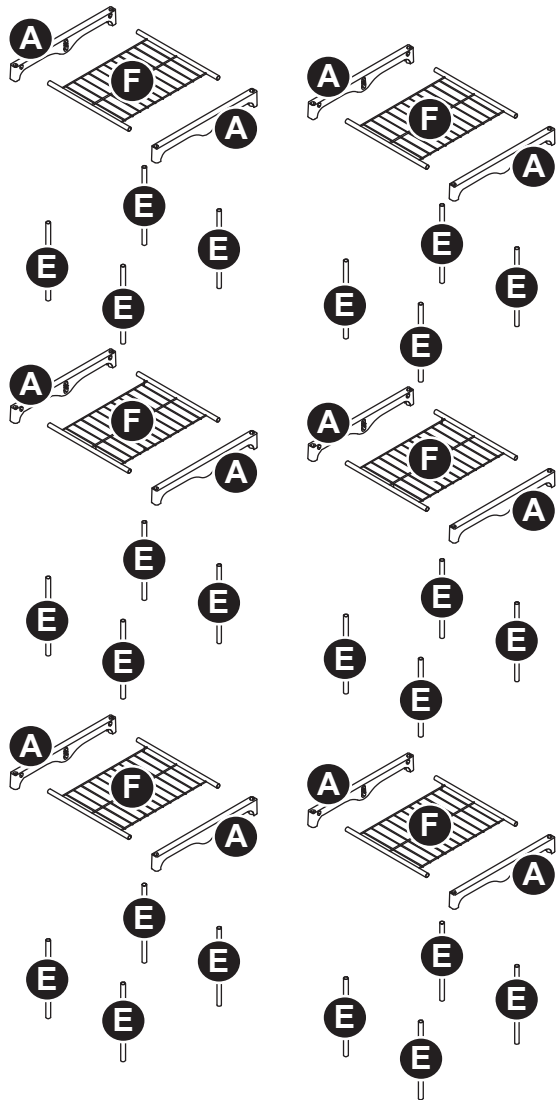

Part	Reference
A	F7725
B	F7726
C	F7727
D	F7728
E	F7729
F	F7730
G	F8018
H	F7732
I	F7733
J	F7734
K	F8016
L	F8021
M	F8017


## Final Assembly:

**STEP 4.** Place the bottom left and right sections into desired position in your room. Hang two hanging bar brackets (K&L) by placing at the top of bottom sections. Slide hanging bar (G) into place and use hanging bar screws (M) to secure. Each end of hanging bar should straddle the middle of an end connector (A) bridging left and right bottom sections together. Now, take the assembled top sections and attach to the top of bottom sections by inserting poles into top of the end connectors (A). Place the remaining hanging bar assembly at the top just like the first hanging bar assembly was done.

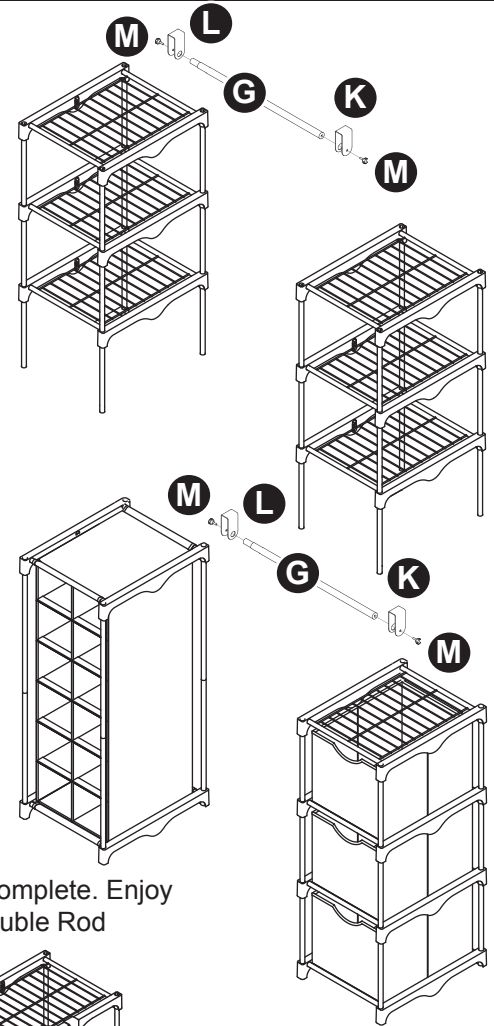

**STEP 5.** Assembly is now complete. Enjoy your new Whitmor Deluxe Double Rod Organizer.

**NOTE:** Extending bars should be set to desired length prior to loading unit.

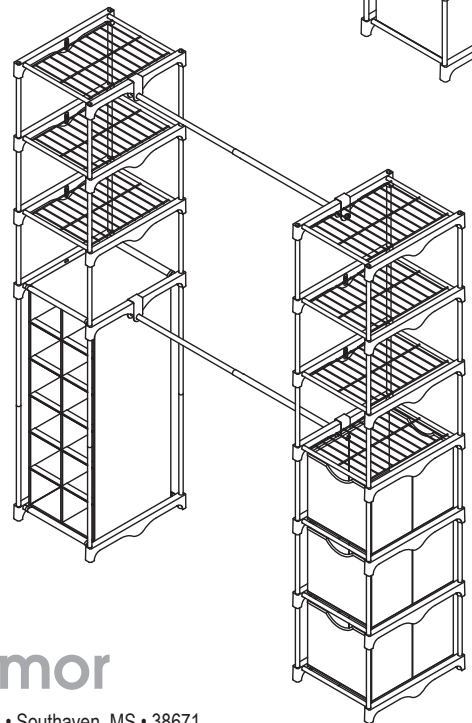

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

**NEED HELP?** For help with assembly, or if you are missing a part, please call Whitmor's Customer Service Department, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: [help@whitmor.com](mailto:help@whitmor.com). Visit us online at [www.whitmor.com](http://www.whitmor.com)

Rev.#2 | 09.23.14    MADE IN CHINA    PRINTED IN CHINA