


ALV WMBD DC WALL MOUNT BALLAST INSTALLATION INSTRUCTIONS

- WARNING:** BEFORE PROCEEDING, READ ALL INSTRUCTIONS CAREFULLY TO INSURE PROPER AND SAFE INSTALLATION.
- WARNING:** RISK OF FIRE OR ELECTRICAL SHOCK. DISCONNECT POWER BEFORE INSTALLING OR SERVICING.
- WARNING:** RISK OF ELECTRICAL SHOCK. HIGH TEMPERATURES INSIDE LUMINAIRE. MAKE CERTAIN LINE VOLTAGE CORRESPONDS WITH BALLAST'S PRIMARY VOLTAGE. (SEE BALLAST LABEL)
- WARNING:** ALL WIRING TO BE PERFORMED PER NATIONAL ELECTRICAL CODE AND LOCAL CODE BY A QUALIFIED ELECTRICIAN.
- IMPORTANT:** WHEN LAMPING, ALWAYS WEAR EYE PROTECTION.
- NOTE:** IF LAMP IS INSTALLED DIRTY, OPERATING HOURS AND PERFORMANCE WILL SIGNIFICANTLY DECREASE.

WMBD DC WALL MOUNT SHOWN ON SURFACE J-BOX SEE PG2 FOR WMBD SC MOUNTED ON RECESSED TYPE J-BOX

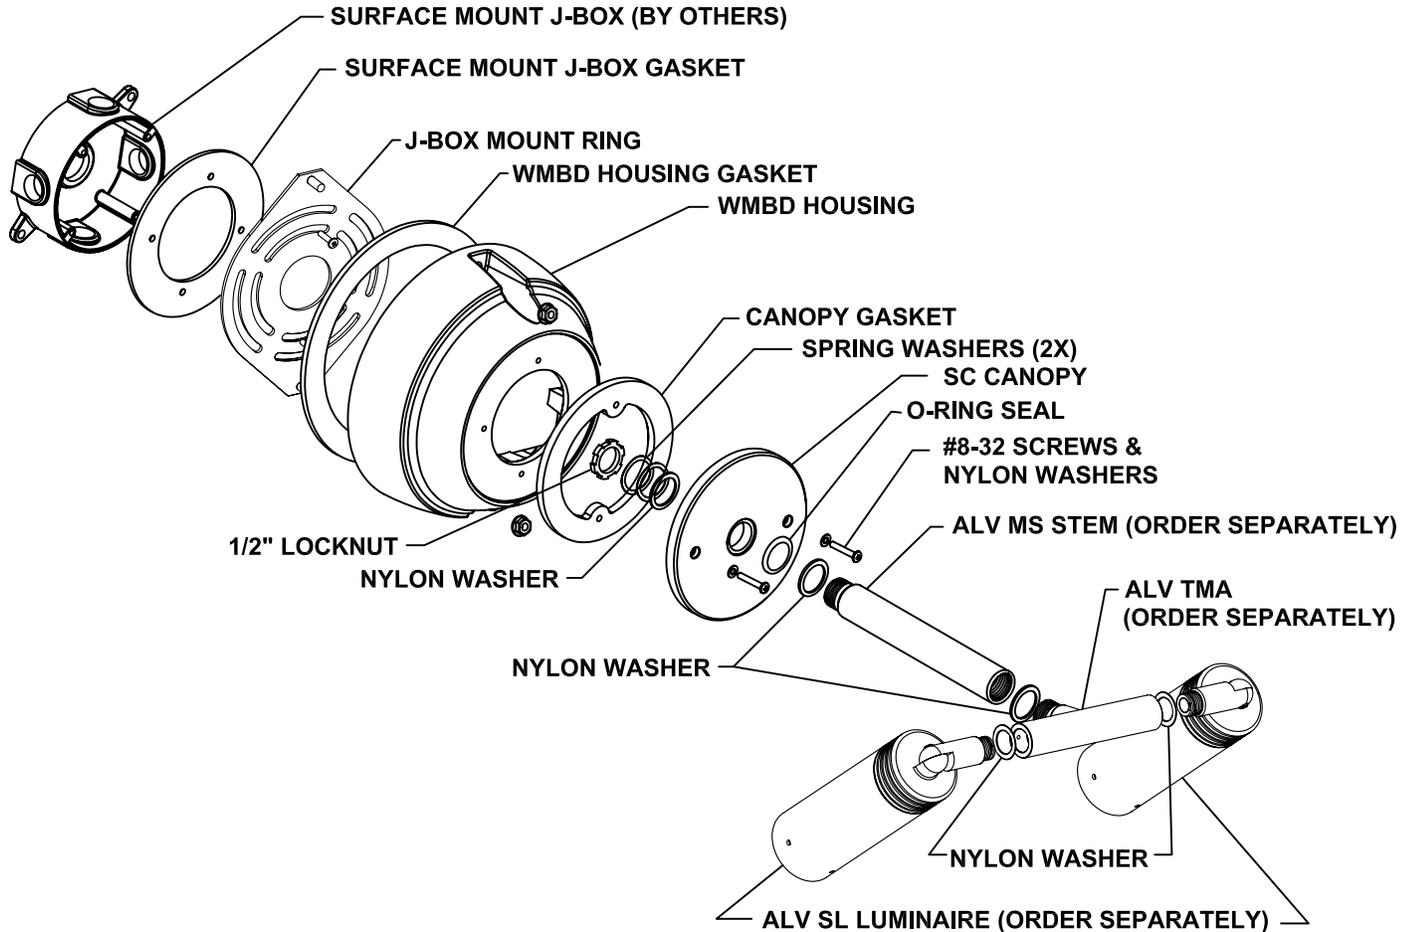

NOTE:
WMBD DC SHOWN ON SURFACE MOUNT TYPE J-BOX. SEE PG2 FOR DETAILS ON MOUNTING TO RECESSED TYPE J-BOX.

ASSEMBLY STEPS:

1. ATTACH J-BOX MOUNTING RING & GASKET AS SHOWN W/ SCREWS PROVIDED TO SURFACE MOUNT J-BOX.
2. CONNECT SUPPLY LEADS TO BALLAST PER SCHEMATIC ON BALLAST, OR REFER TO PG2. CONNECT GROUND.
3. SLIDE BALLAST ASSY ONTO STUDS & INSTALL NUTS.
4. ASSEMBLE LUMINAIRES TO BRACKET/STEMS AS REQ'D & ATTACH ASSY TO CANOPY WITH HARDWARE PROVIDED.
5. APPLY CANOPY GASKET TO BACK OF CANOPY.
6. CONNECT LUMINAIRE LEADS TO BALLAST SECONDARY LEADS PER SCHEMATIC ON PG2. CONNECT LUMINAIRE GROUNDS.
7. INSTALL ASSY TO WMBD HOUSING WITH SCREWS & NYLON WASHERS TO PROTECT PAINT. TIGHTEN SCREWS (2X) TO 30 INCH/LBS TORQUE MIN.
8. ADJUST LUMINAIRE AIMING AS REQUIRED.


!CAUTION! TURN OFF POWER DURING INSTALLATION OR SERVICING!



INSTALLATION QUESTIONS?
CALL LSI FIELD SERVICE
800-436-7800 EXT 3300
FAX 513-984-9723

ALV WMBD SC WALL MOUNT BALLAST INSTALLATION INSTRUCTIONS

**WMBD SC WALL MOUNT SHOWN ON RECESSED J-BOX
SEE PG1 FOR WMBD DC MOUNTED ON SURFACE MOUNT TYPE J-BOX**

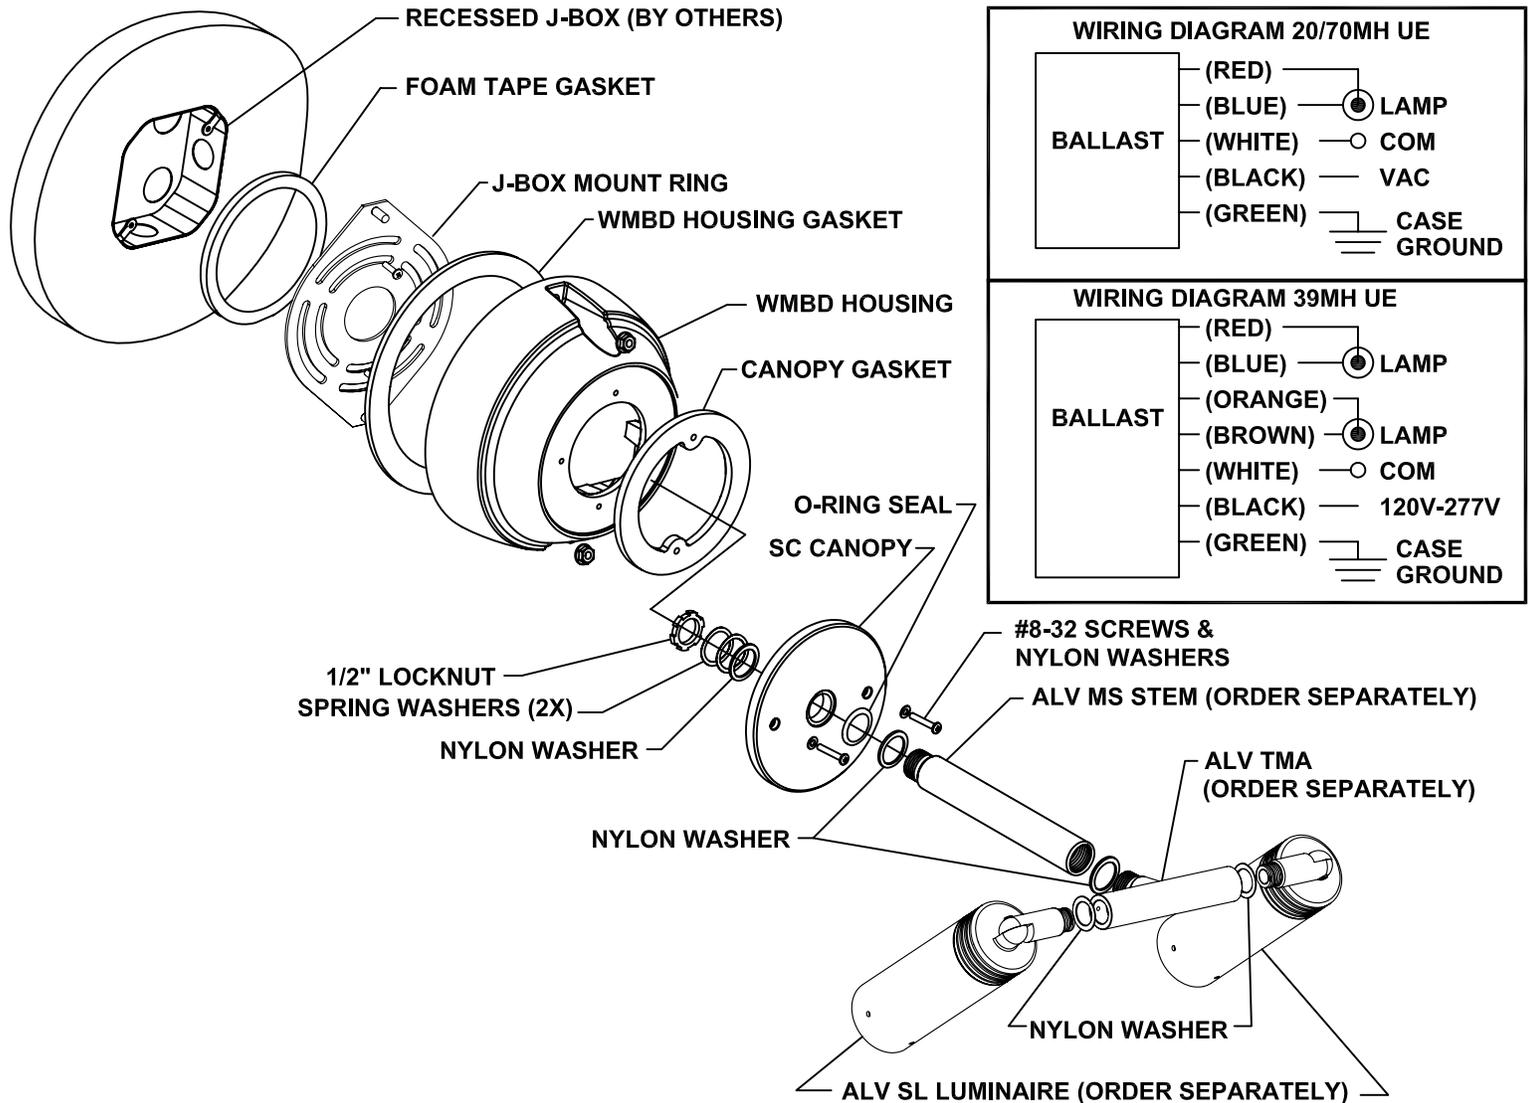

NOTE:
WMBD SC SHOWN ON RECESSED J-BOX. SEE PG1 FOR
DETAILS ON MOUNTING TO SURFACE MOUNT TYPE J-BOX.

ASSEMBLY STEPS:

1. APPLY FOAM TAPE TO J-BOX MOUNT RING AS SHOWN & ATTACH W/ SCREWS PROVIDED TO RECESSED J-BOX. ADDITIONAL MASONRY OR WOOD SCREWS (BY OTHERS) SHOULD BE INSTALLED AS REQ'D, FOR STABLE MOUNT TO WALL.
2. CONNECT SUPPLY LEADS TO BALLAST PER SCHEMATIC ON BALLAST, OR REFER TO PG2. CONNECT GROUND.
3. SLIDE BALLAST ASSY ONTO STUDS & INSTALL NUTS.
4. ASSEMBLE LUMINAIRES TO BRACKET/STEMS AS REQ'D & ATTACH ASSY TO CANOPY WITH HARDWARE PROVIDED.
5. APPLY CANOPY GASKET TO BACK OF CANOPY.
6. CONNECT LUMINAIRE LEADS TO BALLAST SECONDARY LEADS PER SCHEMATIC ON PG2. CONNECT LUMINAIRE GROUNDS.
7. INSTALL ASSY TO WMBD HOUSING WITH SCREWS & NYLON WASHERS TO PROTECT PAINT. TIGHTEN SCREWS (2X) TO 30 INCH/LBS TORQUE MIN.
8. ADJUST LUMINAIRE AIMING & LOCK WITH SET SCREWS AS REQUIRED.

!CAUTION! TURN OFF POWER DURING INSTALLATION OR SERVICING!

FAILURE TO FOLLOW THE MANUFACTURERS INSTRUCTIONS, OR MAKING ANY MODIFICATIONS TO THE PRODUCT CAN VOID THE WARRANTY. BALLAST FAILURES RESULTING FROM POOR MAINTENANCE OR ABUSE WILL NOT BE COVERED BY THE WARRANTY. CONSULT WARRANTY FOR FULL DETAILS.