

S601, S602, S602M Installing Batteries / Volume Adjustment



INSERT BATTERIES HERE



Installing Batteries – S602 and S602M

1. Open the back cover with the silver latch
2. Insert 8 “C”-cell alkaline batteries in the black plastic battery holder.
3. Place battery holder in battery slot
4. Close cover and turn megaphone “ON” to test siren, whistle and talk volume. Keep the switch in the “OFF/ Talk” mode **WARNING:** the Siren or Whistle will sound loud immediately when the switch is on siren or whistle.

INSERT BATTERIES HERE



Installing Batteries – S601

1. Open the back cover with the silver latch
2. Insert 8 “AA”-cell alkaline batteries in the black plastic battery carriage following diagram on megaphone.
3. Place battery carriage in battery slot
4. Close cover and turn megaphone “ON” to test siren, whistle and talk volume. Keep the switch in the “OFF/ Talk” mode **WARNING:** the Siren or Whistle will sound loud immediately when the switch is on siren or whistle.


If the sound is too loud or screeching you need to adjust the INTERNAL VOLUME CONTROL

Internal Volume Control - all models

1. Open the back cover with the silver latch
2. Where the letters “ADJ” are there is a hole. Insert a small Phillips screwdriver in the opening until you make contact with the adjusting mechanism. Turn clockwise to increase volume and turn it counterclockwise to decrease volume.

INSERT BATTERIES HERE

INTERNAL VOLUME CONTROL

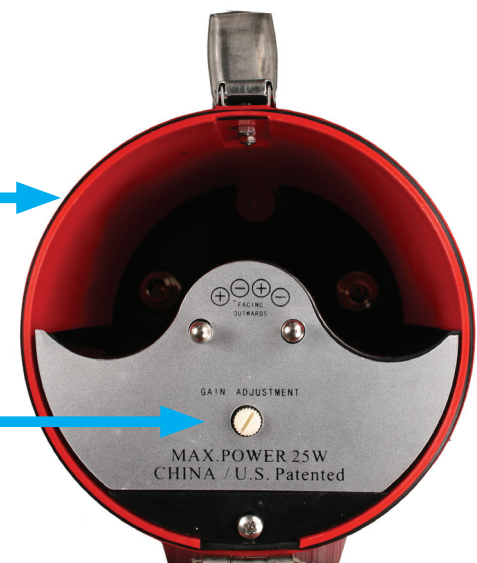

If you need assistance, please call our toll free number and a representative will be happy to help you with this adjustment. 1-800-267-5486