


- Pioneer (AVH-X models) marine mode bypass using TR7 -

Marine Mode is for use in water vessel's only. In no way is it intended for use while operating any vehicle on-road.

- 1. Start with ONLY power and ground connected. Turn the programming switch on TR-7 to the ON position.
- 2. Turn power on and then pulse brown wire to ground 17 times. (after 3 seconds the LED will flash back to you 17 times)
- 3. Pulse the brown wire to ground one time to start the timer programming.
 - a. The LED will rapidly flash once. You will do nothing.
 - b. The LED will then rapidly flash twice. You will do nothing.
 - c. The LED will rapidly flash three times. You will pulse the brown wire to ground 5 times. After three seconds the LED should flash 5 times to confirm that it accepted it.
 - d. The LED will rapidly flash four times. You will do nothing.
- 4. The LED will rapidly flash a bunch of times and then go out.
- 5. Turn the power off and move the programming switch on the TR-7 to the off position.
- 6. Connect the TR-7 according to the diagram below.

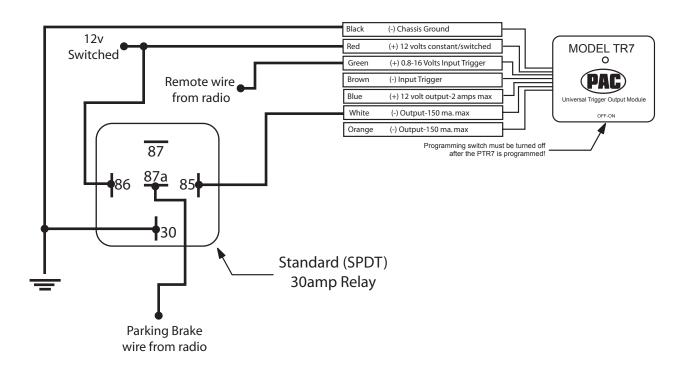

Marine Mode is for use in water vessel's only. In no way is it intended for use while operating any vehicle on-road.