





Operator's Guide

Introduction

Thank you for purchasing the color image scanner ScanSnap S1100 (hereinafter referred to as "the ScanSnap").

This manual explains how to handle and operate the ScanSnap.

Be sure to read this guide and "Getting Started" thoroughly before using the ScanSnap to ensure correct use.

We hope that this manual will provide you with useful information in order to utilize the ScanSnap.

If you are using a Microsoft[®] Windows[®] operating system, either Adobe[®] Acrobat[®] (7.0 or later) or Adobe[®] Reader[®] (7.0 or later) is required to display or print this manual.

Trademarks

Microsoft, Windows, Windows Vista, Excel, PowerPoint, Outlook, SharePoint, and Entourage are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Word is the product of Microsoft Corporation in the United States.

Apple, the Apple logo, Mac, Mac OS, iPhoto, and Rosetta are trademarks of Apple Inc.

Adobe, the Adobe logo, Acrobat, and Adobe Reader are either registered trademarks or trade names of Adobe Systems Incorporated in the United States and/or other countries.

Intel, Pentium, and Intel Core are registered trademarks or trademarks of Intel Corporation in the United States and other countries.

PowerPC is a registered trademark or trademark of International Business Machines Corporation in the United States, other countries, or both.

Cardiris is a trademark of I.R.I.S.

ABBYY and FineReader are trademarks of ABBYY.

Evernote is a registered trademark or trademark of Evernote Corporation.

Google and Google Docs are registered trademarks or trademarks of Google Inc.

ScanSnap, the ScanSnap logo, CardMinder, and Rack2-Filer are registered trademarks or trademarks of PFU LIMITED in Japan.

Other company names and product names are the registered trademarks or trademarks of the respective companies.

Manufacturer

PFU LIMITED

International Sales Dept., Imaging Business Division, Products Group Solid Square East Tower

580 Horikawa-cho, Saiwai-ku, Kawasaki-shi, Kanagawa 212-8563, Japan

Phone: (81-44) 540-4538

All Rights Reserved, Copyright© PFU LIMITED 2010

Disclaimer

Reproducibility of the image data

Confirm that the image data scanned with the ScanSnap meets your requirements (e.g. image reproducibility in size accuracy, information amount, fidelity, content and color).

Disposing of the original document

Check the image data using the application where you transferred the image data to make sure that there are no missing parts before disposing of the original document scanned with the ScanSnap.

It is the responsibility of the customer to store and manage the scanned image, and dispose of the original document scanned with the ScanSnap.

Manuals

Read the following manuals as needed when using the ScanSnap.

Manual	Description	Reference Method
ScanSnap S1100 Getting Started	Read this manual before you start using the product because it contains important information about the safe use of the ScanSnap. It also explains about the ScanSnap package contents, software installation, connecting the ScanSnap, and checking the operation.	Included in the package.
ScanSnap S1100 Operator's Guide (this manual)	Read this manual for information about basic operations of the ScanSnap, software installation, scanning methods, various settings, and handling of the ScanSnap.	Select [Start] menu → [All Programs] → [ScanSnap Manager] → [ScanSnap Operator's Guide]. [Macos Select [Applications] from the sidebar in Finder, and double-click [ScanSnap] → [Manual] → [Operator's Guide].

Manual	Description	Reference Method
Troubleshooting (installation)	Read this manual when you failed to install the software or when the ScanSnap does not operate normally after software installation. It explains about the resolutions for such troubles.	 Click [Manuals] → [Troubleshooting (installation)] in the [ScanSnap Setup] dialog box that appears when you insert the Setup DVD-ROM into the DVD-ROM drive. Select [Start] menu →[All Programs] → [ScanSnap Manager] → [Troubleshooting (installation)]. Double-click the [Troubleshooting (installation)] icon in the [ScanSnap] window that appears when you insert the Setup DVD-ROM into the DVD-ROM drive. Select [Applications] from the sidebar in Finder, and double-click [ScanSnap] → [Manual] → [Troubleshooting (installation)].
Windows ScanSnap Organizer User's Guide	Read these manuals when using this product for the first time, or when you need more	Windows Select [Start] menu → [All Programs] → [ScanSnap Organizer] → [Manual].
CardMinder User's Guide	information on product features, dialog boxes/ windows, operating environment and functions.	Windows Select [Start] menu → [All Programs] → [CardMinder] → [Manual].
Macos Cardiris GETTING STARTED	environment and landaone.	From Finder, select [Applications] and double-click [Cardiris 3.6 for ScanSnap] → [User's Manual.pdf].
ABBYY FineReader for ScanSnap User's Guide		Select [Start] menu → [All Programs] → [ABBYY FineReader for ScanSnap(TM) 4.1] → [User's Guide].
Scan to Microsoft SharePoint User Guide		Select [Start] menu → [All Programs] → [KnowledgeLake] → [Scan to Microsoft SharePoint User Guide].

Manual	Description	Reference Method
ScanSnap Manager Help	Read this Help file when questions or problems regarding operations (e.g. when setting items) arise. This Help file explains about scanner operations, operational troubles and their resolution, dialog boxes/ windows and messages.	Refer to this Help by either of the following methods: Windows Right-click the ScanSnap Manager icon on the taskbar, and then select [Help] → [Help] from the menu that appears. In Windows 7, the ScanSnap Manager icon is displayed in the menu that appears when you click on the taskbar. Click the Help button () for ScanSnap Manager. Press the [F1] key on the keyboard when a dialog box is displayed. Click the [Help] button in each dialog box. Macos Click the ScanSnap Manager icon in the Dock while pressing the [control] key on the keyboard, and then select [Help] → [Help] from the menu that appears. Click the Help button (?) for ScanSnap Manager. From the menu bar, select [Help] → [ScanSnap Manager Help].
ScanSnap Organizer Help Windows CardMinder Help	Read these Help files when questions or problems regarding operations (e.g. when setting items) arise. These Help files explain about operations, dialog boxes/	For details about how to start up the Help, refer to the User's Guide for each product.
Macos Cardiris Help	windows and messages.	Macos From the menu bar, select [Help] → [Cardiris Help].
Macos ABBYY FineReader for ScanSnap Help		Macos From the menu bar, select [Help] → [FineReader for ScanSnap Help].

■ About This Manual

Structure of This Manual

This manual consists of the following:

ScanSnap Overview

This chapter explains about the features, the names and functions of the parts, system requirements, and basic operations of the ScanSnap.

Installing the Software

This chapter explains about the software bundled with the ScanSnap and how to install them.

Using the ScanSnap (for Windows Users)/ Using the ScanSnap (for Mac OS Users)

This chapter explains how to perform a scan, change or save scan settings, add, change or delete profiles, as well as other various scanner functions.

Troubleshooting

This chapter provides references for resolving troubles such as removing jammed documents.

Daily Care

This chapter explains about the cleaning materials and how to clean the ScanSnap.

Appendix

This appendix explains how to update ScanSnap Manager, how to uninstall the software, about settings that differ by the scanning method, how to purchase/clean the Carrier Sheet and the ScanSnap installation specifications.

Read this manual in order starting from "ScanSnap Overview" through "Using the ScanSnap" for a better understanding of ScanSnap operations.

Symbols Used in This Manual

The following indications are used in this manual to obviate any chance of accident or damage to you and people near you, and your property. Warning labels indicate the warning level and statements. The symbols indicating warning levels and their meanings are as follows.

Indication	Description	
Awarning	This indication alerts operators to an operation that, if not strictly observed, may result in severe injury or death.	
⚠ CAUTION	This indication alerts operators to an operation that, if not strictly observed, may result in safety hazards to personnel or damage to the product.	

Besides warning indicators, the following symbols are also used in this manual.

Symbol	Description
B	This symbol alerts operators to particularly important information. Be sure to read this information.
4	This symbol alerts operators to helpful advice regarding operations.
Windows	This symbol indicates operations using Windows.
Mac OS	This symbol indicates operations using Mac OS.

Arrow Symbols in This Manual

Right-arrow symbols (\rightarrow) are used to connect icons or menu options you should select in succession.

Example: Select [Start] menu → [Computer].

Screen Examples in This Manual

Windows screen

Screenshots in this manual are used according to guidelines provided by Microsoft Corporation.

The screenshots used in this manual are of Windows Vista.

The actual windows and operations may differ depending on the operating system that you are using.

Mac OS screen

The screenshots used in this manual are of Mac OS X v10.6.

The actual windows and operations may differ depending on the Mac OS that you are using.

The screen examples in this manual are subject to change without notice in the interest of product development.

If the actual screen differs from the screen examples in this manual, operate by following the actual displayed screen.

Abbreviations Used in This Manual

The following abbreviations are used in this manual:

Windows 7 : Windows® 7 Starter operating system, English Version

Windows[®] 7 Home Premium operating system, English Version Windows[®] 7 Professional operating system, English Version Windows[®] 7 Enterprise operating system, English Version Windows[®] 7 Ultimate operating system, English Version

Windows Vista : Windows Vista® Home Basic operating system, English Version

Windows Vista[®] Home Premium operating system, English Version Windows Vista[®] Business operating system, English Version Windows Vista[®] Enterprise operating system, English Version Windows Vista[®] Ultimate operating system, English Version

Windows XP : Windows® XP Home Edition operating system, English Version

Windows® XP Professional operating system, English Version

Windows : Windows 7, Windows Vista or Windows XP operating system

Microsoft Office : Microsoft® Office

Word : Microsoft[®] Word 2010

Microsoft[®] Office Word 2007 Microsoft[®] Office Word 2003 Microsoft[®] Office Word 2002

Excel : Microsoft® Excel® 2010

Microsoft® Office Excel® 2007 Microsoft® Office Excel® 2003 Microsoft® Office Excel® 2002

PowerPoint : Microsoft® PowerPoint® 2010

Microsoft® Office PowerPoint® 2007 Microsoft® Office PowerPoint® 2003 Microsoft® Office PowerPoint® 2002

SharePoint : Microsoft® SharePoint® Server 2010, English Version

 $\label{eq:microsoft} \begin{array}{l} \mbox{Microsoft}^{\mbox{\scriptsize @}} \mbox{ Office SharePoint}^{\mbox{\scriptsize @}} \mbox{ Server 2007, English Version} \\ \mbox{Microsoft}^{\mbox{\scriptsize @}} \mbox{ Office SharePoint}^{\mbox{\scriptsize @}} \mbox{ Portal Server 2003, English Version} \\ \end{array}$

Microsoft® SharePoint® Foundation 2010, English Version

Microsoft® Windows® SharePoint® Services 2.0/3.0, English Version

Office Live : Microsoft® Office Live

Internet Explorer : Windows® Internet Explorer®

Microsoft® Internet Explorer®

Windows Live Mail : Windows Live™ Mail

Windows Mail : Microsoft® Windows® Mail

Outlook : Microsoft® Outlook® 2010

Microsoft® Office Outlook® 2007 Microsoft® Office Outlook® 2003

Outlook Express : Microsoft® Outlook® Express

: Microsoft® .NET Framework .NET Framework

: Microsoft® Entourage® Entourage

Mac OS : Mac OS X v10.6

> Mac OS X v10.5 Mac OS X v10.4

: Adobe® Acrobat® Adobe Acrobat

: Adobe® Reader® Adobe Reader

ABBYY FineReader for

: ABBYY FineReader for ScanSnap™

All the descriptions in this manual assume the usage of ABBYY ScanSnap

FineReader for ScanSnap bundled with the ScanSnap. Unless otherwise specified, the term ABBYY FineReader for ScanSnap refers to the ABBYY

FineReader for ScanSnap bundled with the ScanSnap.

Note that ABBYY FineReader for ScanSnap may be upgraded without

If the descriptions differ from the actual displayed screens, refer to ABBYY

FineReader for ScanSnap Help.

: Cardiris™ for ScanSnap Cardiris

Google Docs : Google Docs™

ScanSnap : Color image scanner ScanSnap S1100

Carrier Sheet : ScanSnap Carrier Sheet

Contents

Introduction	2
■ About This Manual	
ScanSnap Overview	15
Features of the ScanSnap	16
Parts and Functions	19
■ Front	
■ Side	20
■ Output Guide	20
System Requirements	21
■ Windows	
■ Mac OS	23
Turning the ScanSnap ON/OFF	25
Documents for Scanning	27
■ Conditions for Documents That Can Be Scanned■ Conditions for Using the Carrier Sheet	
How to Load Documents	
Scanning Operation Flow	32
Installing the Software	34
Bundled Software Overview	35
Installing in Windows	36
■ How to Install the Software	
■ ScanSnap Software	38
■ Evernote for Windows	
■ Scan to Microsoft SharePoint	
■ Trial Software	

Installing in Mac OS	48
■ How to Install the Software	48
■ ScanSnap Software	
■ Evernote for Mac	
Using the ScanSnap (for Windows Users)	57
ScanSnap Manager Icon and Operations	58
■ Right-Click Menu	59
■ Left-Click Menu	60
How to Perform a Scan	61
■ Preparation	61
■ Using the Quick Menu	63
■ Without Using the Quick Menu	69
■ Stopping the Scan	73
■ Finishing ScanSnap Operation	74
Configuring ScanSnap Manager	75
■ Quick Menu Settings	75
■ How to Configure Scan Settings	78
■ Profile Management	
■ Automatic Linkage with Applications	
■ ScanSnap's Communication Status	
■ Showing the Scanning Progress	95
Actions	97
■ Saving Data in a Specified Folder	98
■ Attaching Files to E-Mail	105
■ Using the ScanSnap as a Copy Machine	117
■ Saving Files to Picture Folder	124
■ Converting into Word/Excel/PowerPoint Documents	
■ Storing Business Cards in CardMinder	
■ Saving Data in SharePoint	
■ Saving to Rack2-Filer	
■ Saving Documents to Evernote	
■ Saving Handwritten Notes to Evernote	
■ Saving Documents to Google Docs	
Using the ScanSnap in Various Ways	
■ Scanning Color Documents in Gray or Black & White Mode	187

	■ Scanning Color Documents in High Compression Mode	189
	■ Correcting Skewed Character Strings	191
	■ Correcting the Orientation of Scanned Images	194
	■ Scanning Documents Larger Than A4/Letter Size	197
	■ Scanning Documents Such as Photographs and Clippings	
	■ Long Page Scanning	206
	■ Saving Scanned Images in Multiple PDF Files	208
	■ Creating Searchable PDF Files	210
	■ Automatically Setting Keywords for PDF Files	213
	■ Setting Document Open Passwords for PDF Files	218
Using the	ScanSnap (for Mac OS Users)	222
ScanSn	ap Manager Icon and Operations	223
	■ ScanSnap Manager Menu	224
	■ Profile Menu	226
How to	Perform a Scan	227
	■ Preparation	227
	■ Using the Quick Menu	228
	■ Without Using the Quick Menu	233
	■ Stopping the Scan	237
	■ Finishing ScanSnap Operation	238
Configu	ring ScanSnap Manager	239
	■ Quick Menu Settings	239
	■ How to Configure Scan Settings	242
	■ Profile Management	245
	■ Automatic Linkage with Applications	255
	■ Showing the Scanning Progress	256
Actions		258
	■ Saving Data in a Specified Folder	259
	■ Attaching Files to E-Mail	266
	■ Using the ScanSnap as a Copy Machine	276
	■ Converting into Word/Excel Documents	283
	■ Storing Business Cards in Cardiris	291
	■ Storing Scanned Images in iPhoto	300
	■ Saving Documents to Evernote	305
	■ Saving Handwritten Notes to Evernote	313
	Saving Documents to Google Docs	310

Using the ScanSnap in Various Ways	328
■ Scanning Color Documents in Gray or Black & White Mode	328
■ Correcting Skewed Character Strings	330
■ Correcting the Orientation of Scanned Images	333
■ Scanning Documents Larger Than A4/Letter Size	336
■ Scanning Documents Such as Photographs and Clippings	
■ Long Page Scanning	
■ Saving Scanned Images in Multiple PDF Files	
■ Creating Searchable PDF Files	
■ Automatically Setting Keywords for PDF Files	352
Troubleshooting	357
Daily Care	358
Cleaning Materials	359
Cleaning the Outside of the ScanSnap	360
Cleaning the Inside of the ScanSnap	361
Appendix	365
Updating ScanSnap Manager	366
■ Updating in Windows	366
■ Updating in Mac OS	
Uninstalling the Software	370
■ Uninstalling in Windows	370
■ Uninstalling in Mac OS	
Setting Items With/Without the Quick Menu	376
Purchasing/Cleaning the Carrier Sheet	380
■ Purchasing the Carrier Sheet	380
■ Cleaning the Carrier Sheet	381
Installation Specifications	382
About Maintenance	383
Index	384

ScanSnap Overview

This chapter explains about the features, part names and functions, system requirements, and basic operations of the ScanSnap.

Features of the ScanSnap	6
Parts and Functions	9
System Requirements	<u>'</u> 1
Turning the ScanSnap ON/OFF	25
Documents for Scanning	27
How to Load Documents	0
Scanning Operation Flow	32

Features of the ScanSnap

The main features of the ScanSnap are as follows:

●Turn documents into digital data by just pressing the [Scan/Stop] button

By converting paper documents cluttering up your desk into PDF or JPEG files, you can conveniently view, edit, manage and archive the documents in your computer.

Speedy scanning

A4 or Letter size documents can be scanned at a speed of 7.5 seconds per page under the following conditions:

System requirements

Windows

Intel[®] Core[™] 2 Duo 2.2 GHz or higher Windows 7, Windows Vista or Windows XP operating system

Mac OS

Intel[®] Core[™] 2 Duo 2.4 GHz or higher
Mac OS X v10.6, Mac OS X v10.5 or Mac OS X v10.4

Scan setting (*)

When [Image quality] is set to [Automatic resolution], [Color mode] to [Auto color detection], [Compression rate] to [3], and other settings are in default

- * : Scanning speed may slow down in [B&W] (black & white) mode depending on the document.
 Example: Scanning color brochures in [B&W] mode (converting a color image to black & white)
 - Scanning speed may slow down when [Correct skewed character strings automatically] and/ or [Allow automatic image rotation] is enabled.

Compact, lightweight and portable

Compact enough to place on your desktop next to your computer, the ScanSnap can be powered by a single USB cable. This allows you to carry it anywhere with your laptop and have the flexibility to use it in or outside the office.

●The Quick Menu makes the operation easy even for beginners

The Quick Menu will allow you to start using the ScanSnap right away even if it is your first time. Simply press the [Scan/Stop] button on the scanner to scan your document, and then the Quick Menu will appear where you can select the action you want to perform.

Automatically recognize color and black & white documents (Auto color detection)

The ScanSnap determines the color mode of each document, saves color documents in color, black & white documents in black & white, and black & white documents with photos or illustrations in grayscale. This function will optimize your PDF file size.

Scan documents without specifying paper size (Automatic page size detection)

Paper size is automatically recognized so that you do not need to change the paper size setting. The Carrier Sheet (sold separately) allows you to scan documents larger than A4/Letter size including photos and clippings.

Scan various types of documents

The ScanSnap allows you to scan not only paper documents such as standard office paper, postcards, business cards, photographs or clippings but also plastic cards (including embossed ones) such as driver's licences or ID cards.

Automatically set the resolution by the paper size (Automatic resolution function)

Documents are scanned at 300 dpi at first, then the image is saved at 300 dpi if the document length is 148 mm (5.83 in.) or less, and converted to 200 dpi for longer documents. When linked with a text recognition application (e.g. for scanning business cards), you can save high resolution image data without having to change the scan settings.

Create searchable PDF files

You can create searchable PDF files by performing automatic text recognition for PDF files after scanning.

You can also perform text recognition on character strings marked by a highlight pen in black & white documents, and add them as keywords for the PDF file.

E-mail or print a scanned image directly from scanning

You can attach the scanned image to an e-mail without needing any additional application or print it out instead of using a copy machine.

Compatible with both Windows and Mac OS

You can use the ScanSnap in a manner that best suits your office environment in either Windows or Mac OS (*).

- * : The following functions are not available for Mac OS:
 - · Color high compression
 - · Setting passwords for PDF files

Convert paper documents into Word/Excel/PowerPoint files

Use the bundled "ABBYY FineReader for ScanSnap" to directly convert the scanned image into a Word/Excel/PowerPoint file.

In Mac OS, only conversion to Word and Excel files is supported.

Organize and manage scanned images by linking with ScanSnap

Organizer Windows

- Setting a keyword (Intelligent Indexing)
 Keywords can be set by the following methods:
 - Recognize a character string on a page (OCR) and set as a keyword (Zone OCR)
 - Set any character string as a keyword
 - Set a marked character string as a keyword (Marker Index)
 - Drag and drop a keyword from the keyword list (Keyword Addition by Drag&Drop) The keywords can be viewed in thumbnails. (Keyword Overlay)
- Distributing files by keyword (Automatic Keyword Sort)
 Files can also be sorted into folders according to the keyword set for files as a sorting condition.
- Search a variety of files (Search Engine Selection)
 Files can be found quickly searched by file name, keyword, text or date.
- Cropping marked sections (Intelligent Cropping)
 Selections on a page that are marked with a highlight pen can be cut and pasted elsewhere to create scrapbooks.

Easy filing of business cards

Text recognition can be performed on business cards which then can be easily converted into digital data with the bundled business card application. With CardMinder, you can create a database which facilitates data search of business cards converted into digital data.

The bundled business card application is as follows:

Windows CardMinder

Macos Cardiris

●Share documents converted into digital data with others **Windows**

You can conveniently share documents by saving the scanned image directly in SharePoint or Office Live.

Access documents converted into digital data anytime, anywhere


By converting scanned images into digital data and saving them in Evernote or Google Docs, you can later access them anytime from your computer or smartphone no matter where you are.

Note: The ScanSnap does not conform to the TWAIN, ISIS and WIA standards.


Parts and Functions

This section explains names and functions of the ScanSnap parts.


■ Front

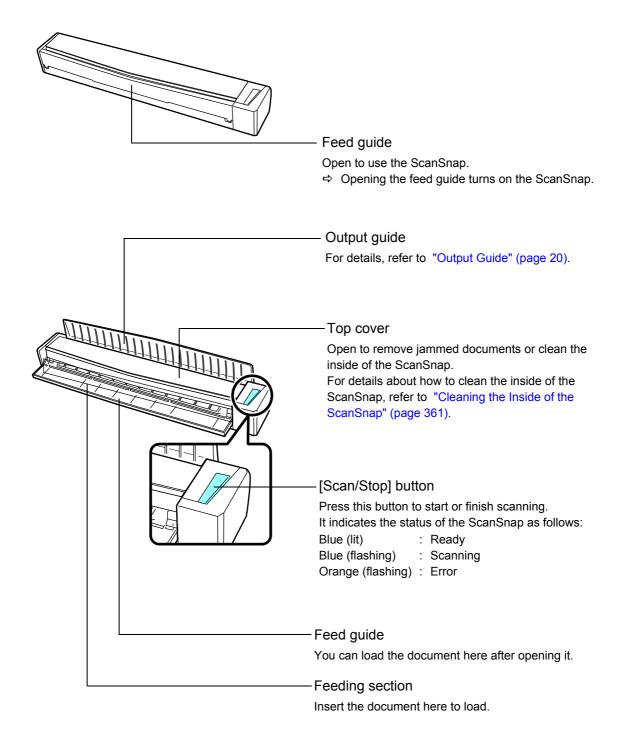

■ Side

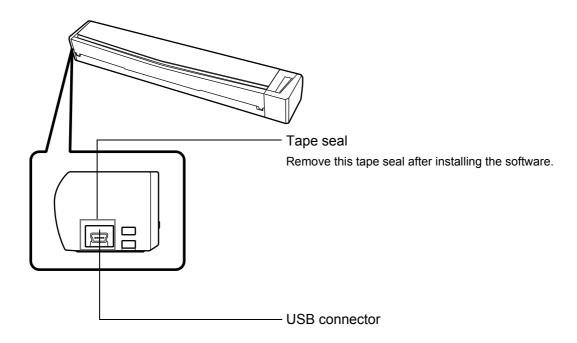

■ Output Guide

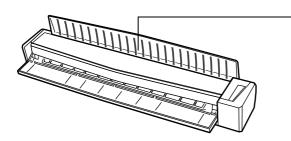


Output guide

Open the output guide to eject documents from the front of the ScanSnap.

Select an ejection method depending on the document type you are scanning.

For details about the documents that can be scanned with the ScanSnap, refer to "Documents for Scanning" (page 27).

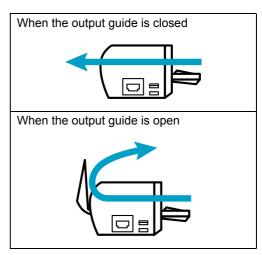

System Requirements

The system requirements for the ScanSnap are as follows:

■ Windows

Operating system	Windows 7 (32 bit/64 bit)	Windows Vista (*1) (32 bit/64 bit)	Windows XP (*2) (32 bit)		
СРИ	Intel [®] Core [™] 2 Duo 2.2 GHz or higher recommended (minimum: Intel [®] Pentium [®] 4 1.8 GHz)				
Memory	32 bit: 1 GB or more 64 bit: 2 GB or more	512 MB or more (1 GB or more recommended)			
Display resolution	800 × 600 pixels or higher (*3)				
Hard disk space	Disk space required to install the software bundled with the ScanSnap is as follows: ScanSnap Manager: 480 MB ScanSnap Organizer: 580 MB CardMinder: 280 MB ABBYY FineReader for ScanSnap: 600 MB Evernote for Windows: 120 MB Scan to Microsoft SharePoint: 40 MB				
USB port (*4)	USB2.0/USB1.1				

- *1: Service Pack 1 or later required
- *2: Service Pack 3 or later required
- *3: When the font size is large, some screens may not be displayed properly. In that case, use a smaller font size.
- *4: When using a USB 3.0 port, data is transferred at the same speed as USB 2.0.




- .NET Framework 3.5 (SP1) must be installed to use Evernote for Windows.
- If .NET Framework 3.5 (SP1) is not installed, it will be installed (500 MB free disk space required) at the same time when ScanSnap Manager or ScanSnap Organizer is installed.



- Do not use the USB port on the keyboard or the monitor to connect the ScanSnap (it may not function properly).
- Make sure to use a powered hub equipped with an AC adapter if you are using a commercially available USB hub.
- If the USB port or the USB hub is USB 1.1, scanning speed will slow down.
- If the CPU or the memory do not meet the required specifications, scanning speed will slow down.
- The actual increase in used disk space after installation and the required disk space for installation may differ from each other depending on your Windows system disk management.
- A disk space approximately three times larger than the resulting scanned file size is required when scanning documents.

The following shows the estimated file size when scanning one side of a color document.

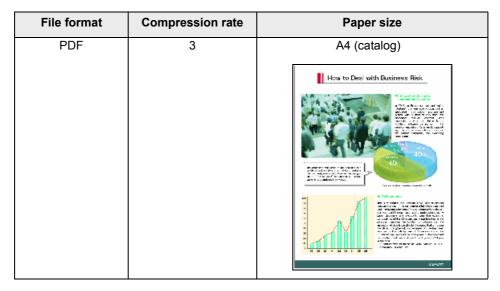

Estimated image data size (KB)

Color mode	Automatic resolution	Normal	Better	Best	Excellent
Color	413.6	275.7	427.7	877.9	3231.1
Gray	367.9	260.5	403.9	746.9	2729.1
B&W	172.4	120.2	174.0	362.0	2048.4
Color high compression	224.3	168.8	240.0	165.3	_

■ Mac OS

Operating system (*1)	Mac OS X v10.6 (*2)	Mac OS X v10.5 (*3)	Mac OS X v10.4 (*3)
СРИ	Intel [®] Core [™] 2 Duo 2.4 GHz or higher recommended (minimum: Intel [®] Core [™] Duo 1.83 GHz or PowerPC [®] G5 1.6 GHz)		
Memory	1 GB or more	GB or more 512 MB or more (1 GB or more recommended)	
Display resolution	1024 × 768 pixels or higher		
Hard disk space	Disk space required to install the software bundled with the ScanSnap is as follows: ScanSnap Manager: 670 MB ABBYY FineReader for ScanSnap: 570 MB Cardiris: 150 MB Evernote for Mac: 55 MB		
USB port (*4)	USB2.0/USB1.1		


- *1: It is recommended to apply the latest updates to the Mac OS.
- *2: Rosetta must be installed to use Cardiris.

 You can install Rosetta from the [Optional Installs] package on the Mac OS installation disc.
- *3: Evernote for Mac is not supported for versions earlier than Mac OS X v.10.5.8.
- *4: When using a USB 3.0 port, data is transferred at the same speed as USB 2.0.



- Do not use the USB port on the keyboard or the monitor to connect the ScanSnap (it may not function properly).
- Make sure to use a powered hub equipped with an AC adapter if you are using a commercially available USB hub.
- If the USB port or the USB hub is USB 1.1, scanning speed will slow down.
- If the CPU or the memory do not meet the required specifications, scanning speed will slow down.
- A disk space approximately three times larger than the resulting scanned file size is required when scanning documents.

The following shows the estimated file size when scanning one side of a color document.

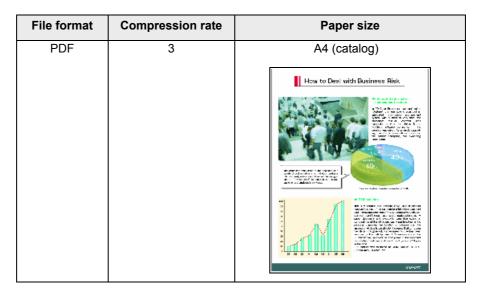

Estimated image data size (KB)

Color mode	Automatic resolution	Normal	Better	Best	Excellent
Color	413.6	275.7	427.7	877.9	3231.1
Gray	367.9	260.5	403.9	746.9	2729.1
B&W	172.4	120.2	174.0	362.0	2048.4

Turning the ScanSnap ON/OFF


This section explains how to turn the ScanSnap ON/OFF.

The ScanSnap is turned ON/OFF in conjunction with the computer. Therefore, you do not have to worry about turning the power ON/OFF as long as the ScanSnap is connected to a computer.

Turning the ScanSnap on

Open the feed guide when the computer is turned on.

The [Scan/Stop] button flashes blue to indicate that the ScanSnap is turned on, and lights in blue when the ScanSnap is ready to scan.

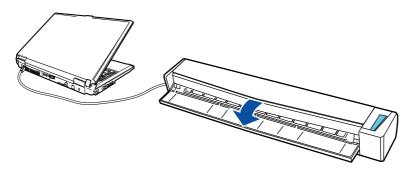




With some computers, the initialization of the ScanSnap may be performed several times when the computer is started up.

Turning the ScanSnap off

Turn off the computer or close the feed guide.

The [Scan/Stop] button switches off when the ScanSnap is turned off.

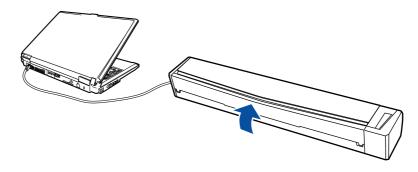



With some computers, it may take two to three minutes until the light of the [Scan/Stop] button goes out after the computer is turned off.

●ScanSnap in sleep mode

When the ScanSnap has not been in operation for one minute while the power is on, it enters sleep (power saving) mode.

The ScanSnap's internal light switches off in sleep mode.

Documents for Scanning

This section explains about the documents that can be scanned with the ScanSnap.

Conditions for Documents That Can Be Scanned

Conditions for documents that can be scanned with the ScanSnap are as follows:

Eject method (*1)	With the output guide open	With the output guide closed	
Paper type	Standard office paper	Standard office paper, postcards, business cards Cards conforming to the ISO7810 ID-1 Type standard (54 × 86 mm)	
Paper weight	52.3 to 80 g/m² (14 to 20 lb)	52.3 to 209.3 g/m² (14 to 56.1 lb) Plastic cards 0.76 mm (embossed cards are supported)	
Paper size	Width : 25.4 to 216 mm (1 to 8.5 in.) Length : 25.4 to 360 mm (1 to 14.17 in.) Maximum size for long page scanning (*2): 216 × 863 (mm) / 8.5 × 34 (in.)		

^{*1:} For details about how to eject documents, refer to "Output Guide" (page 20).

^{*2:} Scanning starts when you hold down the [Scan/Stop] button on the ScanSnap for three seconds or longer.



- When you scan documents written in pencil, there may be black traces left on them. It is recommended that you scan such documents by using the Carrier Sheet. Clean the rollers as often as possible when you scan such documents directly without using a Carrier Sheet because dirt accumulating on the rollers may cause feeding errors.
 For details about how to clean the inside of the ScanSnap, refer to "Cleaning the Inside of the ScanSnap" (page 361).
- The following types of documents must not be scanned:
 - Paper-clipped or stapled documents (remove the paper clips and staples for scanning)
 - Documents on which the ink is still wet (wait until the ink dries completely to scan these documents)
 - Documents larger than 216 × 863 (mm) / 8.5 × 34 (in.) (width x length)
 - Documents other than paper such as fabric, metal foil and OHP film
- Be aware that picture side of postcards may get damaged when you scan picture postcards.
- Cards that are bent may not be fed properly.
- If the surface of the card is dirty with grease marks (e.g. fingerprints) and such, perform scanning after wiping the dirt off.
- Insert the plastic card straight into the feeding section of the ScanSnap. Do not tilt the plastic card when you insert it because the plastic card may not be fed properly.
- When you scan plastic cards with strong luster, some parts of the image may appear lighter or darker than the original.
 e.g. gold colored credit card
- Insert embossed cards in landscape orientation to achieve better scanning results.
- If the background color of the card and the color of the embossed characters are similar (e.g.
 no gold or silver embossing), it may be difficult for the ScanSnap to recognize embossed
 characters. In that case, click the [Option] button in the [Scanning] tab of the ScanSnap setup
 dialog box, and select the [Setting for text only document] check box for a possible resolution.
- Scanning the following types of documents without using the Carrier Sheet can result in documents being damaged or scanned incorrectly. It is recommended that you use the Carrier Sheet to scan them.
 - Documents smaller than 25.4 × 25.4 (mm) / 1 × 1 (in.) (width × length)
 - Documents whose paper weight is less than 52.3 g/m² (17 lb)
 - Documents of non-uniform thickness (e.g. envelopes and paper sheets with attached materials)
 - Wrinkled or curled documents
 - Folded or torn documents
 - Tracing paper
 - Coated paper
 - Photographs (photographic paper)
 - Perforated or punched documents
 - Odd shaped documents (not square or rectangular)
 - Carbon paper or thermal paper
 - Documents with memo papers or sticky notes attached
- Since carbonless paper may contain chemicals that can harm the rollers, take note of the following when scanning carbonless paper:
 - It is recommended that you use the Carrier Sheet to scan such documents.
 - Make sure to clean the rollers regularly to maintain the scanner performance when scanning carbonless paper directly without using the Carrier Sheet. Depending on the type of carbonless paper, the life span of the scanner may be shortened compared to scanning standard office paper.

■ Conditions for Using the Carrier Sheet

The Carrier Sheet (sold separately) is a sheet designed to transport documents through the ScanSnap.

You can scan documents that are larger than A4/Letter size, photographs and clippings.

Conditions for documents that can be scanned using the optional Carrier Sheet are as follows:



- Do not use a damaged Carrier Sheet because it may damage or cause the scanner to malfunction.
- Be careful not to cut your finger on the edge of the Carrier Sheet.

Eject method (*1)	With the output guide closed
Paper type	Documents that cannot be fed directly into the ScanSnap
Paper weight	Up to 127 g/m² (up to 34 lb) Up to 63.5 g/m² (17 lb) (when scanning documents folded in half)
Paper size	Carrier Sheet size (216 × 297 mm) A3 (297 × 420 mm) (*2) A4 (210 × 297 mm) A5 (148 × 210 mm) A6 (105 × 148 mm) B4 (257 × 364mm) (*2) B5 (JIS) (182 × 257 mm) B6 (JIS) (128 × 182 mm) Post card (100 × 148 mm) Business card (90 × 55 mm, 55 × 90 mm) Letter (8.5 × 11 in. (216 × 279.4 mm)) 11 × 17 in (279.4 × 431.8 mm) (*2) Custom size Width : 25.4 to 216 mm (1 to 8.5 in.) Length : 25.4 to 297 mm (1 to 11.69 in.)

^{*1:} For details about how to eject documents, refer to "Output Guide" (page 20).

^{*2:} Fold in half to scan.



- Do not stain, or cut the end with a black & white pattern because the Carrier Sheet will not be recognized properly.
- Do not place the Carrier Sheet upside down. Otherwise, a paper jam may occur and damage the Carrier Sheet and the document inside.
- Do not leave your document inside the Carrier Sheet for a long time. Otherwise, the ink on the document may be transferred onto the Carrier Sheet.
- To avoid deformation, do not use or leave the Carrier Sheet in high temperature places such as under direct sunlight or near a heating apparatus for a long time.
- Do not fold or pull the Carrier Sheet.
- To avoid deformation, store the Carrier Sheet on a flat surface without any weight on it.
- Paper jams may occur when several small size documents such as photographs and postcards are placed inside the Carrier Sheet to be scanned at once. It is recommended that you scan such documents one at a time.

How to Load Documents


Load a document in the ScanSnap in the following procedure.

For details about documents that can be loaded, refer to "Documents for Scanning" (page 27).




You can only load one document at a time in the ScanSnap.

1. Open the feed guide of the ScanSnap.

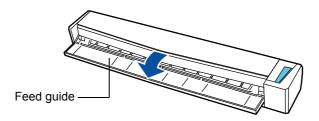





 If you want the document to be ejected from the front of the ScanSnap or when there is not enough space where the document exits the ScanSnap, open the output guide.
 For details about documents that can be scanned with the output guide open, refer to "Documents for Scanning" (page 27).

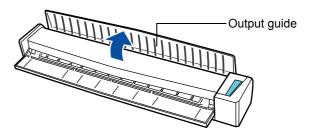

 How the document is ejected differs as below depending on whether the output guide is open or closed.

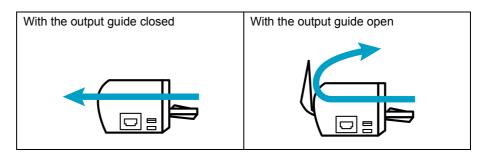

2. Insert the document straight into the feeding section of the ScanSnap, with the scanning side facing up.

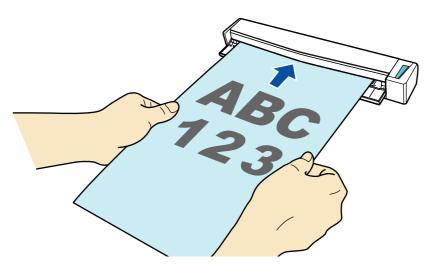


⇒ The document is pulled in until it is set inside the ScanSnap.




 Insert the document by aligning it with the left edge of the feeding section if you specify a standard size other than [Automatic detection] which is the default paper size.

For details about how to change the scan settings, refer to the following:

For Windows (→ page 78) For Mac OS (→ page 242)

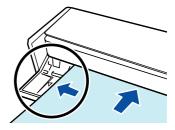

- When you perform scanning with the output guide closed, leave enough space at the back of the ScanSnap to allow the document to be completely ejected. Make sure that the area where the document exits the scanner is clear of any obstacles. Otherwise, paper jam may occur.
- If you scan the following documents with the output guide open, a paper jam may occur and damage the documents. Scan the following documents with the output guide closed.
 - Thick paper (80 g/m² (20 lb) or heavier)
 - Postcards
 - Business cards
 - Plastic cards
 - Carrier Sheet

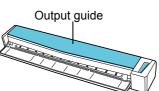

Scanning Operation Flow

This section explains the flow of operations for scanning documents.

You can scan documents in two different ways. Choose either way depending on your intended use.

Using the Quick Menu

With the Quick Menu, even the first time users can easily use each ScanSnap function by following the instructions on the screen and perform scanning.

After scanning, select an application to link with ScanSnap Manager in the Quick Menu.

For details about how to perform scanning using the Quick Menu, refer to the following:

```
For Windows (→ page 63)
For Mac OS (→ page 228)
```

Without Using the Quick Menu

You can perform scanning by using predefined scan settings.

Before you perform scanning, select a profile which is already configured with an application to link with ScanSnap Manager. Documents are scanned according to the scan settings of the selected profile.

For details about how to perform scanning without using the Quick Menu, refer to the following:

```
For Windows (→ page 69)
For Mac OS (→ page 233)
```



Specify whether or not to use the Quick Menu by selecting or clearing the [Use Quick Menu] check box in the ScanSnap setup dialog box/window.

Display the ScanSnap setup dialog box/window in the following procedure:

Windows

Right-click the ScanSnap Manager icon on the taskbar, and select [Scan Button Settings]. In Windows 7, the ScanSnap Manager icon is displayed in the menu which appears when you click on the taskbar.

MacOS

Click the ScanSnap Manager icon in the Dock while pressing the [control] key on the keyboard, and select [Settings].

Using the Quick Menu

Without Using the Quick Menu

Turn on the ScanSnap.(→ page 25) Select a profile Windows Mac OS ✓ Standard CardMinder Searchable PDF(OCRs during scan) Scan to Print Scan to Folder Scan to Word 1 1. Load a document in the ScanSnap. You can only load one document at a time. Documents for scanning (→ page 27) How to load documents (→ page 30) 2. Press the [Scan/Stop] button to start scanning. **3.** To continue scanning, load the next document after confirming that the current document has been ejected. Scanning starts automatically when the next document is loaded. The [Scan/Stop] button flashes in blue throughout the scan. 4. Press the [Scan/Stop] button to finish scanning when scanning is completed. Select an application from the Quick Menu Windows Mac OS ing 🍘 📜 🜆 🛃 **6** 🗐 🖳 🌠

The selected application starts up.

Installing the Software

This chapter explains about the software bundled with the ScanSnap and how to install the	em
Bundled Software Overview	35
Installing in Windows	36

Bundled Software Overview

This section gives an overview of each bundled software and their functions. You can edit, manage and arrange the scanned image by using the following software:

ScanSnap Manager

This scanner driver is required to scan documents with the ScanSnap. The scanned image can be saved as a PDF or JPEG file.

ScanSnap Organizer Windows

You can use this application to display image data (PDF or JPEG files) without opening them, create folders and arrange files as you like.

● CardMinder Windows

You can use this application to efficiently digitalize a large number of business cards. Text recognition can be performed on business cards and you can create a database to facilitate card data management and searches.

● Cardiris Macos

You can use this application to efficiently digitalize a large number of business cards by performing text recognition on them.

ABBYY FineReader for ScanSnap

This application can perform text recognition on the scanned images using OCR (Optical Character Recognition) and convert the image data to Word, Excel or PowerPoint files that can be edited.

In Mac OS, only conversion to Word and Excel files is supported.

● Evernote for Windows Windows / Evernote for Mac Macos

You can easily save files in Evernote using the ScanSnap.

● Scan to Microsoft SharePoint Windows

You can easily save files in SharePoint and Office Live using the ScanSnap.

● Rack2-Filer V5.0 Trial Version Windows

This application provides integrated management of digitalized paper documents (electronic documents) and digital data created with computer, as if you are filing paper documents in actual binders.


For details about the languages supported in Rack2-Filer, refer to Rack2-Filer "Readme".

Installing in Windows

This section explains how to install the software in Windows.

■ How to Install the Software

When you insert the Setup DVD-ROM into the DVD-ROM drive on your computer, the [ScanSnap Setup] dialog box appears.

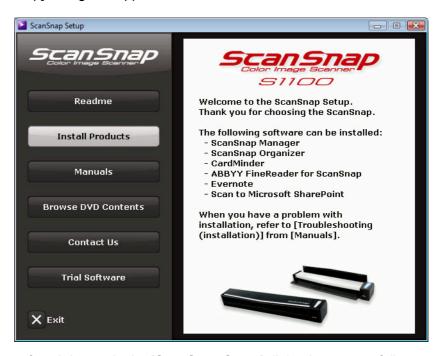

The functions of each button in the [ScanSnap Setup] dialog box are as follows.

Button	Function
Button	Function
Readme	Displays the [Readme] dialog box where you can refer to the Readme file of each software.
Install Products	Displays the [Install Products] dialog box from which you can install the following software: IscanSnap] button ScanSnap Manager ScanSnap Organizer CardMinder ABBYY FineReader for ScanSnap Ievernote] button Evernote for Windows Scan to Microsoft SharePoint] button Scan to Microsoft SharePoint
Manuals	Displays the [Manuals] dialog box where you can refer to the software manuals including "Troubleshooting (installation)".
Browse DVD Contents	Opens Windows Explorer to display the files from the DVD-ROM.

Button	Function
Contact Us	Displays contact information for customer support.
Trial Software	Displays the [Trial Software] dialog box from which you can install the trial version software.

■ ScanSnap Software

Install the following software:

- ScanSnap Manager
- ScanSnap Organizer
- CardMinder
- ABBYY FineReader for ScanSnap

The procedure is as follows.

- 1. Turn on the computer and log on as a user with Administrator privileges.
- 2. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - ⇒ The [ScanSnap Setup] dialog box appears.




If the [ScanSnap Setup] dialog box does not appear, double-click "ScanSnap.exe" in the Setup DVD-ROM via Windows Explorer.

3. Click the [Install Products] button.



⇒ The [Install Products] dialog box appears.

4. Click the [ScanSnap] button.

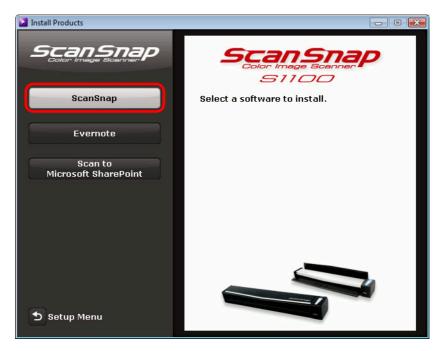


⇒ The [ScanSnap] dialog box appears, displaying the [Welcome to the InstallShield Wizard for ScanSnap] screen.

5. Click the [Next] button.

⇒ The [Select Features] screen appears.

6. Confirm that all check boxes are selected, and click the [Next] button.

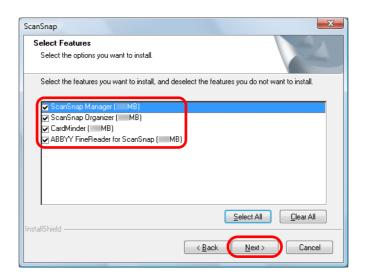




- The software will not be installed unless the check box is selected.
- Note that you must install ScanSnap Manager. Also, it is recommended to install all software in order to utilize the features of the ScanSnap.

- ⇒ The [Choose Destination Location] screen appears.
- 7. Confirm the destination folder, and then click the [Next] button.
 - ⇒ A confirmation about accepting the license agreement appears.
- **8.** Read the "END-USER LICENSE AGREEMENT FOR ScanSnap", select [I accept the terms of the license agreement], and then click the [Next] button.




Depending on the number of the installed software, this step may be required more than once.

- ⇒ The [Start Copying Files] screen appears.
- $\mathbf{9}_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ Confirm the settings, and then click the [Next] button.
 - ⇒ Installation starts. When the installation is complete, the [ScanSnap S1100 How to load a document (1/2)] screen appears.
- 10. Read the instructions, and click the [Next] button.

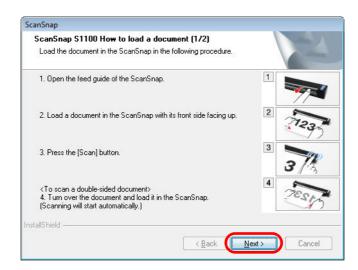

⇒ The [ScanSnap S1100 How to load a document (2/2)] screen appears.

11.Read the instructions, and click the [Next] button.

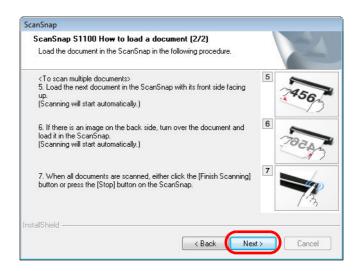

- ⇒ The [InstallShield Wizard Complete] screen appears.
- 12.Click the [Finish] button.
- 13. Remove the Setup DVD-ROM from the DVD-ROM drive.



If the installation is not successfully completed, select [Manuals] → [Troubleshooting (installation)] in the [ScanSnap Setup] dialog box and refer to Troubleshooting (installation).

■ Evernote for Windows


Install Evernote for Windows in the following procedure.

- 1. Turn on the computer and log on as a user with Administrator privileges.
- 2. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - ⇒ The [ScanSnap Setup] dialog box appears.




If the [ScanSnap Setup] dialog box does not appear, double-click "ScanSnap.exe" in the Setup DVD-ROM via Windows Explorer.

3. Click the [Install Products] button.

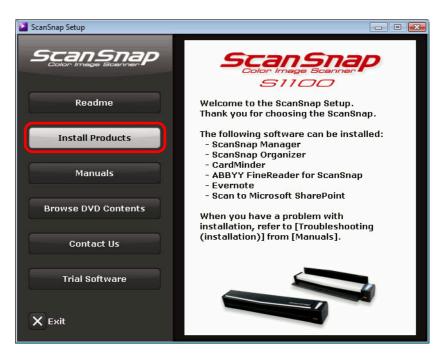

⇒ The [Install Products] dialog box appears.

4. Click the [Evernote] button.

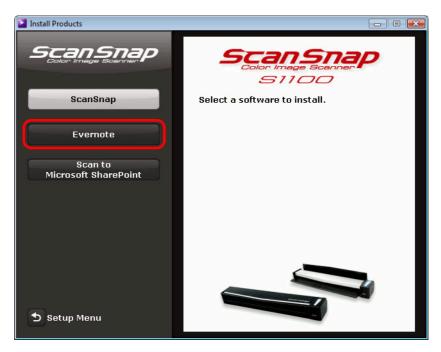

⇒ Installation starts.

- **5.** Follow the instructions on the screen to complete the installation.
- **6.** Click the [Finish] button when the "InstallShield Wizard Complete" notification is displayed.
- 7. Remove the Setup DVD-ROM from the DVD-ROM drive.

Scan to Microsoft SharePoint

Install Scan to Microsoft SharePoint in the following procedure.




For details about system requirements and notes on installation, refer to "Readme" of Scan to Microsoft SharePoint. Click the [Readme] button in the [Scan to Microsoft SharePoint] dialog box to open the Readme file.

- 1. Turn on the computer and log on as a user with Administrator privileges.
- 2. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - ⇒ The [ScanSnap Setup] dialog box appears.




If the [ScanSnap Setup] dialog box does not appear, double-click "ScanSnap.exe" in the Setup DVD-ROM via Windows Explorer.

3. Click the [Install Products] button.

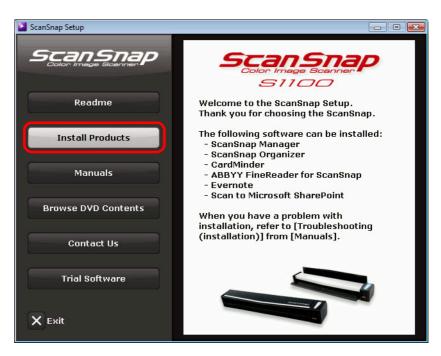

⇒ The [Install Products] dialog box appears.



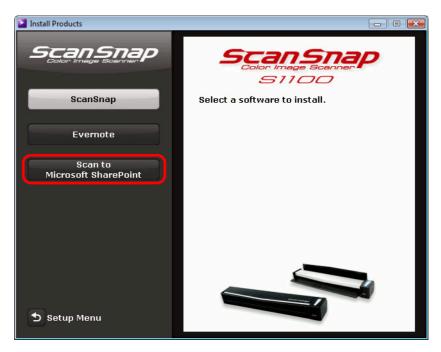

- ⇒ Installation starts.
- **5.** Follow the instructions on the screen to complete the installation.
- **6.** Click the [Finish] button when the "InstallShield Wizard Complete" notification is displayed.
- 7. Remove the Setup DVD-ROM from the DVD-ROM drive.



For details about how to use Scan to Microsoft SharePoint, refer to the Scan to Microsoft SharePoint User Guide. Click the [Scan to Microsoft SharePoint] button in the [Manuals] dialog box to open the Scan to Microsoft SharePoint User Guide.

■ Trial Software

Install the trial versions of the software in the following procedure.




For details about system requirements and installation, refer to "Readme" of the trial version software. Click on the name of the software in the [Trial Software] dialog box, then click the [Readme] button to open the Readme file.

- $oldsymbol{1}$. Turn on the computer and log on as a user with Administrator privileges.
- 2. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - ⇒ The [ScanSnap Setup] dialog box appears.




If the [ScanSnap Setup] dialog box does not appear, double-click "ScanSnap.exe" in the Setup DVD-ROM via Windows Explorer.

3. Click the [Trial Software] button.

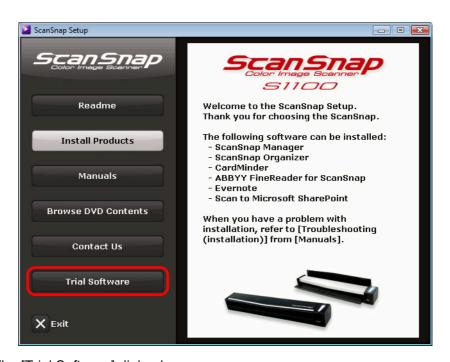

 \Rightarrow The [Trial Software] dialog box appears.



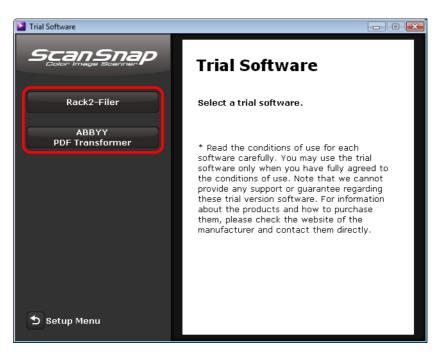

- ⇒ The setup dialog box of the trial software appears (e.g. [Rack2-Filer Setup]).
- 5. Click the [Install Product] button.
 - ⇒ Installation starts.
- **6.** Follow the instructions on the screen to complete the installation.
- 7. Click the [Finish] button when the "InstallShield Wizard Complete" notification is displayed.
- 8. Remove the Setup DVD-ROM from the DVD-ROM drive.



For details about how to use trial versions of the software, refer to the software manual. Click the [Manuals] button in the setup dialog box of the trial software to open the manual.

Installing in Mac OS

This section explains how to install software in Mac OS.

■ How to Install the Software

When you insert the Setup DVD-ROM into the DVD-ROM drive on your computer, the [ScanSnap] window appears.



The functions of each icon in the [ScanSnap] window are as follows.

Icon	Function
ScanSnap	Installs the following software: ScanSnap Manager ABBYY FineReader for ScanSnap Cardiris
Evernote	Installs Evernote.
Readme	Displays the Readme file.
Troubleshooting (installation)	Displays "Troubleshooting (installation)".
Operator's Guide	Displays this manual.

■ ScanSnap Software

Install the following software:

- ScanSnap Manager
- ABBYY FineReader for ScanSnap
- Cardiris

The procedure is as follows.

- 1. Turn on the computer and log in as a user with Administrator privileges.
- 2. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - ⇒ The [ScanSnap] window appears.
- 3. Double-click the [ScanSnap] icon.



⇒ A confirmation message appears to proceed with the installation.

4. Click the [Continue] button.



⇒ The [Install ScanSnap] window appears, displaying the [Welcome to the ScanSnap Installer] screen.

5. Click the [Continue] button.

- ⇒ The [Important Information] screen appears.
- 6. Read [Important Information], and then click the [Continue] button.
 - ⇒ The [Software License Agreement] screen appears.
- 7. Read the "END-USER LICENSE AGREEMENT FOR ScanSnap", and click the [Continue] button.
 - ⇒ A confirmation about accepting the license agreement appears.
- 8. To accept the license agreement, click the [Agree] button.



⇒ The [Standard Install on "disk name"] screen appears.

9. Click the [Install] button.





- To install only ScanSnap Manager, clear the [ABBYY FineReader for ScanSnap] and [Cardiris] checkboxes in the [Custom install on "disk name"] screen which is displayed by clicking the [Customize] button.
- ABBYY FineReader for ScanSnap or Cardiris cannot be installed on its own.
- ⇒ Installation starts.
- ⇒ The [Cardiris 3.6 for ScanSnap] window appears, displaying the [License] screen.

10. Scroll down and read the "License" to the end, and then click the [Continue] button.

⇒ A confirmation message appears.

11.Click the [Agree] button.

- ⇒ The [Select Destination] screen appears.
- ⇒ By default, Cardiris is installed in the Applications folder.

12. Click the [Continue] button.

⇒ The [Installation Type] screen appears.

13.Confirm that [Easy Install] is specified in the [Installation Type] pop-up menu.

14.Click the [Install] button.

- ⇒ Installation starts.
- ⇒ The [Finish Up] screen appears.

15. Click the [Quit] button.

⇒ The [Startup item registration] window appears.


16. Click the [OK] button.



Note that the [Startup item registration] window will close automatically after a certain period of time elapses without operation.


⇒ The [ScanSnap S1100 How to load a document 1] screen appears.

$\boldsymbol{17}\boldsymbol{.}\mathsf{Read}$ the instructions and click the [Continue] button.

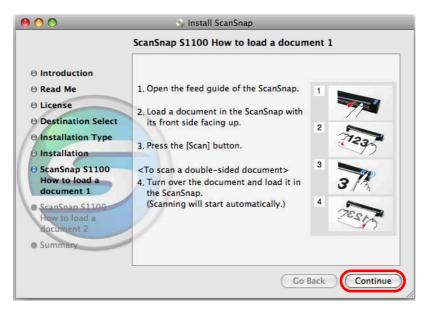

⇒ The [ScanSnap S1100 How to load a document 2] screen appears.

18. Read the instructions and click the [Continue] button.

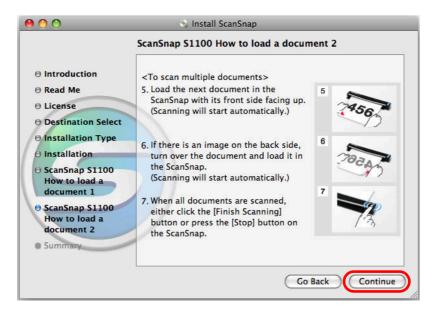

- ⇒ The message "The installation was successfully." appears on the screen.
- 19. Click the [Close] button.
- **20.** Remove the Setup DVD-ROM from the DVD-ROM drive.

■ Evernote for Mac


Install Evernote for Mac in the following procedure.

- 1. Turn on the computer and log in as a user with Administrator privileges.
- 2. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - \Rightarrow The [ScanSnap] window appears.
- **3.** Double-click the [Evernote] icon.



⇒ A confirmation about accepting the license agreement appears.

4. To accept the license agreement, click the [Accept] button.

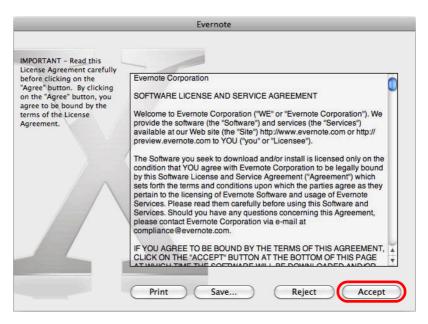

- ⇒ A window to start installing Evernote for Mac appears.
- **5.** Drag the [Evernote] icon onto the [Applications] icon.



- ⇒ Evernote for Mac is copied into the [Applications] folder.
- **6.** When the copying is finished, drag the Evernote icon on the desktop into the Trash.

$\boldsymbol{7}_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ Remove the Setup DVD-ROM from the DVD-ROM drive.



If the installation is not successfully completed, select [Troubleshooting (installation)] in the [ScanSnap] window and refer to Troubleshooting (installation).

8. Prepare for the linkage with Evernote.

Start up Evernote and create a new Notebook.

Using the ScanSnap (for Windows Users)

This chapter explains how to perform scanning, configure scan settings, add, change or delete profiles, as well as various scanner functions and uses.

ScanSnap Manager Icon and Operations	58
How to Perform a Scan	61
Configuring ScanSnap Manager	75
Actions	97
Using the ScanSnap in Various Wavs	187


ScanSnap Manager Icon and Operations

All operations on the ScanSnap are managed by ScanSnap Manager.

The ScanSnap Manager icon automatically appears on the taskbar when Windows starts up. The ScanSnap Manager icon indicates whether or not ScanSnap Manager is successfully communicating with the ScanSnap. The appearance of the icon changes according to the communication status as shown below.


Status	ScanSnap Manager icon
Communicating	
Not communicating	<u>S</u>

A menu is displayed when you click the ScanSnap Manager icon.

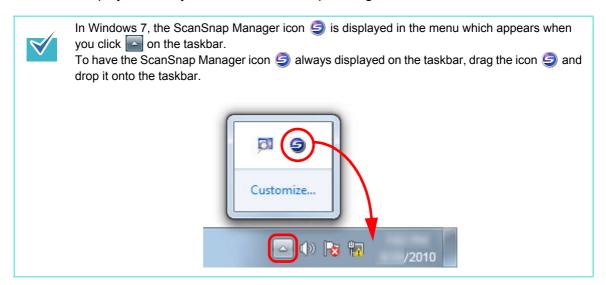

■ Right-Click Menu


This menu appears when you right-click the ScanSnap Manager icon 🥥.

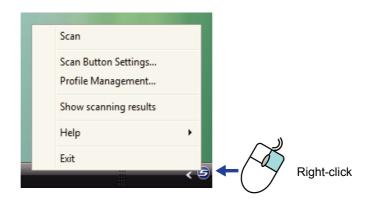

Item	Function
Scan	Starts scanning. Follows the settings configured in [Scan Button Settings].
Scan Button Settings	Displays the ScanSnap setup dialog box. You can configure the scan settings in this dialog box. ⇒ "How to Configure Scan Settings" (page 78)
Profile Management	Displays the [ScanSnap Manager - Profile Management] dialog box. You cannot select [Profile Management] when the [Use Quick Menu] check box is selected in the ScanSnap setup dialog box. ⇒ "Profile Management" (page 81)
Show scanning results	After scanning is completed, a message appears to inform you whether blank pages are removed or the image is rotated. ScanSnap Manager Scan results are as follows: Blank page removal: No Image Rotation: No
Help	 Displays the following menu: Help Opens the ScanSnap Manager Help. Troubleshooting Displays [Troubleshooting] in the ScanSnap Manager Help. ScanSnap Portal Site Opens the ScanSnap global homepage (http://scansnap.fujitsu.com) About ScanSnap Manager Displays the [Version Information] dialog box. Preferences Displays the [ScanSnap Manager - Preferences] dialog box. Online Update Displays the [ScanSnap Manager - Online Update] dialog box (page 366).
Exit	Exits ScanSnap Manager. ⇒ "Finishing ScanSnap Operation" (page 74)

■ Left-Click Menu

This menu appears when you click the ScanSnap Manager icon (5). Available profiles are shown in the Left-Click Menu.

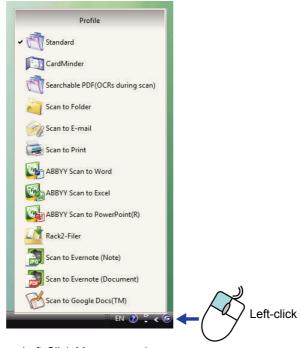

Left-Click Menu example

Select a profile in the Left-Click Menu before you perform scanning. Documents are scanned according to the scan settings of the profile you select.

For details about how to add, change or delete profiles, refer to "Profile Management" (page 81).



- To enable the Left-Click Menu, clear the [Use Quick Menu] check box in the ScanSnap setup dialog box. The Left-Click Menu does not appear when this check box is selected.
- Profiles configured for the following scanner models will be carried over to ScanSnap S1100 if the computer is the same:
 - ScanSnap S1500/S1500M
 - ScanSnap S1300
 - ScanSnap S510
 - ScanSnap S500
 - ScanSnap S300

How to Perform a Scan

This section explains how to perform scanning with the ScanSnap.

Preparation

1. Turn on the computer.


⇒ The ScanSnap Manager icon Sappears on the taskbar when Windows starts up.





- If the ScanSnap Manager icon is not displayed, select [Start] menu → [All Programs] → [ScanSnap Manager] → [ScanSnap Manager] to start up ScanSnap Manager. Normally, ScanSnap Manager is registered under [Startup] when installed so its icon is displayed on the taskbar when Windows starts.
- When ScanSnap Manager is not registered under [Startup], register ScanSnap Manager in the following procedure:
 - Select [Help] → [Preferences] in the Right-Click Menu.
 ⇒ [ScanSnap Manager Preferences] dialog box appears.
 - 2. In the [Auto Startup] tab, select the [Start up ScanSnap Manager when you log on] check box.
- In Windows 7, the ScanSnap Manager icon is displayed in the menu which appears when you click on the taskbar.
 For details about how to display the ScanSnap Manager icon in the taskbar, refer to "ScanSnap Manager Icon and Operations" (page 58).

2. Open the feed guide of the ScanSnap to turn the power on.

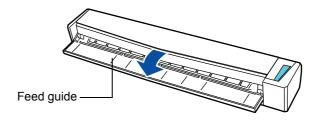

⇒ The ScanSnap Manager icon changes from

⇒ to

⇒.



There may be a slight delay before the ScanSnap Manager icon changes to depending on your computer's performance, operating environment and load such as when multiple programs are running at the same time.

There are two ways to perform scanning, either with the Quick Menu or without using the Quick Menu. For details, refer to the following:

- Using the Quick Menu (→ page 63)
- Without Using the Quick Menu (→ page 69)

Using the Quick Menu


The following explains the procedure for scanning by using the Quick Menu.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. Select the [Use Quick Menu] check box.

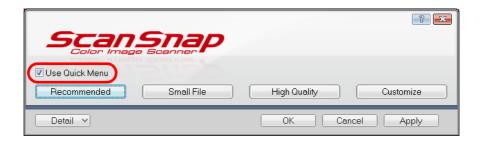

3. Click one of the profile buttons.



Profile Button Description [Recommended] button Settings are [Automatic resolution] for [Image quality] in the [Scanning] tab in the ScanSnap setup dialog box and default for other settings. It is recommended that you select this button when you want to scan documents in optimum quality suitable for the paper size of the document. [Small File] button Settings are [Normal] (Color/Gray: 150 dpi, B&W: 300 dpi) for [Image quality] in the [Scanning] tab in the ScanSnap setup dialog box and default for other settings. It is recommended that you select this button when you want to reduce the file size. [High Quality] button Settings are [Best] (Color/Gray: 300 dpi, B&W: 600 dpi) for [Image quality] in the [Scanning] tab in the ScanSnap setup dialog box and default for other settings. It is recommended that you select this button when you want to scan documents in high quality.

Profile Button	Description
[Customize] button	Default settings are the same as the [Recommended] settings. Scan settings can be changed depending on your scanning purpose.



- The [Recommended] button is selected in default.
- For details about the default settings when using the Quick Menu, refer to the ScanSnap Manager Help.
- You cannot change the settings for the [Recommended], [Small File], and [High Quality] buttons. If you change any of these settings, the profile automatically switches to [Customize].

For details about how to change scan settings, refer to "How to Configure Scan Settings" (page 78).

4. Click the [OK] button to close the ScanSnap setup dialog box.

5. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).


6. Press the [Scan/Stop] button on the ScanSnap to start scanning.




You can also start scanning from the Right-Click Menu. For more details, refer to "Right-Click Menu" (page 59).



- Do not connect or disconnect the ScanSnap and other USB devices during scanning.
- Do not close the feed guide during scanning.
- Do not switch users during scanning. Doing so will cancel scanning.
- ⇒ The [ScanSnap Manager Image scanning and file saving] dialog box appears.

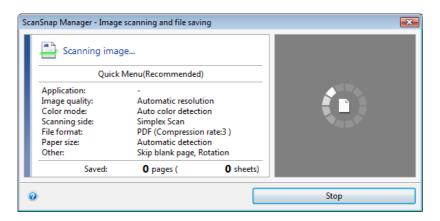

After the scanning has completed, the [ScanSnap Manager - Image scanning and file saving] dialog box then shows a new message indicating that the ScanSnap is ready for the next scan.

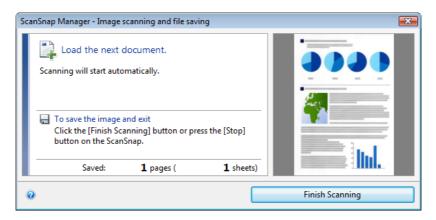



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The Quick Menu appears.



- You can also finish scanning by clicking the [Finish Scanning] button in the [ScanSnap Manager - Image scanning and file saving] dialog box.
- The [Scan/Stop] button on the ScanSnap flashes in blue during the scan.

8. In the Quick Menu, click the icon of the application to link with ScanSnap Manager.



⇒ The selected application is started.



- To specify which applications to display/hide in the Quick Menu, or change the display order of the applications, refer to "Quick Menu Settings" (page 75).
- To select an application to link with ScanSnap Manager before scanning, refer to "Without Using the Quick Menu" (page 69).

Application		Description
	Scan to ScanSnap Organizer (*1)	Displays the [ScanSnap Organizer] dialog box. Scanned image is saved in a folder specified in ScanSnap Organizer. For details about how to operate ScanSnap Organizer, refer to the ScanSnap Organizer User's Guide.
9 11	Scan to CardMinder (*2)	Displays the [CardMinder] dialog box. Scanned image is stored in CardMinder. For details about how to continue the process after you select this item, refer to "Storing Business Cards in CardMinder" (page 139).
10.	Scan to Folder	Displays the [Scan to Folder] dialog box. Indicates the destination folder for saving the scanned image. For details about how to continue the process after you select this item, refer to "Saving Data in a Specified Folder" (page 98).
EQ.	Scan to E-mail	Displays the [Scan to E-mail] dialog box. Scanned image is attached to an e-mail message. For details about how to continue the process after you select this item, refer to "Attaching Files to E-Mail" (page 105).
	Scan to Print	Displays the [Scan to Print] dialog box. Scanned image can be printed. For details about how to continue the process after you select this item, refer to "Using the ScanSnap as a Copy Machine" (page 117).
	Scan to Rack2-Filer (*3)	Scanned image is saved as a PDF file in a Rack2-Filer binder. For details about how to continue the process after you select this item, refer to "Saving to Rack2-Filer" (page 155).
A	Scan to Evernote (Document) (*4)	Scanned image is saved as a PDF file in Evernote. For details about how to continue the process after you select this item, refer to "Saving Documents to Evernote" (page 162).
	Scan to Evernote (Note) (*4)	Scanned image is saved as a JPEG file in Evernote. For details about how to continue the process after you select this item, refer to "Saving Handwritten Notes to Evernote" (page 171).
M	Scan to Google Docs(TM) (*5)	Scanned image is saved as a PDF file in Google Docs. For details about how to continue the process after you select this item, refer to "Saving Documents to Google Docs" (page 178).
	Scan to Word (*6)	Text recognition is performed on the scanned image which is then converted to a Word file. For details about how to continue the process after you select this item, refer to "Converting into Word/Excel/PowerPoint Documents" (page 131).
	Scan to Excel (*6)	Text recognition is performed on the scanned image which is then converted to an Excel file. For details about how to continue the process after you select this item, refer to "Converting into Word/Excel/PowerPoint Documents" (page 131).
C	Scan to PowerPoint(R) (*6)	Text recognition is performed on the scanned image which is then converted to a PowerPoint file. For details about how to continue the process after you select this item, refer to "Converting into Word/Excel/PowerPoint Documents" (page 131).

Application	Description
Scan to SharePoint (*7)	Scanned image is saved in SharePoint or Office Live. For details about how to continue the process after you select this item, refer to "Saving Data in SharePoint" (page 146).
Scan to Picture Folder	Displays the [Scan to Picture Folder] dialog box. Scanned image is saved as a JPEG file in the pictures folder. For details about how to continue the process after you select this item, refer to "Saving Files to Picture Folder" (page 124).

- *1: Displayed when ScanSnap Organizer is installed.
- *2: Displayed when CardMinder is installed.
- *3: Displayed when Rack2-Filer trial version (bundled with the ScanSnap) or Rack2-Filer (V5.0 or later recommended/bundled model or sold separately) is installed.
- *4: Displayed when Evernote for Windows 3.5 or later is installed.
- *5: Displayed when .NET Framework 3.0 is installed.

 Note that .NET Framework 3.0 is also included in .NET Framework 3.5 (SP1 or later). It is recommended that you use .NET Framework 3.5 (SP1 or later) by updating Windows.

 Even if .NET Framework 4 or later is already installed, you need to install .NET Framework 3.0 separately because .NET Framework 3.0 is not included in .NET Framework 4.0 or later version.
- *6: Displayed when ABBYY FineReader for ScanSnap is installed.
- *7: Displayed when Scan to Microsoft SharePoint is installed.



- The output image may slightly differ from the original document in size.
- When ScanSnap Organizer, CardMinder, Rack2-Filer trial version (bundled with the ScanSnap), or Rack2-Filer (V5.0 or later recommended/bundled model or sold separately) becomes active (with the application's dialog box brought to front and selected on taskbar), performing a scan by pressing the [Scan/Stop] button on the ScanSnap automatically starts the linkage between Scansnap Manager and the active application. For details about automatic linkage, refer to "Automatic Linkage with Applications" (page 90).



- You cannot start scanning when the Quick Menu is displayed. Either select an icon from the Quick Menu and finish the process, or close the Quick Menu before you perform the next scan.
- Do not move, delete, or rename the scanned image in other applications while the Quick Menu is displayed.

■ Without Using the Quick Menu


The following explains the procedure for scanning without using the Quick Menu.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.


2. Clear the [Use Quick Menu] check box.

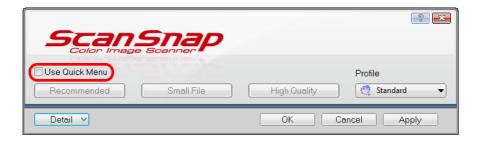

3. Select a profile.

Select a profile from either of the following:

• [Profile] drop-down list

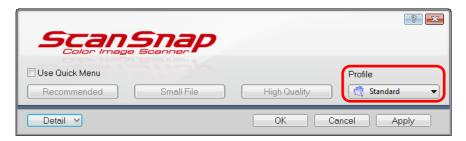

Left-Click menu



4. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).


5. Press the [Scan/Stop] button on the ScanSnap to start scanning.




You can also start scanning from the Right-Click Menu. For more details, refer to "Right-Click Menu" (page 59).



- Do not connect and disconnect the ScanSnap and other USB devices during scanning.
- Do not close the feed guide during scanning.
- Do not switch users during scanning. Doing so will cancel scanning.
- ⇒ The [ScanSnap Manager Image scanning and file saving] dialog box appears.

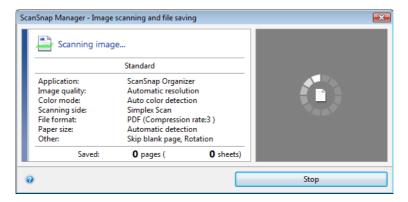

⇒ The [ScanSnap Manager - Image scanning and file saving] dialog box then shows a new message indicating that the ScanSnap is ready for the next scan.

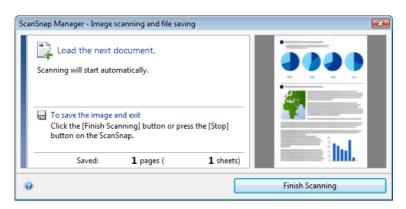



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The application specified for the selected profile starts up.




- You can also finish scanning by clicking the [Finish Scanning] button in the [ScanSnap Manager - Image scanning and file saving] dialog box.
- The [Scan/Stop] button on the ScanSnap flashes in blue throughout the scan.
- To select an application to link with ScanSnap Manager in the Quick Menu after scanning is completed, refer to "Using the Quick Menu" (page 63).
- When the [Set the marked text as a keyword for the PDF file] or the [Convert to Searchable PDF] check box is selected in the [File option] tab, the application starts after text recognition has been performed on the scanned image.
 A dialog box showing the text recognition progress appears during text recognition process.
- By default, documents are scanned with the following settings: [Image quality: Automatic resolution] and [Color mode: Auto color detection].
 For details about how to change scan settings, refer to "How to Configure Scan Settings" (page 78).
- The application that starts after scanning varies depending on what is selected in the [Application] tab in the ScanSnap setup dialog box. For details, refer to the ScanSnap Manager Help.
- The output image may slightly differ from the original document in size.
- When ScanSnap Organizer, CardMinder, Rack2-Filer trial version (bundled with the ScanSnap), or Rack2-Filer (V5.0 or later recommended/bundled model or sold separately) is active (with the application's dialog box brought to the front and selected on the taskbar), performing a scan by pressing the [Scan/Stop] button on the ScanSnap automatically starts the linkage between ScanSnap Manager and the active application. For details about automatic linkage, refer to "Automatic Linkage with Applications" (page 90).

■ Stopping the Scan

You can stop a scan in progress in case you are scanning a wrong document or the wrong side of a document.

Stop the scan in the following procedure:

1. Click the [Stop] button in the [ScanSnap Manager - Image scanning and file saving] dialog box which appears during scanning.

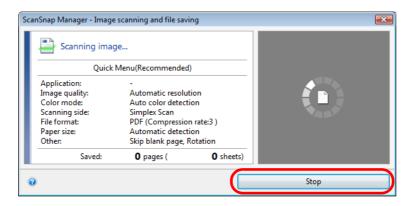




You can also stop the scan during scanning by pressing the [Scan/Stop] button on the ScanSnap.

Remove the document from the ScanSnap after stopping the scan. For details about how to remove documents, refer to "Troubleshooting" in the ScanSnap Manager Help.

⇒ The following message appears when the scanning stops.

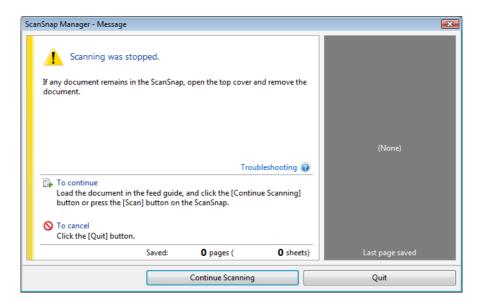

2. Click the [Quit] button.

To continue scanning, click the [Continue Scanning] button or press the [Scan/Stop] button on the ScanSnap after loading another document in the ScanSnap.

■ Finishing ScanSnap Operation

Exiting ScanSnap Manager

Select [Exit] from the Right-Click Menu.

Normally, you do not have to exit ScanSnap Manager.



You cannot use the ScanSnap after exiting ScanSnap Manager. Select [Start] menu → [All Programs] → [ScanSnap Manager] → [ScanSnap Manager] to start up ScanSnap Manager when you want to use the ScanSnap.

Disconnecting the ScanSnap

- 1. Close the feed guide to turn off the ScanSnap.
 - ⇒ The ScanSnap Manager icon on the taskbar changes from 🧐 to 🧐.



2. Disconnect the USB cable from the computer.



The ScanSnap does not have a power switch and is turned ON/OFF in conjunction with the computer's power. The ScanSnap can also be automatically turned ON/OFF by opening or closing the feed guide.

Configuring ScanSnap Manager


This section explains how to specify which applications to display in the Quick Menu, set scan settings, how to add, change and delete profiles, automatic linkage with applications, scanning progress status, and dialog boxes displayed during scanning.

■ Quick Menu Settings

You can specify which applications to display or hide in the Quick Menu, as well as change the display order of the applications in the following procedure.

1. Click [Applications to Show/Hide] in the Quick Menu.

For details about how to display the Quick Menu, refer to "Using the Quick Menu" (page 63).

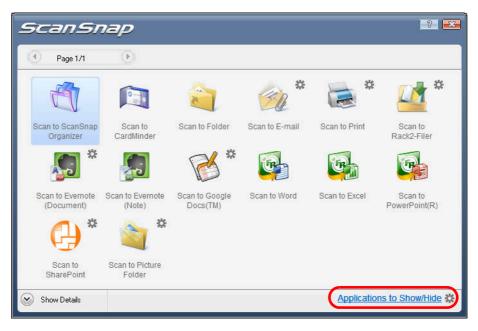

⇒ The [Applications to Show/Hide] dialog box appears.


2. Specify which applications to display in the Quick Menu.

Showing or Hiding Application Icons

The icons of the applications listed under [Show] are displayed in the Quick Menu.

When you select an application in [Show] and click the [Remove] button, the application is moved to [Hide]. Likewise, when you select an application in [Hide] and click the [Add] button, the application is moved to [Show].

To display all the applications in the Quick Menu, click the [Restore Default] button.

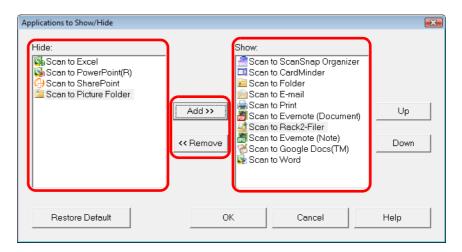


Display Order of Applications

Application icons are displayed in the Quick Menu in the same order as they are listed in [Show].

You can change the display order of an application by selecting an application in [Show] and clicking either the [Up] or [Down] button.

To restore the default display order of the applications displayed in the Quick Menu, click the [Restore Default] button.

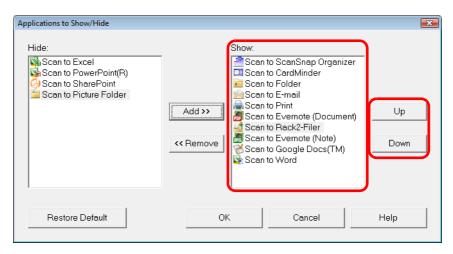

The applications are displayed in the order shown below in the Quick Menu and in [Show] of the [Applications to Show/Hide] dialog box.



3. Click the [OK] button to close the [Applications to Hide/Show] dialog box.

⇒ The applications to be displayed in the Quick Menu and their display order are set.

■ How to Configure Scan Settings

You can configure scan settings in the ScanSnap setup dialog box depending on your intended use.

Configure the scan settings in the following procedure.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.



You can open the ScanSnap setup dialog box by the following ways:

- Double-click the ScanSnap Manager icon ⑤.
- Press [Ctrl], [Shift], and [Space] keys simultaneously.

2. Click the [Detail] button to switch to the detail view mode.

Using the Quick Menu

Outline view



Detail view



Without Using the Quick Menu

Outline view




Detail view





The ScanSnap setup dialog box retains the display status from the last time the ScanSnap was used. For example, if it was closed in detail view mode, the dialog box is displayed in detail mode next time you open it.

3. Change the scan settings in each tab.

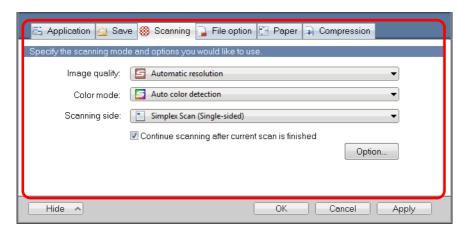

The following items can be configured in each tab:

For details, refer to the ScanSnap Manager Help.

- [Application] tab
 - Application to be used with the ScanSnap
- [Save] tab
 - Folder in which scanned image is saved
 - File name used for saving the scanned image
- [Scanning] tab
 - Scanning

(Which image quality to scan with, use color, gray or black & white, enable or disable [Setting for text only document], [Allow automatic blank page removal], [Correct skewed character strings automatically], [Allow automatic image rotation] and [Continue scanning after current scan is finished].)

- [File option] tab
 - File format of the scanned image (*.pdf, *.jpg)
 - Whether to perform text recognition on a marked character string in the scanned image and add the character string as a keyword for the PDF file (Whether to perform text recognition only on the character strings in the first marked section or all marked sections to be added as keywords, and in which language to perform text recognition.)
 - Whether to perform text recognition on character strings in the scanned image to convert the file to a searchable PDF file (Whether to convert the first page only or all pages, and in which language to perform text recognition.)
 - Whether to create separate PDF files
 (Whether to include all scanned images in a single PDF file, or create PDF files, each of which including a preset number of pages)
 - Whether to password-protect the created PDF files
 (Whether to set the same password for all PDF files, or set a different password per scan.)
- [Paper] tab
 - Paper size of documents (paper size selection)
- [Compression] tab
 - File size of the scanned image (compression rate)



Scan settings vary depending on whether you use the Quick Menu or not. For details about items that can be set, refer to "Setting Items With/Without the Quick Menu" (page 376).

4. Click the [OK] or [Apply] button.

- ⇒ When you use the Quick Menu, scan settings for the [Customize] button are changed.
- ⇒ When you do not use the Quick Menu, scan settings for the currently selected profile are changed.



If you press the [Scan/Stop] button on the ScanSnap while the ScanSnap setup dialog box is displayed, the ScanSnap setup dialog box closes and scanning starts. Scan setting changes made up to this point are saved and documents are scanned by these settings. Note that when other dialog boxes are open, scanning does not start even if you press the [Scan/Stop] button on the ScanSnap unless open dialog boxes are closed.

■ Profile Management

You can manage up to 20 profiles.

You can select a profile in the [Profile] drop-down list in the ScanSnap setup dialog box or from the Left-Click Menu.

• [Profile] drop-down list



Left-Click Menu



Once the frequently used scan settings are saved as profiles, you do not have to open the ScanSnap setup dialog box to change scan settings every time you perform scanning. You can easily switch to an appropriate profile you want by just selecting it.

For details about how to add, change or delete profiles, refer to the following:

- To add new profiles (→ page 82)
- To change scan settings for profiles (→ page 85)
- To rename profiles (→ page 87)
- To delete profiles (→ page 89)

Adding Profiles

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.




Clear the [Use Quick Menu] check box if it is selected.

2. Configure the scan settings in each tab.

For details about each tab, refer to the ScanSnap Manager Help.




3. Select [Add Profile] from the [Profile] drop-down list.

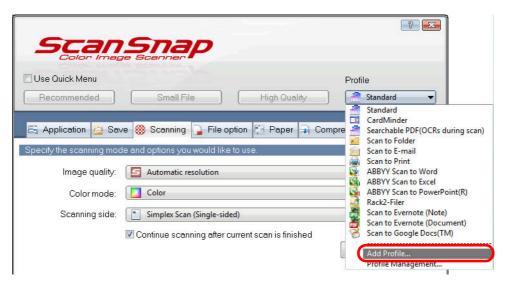

⇒ The [Add new profile] dialog box appears.

4. Type in a new profile name and click the [OK] button.

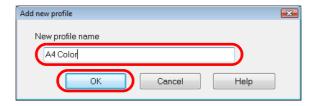

⇒ The added profile appears in the [Profile] drop-down list in the ScanSnap setup dialog box.



5. Click the [OK] button to close the ScanSnap setup dialog box.



- Up to 20 profiles can be saved including the [Standard] profile.
- You can change the display order of profiles except for the [Standard] profile.
 - 1. Select [Profile Management] from the Right-Click Menu or the [Profile] drop-down list in the ScanSnap setup dialog box.
 - ⇒ The [ScanSnap Manager Profile Management] dialog box appears.
 - 2. Select a profile from the list to arrange profiles in a different order.
 - 3. Click the [Up] or [Down] button to move the profile to its desired position in the list.



4. Click the [Close] button to close the [ScanSnap Manager - Profile Management] dialog box.

Changing Profile Settings

1. Select [Scan Button Settings] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.




Clear the [Use Quick Menu] check box if it is selected.

2. Select a profile from the [Profile] drop-down list.

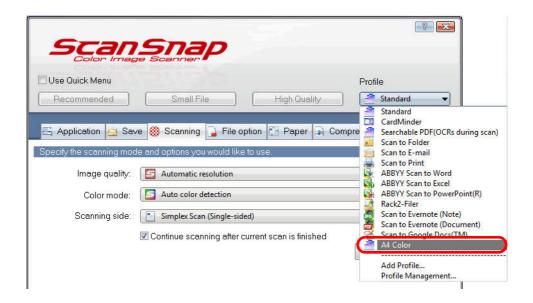

3. Change the scan settings in each tab.

For details about each tab, refer to the ScanSnap Manager Help.

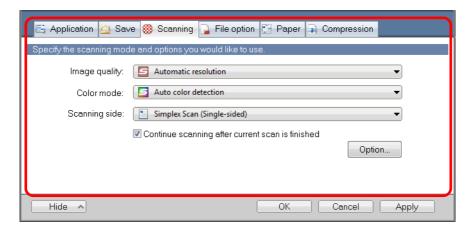


4. When you finish changing the settings for the selected profile, click the [OK] button.

⇒ A confirmation message appears asking if you want to overwrite the current profile settings.




If you select another profile from the [Profile] drop-down list before clicking the [OK] button, the following message appears.

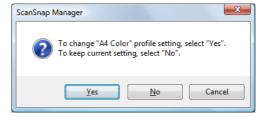

When you click the [Yes] button, the modified settings are overwritten and the profile switches to the one you selected from the [Profile] drop-down list.

When you click the [No] button, the modified settings are canceled and the profile switches to the one you selected from the [Profile] drop-down list.

5. To overwrite the profile, click the [Yes] button. To save the settings as "Standard", click the [No] button.

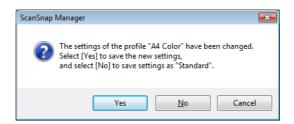



The confirmation message does not appear when the [Standard] profile is selected in step

Renaming Profiles

1. Select [Profile Management] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The [ScanSnap Manager-Profile Management] dialog box appears.



- If you cannot select [Profile Management] in the Right-Click Menu, clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.
- You can also display the [Profile Management] dialog box by selecting [Profile Management] from the [Profile] drop-down list in the ScanSnap setup dialog box.

2. Select a profile and click the [Rename] button.

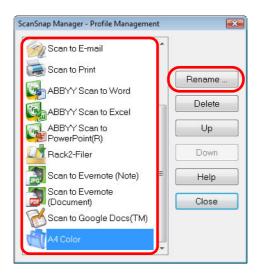

⇒ The [Rename] dialog box appears.




The [Standard] profile cannot be renamed.

3. Type in a new name, and click the [OK] button.



⇒ The profile is renamed.

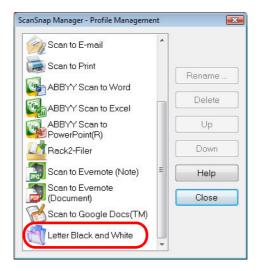

4. Click the [Close] button to close the [ScanSnap Manager - Profile Management] dialog box.

Deleting Profiles

1. Select [Profile Management] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The [ScanSnap Manager-Profile Management] dialog box appears.



- If you cannot select [Profile Management] in the Right-Click Menu, clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.
- You can also display the [Profile Management] dialog box by selecting [Profile Management] from the [Profile] drop-down list in the ScanSnap setup dialog box.

2. Select a profile and click the [Delete] button.

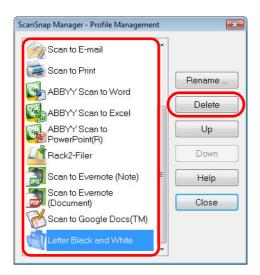




The [Standard] profile cannot be deleted.

⇒ The [Delete Profile] dialog box appears.

3. Click the [Yes] button.

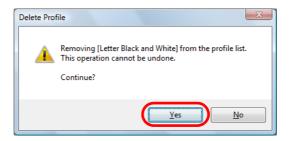

⇒ The selected profile is deleted.

4. Click the [Close] button to close the [ScanSnap Manager - Profile Management] dialog box.

Automatic Linkage with Applications


When one of the applications which can automatically link with ScanSnap Manager is running and you perform scanning, ScanSnap Manager will automatically link with the corresponding application regardless of the current scan settings or whether you are using the Quick Menu. Applications that can automatically link with ScanSnap Manager are as follows:

- ScanSnap Organizer
 Scanned image is displayed in ScanSnap Organizer.
- CardMinder
 Scanned image is displayed in CardMinder.
- Rack2-Filer trial version (bundled with the ScanSnap) and Rack2-Filer (V5.0 or later recommended/bundled model or sold separately)
 Scanned image is saved in a binder in Rack2-Filer.

There are two modes for automatic linkage.

•Link when one of the above applications is active (recommended)

When ScanSnap Organizer, CardMinder or Rack2-Filer becomes active (with the application's dialog box brought to front and selected on taskbar), performing a scan by pressing the [Scan/Stop] button automatically starts the linkage between ScanSnap Manager and the active application.

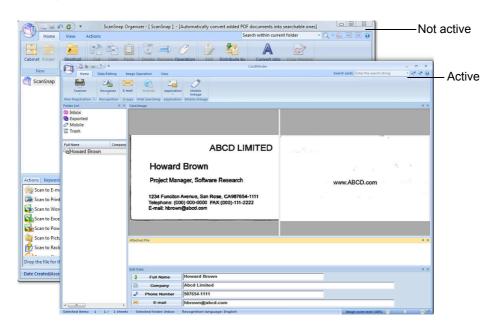

The example above shows ScanSnap Manager automatically linking with CardMinder when CardMinder dialog box is in front (active).

Always link when one of the above applications is running

When ScanSnap Organizer, CardMinder, or Rack2-Filer is started, the application specified for [Application] in the [Application] tab in the ScanSnap dialog box automatically switches to the running application. The application will automatically link with ScanSnap Manager even when the application window is minimized or not displayed in the front. The linkage between the application and ScanSnap Manager automatically ends once you exit the application.

When more than one application is running at the same time, priority will be given in the following order:

- CardMinder
- ScanSnap Organizer
- Rack2-Filer trial version (bundled with the ScanSnap) and Rack 2-Filer (V5.0 or later recommended/bundled model or sold separately)

When the Quick Menu is disabled, the name of the interacting application on the Left-Click Menu is followed by "is interacting".



When ScanSnap Organizer is automatically interacting with ScanSnap Manager


Changing Automatic Linkage Mode

Change automatic linkage mode options in the following procedure.

1. Select [Help] → [Preferences] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The [ScanSnap Manager Preferences] dialog box appears.
- $\bf 2.$ Select the automatic linkage mode in the [Automatic Linkage] tab.

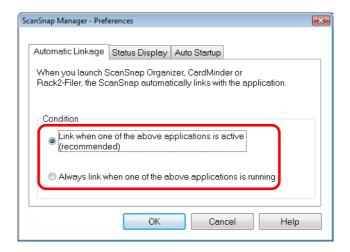


3. Click the [OK] button to close the [ScanSnap Manager - Preferences] dialog box.

⇒ Application will link with ScanSnap Manager using the linkage mode you selected.

■ ScanSnap's Communication Status

If you turn the ScanSnap ON/OFF when ScanSnap Manager is running, the pop-up balloon appearing from the taskbar icon notifies you of the communication status of the ScanSnap.

●When the ScanSnap is on

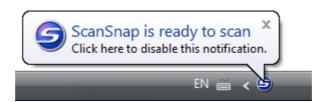

●When the ScanSnap is off





To disable notifications of the ScanSnap's communication status, click the pop-up balloon and clear the [Notify of the communication status] check box in the [ScanSnap Manager - Preferences] dialog box that appears.

Receiving or hiding the ScanSnap's communication status notifications


You can specify whether or not to receive notifications of the ScanSnap's communication status with a pop-up balloon.

Configure the setting in the following procedure.

1. Select [Help] → [Preferences] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The [ScanSnap Manager Preferences] dialog box appears.
- 2. In the [Status Display] tab, either select or clear the [Notify of the communication status] check box.

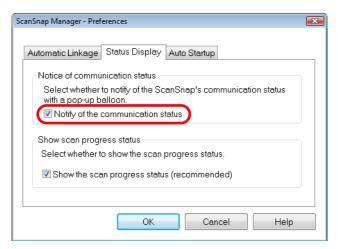

If you select the [Notify of the communication status] check box, you will be notified of the communication status in conjunction with the ScanSnap being turned ON/OFF. If you clear the [Notify of the communication status] check box, you will not be notified of the communication status.

3. Click the [OK] button to close the [ScanSnap Manager - Preferences] dialog box.

■ Showing the Scanning Progress


When scanning starts, the [ScanSnap Manager - Image scanning and file saving] dialog box appears.

The [ScanSnap Manager - Image scanning and file saving] dialog box consists of the following:


- Scan status
- Scan settings
- Save completed
- Preview

Also, note that you can stop scanning by clicking the [Stop] button in the [ScanSnap Manager - Image scanning and file saving] dialog box, or by pressing the [Scan/Stop] button on the ScanSnap.

For details about how to stop scanning, refer to "Stopping the Scan" (page 73).

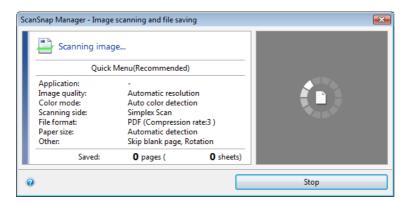

The following message appears in the [ScanSnap Manager - Image scanning and file saving] dialog box after the document has been scanned. Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

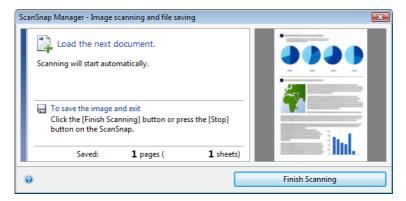

The [ScanSnap Manager - Image scanning and file saving] dialog box closes when you press the [Scan/Stop] button on the ScanSnap or when you click the [Finish Scanning] button.



When the [Continue scanning after current scan is finished] check box in the [Scanning] tab of the ScanSnap setup dialog box is cleared, the [ScanSnap Manager - Image scanning and file saving] dialog box automatically closes after saving the scanned image.


Hiding the Scanning Progress Status

You can hide the [ScanSnap Manager - Image scanning and file saving] dialog box in the following procedure.

1. Select [Help] → [Preferences] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The [ScanSnap Manager Preferences] dialog box appears.
- 2. In the [Status Display] tab, clear the [Show the scan progress status (recommended)] check box.

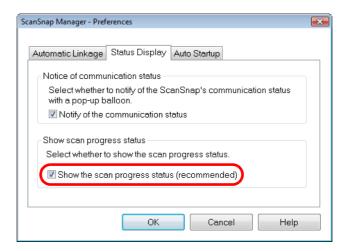

3. Click the [OK] button to close the [ScanSnap Manager - Preferences] dialog box.

⇒ The [ScanSnap Manager - Image scanning and file saving] dialog box is hidden from next scanning on.



When the scanning progress status dialog box is hidden, the ScanSnap Manager icon alternates between and .

Actions

The ScanSnap has functions useful in your office work available as Actions. Actions allow you to:

•Share the scanned document files with others.

Save the scanned image directly in a shared folder on a network after scanning, share the scanned image with others and inform them of the destination folder path by an email message automatically created with the path stated.

- Send document files to participants of a meeting via e-mail.
 Send an e-mail message to others with the scanned image file attached.
- Use a printer rather than a copy machine to make copies of documents.
 Print the scanned image with a printer.
- Convert catalogs and pamphlets into digital data and save them.
 Save scanned images of catalogs and pamphlets directly into your pictures folder.
- Quote text from your paper documents when you do not want to type it.
 Have the scanned image text recognized and converted into a Word, Excel, or
 PowerPoint document.
- File and organize a large number of business cards. Store and manage business cards in CardMinder.
- Share the scanned document files through linkage with SharePoint.
 Save the scanned image in SharePoint and Office Live.
- Convert your paper documents into digital data to conveniently organize them.

Save the scanned image directly in Rack2- Filer to manage and organize it.


- Manage scanned documents through linkage with Evernote.
 Save PDF files in Evernote and access them easily anytime, anywhere.
- Manage handwritten notes through linkage with Evernote.
 Save JPEG files in Evernote and access them easily anytime, anywhere.
- Manage scanned documents through linkage with Google Docs.
 Save PDF files in Google Docs and access them easily anytime, anywhere.

The following are explanations on how to use Actions.

Saving Data in a Specified Folder

This section explains how to save the scanned image file in a specified folder.

You can save the scanned image file in a shared folder on the network and share it with others. In addition, you can inform others of the destination folder path by an e-mail message automatically created with the path stated.

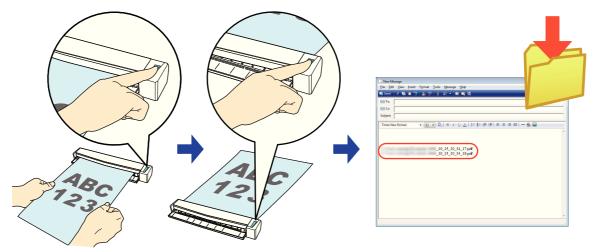



The default e-mail program is used as the e-mail program to link with.

The e-mail program may not properly link with ScanSnap Manager even if it is the default e-mail program. In this case, contact the manufacturer of the e-mail software.

Configure e-mail program settings in the following procedure.

Windows 7/Windows Vista

- 1. Select [Start] menu → [Default Programs] → [Set your default programs].
 - ⇒ The [Set your default programs] dialog box appears.
- 2. Select an e-mail program to link with ScanSnap Manager from [Programs].
- 3. Select [Set this program as default] and click the [OK] button.

Windows XP

The e-mail program selected in Internet Explorer [Tools] menu \rightarrow [Internet Options] \rightarrow the [Programs] tab \rightarrow [E-mail] drop-down list is used to link with ScanSnap Manager. If no e-mail program is selected, select an e-mail program to link with ScanSnap Manager in the [E-mail] drop-down list. E-mail programs that cannot be selected here cannot be set to link with ScanSnap Manager.

Tested e-mail programs

- Windows Live Mail
- Windows Mail (Windows Vista)
- Outlook 2010 / 2007 / 2003
- Outlook Express 6
- Thunderbird version 3.1

For details about the procedure to scan and save the scanned image in a specified folder using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 99)
- Without Using the Quick Menu (→ page 102)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load the document in the ScanSnap.


For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Click the [Scan to Folder] icon.

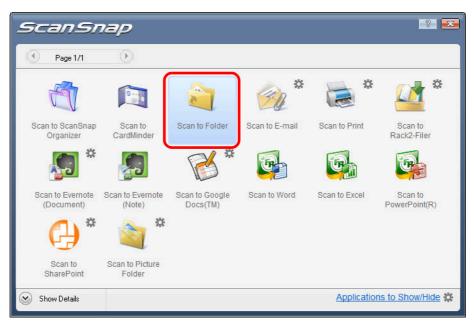


⇒ The [Scan to Folder] dialog box appears.

5. Check the scanned image in the preview area.


In the [Scan to Folder] dialog box, you can change files names, destination folders, and specify whether to state a path to a destination folder in an e-mail message to notify others.

For details about the [Scan to Folder] dialog box, refer to the ScanSnap Manager Help.

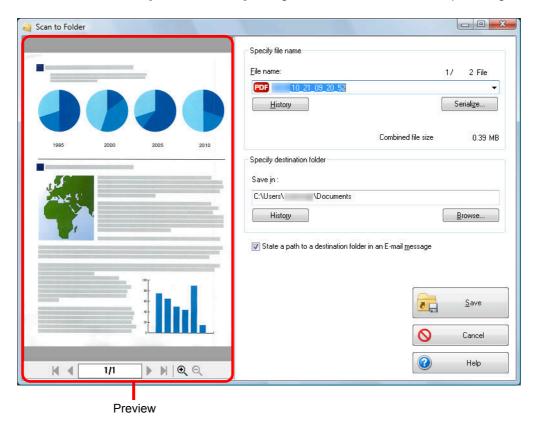

6. Click the [Save] button.

- ⇒ The scanned image file is saved in the specified folder.
- ⇒ When you select the [State a path to a destination folder in an E-mail message] check box in the [Scan to Folder] dialog box, a new message window appears listing the destination folder path where the file is saved.

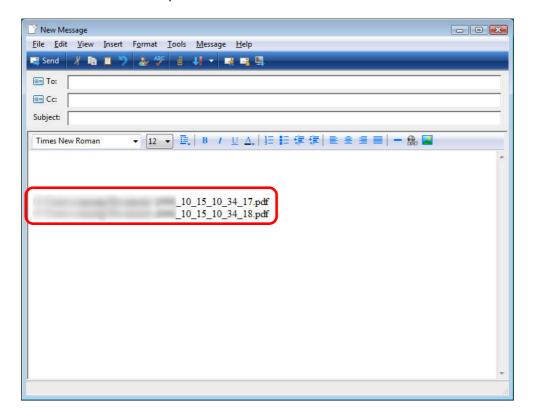



- You cannot start scanning after the Quick Menu is displayed and before the [Scan to Folder] dialog box is closed. Close the [Scan to Folder] dialog box before scanning the next document.
- Do not move, delete, or rename scanned image in other applications after the Quick Menu is displayed and before the [Scan to Folder] dialog box is closed.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. In the [Application] drop-down list in the [Application] tab, select [Scan to Folder].

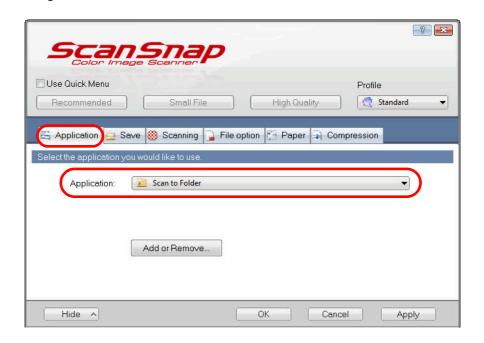



ScanSnap Manager can also link with [Scan to Folder] when you select:

- [Scan to Folder] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Scan to Folder] from the Left-Click Menu.
- 3. Click the [OK] button to close the ScanSnap setup dialog box.
- 4. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

5. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [Scan to Folder] dialog box appears.

7. Check the scanned image in the preview area.


In the [Scan to Folder] dialog box, you can change files names, destination folders, and specify whether to state a path to a destination folder in an e-mail message to notify others.

For details about the [Scan to Folder] dialog box, refer to the ScanSnap Manager Help.

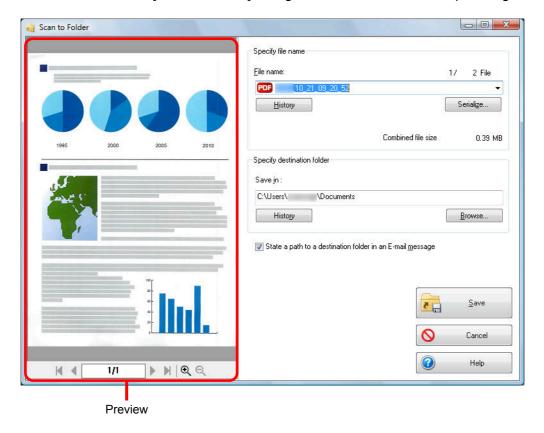

8. Click the [Save] button.

- ⇒ The scanned image file is saved in the specified folder.
- ⇒ When you select the [State a path to a destination folder in an E-mail message] check box in the [Scan to Folder] dialog box, a new message window appears listing the destination folder path where the file is saved.

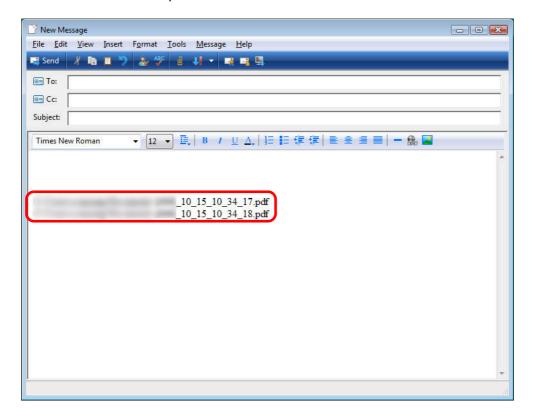




- You cannot start scanning when the [Scan to Folder] dialog box is displayed. Close the [Scan to Folder] dialog box before scanning the next document.
- Do not move, delete or rename the scanned image in other applications when the [Scan to Folder] dialog box is displayed.

Attaching Files to E-Mail

This section explains how to attach the scanned image file to an e-mail message.

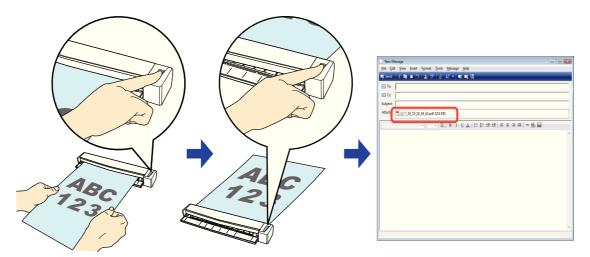



The default e-mail program is used as the e-mail program to link with.

The e-mail program may not properly link with ScanSnap Manager even if it is the default e-mail program. In this case, contact the manufacturer of the e-mail software.

Configure e-mail program settings in the following procedure.

Windows 7/Windows Vista

- 1. Select [Start] menu → [Default Programs] → [Set your default programs].
 - ⇒ The [Set your default programs] dialog box appears.
- 2. Select an e-mail program to link with ScanSnap Manager from [Programs].
- 3. Select [Set this program as default] and click the [OK] button.

Windows XP

The e-mail program selected in Internet Explorer [Tools] menu \rightarrow [Internet Options] \rightarrow the [Programs] tab \rightarrow [E-mail] drop-down list is used to link with ScanSnap Manager. If no e-mail program is selected, select an e-mail program to link with ScanSnap Manager in the [E-mail] drop-down list. E-mail programs that cannot be selected here cannot be set to link with ScanSnap Manager.

Tested e-mail programs

- Windows Live Mail
- Windows Mail (Windows Vista)
- Outlook 2010 / 2007 / 2003
- Outlook Express 6
- Thunderbird version 3.1

For details about the procedure to scan and attach the scanned image file to an e-mail message using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 106)
- Without Using the Quick Menu (→ page 112)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).



Up to ten files can be attached to an e-mail message.

When you scan more than one document with the scan settings shown below, multiple files are created. Pay attention to the number of documents to scan:

- File format: JPEG (*.jpg)
- [Generate one PDF file per (n) page(s)] check box is selected

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The Quick Menu appears.

- 4. Change settings for the [Scan to E-mail] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the ** mark on the [Scan to E-mail] icon, and then select the [Settings] menu.



- ⇒ The [Scan to E-mail Options] dialog box appears.
- Change the settings.
 For details about the [Scan to E-mail Options] dialog box, refer to the ScanSnap Manager Help.

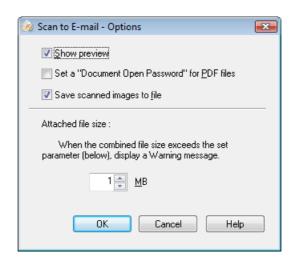

3. Click the [OK] button to close the [Scan to E-mail - Options] dialog box.

5. Click the [Scan to E-mail] icon.




⇒ The [Scan to E-mail] dialog box appears.

If you clear the [Show preview] check box of the [Scan to E-mail - Options] dialog box in step 4., the [Scan to E-mail] dialog box is not displayed. Instead, a new message window appears with the file(s) attached.

6. Check the scanned image in the preview area.


In the [Scan to E-mail] dialog box, you can rename the file, specify whether to set a "Document Open Password", and save the scanned image in the folder specified for [Image saving folder] after sending it by e-mail.

For details about the [Scan to E-mail] dialog box, refer to the ScanSnap Manager Help.

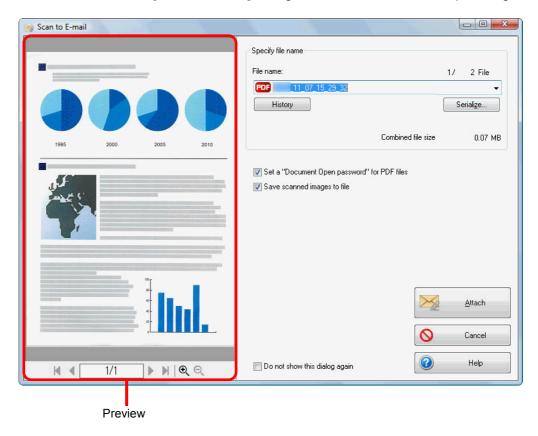


7. Click the [Attach] button.


⇒ When the [Set a "Document Open password" for PDF files] check box is selected in the [Scan to E-mail - Options] dialog box or the [Scan to E-mail] dialog box, the [Scan to E-mail - Set a password] dialog box appears.

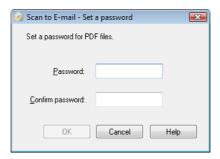

Enter a password, and then click the [OK] button.

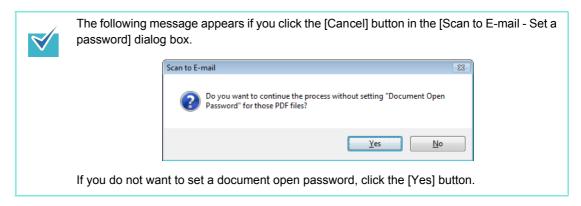

⇒ A new message dialog box appears with the file attached.

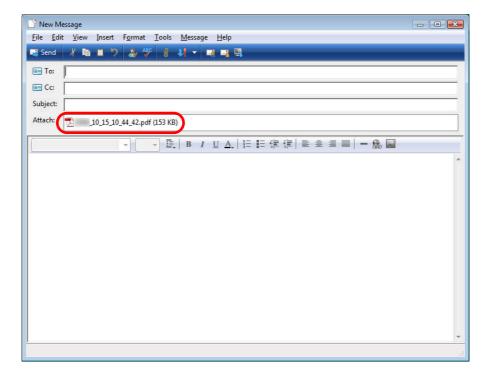



- You cannot start scanning after the Quick Menu is displayed and before the [Scan to E-mail] dialog box is closed. Close the [Scan to E-mail] dialog box before scanning the next document.
- Do not move, delete, or rename scanned image in other applications after the Quick Menu is displayed and before the [Scan to E-mail] dialog box is closed.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [Scan to E-mail].

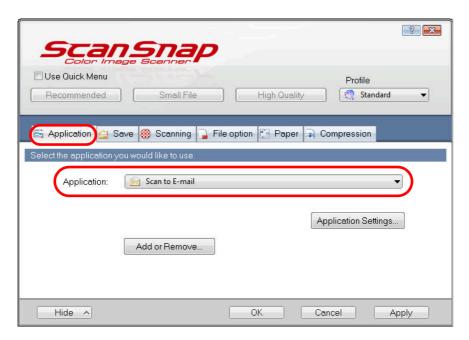




ScanSnap Manager can also link with [Scan to E-mail] when you select:


- [Scan to E-mail] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Scan to E-mail] from the Left-Click Menu.

3. Change settings for the [Scan to E-mail] (If you do not want to change any settings, go to step 4.).

1. Click the [Application Settings] button.

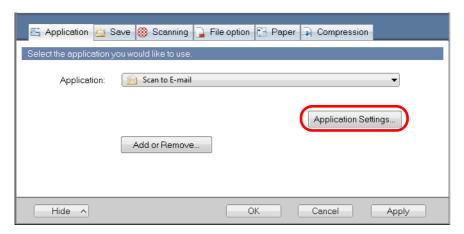

- ⇒ The [Scan to E-mail Options] dialog box appears.
- Change the settings.
 For details about the [Scan to E-mail Options] dialog box, refer to the ScanSnap Manager Help.

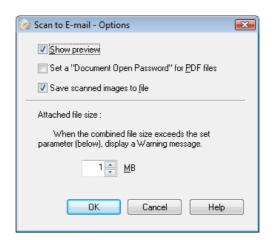

3. Click the [OK] button to close the [Scan to E-mail - Options] dialog box.

4. Click the [OK] button to close the ScanSnap setup dialog box.

5. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).



Up to ten files can be attached to an e-mail message.

When you scan more than one document with the scan settings shown below, multiple files are created. Pay attention to the number of documents to scan:

- File format: JPEG (*.jpg)
- [Generate one PDF file per (n) page(s)] check box is selected

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [Scan to E-mail] dialog box appears. If you clear the [Show preview] check box of the [Scan to E-mail - Options] dialog box in step 3., the [Scan to E-mail] dialog box is not displayed. Instead, a new message window appears with the file(s) attached.

$oldsymbol{8}_{oldsymbol{ ilde{ extbf{L}}}}$ Check the scanned image in the preview area.


In the [Scan to E-mail] dialog box, you can rename the file, specify whether to set a "Document Open Password", and save the scanned image in the folder specified for [Image saving folder] after sending it by e-mail.

For details about the [Scan to E-mail] dialog box, refer to the ScanSnap Manager Help.

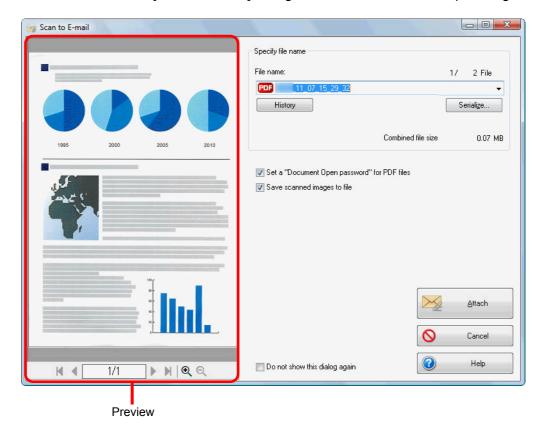


9. Click the [Attach] button.


⇒ When the [Set a "Document Open password" for PDF files] check box is selected in the [Scan to E-mail - Options] dialog box or the [Scan to E-mail] dialog box, the [Scan to E-mail - Set a password] dialog box appears.

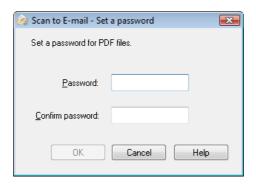

Enter a password, and then click the [OK] button.

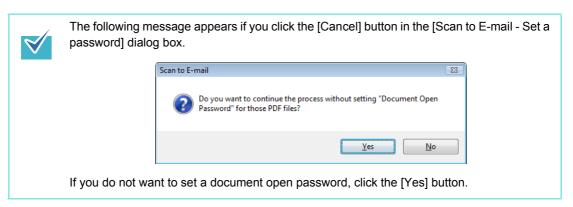

⇒ An e-mail message dialog box appears with the file attached.

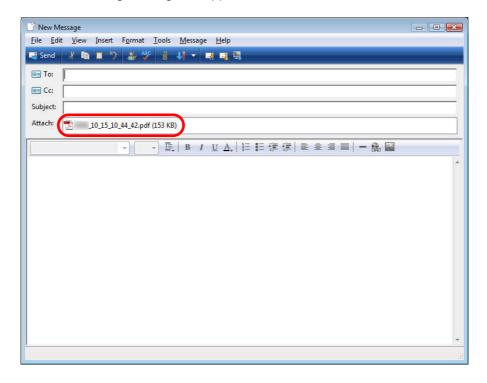




- You cannot start scanning when the [Scan to E-mail] dialog box is displayed. Close the [Scan to E-mail] dialog box before scanning the next document.
- Do not move, delete or rename the scanned image in other applications when the [Scan to E-mail] dialog box is displayed.

■ Using the ScanSnap as a Copy Machine

This section explains how to print the scanned image with a printer.

When a printer links with ScanSnap Manager, the ScanSnap can be used as a copy machine.

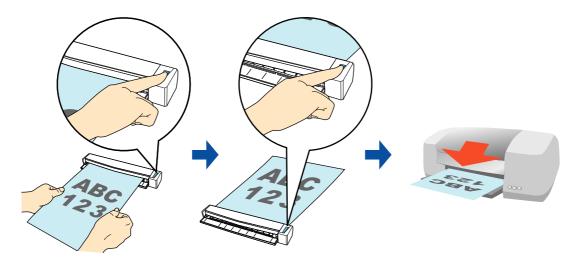



Note that shadows around the edges of the document may appear as lines on the generated scanned image, depending on the scanning method and paper conditions. If you print such an image, the printed image will also have lines appearing in it.

For details about the procedure to scan and print the scanned image using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 118)
- Without Using the Quick Menu (→ page 121)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to Print] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the amark on the [Scan to Print] icon, and then select the [Settings] menu.



⇒ The [Scan to Print - Options] dialog box appears.

Change the settings.For details about the [Scan to Print- Options] dialog box, refer to the ScanSnap Manager Help.

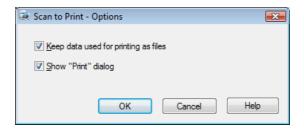

3. Click the [OK] button to close the [Scan to Print- Options] dialog box.

5. Click the [Scan to Print] icon.




⇒ The [Scan to Print] dialog box appears.
If the [Show "Print" dialog] check box is cleared in step 4., printing is immediately performed.

6. Check the scanned image in the preview area.

In the [Scan to Print] dialog box, you can specify the printer to be used, the number of copies and size of the scanned image to be printed, and whether to save the scanned image in the folder specified for [Image saving folder].

For details about the [Scan to Print] dialog box, refer to the ScanSnap Manager Help.

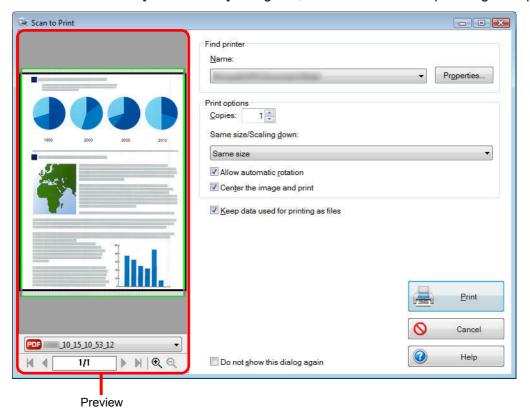

7. Click the [Print] button.

⇒ The scanned image is printed.



- You cannot start scanning after the Quick Menu is displayed and before the [Scan to Print] dialog box is closed. Close the [Scan to Print] dialog box before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications after the Quick Menu is displayed and before the [Scan to Print] dialog box is closed.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. In the [Application] drop-down list in the [Application] tab, select [Scan to Print].

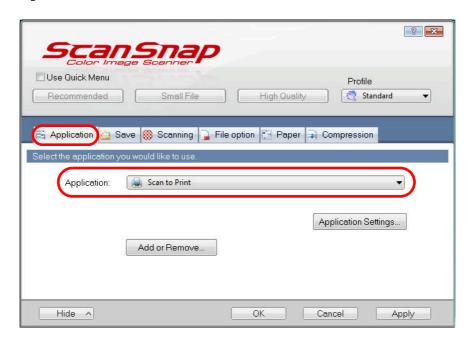




ScanSnap Manager can also link with [Scan to Print] when you select:


- [Scan to Print] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Scan to Print] from the Left-Click Menu

3. Change settings for the [Scan to Print] (If you do not want to change any settings, go to step 4.).

1. Click the [Application Settings] button.

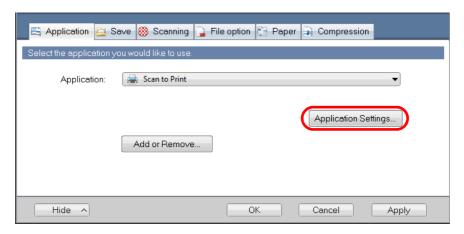

- ⇒ The [Scan to Print Options] dialog box appears.
- Change the settings.
 For details about the [Scan to Print Options] dialog box, refer to the ScanSnap Manager Help.

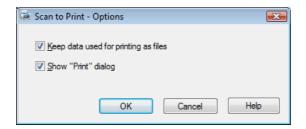

- 3. Click the [OK] button to close the [Scan to Print Options] dialog box.
- **4.** Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [Scan to Print] dialog box appears.
If the [Show "Print" dialog] check box is cleared in step 3., printing is immediately performed.

8. Check the scanned image in the preview area.

In the [Scan to Print] dialog box, you can specify the printer to be used, the number of copies and size of the scanned image to be printed, and whether to save the scanned image in the folder specified for [Image saving folder].

For details about the [Scan to Print] dialog box, refer to the ScanSnap Manager Help.

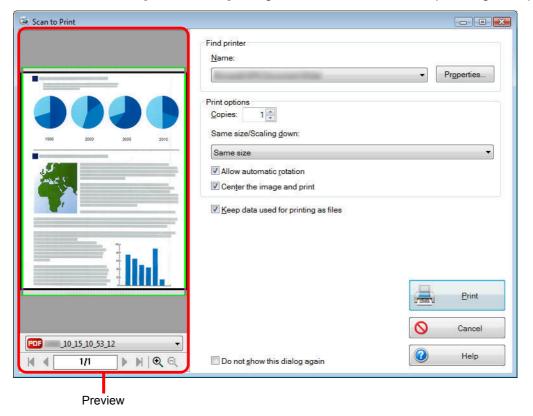

9. Click the [Print] button.


⇒ The scanned image is printed.



- You cannot start scanning when the [Scan to Print] dialog box is displayed. Close the [Scan to Print] dialog box before scanning the next document.
- Do not move, delete or rename the scanned image in other applications when the [Scan to Print] dialog box is displayed.

Saving Files to Picture Folder

This section explains how to save the scanned image as a JPEG file in the "Pictures folder".

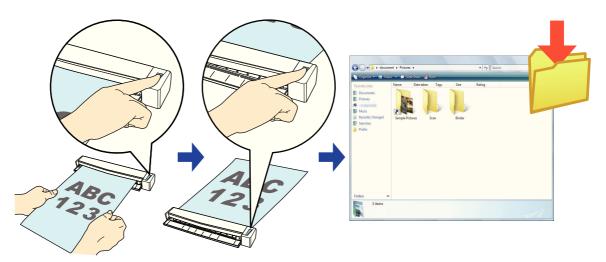



The following folder is set as the "Pictures folder" by default:

- Windows 7/Windows Vista
 Drive name (such as C):\Users\(user name)\Pictures\ScanSnap\)
- Windows XP
 Drive name (such as C):\Documents and Settings\(user name)\My Documents\
 My Pictures\ScanSnap

For details about the procedure to scan and save the scanned image in the "Pictures folder" using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 125)
- Without Using the Quick Menu (→ page 128)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to Picture Folder] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the ** mark on the [Scan to Picture Folder] icon, and then select the [Settings] menu.



⇒ The [Scan to Picture Folder - Options] dialog box appears.

 Change the settings.
 For details about the [Scan to Picture Folder - Options] dialog box, refer to the ScanSnap Manager Help.

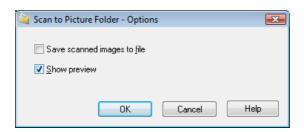

3. Click the [OK] button to close the [Scan to Picture Folder - Options] dialog box.

5. Click the [Scan to Picture Folder] icon.




⇒ The [Scan to Picture Folder] dialog box appears.

If you clear the [Show preview] check box in step 4., the image data is directly saved in the pictures folder.

6. Check the scanned image in the preview area.

In the [Scan to Picture Folder] dialog box, you can rename the file, change the destination folder, and save the scanned image in the folder specified for [Image saving folder].

For details about the [Scan to Picture Folder] dialog box, refer to the ScanSnap Manager Help.

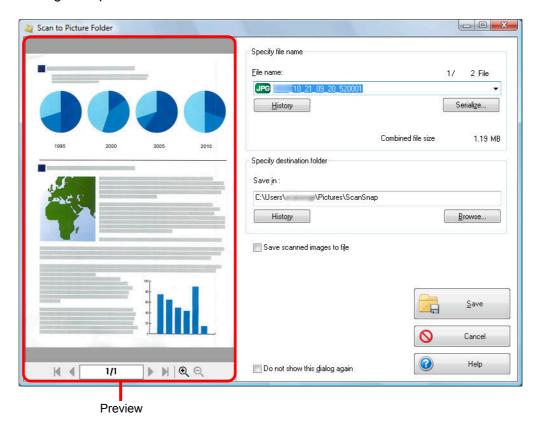



In [Specify destination folder], you can change the destination folder for the image data to a folder other than the pictures folder.

7. Click the [Save] button.

⇒ The scanned image is saved in the pictures folder.



- You cannot start scanning after the Quick Menu is displayed and before the [Scan to Picture Folder] dialog box is closed. Close the [Scan to Picture Folder] dialog box before scanning the next document.
- Do not move, delete, or rename scanned image in other applications after the Quick Menu is displayed and before the [Scan to Picture Folder] dialog box is closed.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For more details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [Scan to Picture Folder].

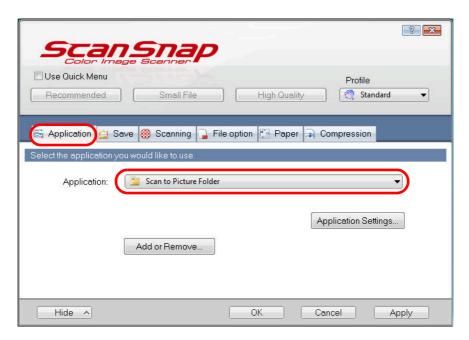




When you add the customized settings as profiles, the application to link with ScanSnap Manager can be selected from the [Profile] drop-down list or Left-Click Menu next time you perform a scan.

For details about how to add a profile, refer to "Profile Management" (page 81).

3. Change settings for the [Scan to Picture Folder] (If you do not want to change any settings, go to step 4.).

1. Click the [Application Settings] button.

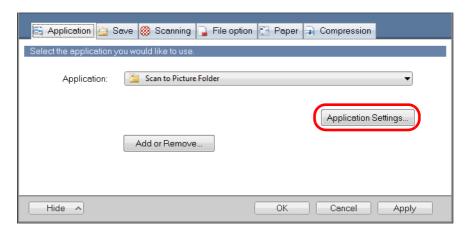

- ⇒ The [Scan to Picture Folder Options] dialog box appears.
- Change the settings.
 For details about the [Scan to Picture Folder Options] dialog box, refer to the ScanSnap Manager Help.



- 3. Click the [OK] button to close the [Scan to Picture Folder Options] dialog box.
- **4.** Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.


⇒ The [Scan to Picture Folder] dialog box appears.

If you clear the [Show preview] check box in step 3., the scanned image is directly saved in the pictures folder.

8. Check the scanned image in the preview area.

In the [Scan to Picture Folder] dialog box, you can rename the file, change the destination folder, and save the scanned images in the folder specified for [Image saving folder].

For details about the [Scan to Picture Folder] dialog box, refer to the ScanSnap Manager Help.

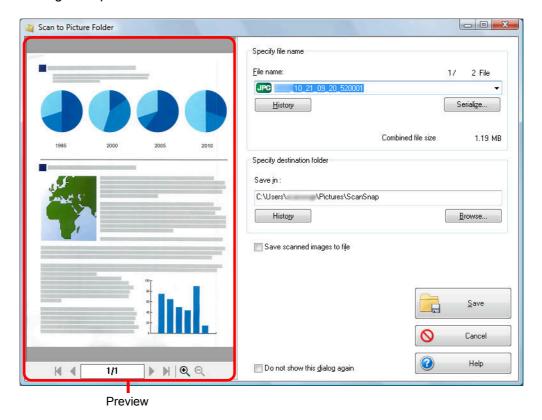



In [Specify destination folder], you can change the destination folder for the scanned image to a folder other than the pictures folder.

9. Click the [Save] button.


⇒ The scanned image is saved in the pictures folder.



- You cannot start scanning when the [Scan to Picture Folder] dialog box is displayed.
 Close the [Scan to Picture Folder] dialog box before scanning the next document.
- Do not move, delete or rename the scanned image in other applications when the [Scan to Picture Folder] dialog box is displayed.

■ Converting into Word/Excel/PowerPoint Documents

This section explains how to convert the scanned image into Word/Excel/PowerPoint files using ABBYY FineReader for ScanSnap bundled with the ScanSnap.

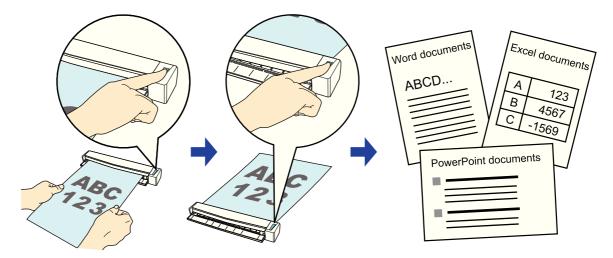



- The following applications must be installed in your computer in order to perform text-recognition:
 - ABBYY FineReader for ScanSnap (bundled with the ScanSnap)
 - Word
 - Excel
 - PowerPoint
 - Visual Basic for Applications of Office Shared Features (installed at the same time when you perform a standard installation of Microsoft Office)
- You cannot view the documents converted into Word, Excel and PowerPoint files unless
 these applications are installed and you completed the user registration to use them. Install
 these applications and complete the user registration to view the converted documents on
 your computer.
- ABBYY FineReader for ScanSnap can be used with the following versions of Word, Excel and PowerPoint:
 - Word: 2010/2007/2003/2002
 - Excel: 2010/2007/2003/2002
 - PowerPoint: 2010/2007/2003/2002
- Do not use this function while you are working in Word, Excel or PowerPoint. In addition, do
 not use Word, Excel or PowerPoint while this function is being executed. Otherwise, a message such as "Call is rejected by callee" may appear and the conversion result may not be
 displayed.




About the OCR function of ABBYY FineReader for ScanSnap

- ABBYY FineReader for ScanSnap is an application used exclusively with the ScanSnap. This
 application can perform text recognition only for PDF files created by using the ScanSnap. It
 cannot perform text recognition for PDF files created using Adobe Acrobat or other applications.
- The optical character recognition program has the following features. Before performing text recognition, check whether the documents you want to convert are suitable for conversion according to the following guidelines:

Application	Suitable for conversion	Not suitable for conversion
Scan to Word	Documents with simple layouts consisting of single or double columns	Documents with complex layouts containing a mixture of diagrams, tables and text (e.g. brochures, magazines and newspapers)
	Word Dooment	
Scan to Excel	Documents containing simple tables with no cells merged	Documents containing; - tables witrh no solid border lines - tables with complicated cell formats - complex tables containing sub-tables - diagrams, graphs, photos and/or vertical text (Note that documents containing diagrams, graphs or vertical text will not be reproduced.)
	Excel Document	
Scan to PowerPoint(R)	Documents containing text and simple diagrams/tables on a white or light monocolor background	Documents with complex layouts containing text mixed with diagrams or illustrations Documents containing photographs or patterns set as the background Documents with light colored text on a deep colored background
	PowerPoint Document	



- The following parameters may not be reproduced as they are in the original document. It is recommended that you check the conversion result in Word, Excel or PowerPoint and edit the data if necessary:
 - Character font and size
 - Character and line spacing
 - Underlined, bold and italic characters
 - Superscript/subscript
- The following types of documents (characters) may not be recognized correctly.
 Better results in text recognition may be achieved by changing the color mode or increasing the resolution:
 - Documents including handwritten characters
 - Documents containing small characters (smaller than 10 points)
 - Skewed documents
 - Documents written in languages other than the specified language
 - Documents with characters on an unevenly colored background e.g. Shaded characters
 - Documents with many decorated characters e.g. Decorated characters (embossed/outlined)
 - Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
 - Documents with many characters contacting underlines or borders
 - Documents with a complex layout and documents with image noise (It may take extra time to process text recognition for these documents.)
- The following message appears when you convert a long page document into a Word file, and the conversion result may be divided into more than one page.

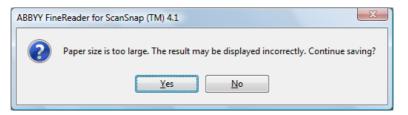


- When converting to Excel files, if the recognition result exceeds 65,536 lines, no more results are saved.
- When converting to Excel files, information about the layout of the entire document, diagrams, and length/width of graphs and tables is not duplicated. Only tables and character strings are reproduced.
- A converted PowerPoint document will not have the original background color and patterns.
- Documents placed upside down or in landscape orientation cannot be recognized properly.
 Select the [Allow automatic image rotation] check box (page 195), or load documents face down in portrait orientation.
- In the ScanSnap setup dialog box, even if the [Generate one PDF file per (n) page (s)] check box is selected in the [File option] tab → [Option], the conversion result is saved as one file.



You can change the settings applied during conversion to Word, Excel or PowerPoint documents in the ABBYY FineReader for ScanSnap setup dialog box.

Select [Start] menu \rightarrow [All Programs] \rightarrow [ABBYY FineReader for ScanSnap (TM) 4.1] \rightarrow [ABBYY FineReader for ScanSnap (TM) 4.1] to display the following dialog box.

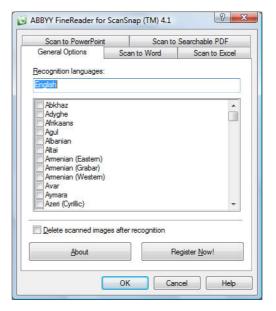

For details about how to configure settings, refer to ABBYY FineReader for ScanSnap User's Guide.

For details about the procedure to scan and convert the scanned image into Word/Excel/ PowerPoint files using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 135)
- Without Using the Quick Menu (→ page 137)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).


1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




- It is recommended that you select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup dialog box.
- Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.
- $\bf 3_{\hspace{-0.1em}\blacksquare}$ Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- **4.** Click the [Scan to Word], [Scan to Excel] or [Scan to PowerPoint(R)] icon.

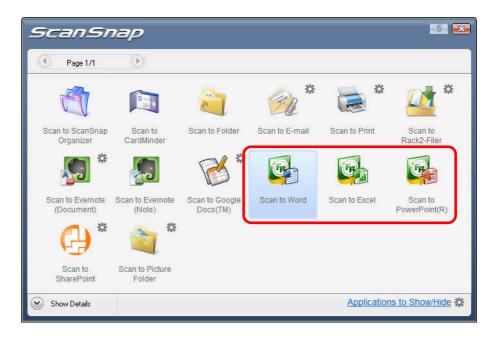



- When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, scanned data cannot be converted into a Word, Excel or PowerPoint file.
- You cannot start scanning when the Quick Menu is displayed. Wait until the conversion is over to scan another document.
- Do not move, delete or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ The following dialog box appears, and image data conversion to Word, Excel or PowerPoint files starts.

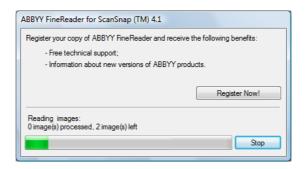

⇒ When the conversion is completed, Word, Excel or PowerPoint starts up and the conversion result is displayed.



In a computer environment where Word, Excel or PowerPoint is not installed, the scanned image is saved in one of the following formats when the conversion is completed:

- Scan to Word: RTF format (.rtf)
- Scan to Excel: XLS format (.xls)
- Scan to PowerPoint: PPT format (.ppt)

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [ABBYY Scan to Word], [ABBYY Scan to Excel], or [ABBYY Scan to PowerPoint(R)].

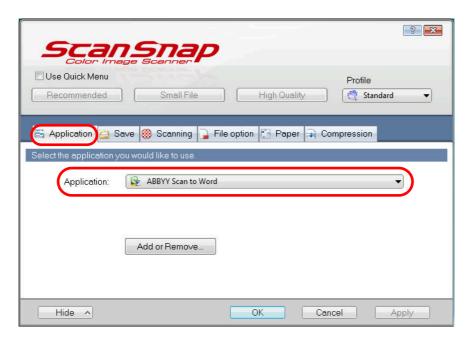



- It is recommended to select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup dialog box.
- ScanSnap Manager can also link with [ABBYY Scan to Word], [ABBYY Scan to Excel] or [ABBYY Scan to PowerPoint(R) when you select:
 - [ABBYY Scan to Word], [ABBYY Scan to Excel] or [ABBYY Scan to PowerPoint(R)] from the [Profile] drop-down list of the ScanSnap setup dialog box
 - [ABBYY Scan to Word], [ABBYY Scan to Excel] or [ABBYY Scan to PowerPoint(R)] from the Left-Click Menu
- 3. Click the [OK] button to close the ScanSnap setup dialog box.

4. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).


5. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The following dialog box appears, and image data conversion to Word, Excel or PowerPoint files starts.

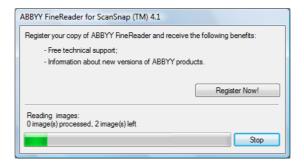

⇒ When the conversion is completed, Word, Excel or PowerPoint starts up and the conversion result is displayed.




In a computer environment where Word, Excel or PowerPoint is not installed, the image data is saved in one of the following formats when the conversion is completed:

- Scan to Word: RTF format (.rtf)
- Scan to Excel: XLS format (.xls)
- Scan to PowerPoint: PPT format (.ppt)

■ Storing Business Cards in CardMinder

This section explains how to store business card images and the related information in CardMinder.

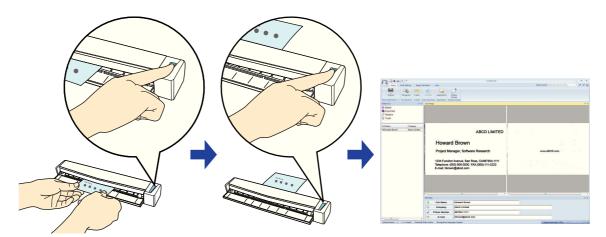



- Blank pages are not removed even if the [Allow automatic blank page removal] is selected when you store scanned images of business cards in CardMinder.
- Data of up to 1,000 pages, including blank pages, can be stored in CardMinder at once.

For details about the procedure to scan and manage business cards in CardMinder using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 140)
- Without Using the Quick Menu (→ page 143)


Using the Quick Menu




To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Insert the business card straight into the feeding section of the ScanSnap, with the scanning side facing up.

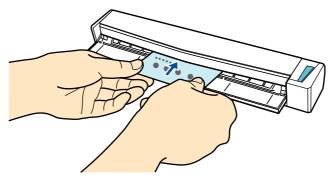

⇒ Business card is pulled in until it is set inside the ScanSnap.

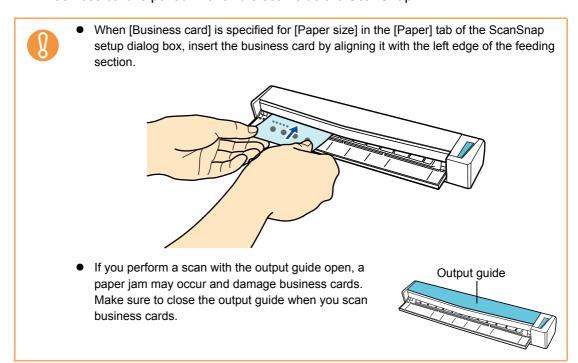

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



It is recommended that you select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup dialog box. ScanSnap Manager cannot link with CardMinder when [Image quality] is set to [Excellent].



Load another business card in the ScanSnap when you want to scan multiple business cards. Scanning starts automatically when a business card is loaded.

3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The Quick Menu appears.


4. Click the [Scan to CardMinder] icon.





- You cannot start scanning when the Quick Menu is displayed. Wait until ScanSnap Manager links with CardMinder before scanning another document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ CardMinder starts up.

5. Check the scanned card image and the text recognition result.

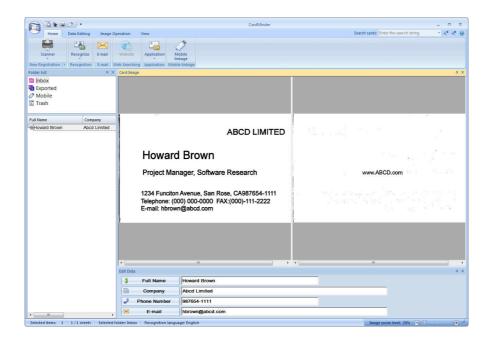



For details about the functions of CardMinder and how to use it, refer to CardMinder User's Guide and CardMinder Help.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. In the [Application] drop-down list in the [Application] tab, select [CardMinder].

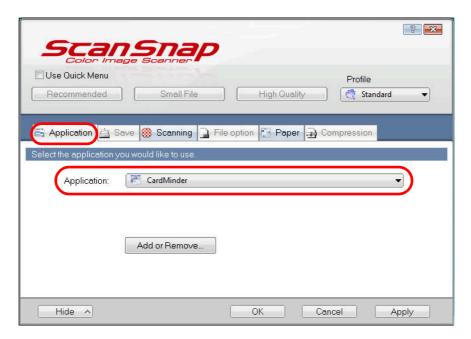



It is recommended that you select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup dialog box. ScanSnap Manager cannot link with CardMinder when [Image quality] is set to [Excellent].




ScanSnap Manager can also link with [CardMinder] when you select:


- [CardMinder] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [CardMinder] from the Left-Click Menu

3. Click the [OK] button to close the ScanSnap setup dialog box.

4. Insert the business card straight into the feeding section of the ScanSnap, with the scanning side facing up.

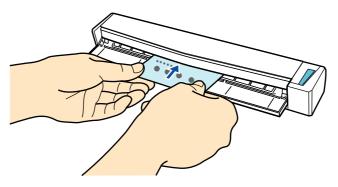

⇒ Business card is pulled in until it is set inside the ScanSnap.

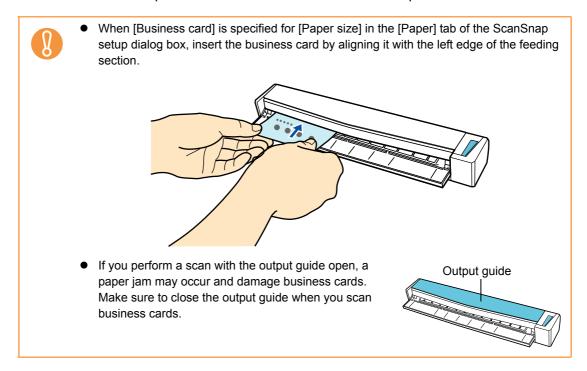

5. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another business card in the ScanSnap when you want to scan multiple business cards. Scanning starts automatically when a business card is loaded.

6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ CardMinder starts up.

7. Check the scanned card image and the text recognition result.

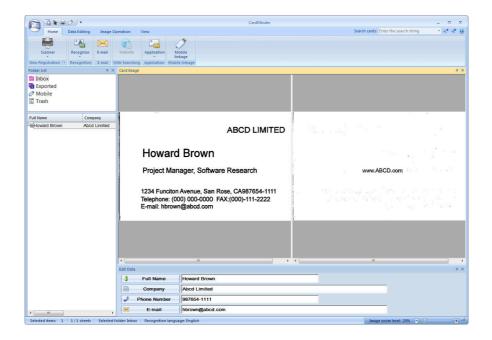




For details about the functions of CardMinder and how to use it, refer to CardMinder User's Guide and CardMinder Help.

Saving Data in SharePoint

This section explains how to save the scanned image in SharePoint or Office Live.

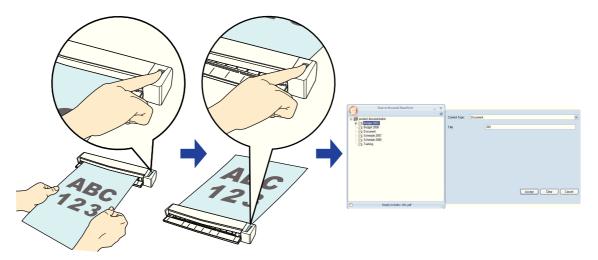



- To save a large file to SharePoint or Office Live, you may need to have the system administrator change the SharePoint or Office Live setting.
- When you start up Scan to Microsoft SharePoint for the first time, you need to register a SharePoint site. Once you register the SharePoint site, ScanSnap Manager automatically connects to that site from the next startup.

For more details, refer to the Scan to Microsoft SharePoint User Guide.

For details about the procedure to scan and save the scanned image in SharePoint/Office Live using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 147)
- Without Using the Quick Menu (→ page 151)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to SharePoint] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the ** mark on the [Scan to SharePoint] icon, and then select the [Settings] menu.



⇒ The [Scan to SharePoint - Options] dialog box appears.

 Change the setting.
 For details about the [Scan to SharePoint - Options] dialog box, refer to the ScanSnap Manager Help.



3. Click the [OK] button to close the [Scan to SharePoint - Options] dialog box.

5. Click the [Scan to SharePoint] icon.






- You cannot start scanning when the Quick Menu is displayed. Wait until ScanSnap Manager links with Microsoft SharePoint before scanning another document.
- Do not move, delete or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ Scan to Microsoft SharePoint starts up.

6. Save the image data.

Saving to SharePoint


- 1. Select a folder in which you want to save the scanned image.
- 2. In the Scan to Microsoft SharePoint Index Pane, enter information, such as the title, and click the [Accept] button.

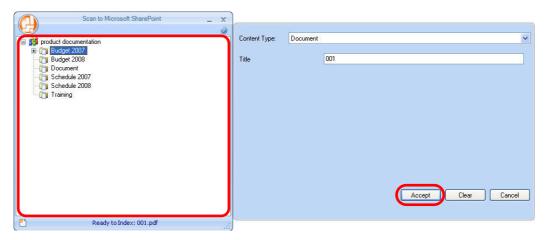

⇒ The scanned image is saved in the specified folder.


Saving to Office Live

1. Select [Connect to Office Live] from the menu.

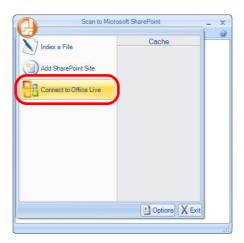


⇒ The Office Live logon dialog box appears.

2. Enter the ID and the password in the Office Live logon dialog box, and then click the [Sign In] button.

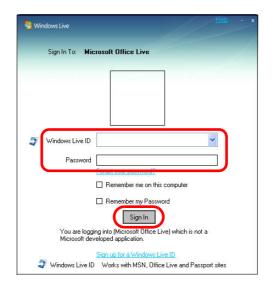

- ⇒ The [Scan to Microsoft SharePoint] dialog box appears after the ScanSnap is connected to Office Live.
- 3. Select a folder in which you want to save the scanned image.
- 4. In the Scan to Microsoft SharePoint Index Pane, enter information, such as the title, and click the [Accept] button.

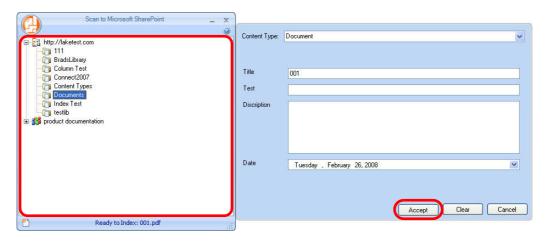

⇒ The scanned image is saved in the specified folder.



For details, refer to the Scan to Microsoft SharePoint User Guide.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [Scan to SharePoint].

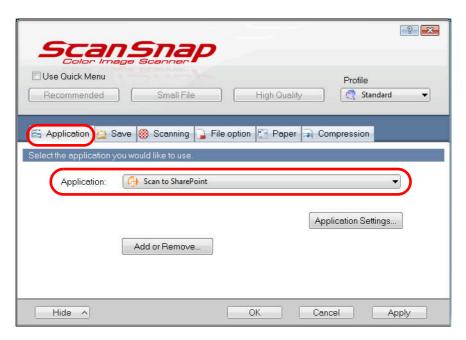




When you add the customized settings as profiles, the application to link with ScanSnap Manager can be selected in the [Profile] drop-down list or Left-Click Menu next time you perform a scan.

For details about how to add a profile, refer to "Profile Management" (page 81).

3. Change settings for the [Scan to SharePoint] (If you do not want to change any settings, go to step 4.).

1. Click the [Application Settings] button.

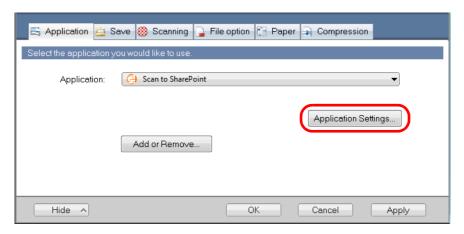

- ⇒ The [Scan to SharePoint Options] dialog box appears.
- Change the settings.
 For details about the [Scan to SharePoint Options] dialog box, refer to the ScanSnap Manager Help.



- 3. Click the [OK] button to close the [Scan to SharePoint Options] dialog box.
- 4. Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Scan to Microsoft SharePoint starts up.

8. Save the scanned image.

Saving to SharePoint


- 1. Select a folder in which you want to save the scanned image.
- 2. In the Scan to Microsoft SharePoint Index Pane, enter information, such as the title, and click the [Accept] button.

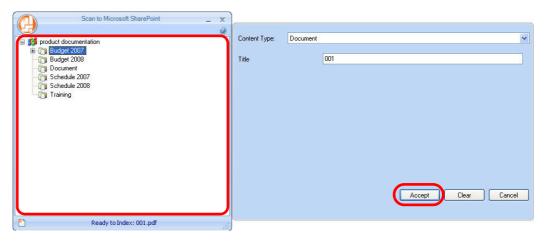

⇒ The scanned image is saved in the specified folder.


Saving to Office Live

1. Select [Connect to Office Live] from the menu.

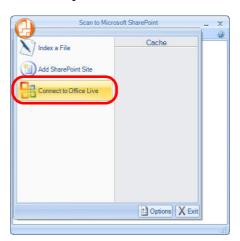


⇒ The Office Live logon dialog box appears.

2. Enter the ID and the password in the Office Live logon dialog box, and then click the [Sign In] button.

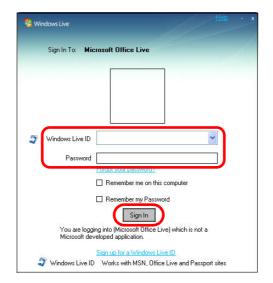

- ⇒ The [Scan to Microsoft SharePoint] dialog box appears after the ScanSnap is connected to Office Live.
- 3. Select a folder in which you want to save the scanned image.
- 4. In the Scan to Microsoft SharePoint Index Pane, enter information, such as the title, and click the [Accept] button.

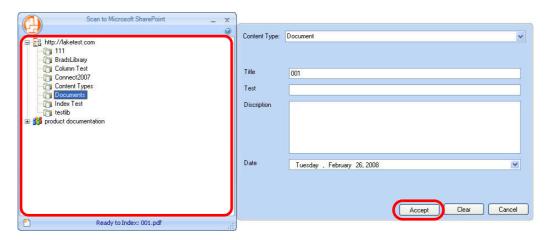


⇒ The scanned image is saved in the specified folder.



For more details, refer to the Scan to Microsoft SharePoint User Guide.

■ Saving to Rack2-Filer

This section explains how to save the scanned image as a PDF file in Rack2-Filer trial version (bundled with the ScanSnap) or Rack2-Filer (V5.0 or later recommended/bundled model or sold separately).

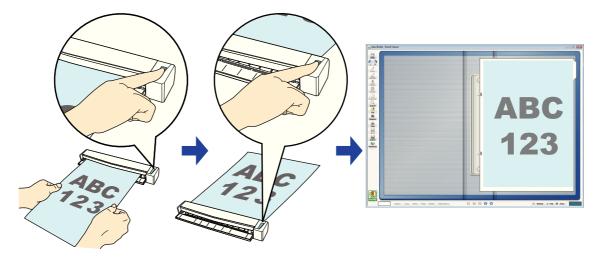



- Rack2-Filer trial version (bundled with the ScanSnap) or Rack2-Filer (V5.0 or later recommended/bundled model or sold separately) is required to use this function.
 Rack2-Filer is an application that converts paper documents and electronic documents into PDF files and manages them in a computer. You can manage the documents as if you bind them, store them on a cabinet shelf, and browse them as if you flip through a book.
- The following settings in ScanSnap Manager are disabled when the scanned image is saved to Rack2-Filer:
 - Rename file after scanning
 - Color high compression

For details about the procedure to scan and save the scanned image in Rack2-Filer using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 156)
- Without Using the Quick Menu (→ page 159)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63)

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to Rack2-Filer] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the 🗱 mark on the [Scan to Rack2-Filer] icon, and then select the [Settings] menu.



⇒ The [ScanSnap - > Rack2] dialog box appears.

Change the settings.
 In this dialog box, specify the destination to save the scanned image.
 For details about the [ScanSnap - > Rack2] dialog box, refer to Rack2-Filer Help.
 Click the [Help] button in the [ScanSnap - > Rack2] dialog box to display Rack2-Filer Help.

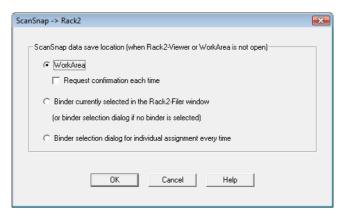

3. Click the [OK] button to close the [ScanSnap - > Rack2] dialog box.

5. Click the [Scan to Rack2-Filer] icon.





- When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, you cannot save the image in Rack2-Filer.
- You cannot start scanning when the Quick Menu is displayed. Save the scanned image to Rack2-Filer before scanning another document.
- Do not move, delete or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ Rack2-Filer starts up, and the PDF file created by the ScanSnap is saved in Rack2-Filer in accordance with the settings specified in step 4.



For details about how to use Rack2-Filer, refer to the Rack2-Filer User's Guide.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. In the [Application] drop-down list in the [Application] tab, select [Rack2-Filer].

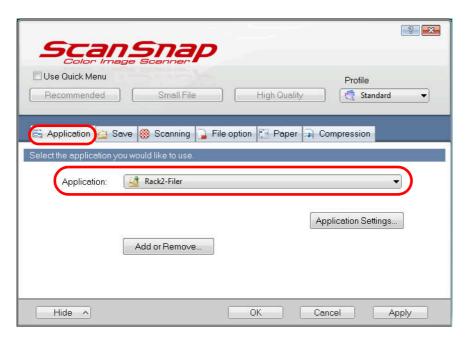





ScanSnap Manager can also link with [Rack2-Filer] when you select:

- [Rack2-Filer] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Rack2-Filer] from the Left-Click Menu

- 3. Change settings for the [Scan to Rack2-Filer] (If you do not want to change any settings, go to step 4.).
 - 1. Click the [Application Setting] button.

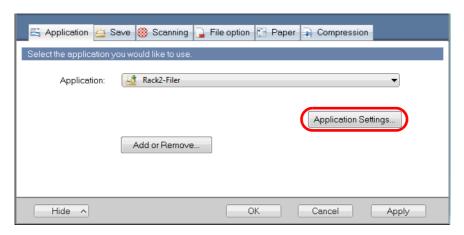

- ⇒ The [ScanSnap > Rack2] dialog box appears.
- Change the settings.
 In this dialog box, specify the destination to save the scanned image.
 For details about the [ScanSnap -> Rack2] dialog box, refer to Rack2-Filer Help.Click the [Help] button in the [ScanSnap -> Rack2] dialog box to display Rack2-Filer Help.

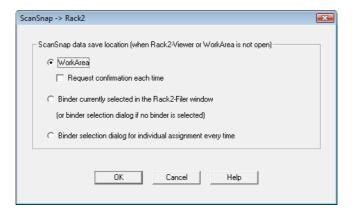

- 3. Click the [OK] button to close the [ScanSnap -> Rack2] dialog box.
- 4. Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.


⇒ Rack2-Filer starts up, and the PDF file created by the ScanSnap is saved in Rack2-Filer in accordance with the settings specified in step 3.



For details about how to use Rack2-Filer, refer to the Rack2-Filer User's Guide.

Saving Documents to Evernote

This section explains how to save the scanned image as a PDF file to Evernote. When you save a scanned image to Evernote after converting it into a searchable PDF, the PDF file becomes searchable in Evernote.

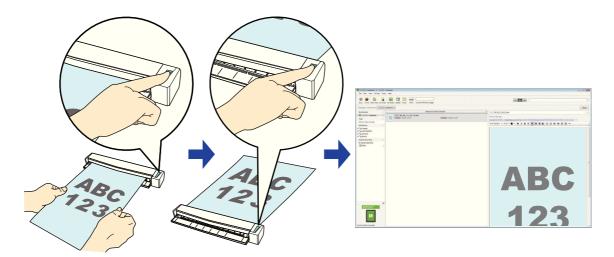



You first need to sign in to Evernote for Windows to save a file to Evernote.

For details about the procedure to scan and save the scanned image to Evernote using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 163)
- Without Using the Quick Menu (→ page 167)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- **3.** Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.

- 4. Change settings for the [Scan to Evernote (Document)] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the * mark on the [Scan to Evernote (Document)] icon, and then select the [Settings] menu.



- ⇒ The [Scan to Evernote Options] dialog box appears.
- Change the settings.
 For details about the [Scan to Evernote- Options] dialog box, refer to the ScanSnap Manager Help.

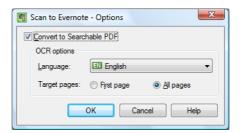

3. Click the [OK] button to close the [Scan to Evernote - Options] dialog box.


5. Click the [Scan to Evernote (Document)] icon.






- You cannot start scanning when the Quick Menu is displayed. Save the PDF file to Evernote before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, a PDF file is created from the JPEG file. A separate PDF file is created for each JPEG file.

The following dialog box is displayed when the PDF file is being created.

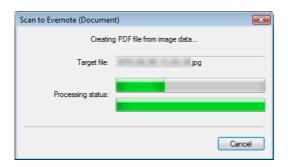

⇒ If the [Convert to Searchable PDF] check box is selected in step 4., text recognition is performed according to the [OCR options] settings in the [Scan to Evernote - Options] dialog box.


The following dialog box is displayed during text recognition.

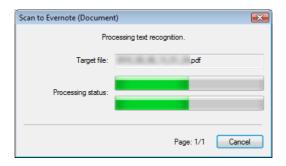



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on those pages only.

⇒ Evernote for Windows starts up, and the PDF file is saved to Evernote.

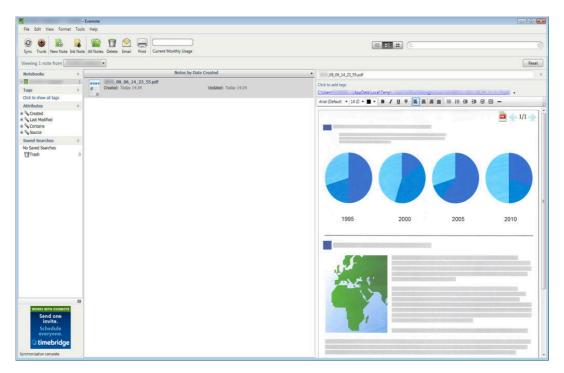



The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup dialog box even after the scanned image is saved to Evernote. Delete this file if unnecessary.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [Scan to Evernote (Document)].

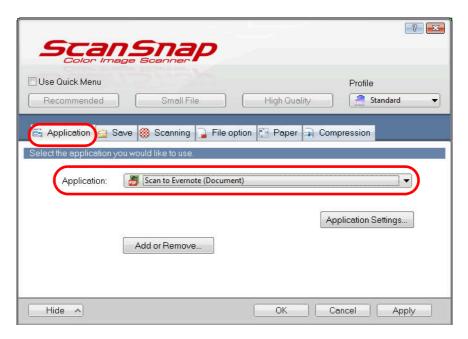




ScanSnap Manager can also link with [Scan to Evernote (Document)] when you select:


- [Scan to Evernote (Document)] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Scan to Evernote (Document)] from the Left-Click Menu

3. Change settings for the [Scan to Evernote (Document)] (If you do not want to change any settings, go to step 4.).

1. Click the [Application Settings] button.

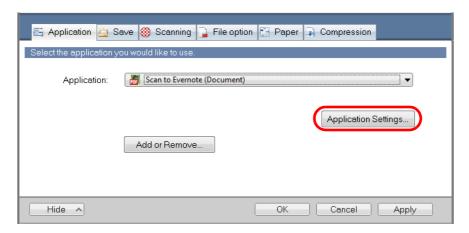

- ⇒ The [Scan to Evernote Options] dialog box appears.
- Change the settings.
 For details about the [Scan to Evernote Options] dialog box, refer to the ScanSnap Manager Help.

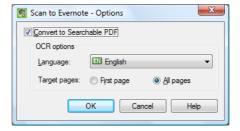

- 3. Click the [OK] button to close the [Scan to Evernote Options] dialog box.
- 4. Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.


⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, a PDF file is created from the JPEG file. A separate PDF file is created for each JPEG file.

The following dialog box is displayed when the PDF file is being created.

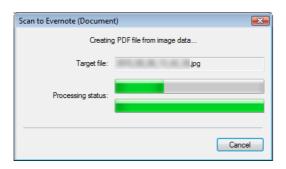


⇒ If the [Convert to Searchable PDF] check box is selected in step 3., text recognition is performed according to the [OCR options] settings in the [Scan to Evernote - Options] dialog box.

The following dialog box is displayed during text recognition.

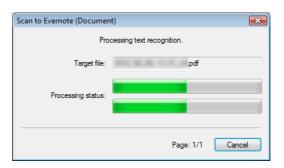



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on those pages only.

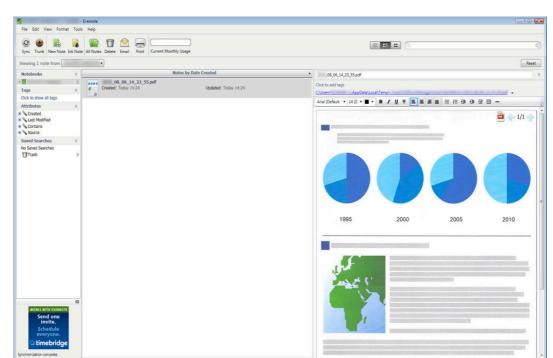


⇒ Evernote for Windows starts up, and the PDF file is saved to Evernote.



The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup dialog box even after the scanned image is saved to Evernote. Delete this file if unnecessary.

■ Saving Handwritten Notes to Evernote

This section explains how to save the scanned image as a JPEG file to Evernote. When you save a JPEG file to Evernote, text recognition is performed on all text, including handwritten characters, and the file becomes searchable in Evernote.

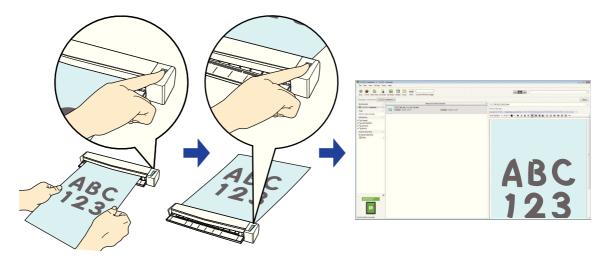



You first need to sign in to Evernote for Windows to save a file to Evernote.

For details about the procedure to scan and save the scanned image to Evernote using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 172)
- Without Using the Quick Menu (→ page 175)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.


4. Click the [Scan to Evernote (Note)] icon.





- You cannot start scanning when the Quick Menu is displayed. Save the JPEG file to Evernote before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ When you perform a scan with [PDF(*.pdf)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, a JPEG file is created from the PDF file. A separate JPEG file is created for each page of the PDF file. The following dialog box is displayed when the JPEG file is being created.

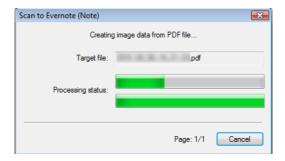

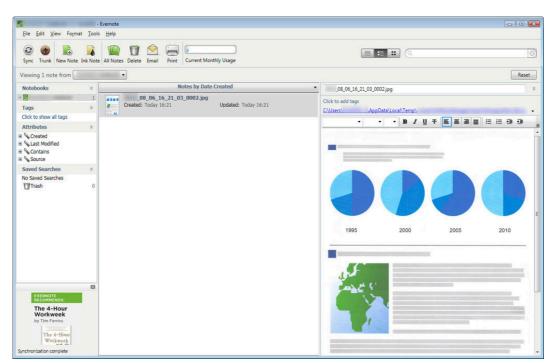

⇒ Evernote for Windows starts up, and the JPEG file is saved to Evernote.



- When you select [PDF (*.pdf)] for [File format] in the [File option] tab of the ScanSnap setup dialog box, a four-digit serial number is automatically added to the name of the file which is saved to Evernote.
 - e.g. When the file name is [ScanSnap], the file is saved as: ScanSnap_0001, ScanSnap_0002, ScanSnap_0003...
- The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup dialog box even after the scanned image is saved to Evernote. Delete this file if unnecessary.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [Scan to Evernote (Note)].

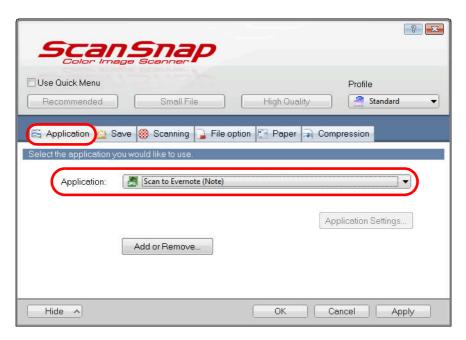



ScanSnap Manager can also link with [Scan to Evernote (Note)] when you select:

- [Scan to Evernote (Note)] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Scan to Evernote (Note)] from the Left-Click Menu
- 3. Click the [OK] button to close the ScanSnap setup dialog box.
- 4. Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).


5. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ When you perform a scan with [PDF(*.pdf)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, a JPEG file is created from the PDF file. A separate JPEG file is created for each page of the PDF file. The following dialog box is displayed when the JPEG file is being created.

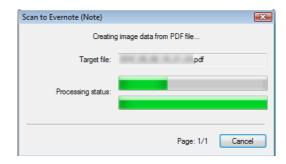

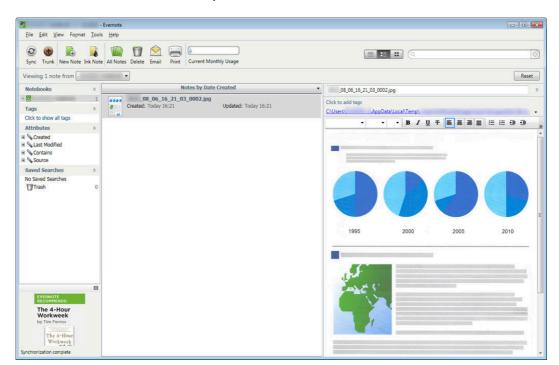


⇒ Evernote for Windows starts up, and the JPEG file is saved to Evernote.



- When you select [PDF (*.pdf)] for [File format] in the [File option] tab of the ScanSnap setup dialog box, a four-digit serial number is automatically added to the name of the file which is saved to Evernote.
 - e.g. When the file name is [ScanSnap], the file is saved as: ScanSnap_0001, ScanSnap_0002, ScanSnap_0003...
- The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup dialog box even after the scanned image is saved to Evernote. Delete this file if unnecessary.

Saving Documents to Google Docs

This section explains how to save the scanned image as a PDF file to Google Docs.

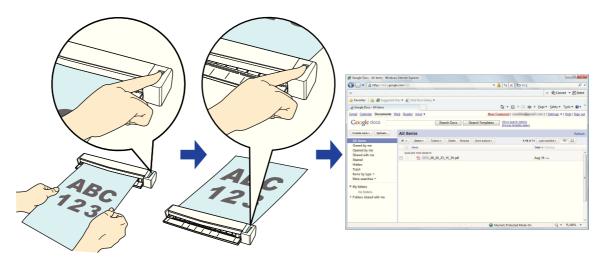



You need to have .NET Framework 3.0 installed in order to use this function. Note that .NET Framework 3.0 is also included in .NET Framework 3.5 (SP1 or later). It is recommended that you use .NET Framework 3.5 (SP1 or later) by updating Windows. You need to install .NET Framework 3.0 separately even if .NET Framework 4.0 or later is already installed because .NET Framework 3.0 is not included in the .NET Framework 4.0 or later version.

For details about the procedure to scan and save the scanned image to Google Docs using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 179)
- Without Using the Quick Menu (→ page 183)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 63).

1. Load a document in the ScanSnap.


For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to finish scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for [Scan to Google Docs(TM)] (If you do not want to change any settings, go to step 5.).
 - 1. Move the mouse cursor to the ** mark on the [Scan to Google Docs(TM)] icon, and then select the [Settings] menu.

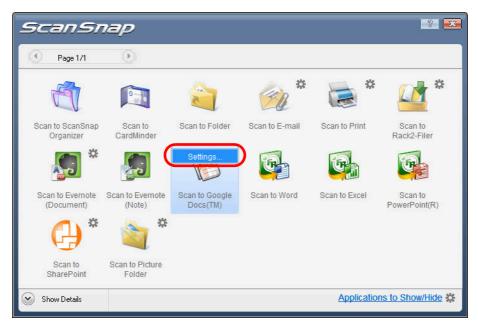

⇒ The [Scan to Google Docs(TM) - Options] dialog box appears.

 Change the settings.
 For details about the [Scan to Google Docs(TM) - Options] dialog box, refer to the ScanSnap Manager Help.

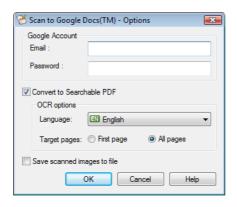



If the computer is shared with other users, do not enter your information in [Email] and [Password] in this dialog box.

Otherwise, other users will be able to log into Google Docs automatically.

3. Click the [OK] button to close the [Scan to Google Docs(TM) - Options] dialog box.


5. Click the [Scan to Google Docs(TM)] icon.





- You cannot start scanning when the Quick Menu is displayed. Save the PDF file to Google Docs before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.

⇒ If you did not specify a Google account in the [Scan to Google Docs(TM) - Options] dialog box in step 4., the [Scan to Google Docs(TM)] dialog box appears. Saving will continue after you enter an e-mail address and a password, and click the [OK] button.

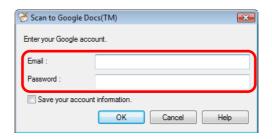




If the computer is shared with other users, do not select the [Save your account information.] check box in this dialog box.


Otherwise, other users will be able to log into Google Docs automatically.

⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, a PDF file is created from the JPEG file. A separate PDF file is created for each JPEG file.

The following dialog box is displayed when the PDF file is being created.

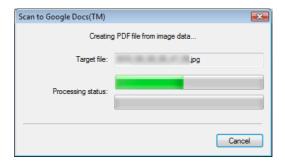


➡ If the [Convert to Searchable PDF] check box is selected in the [Scan to Google Docs(TM) - Options] dialog box in step 4., text recognition is performed according to the [OCR options] settings in the [Scan to Google Docs(TM) - Options] dialog box. The following dialog box is displayed during text recognition.

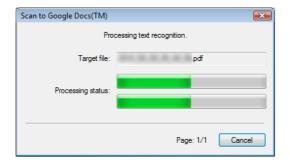



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on those pages only.

⇒ The following dialog box appears when saving starts. Click the [Close] button to close the [Scan to Google Docs(TM)] dialog box when the saving completes.

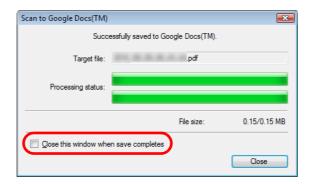

When you select the [Close this window when save completes] check box in the [Scan to Google Docs(TM)] dialog box, from next scanning on, the [Scan to Google Docs(TM) dialog box automatically closes after the PDF file is saved to Google Docs.



Google Docs does not start up after the saving has completed. To check the saved PDF file, start a web browser and log in to Google Docs.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] check box in the ScanSnap setup dialog box.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 69).

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Application] drop-down list in the [Application] tab, select [Scan to Google Docs(TM)].

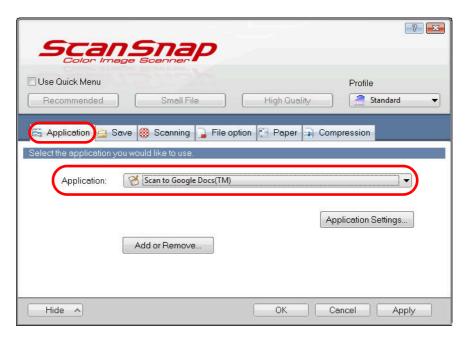





ScanSnap Manager can also link with [Scan to Google Docs(TM)] when you select:

- [Scan to Google Docs(TM)] from the [Profile] drop-down list of the ScanSnap setup dialog box
- [Scan to Google Docs (TM)] from the Left-Click Menu

- 3. Change settings for the [Scan to Google Docs(TM)] (If you do not want to change any settings, go to step 4.).
 - 1. Click the [Application Settings] button.

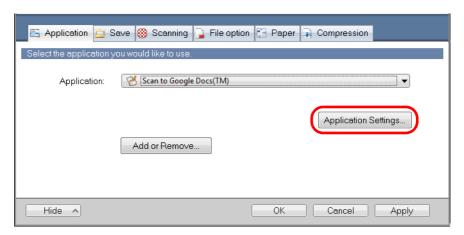

- ⇒ The [Scan to Google Docs(TM)- Options] dialog box appears.
- Change the settings.
 For details about the [Scan to Google Docs(TM) Options] dialog box, refer to the ScanSnap Manager Help.

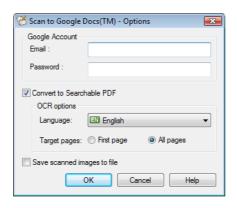



If the computer is shared with other users, do not enter your information in [Email] and [Password] in this dialog box.

Otherwise, other users will be able to log into Google Docs automatically.

- 3. Click the [OK] button to close the [Scan to Google Docs(TM) Options] dialog box.
- **4.** Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ If you did not specify a Google account in the [Scan to Google Docs(TM) - Options] dialog box in step 3., the [Scan to Google Docs(TM)] dialog box appears. Saving will continue after you enter an e-mail address and a password, and click the [OK] button.






If the computer is shared with other users, do not select the [Save account information] check box in this dialog box.


Otherwise, other users will be able to log into Google Docs automatically.

⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup dialog box, a PDF file is created from the JPEG file. A separate PDF file is created for each JPEG file.

The following dialog box is displayed when the PDF file is being created.

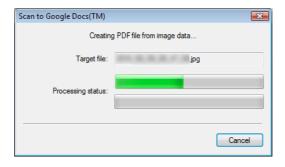


⇒ If the [Convert to Searchable PDF] check box is selected in the [Scan to Google Docs(TM) - Options] dialog box in step 3., text recognition is performed according to the [OCR options] settings in the [Scan to Google Docs(TM) - Options] dialog box. The following dialog box is displayed during text recognition.

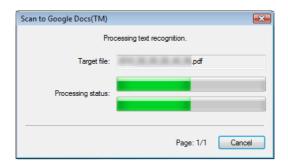



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on those pages only.

⇒ The following dialog box appears when saving starts. Click the [Close] button to close the [Scan to Google Docs(TM)] dialog box when the saving completes.

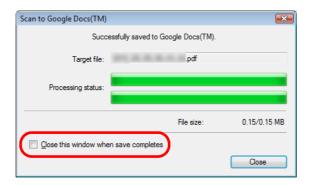

When you select the [Close this window after save completes] check box in the [Scan to Google Docs(TM) dialog box, from next scanning on, the [Scan to Google Docs(TM) dialog box automatically closes after the PDF file is saved to Google Docs.



Google Docs does not start up after the saving has completed. To check the saved PDF file, start a web browser and log in to Google Docs.

Using the ScanSnap in Various Ways

This section explains about various ways of using the ScanSnap.

Scanning Color Documents in Gray or Black & White Mode


When [Auto color detection] is specified for [Color mode] in the [Scanning] tab of the ScanSnap setup dialog box, the ScanSnap automatically recognizes whether the scanned document is color, gray or black & white, and saves the documents in their respective color modes.

If you want to scan and save color documents in gray or black & white, change the settings in the following procedure.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Color mode] drop-down list in the [Scanning] tab, select [Gray] or [B&W].

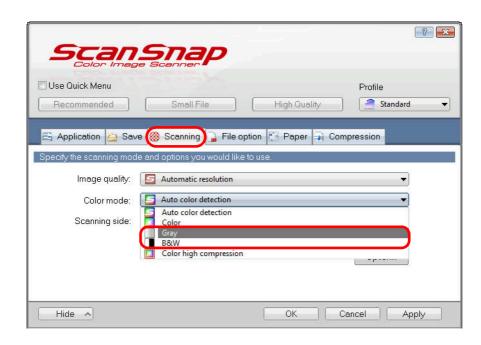

- 3. Click the [OK] button to close the ScanSnap setup dialog box.
- **4.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

5. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- **6.** Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ Image data is saved in gray or black & white.

■ Scanning Color Documents in High Compression Mode

The ScanSnap can save image data of color documents in high compression mode. You can scan large quantities of color documents in high compression mode and save them as a compact PDF file.

To scan color documents in high compression mode, perform the following steps to change the setting.




In [Color high compression] mode, different compression rates are applied to characters and backgrounds. Therefore, the file size of a document with mostly text characters is reduced, while the quality of the characters is kept high. However, high compression is applied to photographs and figures since they are regarded as backgrounds, resulting in deteriorated image data. For this reason, this mode is not appropriate for scanning photographs, images and such.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Color mode] drop-down list in the [Scanning] tab, select [Color high compression].

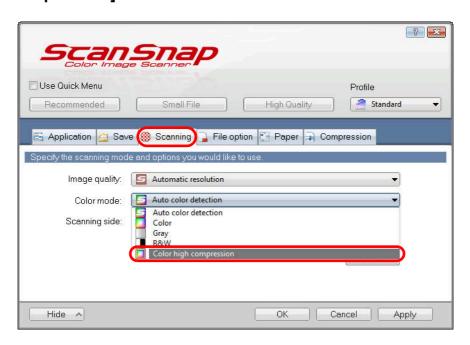

3. Click the [OK] button to close the ScanSnap setup dialog box.

4. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

5. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The scanned document is saved as highly compressed color image data.

■ Correcting Skewed Character Strings

When documents with skewed character strings are scanned, the ScanSnap is able to detect the skewed character strings and correct them.

To correct skewed character strings, change the settings in the following procedure.



- Up to +/-5 degrees of skew can be corrected.
- Since this option is performed assuming that the document contains a certain amount of text, character strings may be adjusted at a wrong angle when scanning the following types of documents. In that case, clear the [Correct skewed character strings automatically] check box:
 - Documents on which pitches between lines or characters are extremely narrow, or characters are overlapped
 - Documents with many outlined or decorated characters
 - Documents with many photographs or figures and few characters
 - Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
 - Documents with characters printed in various directions such as drawings
 - Documents with long diagonal lines
 - Documents including handwritten characters.
- This setting is disabled when you perform a scan using the Carrier Sheet.




You do not have to enable [Correct skewed character strings automatically] when [Automatic detection] is specified for [Paper size] in the [Paper] tab of the ScanSnap setup dialog box because the skewed image is always corrected when documents are scanned by this setting.

1. Select [Scan Button Settings] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. Click the [Option] button in the [Scanning] tab.

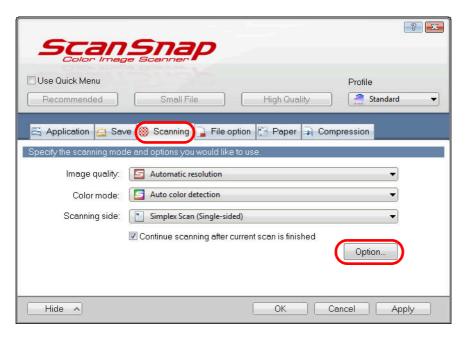

- ⇒ The [Scanning mode option] dialog box appears.
- 3. Select the [Correct skewed character strings automatically] check box.

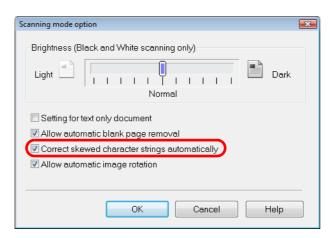

- **4.** Click the [OK] button to close all open dialog boxes.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Image data is saved with skewed character strings corrected.

Correcting the Orientation of Scanned Images

In an office environment, it is often the case that a single batch contains same size documents of different page orientations.

The ScanSnap is able to automatically rotate each scanned image to its correct orientation for such document batches.

To rotate scanned images to their correct orientations, change the settings in the following procedure.



Since this option determines the document's page orientation based on the character strings printed on the document, the following types of documents may be rotated to the wrong orientation. In that case, clear the [Allow automatic image rotation] check box.


- Documents with many extremely large or small characters
- Documents on which pitches between lines or characters are extremely narrow, or characters are overlapped
- Documents with many characters contacting underlines or borders
- Documents with many photographs or figures and few characters
- Documents with characters on an unevenly colored background e.g. Shaded characters
- Documents with many decorated characters
 e.g. Decorated characters (embossed/outlined)
- Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
- Documents with characters printed in various directions such as drawings
- Documents written using only capital letters
- Documents including handwritten characters
- Skewed documents
- Documents written in an unsupported language (language other than Japanese/English/ French/German/Italian/Spanish/Chinese (simplified)/Chinese (traditional)/Korean/Russian/ Portuguese)
- Documents with complex layouts
- Documents with a large amount of image noise
- Documents with faint characters
- Documents with faded characters

1. Select [Scan Button Settings] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.

2. Click the [Option] button in the [Scanning] tab.

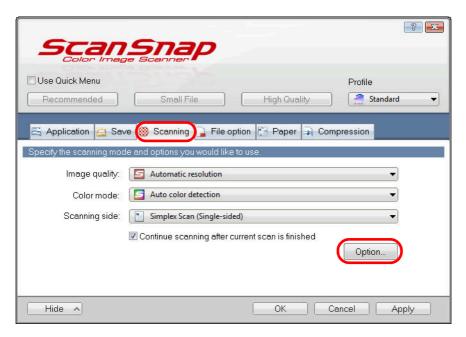

- ⇒ The [Scanning mode option] dialog box appears.
- 3. Select the [Allow automatic image rotation] check box.

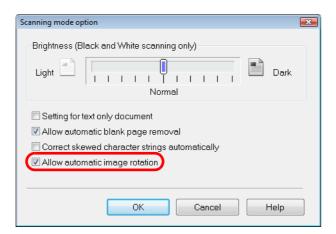

- **4.** Click the [OK] button to close all open dialog boxes.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

 \Rightarrow The scanned image is saved in the correct orientation.

Scanning Documents Larger Than A4/Letter Size

You can scan documents larger than A4/Letter size such as A3, Double Letter and B4 using the Carrier Sheet (sold separately). By folding the document in half and scanning both sides consecutively in simplex mode, the two sides are merged into a single image and saved.



In the [Scanning mode option] dialog box ([Scanning] tab → [Option] button in the ScanSnap setup dialog box), the [Correct skewed character strings automatically] check box is disabled.




You can also scan documents smaller than A4/Letter size and have both sides saved as a single image.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).


- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Paper] tab, select [Automatic detection] in [Paper size], and then click the [Carrier Sheet Settings] button.

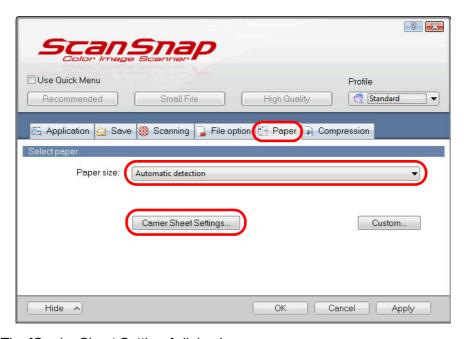

⇒ The [Carrier Sheet Settings] dialog box appears.

3. Select [one double-page spread image] in [Save as].


For details about the Carrier Sheet settings, refer to the ScanSnap Manager Help.

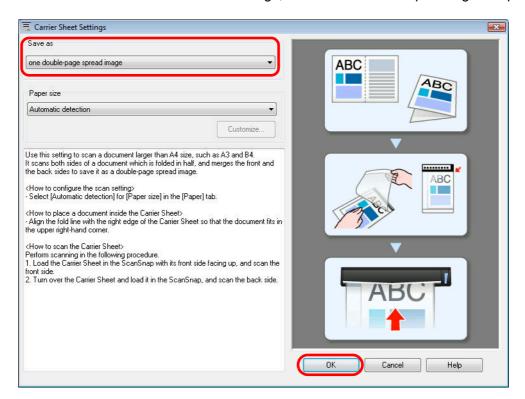

4. Click the [OK] button to close all the dialog boxes.


5. Place the document inside the Carrier Sheet.

1. Fold the document in half so that the sides to be scanned are facing out. Fold it tightly and smooth out any creases.

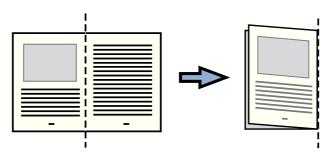

2. Open the Carrier Sheet and place the document inside.


Align the fold line with the right edge of the Carrier Sheet so that the document fits in the upper right-hand corner of the Carrier Sheet.

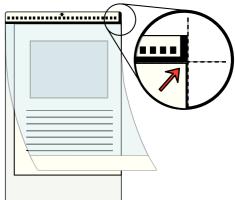



Note that the front side of the Carrier Sheet has a thick vertical line in the upper right-hand corner.


6. Insert the part with the black and white pattern straight into the feeding section of the ScanSnap, with the front side of the Carrier Sheet facing up.

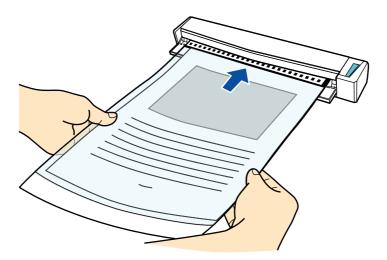

⇒ The Carrier Sheet is pulled in until it is set inside the ScanSnap.




If you perform a scan using the Carrier Sheet with the output guide open, a paper jam may occur and damage the documents. Make sure to close the output guide when you perform a scan using the Carrier Sheet.

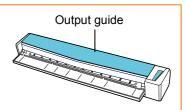

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.

⇒ Scanning starts and the [ScanSnap Manager - Image scanning and file saving] dialog box appears. When the front side of the Carrier Sheet is scanned, the image data is displayed in the preview area.

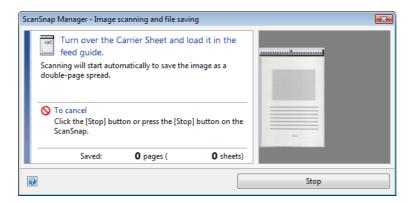


8. Turn over the Carrier Sheet and insert it as explained in step 6.



Make sure to scan the front and back side of the Carrier Sheet consecutively.

⇒ Scanning starts automatically and the [ScanSnap Manager - Image scanning and file saving] dialog box appears. When the back side of the Carrier Sheet is scanned, scanned images of the front and back side of the document inside the Carrier Sheet are displayed as a double-page spread image in the preview area.

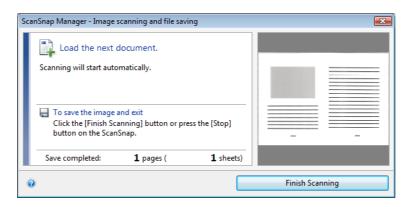




Repeat steps 5. to 8. to scan more documents larger than A4/Letter size. You can continue with scanning documents that can be set directly in the ScanSnap. For details about how to load documents, refer to "How to Load Documents" (page 30). Scanning starts automatically when a document is loaded in the ScanSnap.

9. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The scanned images of the front and back side of the document inside the Carrier Sheet are saved as a double-page spread image.

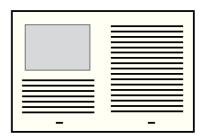



There may be a line or a gap appearing between the front and back side images. Also when
you scan thick papers, images on both left and right may skew towards each other from the
top.

The degree of these symptoms varies depending on how the document was set or folded. In that case, try the following for possible resolutions:

- Fold the document properly
- Neatly align the edges of the document with the edges of the Carrier Sheet when placing the document inside the Carrier Sheet
- When [Automatic detection] is selected from the [Paper size] drop-down list in the [Carrier Sheet Settings] dialog box, the image is output in an optimal size selected automatically from the available standard sizes (A3, B4 or 11 × 17 in.) in the [Paper size] dialog box. However, depending on the document, the size of the saved image data may be smaller than the original document or some parts of the image may be missing.

Example: When you scan an A3 size document with an A4 size image printed in the center, image data is saved in B4 size.

To save an image data in the actual size of the document, specify the document size in the [Paper size] drop-down list.

Part of the image data around where the document is folded may appear missing. In that
case, place the document so that its edge is about 1 mm inside from the edge of the Carrier
Sheet.

Scanning Documents Such as Photographs and Clippings

You can scan photographs you do not want to damage or documents that are difficult to scan such as clippings using the Carrier Sheet (sold separately).

Change the settings to scan documents such as photographs and clippings in the following procedure.




In the [Scanning mode option] dialog box ([Scanning] tab → [Option] button in the ScanSnap setup dialog box), the [Correct skewed character strings automatically] check box is disabled.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).


- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [Paper] tab, select [Automatic detection] in [Paper size], and then click the [Carrier Sheet Settings] button.

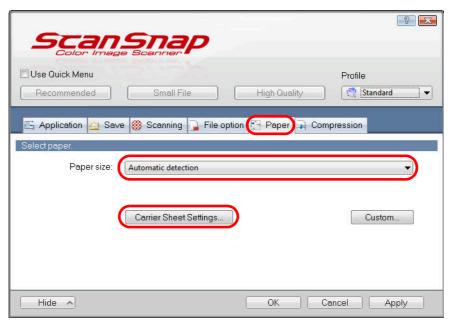

⇒ The [Carrier Sheet Settings] dialog box appears.

3. Select [two separate images (front and back)] in [Save as].


For details about the Carrier Sheet settings, refer to the ScanSnap Manager Help.

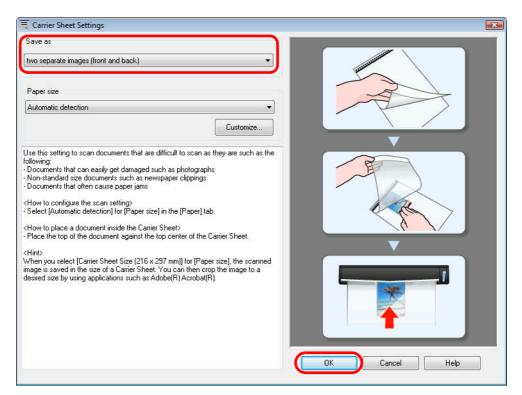


4. Click the [OK] button to close all open dialog boxes.

5. Place the document inside the Carrier Sheet.

Open the Carrier Sheet and place the top of the document against the top center of the Carrier Sheet.

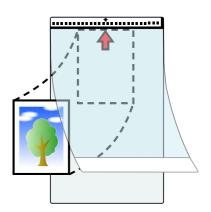


6. Insert the part with the black and white pattern straight into the feeding section of the ScanSnap, with the scanning side of the document inside the Carrier Sheet facing up.

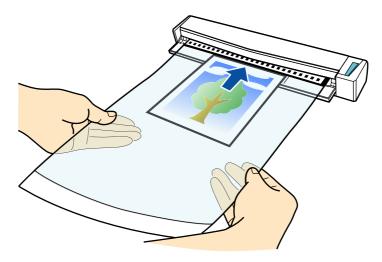

⇒ The Carrier Sheet is pulled in until it is set inside the ScanSnap.




If you perform a scan using the Carrier Sheet with the output guide open, a paper jam may occur and damage the documents. Make sure to close the output guide when you perform a scan using the Carrier Sheet.

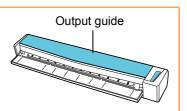

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.

⇒ When scanning is completed, the scanned image of the document inside the Carrier Sheet is displayed in the preview area.

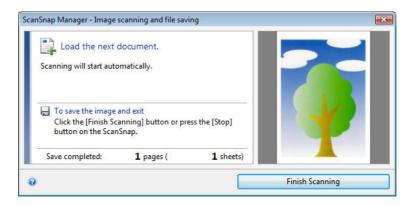



Repeat step 5. to 6. to scan more documents such as photographs and clippings. You can continue with scanning documents that can be set directly in the ScanSnap. For details about how to load documents, refer to "How to Load Documents" (page 30). Scanning starts automatically when documents are loaded in the ScanSnap.

8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Scanned image is saved.




- The scanned image is output at the center of the page in the size specified in the [Paper size] drop-down list of the [Carrier Sheet Settings] dialog box.
- When [Automatic detection] is specified in the [Paper size] drop-down list of the [Carrier Sheet Settings] dialog box, the image is output in an optimal size selected automatically from the available standard sizes in the [Paper size] drop-down list. However, depending on the document, the size of the saved image data may be smaller than the original document or part of the image may be missing. Example: When you scan an A5 size image printed in the middle of an A4 size document, the scanned image is saved in A5 size.

To save the scanned image in its original size, specify the document size in the [Paper size] drop-down list.



Place the document over a blank sheet if the following is observed:

- Scanned image is not saved in the same size as the document (when [Automatic detection] is specified in the [Paper size] drop-down list of the [Carrier Sheet Settings] dialog box)
- There are shadows around the edges of the scanned image
- There are black lines around the scanned image of a uniquely shaped cutting

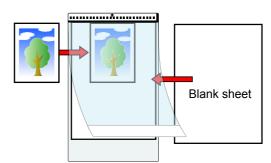


■ Long Page Scanning


Documents up to 863 mm (34 in.) in length can be scanned.

The following explains how to scan long pages.

1. Insert the document straight into the feeding section of the ScanSnap, with the scanning side facing up.

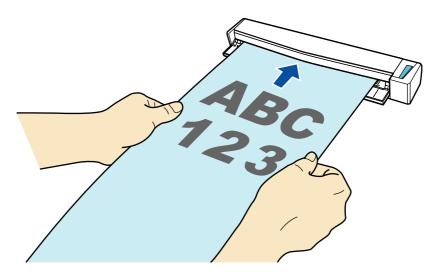

⇒ The document is pulled in until it is set inside the ScanSnap.

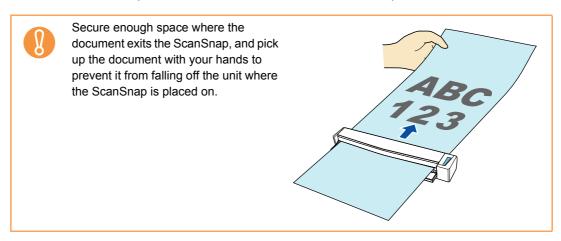

2. Press the [Scan/Stop] button on the ScanSnap for three seconds or longer until it flashes in blue.


⇒ Scanning starts.



When you scan the first page as a long page and continue scanning, the next document is also scanned as long page.



The error message below appears and long page scanning is disabled when [Excellent] is selected in the [Image quality] drop-down list of the [Scanning] tab in the ScanSnap setup dialog box.

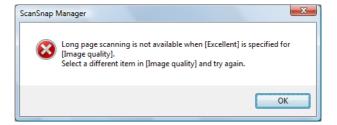

 When you perform a long page scan, the setting for [Paper size] in the [Paper] tab of the ScanSnap setup dialog box automatically switches to [Automatic detection]. The current settings are used for other scan settings.

■ Saving Scanned Images in Multiple PDF Files

The ScanSnap is able to save scanned image in separate PDF files based on the specified number of pages. For example, you can scan a batch of slips, and save each slip as a PDF file.

To save image data in multiple PDF files, change the settings in the following procedure.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ The ScanSnap setup dialog box appears.


2. From the [File format] drop-down list in the [File option] tab, select [PDF (*.pdf)], and then click the [Option] button.



⇒ The [PDF file format option] dialog box appears.

3. Select [Generate one PDF file per (n) page(s)] and enter the number of pages to split.

One PDF is created every time the number of pages specified here has been saved.

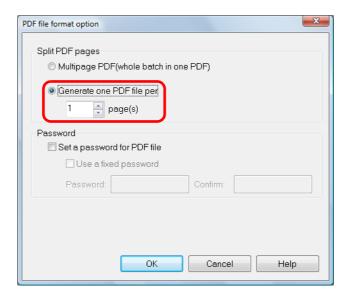

- **4.** Click the [OK] button to close all open dialog boxes.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ One PDF file is created every time the number of pages specified in step 3. has been scanned.

■ Creating Searchable PDF Files


The ScanSnap is able to perform text recognition on a scanned image automatically and create a searchable PDF file.

To create searchable PDF files, change the settings in the following procedure.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. From the [File format] drop-down list in the [File option] tab, select [PDF (*.pdf)].

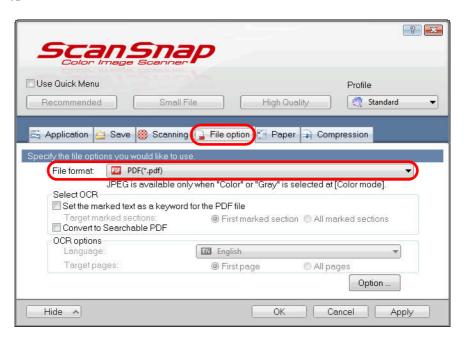





It is recommended that you select [Better] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup dialog box.

3. Select the [Convert to Searchable PDF] check box.

⇒ The following message appears.

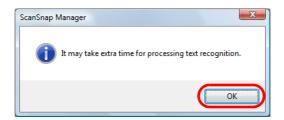

⇒ Click the [OK] button to close the dialog box.

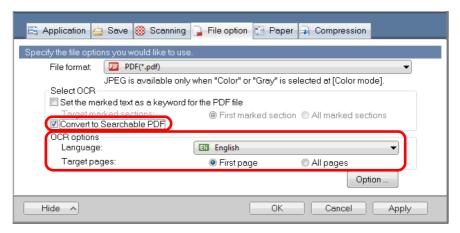

- Language
 Select the language. Japanese, English, French, German, Italian, Spanish, Chinese (simplified), Chinese (traditional), Korean, Russian, and Portuguese can be selected.
- Target pages
 Select [All pages] to perform text recognition for all pages and [First page] for just the first page.
- 4. Click the [OK] button to close the ScanSnap setup dialog box.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Text recognition is performed on the scanned image and a searchable PDF file is created.



- It may take extra time to process text recognition depending on your computer system environment when you enable this setting in step 3.
- Scanned images of the following types of documents (characters) may not be recognized correctly.

In that case, better results in text recognition may be achieved by changing the setting for [Color mode] or specifying a higher resolution in [Image quality].


- Documents including handwritten characters
- Documents with small characters scanned at a low resolution
- Skewed documents
- Documents written in languages other than the specified language
- Documents including texts written in italic characters
- Documents containing characters with superscripts/subscripts and complicated mathematical expressions
- Documents with characters on an unevenly colored background e.g. Shaded characters
- Documents with many decorated characters e.g. Decorated characters (embossed/outlined)
- Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
- Documents with many characters contacting underlines or borders
- It may take extra time to perform text recognition on the following documents:
 - Documents with complex layouts
 - Documents with information other than text e.g. Text on a shaded background

Automatically Setting Keywords for PDF Files

If the document is black & white, character strings (e.g. page heading, title) can be set as keywords and used for a PDF file search.

Mark a character string to be set as a keyword with a water-based highlight pen so that the character string is completely covered.

When you perform a scan, the marked character strings are recognized and set as keywords for the PDF file.

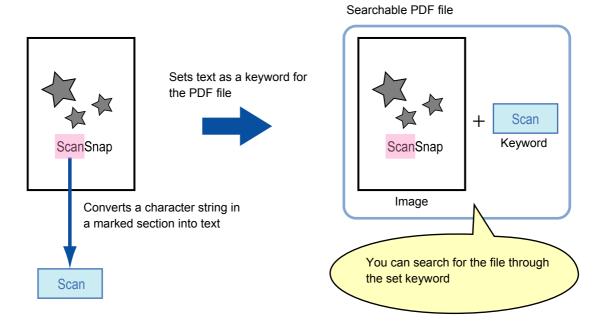

Mark black & white documents in the following way:

Any regular highlight pen can be used.
 The following shows the colors and thickness recommended for highlight pens:

Pink	Yellow	Blue	Green
ScanSnap	ScanSnap	ScanSnap	ScanSnap

- Mark a straight line over a single character string.
- The supported range of a marked section is as follows:

Minimum: 3 mm (short side) × 10 mm (long side)

Maximum: 20 mm (short side) × 150 mm (long side)

• Use only one color per page for marking.

Make sure to cover the entire character string when marking it.
 Mark sections so that the entire section is evenly colored.

Good example:	Bad example 1: (does not cover the entire section)	Bad example 2: (unevenly colored)
ScanSnap	ScanSnap	ScanSnap

Do not mark more than ten sections per page.



- It is recommended that you use a blue or a green highlight pen for marking. When you use colors such as pink or yellow for marking, the marked sections may not be recognized as keywords.
- Use a blue highlight pen for documents with dark background colors such as newspapers.
 Marked sections may not be detected when a color other than blue is used.
- For the following document types, marked sections cannot be recognized and set as keywords:
 - Color documents such as catalogues or pamphlets
 - Documents in which two or more colors are used for marking
 - Documents containing colors other than for marking (pens other than highlight pens are used or the document is stained)
 - Documents with too many marked sections on a single page
- The following types of marked character strings cannot be set as keywords:
 - The size of marked section is outside the supported range
 - The marking is irregular (e.g. skewed)
 - Multiple marked sections are too close to each other
 - The color of the highlight pen is too pale or the color has faded

ScanSnap

- When you mark more than one character string, make sure to leave a gap of at least 5 mm between the marked sections. Marked sections that are too close to each other may be detected as one marked section.
- In the following case, character strings surrounding marked sections may be set as keywords:
 - Marked section overlaps the line above and below
- In the following cases, unmarked character strings may be set as keywords:
 - Color documents such as catalogues or pamphlets
 - Documents with color text, diagrams, pictures, tables and lines
 - Documents containing sections framed by a highlight pen
 - Stained documents




- Increase the resolution when you have trouble setting the keywords correctly.
- Keywords set for a PDF file can be checked in the ScanSnap Organizer Main Window (thumbnail view), or in [Document Properties] of Adobe Acrobat / Adobe Reader.

Change the settings in the following procedure to automatically set keywords for PDF files.

1. Select [Scan Button Settings] from the Right-Click Menu.

For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).


- ⇒ The ScanSnap setup dialog box appears.
- 2. From the [File format] drop-down list in the [File option] tab, select [PDF (*.pdf)].

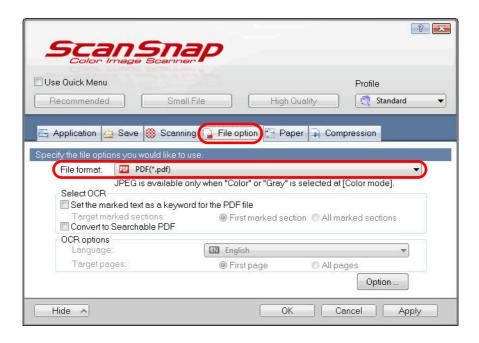




It is recommended that you select [Better] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup dialog box.

3. Select the [Set the marked text as a keyword for the PDF file] check box.

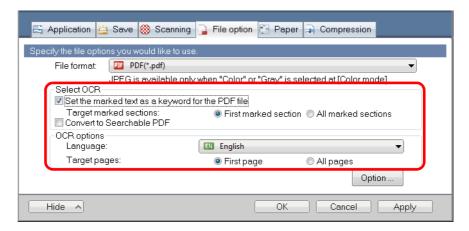

Target marked sections

Select [First marked section] to perform text recognition and set a keyword for the PDF file only for the character strings in the first marked section, and [All marked sections] for all marked sections.

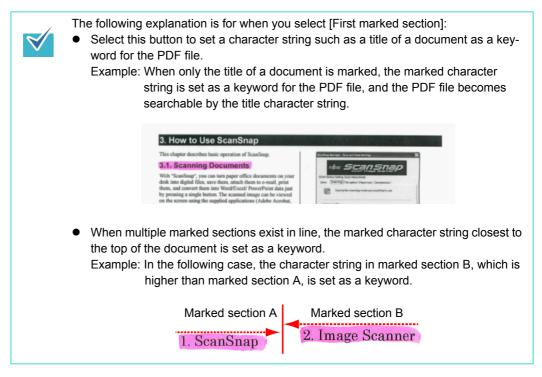

- Language
 Select the language. Japanese, English, French, German, Italian, Spanish, Chinese (simplified), Chinese (traditional), Korean, Russian, and Portuguese can be selected.
- Target pages
 Select [First page] to perform text recognition and set a keyword for the PDF file only for the first page, and [All pages] for all pages.

4. Click the [OK] button to close the ScanSnap setup dialog box.

5. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Text recognition is performed on marked character strings and a PDF file is created with the keywords added.



- It may take extra time to process text recognition depending on your computer system environment when you enable this setting in step 3.
- Scanned images of the following types of documents (characters) may not be recognized correctly.

In that case, better results in text recognition may be achieved by specifying a higher resolution in [Image quality].

- Documents including handwritten characters
- Documents with small characters scanned at a low resolution
- Skewed documents
- Documents written in languages other than the specified language
- Documents including texts written in italic characters
- Documents containing characters with superscripts/subscripts and complicated mathematical expressions
- Documents with characters on an unevenly colored background e.g. Shaded characters
- Documents with many decorated characters
 e.g. Decorated characters (embossed/outlined)
- Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
- Documents with many characters contacting underlines or borders
- It may take extra time to perform text recognition on the following documents:
 - Documents with complex layouts
 - Documents with information other than text e.g. Text on a shaded background
- If the same character string is marked several times in the document, the same keyword is added multiple times in the PDF file.
- Total length of all the keywords can be up to 255 characters, including punctuation marks in between keywords.
- When you check keywords in Adobe Acrobat or Adobe Reader, the added keywords may be displayed with a set of quotation marks (e.g. "ABC").

■ Setting Document Open Passwords for PDF Files

You can set Document Open passwords for PDF files when saving the image data as PDF files.

Once you set a password for a PDF file, the password-protected PDF files cannot be opened by anyone except the person who knows the password. You can protect important information by setting a password for private or confidential documents.

Change the settings to set passwords for PDF files in the following procedure.




When you use the Quick Menu, you cannot set passwords to scanned documents.

1. Select [Scan Button Settings] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

- ⇒ The ScanSnap setup dialog box appears.
- 2. In the [File format] drop-down list in the [File option] tab, select [PDF (*.pdf)], and then click the [Option] button.

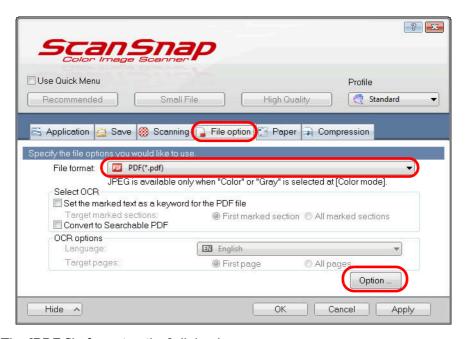


⇒ The [PDF file format option] dialog box appears.

3. Select the [Set a password for PDF file] check box.

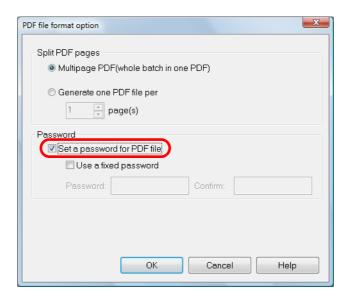


●To set a different password per scan

Clear the [Use a fixed password] check box. You can set a different password per scan.

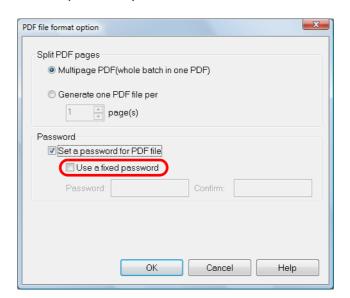


To use a preset password

Select the [Use a fixed password] check box.
 The same password is set for all PDF files. You do not have to set a password every time a document is scanned.

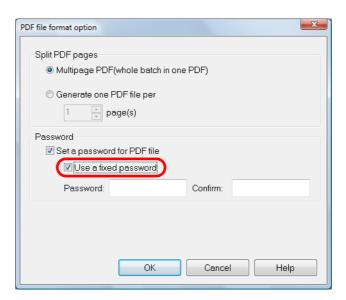

2. Type in the same password in the [Password] and [Confirm] fields.

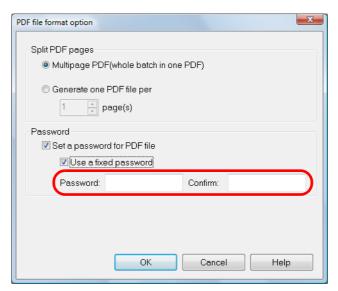



The following characters can be used to set passwords:

Up to 16 characters

Alphanumeric characters: A-Z, a-z, 0-9

Symbols:!"#\$%&'()*+,-./:;<=>?@[\]^_`{|}~

4. Click the [OK] button to close all open dialog boxes.

5. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ When the [Use a fixed password] check box is cleared in step 3., the following dialog box appears after scanning is completed.



Type in the same password in the [Password] and [Confirm] fields, and then click the [OK] button.



- The following characters can be used to set passwords: Up to 16 characters Alphanumeric characters: A-Z, a-z, 0-9 Symbols:!"#\$%&'()*+,-./:;<=>?@[\]^_`{|}~
- If you click the [Cancel] button, the PDF file is saved without a password.
- ⇒ The scanned image is saved as a password-protected PDF file.



It is not possible to open a PDF file if you forget the password.

Using the ScanSnap (for Mac OS Users)

This chapter explains how to perform scanning, configure scan settings, add, change or delete profiles, as well as various scanner functions and uses.

ScanSnap Manager Icon and Operations	223
How to Perform a Scan	227
Configuring ScanSnap Manager	239
Actions	258
Using the ScanSnap in Various Ways	328

ScanSnap Manager Icon and Operations

All operations on the ScanSnap are managed in ScanSnap Manager.

The ScanSnap Manager icon appears in the Dock to indicate that ScanSnap Manager is running. The icon automatically appears in the Dock when Mac OS starts up.

The ScanSnap Manager icon indicates whether or not ScanSnap Manager is successfully communicating with the ScanSnap. The appearance of the icon changes according to the communication status as shown below.

Status	ScanSnap Manager icon
Communicating	
Not communicating	

A menu is displayed when you click the ScanSnap Manager icon while pressing the [control] key on the keyboard.



When you add the ScanSnap Manager icon to the Dock, normally appears. A blue light appears under the ScanSnap Manager icon when ScanSnap Manager is running.



■ ScanSnap Manager Menu

This menu appears when you click the ScanSnap Manager icon while pressing the [control] key on the keyboard.



Click while pressing the [control] key on the keyboard



Item	Function
Scan	Starts scanning. Follows the settings configured in [Settings].
Settings	Displays the ScanSnap setup window. You can configure the scan settings in this window. ⇒ "How to Configure Scan Settings" (page 242)
Profile	Displays the Profile menu. ⇒ "Profile Menu" (page 226)
Profile Management	Displays the [ScanSnap Manager - Profile Management] window. You cannot select [Profile Management] when the [Use Quick Menu] checkbox is selected in the ScanSnap setup window. ⇒ "Profile Management" (page 245)
Help	Displays the following menu: Help Opens the ScanSnap Manager Help. Troubleshooting Displays [Troubleshooting] in the ScanSnap Manager Help. ScanSnap Portal Site Opens the ScanSnap global homepage (http://scansnap.fujitsu.com) About ScanSnap Manager Displays the [Version Information] window. Preferences Displays the [ScanSnap Manager - Preferences] window. Online Update Displays the [ScanSnap Manager - Online Update] window (page 368) windows.
Keep in Dock (*)	Adds the ScanSnap Manager icon 🥃 to the Dock.
Open at Login (*)	Automatically launches ScanSnap Manager when Mac OS is started up.

Item	Function
Show in the Finder (*)	Displays the contents of the [ScanSnap] folder by using the Finder.
Hide/Show	Hides or redisplays all windows of ScanSnap Manager that are being displayed.
Quit	Exits ScanSnap Manager. ⇒ "Finishing ScanSnap Operation" (page 238)

^{* :} Select the [Options] sub-menu to display these items.

■ Profile Menu

This menu appears when you click the ScanSnap Manager icon **(School)**. Available profiles are displayed in the Profile menu.



Profile menu example

Select a profile in the Profile menu before you perform scanning. Documents are scanned according to the scan settings of the profile you select.

For details about how to add, change or delete profiles, refer to "Profile Management" (page 245).



- To enable the Profile menu, clear the [Use Quick Menu] checkbox in the ScanSnap setup window. The Profile menu does not appear when this checkbox is selected.
- You can also display the Profile menu by selecting [Profile] from ScanSnap Manager menu.
- Profiles configured for the following scanner models will be carried over to ScanSnap S1100 if the connected computer is the same:
 - ScanSnap S1500/S1500M
 - ScanSnap S1300
 - ScanSnap S510M
 - ScanSnap S500M
 - ScanSnap S300M

How to Perform a Scan

This section explains how to perform scanning with the ScanSnap.

■ Preparation

1. Turn on the computer.


⇒ The ScanSnap Manager icon appears in the Dock when Mac OS starts up.





- If the ScanSnap Manager icon
 is not displayed, select [Applications] and double-click [ScanSnap] → [ScanSnap Manager] from Finder to start up ScanSnap Manager.

2. Open the feed guide to turn on the ScanSnap.

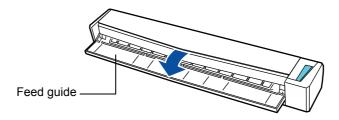

⇒ The ScanSnap Manager icon in the Dock changes from
⑤ to ⑤.



There may be a slight delay before the ScanSnap Manager icon changes to depending on your computer's performance, operating environment and load such as when there are many programs running at the same time.

There are two ways to perform scanning, either with the Quick Menu or without using the Quick Menu. For details, refer to the following:

- Using the Quick Menu (→ page 228)
- Without Using the Quick Menu (→ page 233)

■ Using the Quick Menu

The following explains the procedure for scanning by using the Quick Menu.

1. Select [Settings] from the ScanSnap Manager menu.


For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. Select the [Use Quick Menu] checkbox.



3. Click one of the profile buttons.

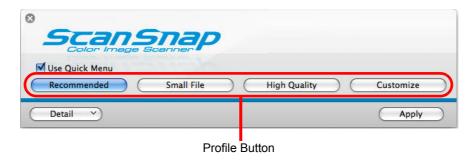

Profile Button	Description
[Recommended] button	Settings are [Automatic resolution] for [Image quality] in the [Scanning] tab in the ScanSnap setup window and default for other settings. It is recommended that you select this button when you want to scan documents in optimum quality suitable for the paper size of the document.
[Small File] button	Settings are [Normal] (Color/Gray: 150 dpi, B&W: 300 dpi) for [Image quality] in the [Scanning] tab in the ScanSnap setup window and default for other settings. It is recommended that you select this button when you want to reduce the file size.

Profile Button	Description
[High Quality] button	Settings are [Best] (Color/Gray: 300 dpi, B&W: 600 dpi) for [Image quality] in the [Scanning] tab in the ScanSnap setup window and default for other settings. It is recommended that you select this button when you want to scan documents in high quality.
[Customize] button	Default settings are the same as the [Recommended] settings. Settings can be changed depending on your scanning purpose.



- The [Recommended] button is selected in default.
- For details about the default settings when using the Quick Menu, refer to the ScanSnap Manager Help.
- You cannot change the settings for the [Recommended], [Small File], and [High Quality] buttons. If you change any of these settings, the profile automatically switches to [Customize].

For details about how to change scan settings, refer to "How to Configure Scan Settings" (page 242).

- 4. Click the [Apply] button.
- 5. Click the [] button in the upper left corner to close the ScanSnap setup window.
- **6.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).


7. Press the [Scan/Stop] button on the ScanSnap to start scanning.



You can also start scanning from the ScanSnap Manager menu. For more details, refer to "ScanSnap Manager Menu" (page 224).



- Do not connect and disconnect the ScanSnap and other USB devices during scanning.
- Do not close the feed guide during scanning.
- Do not switch users during scanning.
- ⇒ The [ScanSnap Manager Image scanning and file saving] window appears.

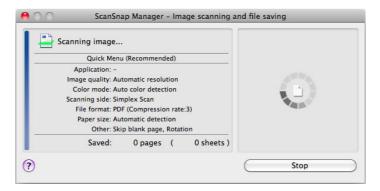

➡ After the scanning has completed, the [ScanSnap Manager - Image scanning and file saving] window shows a new message indicating that the ScanSnap is ready for the next scan.





Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

$8 extbf{.}$ Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The Quick Menu appears.



- You can also finish scanning by clicking the [Finish Scanning] button in the [ScanSnap Manager - Image scanning and file saving] window.
- The [Scan/Stop] button on the ScanSnap flashes in blue throughout the scan.

9. In the Quick Menu, click the icon of the application to link with ScanSnap Manager.



⇒ The selected application is started.



- To specify which applications to display/hide in the Quick Menu, or change the display order of the applications, refer to "Quick Menu Settings" (page 239).
- To select an application to link with ScanSnap Manager before scanning, refer to "Without Using the Quick Menu" (page 233).

Application	Description
Scan to Folder	Displays the [Scan to Folder] window. Indicates the destination folder for saving the scanned image. For details about how to continue the process after you select this item, refer to "Saving Data in a Specified Folder" (page 259).
Scan to E-mail	Displays the [Scan to E-mail] window. Scanned image is attached to an e-mail message. For details about how to continue the process after you select this item, refer to "Attaching Files to E-Mail" (page 266).
Scan to Print	Displays the [Print] window. Scanned image can be printed. For details about how to continue the process after you select this item, refer to "Using the ScanSnap as a Copy Machine" (page 276).
Scan to Evernote (Document) (*1) (*2)	Scanned image is saved as a PDF file in Evernote. For details about how to continue the process after you select this item, refer to "Saving Documents to Evernote" (page 305).
Scan to Evernote (Note) (*1) (*2)	Scanned image is saved as a JPEG file in Evernote. For details about how to continue the process after you select this item, refer to "Saving Handwritten Notes to Evernote" (page 313).
Scan to Google Docs(TM) (*1)	Scanned image is saved as a PDF file in Google Docs. For details about how to continue the process after you select this item, refer to "Saving Documents to Google Docs" (page 319).
Scan to Word (*3)	Text recognition is performed on the scanned image which is then converted to a Word file. For details about how to continue the process after you select this item, refer to "Converting into Word/Excel Documents" (page 283).

Application	Description
Scan to Excel (*3)	Text recognition is performed on the scanned image which is then converted to an Excel file. For details about how to continue the process after you select this item, refer to "Converting into Word/Excel Documents" (page 283).
Cardiris (*4)	Displays the [Cardiris] window. Scanned image is stored in Cardiris. For details about how to continue the process after you select this item, refer to "Storing Business Cards in Cardiris" (page 291).
iPhoto (*5)	PDF or JPEG files are created from the scanned image and saved in iPhoto. For details about how to continue the process after you select this item, refer to "Storing Scanned Images in iPhoto" (page 300).

- *1 : Displayed when Mac OS X v10.5.8 or later is installed.
- *2 : Displayed when Evernote for Mac 1.10 or later is installed.
- *3 : Displayed when ABBYY FineReader for ScanSnap is installed.
- *4 : Displayed when Cardiris is installed.
- *5 : Displayed when iPhoto 5 or later is installed.



- The output image may slightly differ from the original document in size.
- When Cardiris is active (Cardiris menu appears in the menu bar), scanning business
 cards by pressing the [Scan/Stop] button on the ScanSnap automatically starts the
 linkage between ScanSnap Manager and Cardiris.

For details about automatic linkage, refer to "Automatic Linkage with Applications" (page 255).



- You cannot start scanning when the Quick Menu is displayed. Either select an icon from the Quick Menu and finish the process, or close the Quick Menu before you perform the next scan.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.

■ Without Using the Quick Menu

The following explains the procedure for scanning without using the Quick Menu.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. Clear the [Use Quick Menu] checkbox.




3. Select a profile.

Select a profile from either of the following:

• [Profile] pop-up menu in the ScanSnap setup window



• Profile menu

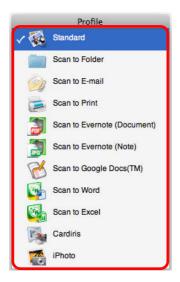

4. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

5. Press the [Scan/Stop] button on the ScanSnap to start scanning.



You can also start scanning from the ScanSnap Manager menu. For details, refer to "ScanSnap Manager Menu" (page 224).



- Do not connect and disconnect the ScanSnap and other USB devices during scanning.
- Do not close the feed guide during scanning.
- Do not switch users during scanning.
- ⇒ The [ScanSnap Manager Image scanning and file saving] window appears.



⇒ The [ScanSnap Manager - Image scanning and file saving] window then shows a new message indicating that the ScanSnap is ready for the next scan.





Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

6. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The application specified for the selected profile starts up.



- You can also finish scanning by clicking the [Finish Scanning] button in the [ScanSnap Manager - Image scanning and file saving] window.
- The [Scan/Stop] button on the ScanSnap flashes in blue throughout the scan.
- To select an application to link with ScanSnap Manager in the Quick Menu after scanning is completed, refer to "Using the Quick Menu" (page 228).
- When the [Set the marked text as a keyword for the PDF file] checkbox or the [Convert
 to Searchable PDF] checkbox is selected in the [File option] tab, the application starts
 after text recognition has been performed on the scanned image.
 A window showing the text recognition progress appears during text recognition
 process.
- By default, documents are scanned with the following settings: [Image quality:
 Automatic resolution] and [Color mode: Auto color detection].
 For details about how to change scan settings, refer to "How to Configure Scan Settings" (page 242).
- The application that starts up after scanning varies depending on what is selected in the [Application] tab in the ScanSnap setup window. For details, refer to the ScanSnap Manager Help.
- The output image may slightly differ from the original document in size.
- When Cardiris is active (Cardiris menu appears in the menu), scanning business cards by pressing the [Scan/Stop] button on the ScanSnap automatically starts the linkage between ScanSnap Manager and Cardiris.
 For details about automatic linkage, refer to "Automatic Linkage with Applications"


(page 255).

■ Stopping the Scan

You can stop a scan in progress in case you are scanning a wrong document or the wrong side of a document.

Stop the scan in the following procedure:

1. Click the [Stop] button in the [ScanSnap Manager - Image scanning and file saving] window which appears during scanning.

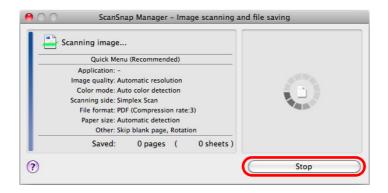



You can also stop the scan during scanning by pressing the [Scan/Stop] button on the ScanSnap.

Remove the document from the ScanSnap after stopping the scan. For details about how to remove documents, refer to "Troubleshooting" in the ScanSnap Manager Help.

⇒ The following message appears when the scanning stops.



2. Click the [Quit] button.

To continue scanning, click the [Continue Scanning] button or press the [Scan/Stop] button on the ScanSnap after loading another document in the ScanSnap.

■ Finishing ScanSnap Operation

Exiting ScanSnap Manager

Select [Quit] from the ScanSnap Manager menu.

Normally, you do not have to exit ScanSnap Manager.



You cannot use the ScanSnap after exiting ScanSnap Manager. Select [Applications] → [ScanSnap Manager] from Finder to start up ScanSnap Manager when you want to use the ScanSnap.

Disconnecting the ScanSnap

- 1. Close the feed guide to turn off the ScanSnap.
 - ⇒ The ScanSnap Manager icon in the Dock changes from 🥥 to 🥥.







2. Disconnect the USB cable from your computer.



The ScanSnap does not have a power switch and is turned ON/OFF in conjunction with the computer's power. The ScanSnap can also be automatically turned ON/OFF by opening or closing the feed guide.

Configuring ScanSnap Manager

This section explains how to set scan settings, how to add, change and delete profiles, automatic linkage with applications and windows displayed during scanning.

Quick Menu Settings

You can specify which applications to display or hide in the Quick Menu, as well as change the display order of the applications in the following procedure.

1. Click [in the Quick Menu.

For details about how to display the Quick Menu, refer to "Using the Quick Menu" (page 228).




⇒ The [Applications to Show/Hide] window appears.

2. Specify which applications to display in the Quick Menu.

Showing or Hiding Application Icons

Select the checkbox to display the application in the Quick Menu.

To display all the applications in the Quick Menu, click the [Restore Default] button.

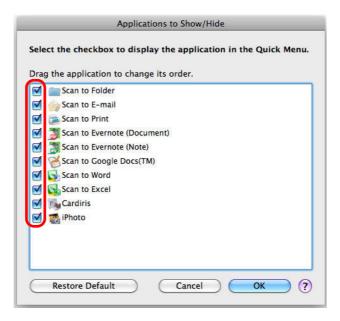


Display Order of Applications


Application icons are displayed in the Quick Menu in the same order as they are listed in the [Applications to Show/Hide] window.

Drag an application to change its order.

To restore the default display order of the applications displayed in the Quick Menu, click the [Restore Default] button.

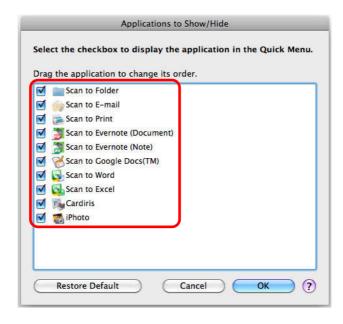

The applications are displayed in the order shown below in the Quick Menu and in the [Applications to Show/Hide] window.

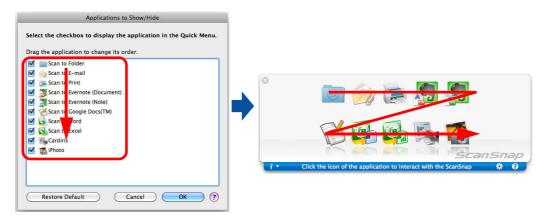

$\boldsymbol{3}_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ Click the [OK] button to close the [Applications to Hide/Show] window.

⇒ The applications to be displayed in the Quick Menu and their display order are set.

■ How to Configure Scan Settings

You can configure scan settings in the ScanSnap setup window depending on your intended use.

Configure the scan settings in the following procedure.

1. Select [Settings] from the ScanSnap setup window.

Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.



Outline view

You can also open the ScanSnap setup window by pressing simultaneously the [command (光)] and [S] keys on the keyboard. This operation is only enabled when ScanSnap Manager is active (when "ScanSnap Manager" is displayed in the menu bar).

2. Click the [Detail] button to switch to the detail view mode.

Using the Quick Menu



Detail view



Without Using the Quick Menu

Outline view




Detail view





The ScanSnap setup window retains the display status from the last time the ScanSnap was used. For example, if it was closed in detail view mode, the window is displayed in detail view mode next time you open it.

3. Set the scan settings in each tab.

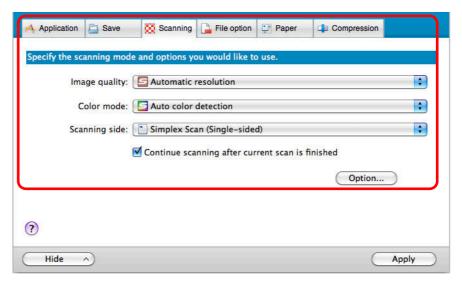

The following items can be configured in each tab:

For details, refer to the ScanSnap Manager Help.

- [Application] tab
 - Application to be used with the ScanSnap
- [Save] tab
 - Folder in which scanned image is saved
 - File name used for saving the scanned image

[Scanning] tab

Scanning
 (Which image quality to scan with, use color, gray or black & white, enable or disable [Setting for text only document], [Allow automatic blank page removal], [Correct skewed character strings automatically], [Allow automatic image rotation], and [Continue scanning after current scan is finished].)

[File option] tab

- File format of the scanned image (*.pdf, *.jpg)
- Whether to perform text recognition on a marked character string in the scanned image and add the character string as a keyword for the PDF file (Whether to perform text recognition only on the character strings in the first marked section or all marked sections to be added as keywords, and in which language to perform text recognition.)
- Whether to perform text recognition on character strings in the scanned image to convert the file to a searchable PDF file (Whether to convert the first page only or all pages, and in which language to perform text recognition.)
- Whether to create separate PDF files
 (Whether to include all scanned images in a single PDF file, or create PDF files, each of which including a preset number of pages)
- [Paper] tab
 - Paper size of documents (paper size selection)
- [Compression] tab
 - File size of the scanned image (compression rate)



Scan settings vary depending on whether or not you use the Quick Menu. For details about items that can be set, refer to "Setting Items With/Without the Quick Menu" (page 376).

4. Click the [Apply] button.

- ⇒ When you use the Quick Menu, scan settings for the [Customize] button are changed.
- ⇒ When you do not use the Quick Menu, scan settings for the currently selected profile are changed.




If you press the [Scan/Stop] button on the ScanSnap while the ScanSnap setup window is displayed, the ScanSnap setup window closes and scanning starts. Scan setting changes made up to this point are saved and documents are scanned by these settings. Note that when other windows are open, scanning does not start even if you press the [Scan/Stop] button on the ScanSnap unless open windows are closed.

■ Profile Management


You can manage up to 20 profiles.

You can select a profile in the [Profile] pop-up menu in the ScanSnap setup window or from the Profile menu.

• [Profile] pop-up menu

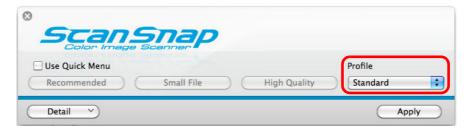

• Profile menu

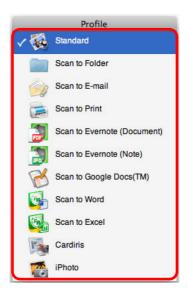

Once the frequently used scan settings are saved as profiles, you do not have to open the ScanSnap setup window to change scan settings every time you perform scanning. You can easily switch to an appropriate profile you want by just selecting it.

For details about how to add, change or delete profiles, refer to the following:

- To add new profiles (→ page 246)
- To change scan settings for profiles (→ page 249)
- To rename profiles (→ page 251)
- To delete profiles (→ page 253)

Adding Profiles

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).


⇒ The ScanSnap setup window appears.




Clear the [Use Quick Menu] checkbox if it is selected.

2. Configure the scan settings in each tab.

For details about each tab, refer to the ScanSnap Manager Help.

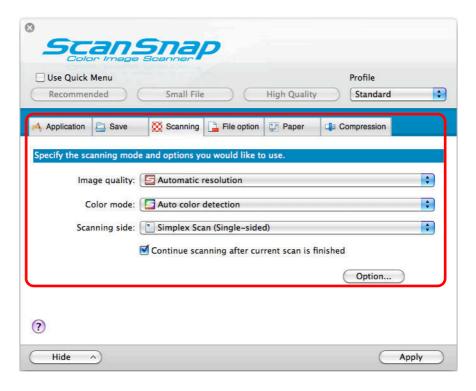

3. Select [Add Profile] from the [Profile] pop-up menu.

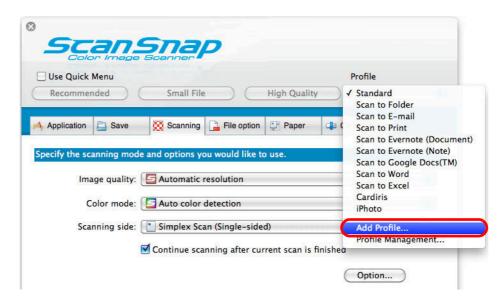


⇒ The [Add new profile] window appears.

4. Type in a new profile name and click the [OK] button.



⇒ The added profile appears in the [Profile] pop-up menu in the ScanSnap setup window.

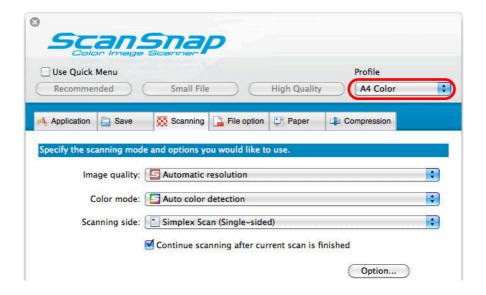


5. Click the [Apply] button.

6. Click the [] button in the upper left corner to close the ScanSnap setup window.



- Up to 20 profiles can be saved including the [Standard] profile.
- You can change the display order of profiles except for the [Standard] profile.
 - 1. Select [Profile Management] from the ScanSnap Manager menu or from the [Profile] pop-up menu in the ScanSnap setup window.
 - ⇒ The [ScanSnap Manager Profile Management] window appears.
 - 2. Drag the profile to move it to its desired position in the list.

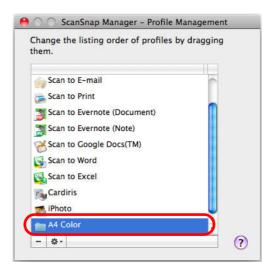

3. Click the [] button to close the [ScanSnap Manager - Profile Management] window.

Changing Profile Settings

1. Select [Settings] from the ScanSnap Manager menu.


For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.




Clear the [Use Quick Menu] checkbox if it is selected.

2. Select a profile from the [Profile] pop-up menu.

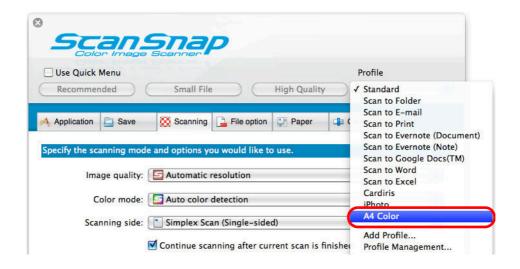

3. Change the scan settings in each tab.

For details about each tab, refer to the ScanSnap Manager Help.

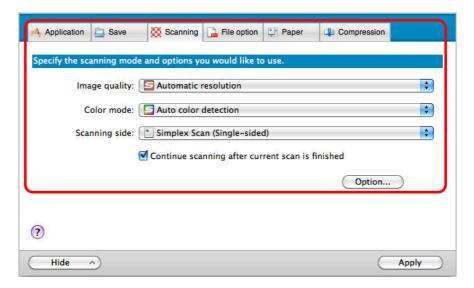

- **4.** When you finish changing the settings for the selected profile, click the [Apply] button.
- **5.** Click the [] button in the upper left corner to close the ScanSnap setup window.

Renaming Profiles

1. Select [Profile Management] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The [ScanSnap Manager - Profile Management] window appears.



- If you cannot select [Profile Management] in the ScanSnap Manager menu, clear the [Use Quick Menu] checkbox in the ScanSnap setup window.
- You can also display the [Profile Management] window by selecting [Profile Management] from the [Profile] pop-up menu in the ScanSnap setup window.

2. Select a profile, click the [*] button in the lower left corner, and select [Rename].




⇒ The name field of the profile becomes editable.



The [Standard] profile cannot be renamed.

3. Type in a new name.

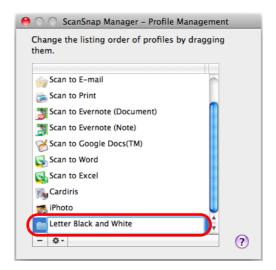

- ⇒ The profile is renamed.
- **4.** Click the [●] button to close the [ScanSnap Manager Profile Management] window.
 - ⇒ A message window appears.
- **5.** Click the [Apply] button.



Deleting Profiles


1. Select [Profile Management] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The [ScanSnap Manager - Profile Management] window appears.



- If you cannot select [Profile Management] in the ScanSnap Manager menu, clear the [Use Quick Menu] checkbox in the ScanSnap setup window.
- You can also display the [Profile Management] window by selecting [Profile Management] from the [Profile] pop-up menu in the ScanSnap setup window.
- 2. Select a profile and click the [-] button.

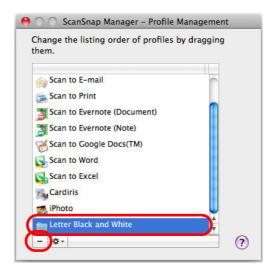




The [Standard] profile cannot be deleted.


- ⇒ The selected profile is deleted.
- 3. Click the [] button to close the [ScanSnap Manager Profile Management] window.
 - ⇒ A message window appears.

4. Click the [Apply] button.

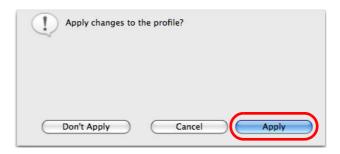

Automatic Linkage with Applications

When Cardiris is active (Cardiris menu appears in the menu bar), scanning business cards by pressing the [Scan/Stop] button on the ScanSnap automatically starts the linkage between ScanSnap Manager and Cardiris even when the Quick Menu is enabled. The scanned card image is displayed in Cardiris when automatic linkage is established.

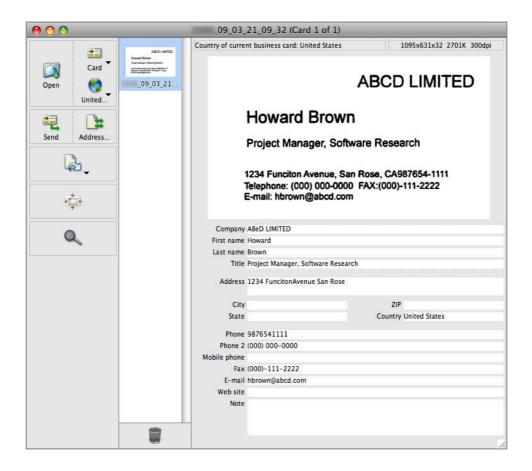

■ Showing the Scanning Progress

When scanning starts, the [ScanSnap Manager - Image scanning and file saving] window appears.

The [ScanSnap Manager - Image scanning and file saving] window consists of the following:

- Scan status
- Scan settings
- Save completed
- Preview

Also, note that you can stop scanning by clicking the [Stop] button in the [ScanSnap Manager - Image scanning and file saving] window, or by pressing the [Scan/Stop] button on the ScanSnap.

For details about how to stop scanning, refer to "Stopping the Scan" (page 237).



The following message appears in the [ScanSnap Manager - Image scanning and file saving] window after the document has been scanned. Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.



The [ScanSnap Manager - Image scanning and file saving] window closes when you press the [Scan/Stop] button on the ScanSnap or when you click the [Finish Scanning] button.



When the [Continue scanning after current scan is finished] checkbox in the [Scanning] tab in the ScanSnap setup window is cleared, the [ScanSnap Manager - Image scanning and file saving] window automatically closes after saving the scanned image.


Hiding the Scanning Progress Status

You can hide the [ScanSnap Manager - Image scanning and file saving] window in the following procedure.

1. Select [Help] → [Preferences] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The [ScanSnap Manager Preferences] window appears.
- 2. Clear the [Show the scan progress status (recommended)] checkbox.

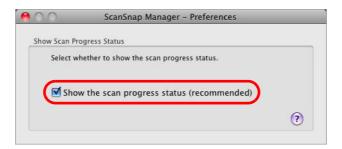

- 3. Click the [] button in the upper left corner to close the [ScanSnap Manager Preferences] window.
 - ⇒ The [ScanSnap Manager Image scanning and file saving] window is hidden from next scanning on.



When the scanning progress status window is not displayed, the current number of pages saved is indicated on the ScanSnap Manager icon (5) in the Dock.



Actions

The ScanSnap keeps the functions useful in your office work available as Actions. Actions allow you to:

Share the scanned document files with others.

You can save the scanned image directly in a shared folder on a network upon scanning, share the scanned image with others and inform them of the destination folder path by an e-mail message automatically created with the path stated.

- Send document files to participants of a meeting via e-mail.
 Send an e-mail message to others with the scanned image file attached.
- Use a printer rather than a copy machine to make copies of documents.
 Print the scanned image with a printer.
- Quote text from your paper documents when you do not want to type it.
 Have the scanned image text recognized and converted into a Word or Excel document.
- File and organize a large number of business cards.


 Store and manage business cards in Cardiris.
- Convert catalogs and pamphlets into digital data and save them.
 Store and manage scanned images of catalogs and pamphlets directly in iPhoto.
- Manage scanned documents through linkage with Evernote.
 Save PDF files in Evernote and access them easily anytime, anywhere.
- Manage handwritten notes through linkage with Evernote.
 Save JPEG files in Evernote and access them easily anytime, anywhere.
- Manage scanned documents through linkage with Google Docs.
 Save PDF files in Google Docs and access them easily anytime, anywhere.

The following are explanations on how to use Actions.

Saving Data in a Specified Folder

This section explains how to save the scanned image file in a specified folder.

You can save the scanned image file in a shared folder on the network and share it with others. In addition, you can inform others of the destination folder path by an e-mail message automatically created with the path stated.

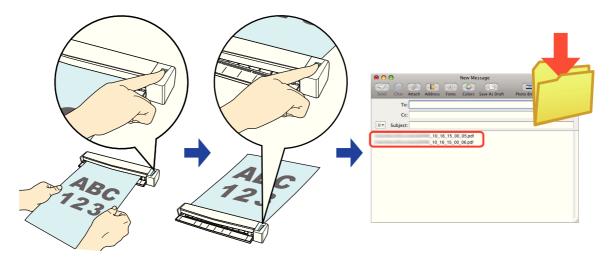



The e-mail program configured in Mail when you select [Mail] menu \rightarrow [Preferences] \rightarrow [General] button \rightarrow [Default email reader] is used as the e-mail program to link with ScanSnap Manager. The following e-mail programs are supported:

- Mai
- Entourage 2004 for Mac
- Entourage 2008 for Mac

For details about the procedure to scan and save the scanned image in a specified folder using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 260)
- Without Using the Quick Menu (→ page 263)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228)

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- **4.** Click the [Scan to Folder] icon.




⇒ The [Scan to Folder] window appears.

5. Check the scanned image in the preview area.


In the [Scan to Folder] window, you can change files names, destination folders, and specify whether to state a path to a destination folder in an e-mail message to notify others.

For details about the [Scan to Folder] window, refer to the ScanSnap Manager Help.

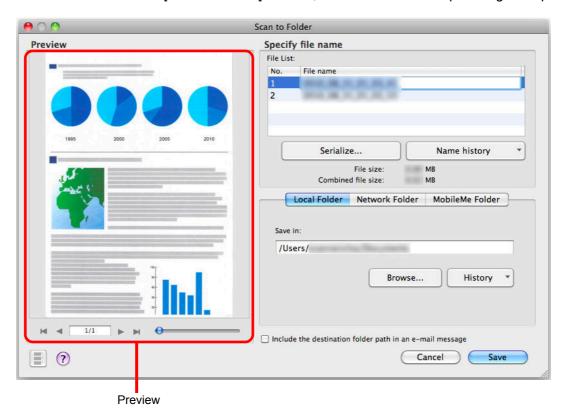

6. Click the [Save] button.

- ⇒ The scanned image file is saved in the specified folder.
- ⇒ When you select the [State a path to a destination folder in an E-mail message] checkbox in the [Scan to Folder] window, a new message window appears listing the destination folder path where the file is saved.

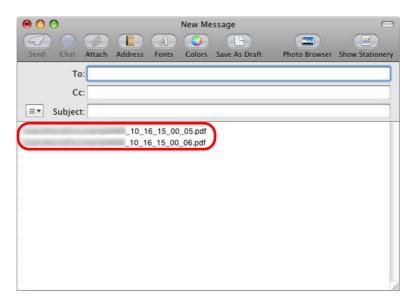



- You cannot start scanning after the Quick Menu is displayed and before the [Scan to Folder] window is closed. Close the [Scan to Folder] window before scanning the next document.
- Do not move, delete, or rename scanned image in other applications after the Quick Menu is displayed and before the [Scan to Folder] window is closed.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The ScanSnap setup window appears.
- 2. In the [Application] pop-up menu in the [Application] tab, select [Scan to Folder].

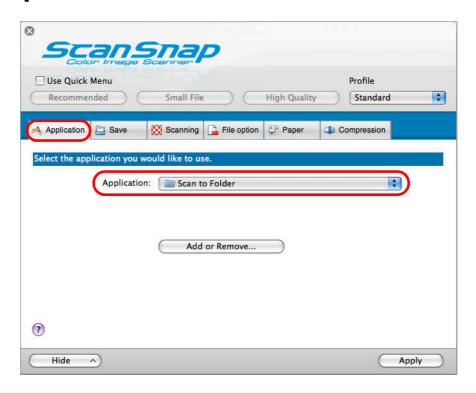



ScanSnap Manager can also link with [Scan to Folder] when you select:

- [Scan to Folder] from the [Profile] pop-up menu of the ScanSnap setup window
- [Scan to Folder] from the Profile menu
- 3. Click the [Apply] button.
- 4. Click the [] button in the upper left corner to close the ScanSnap setup window.

5. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [Scan to Folder] window appears.

8. Check the scanned image in the preview area.


In the [Scan to Folder] window, you can change files names, destination folders, and specify whether to state a path to a destination folder in an e-mail message to notify others.

For details about the [Scan to Folder] window, refer to the ScanSnap Manager Help.

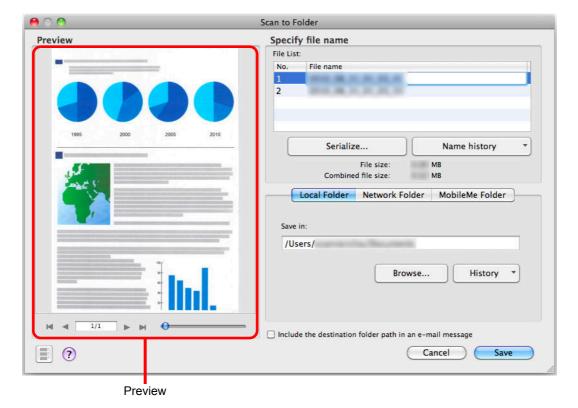

9. Click the [Save] button.

- ⇒ The scanned image file is saved in the specified folder.
- ⇒ When you select the [State a path to a destination folder in an E-mail message] checkbox in the [Scan to Folder] window, a new message window appears listing the destination folder path where the file is saved.

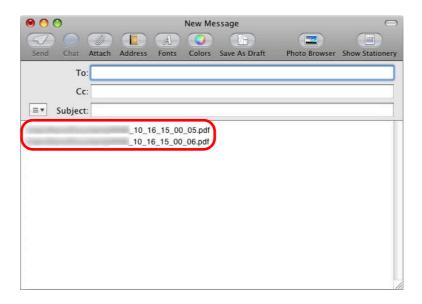




- You cannot start scanning when the [Scan to Folder] window is displayed. Close the [Scan to Folder] window before scanning the next document.
- Do not move, delete or rename the scanned image in other applications when the [Scan to Folder] window is displayed.

■ Attaching Files to E-Mail

This section explains how to attach the scanned image file to an e-mail message.

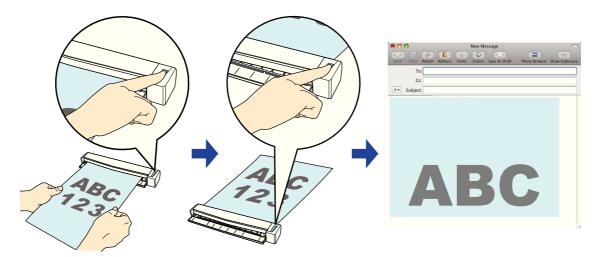



The e-mail program configured in Mail when you select [Mail] menu \rightarrow [Preferences] \rightarrow [General] button \rightarrow [Default email reader] is used as the e-mail program to link with ScanSnap Manager. The following e-mail programs are supported:

- Mai
- Entourage 2004 for Mac
- Entourage 2008 for Mac

For details about the procedure to scan and attach the scanned image to an e-mail message using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 267)
- Without Using the Quick Menu (→ page 271)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).



Up to ten files can be attached to an e-mail message.

When you scan more than one document with the scan settings shown below, multiple files are created. Pay attention to the number of documents to scan:

- File format: JPEG (*.jpg)
- [Generate one PDF file per (n) page(s)] checkbox is selected
- 2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to E-mail] (If you do not want to change any settings, go to step 5.).
 - 1. Click [Settings] under the [Scan to E-mail] icon.



⇒The [Scan to E-mail - Options] window appears.

 Change the settings.
 For details about the [Scan to E-mail - Options] window, refer to the ScanSnap Manager Help.

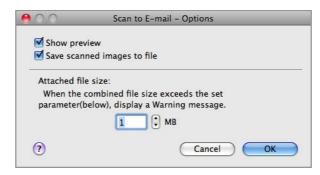

3. Click the [OK] button to close the [Scan to E-mail - Options] window.


5. Click the [Scan to E-mail] icon.



⇒ The [Scan to E-mail] window appears.
If you clear the [Show preview] checkbox of the [Scan to E-mail - Options] window in step 4., the [Scan to E-mail] window is not displayed. Instead, a new message window appears with the file(s) attached.


6. Check the scanned image in the preview area.

In the [Scan to E-mail] window, you can rename the file and decide whether to save the scanned image in the folder specified for [Image saving folder] after sending it by e-mail. For details about the [Scan to E-mail] window, refer to the ScanSnap Manager Help.

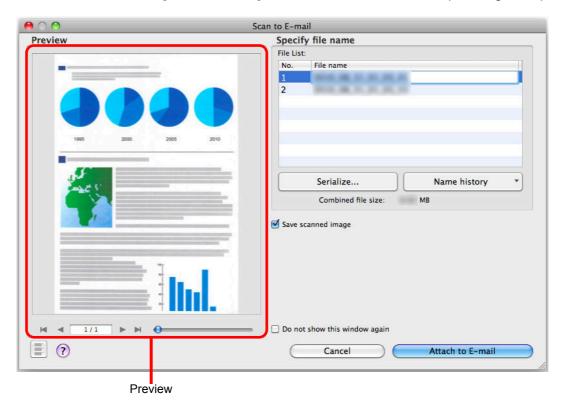

7. Click the [Attach to E-mail] button.

⇒ An e-mail message window appears with the file attached.

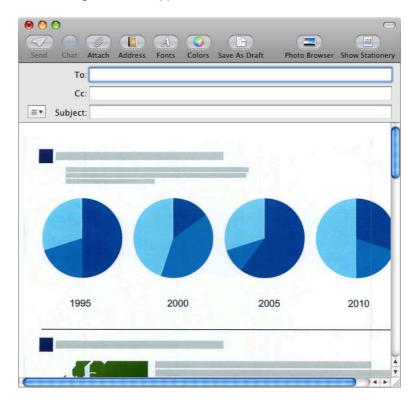



- You cannot start scanning after the Quick Menu is displayed and before the [Scan to E-mail] window is closed. Close the [Scan to E-mail] window before scanning the next document.
- Do not move, delete, or rename scanned image in other applications after the Quick Menu is displayed and before the [Scan to E-mail] window is closed.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. In the [Application] pop-up menu in the [Application] tab, select [Scan to E-mail].

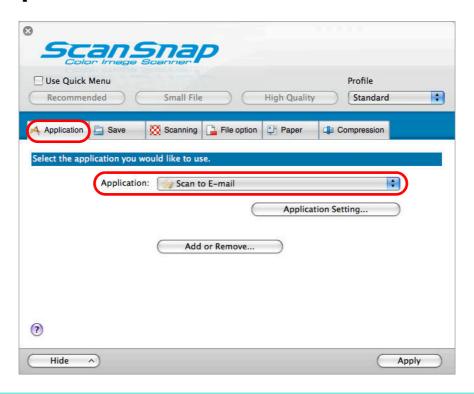





ScanSnap Manager can also link with [Scan to E-mail] when you select:

- [Scan to E-mail] from the [Profile] pop-up menu of the ScanSnap setup window
- [Scan to E-mail] from the Profile menu

- 3. Change settings for the [Scan to E-mail] (If you do not want to change any settings, go to step 4.).
 - 1. Click the [Application Setting] button.

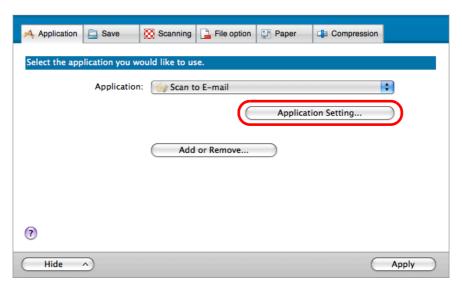

- ⇒The [Scan to E-mail Options] window appears.
- Change the settings.
 For details about the [Scan to E-mail Options] window, refer to the ScanSnap Manager Help.

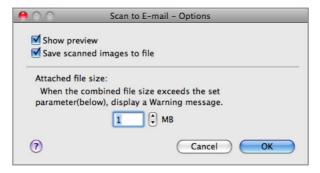

- 3. Click the [OK] button to close the [Scan to E-mail Options] window.
- 4. Click the [Apply] button in the ScanSnap setup window.
- **5.** Click the [] button in the upper left corner to close the ScanSnap setup window.

6. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).



Up to ten files can be attached to an e-mail message.

When you scan more than one document with the scan settings shown below, multiple files are created. Pay attention to the number of documents to scan:

- File format: JPEG (*.jpg)
- [Generate one PDF file per (n) page(s)] checkbox is selected

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [Scan to E-mail] window appears.
If you clear the [Show preview] checkbox of the [Scan to E-mail - Options] window in step 3., the [Scan to E-mail] window is not displayed. Instead, a new message window appears with the file(s) attached.


9. Check the scanned image in the preview area.

In the [Scan to E-mail] window, you can rename the file and decide whether to save the scanned image in the folder specified for [Image saving folder] after sending it by e-mail. For details about the [Scan to E-mail] window, refer to the ScanSnap Manager Help.

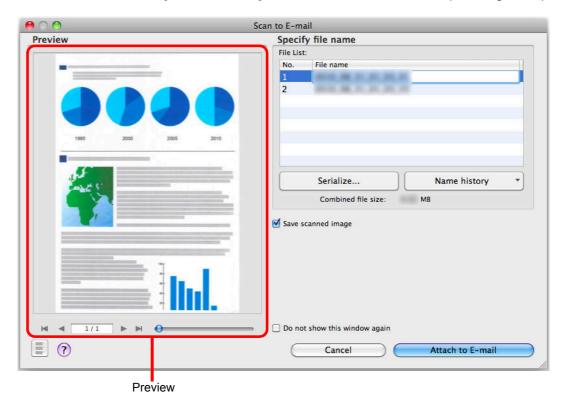

10. Click the [Attach to E-mail] button.

⇒ An e-mail message window appears with the file attached.

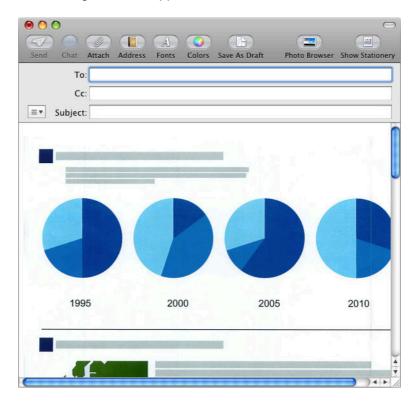




- You cannot start scanning when the [Scan to E-mail] window is displayed. Close the [Scan to E-mail] window before scanning the next document.
- Do not move, delete or rename the scanned image in other applications when the [Scan to E-mail] window is displayed.

■ Using the ScanSnap as a Copy Machine

This section explains how to print the scanned image with a printer.

When a printer links with ScanSnap Manager, the ScanSnap can be used as a copy machine.

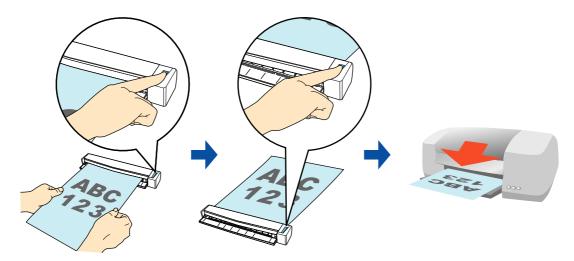



- Note that shadows around the edges of the document may appear as lines on the generated scanned image, depending on the scanning method and paper conditions. If you print such an image, the printed image will also have lines appearing in it.
- When you perform a borderless printing, save the image data to file first, and then print it by using Preview, Adobe Acrobat or Adobe Reader.

For details about the procedure to scan and print the scanned image using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 277)
- Without Using the Quick Menu (→ page 280)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228)

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to Print] (If you do not want to change any settings, go to step 5.).
 - 1. Click [Settings] under the [Scan to Print] icon.



- ⇒The [Scan to Print Options] window appears.
- Change the settings.
 For details about the [Scan to Print Options] window, refer to the ScanSnap Manager Help.

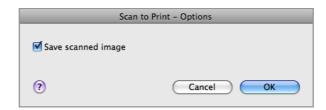

3. Click the [OK] button to close the [Scan to Print - Options] window.

5. Click the [Scan to Print] icon.




⇒ The [Print] window appears.

6. Configure print setup options in the [Print] window.

In the [Print] window, you can specify the printer to be used, the number of copies, and size and position of the scanned image to be printed, and whether to save the scanned image in the folder specified for [Image saving folder].

For details about the [Print] window, refer to the ScanSnap Manager Help.

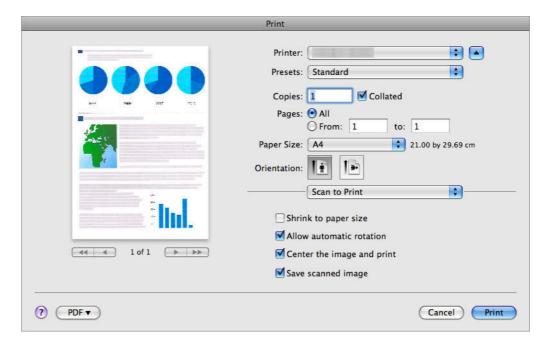

7. Click the [Print] button.

⇒ The scanned image is printed.



- You cannot start scanning after the Quick Menu is displayed and before the [Print] window is closed. Close the [Print] window before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications after the Quick Menu is displayed and before the [Print] window is closed.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. From the [Application] pop-up menu in the [Application] tab, select [Scan to Print].

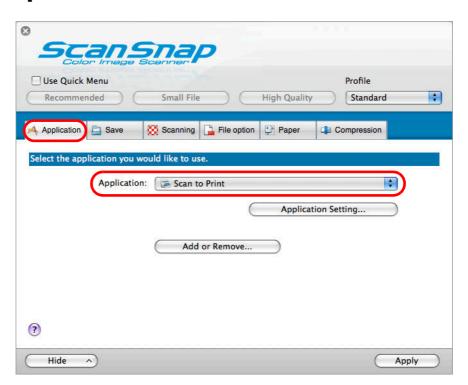





ScanSnap Manager can also link with [Scan to Print] when you select:

- [Scan to Print] from the [Profile] pop-up menu of the ScanSnap setup window
- [Scan to Print] from the Profile menu

- 3. Change settings for the [Scan to Print] (If you do not want to change any settings, go to step 4.).
 - 1. Click the [Application Setting] button.

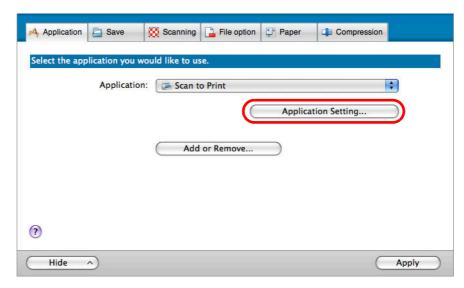

- ⇒The [Scan to Print Options] window appears.
- Change the settings.For details about the [Scan to Print Options] window, refer to the ScanSnap Manager Help.

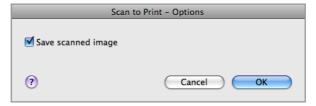

- 3. Click the [OK] button to close the [Scan to Print Options] window.
- 4. Click the [Apply] button in the ScanSnap setup window.
- 5. Click the [] button in the upper left corner to close the ScanSnap setup window.
- **6.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.


8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [Print] window appears.

9. Configure print setup options in the [Print] window.

In the [Print] window, you can specify the printer to be used, the number of copies, and size and position of the scanned image to be printed, and whether to save the scanned image in the folder specified for [Image saving folder].

For details about the [Print] window, refer to the ScanSnap Manager Help.

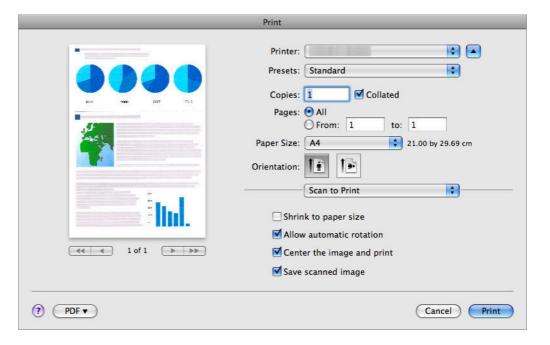

10.Click the [Print] button.


⇒ The scanned image is printed.



- You cannot start scanning when the [Print] window is displayed. Close the [Print] window before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications while the [Print] window is displayed.

■ Converting into Word/Excel Documents

This section explains how to convert the scanned image into Word/Excel files using ABBYY FineReader for ScanSnap bundled with the ScanSnap.

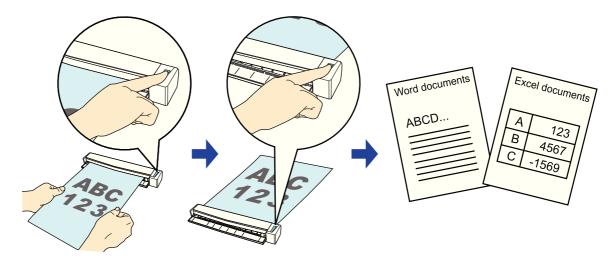



- The following applications must be installed in your computer in order to perform text-recognition:
 - ABBYY FineReader for ScanSnap (bundled with the ScanSnap)
 - Word
 - Excel
- You cannot view the documents converted into Word and Excel files unless these
 applications are installed and you completed the user registration to use them. Install these
 applications and complete the user registration to view the converted documents on your
 computer.
- If Word is not installed in your computer, text-only results of converted documents to Word will be displayed in TextEdit. If Excel is not installed in your computer, you cannot view documents converted to Excel.
- ABBYY FineReader for ScanSnap can be used with the following versions of Word and Excel:
 - Word: 2008 / 2004
 - Excel: 2008 / 2004
- Do not use this function while you are working in Word or Excel. In addition, do not use Word
 or Excel while this function is being executed. If you use either Word or Excel together with
 this function, the conversion result is saved to a file, but the conversion result may not be
 displayed even if the [Open file after recognition] checkbox is selected on the [FineReader for
 ScanSnap Preferences] window.



About the OCR function of ABBYY FineReader for ScanSnap

- ABBYY FineReader for ScanSnap is an application used exclusively with the ScanSnap. This
 program can perform text recognition only for PDF files created by using the ScanSnap. It
 cannot perform text recognition for files created using Adobe Acrobat or other applications.
- The optical character recognition program has the following features. Before performing text recognition, check whether the documents you want to convert are suitable for conversion according to the following guidelines:

Application	Suitable for conversion	Not suitable for conversion
Scan to Word	Documents with simple lay- outs consisting of single or double columns	Documents with complex layouts containing a mixture of diagrams, tables, and text (e.g. brochures, magazines, and newspapers)
	Word Document	
Scan to Excel	Documents containing simple tables with no cells merged	Documents containing; - tables with no solid border lines - tables with complicated cell formats - complex tables containing sub-tables - diagrams, graphs, photos and/or vertical text (Note that documents containing diagrams, graphs or vertical text will not be reproduced.)
	Excel Document	Title 1



- The following parameters may not be reproduced as they are in the original document. It is recommended that the converted documents be opened with Word or Excel to correct or edit misrecognized characters:
 - Character font and size
 - Character and line spacing
 - Underlined, bold and italic characters
 - Superscript/subscript
- The following types of documents (characters) may not be recognized correctly.
 Better results in text recognition may be achieved by changing the color mode or increasing the resolution:
 - Documents including handwritten characters
 - Documents containing small characters (smaller than 10 points)
 - Skewed documents
 - Documents written in languages other than the specified language
 - Documents with characters on an unevenly colored background e.g. Shaded characters
 - Documents with many decorated characters
 e.g. Decorated characters (embossed/outlined)
 - Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
 - Documents with many characters contacting underlines or borders
 - Documents of complex layouts as well as documents including unreadable characters (It may take extra time to process text recognition for these documents.)
- When converting to Excel files, if the recognition result exceeds 65,536 lines, no more results are saved.
- When converting to Excel files, information about the layout of the entire document, diagrams, and length/width of graphs and tables is not duplicated. Only tables and character strings are reproduced.
- Documents upside down or in landscape orientation cannot be recognized properly. Select the [Allow automatic image rotation] checkbox (page 334), or load documents face down in portrait orientation.



You can change the settings applied during conversion to Word or Excel documents in the ABBYY FineReader for ScanSnap setup window.

Select the [Applications] \rightarrow [ABBYY FineReader for ScanSnap] \rightarrow [FineReader for ScanSnap Preferences]. Then, select [FineReader for ScanSnap] menu \rightarrow [Preferences] to display the following window.



For details about how to configure settings, refer to the ABBYY FineReader for ScanSnap Help.

For details about the procedure to scan and convert the scanned image into Word/Excel files using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 287)
- Without Using the Quick Menu (→ page 289)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



- It is recommended that you select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup window.
- Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The Quick Menu appears.


4. Click the [Scan to Word] or [Scan to Excel] icon.





- When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab in the ScanSnap setup window, scanned data cannot be converted into a Word or Excel file. If you click either of these icons, an error message appears.
- You cannot start scanning when the Quick Menu is displayed. Wait until the conversion is over to scan another document.
- Do not move, delete or rename the scanned image in other applications when the Quick Menu is displayed.

⇒ The following window appears and conversion is started.

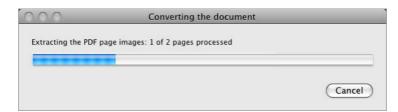

⇒ When the conversion is completed, Word or Excel starts up, displaying the converted document in the applicable format.



The Word or Excel file is saved in one of the following formats:

- Scan to Word: RTF format (.rtf)
- Scan to Excel: XLS format (.xls)

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The ScanSnap setup window appears.
- 2. In the [Application] pop-up menu in the [Application] tab, select [Scan to Word] or [Scan to Excel].

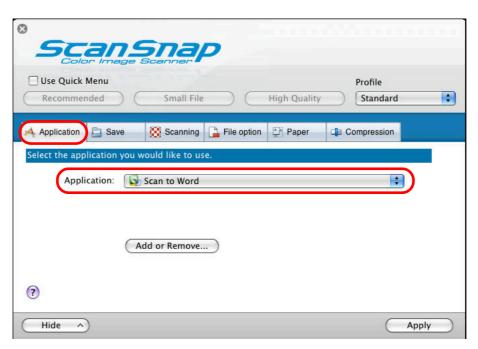



- It is recommended to select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab in the ScanSnap setup window.
- ScanSnap Manager can also link with [Scan to Word] or [Scan to Excel] when you select:
 - [Scan to Word] or [Scan to Excel] from the [Profile] pop-up menu of the ScanSnap setup window
 - [Scan to Word] or [Scan to Excel] from the Profile menu
- 3. Click the [Apply] button in the ScanSnap setup window.

- 4. Click the [] button in the upper left corner to close the ScanSnap setup window.
- **5.** Load the document in the ScanSnap.


For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The following window appears and image data conversion to Word or Excel files starts.

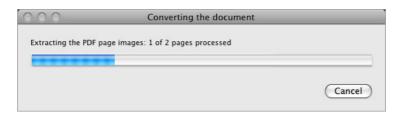

⇒ When the conversion is completed, Word or Excel starts up and the conversion result is displayed.




The Word or Excel file is saved in one of the following formats:

- Scan to Word: RTF format (.rtf)
- Scan to Excel: XLS format (.xls)

Storing Business Cards in Cardiris

This section explains how to store business card images in Cardiris.

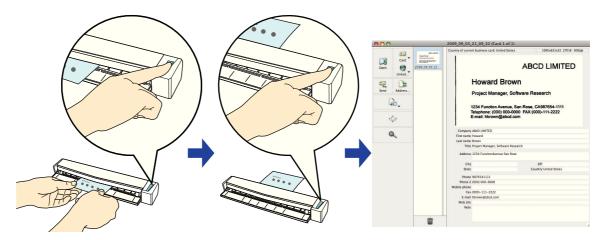



Data of up to 250 pages, including blank pages, can be stored in Cardiris at once.

For details about the procedure to scan and manage business cards in Cardiris using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 292)
- Without Using the Quick Menu (→ page 295)


Using the Quick Menu




To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Insert the business card straight into the feeding section of the ScanSnap, with the scanning side facing up.

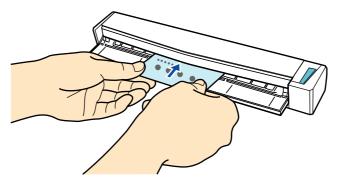

⇒ Business card is pulled in until it is set inside the ScanSnap.

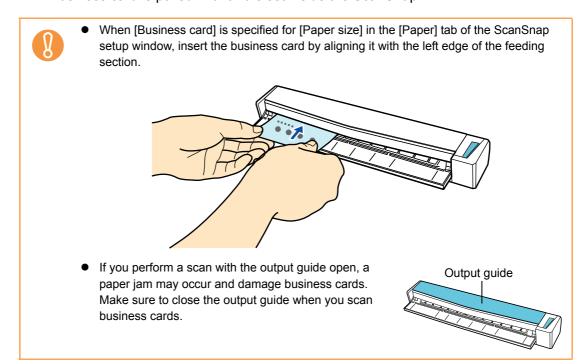

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



It is recommended to select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab in the ScanSnap setup window.



Load another business card in the ScanSnap when you want to scan multiple business cards. Scanning starts automatically when a business card is loaded.

3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The Quick Menu appears.


4. Click the [Cardiris] button.





- You cannot start scanning when the Quick Menu is displayed. Wait until ScanSnap Manager links with Cardiris before scanning another document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ Cardiris starts up and the Cardiris window appears.

5. Check the scanned card image and the text recognition result.

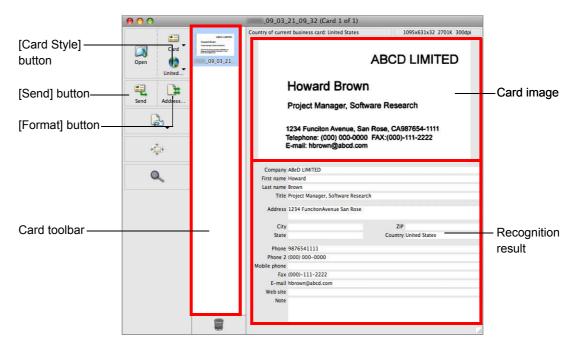

The current card image is displayed on the top-right.

A list of already scanned business cards is displayed in the card toolbar.

The recognition result is displayed under the card image.



Do not exit Cardiris while setup or message window is open.



- To recognize a business card of a different language from the one currently set in Cardiris, click the [Card Style] button and change the country setting.
- For details about the functions of Cardiris and how to use it, refer to Cardiris GETTING STARTED and Cardiris Help.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. In the [Application] pop-up menu in the [Application] tab, select [Cardiris].

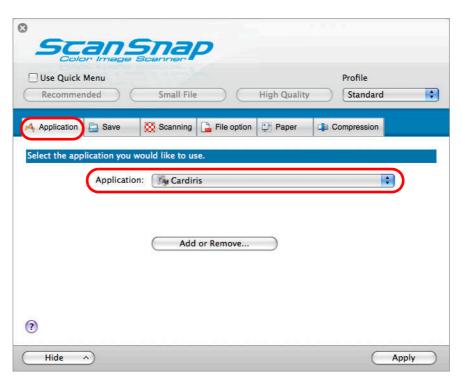




It is recommended that you select [Automatic resolution] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup window.




ScanSnap Manager can also link with [Cardiris] when you select:

- [Cardiris] from the [Profile] pop-up menu of the ScanSnap setup window
- [Cardiris] from the Profile menu

- 3. Click the [Apply] button.
- **4.** Click the [] button in the upper left corner to close the ScanSnap setup window.
- **5.** Insert the business card straight into the feeding section of the ScanSnap, with the scanning side facing up.

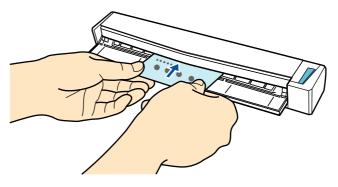

⇒ Business card is pulled in until it is set inside the ScanSnap.

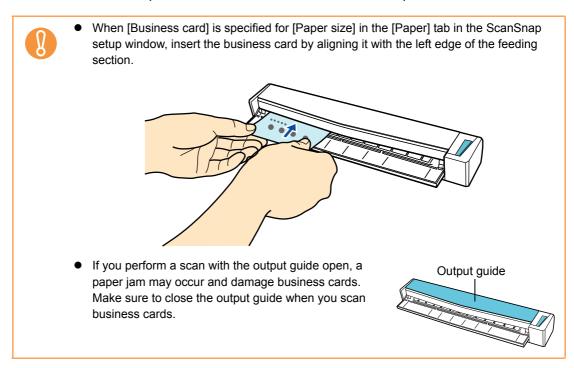

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another business card in the ScanSnap when you want to scan multiple business cards. Scanning starts automatically when a business card is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Cardiris starts up and the Cardiris window appears.

8. Check the scanned card image and the text recognition result.

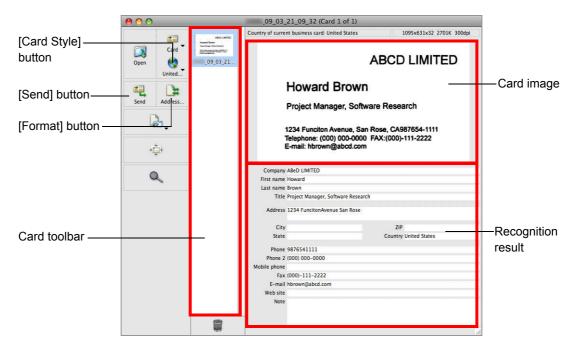

The current card image is displayed on the top-right.

A list of already scanned business cards is displayed in the card toolbar.

The recognition result is displayed under the card image.



Do not exit Cardiris while setup or message window is open.



- To recognize a business card of a different language from the one currently set in Cardiris, click the [Card Style] button and change the country setting.
- For details about functions of Cardiris and how to use it, refer to Cardiris GETTING STARTED and Cardiris Help.

Using the Address Book in Cardiris

To register the recognized characters of a scanned business card in the Address Book, perform the following procedure.



Do not exit Cardiris when setup or message window is open.

- Click the [Format] button or select [Settings] → [Output Format] on the menu bar.
 - ⇒ The following window appears.




2. Select [Address Book] in the [Format] pop-up menu.



3. Click the [OK] button.

4. Click the [Send] button or select [Process] → [Send] on the menu bar.

⇒ The Address Book window appears, and the recognized characters of all scanned business cards in the card toolbar are registered in the Address Book.

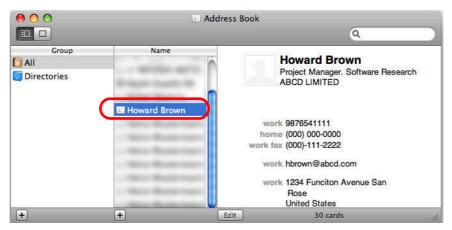


5. Select [Cardiris] → [Quit Cardiris] on the menu bar to quit Cardiris.



- The recognition result of scanned business cards can be output in text or vCard format.
- For more details, refer to Cardiris GETTING STARTED and Cardiris Help.

■ Storing Scanned Images in iPhoto

This section explains how to store the scanned image in iPhoto.

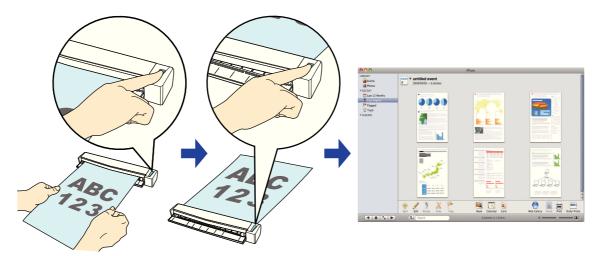

For details about the procedure to scan and store the scanned image in iPhoto using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 301)
- Without Using the Quick Menu (→ page 303)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For more details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Click the [iPhoto] button.





- You cannot start scanning when the Quick Menu is displayed. Wait until ScanSnap Manager links with iPhoto before scanning another document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ The [iPhoto] window appears.

5. Check the scanned image stored in iPhoto.





The scanned image is also saved in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup window at the same time when it is saved to iPhoto. Delete this file if unnecessary.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.

For more details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The ScanSnap setup window appears.
- 2. From the [Application] pop-up menu in the [Application] tab, select [iPhoto].

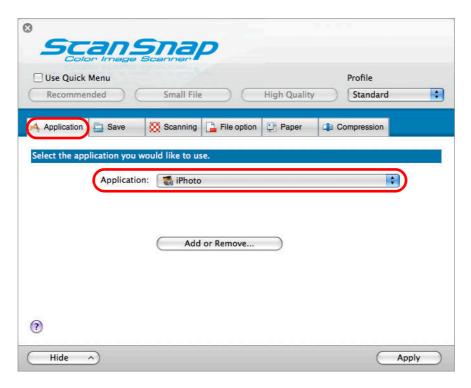



ScanSnap Manager can also link with [iPhoto] when you select:

- [iPhoto] from the [Profile] pop-up menu of the ScanSnap setup window
- [iPhoto] from the Profile menu
- 3. Click the [Apply] button.
- 4. Click the [] button in the upper left corner to close the ScanSnap setup window.

5. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The [iPhoto] window appears.

8. Check the scanned image stored in iPhoto.

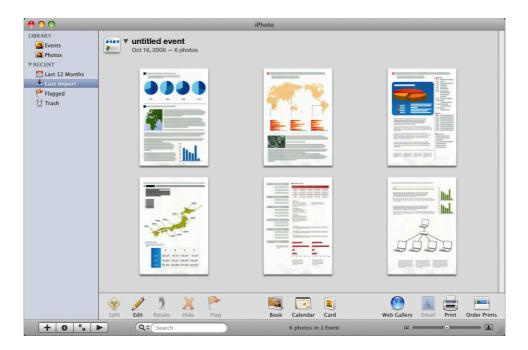




The scanned image is also saved in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup window at the same time when it is saved to iPhoto. Delete this file if unnecessary.

Saving Documents to Evernote

This section explains how to save the scanned image as a PDF file to Evernote.

When you save the scanned image to Evernote after converting it into a searchable PDF, the PDF file becomes searchable in Evernote.

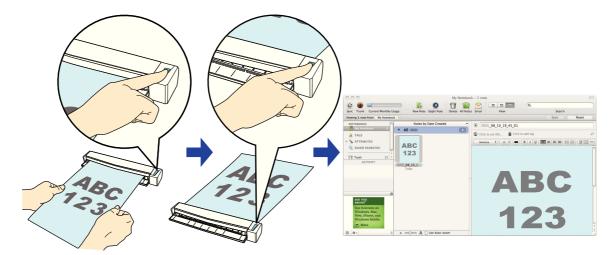



- You first need to create a notebook in Evernote for Mac to save a file to Evernote.
- in Evernote [Preferences] window beforehand to prevent new notes appearing on the screen when you scan documents consecutively. The screenshot on the left is from Evernote for Mac 1.10.1. Clear the [Bring the new note to the front] checkbox in this window.

Disable [Bring the new note to the front]

The actual window and the contents may differ depending on the Evernote version you are using.



For details about the procedure to scan and save the scanned image to Evernote using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 306)
- Without Using the Quick Menu (→ page 309)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for the [Scan to Evernote (Document)] (If you do not want to change any settings, go to step 5.).
 - 1. Click [Settings] under the [Scan to Evernote (Document)] icon.



⇒ The [Scan to Evernote (Document) - Options] window appears.

 Change the settings.
 For details about the [Scan to Evernote (Document) - Options] window, refer to the ScanSnap Manager Help.

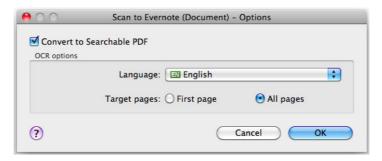

3. Click the [OK] button to close the [Scan to Evernote (Document) - Options] window.

5. Click the [Scan to Evernote (Document)] icon.






- You cannot start scanning when the Quick Menu is displayed. Save the PDF file to Evernote before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.
- ⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup window, a PDF file is created from the JPEG file.


 A separate PDF file created for each JPEG file.

The following window is displayed when the PDF file is being created.

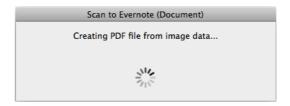

⇒ If the [Convert to Searchable PDF] checkbox is selected in step 4., text recognition is performed according to the [OCR options] settings in the [Scan to Evernote - Options] window.


The following window is displayed during text recognition.

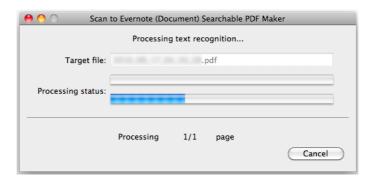



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on all pages, including pages containing text on which text recognition has already been performed.

⇒ Evernote for Mac starts up, and the PDF file is saved to Evernote.

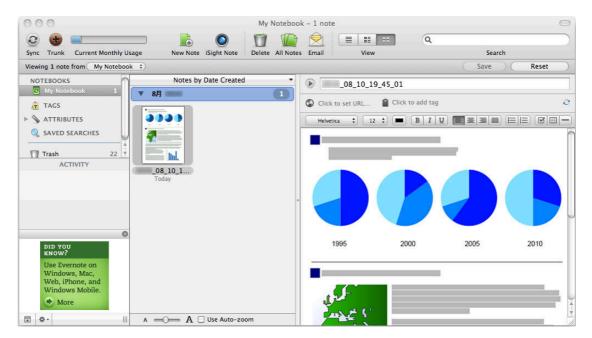



The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup window even after the scanned image is saved to Evernote. Delete this file if unnecessary.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The ScanSnap setup window appears.
- 2. In the [Application] pop-up menu in the [Application] tab, select [Scan to Evernote (Document)].

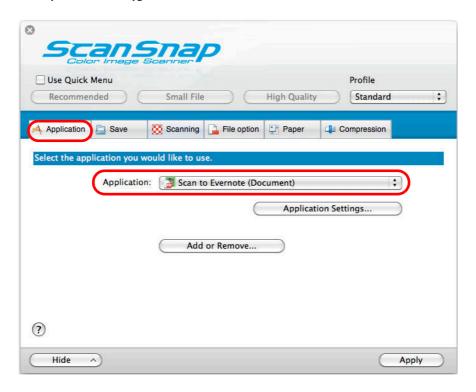





ScanSnap Manager can also link with [Scan to Evernote (Document)] when you select:

- [Scan to Evernote (Document)] from the [Profile] pop-up menu of the ScanSnap setup window
- [Scan to Evernote (Document)] from the Profile menu

- 3. Change settings for the [Scan to Evernote (Document)] (If you do not want to change any settings, go to step 4.).
 - 1. Click the [Application Setting] button.

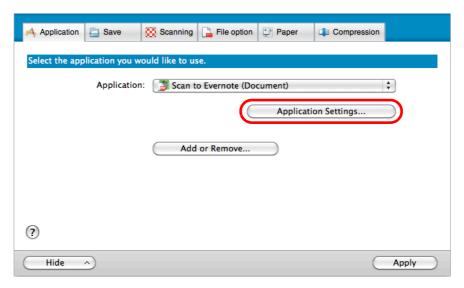

- ⇒ The [Scan to Evernote (Document) Options] window appears.
- Change the settings.
 For details about the [Scan to Evernote (Document) Options] window, refer to the ScanSnap Manager Help.

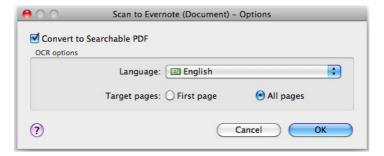

- 3. Click the [OK] button to close the [Scan to Evernote (Document) Options] window.
- 4. Click the [Apply] button.
- **5.** Click the [] button in the upper left corner to close the ScanSnap setup window.
- **6.** Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.


⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup window, a PDF file is created from the JPEG file.
A separate PDF file is created for each JPEG file.

The following window is displayed when the PDF file is being created.

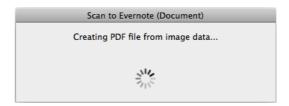


⇒ If the [Convert to Searchable PDF] checkbox is selected in step 3., text recognition is performed according to the [OCR options] settings in the [Scan to Evernote - Options] window.

The following window is displayed during text recognition.

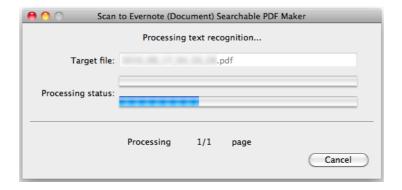



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on all pages, including pages containing text on which text recognition has already been performed.

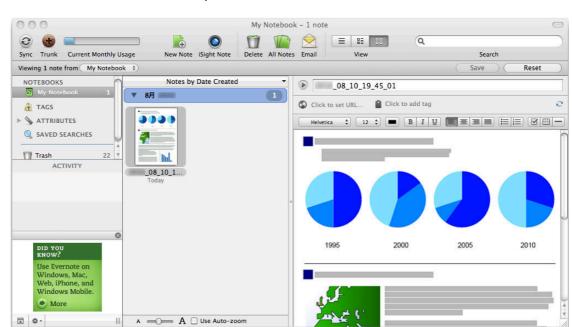


⇒ Evernote for Mac starts up, and the PDF file is saved to Evernote.



The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup window even after the scanned image is saved to Evernote. Delete this file if unnecessary.

Saving Handwritten Notes to Evernote

This section explains how to save the scanned image as a JPEG file to Evernote. When you save a JPEG file to Evernote, text recognition is performed on all text, including handwritten characters, and the file becomes searchable in Evernote.

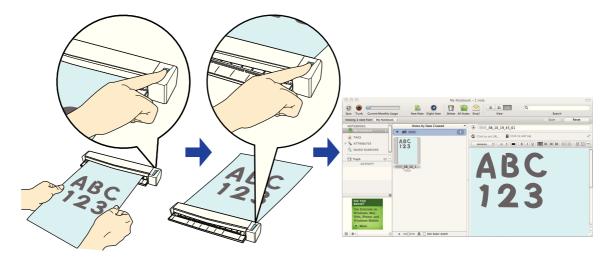



- You first need to create a notebook in Evernote for Mac to save a file to Evernote.
- Disable [Bring the new note to the front] in Evernote [Preferences] window beforehand to prevent new notes appearing on the screen when you scan more documents consecutively.

The screenshot on the left is from Evernote for Mac 1.10.1. Clear the [Bring the new note to the front] checkbox in this window.

The actual window and the contents may differ depending on the Evernote version you are using.



For details about the procedure to scan and send the scanned image to Evernote using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 314)
- Without Using the Quick Menu (→ page 316)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Click the [Scan to Evernote (Note)] icon.







- You cannot start scanning when the Quick Menu is displayed. Save the JPEG file to Evernote before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.

⇒ When you perform a scan with [PDF(*.pdf)] selected for [File format] in the [File option] tab of the ScanSnap setup window, a JPEG file is created from the PDF file.
A separate JPEG file is created for each page of the PDF file.

The following window is displayed when the JPEG file is being created.

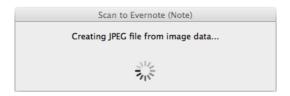

⇒ Evernote for Mac starts up, and the JPEG file is saved to Evernote.

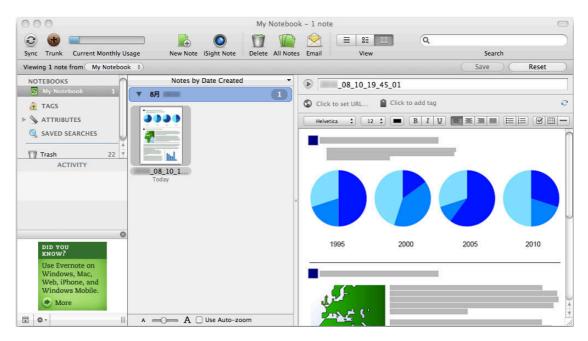



- When you select [PDF (*.pdf)] for [File format] in the [File option] tab of the ScanSnap setup window, a four-digit serial number is automatically added to the name of the file which is saved to Evernote.
 - e.g. When the file name is [ScanSnap], the file is saved as: ScanSnap_0001, ScanSnap_0002, ScanSnap_0003...
- The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup window even after the scanned image is saved to Evernote. Delete this file if unnecessary.

Without using the Quick Menu




To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The ScanSnap setup window appears.
- 2. In the [Application] pop-up menu in the [Application] tab, select [Scan to Evernote (Note)].

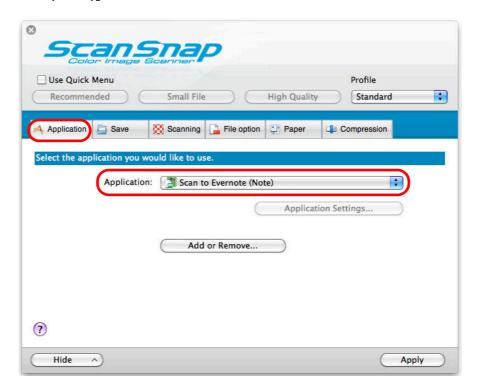



ScanSnap Manager can also link with [Scan to Evernote (Note)] when you select:

- [Scan to Evernote (Note)] from the [Profile] pop-up menu of the ScanSnap setup window
- [Scan to Evernote (Note)] from the Profile menu

- 3. Click the [Apply] button.
- **4.** Click the [] button in the upper left corner to close the ScanSnap setup window.
- **5.** Load a document in the ScanSnap.


For details about how to load documents, refer to "How to Load Documents" (page 30).


6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ When you perform a scan with [PDF(*.pdf)] selected for [File format] in the [File option] tab in the ScanSnap setup window, a JPEG file is created from the PDF file. A separate JPEG file is created for each page of the PDF file. The following window is displayed when the JPEG file is being created.

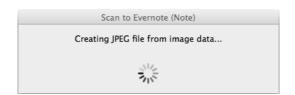

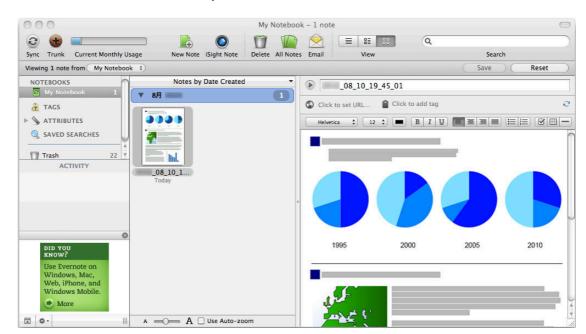


⇒ Evernote for Mac starts up, and the JPEG file is saved to Evernote.



- When you select [PDF (*.pdf)] for [File format] in the [File option] tab of the ScanSnap setup window, a four-digit serial number is automatically added to the name of the file which is saved to Evernote.
 - e.g. When the file name is [ScanSnap], the file is saved as: ScanSnap_0001, ScanSnap_0002, ScanSnap_0003...
- The file in which the scanned image is saved remains in the folder specified for [Image saving folder] in the [Save] tab of the ScanSnap setup window even after the scanned image is saved to Evernote. Delete this file if unnecessary.

■ Saving Documents to Google Docs

This section explains how to save the scanned image as a PDF file to Google Docs.

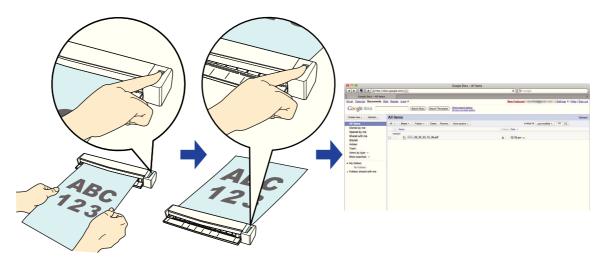

For details about the procedure to scan and save the scanned image to Google Docs using or without using the Quick Menu, refer to the following:

- Using the Quick Menu (→ page 320)
- Without Using the Quick Menu (→ page 324)

Using the Quick Menu



To use the Quick Menu, you need to select the [Use Quick Menu] checkbox in the ScanSnap setup window.

For details about how to perform scanning by using the Quick Menu, refer to "Using the Quick Menu" (page 228).

1. Load a document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

2. Press the [Scan/Stop] button on the ScanSnap to start scanning.




Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 3. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The Quick Menu appears.
- 4. Change settings for [Scan to Google Docs(TM)] (If you do not want to change any settings, go to step 5.).
 - 1. Click [Settings] under the [Scan to Google Docs(TM)] icon.



⇒ The [Scan to Google Docs(TM) - Options] window appears.

 Change the settings.
 For details about the [Scan to Google Docs(TM) - Options] window, refer to the ScanSnap Manager Help.

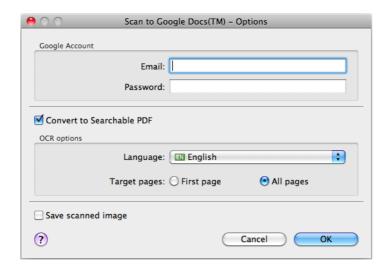



If the computer is shared with other users, do not enter your information in [Email] and [Password] in this window.

Otherwise, other users will be able to log into Google Docs automatically.

3. Click the [OK] button to close the [Scan to Google Docs(TM) - Options] window.

5. Click the [Scan to Google Docs(TM)] icon.





- You cannot start scanning when the Quick Menu is displayed. Save the scanned image to Google Docs before scanning the next document.
- Do not move, delete, or rename the scanned image in other applications when the Quick Menu is displayed.

⇒ If you did not specify a Google account in the [Scan to Google Docs(TM) - Options] window in step 4., the [Scan to Google Docs(TM) window appears. Saving will continue after you enter an e-mail address and a password, and click the [OK] button.






If the computer is shared with other users, do not select the [Remember the password in the keychain] checkbox in this window.


Otherwise, other users will be able to log into Google Docs automatically.

⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup window, a PDF file is created from the JPEG file.
A separate PDF file is created for each JPEG file.

The following window is displayed when the PDF file is being created.

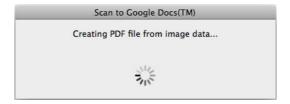


⇒ If the [Convert to Searchable PDF] checkbox is selected in the [Scan to Google Docs(TM) - Options] window in step 4., text recognition is performed according to the [OCR options] settings in the [Scan to Google Docs(TM) - Options] window. The following window is displayed during text recognition.

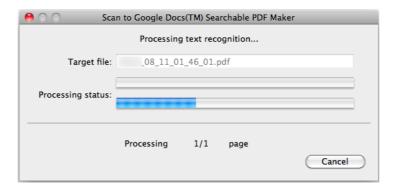



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on all pages, including pages containing text on which text recognition has already been performed.

⇒ The following window appears when saving starts. Click the [Close] button to close the [Scan to Google Docs(TM)] window when the saving completes.

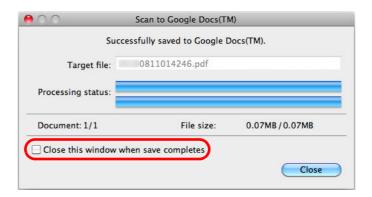

When you select the [Close this window when save completes] checkbox in the [Scan to Google Docs(TM)] window, from next scanning on, the [Scan to Google Docs(TM) window automatically closes after the PDF file is saved to Google Docs.



Google Docs does not start up after the saving has completed. To check the saved PDF file, start a web browser and log in to Google Docs.

Without using the Quick Menu



To disable the Quick Menu, you need to clear the [Use Quick Menu] checkbox in the ScanSnap setup window.


For details about how to perform scanning without using the Quick Menu, refer to "Without Using the Quick Menu" (page 233).

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. In the [Application] pop-up menu in the [Application] tab, select [Scan to Google Docs(TM)].

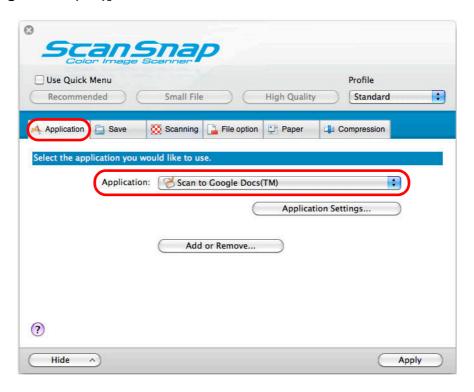





ScanSnap Manager can also link with [Scan to Google Docs(TM)] when you select:

- [Scan to Google Docs(TM)] from the [Profile] pop-up menu of the ScanSnap setup window
- [Scan to Google Docs(TM)] from the Profile menu

- 3. Change settings for the [Scan to Google Docs(TM)] (If you do not want to change any settings, go to step 4.).
 - 1. Click the [Application Settings] button.

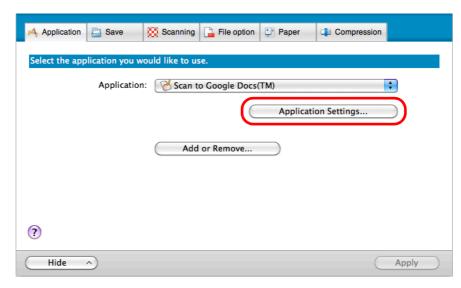

- ⇒ The [Scan to Google Docs(TM) Options] window appears.
- Change the settings.
 For details about the [Scan to Google Docs(TM) Options] window, refer to the ScanSnap Manager Help.

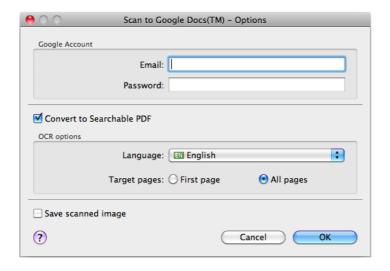



If the computer is shared with other users, do not enter your information in [Email] and [Password] in this window.

Otherwise, other users will be able to log into Google Docs automatically.

3. Click the [OK] button to close the [Scan to Google Docs(TM) - Options] window.

4. Click the [Apply] button.

- 5. Click the [] button in the upper left corner to close the ScanSnap setup window.
- **6.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ If you did not specify a Google account in the [Scan to Google Docs(TM) Options] window in step 3., the [Scan to Google Docs(TM)] window appears. Saving will continue after you enter an e-mail address and a password, and click the [OK] button.






If the computer is shared with other users, do not select the [Remember the password in the keychain] checkbox in this window.


Otherwise, other users will be able to log into Google Docs automatically.

⇒ When you perform a scan with [JPEG(*.jpg)] selected for [File format] in the [File option] tab of the ScanSnap setup window, a PDF file is created from the JPEG file.
A separate PDF file is created for each JPEG file.

The following window is displayed when the PDF file is being created.

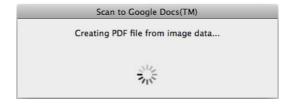


⇒ If the [Convert to Searchable PDF] checkbox is selected in the [Scan to Google Docs(TM) - Options] window in step 3., text recognition is performed according to the [OCR options] settings in the [Scan to Google Docs(TM) - Options] window. The following window is displayed during text recognition.

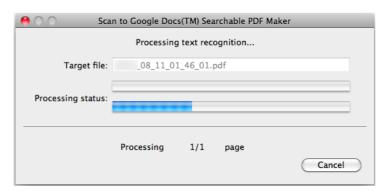



Text recognition will be performed if there are any pages containing text which is not yet recognized. Note that text recognition will be performed on all pages, including pages containing text on which text recognition has already been performed.

⇒ The following window appears when saving starts. Click the [Close] button to close the [Scan to Google Docs(TM)] window when the saving completes.

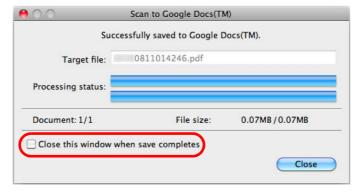

When you select the [Close this window when save completes] checkbox in the [Scan to Google Docs(TM)] window, from next scanning on, the [Scan to Google Docs(TM) window automatically closes after the PDF file is saved to Google Docs.



Google Docs does not start up after the saving has completed. To check the saved PDF file, start a web browser and log in to Google Docs.

Using the ScanSnap in Various Ways

This section explains about various ways of using the ScanSnap.


Scanning Color Documents in Gray or Black & White Mode

When [Auto color detection] is specified for [Color mode] in the [Scanning] tab of the ScanSnap setup window, the ScanSnap automatically recognizes whether the scanned document is color, gray or black & white, and saved the documents in their respective color modes.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

- ⇒ The ScanSnap setup window appears.
- 2. From the [Color mode] pop-up menu in the [Scanning] tab, select [Gray] or [B&W].

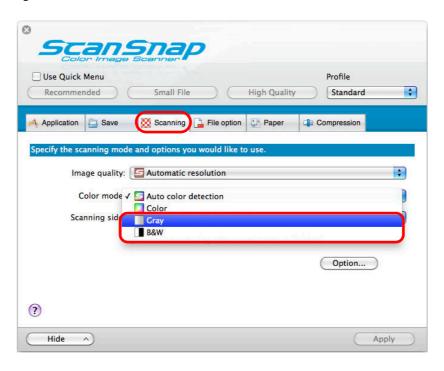

- 3. Click the [Apply] button.
- 4. Click the [] button in the upper left corner to close the ScanSnap setup window.
- **5.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

6. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- 7. Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ Scanned image is saved in gray or black & white.

■ Correcting Skewed Character Strings

When documents with skewed character strings are scanned, the ScanSnap is able to detect the skewed character strings and correct them.

To correct skewed character strings, change the settings in the following procedure.



- Up to +/-5 degrees of skew can be corrected.
- Since this option is performed assuming that the document contains a certain amount of text, character strings may be adjusted at a wrong angle when scanning the following types of documents. In that case, clear the [Correct skewed character strings automatically] checkbox:
 - Documents on which pitches between lines or characters are extremely narrow, or characters are overlapped
 - Documents with many outlined or decorated characters
 - Documents with many photographs or figures and few characters
 - Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
 - Documents with characters printed in various directions such as drawings
 - Documents with long diagonal lines
 - Documents including handwritten characters
- This setting is disabled when you perform a scan using the Carrier Sheet.




You do not have to enable [Correct skewed character strings automatically] when [Automatic detection] is specified for [Paper size] in the [Paper] tab in the ScanSnap setup window because the skewed image is always corrected when documents are scanned by this setting.

1. Select [Settings] from the ScanSnap Manager menu.


For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. Click the [Option] button in the [Scanning] tab.

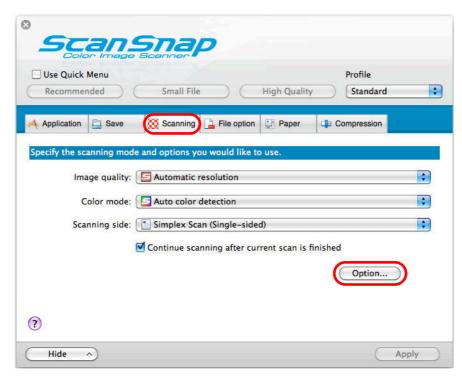

- ⇒ The [Scanning mode option] window appears.
- 3. Select the [Correct skewed character strings automatically] checkbox.

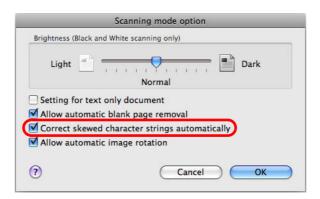

- **4.** Click the [OK] button to close the [Scanning mode option] window.
- **5.** Click the [Apply] button in the ScanSnap setup window.
- 6. Click the [] button in the upper left corner to close the ScanSnap setup window.

7. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

8. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- $\boldsymbol{9}_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ Image data is saved with skewed character strings corrected.

■ Correcting the Orientation of Scanned Images

In an office environment, it is often the case that a single batch contains same size documents of different page orientations.

The ScanSnap is able to automatically rotate each scanned image to its correct orientation for such document batches.

To rotate scanned images to their correct orientations, change the settings in the following procedure.



Since this option determines the document's page orientation based on the character strings printed on the document, the following types of documents may be rotated to the wrong orientation. In that case, clear the [Allow automatic image rotation] checkbox.


- Documents with many extremely large or small characters
- Documents on which pitches between lines or characters are extremely narrow, or characters are overlapped
- Documents with many characters contacting underlines or borders
- Documents with many photographs or figures and few characters
- Documents with characters on an unevenly colored background e.g. Shaded characters
- Documents with many decorated characters
 e.g. Decorated characters (embossed/outlined)
- Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
- Documents with characters printed in various directions such as drawings
- Documents written using only capital letters
- Documents including handwritten characters
- Skewed documents
- Documents written in an unsupported language (language other than Japanese/English/ French/German/Italian/Spanish/Russian/Portuguese)
- Documents with complex layouts
- Documents with a large amount of image noise
- Documents with faint characters
- Documents with faded characters

1. Select [Settings] from the ScanSnap Manager menu.


For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. Click the [Option] button in the [Scanning] tab.

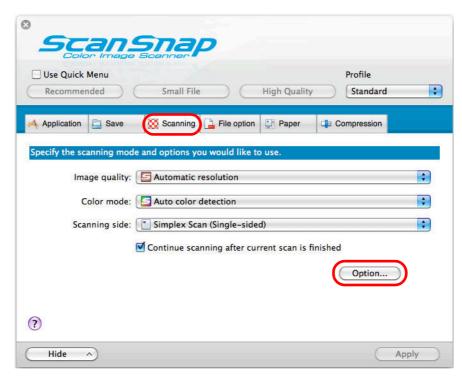

- ⇒ The [Scanning mode option] window appears.
- 3. Select the [Allow automatic image rotation] checkbox.

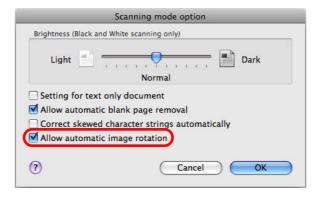

- **4.** Click the [OK] button to close the [Scanning mode option] window.
- **5.** Click the [Apply] button in the ScanSnap setup window.
- **6.** Click the [] button in the upper left corner to close the ScanSnap setup window.

7. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

8. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- $\boldsymbol{9}_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ The scanned image is saved in the correct orientation.

■ Scanning Documents Larger Than A4/Letter Size

You can scan documents larger than A4/Letter size such as A3, Double Letter and B4 using the Carrier Sheet (sold separately). By folding the document in half and scanning both sides consecutively in simplex mode, the two sides are merged into a single image and saved. Change the settings to scan documents larger than A4/Letter size in the following procedure.



In the [Scanning mode option] window ([Scanning] tab → [Option] button in the ScanSnap setup window), the [Correct skewed character strings automatically] checkbox is disabled.




You can also scan documents smaller than A4/Letter size and have both sides saved as a single image.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).


- ⇒ The ScanSnap setup window appears.
- 2. In the [Paper] tab select [Automatic detection] in [Paper size], and then click the [Carrier Sheet Settings] button.

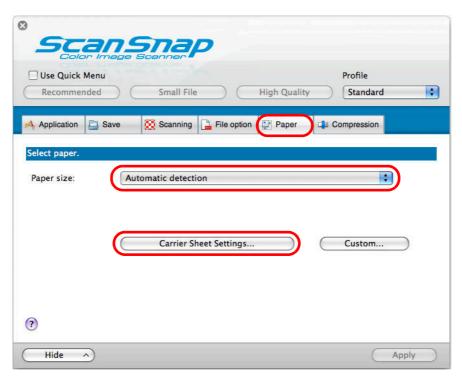


⇒ The [Carrier Sheet Settings] window appears.

3. Select [one double-page spread image] in [Save as].

For details about the Carrier Sheet settings, refer to the ScanSnap Manager Help.

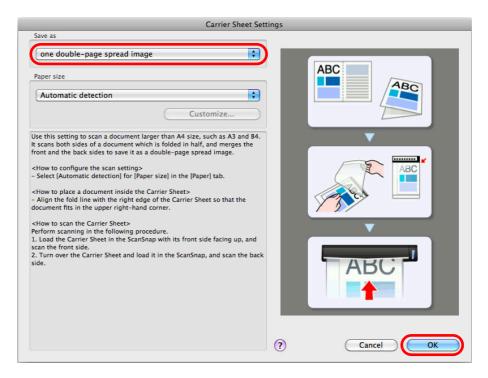


- **4.** Click the [OK] button to close the [Carrier Sheet Settings] window.
- **5.** Click the [Apply] button in the ScanSnap setup window.
- **6.** Click the [] button in the upper left corner to close the ScanSnap setup window.
- 7. Place the document inside the Carrier Sheet.
 - 1. Fold the document in half so that the sides to be scanned are facing out. Fold it tightly and smooth out any creases.

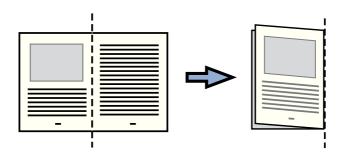

2. Open the Carrier Sheet and place the document inside.
Align the fold line with the right edge of the


Carrier Sheet so that the document fits in the upper right-hand corner of the Carrier Sheet.

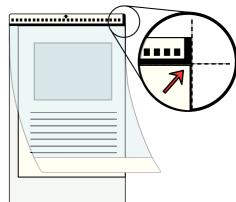



Note that the front side of the Carrier Sheet has a thick vertical line in the upper right-hand corner.


8. Insert the part with the black and white pattern straight into the feeding section of the ScanSnap, with the front side of the Carrier Sheet facing up.

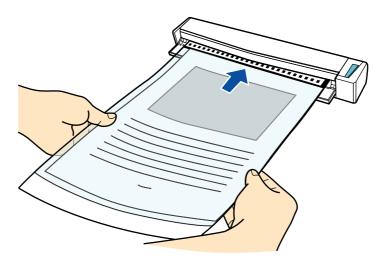

⇒ The Carrier Sheet is pulled in until it is set inside the ScanSnap.




If you perform a scan using the Carrier Sheet with the output guide open, a paper jam may occur and damage the documents. Make sure to close the output guide when you perform a scan using the Carrier Sheet.

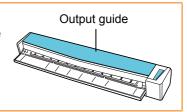

9. Press the [Scan/Stop] button on the ScanSnap to start scanning.

⇒ Scanning starts and the [ScanSnap Manager - Image scanning and file saving] window appears. When the front side of the Carrier Sheet is scanned, the image data is displayed in the preview area.

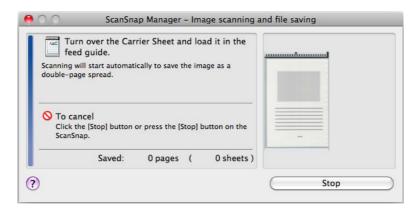

10 Turn over the Carrier Sheet and insert it as explained in step 8.



Make sure to scan the front and back side of the Carrier Sheet consecutively.

⇒ Scanning starts automatically and the [ScanSnap Manager - Image scanning and file saving] window appears. When the back side of the Carrier Sheet is scanned, scanned images of the front and back side of the document inside the Carrier Sheet are displayed as a double-page spread image in the preview area.






Repeat steps 7. to 10. to scan more documents larger than A4/Letter size.

You can continue with scanning documents that can be set directly in the ScanSnap. For details about how to load documents, refer to "How to Load Documents" (page 30). Scanning starts automatically when a document is loaded in the ScanSnap.

11. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ The scanned images of the front and back side of the document inside the Carrier Sheet are saved as a double-page spread image.

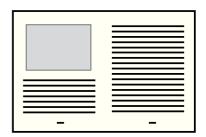



There may be a line or a gap appearing between the front and back side images. Also when
you scan thick papers, images on both left and right may skew towards each other from the
top.

The degree of these symptoms varies depending on how the document was set or folded. In that case, try the following for possible resolutions:

- Fold the document properly
- Neatly align the edges of the document with the edges of the Carrier Sheet when placing the document inside the Carrier Sheet
- When [Automatic detection] is selected from the [Paper size] pop-up menu in the [Carrier Sheet Settings] window, the image is output in an optimal size selected automatically from the available standard sizes (A3, B4 or 11 × 17 in.) in the [Paper size] pop-up menu. However, depending on the document, the size of the saved image data may be smaller than the original document or some parts of the image may be missing.

Example: When you scan an A3 size document with an A4 size image printed in the center, image data is saved in B4 size.

To save an image data in the actual size of the document, specify the document size in the [Paper size] pop-up menu.

Part of the image data around where the document is folded may appear missing. In that
case, place the document so that its edge is about 1 mm inside from the edge of the Carrier
Sheet.

Scanning Documents Such as Photographs and Clippings

You can scan photographs you do not want to damage or documents that are difficult to scan such as clippings using the Carrier Sheet (sold separately).

Change the settings to scan documents such as photographs and clippings in the following procedure.



In the [Scanning mode option] window ([Scanning] tab → [Option] button in the ScanSnap setup window), the [Correct skewed character strings automatically] checkbox is disabled.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).


- ⇒ The ScanSnap setup window appears.
- 2. In the [Paper] tab, select [Automatic detection] in [Paper size], and then click the [Carrier Sheet Settings] button.



⇒ The [Carrier Sheet Settings] window appears.


3. Select [two separate images (front and back)] in [Save as].

For details about the Carrier Sheet settings, refer to the ScanSnap Manager Help.

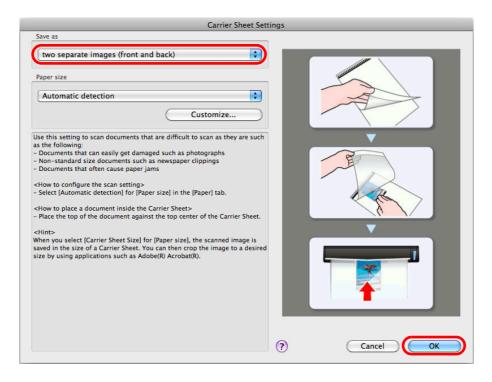


- 4. Click the [OK] button to close the [Carrier Sheet Settings] window.
- **5.** Click the [Apply] button in the ScanSnap setup window.
- **6.** Click the [] button in the upper left corner to close the ScanSnap setup window.
- 7. Place the document inside the Carrier Sheet.


Open the Carrier Sheet and place the top of the document against the top center of the Carrier Sheet.

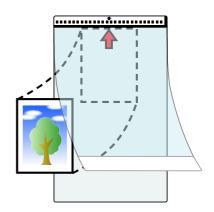


8. Insert the part with the black and white pattern straight into the feeding section of the ScanSnap, with the scanning side of the document inside the Carrier Sheet facing up.

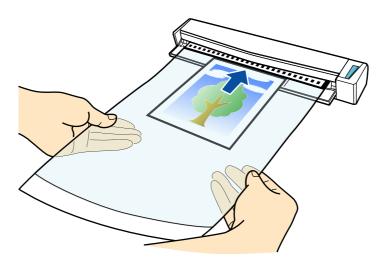

⇒ The Carrier Sheet is pulled in until it is set inside the ScanSnap.

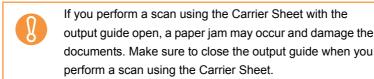

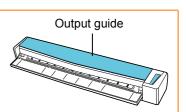

9. Press the [Scan/Stop] button on the ScanSnap to start scanning.

⇒ When scanning is completed, the scanned image of the document inside the Carrier Sheet is displayed in the preview area.





Repeat steps 7. to 8. to scan more documents such as photographs and clippings. You can continue with scanning documents that can be set directly in the ScanSnap. For details about how to load documents, refer to "How to Load Documents" (page 30). Scanning starts automatically when a document is loaded in the ScanSnap.

10. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Scanned image is saved.




- The scanned image is output at the center of the page in the size specified in the [Paper size] pop-up menu of the [Carrier Sheet Settings] window.
- When [Automatic detection] is specified in the [Paper size] pop-up menu of the [Carrier Sheet Settings] window, the image is output in an optimal size selected automatically from the available standard sizes in the [Paper size] pop-up menu. However, depending on the document, the size of the saved image data may be smaller than the original document or part of the image may be missing. Example: When you scan an A5 size image printed in the middle of an A4 size document, the scanned image is saved in A5 size.

To save the scanned image in its original size, specify the document size in the [Paper size] pop-up menu.



Place the document over a blank sheet if the following is observed:

- Scanned image is not saved in the same size as the document (when [Automatic detection] is specified in the [Paper size] pop-up menu of the [Carrier Sheet Settings] window)
- There are shadows around the edges of the scanned image
- There are black lines around the scanned image of a uniquely shaped cutting

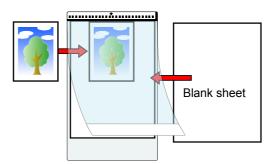


■ Long Page Scanning


Documents up to 863 mm (34 in.) in length can be scanned.

The following explains how to scan long pages.

1. Insert the document straight into the feeding section of the ScanSnap, with the scanning side facing up.

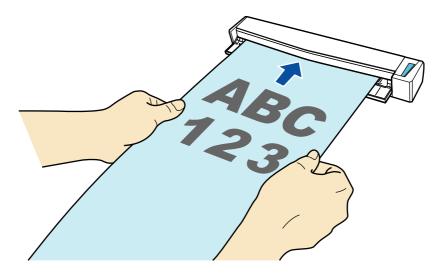

⇒ The document is pulled in until it is set inside the ScanSnap.

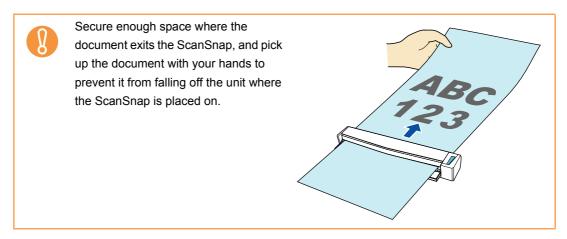

2. Press the [Scan/Stop] button on the ScanSnap for three seconds or longer until it flashes in blue.

⇒ Scanning starts.



When you scan the first page as a long page and continue scanning, the next document is also scanned as long page.



 The error message below appears and long page scanning is disabled when [Excellent] is selected in the [Image quality] pop-up menu in the [Scanning] tab of the ScanSnap setup window.



 When you perform a long page scan, the setting for [Paper size] in the [Paper] tab of the ScanSnap setup window automatically switches to [Automatic detection]. The current settings are used for other scan settings.

■ Saving Scanned Images in Multiple PDF Files


The ScanSnap is able to save scanned image in separate PDF files based on the specified number of pages. For example, you can scan a batch of slips, and save each slip as a PDF file.

To save image data in multiple PDF files, change the settings in the following procedure.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).


- ⇒ The ScanSnap setup window appears.
- 2. From the [File format] pop-up menu in the [File option] tab, select [PDF (*.pdf)], and then click the [Option] button.

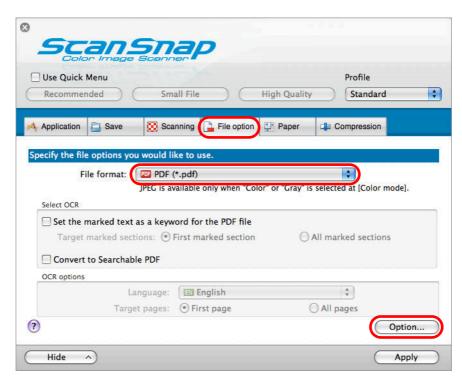

⇒ The [PDF file format option] window appears.

3. Select [Generate one PDF file per (n) page(s)] and enter the number of pages to split.

One PDF is created every time the number of pages specified here has been saved.

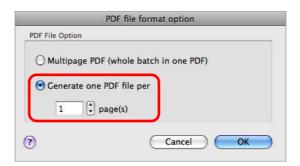

- **4.** Click the [OK] button to close the [PDF file format option] window.
- **5.** Click the [Apply] button in the ScanSnap setup window.
- 6. Click the [] button in the upper left corner to close the ScanSnap setup window.
- 7. Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

8. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

- **9.** Press the [Scan/Stop] button on the ScanSnap to finish scanning.
 - ⇒ One PDF file is created every time the number of pages specified in step 3. has been scanned.

■ Creating Searchable PDF Files

The ScanSnap is able to perform text recognition on a scanned image automatically and create a searchable PDF file.


To create searchable PDF files, change the settings in the following procedure.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).

⇒ The ScanSnap setup window appears.

2. From the [File format] pop-up menu in the [File option] tab, select [PDF (*.pdf)].

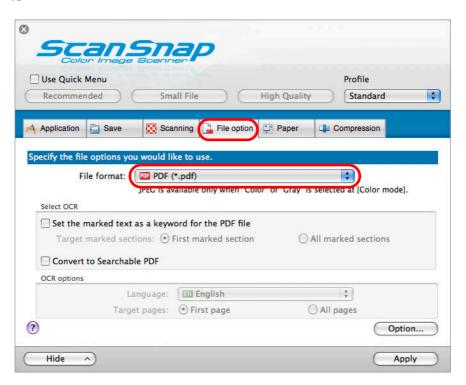




It is recommended that you select [Better] or [Best] for [Image quality] in the [Scanning] tab in the ScanSnap setup window.

3. Select the [Convert to Searchable PDF] checkbox.

⇒ The following message appears.



⇒ Click the [OK] button to close the window.

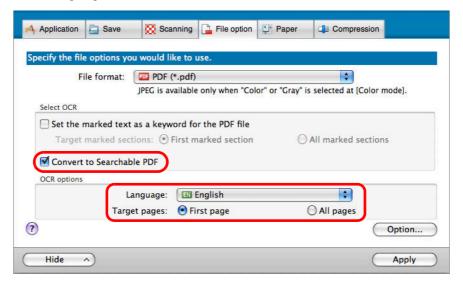

- Language
 Select the language. English, French, German, Italian, Spanish, Russian, and
 Portuguese can be selected.
- Target pages
 Select [All pages] to perform text recognition for all pages and [First page] for just the first page.
- 4. Click the [Apply] button.
- 5. Click the [] button in the upper left corner to close the ScanSnap setup window.
- **6.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Text recognition is performed on the scanned image and a searchable PDF file is created.



- It may take extra time to process text recognition depending on your computer system environment when you enable this setting in step 3.
- Scanned images of the following types of documents (characters) may not be recognized correctly.

In that case, better results in text recognition may be achieved by changing the setting for [Color mode] or specifying a higher resolution in [Image quality].


- Documents including handwritten characters
- Documents with small characters scanned at a low resolution
- Skewed documents
- Documents written in languages other than the specified language
- Documents including texts written in italic characters
- Documents containing characters with superscripts/subscripts and complicated mathematical expressions
- Documents with characters on an unevenly colored background e.g. Shaded characters
- Documents with many decorated characters
 e.g. Decorated characters (embossed/outlined)
- Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
- Documents with many characters contacting underlines or borders
- It may take extra time to perform text recognition on the following documents:
 - Documents with complex layouts
 - Documents with information other than text
 e.g. Text on a shaded background

■ Automatically Setting Keywords for PDF Files

If the document is black & white, character strings (e.g. page heading, title) can be set as keywords and used for a PDF file search.

Mark a character string to be set as a keyword with a water-based highlight pen so that the character string is completely covered.

When you perform a scan, the marked character strings are recognized and set as keywords for the PDF file.

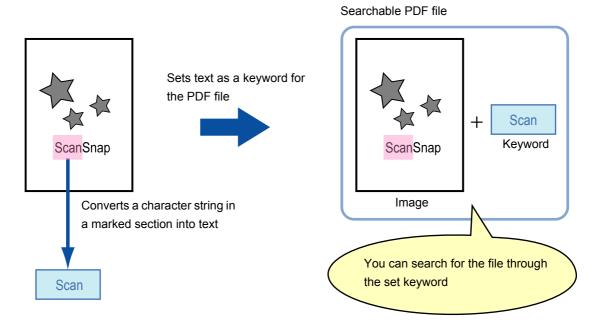

Mark black & white documents in the following way:

Any regular highlight pen can be used.
 The following shows the colors and thickness recommended for highlight pens:

Pink	Yellow	Blue	Green
ScanSnap	ScanSnap	ScanSnap	ScanSnap

- Mark a straight line over a single character string.
- The supported range of a marked section is as follows:

Minimum: 3 mm (short side) × 10 mm (long side)

Maximum: 20mm (short side) × 150mm (long side)

Use only one color per page for marking.

Make sure to cover the entire character string when marking it.
 Mark sections so that the entire section is evenly colored.

Good example:	Bad example 1: (does not cover the entire section)	Bad example 2: (unevenly colored)	
ScanSnap	ScanSnap	ScanSnap	

• Do not mark more than ten sections per page.



- It is recommended that you use a blue or a green highlight pen for marking. When you use colors such as pink or yellow for marking, the marked sections may not be recognized as keywords.
- Use a blue highlight pen for documents with dark background colors such as newspapers. Marked sections may not be detected when a color other than blue is used.
- For the following document types, marked sections cannot be recognized and set as keywords:
 - Color documents such as catalogues or pamphlets
 - Documents in which two or more colors are used for marking
 - Documents containing colors other than for marking (pens other than highlight pens are used or the document is stained)
 - Documents with too many marked sections on a single page
- The following types of marked character strings cannot be set as keywords:
 - The size of marked section is outside the supported range
 - The marking is irregular (e.g. skewed)
 - Multiple marked sections are too close to each other
 - The color of the highlight pen is too pale or the color has faded

ScanSnap

- When you mark more than one character string, make sure to leave a gap of at least 5 mm between the marked sections. Marked sections that are too close to each other may be detected as one marked section.
- In the following case, character strings surrounding marked sections may be set as keywords:
 - Marked section overlaps the line above and below
- In the following cases, unmarked character strings may be set as keywords:
 - Color documents such as catalogues or pamphlets
 - Documents with color text, diagrams, pictures, tables and lines
 - Documents containing sections framed by a highlight pen
 - Stained documents




- Increase the resolution when you have trouble setting the keywords correctly.
- Keywords set for a PDF file can be checked [Document Properties] of Adobe Acrobat / Adobe Reader or Preview [Inspector].

Change the settings in the following procedure to automatically set keywords for PDF files.

1. Select [Settings] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).


- ⇒ The ScanSnap setup window appears.
- 2. From the [File format] pop-up menu in the [File option] tab, select [PDF (*.pdf)].

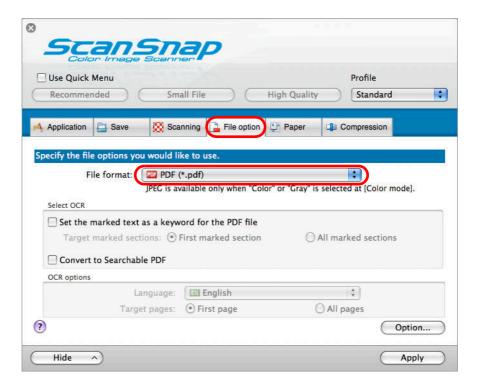




It is recommended that you select [Better] or [Best] for [Image quality] in the [Scanning] tab of the ScanSnap setup window.

3. Select the [Set the marked text as a keyword for the PDF file] checkbox.

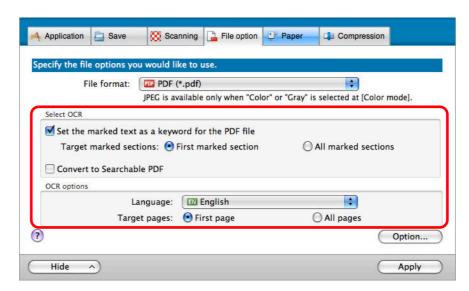

Target marked sections

Select [First marked section] to perform text recognition and set a keyword for the PDF file only for the character strings in the first marked section, and [All marked sections] for all marked sections.

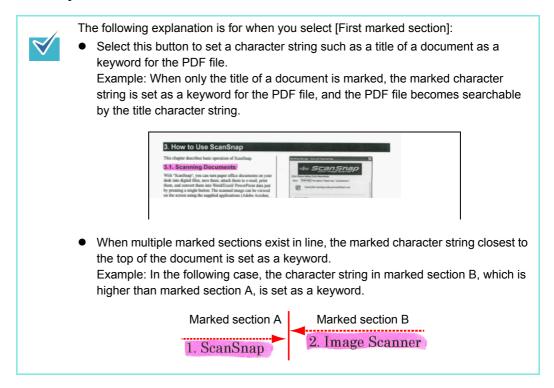

- Language
 - Select the language. English, French, German, Italian, Spanish, Russian, and Portuguese can be selected.
- Target pages
 Select [First page] to perform text recognition and set a keyword for the PDF file only for the first page, and [All pages] for all pages.

- 4. Click the [Apply] button.
- **5.** Click the [] button in the upper left corner to close the ScanSnap setup window.
- **6.** Load the document in the ScanSnap.

For details about how to load documents, refer to "How to Load Documents" (page 30).

7. Press the [Scan/Stop] button on the ScanSnap to start scanning.



Load another document in the ScanSnap when you want to scan multiple sheets. Scanning starts automatically when a document is loaded.

8. Press the [Scan/Stop] button on the ScanSnap to finish scanning.

⇒ Text recognition is performed on marked character strings and a PDF file is created with the keywords added.



- It may take extra time to process text recognition depending on your computer system environment when you enable this setting in step 3.
- Scanned images of the following types of documents (characters) may not be recognized correctly.

In that case, better results in text recognition may be achieved by specifying a higher resolution in [Image quality].

- Documents including handwritten characters
- Documents with small characters scanned at a low resolution
- Skewed documents
- Documents written in languages other than the specified language
- Documents including texts written in italic characters
- Documents containing characters with superscripts/subscripts and complicated mathematical expressions
- Documents with characters on an unevenly colored background e.g. Shaded characters
- Documents with many decorated characters
 - e.g. Decorated characters (embossed/outlined)
- Documents with characters on a patterned background e.g. Characters overlapping illustrations and diagrams
- Documents with many characters contacting underlines or borders
- It may take extra time to perform text recognition on the following documents:
 - Documents with complex layouts
 - Documents with information other than text e.g. Text on a shaded background
- If the same character string is marked several times in the document, the same keyword is added multiple times in the PDF file.
- Total length of all the keywords can be up to 255 characters.
- When you check keywords in Adobe Acrobat or Adobe Reader, the added keywords may be displayed with a set of quotation marks (e.g. "ABC").
- For Mac OS X v10.4, keywords cannot be set for PDF files that are 500 MB or larger.

Troubleshooting

For details about how to resolve problems such as removing jammed documents, refer to "Troubleshooting" in the ScanSnap Manager Help.

Windows

Select [Help] → [Troubleshooting] in the Right-Click Menu.



Select [Help] → [Troubleshooting] in the ScanSnap Manager menu.

Daily Care

This chanter	explains abou	t cleaning	materials	and how	to clean	the So	canSnan
THIS CHAPICE		t Gloatillia	matchais	and now	io dicari	uic o	sanonas.

Cleaning Materials	359
Cleaning the Outside of the ScanSnap	360
Cleaning the Inside of the ScanSnap	361

Cleaning Materials

Cleaning materials and their part numbers are as below.

Product Name	Part No.	Unit	Note
Cleaner F1	PA03950-0352	1 bottle	Size: 100 ml
Cleaning Wipe (*1)	PA03950-0419	1 pack	24 packets
Lint-free dry cloth (*2)	Commercially available	-	-

^{*1 :} Cleaning Wipes are wet sheets pre-moistened with Cleaner F1 which can be used instead of cloths moistened with Cleaner F1.

To obtain these products, contact your FUJITSU dealer or an authorized FUJITSU scanner service provider.

^{*2 :} Any lint-free cloth can be used.

Cleaning the Outside of the ScanSnap


Clean the outside of the ScanSnap in the following procedure.

How to perform cleaning

- 1. Unplug the USB cable from the ScanSnap.
- 2. Clean the outside of the ScanSnap with a dry cloth, or a cloth moistened with Cleaner F1/mild detergent.



- Never use paint thinner or any other organic solvents.
- Be careful not to get any moisture or water inside the scanner during cleaning.
- It may take a long time for Cleaner F1 to dry if an excessive amount is used. Moisten the cloth with moderate quantity. Wipe off the cleaner completely to leave no residue on the cleaned parts.

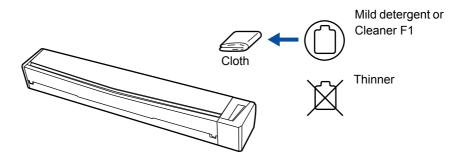

Cleaning the Inside of the ScanSnap

Scanning continuously may cause dust and paper dust to accumulate inside the ScanSnap and result in scanning error.

As a guideline, the inside of the ScanSnap should be cleaned every 100 sheets scanned. Note that this guideline varies depending on the types of documents you scan. For instance, it may be necessary to clean the scanner more frequently when you scan documents on which the toner is not sufficiently fused.

Clean the inside of the ScanSnap in the following procedure.



Check the number of sheets scanned in the following procedure.

Select [Help] → [About ScanSnap Manager] → [Detail] button in the Right-Click Menu to display the [ScanSnap Manager - Scanner and driver information] dialog box, and then see [Total page

count].


Select [Help] → [About ScanSnap Manager] → [Detail] button in the ScanSnap Manager Menu to display the [ScanSnap Manager - Scanner and driver information] window, and then see [Total page count].



- Before you perform cleaning, you must turn off the ScanSnap and unplug the USB cable to avoid the risk of fire or electric shock.
- Do not use aerosol spray or spray that contains alcohol to clean the scanner. Dust blown up by strong air from the spray may enter inside of the scanner which may cause scanner failure or malfunction. Also note that sparks generated by static electricity may cause a fire.

How to perform cleaning

- 1. Unplug the USB cable from the ScanSnap.
- 2. Open the top cover and the output guide.

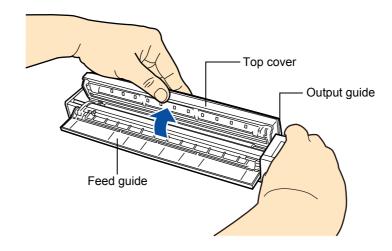


3. Clean the idler rollers and the glass with a cloth moistened with Cleaner F1.



- Do not use water or mild detergent to clean the inside of the ScanSnap.
- It may take a long time for Cleaner F1 to dry if an excessive amount is used. Moisten the cloth with moderate quantity.

Wipe off the cleaner completely to leave no residue on the cleaned parts.

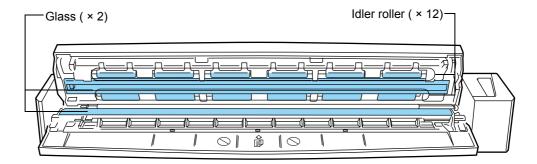

- Glass (* 2, located on the top cover and its opposite side)
 Gently wipe the dirt and dust off the surface of the glass sections.
- Idler roller (× 12, located on the top cover)
 Gently wipe the dirt and dust off the rollers as you rotate them manually. Be careful not to damage the surface of the rollers. Make sure that it is cleaned properly because residue on the roller will affect the feeding performance.

4. Connect the USB cable to the ScanSnap and the computer, then press the [Scan/Stop] button for three seconds with the top cover open.




The USB cable should be connected to the computer only for cleaning the feed roller and the eject roller.

5. Clean the feed roller and the eject roller with a cloth moistened with Cleaner F1.



- Do not use water or mild detergent to clean the inside of the ScanSnap.
- It may take a long time for Cleaner F1 to dry if an excessive amount is used. Moisten the cloth with moderate quantity.


Wipe off the cleaner completely to leave no residue on the cleaned parts.

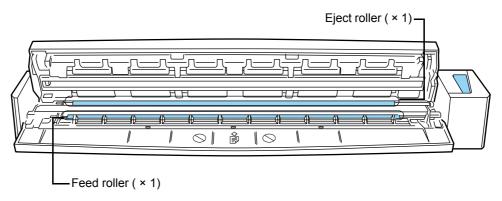

Feed roller (× 1)
 Press the [Scan/Stop] button to rotate the roller. Gently wipe the dirt off while taking care not to damage the surface of the roller. Make sure that it is cleaned properly because residue on the roller will affect the feeding performance.

• Eject roller (× 1)


Press the [Scan/Stop] button to rotate the roller. Gently wipe the dirt and dust off while taking care not to damage the surface of the roller. Make sure that it is cleaned properly because residue on the roller will affect the feeding performance. If eject roller is difficult to clean, try cleaning it from the back while you keep the top cover slightly open.

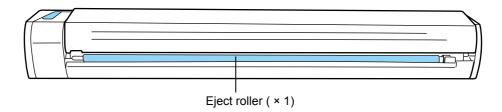



Pressing the [Scan/Stop] button seven times will rotate the feed roller and the eject roller one revolution.

6. Close the top cover and the output guide.

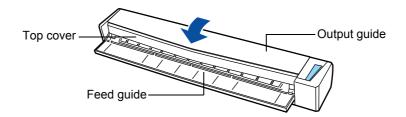

⇒ It clicks when it returns to its original position.



Make sure that the top cover is completely closed. Otherwise, paper jams or other feeding errors may occur.

Appendix

This appendix explains how to update ScanSnap Manager, how to uninstall the software, setting items with/without the Quick Menu, how to purchase the Carrier Sheet and the ScanSnap installation specifications.

Updating ScanSnap Manager	366
Uninstalling the Software	370
Setting Items With/Without the Quick Menu	376
Purchasing/Cleaning the Carrier Sheet	380
Installation Specifications	382

Updating ScanSnap Manager

Updates are released regularly in an effort to improve the usability and functionality of ScanSnap Manager.

This section explains how to update ScanSnap Manager.

For details about updates of the software bundled with the ScanSnap, visit the following web page:

http://scansnap.fujitsu.com

Updating in Windows

Update ScanSnap Manager in the following procedure.

We recommend that you run the update regularly.



- It is necessary to have a browser with Internet access to perform the update.
- Always log on as a user with Administrator privileges.

1. Select [Help] → [Online Update] from the Right-Click Menu.


For details about the Right-Click Menu, refer to "Right-Click Menu" (page 59).

⇒ A confirmation message appears.




You can also update ScanSnap Manager by selecting [Start] menu \rightarrow [All Programs] \rightarrow [ScanSnap Manager] \rightarrow [Online Update].


2. Click the [Yes] button.

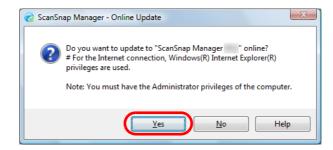

⇒ If a later version of ScanSnap Manager (update) is available, a message confirming the update appears.

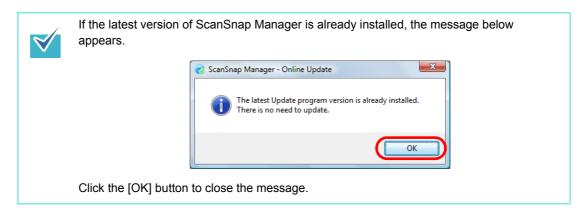


3. Click the [Yes] button.

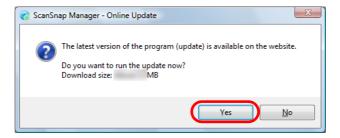

⇒ The program is downloaded, and a confirmation message to start the installation appears.

4. Click the [Install] button.

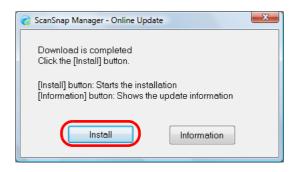



When you click the [Information] button, Internet Explorer which displays information about the latest update for ScanSnap Manager opens.

⇒ Installation starts, and the ScanSnap Manager installer starts up.

Follow the instructions on the screen to continue with the installation.

■ Updating in Mac OS

Update ScanSnap Manager in the following procedure.

We recommend that you run the update regularly.



It is necessary to have a web browser with Internet access to perform the update.

1 Select [Help] → [Online Update] from the ScanSnap Manager menu.

For details about the ScanSnap Manager menu, refer to "ScanSnap Manager Menu" (page 224).


⇒ A confirmation message appears.



You can also update ScanSnap Manager by selecting:

- [Help] → [Online Update] from the menu bar
- From Finder, [Applications] → [ScanSnap] and double-clicking [Online Update].


2. Click the [Yes] button.

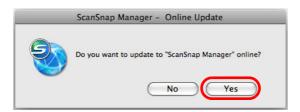

⇒ If a later version of ScanSnap Manager (update) is available, a message confirming the update appears.




If the latest version of ScanSnap Manager is already installed, the message below appears.

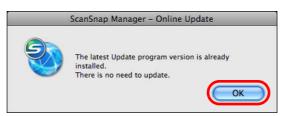


Click the [OK] button to close the message.

3. Click the [Yes] button.

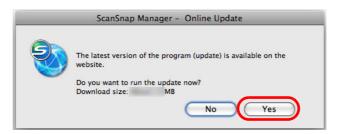

- ⇒ The program is downloaded, and a confirmation message to start the installation appears.
- **4.** Select [Quit] from the ScanSnap Manager menu to exit ScanSnap Manager.
- 5. Click the [Install] button.

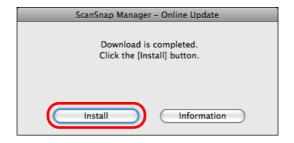



When you click the [Information] button, a web browser which displays information about the latest update for ScanSnap Manager opens.

⇒ The ScanSnap Manager installer starts.

Follow the instructions on the screen to continue with installation.

Uninstalling the Software

This section explains how to uninstall the software bundled with the ScanSnap. For details about installation, refer to "Installing the Software" (page 34).

■ Uninstalling in Windows

This part explains how to uninstall the following software:

- ScanSnap Manager
- ScanSnap Organizer
- CardMinder
- ABBYY FineReader for ScanSnap
- Evernote for Windows
- Scan to Microsoft SharePoint

The procedure is as follows.

- 1. Turn on the computer and log on as a user with Administrator privileges.
- 2. Exit all running software.
- **3.** Select [Start] menu → [Control Panel] → [Programs] → [Programs and Features].
 - ⇒ The [Uninstall or change a program] dialog box appears with a list of currently installed software.

4. Select the software to uninstall.

- To uninstall ScanSnap Manager Select [ScanSnap Manager].
- To uninstall ScanSnap Organizer Select [ScanSnap Organizer].
- To uninstall CardMinder Select [CardMinder].
- To uninstall ABBYY FineReader for ScanSnap
 Select [ABBYY FineReader for ScanSnap (TM) 4.1].
- To uninstall Evernote for Windows Select [Evernote].
- To uninstall Scan to Microsoft SharePoint Select [Scan to Microsoft SharePoint].



To uninstall more than one software, repeat steps 4. to 6. for each software.

5. Click the [Uninstall] button.

⇒ A confirmation message appears.

6. Click the [Yes] button.

⇒ The software is uninstalled.



• Screen displays may vary slightly depending on the operating system that you are using. In that case, follow the instructions by the operating system.

Example:

- [Programs and Features]
 In Windows XP: [Add or Remove Programs]
- [Uninstall] button
 In Windows XP: [Remove] button
- If you cannot successfully uninstall the following software, select [Manuals] →
 [Troubleshooting (installation)] in the [ScanSnap Setup] dialog box and refer to
 Troubleshooting (installation).
 - ScanSnap Manager
 - ScanSnap Organizer
 - CardMinder

■ Uninstalling in Mac OS

Uninstall ScanSnap Manager, ABBYY FineReader for ScanSnap, Cardiris and Evernote for Mac in the following procedure.

- ScanSnap Manager (→ page 372)
- ABBYY FineReader for ScanSnap (→ page 373)
- Cardiris (→ page 374)
- Evernote for Mac (→ page 375)

ScanSnap Manager

- 1. Turn on the computer.
- 2. If ScanSnap Manager is running, exit ScanSnap Manager (select [Quit] from the ScanSnap Manager menu).
- 3. If the ScanSnap Manager icon still remains in the Dock, drag the ScanSnap Manager icon into the Trash.
- 4. Select [System Preferences] from the Apple () menu.
 - ⇒ The [System Preferences] window appears.
- **5.** Select [Accounts] in the [System Preferences] window.
 - ⇒ The [Accounts] window appears.
- **6.** Select the currently logged in user from the [My Account] pane in the [Accounts] window.
- 7. Click [Login Items] in the [Accounts] window.
 - ⇒ In the [Login Items] pane, a list of software that automatically start at login is displayed.
- **8.** Select [ScanSnap Manager] from the [Login Items] list.
- 9. Click the [—] button.
 - ⇒ [ScanSnap Manager] is deleted from the [Login Items] list.

- 10. Close the [Accounts] window.
- 11. In a multi-user environment, every user must perform steps 2. to 10.
- 12.Log in as a user with Administrator privileges, then from Finder, select [Applications] → [ScanSnap], and drag the [ScanSnap] folder into the Trash.



For Mac OS X v.10.5/Mac OS X v10.4, also perform the following.

From the sidebar in Finder, select the [volume name] → [Library] → [Receipts], and drag [ScanSnap Manager.pkg] into the Trash.

13. Empty the Trash.

⇒ The [ScanSnap Manager] folder is deleted.

ABBYY FineReader for ScanSnap

- 1. Turn on the computer and log in as a user with Administrator privileges.
- 2. Exit ABBYY FineReader for ScanSnap if it is running. (Select [Quit] from the ABBYY FineReader for ScanSnap menu.)
- **3.** From Finder, select [Applications] → [ABBYY FineReader for ScanSnap], and drag the [ABBYY FineReader for ScanSnap] folder into the Trash.



For Mac OS X v.10.5/Mac OS X v10.4, also perform the following.

From the sidebar in Finder, select the [volume name] → [Library] → [Receipts], and drag [ABBYY FineReader.pkg] into the Trash.

4. Empty the Trash.

⇒ The [ABBYY FineReader for ScanSnap] folder is deleted.

Cardiris

- 1. Turn on the computer and log in as a user with Administrator privileges.
- 2. Exit Cardiris if it is running (select [Quit] from the Cardiris menu).
- 3. Insert the Setup DVD-ROM into the DVD-ROM drive.
 - ⇒ The [ScanSnap] window appears.
- **4.** Scroll down and double-click the [Tool] folder → [Cardiris 3.6 for ScanSnap].
 - ⇒ The [Cardiris 3.6 for ScanSnap] window appears, displaying the [License] screen.
- **5.** Scroll down and read the "License" to the end, and then click the [Continue] button.
 - ⇒ A confirmation message appears.
- 6. Click the [Agree] button.
 - ⇒ The [Select Destination] screen appears.
- 7. Select the destination where "Cardiris" is installed and click the [Continue] button.
 - ⇒ The [Installation Type] screen appears.
- **8.** Select [Uninstall] from the [Installation Type] pop-up menu, and click the [Uninstall] button.
 - ⇒ A confirmation message appears.
- 9. Click the [Continue] button.
 - ⇒ The uninstallation is started.
 - ⇒ The [Finish Up] screen appears.

10.Click the [Quit] button.



For Mac OS X v.10.5/Mac OS X v10.4, also perform the following.

From the sidebar in Finder, select the [volume name] → [Library] → [Receipts], and drag [Cardiris.pkg] into the Trash.

11.Remove the Setup DVD-ROM from the DVD-ROM drive.

Evernote for Mac

- 1. Turn on the computer.
- 2. Exit Evernote if it is running (select [Quit] form the Evernote menu).

If the Evernote icon () is displayed on the right side of the menu bar, click the icon and select [Quit] from the menu that appears.

- **3.** From Finder, select [Applications] → [Evernote], and drag the [Evernote] folder into the Trash.
- **4.** Empty the Trash.

⇒ The [Evernote] folder is deleted.

Setting items that you can configure in the ScanSnap setup dialog box/window differ depending on whether you are using the Quick Menu. You can select whether or not to use the Quick Menu according to your preferences.

For details about setting items and default settings, refer to the ScanSnap Manager Help.

(OK: Available, NA: Not available)

	Setting Item	Using the Quick Menu	Without Using the Quick Menu
Profile	Recommended	OK	NA
	Small File	OK	NA
	High Quality	OK	NA
	Customize	OK	NA
	Select a profile	NA	OK
	Add Profile	NA	OK
	Profile Management	NA	OK
Application	Application	NA(*)	OK
	None (Scan to File)	NA	OK
	Adobe [®] Acrobat [®] Macos Adobe Acrobat Pro, Adobe Acrobat Professional or Adobe Acrobat Standard	NA	ОК
	Adobe® Reader® Macos Adobe Reader	NA	ОК
	Windows CardMinder	NA	ОК
	ScanSnap Organizer	NA	ок
	ABBYY Scan to Excel Mac OS Scan to Excel	NA	ОК
	ABBYY Scan to Word Mac OS Scan to Word	NA	ОК
	ABBYY Scan to PowerPoint(R)	NA	ОК

	Setting Item	Using the Quick Menu	Without Using the Quick Menu
Application	Application	NA(*)	OK
	ABBYY Scan to Searchable PDF Wacos Scan to Searchable PDF	NA	ОК
	Scan to Folder	NA	ОК
	Scan to E-mail	NA	OK
	Scan to Picture Folder	NA	ОК
	Scan to Print	NA	OK
	Windows Rack2-Filer	NA	ОК
	Scan to SharePoint	NA	ОК
	Macos Preview	NA	ОК
	Macos Cardiris	NA	ОК
	Macos iPhoto	NA	ОК
	Scan to Evernote (Note)	NA	OK
	Scan to Evernote (Document)	NA	OK
	Scan to Google Docs(TM)	NA	OK
Save	Image saving folder	OK	
	File Name Format		OK
	Rename file after scanning	NA	ОК
Scanning	Image quality	OK	
	Automatic resolution		OK
	Normal (Color/Gray: 150 dpi, B&W: 300 dpi)	ОК	
	Better (Color/Gray: 200 dpi, B&W: 400 dpi)	ОК	
	Best (Color/Gray: 300 dpi, B&W: 600 dpi)	ОК	
	Excellent (Color/Gray: 600 dpi, B&W: 1200 dpi)	OK	
	Color mode		OK
	Auto color detection		OK
	Color	_	OK
	Gray	ОК	
	B&W		OK
	Color high compression	NA	ОК

	Setting Item	Using the Quick Menu	Without Using the Quick Menu
Scanning	Scanning side	OK	
	Simplex Scan (Single-sided)	OK	
	Continue scanning after current scan is finished		ОК
	Option		OK
	Brightness (Black and White scanning only)		ОК
	Setting for text only document		OK
	Allow automatic blank page removal		ОК
	Correct skewed character strings automatically		ОК
	Allow automatic image rotation		OK
File option	File format		ОК
	PDF (*.pdf)		OK
	JPEG (*.jpg)		OK
	Set the marked text as a keyword for the PDF file		ОК
	First marked section		OK
	All marked sections		OK
	Convert to Searchable PDF		OK
	Language		OK
	Target pages		OK
	First page	OK	
	All pages	OK	
	Option	OK	
	Multipage PDF (whole batch in one PDF)	OK	
	Generate one PDF file per (n) page(s)		ОК
	Set a password for PDF file	NA	ОК

Setting Item		Using the Quick Menu	Without Using the Quick Menu
Paper	Paper size	OK	
	Automatic detection		OK
	A4 (210 × 297 mm)		OK
	A5 (148 × 210 mm)		OK
	A6 (105 × 148 mm)		OK
	B5 (JIS) (182 × 257mm)		OK
	B6 (JIS) (128 × 182mm)		OK
	Post card (100 × 148 mm)		OK
	Business card (90 × 55 mm, 55 × 90 mm)		ОК
	Letter (8.5 × 11 in. (216 × 279.4 mm))		ОК
	Legal (8.5 × 14 in. (216 × 355.6 mm))		ОК
	Customize		OK
	Carrier Sheet Settings		OK
Compression	Compression rate		OK
	1		OK
	2		OK
	3		OK
	4		OK
	5		OK

^{* :} When using the Quick Menu, you can start an application to link with ScanSnap Manager from the Quick Menu after scanning. Therefore, the [Application] tab is not displayed.

Purchasing/Cleaning the Carrier Sheet

This section explains about how to purchase/clean the Carrier Sheet.

■ Purchasing the Carrier Sheet

The product name and part number of the Carrier Sheet are as follows.

Name	Quantity	Part No.
ScanSnap Carrier Sheet	5 sheets	PA03360-0013

The Carrier Sheet should be replaced approximately every 500 scans. However, replace it if damage or dirt is noticeable.

To purchase the Carrier Sheet, contact your FUJITSU dealer or an authorized FUJITSU scanner service provider.

■ Cleaning the Carrier Sheet

As you keep using the Carrier Sheet, dirt and dust will accumulate on the surface and the inside.

Clean the Carrier Sheet regularly because it may result in scanning errors.

How to perform cleaning

Gently wipe the dirt and dust off the surface and the inside of the Carrier Sheet with a cloth moistened with Cleaner F1/mild detergent.




- Do not use paint thinner or any other organic solvents.
- Do not use force to rub against the Carrier Sheet because it may be damaged or deformed.
- Be careful not to leave any crease on the Carrier Sheet.
- After cleaning the inside of the Carrier Sheet with a cloth moistened with Cleaner F1/mild detergent, make sure that it is completely dry before closing the Carrier Sheet.
- The Carrier Sheet should be replaced approximately every 500 scans.
 For details about purchasing the Carrier Sheet, refer to Purchasing/Cleaning the Carrier Sheet (page 380).

Installation Specifications

The following table summarizes the installation specifications of the ScanSnap.

Item		Specification
Outer dimensions (Width × Depth × Height)		Minimum: $273 \times 47.5 \times 34 \text{ (mm)} / 10.7 \times 1.9 \times 1.3 \text{ (in.)}$ (when the feed guide is closed) Maximum: $273 \times 77 \times 52 \text{ (mm)} / 10.7 \times 3 \times 2 \text{ (in.)}$ (when the feed guide or the output guide is open)
Weight		350g (approx. 0.77 lb.)
Input power	Voltage	5V
Power consumption		During operation: 2.5 W or less During standby: 1.0 W or less
Temperature / humidity allowable ranges	Temperature	During operation: 5 to 35°C / 41 to 95°F During standby: -20 to 60°C / -4 to 140 °F During storage/transportation: -20 to 60°C / -4 to 140°F
	Humidity	During operation: 20 to 80% During standby: 8 to 95% During storage/transportation: 8 to 95%

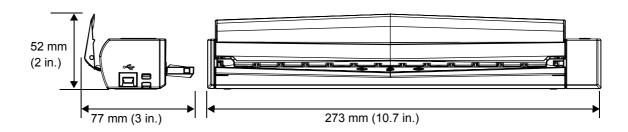

About Maintenance

Contact your FUJITSU scanner dealer or an authorized FUJITSU scanner service provider for repairs on this product.



Do not perform repairs on this scanner.

Index

A	D
ABBYY FineReader for	daily care358
ScanSnap	deleting profiles Windows89 Mac OS253
allow automatic image rotation Windows	documents for scanning27
automatic linkage Windows90 Mac OS255	Evernote Windows42 Mac OS54
	Evernote for Mac35
С	Evernote for Windows35
Cardiris 35, 49, 293 Address Book 298 CardMinder 35, 38, 141	exiting ScanSnap Manager Windows74 Mac OS238
Carrier Sheet 380 Windows 197, 202 Mac OS 336, 341	F feed guide19
Cleaner F1359	feeding section19
cleaning Carrier Sheet	G generate one PDF file per (n) page(s) Windows208
Cleaning Wipe359	Mac OS347
color high compression189	ш
configuring ScanSnap Manager Windows75 Mac OS239	how to load documents
copy Windows117 Mac OS276	how to perform a scan Windows61, 63, 69 Mac OS227, 228, 233
correct skewed character strings Windows192 Mac OS331	1
Mac 00031	installation34
	iPhoto301

K	Right-Click Menu59
keyword Windows	S saving profiles Windows
Left-Click Menu60	[Scan/Stop] button 19 Scan to E-mail 107, 113 Mac OS 268, 272
marker Windows213 Mac OS352	Scan to Evernote (Document) Windows
O online undate	Windows
online update Windows	Scan to Excel Windows135, 137 Mac OS287, 289
operating system Windows21 Mac OS23	Scan to Folder Windows
operation flow	Scan to Google Docs Windows
P	Scan to Microsoft SharePoint35
paper specifications27	Scan to Picture Folder126, 128
print Windows	Scan to PowerPoint(R)
0	Scan to SharePoint
Quick Menu Windows66 Mac OS231	Scan to Word Windows
R Rack2-Filer155	scanning color document in black & white or gray mode Windows
Rack2-Filer V5.0 Trial Version35	ScanSnap features
renaming profiles Windows	ScanSnap Manager 35 Windows 38, 58 Mac OS 49, 223

ScanSnap Manager menu	224
ScanSnap Organizer	35, 38
[ScanSnap Setup] dialog box	36
ScanSnap setup dialog box	78, 79
ScanSnap setup window	242
[ScanSnap] window	48
ScanSnap's communication status	93
setting keywords Windows Mac OS	215 354
shared folder Windows Mac OS	
showing the scanning progress status Windows Mac OS	
sleep mode	26
system requirements Windows Mac OS	21 23
Т	
top cover	19
turning ON/OFF ScanSnap	25
U	
uninstalling Windows Mac OS	
updating Windows Mac OS	
LICP connector	20

ScanSnap S1100

Operator's Guide

P3PC-3252-01ENZ0

Issue date: October 2010

Issued by: PFU LIMITED

- The contents of this manual are subject to change without notice.
- PFU LIMITED assumes no liability for incidental or consequential damages arising from the use of this product, and any claims by a third party.
- Copying of the contents of this manual, in whole or in part, as well as the scanner applications is prohibited under the copyright law.