

User's Guide

TRENDNET[®]



10 dBi Outdoor PoE Access Point

TEW-738APBO

Contents

Introduction 4

- Package Contents 4
- Hardware Feature 5

System Concept..... 6

- Product Benefit..... 7
- Installation Considerations 7
- Installation 7
- Configuration 8

Applications 9

- AP Mode (including Access Point + WDS)..... 9
- WDS Mode (Pure WDS) 10
- Client Bridge + Universal Repeater Mode 10
- CPE + AP Mode (Router Client + Access Point) 11

Web Management Interface Instructions..... 11

AP Mode Configuration 12

- External Network Connection..... 12
- Network Requirement 12

 - Configure LAN IP 12

- Wireless LAN Network..... 15

 - Wireless General Setup 15
 - Wireless Advanced Setup..... 15
 - Wireless WMM QoS Setup..... 17
 - Create Virtual AP (VAP) 19
 - Virtual AP Setup 20
 - Wireless MAC Filter Setup..... 22
 - Wireless Network Expansion 22

- System Status 23

 - System Overview..... 23
 - Associated Clients Status 24
 - Show WDS Link Status..... 24

- Extra Information 25
- Event Log..... 26

WDS Mode Configuration..... 26

- External Network Connection 26

 - Network Requirement 26
 - Configure LAN IP 27

- Wireless Network Expansion 27

 - Wireless General Setup..... 27
 - Wireless Advanced Setup..... 28
 - Wireless WMM QoS Setup..... 29
 - WDS Setup 31

- System Status 32

 - System Overview 32
 - Extra Information 33
 - Event Log..... 34
 - WDS Link Status 34

Repeater Mode 35

- External Network Connection 35

 - Network Requirement 35
 - Configure LAN IP 35

- Wireless Network Expansion 36

 - Wireless General Setup..... 36
 - Wireless Advanced Setup..... 37
 - Wireless WMM QoS Setup..... 39
 - Site Survey 40
 - Repeater AP Setup 41
 - Wireless MAC Filter Setup 43
 - Create Wireless Profile 43
 - Bandwidth Control 45
 - Configure SNMP Setup..... 45
 - Configure Time Policy 46

- System Status 47

System Overview.....	47	Remote AP status.....	68
DHCP Client	48	System Management	68
Extra Information	48	Configure Management	68
Event Log.....	49	Configure System Time	70
Associated Client List	49	Configure SNMP Setup.....	70
Remote AP status.....	50	Enable UPNP	71
CPE + AP Mode Configuration	50	Backup / Restore and Reset to Factory.....	71
External Network Connection.....	50	Firmware Upgrade	72
Network Requirement	50	Network Utility.....	72
Configure CPE Setup.....	51	Reboot.....	73
Configure DDNS Setup	52	Mounting bracket installation	73
Configure LAN IP	53	Package contents.....	73
Configure Static IP address	54	Wall mount bracket	74
Access Point Association.....	54	Pole mount bracket	74
Wireless General Setup.....	54	Appendix.....	75
Wireless Advanced Setup.....	55	Windows TCP/IP Settings	75
Wireless WMM QoS Setup.....	56	Enabling UPnP in Windows XP.....	76
Site Survey.....	58	Limited Warranty.....	78
Create Wireless Profile.....	58		
AP Setup.....	60		
Wireless AP MAC Filter Setup	62		
Access Control	62		
DMZ.....	62		
IP Filter Setup	63		
MAC Filter Setup	63		
Virtual Server	64		
Bandwidth Control	64		
Routing.....	65		
Status	65		
System Overview.....	65		
DHCP Client	66		
Extra Information	67		
Event Log.....	68		
Associated Client List	68		

Introduction

TRENDnet's 10 dBi Outdoor PoE Access Point, model TEW-738APBO, provides Wireless N300 building-to-building connectivity for clear line of sight distances of up to 8 km (5 miles)*. A variety of installation scenarios are facilitated with Access Point (AP), Wireless Distribution System (WDS), Repeater, and CPE + AP modes. The rugged aluminum IP67 rated housing comes with wall and pole mounting hardware.

Performance

Multi-Mode Support

Supports Access Point (AP), Wireless Distribution System (WDS), WDS + AP, and CPE + AP modes

Wireless N300 (2.4 GHz)

Compliant with 802.11n/g/b technology (2.4 GHz) with data rates up to 300 Mbps

Outdoor Rated

Durable aluminum enclosure with an IP67 outdoor weather rating

Directional Antenna

Built in 10 dBi directional antenna

Distance Rating

When networked to the same unit, this unit is rated for connecting over clear line-of-sight distances of up to 8 km (5 miles)*

Power over Ethernet (PoE)

Comes with a proprietary PoE injector, so that it can connect a regular non-PoE switch

Logs

Real time logs and statistics help troubleshooting

Encrypted Wireless

Support for wireless encryption of up to WPA2

Multiple SSIDs

Create up to seven additional SSIDs

Compatibility

Compatible with legacy wireless devices

Mounting Hardware

Pole and wall mount hardware included

* Effective wireless coverage may vary depending on the wireless device's output power, antenna gain, antenna alignment, receiving sensitivity, and radio interference. Additionally environmental factors such as weather conditions, physical obstacles, and other considerations may affect performance. For optimal results, we recommended consulting a professional installer for site survey, safety precautions, and proper installation.

**Recommended max. PoE cable length of 70 m

Package Contents

The standard package contents

- TEW-738APBO
- Multi-Language Quick Installation Guide
- CD-ROM (User's Guide)
- PoE Injector & Power cord (All in one type)
- Mounting Kit
- Grounding wire
- Waterproof kit

Hardware Feature

Front Panel



- **Housing:** IP 66/67 housing

Bottom Panel




- **LED**
 - **LAN:** Turns on when there is a LAN connection and blinks when data is running through the LAN port.
 - **WLAN:** Turns on when wireless is enabled and blinks during wireless transmission occur.
 - **PWR:** Indicates the unit is powered on.
- **Reset Button (unscrew cap)**
 - **Reboot:** Press and hold the reset button for 2 seconds to restart the unit. All LEDs except PWR will turn off before the unit turns back on and wireless transmission occur.
 - **Reset** – Press and hold the reset button for more than 10 seconds to restore the unit back to factory default settings.
- **PoE Port (unscrew cap)** – Connect the network cable that is connected to the provided PoE injector to power and configure the unit.

System Concept

The TEW-738APBO is not only designed and used as a traditional outdoor AP, but also with rich features tailored for WISP applications. The two-level management capability and access control ease WISP and owners to maintain and manage wireless network in a more controllable fashion. Main applications are listed as follows with illustration:

- Wireless CPE for Multi Dwelling Unit/Multi-Tenant Unit (MDU/MTU) complexes including apartments, dormitories, and office complexes.
- Outdoor Access Point for school campuses, enterprise campuses, or manufacture plants.
- Indoor Access Point for hotels, factories, or warehouses where industrial grade devices are preferred.
- Public hotspot operation for café, parks, convention centers, shopping malls, or airports.
- Wireless coverage for indoor and outdoor grounds in private resorts, home yards, or gulf course communities.

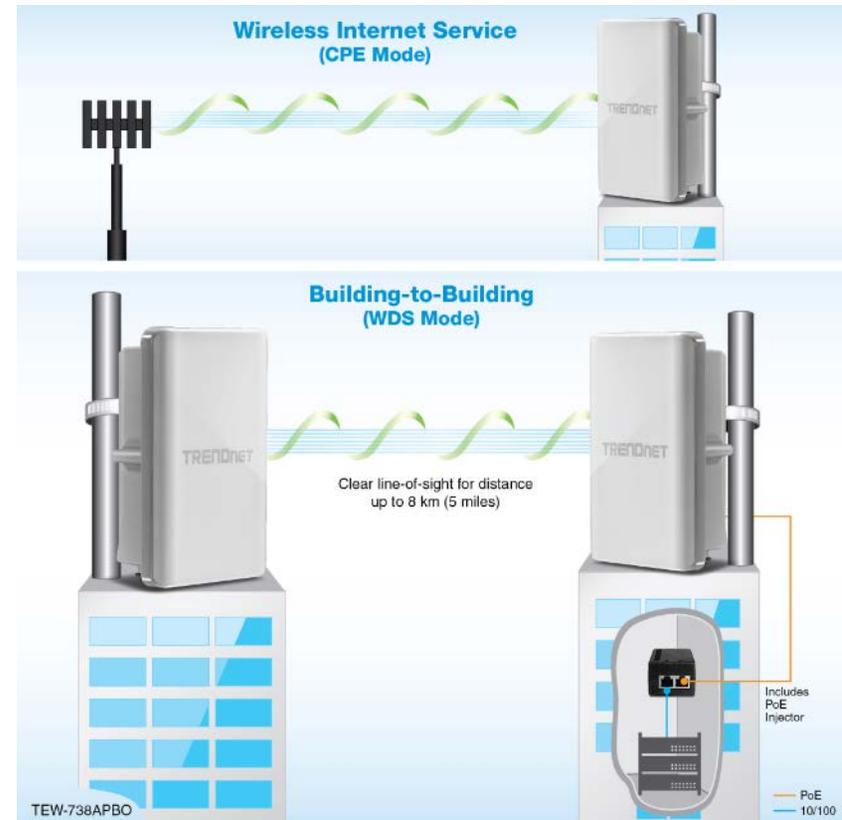

Product Benefit

The 10 dBi Outdoor PoE Access Point is the point of connection to Wireless Outdoor Network for service provider deploying last mile services to business or residential broadband subscribers.. Network administrators can create multiple subscriber service tier using per-subscriber rate limiting features, and manage centrally.

Installation Considerations


There are a number of factors that can impact the range of wireless devices.

1. Adjust your wireless devices so that the signal is traveling in a straight path, rather than at an angle. The more material the signal has to pass through the more signal you will lose.
2. Keep the number of obstructions to a minimum. Each obstruction can reduce the range of a wireless device. Position the wireless devices in a manner that will minimize the amount of obstructions between them.
3. Building materials can have a large impact on your wireless signal. In an indoor environment, try to position the wireless devices so that the signal passes through less dense material such as dry wall. Dense materials like metal, solid wood, glass or even furniture may block or degrade the signal.
4. Antenna orientation can also have a large impact on your wireless signal. Use the wireless adapter's site survey tool to determine the best antenna orientation for your wireless devices.
5. Interference from devices that produce RF (radio frequency) noise can also impact your signal. Position your wireless devices away from anything that generates RF noise, such as microwaves, radios and baby monitors.


If you are still experiencing low or no signal consider repositioning the wireless devices or installing additional access points. The use of higher gain antennas may also provide the necessary coverage depending on the environment.

Installation


1. Unscrew the black cap covering the PoE port of the TEW-738APBO
2. Install the waterproof kit and insert one end of an Ethernet cable through the kit.

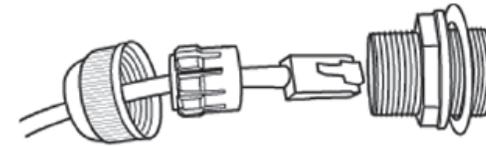


3. Connect the Ethernet cable to the **PoE** port of the TEW-738APBO

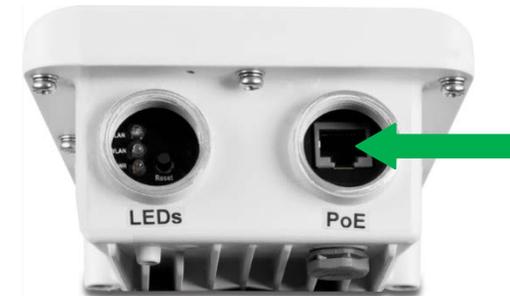

4. Tighten and secure the seal nut of the waterproof kit.
5. Connect the other end of the Ethernet cable to the **P+DATA Out** port on the PoE injector.

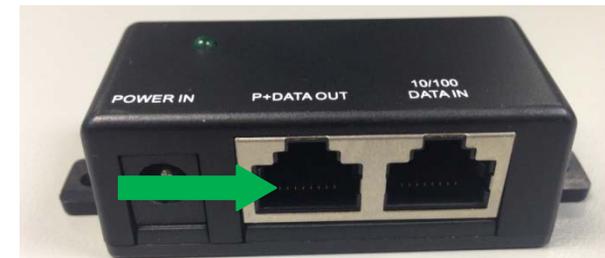


- Using another Ethernet cable, connect one end to the **DATA IN** port of the injector.

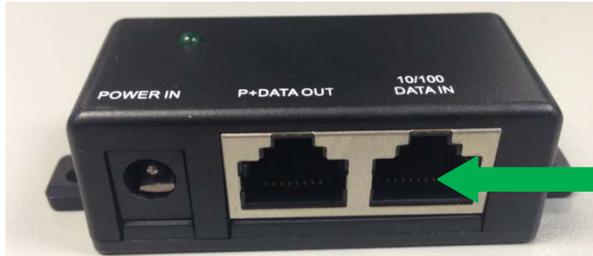

- Connect the other end of the Ethernet cable to the LAN port of your network.
- Plug the power cord into the injector. Then connect the plug into a power outlet.

Configuration

- Open a web browser, type the IP address of the Access Point and then press **Enter**. The default IP address is **192.168.10.100**.

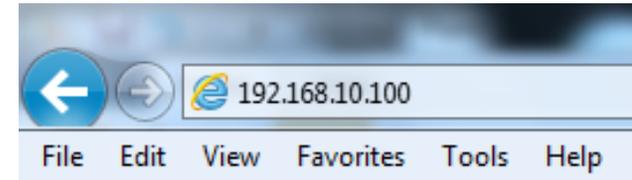

- Enter the **Username** and **Password** and click **OK**. By default the Username: **root** and Password: **root**.
- Click the **Wizard** button and follow the setup wizard instructions. Click **Finish** to complete installation.

Applications

TEW-738APBO is multiple mode system which can be configured either as a wireless gateway or an access point as desired. It also can be used as a WDS link for Ethernet network expansion. This section depicts different applications on **Router AP Mode**, **AP Mode**, **WDS Mode**, **CPE Mode**, **Client Bridge + Universal Repeater Mode** and **CPE + AP Mode**.


Operating Mode
<input checked="" type="radio"/> AP Mode
<input type="radio"/> WDS Mode
<input type="radio"/> Repeater Mode
<input type="radio"/> CPE + AP

AP Mode (including Access Point + WDS)

An access point can be either a main, relay or remote base station. A main base station is typically connected to a wired network via the Ethernet port. A relay base station relays data between main base stations and relay stations or remote base stations with clients. A remote base station is the end point to accept connections from wireless clients and pass data upwards to a network wirelessly.



Example 1: Access Point without WDS

- It can be deployed as a tradition fixed wireless Access Point

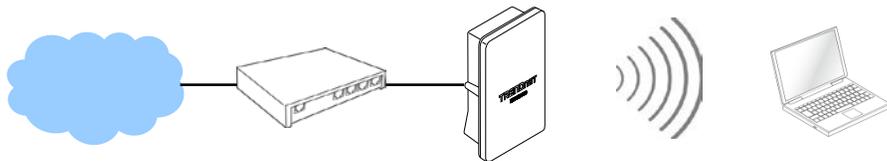

Example 2: Access Point with WDS


- It can be deployed as a tradition fixed wireless Access Point and provides WDS link to expand network

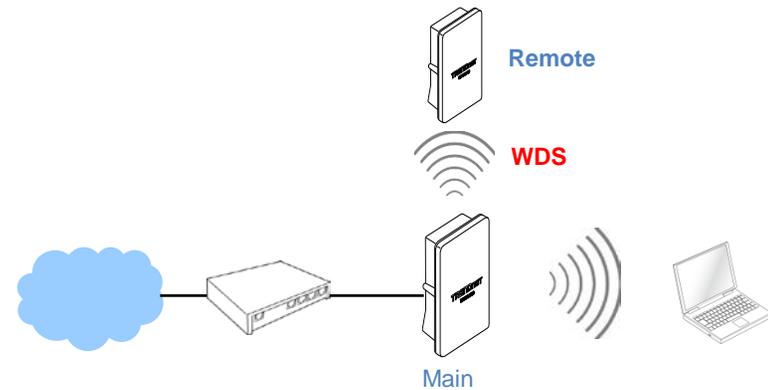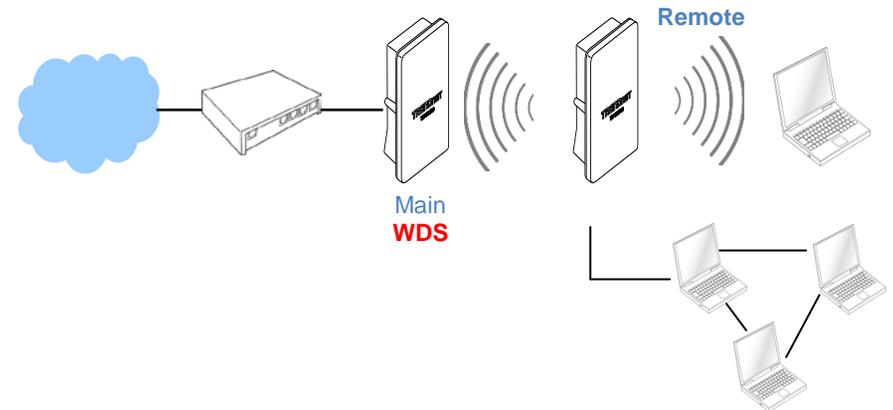


WDS Mode (Pure WDS)

An access point can be either a main, relay or remote base station. A main base station is typically connected to a wired network via the Ethernet port. A relay base station relays data between main base stations and relay stations or remote base stations with clients. A remote base station is the end point to accept connections from wireless clients and pass data upwards to a network wirelessly. In this mode, it can support single or multiple WDS links and no wireless clients can associate with it.


Example 1: Point-to-Point

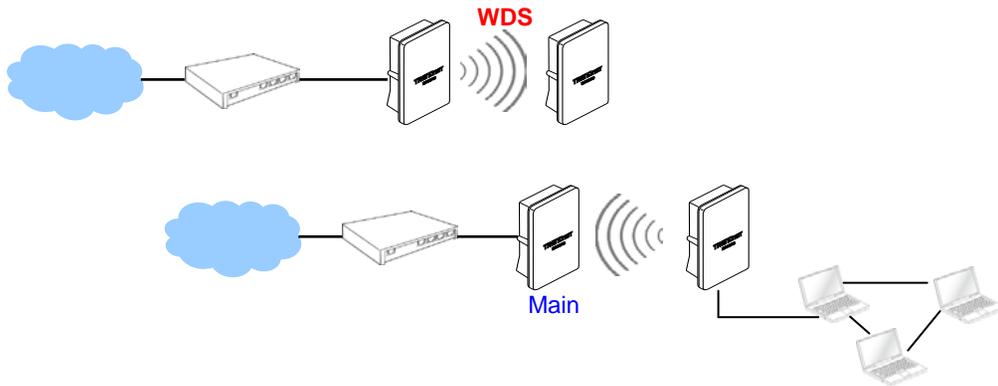

Example 2 : Point-to-Multi-Point

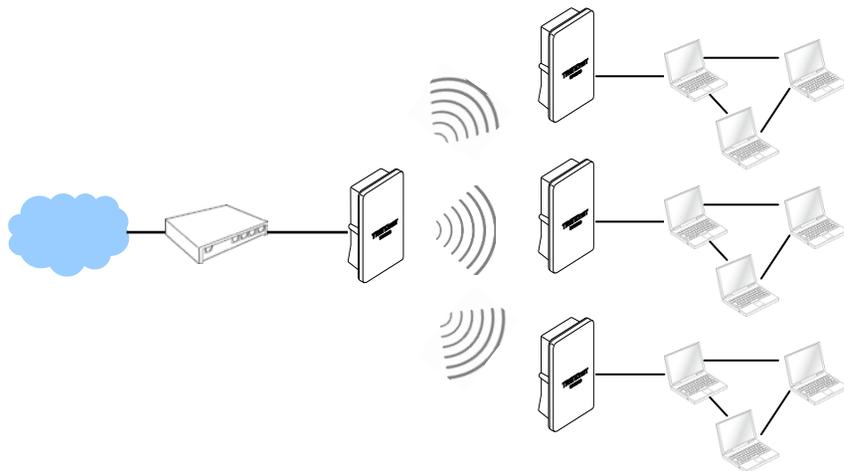


Example 3 : Multi-Point Repeating bridge

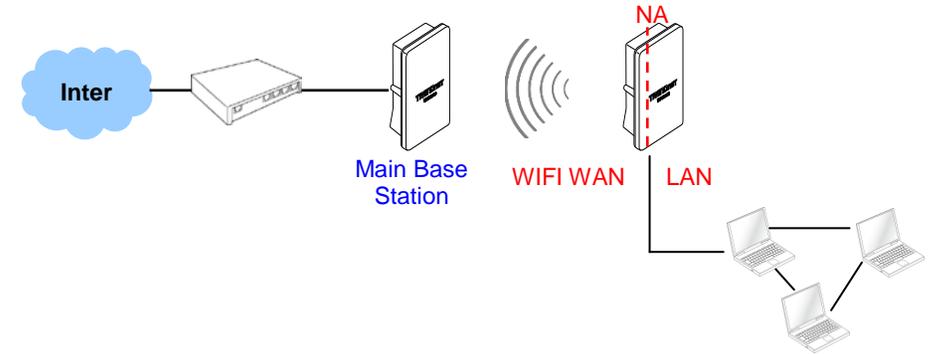


Client Bridge + Universal Repeater Mode

It can be used as an Client Bridge + Universal Repeater to receive wireless signal over last mile applications, helping WISPs deliver wireless broadband Internet service to new residential and business customers. In this mode, TEW-738APBO is enabled with DHCP Server functions. The wired clients of TEW-738APBO are in the same subnet from Main Base Station and it accepts wireless connections from client devices.

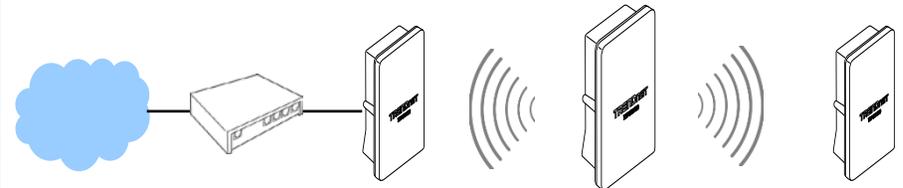

CPE + AP Mode (Router Client + Access Point)

It can be used as an Outdoor Customer Premised Equipment (CPE) to receive wireless signal over the last mile, helping WISPs deliver wireless broadband Internet service to new residential and business customers. In this mode, the TEW-738APBO is a gateway with NAT and DHCP Server functions. The wireless and wired clients of TEW-738APBO are on the **different subnet** from Main Base Station and it **accepts** wireless connections from client devices.

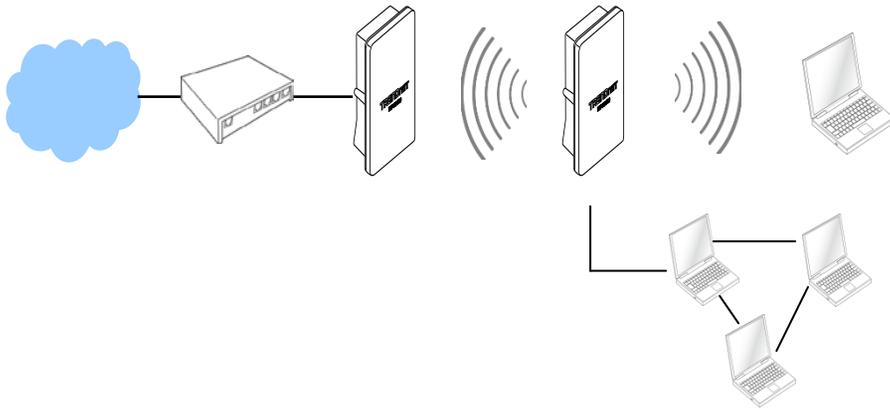

Web Management Interface Instructions

TEW-738APBO supports web-based configuration. Upon the completion of hardware installation, TEW-738APBO can be configured through a PC/NB by using its web browser such as Internet Explorer version 6.0.

- **Default IP Address** : 192.168.10.100
- **Default IP Netmask** : 255.255.255.0
- **Default User Name and Password** : admin/admin

Step

- **IP Segment Set-up for Administrator's PC/NB:** Set the IP segment of the administrator's computer to be in the same range as TEW-738APBO for accessing the system. Do not duplicate the IP Address used here with IP Address of TEW-738APBO or any other device within the network

Example of Segment:

The valid range is 1 ~ 254 and 192.168.10.254 shall be avoided because it is already assigned to TEW-738APBO. 192.168.10.10 is used in the example below.

- IP Address : 192.168.10.10
- IP Netmask : 255.255.255.0

- **Launch Web Browser**

Launch web browser to access the web management interface of system by entering the default IP Address, <http://192.168.10.100>, in the URL field, and then press **Enter**.

- **System Login:** The system manager Login Page then appears.

Enter "**admin**" as **User name** and "**admin**" as **Password**, and then click OK to login to the system; the root manager account is used as an example here.

- **Login Success:** System Overview page will appear after successful login.


AP Mode Configuration

When AP mode is chosen, the system can be configured as an Access Point. This section provides detailed explanation for users to configure in the AP mode with help of illustrations. In the AP mode, functions listed in the table below are also available from the Web-based GUI interface.

External Network Connection

Network Requirement

Normally, TEW-738APBO connects to a wired LAN and provides a wireless connection point to associate with wireless client as shown in Figure 3-1. Then, Wireless clients could access to LAN or Internet by associating themselves with TEW-738APBO set in AP mode.

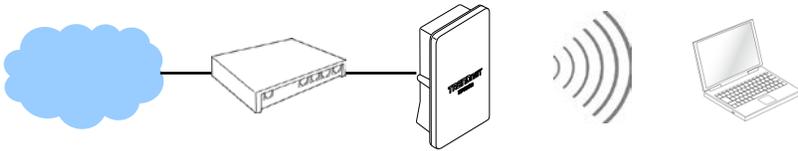

Configure LAN IP

Here are the instructions to setup the local IP Address and Netmask. Please click on **System** -> **LAN** and follow the below setting.

- **Mode:** Check either “Static IP” or “Dynamic IP” button as desired to set up the system IP of LAN port.

Ethernet Connection Type	
Mode	<input checked="" type="radio"/> Static IP <input type="radio"/> Dynamic IP
Static IP	
IP Address	<input type="text" value="192.168.10.100"/>
IP Netmask	<input type="text" value="255.255.255.0"/>
IP Gateway	<input type="text" value="192.168.10.1"/>

- **Static IP:** The administrator can manually setup the LAN IP address when static IP is available/ preferred.
 - **IP Address :** The IP address of the LAN port; default IP address is 192.168.2.254
 - **IP Netmask :** The Subnet mask of the LAN port; default Netmask is 255.255.255.0
 - **IP Gateway :** The default gateway of the LAN port; default Gateway is 192.168.2.1
- **Dynamic IP:** This configuration type is applicable when the TEW-738APBO is connected to a network with the presence of a DHCP server; all related IP information will be provided by the DHCP server automatically.

Dynamic IP	
Hostname	<input type="text"/>

- **Hostname :** The Hostname of the LAN port

- **DNS:** Check either “No Default DNS Server” or “Specify DNS Server IP” button as desired to set up the system DNS.

DNS	
DNS	<input checked="" type="radio"/> No Default DNS Server <input type="radio"/> Specify DNS Server IP
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>



- **Primary:** The IP address of the primary DNS server.
- **Secondary:** The IP address of the secondary DNS server.

- **802.1d Spanning Tree**

802.1d Spanning Tree	
Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

The spanning tree network protocol provides a loop free topology for a bridged LAN between LAN interface and 4 WDS interfaces from wds0 to wds3. The Spanning Tree Protocol, which is also referred to as STP, is defined in the IEEE Standard 802.1d. The Spanning tree always enabled on TEW-738APBO. Below Figures depict a loop for a bridged LAN between LAN and WDS link

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

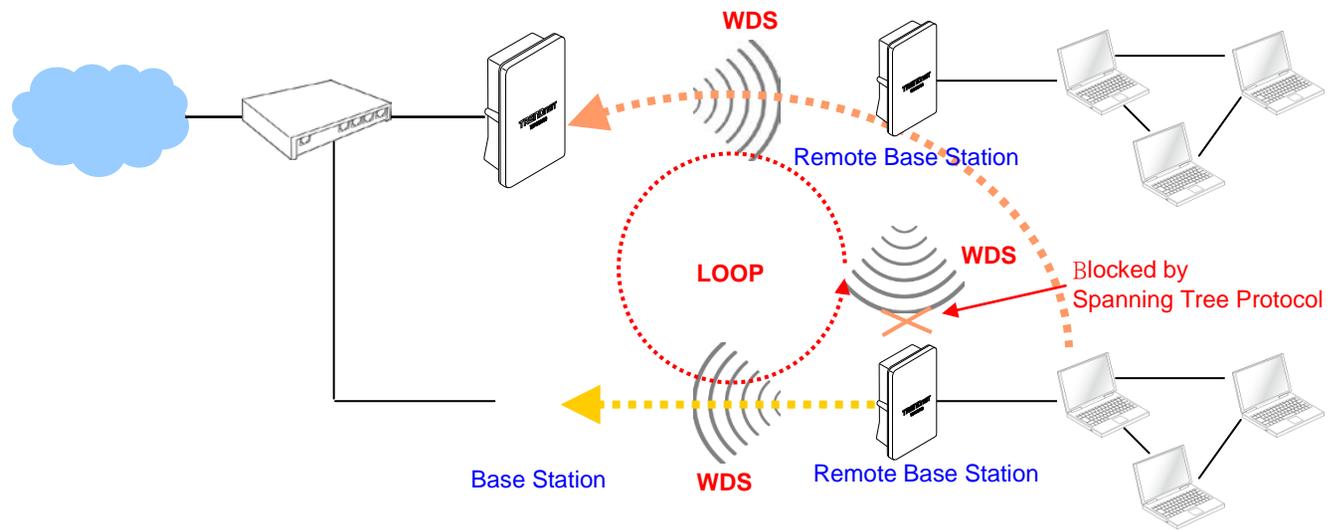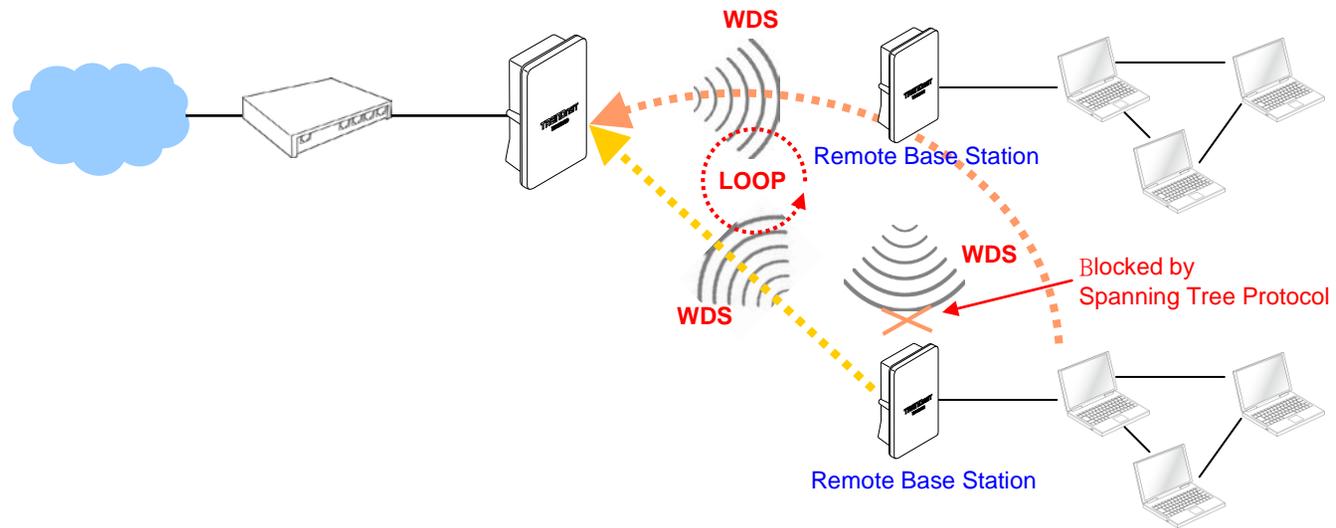

Wireless LAN Network

The network manager can configure related wireless settings, **General Settings**, **Advanced Settings**, **Virtual AP (VAP) Setting**, **Security Settings** and **MAC Filter Settings**.

Wireless General Setup

The administrator can change the data transmission, channel and output power settings for the system. Please click on **Wireless -> General Setup** and follow the below setting.

General Setup	
MAC Address	00:22:aa:00:11:08
Band Mode	802.11b/g/n
Channel	Auto <input type="button" value="Auto Scan"/>
Tx Power	Level 9
RF(ON/OFF) Schedule	Always Run

- **MAC Address:** The MAC address of the Wireless interface is displayed here.
- **Band Mode:** Select an appropriate wireless band; bands available are 801.11b, 802.11b/g, 802.11b/g/n or 802.11n only.
- **Channel:** Select the desired channel from the drop-down list to have the access point operate on. Click **Auto Scan** to scan for the best available channel to use based on the environment.
- **Tx Power:** You can adjust the output power of the system to get the appropriate coverage for your wireless network. Specify digit numbers between 1 to 100 (the unit is %) for your environment. If you are not sure which setting to choose, then keep the default setting, **100%**.
- **RF (ON/OFF) Schedule:** Select an assigned schedule of when to have the access point turn on. Select **Always Run** to have the access point always on.

When **Band Mode** select in **802.11a only mode**, the **HT(High Throughput)** settings should be hidden immediately.

HT Physical Mode	
TX/RX Stream	<input type="radio"/> 1 <input checked="" type="radio"/> 2
Channel BandWidth	<input type="radio"/> 20 <input checked="" type="radio"/> 20/40
Extension Channel	<input type="radio"/> Upper <input checked="" type="radio"/> Lower
MCS	Auto
Short GI	<input type="radio"/> Disbale <input checked="" type="radio"/> Enable
Aggregation	<input type="radio"/> Disbale <input checked="" type="radio"/> Enable
Aggregation Frames	32
Aggregation Size	50000

3

- **TxStream/Rx Stream:** Select the amount of transmit (TX) and Receive (RX) streams. By default, it's 2.
- **Channel Bandwidth:** The "20/40" MHz option is usually best. The other option is available for special circumstances.
- **Extensions Channel:** Select which section of channels to use for extension channels.
- **MCS:** This parameter represents transmission rate. By default (Auto) the fastest possible transmission rate will be selected. You have the option of selecting the speed if necessary. (Refer to **Appendix C. MCS Data Rate**)

Wireless Advanced Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced Setup** and follow the below setting.

Advanced Setup	
Slot Time	9 <input type="text"/> Distance <input type="text"/>
ACK Timeout	64 <input type="text"/>
Beacon Interval	100 <input type="text"/>
DTIM Interval	1 <input type="text"/>
RTS Threshold	2346 <input type="text"/>
Short Preamble	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IGMP Snooping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Greenfield	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
WMM	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- Short Slot:** By default, it's "**Enable**" for reducing the slot time from the standard **20 microseconds** to the **9 microsecond** short slot time. Slot time is the amount of time a device waits after a collision before retransmitting a packet. Reducing the slot time decreases the overall back-off, which increases throughput. Back-off, which is a multiple of the slot time, is the random length of time a station waits before sending a packet on the LAN. For a sender and receiver own right of the channel the shorter slot time help manage shorter wait time to re-transmit from collision because of hidden wireless clients or other causes. When collision sources can be removed sooner and other senders attempting to send are listening the channel (CSMA/CA) the owner of the channel should continue ownership and finish their transmission and release the channel. Then, following ownership of the channel will be sooner for the new pair due to shorter slot time. However, when long duration of existing collision sources and shorter slot time exist the owners might experience subsequent collisions. When adjustment to longer slot time can't improve performance then RTS/CTS could supplement and help improve performance.
- ACK Timeout:** ACK timeout is in the range of **1~255** and set in unit of **microsecond**. The default value is **32** microsecond. All data transmission in 802.11b/g request an "Acknowledgement" (ACK) send by receiving radio. The transmitter will resend the original packet if correspondent ACK failed to arrive within specific time interval, also refer to as "ACK Timeout".

ACK Timeout is adjustable due to the fact that distance between two radio links may vary in different deployment. ACK Timeout makes significant influence in performance of long distance radio link. If ACK Timeout is set too short, transmitter

will start to "Resend" packet before ACK is received, and throughputs become low due to excessively high re-transmission. ACK Timeout is best determined by distance between the radios, data rate of average environment. The Timeout value is calculated based on round-trip time of packet with a little tolerance, So, if experiencing re-transmissions or poor performance the ACK Timeout could be made longer to accommodate.

- Beacon Interval:** Beacon Interval is in the range of **20~1024** and set in unit of **millisecond**. The default value is **100** msec.

Access Point (AP) in IEEE 802.11 will send out a special approximated 50-byte frame, called "Beacon". Beacon is broadcast to all the stations, provides the basic information of AP such as SSID, channel, encryption keys, signal strength, time stamp, support data rate.

All the radio stations received beacon recognizes the existence of such AP, and may proceed next actions if the information from AP matches the requirement. Beacon is sent on a periodic basis, the time interval can be adjusted.

By increasing the beacon interval, you can reduce the number of beacons and associated overhead, but that will likely delay the association and roaming process because stations scanning for available access points may miss the beacons. You can decrease the beacon interval, which increases the rate of beacons. This will make the association and roaming process very responsive; however, the network will incur additional overhead and throughput will go down.

- DTIM Interval:** The DTIM interval is in the range of **1~255**. The default is **1**.

DTIM is defined as *Delivery Traffic Indication Message*. It is used to notify the wireless stations, which support power saving mode, when to wake up to receive multicast frame. DTIM is necessary and critical in wireless environment as a mechanism to fulfill power-saving synchronization. A DTIM interval is a count of the number of beacon frames that must occur before the access point sends the buffered multicast frames. For instance, if DTIM Interval is set to 3, then the Wi-Fi clients will expect to receive a multicast frame after receiving three Beacon frame. The higher DTIM interval will help power saving and possibly decrease wireless throughput in multicast applications.
- RTS Threshold:** RTS Threshold is in the range of **1~2347** byte. The default is **2347** byte. The main purpose of enabling RTS by changing RTS threshold is to reduce possible collisions due to hidden wireless clients. RTS in AP will be enabled automatically if the packet size is larger than the Threshold value. By default, RTS is disabled in a normal environment supports non-jumbo frames.
- Short Preamble:** By default, it's "**Enable**". To **Disable** is to use Long 128-bit Preamble

Synchronization field. The preamble is used to signal "here is a train of data coming" to the receiver. The short preamble provides 72-bit Synchronization field to improve WLAN transmission efficiency with less overhead.

- **WMM:** By default, it's "Enabled".

Wireless WMM QoS Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced**

WMM QoS					
WMM Parameters of Access Point					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	No ACK Policy bit
AC_BE(0)	4	6	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	1	3008	<input type="checkbox"/>
AC_VO(3)	2	3	1	1504	<input type="checkbox"/>
WMM Parameters of Station					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	ACM bit
AC_BE(0)	4	10	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	2	3008	<input type="checkbox"/>
AC_VO(3)	2	3	2	1504	<input type="checkbox"/>

- **WMM Parameters of Access Point :** This affects traffic flowing from the access point to the client station

Queue	Data Transmitted AP to Clients	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this

			queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue

Configuring QoS options consists of setting parameters on existing queues for different types of wireless traffic. You can configure different minimum and maximum wait times for the transmission of packets in each queue based on the requirements of the media being sent. Queues automatically provide minimum transmission delay for Voice, Video, multimedia, and mission critical applications, and rely on best-effort parameters for traditional IP data.

As an Example, time-sensitive Voice & Video, and multimedia are given effectively higher priority for transmission (lower wait times for channel access), while other applications and traditional IP data which are less time-sensitive but often more data-intensive are expected to tolerate longer wait times.

- o **Aifsn:** The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames
- o **CWmin:** Minimum Contention Window. This parameter is input to the algorithm that determines the initial random back-off wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random back-off wait time is determined.
- o **CWmax:** Maximum Contention Window. The value specified here in the Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random back-off value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".
- o **Txop:** Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (TXOP) for AP; that is, the

interval of time when the WMM AP has the right to initiate transmissions on the wireless network.

- o **ACM:** Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.
- o **AckPolicy:** Acknowledgment Policy, WMM defines two ACK policies: **Normal ACK** and **No ACK**. Click "Checkbox" indicates "No ACK"

Queue	Data Transmitted Clients to AP	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue

When the no acknowledgment (No ACK) policy is used, the recipient does not acknowledge received packets during wireless packet exchange. This policy is suitable in the environment where communication quality is fine and interference is weak. While the No ACK policy helps improve transmission efficiency, it can cause increased packet loss when communication quality deteriorates. This is because when this policy is used, a sender does not retransmit packets that have not been received by the recipient. When the Normal ACK policy is used, the recipient acknowledges each received unicast packet.

- **WMM Parameters of Station:** *This affects traffic flowing from the client station to the access point.*
 - o **Aifsn:** The Arbitration Inter-Frame Spacing Number specifies a wait time (in


milliseconds) for data frames

- o **CWmin:** Minimum Contention Window. This parameter is input to the algorithm that determines the initial random backoff wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random backoff wait time is determined.
- o **CWmax:** Maximum Contention Window. The value specified here in the Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".
- o **Txop:** Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (Txop) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
- o **ACM:** Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes. The items in this page are for AP's RF advanced settings and will be applied to **all VAPs** and **WDS Links**.

Create Virtual AP (VAP)

The TEW-738APBO support broadcasting multiple SSIDs, allowing the creation of Virtual Access Points, partitioning a single physical access point into 7 logical access points, each of which can have a different set of security, VLAN Tag(ID) and network settings. **Figure 3-2** shows multiple SSIDs with different security type and VLAN settings.

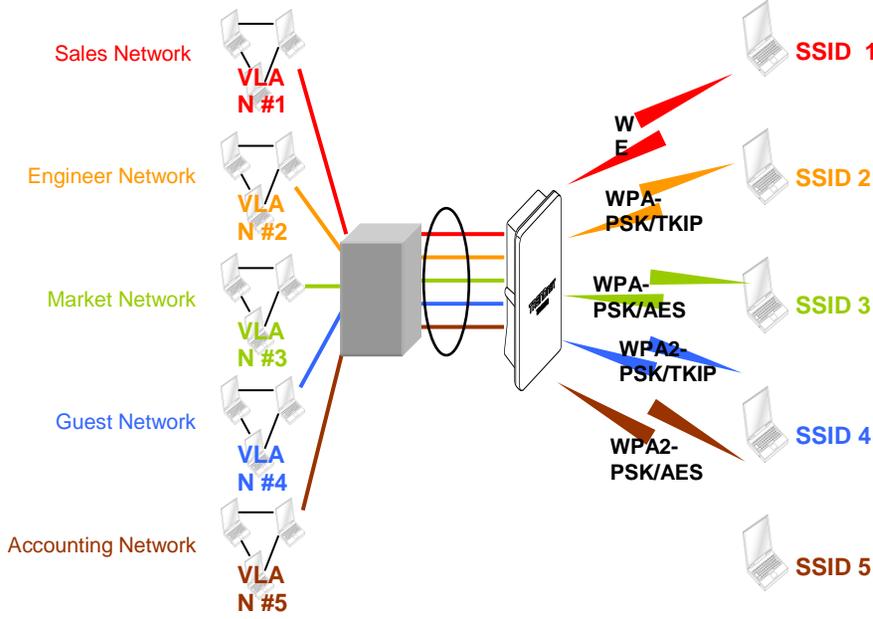

Multiple SSIDs with different Security Type and VLAN Tag

Virtual AP Overview

The administrator can view all of the Virtual AP's settings via this page. Please click on **Wireless -> Virtual AP Setup** and the Virtual AP Overview Page appears.

VAP	MAC Address	ESSID	Status	Security Type	MAC Filter Edit	MAC Filter Status	VAP Edit
VAP0	00:22:AA:00:11:08	TRENDnet7380_2.4GHz	On	Disabled	Edit	Disable	Edit
VAP1		TRENDnet7381_2.4GHz	Off	Disabled	Edit	Disable	Edit
VAP2		TRENDnet7382_2.4GHz	Off	Disabled	Edit	Disable	Edit
VAP3		TRENDnet7383_2.4GHz	Off	Disabled	Edit	Disable	Edit
VAP4		TRENDnet7384_2.4GHz	Off	Disabled	Edit	Disable	Edit
VAP5		TRENDnet7385_2.4GHz	Off	Disabled	Edit	Disable	Edit
VAP6		TRENDnet7386_2.4GHz	Off	Disabled	Edit	Disable	Edit
VAP7		TRENDnet7387_2.4GHz	Off	Disabled	Edit	Disable	Edit

- **VAP:** Indicate the system's Virtual AP.
- **MAC Address:** The MAC address of the VAP Interface is displayed here. When you enable AP and reboot system, the MAC address will display here.
- **ESSID:** Indicate the ESSID of the respective Virtual AP
- **Status:** Indicate the Status of the respective Virtual AP. The **Primary AP** always on.
- **Security Type:** Indicate a used security type of the respective Virtual AP.
- **MAC Filter:** Indicate a used MAC filter of the respective Virtual AP.
- **Edit:** Click **Edit** button to configure Virtual AP's settings, including security type and MAC Filter.

Virtual AP Setup

For each Virtual AP, administrators can configure SSID, VLAN tag(ID), SSID broadcasting, Maximum number of client associations, security type settings.

Click **Edit** button on the Edit column, and then a Virtual AP setup page appears.

Security	
ESSID	TRENDnet7380_2.4GHz
Hidden SSID	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Client Isolation	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IAPP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Maximum Clients	32
VLAN ID(Tag)	LAN <input type="checkbox"/> VLAN ID <input type="text"/>
Security Type	Disable

- **ESSID:** Extended Service Set ID, when clients are browsing for available wireless networks, this is the SSID that will appear in the list. ESSID will determine the service type available to AP's clients associated with the specified VAP.
- **Hidden SSID:** By default, it's "**Disable**". Enable this option to stop the SSID broadcast in your network. When disabled, people could easily obtain the SSID information with the site survey software and get access to the network if security is not turned on. When enabled, network security is enhanced. It's suggested to enable it after AP security settings are archived and setting of AP clients could make to associate to it.
- **Client Isolation:** Select **Enable**, all clients will be isolated from each other, that mean all clients cannot reach to other clients. Below Figures depict Client Isolation and AP Isolation
- **IAPP:**
- **Maximum Clients:** The default value is **32**. You can enter the number of wireless clients that can associate to a particular SSID. When the number of client is set to 5, only 5 clients at most are allowed to connect to this VAP.
- **VLAN Tag (ID) :** By default, it's selected "**Disable**".

This system supports tagged Virtual LAN (VLAN). A valid number of **1 to 4094** can be entered after it's enabled. If your network utilize VLANs you could tie a VLAN Tag to a specific SSID, and packets from/to wireless clients belonging to that SSID will be tagged with that VLAN Tag. This enables security of wireless applications by applying VLAN Tag.

- **Security Type:** Select the desired security type from the drop-down list; the options

are **Disable, WEP, WPA-PSK, WPA2-PSK, WPA-Enterprise, WPA2-Enterprise** and **WEP 802.1X**.

- **Disable:** Data are unencrypted during transmission when this option is selected.

WEP	
Key Length	64 bits
WEP Auth Method	<input type="checkbox"/> Open System <input checked="" type="checkbox"/> Shared
Key Index	1
WEP Key 1	<input type="text"/>
WEP Key 2	<input type="text"/>
WEP Key 3	<input type="text"/>
WEP Key 4	<input type="text"/>

- **WEP Auth Method:** Enable the desire option among **OPEN** or **SHARED**
 - **Key Index:** Key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
- **WPA-PSK (or WPA2-PSK) :** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

WPA General	
Cipher Suite	<input type="radio"/> AES <input checked="" type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
Key Type	<input checked="" type="radio"/> ASCII <input type="radio"/> HEX
Pre-shared Key	<input type="text"/>

- **Cipher Suite:** By default, it is **AES**. Select either AES or TKIP cipher suites
- **Group Key Update Period:** By default, it is **600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.

- **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Pre-shared Key:** Enter the pre-shared key; the format shall go with the selected key type.

- **WPA-Enterprise (or WPA2-Enterprise):** The RADIUS authentication and encryption will be both enabled if this is selected.

WPA General	
Cipher Suite	<input checked="" type="radio"/> AES <input type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
EAP Reauth Period	3600
Authentication RADIUS Server	
Server IP	
Port	1812
Shared Secret	
Accounting RADIUS Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **WPA General Settings:**
 - **Cipher Suite:** By default, it is AES. Select either AES or TKIP cipher suites
 - **Group Key Update Period:** By default, it's **3600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **EAP Reauth Period:** By default, it's **3600** seconds. Set **WPA2** PMKID cache timeout period, after time out, the cached key will be deleted.
 - **Pre-Authentication:** By default, it's "Disable". To Enable is use to speed up roaming before pre-authenticating IEEE 802.1X/EAP part of the full RSN authentication and key handshake before actually associating with a new AP.

- **Radius Server Settings :**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's 1812. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports 8 to 64 characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.
- **WEP 802.1X:** When WEP 802.1x Authentication is enabled, please refer to the following Dynamic WEP and RADIUS settings to complete configuration.

Dynamic WEP Setting	
WEP Key Length	<input type="radio"/> 64bits <input checked="" type="radio"/> 128bits
WEP Key Update Period	300
EAP Reauth Period	3600
Authentication RADIUS Server	
Server IP	
Port	1812
Shared Secret	
Accounting RADIUS Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **Radius Server Settings:**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's **1812**. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports **8** to **64** characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Wireless MAC Filter Setup

Continue **Virtual AP Setup** section. For each Virtual AP setting, the administrator can allow or reject clients to access each Virtual AP.

MAC Rules	
Action	Only Deny List MAC <input type="button" value="Save"/>
ACL MAC Address	
MAC Address	<input type="text"/> <input type="button" value="Add"/>


- **MAC Filter Setup:** By default, it's **"Disable"**. Options are **Disable, Only Deny List MAC or Only Allow List MAC**.
Two ways to set MAC filter rules:
 - **Only Allow List MAC:** The wireless clients in the **"Enable"** list will be **allowed** to access the Access Point; All others or clients in the **"Disable"** list will be **denied**.
 - **Only Deny List MAC:** The wireless clients in the **"Enable"** list will be **denied** to access the Access Point; All others or clients in the **"Disable"** list will be **allowed**.

Add a station MAC: Enter MAC address (e.g. aa:bb:cc:00:00:0a) and click **"Add"** button, then the MAC address should display in the **"Enable"** List.

There are a maximum of **20** clients allowed in this **"Enable"** List. The MAC addresses of the wireless clients can be added and removed to the list using the **Add** and **Remove** buttons. Click **Reboot** button to activate your changes

Wireless Network Expansion

The administrator could create WDS Links to expand wireless network. When WDS is enabled, access point functions as a wireless bridge and is able to communicate with other access points via WDS links. A WDS link is **bidirectional** and **both side must support WDS**. Access points know each other by **MAC Address**. In other words, each access point needs to include **MAC address of its peer**. Ensure all access points are configured with the same channel and own same security type settings.

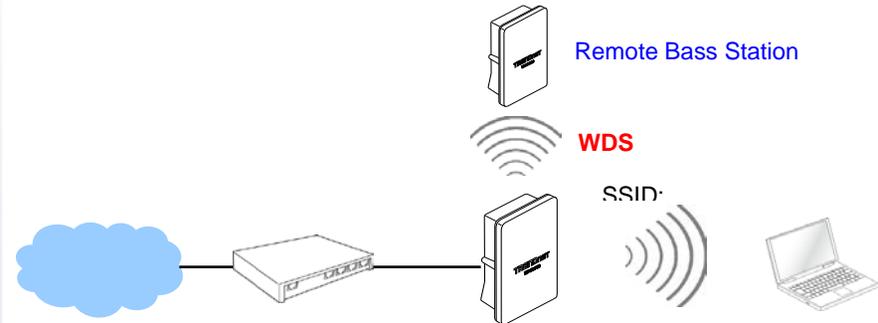

Please click on **Wireless -> WDS Setup** and follow the below setting.

WDS Setup			
The Channel must be fixed!			
Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		
#	Enable	WDS Peer's MAC Address	Description
1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
4	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>

- **Security Type:** Option is **"Disable", "WEP", "TKIP" or "AES"** from drop-down list. Needs the same type to build WDS links. Security type takes effect when WDS is

enabled.

- o **WEP Key:** Enter **5 / 13 ASCII** or **10 / 26 HEX** format WEP key.
- o **TKIP Key:** Enter **8 to 63 ASCII** or **64 HEX** format TKIP key.
- o **AES Key:** Enter **8 to 63 ASCII** or **64 HEX** format AES key.

- **WDS MAC List**

- o **Enable:** Click **Enable** to create WDS link.
- o **WDS Peer's MAC Address:** Enter the MAC address of WDS peer.
- o **Description:** Description of WDS link.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

System Status

This section breaks down into subsections of **System Overview**, **Associated Clients Status**, **WDS Link Status**, **Extra Information** and **Event Log**.

System Overview

Display detailed information of **System**, **Network**, **LAN and Wireless** in the System Overview page.

- **Device Information:** Display the information of the system.

Device Information	
Mode	AP
Host Name	TEW-738APBO
Host Description	10dBi Outdoor PoE Access Point
Firmware Version	V1.0.19
Firmware Date	2014/04/23 09:44:51
Country	US
System Time	2013/07/09 00:35:09
System Up Time	8 Day 00:35:27
ETH1 MAC	00:22:AA:00:11:07
ETH2 MAC	00:22:AA:00:11:06
Wireless MAC	00:22:AA:00:11:08
CPU Loading	0%
Memory Used	71%

- o **Operating Mode:** The mode currently in service.
- o **Host Name:** The name of the system.

- o **Host Description:** A description of the system.
- o **Firmware Version:** The current installed firmware version.
- o **Firmware Date:** The build time of installed firmware.
- o **Device Time:** The current time of the system.
- o **System Up Time:** The time period that system has been in service since last reboot.
- o **ETH1/ETH2MAC:** Ethernet MAC address of the access point.
- o **Wireless MAC:** Wireless MAC address of the access point
- o **CPU Loading:** The CPU loading of the access point
- o **Memory Used:** Memory usage of the access point.

- **LAN Information:** Display total received and transmitted statistics on the LAN interface.

LAN Information	
Ethernet Connection Type	Static IP
IP Address	192.168.10.100
IP Netmask	255.255.255.0
IP Gateway	192.168.10.1
DNS	

- o **Ethernet Connection Type:** The connection applied on the access point.
- o **IP Address:** The management IP of system. By default, it's 192.168.2.254.
- o **IP Netmask:** The network mask. By default, it's 255.255.255.0.
- o **IP Gateway:** The gateway IP addresses and by default, it's 192.168.2.1.
- o **Primary DNS:** The primary DNS server in service.

- **Wireless Information:** Display total received and transmitted statistics on available Virtual AP.

Wireless Information	
WiFi	On
Band	802.11b/g/n
Channel	5
Current Txpower	28 dBm (630 mW)
Date Rate	Auto (300Mb/s)

- **WiFi:** Wireless status of the access point.
- **Band:** Operating wireless band of the access point.
- **Channel:** Operating channel of the access point.
- **Current Tx Power:** Transmit power of the access point.
- **Data Rate:** Current wireless data rate of the access point.

Associated Clients Status

It displays ESSID, on/off Status, Security Type, total number of wireless clients associated with all Virtual AP.

VAP	ESSID	Status	Security Type	Clients
VAP0	TRENDnet7380_2.4GHz	On	Disabled	2
VAP1	TRENDnet7381_2.4GHz	Off	Disabled	0
VAP2	TRENDnet7382_2.4GHz	Off	Disabled	0
VAP3	TRENDnet7383_2.4GHz	Off	Disabled	0
VAP4	TRENDnet7384_2.4GHz	Off	Disabled	0
VAP5	TRENDnet7385_2.4GHz	Off	Disabled	0
VAP6	TRENDnet7386_2.4GHz	Off	Disabled	0
VAP7	TRENDnet7387_2.4GHz	Off	Disabled	0

- **VAP Information:** Highlights key VAP information.
 - **VAP:** Available VAP from Primary AP to VAP6.
 - **ESSID:** Display name of ESSID for each VAP.
 - **Status :** On/Off
 - **Security Type:** Display chosen security type; WEP, WPA/WPA2-PSK, WPA/WPA2-

Enterprise.

- **Clients:** Display total number of wireless connections for each VAP.

- **VAP Clients:** Display all associated clients on each Virtual AP.

#	MAC Address	RSSI	TX/RX Rate	TX/RX SEQ	TX/RX Bytes	Connect Time	Actions
1	00:14:d1:c2:da:84	46	0 / 1	0 / 49872	0 / 1.0 M	1 Day 19:40:10	Disconnect
2	3c:ab:8e:51:ad:b5	10	0 / 1	0 / 1136	0 / 150.9 K	03:02:43	Disconnect

- **MAC Address:** MAC address of associated clients
- **RSSI:** Signal Strength of from associated clients.
- **TX/RX Rate:** Transmit and receive connection rate
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes
- **Connect Time:** Connection time
- **Disconnect:** Click "Disconnect" button to manually disconnect a wireless client in a Virtual AP.

Show WDS Link Status

Peers MAC Address, antenna 0/1 received signal strength, phy mode and channel bandwidth for each WDS are available.

#	MAC Address	RSSI	TX/RX Rate	TX/RX SEQ	TX/RX Bytes
No WDS Link!					

- **MAC Address:** Display MAC address of WDS peer.
- **RSSI:** Indicate the signal strength of the respective WDS links.
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes

Extra Information

Users could pull out information such as Route table, ARP table, MAC table, Bridge table or STP available in the drop-down list from system. The “Refresh” button is used to retrieve latest table information.

Extra Information			
Information	Route Information		
Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **Route table information:** Select “Route table information” on the drop-down list to display route table. TEW-738APBO could be used as a L2 or L3 device. It doesn't support dynamic routing protocols such as RIP or OSPF. Static routes to specific hosts, networks or default gateway are set up automatically according to the IP configuration of system's interfaces. When used as a L2 device, it could switch packets and, as L3 device, it's capable of being a gateway to route packets inward and outward.

Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **ARP table Information:** Select “ARP Table Information” on the drop-down list to display ARP table. ARP associates each IP address to a unique hardware address (MAC) of a device. It is important to have a unique IP address as final destination to switch packets to.

ARP Table Information		
IP Address	MAC Address	Interface
192.168.10.123	00:26:2d:5b:46:53	bre0

- **Bridge table information:** Select “Bridge Table information” on the drop-down list to display bridge table. Bridge table will show Bridge ID and STP's Status on the each Ethernet bridge and its attached interfaces, the Bridge Port should be attached to some interfaces (e.g. eth2, ra0~ra6 and wds0~wds3).

Bridge Table Information			
Bridge Port	Bridge ID	STP Enabled	Interface
LAN	8000.0022aa001106	no	eth1
			eth0
			ath0

- **Bridge MAC information:** Select “Bridge MACs Information” on the drop-down list to display MAC table.

Bridge MACs Table Information			
Port	MAC Address	Local	Ageing Timer
VAP0	00:14:d1:c2:da:84	no	3.17
LAN	00:22:aa:00:11:06	yes	0.00
WAN	00:22:aa:00:11:07	yes	0.00
VAP0	00:22:aa:00:11:08	yes	0.00
WAN	00:26:2d:5b:46:53	no	0.04

This table displays local MAC addresses associated with wired or wireless interfaces, but also remember non-local MAC addresses learned from wired or wireless interfaces. Ageing timers will be reset when existing MAC addresses in table are learned again or added when new MAC addresses are seen from wired or wireless interfaces as well. When time runs out for a particular entry, it will be pruned from the table. In that situation, switching packet to that particular MAC address will be dropped.

Event Log

The Event log displays system events when system is up and running. Also, it becomes very useful as a troubleshooting tool when issues are experienced in system.

Time	Facility	Severity	Message
2013-07-06 03:32:47	System	Info	Authentication successful for admin from 192.168.10.123

- **Time:** The date and time when the event occurred.
- **Facility:** It helps users to identify source of events such "System" or "User"
- **Severity:** Severity level that a specific event is associated such as "info", "error", "warning", etc.
- **Message:** Description of the event.

Click **Refresh** button to renew the log, or click **Clear** button to clear all the record.

WDS Mode Configuration


Please refer to illustrations of the section 1.3 for possible applications in the WDS mode. This section provides detailed explanation for users to configure in the WDS mode with help of illustrations. In the WDS mode, functions listed in the table below are also available from the Web-based GUI interface.

WDS Mode Functions

Option	System	Wireless	Utilities	Status
Functions	Operating	General Setup	Profiles Settings	System
	LAN	Advanced Setup	Firmware	WDS Status
	Management	WDS Setup	Network Utility	Extra Info
	Time Server		Reboot	Event Log
	SNMP			

External Network Connection Network Requirement

You could expand your Ethernet network via WDS link. In this mode, the TEW-738APBO connects directly to a wired LAN, and wirelessly bridges to a remote access point via a WDS link as shown in Figure 4-1. In the mode, it can't associate with any wireless clients.

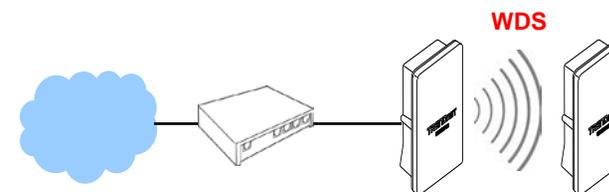

Point to Point network Configuration

Configure LAN IP

Here are the instructions to setup the local IP Address and Netmask.
Please click on **System** -> **LAN** and follow the below setting.

- **Mode:** Check either “Static IP” or “Dynamic IP” button as desired to set up the system IP of LAN port.

Ethernet Connection Type	
Mode	<input checked="" type="radio"/> Static IP <input type="radio"/> Dynamic IP
Static IP	
IP Address	<input type="text" value="192.168.10.100"/>
IP Netmask	<input type="text" value="255.255.255.0"/>
IP Gateway	<input type="text" value="192.168.10.1"/>

- **Static IP :** The administrator can manually setup the LAN IP address when static IP is available/ preferred.
 - **IP Address :** The IP address of the LAN port; default IP address is 192.168.2.254
 - **IP Netmask :** The Subnet mask of the LAN port; default Netmask is 255.255.255.0
 - **IP Gateway :** The default gateway of the LAN port; default Gateway is 192.168.2.1
- **Dynamic IP :** This configuration type is applicable when the TEW-738APBO is connected to a network with the presence of a DHCP server; all related IP information will be provided by the DHCP server automatically.

Dynamic IP	
Hostname	<input type="text"/>

- **Hostname :** The Hostname of the LAN port
- **DNS :** Check either “No Default DNS Server” or “Specify DNS Server IP” button as desired to set up the system DNS.

DNS	
DNS	<input checked="" type="radio"/> No Default DNS Server <input type="radio"/> Specify DNS Server IP
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>

- **Primary:** The IP address of the primary DNS server.
- **Secondary:** The IP address of the secondary DNS server.

- **802.1d Spanning Tree**

802.1d Spanning Tree	
Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

The spanning tree network protocol provides a loop free topology for a bridged LAN between LAN interface and 4 WDS interfaces from wds0 to wds3. The Spanning Tree Protocol, which is also referred to as STP, is defined in the IEEE Standard 802.1d. The Spanning tree always enabled on TEW-738APBO. Below Figures depict a loop for a bridged LAN between LAN and WDS link

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Wireless Network Expansion

The network manager can configure related wireless settings, **General Settings**, **Advanced Settings** and **WDS Settings**.

Wireless General Setup

The administrator can change the data transmission, channel and output power settings for the system. Please click on **Wireless** -> **General Setup** and follow the below setting.

General Setup	
MAC Address	00:22:aa:00:11:08
Band Mode	802.11b/g/n
Channel	Auto <input type="button" value="Auto Scan"/>
Tx Power	Level 9
RF(ON/OFF) Schedule	Always Run

- **MAC Address:** The MAC address of the Wireless interface is displayed here.
- **Band Mode:** Select an appropriate wireless band; bands available are 801.11b, 802.11b/g, 802.11b/g/n or 802.11n only.
- **Channel:** Select the desired channel from the drop-down list to have the access point operate on. Click **Auto Scan** to scan for the best available channel to use based on the environment.
- **Tx Power:** You can adjust the output power of the system to get the appropriate coverage for your wireless network. Specify digit numbers between 1 to 100 (the unit is %) for your environment. If you are not sure which setting to choose, then keep the default setting, **100%**.
- **RF (ON/OFF) Schedule:** Select an assigned schedule of when to have the access point turn on. Select **Always Run** to have the access point always on.

When **Band Mode** select in **802.11a only mode**, the **HT(High Throughput)** settings should be hidden immediately.

HT Physical Mode	
TX/RX Stream	<input type="radio"/> 1 <input checked="" type="radio"/> 2
Channel BandWidth	<input type="radio"/> 20 <input checked="" type="radio"/> 20/40
Extension Channel	<input type="radio"/> Upper <input checked="" type="radio"/> Lower
MCS	Auto
Short GI	<input type="radio"/> Disbale <input checked="" type="radio"/> Enable
Aggregation	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Aggregation Frames	32
Aggregation Size	50000

- **TxStream/Rx Stream:** Select the amount of transmit (TX) and Receive (RX) streams.

By default, it's 2.

- **Channel Bandwidth:** The "20/40" MHz option is usually best. The other option is available for special circumstances.
- **Extensions Channel:** Select which section of channels to use for extension channels.
- **MCS:** This parameter represents transmission rate. By default (Auto) the fastest possible transmission rate will be selected. You have the option of selecting the speed if necessary. (Refer to **Appendix C. MCS Data Rate**)

Wireless Advanced Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced Setup** and follow the below setting.

Advanced Setup	
Slot Time	9 <input type="button" value="Distance"/>
ACK Timeout	64
Beacon Interval	100
DTIM Interval	1
RTS Threshlod	2346
Short Preamble	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IGMP Snooping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Greenfield	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
WMM	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **Short Slot:** By default, it's "Enable" for reducing the slot time from the standard **20 microseconds** to the **9 microsecond** short slot time. Slot time is the amount of time a device waits after a collision before retransmitting a packet. Reducing the slot time decreases the overall back-off, which increases throughput. Back-off, which is a multiple of the slot time, is the random length of time a station waits before sending a packet on the LAN. For a sender and receiver own right of the channel the shorter slot time help manage shorter wait time to re-transmit from collision because of hidden wireless clients or other causes. When collision sources can be removed sooner and other senders attempting to send are listening the channel

(CSMA/CA) the owner of the channel should continue ownership and finish their transmission and release the channel. Then, following ownership of the channel will be sooner for the new pair due to shorter slot time. However, when long duration of existing collision sources and shorter slot time exist the owners might experience subsequent collisions. When adjustment to longer slot time can't improve performance then RTS/CTS could supplement and help improve performance.

- **ACK Timeout:** ACK timeout is in the range of **1~255** and set in unit of *microsecond*. The default value is **32** microsecond. All data transmission in 802.11b/g request an "Acknowledgement" (ACK) send by receiving radio. The transmitter will resend the original packet if correspondent ACK failed to arrive within specific time interval, also refer to as "ACK Timeout".

ACK Timeout is adjustable due to the fact that distance between two radio links may vary in different deployment. ACK Timeout makes significant influence in performance of long distance radio link. If ACK Timeout is set too short, transmitter will start to "Resend" packet before ACK is received, and throughputs become low due to excessively high re-transmission. ACK Timeout is best determined by distance between the radios, data rate of average environment. The Timeout value is calculated based on round-trip time of packet with a little tolerance, So, if experiencing re-transmissions or poor performance the ACK Timeout could be made longer to accommodate.

- **Beacon Interval::** Beacon Interval is in the range of **20~1024** and set in unit of *millisecond*. The default value is **100** msec.

Access Point (AP) in IEEE 802.11 will send out a special approximated 50-byte frame, called "Beacon". Beacon is broadcast to all the stations, provides the basic information of AP such as SSID, channel, encryption keys, signal strength, time stamp, support data rate.

All the radio stations received beacon recognizes the existence of such AP, and may proceed next actions if the information from AP matches the requirement. Beacon is sent on a periodic basis, the time interval can be adjusted.

By increasing the beacon interval, you can reduce the number of beacons and associated overhead, but that will likely delay the association and roaming process because stations scanning for available access points may miss the beacons. You can decrease the beacon interval, which increases the rate of beacons. This will make the association and roaming process very responsive; however, the network will incur additional overhead and throughput will go down.

- **DTIM Interval:** The DTIM interval is in the range of **1~255**. The default is **1**. DTIM is defined as *Delivery Traffic Indication Message*. It is used to notify the

wireless stations, which support power saving mode, when to wake up to receive multicast frame. DTIM is necessary and critical in wireless environment as a mechanism to fulfill power-saving synchronization. A DTIM interval is a count of the number of beacon frames that must occur before the access point sends the buffered multicast frames. For instance, if DTIM Interval is set to 3, then the Wi-Fi clients will expect to receive a multicast frame after receiving three Beacon frame. The higher DTIM interval will help power saving and possibly decrease wireless throughput in multicast applications.

- **RTS Threshold:** TRTS Threshold is in the range of **1~2347** byte. The default is **2347** byte. The main purpose of enabling RTS by changing RTS threshold is to reduce possible collisions due to hidden wireless clients. RTS in AP will be enabled automatically if the packet size is larger than the Threshold value. By default, RTS is disabled in a normal environment supports non-jumbo frames.
- **Short Preamble:** By default, it's "*Enable*". To *Disable* is to use Long 128-bit Preamble Synchronization field. The preamble is used to signal "here is a train of data coming" to the receiver. The short preamble provides 72-bit Synchronization field to improve WLAN transmission efficiency with less overhead.
- **WMM:** By default, it's "*Enabled*".

Wireless WMM QoS Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced**

WMM QoS					
WMM Parameters of Access Point					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	No ACK Policy bit
AC_BE(0)	4	6	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	1	3008	<input type="checkbox"/>
AC_VO(3)	2	3	1	1504	<input type="checkbox"/>
WMM Parameters of Station					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	ACM bit
AC_BE(0)	4	10	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	2	3008	<input type="checkbox"/>
AC_VO(3)	2	3	2	1504	<input type="checkbox"/>

- **WMM Parameters of Access Point** : This affects traffic flowing from the access point to the client station

Queue	Data Transmitted AP to Clients	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue

Configuring QoS options consists of setting parameters on existing queues for different types of wireless traffic. You can configure different minimum and maximum wait times for the transmission of packets in each queue based on the requirements of the media being sent. Queues automatically provide minimum transmission delay for Voice, Video, multimedia, and mission critical applications, and rely on best-effort

parameters for traditional IP data.

As an Example, time-sensitive Voice & Video, and multimedia are given effectively higher priority for transmission (lower wait times for channel access), while other applications and traditional IP data which are less time-sensitive but often more data-intensive are expected to tolerate longer wait times.

- **Aifsn**: The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames
- **CWmin**: Minimum Contention Window. This parameter is input to the algorithm that determines the initial random back-off wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random back-off wait time is determined.
- **CWmax**: Maximum Contention Window. The value specified here in the Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random back-off value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".
- **Txop**: Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (TXOP) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
- **ACM**: Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.
- **AckPolicy**: Acknowledgment Policy, WMM defines two ACK policies: **Normal ACK** and **No ACK**. Click "**Checkbox**" indicates "**No ACK**"

Queue	Data Transmitted Clients to AP	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue

When the no acknowledgment (No ACK) policy is used, the recipient does not acknowledge received packets during wireless packet exchange. This policy is suitable in the environment where communication quality is fine and interference is weak. While the No ACK policy helps improve transmission efficiency, it can cause increased packet loss when communication quality deteriorates. This is because when this policy is used, a sender does not retransmit packets that have not been received by the recipient. When the Normal ACK policy is used, the recipient acknowledges each received unicast packet.

- **WMM Parameters of Station:** *This affects traffic flowing from the client station to the access point.*
 - **Aifsn** : The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames
 - **CWmin** : Minimum Contention Window. This parameter is input to the algorithm that determines the initial random backoff wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random backoff wait time is determined.
 - **CWmax** : Maximum Contention Window. The value specified here in the

Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".

- **Txop** : Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (Txop) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
- **ACM**: Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes. The items in this page are for AP's RF advanced settings and will be applied to **all VAPs** and **WDS Links**.

WDS Setup

The administrator could create WDS Links to expand wireless network. When WDS is enabled, access point functions as a wireless bridge and is able to communicate with other access points via WDS links. **A WDS link is bidirectional and both side must support WDS. Access points know each other by MAC Address. In other words, each access point needs to include MAC address of its peer. Ensure all access points are configured with the same channel and own same security type settings.**

Security

Security Type: Disable

WDS MAC List

#	Enable	WDS Peer's MAC Address	Description
1	<input type="checkbox"/>	: : : : :	
2	<input type="checkbox"/>	: : : : :	
3	<input type="checkbox"/>	: : : : :	
4	<input type="checkbox"/>	: : : : :	

- **Security Type:** Option is “Disable”, “WEP”, “TKIP” or “AES” from drop-down list. Needs the same type to build WDS links. Security type takes effect when WDS is enabled.
 - **WEP Key:** Enter **5 / 13 ASCII** or **10 / 26 HEX** format WEP key.
 - **TKIP Key:** Enter **8 to 63 ASCII** or **64 HEX** format TKIP key.
 - **AES Key:** Enter **8 to 63 ASCII** or **64 HEX** format AES key.
- **WDS MAC List**
 - **Enable:** Click **Enable** to create WDS link.
 - **WDS Peer's MAC Address:** Enter the MAC address of WDS peer.
 - **Description:** Description of WDS link.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

System Status

This section breaks down into subsections of **System Overview**, **Associated Clients Status**, **WDS Link Status**, **Extra Information** and **Event Log**.

System Overview

Display detailed information of **System**, **Network**, **LAN and Wireless** in the System Overview page.

- **Device Information:** Display the information of the system.

Device Information	
Mode	AP
Host Name	TEW-738APBO
Host Description	10dBi Outdoor PoE Access Point
Firmware Version	V1.0.19
Firmware Date	2014/04/23 09:44:51
Country	US
System Time	2013/07/09 00:35:09
System Up Time	8 Day 00:35:27
ETH1 MAC	00:22:AA:00:11:07
ETH2 MAC	00:22:AA:00:11:06
Wireless MAC	00:22:AA:00:11:08
CPU Loading	0%
Memory Used	71%

- **Operating Mode:** The mode currently in service.
 - **Host Name:** The name of the system.
 - **Host Description:** A description of the system.
 - **Firmware Version:** The current installed firmware version.
 - **Firmware Date:** The build time of installed firmware.
 - **Device Time:** The current time of the system.
 - **System Up Time:** The time period that system has been in service since last reboot.
 - **ETH1/ETH2MAC:** Ethernet MAC address of the access point.
 - **Wireless MAC:** Wireless MAC address of the access point
 - **CPU Loading:** The CPU loading of the access point
 - **Memory Used:** Memory usage of the access point.
- **LAN Information:** Display total received and transmitted statistics on the LAN interface.

LAN Information	
Ethernet Connection Type	Static IP
IP Address	192.168.10.100
IP Netmask	255.255.255.0
IP Gateway	192.168.10.1
DNS	

- o **Ethernet Connection Type:** The connection applied on the access point.
 - o **IP Address:** The management IP of system. By default, it's 192.168.2.254.
 - o **IP Netmask:** The network mask. By default, it's 255.255.255.0.
 - o **IP Gateway:** The gateway IP addresses and by default, it's 192.168.2.1.
 - o **Primary DNS:** The primary DNS server in service.
- **Wireless Information:** Display total received and transmitted statistics on available Virtual AP.

Wireless Information	
WiFi	On
Band	802.11b/g/n
Channel	5
Current Txpower	28 dBm (630 mW)
Date Rate	Auto (300Mb/s)

- o **WiFi:** Wireless status of the access point.
- o **Band:** Operating wireless band of the access point.
- o **Channel:** Operating channel of the access point.
- o **Current Tx Power:** Transmit power of the access point.
- o **Data Rate:** Current wireless data rate of the access point.

Extra Information

Users could pull out information such as Route table, ARP table, MAC table, Bridge table

or STP available in the drop-down list from system. The "Refresh" button is used to retrieve latest table information.

Extra Information			
Information	Route Information		
Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **Route table information:** Select "Route table information" on the drop-down list to display route table. TEW-738APBO could be used as a L2 or L3 device. It doesn't support dynamic routing protocols such as RIP or OSPF. Static routes to specific hosts, networks or default gateway are set up automatically according to the IP configuration of system's interfaces. When used as a L2 device, it could switch packets and, as L3 device, it's capable of being a gateway to route packets inward and outward.

Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **ARP table Information:** Select "ARP Table Information" on the drop-down list to display ARP table. ARP associates each IP address to a unique hardware address (MAC) of a device. It is important to have a unique IP address as final destination to switch packets to.

ARP Table Information		
IP Address	MAC Address	Interface
192.168.10.123	00:26:2d:5b:46:53	bre0

- **Bridge table information:** Select “**Bridge Table information**” on the drop-down list to display bridge table. Bridge table will show Bridge ID and STP's Status on the each Ethernet bridge and its attached interfaces, the Bridge Port should be attached to some interfaces (e.g. eth2, ra0~ra6 and wds0~wds3).

Bridge Table Information			
Bridge Port	Bridge ID	STP Enabled	Interface
LAN	8000.0022aa001106	no	eth1
			eth0
			ath0

- **Bridge MAC information:** Select “**Bridge MACs Information**” on the drop-down list to display MAC table.

Bridge MACs Table Information			
Port	MAC Address	Local	Ageing Timer
VAP0	00:14:d1:c2:da:84	no	3.17
LAN	00:22:aa:00:11:06	yes	0.00
WAN	00:22:aa:00:11:07	yes	0.00
VAP0	00:22:aa:00:11:08	yes	0.00
WAN	00:26:2d:5b:46:53	no	0.04

This table displays local MAC addresses associated with wired or wireless interfaces, but also remember non-local MAC addresses learned from wired or wireless interfaces. Ageing timers will be reset when existing MAC addresses in table are learned again or added when new MAC addresses are seen from wired or wireless interfaces as well. When time runs out for a particular entry, it will be pruned from the table. In that situation, switching packet to that particular MAC address will be dropped.

Event Log

The Event log displays system events when system is up and running. Also, it becomes very useful as a troubleshooting tool when issues are experienced in system.

Time	Facility	Severity	Message
2013-07-06 03:32:47	System	Info	Authentication successful for admin from 192.168.10.123

- **Time:** The date and time when the event occurred.
- **Facility:** It helps users to identify source of events such “System” or “User”
- **Severity:** Severity level that a specific event is associated such as “info”, “error”, “warning”, etc.
- **Message:** Description of the event.

Click **Refresh** button to renew the log, or click **Clear** button to clear all the record.

WDS Link Status

Peers MAC Address, antenna 0/1 received signal strength, phy mode and channel bandwidth for each WDS are available.

#	MAC Address	RSSI	TX/RX Rate	TX/RX SEQ	TX/RX Bytes
No WDS Link!					


- **MAC Address:** Display MAC address of WDS peer.
- **RSSI:** Indicate the signal strength of the respective WDS links.
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes

Repeater Mode

When Universal Repeater mode is activated, the system can be configured as an **Access Point** and **Client Station** simultaneously. This section provides information in configuring the Client Bridge+Universal Repeater mode with graphical illustrations. TEW-738APBO provides functions as stated below where they can be configured via a user-friendly web based interface.

External Network Connection Network Requirement

It can be used as a Client Bridge or Universal Repeater to receive and repeat wireless signal over last mile applications, helping WISPs deliver wireless broadband Internet service to new residential and business customers. In this mode, TEW-738APBO is enabled with DHCP Server functions. The wired clients of TEW-738APBO are in **the same** subnet from Main Base Station and it **accepts** wireless connections from wireless client devices.

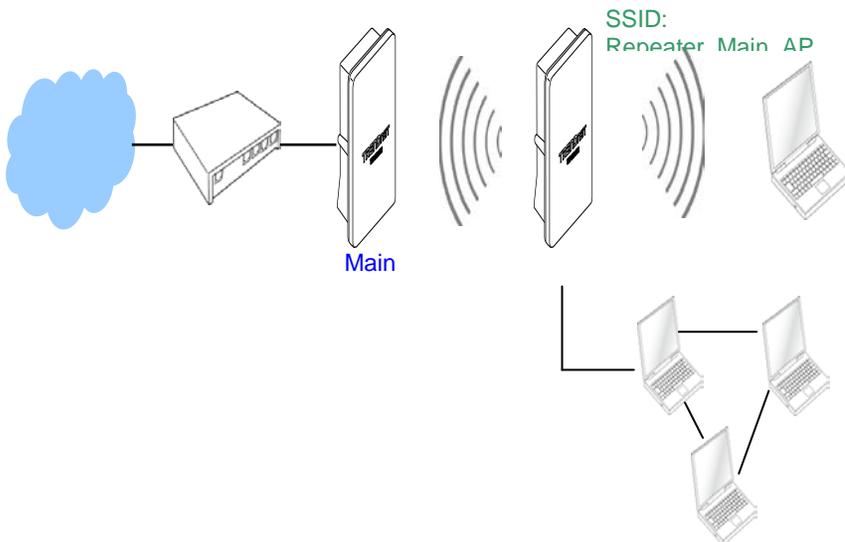

Universal Repeater mode network Configuration

Configure LAN IP

Here are the instructions to setup the local IP Address and Netmask. Please click on **System** -> **LAN** and follow the below setting.

- **Mode:** Check either “Static IP” or “Dynamic IP” button as desired to set up the system IP of LAN port.

Ethernet Connection Type	
Mode	<input checked="" type="radio"/> Static IP <input type="radio"/> Dynamic IP
Static IP	
IP Address	<input type="text" value="192.168.10.100"/>
IP Netmask	<input type="text" value="255.255.255.0"/>
IP Gateway	<input type="text" value="192.168.10.1"/>

- **Static IP:** The administrator can manually setup the LAN IP address when static IP is available/ preferred.
 - **IP Address :** The IP address of the LAN port; default IP address is 192.168.2.254
 - **IP Netmask :** The Subnet mask of the LAN port; default Netmask is 255.255.255.0
 - **IP Gateway :** The default gateway of the LAN port; default Gateway is 192.168.2.1
- **Dynamic IP :** This configuration type is applicable when the TEW-738APBO is connected to a network with the presence of a DHCP server; all related IP information will be provided by the DHCP server automatically.

Dynamic IP	
Hostname	<input type="text"/>

- **Hostname :** The Hostname of the LAN port
- **DNS:** Check either “No Default DNS Server” or “Specify DNS Server IP” button as desired to set up the system DNS.

DNS	
DNS	<input checked="" type="radio"/> No Default DNS Server <input type="radio"/> Specify DNS Server IP
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>

- o **Primary:** The IP address of the primary DNS server.
- o **Secondary:** The IP address of the secondary DNS server.

• **802.1d Spanning Tree**

802.1d Spanning Tree	
Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

The spanning tree network protocol provides a loop free topology for a bridged LAN between LAN interface and 4 WDS interfaces from wds0 to wds3. The Spanning Tree Protocol, which is also referred to as STP, is defined in the IEEE Standard 802.1d. Spanning tree always disabled on TEW-738APBO. Below Figures depict a loop for a bridged LAN between LAN and WDS link

- **DHCP Setup:** Devices connected to the system can obtain an IP address automatically when this service is enabled.

DHCP Server	
Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Start IP	192.168.10.101
End IP	192.168.10.254
Default Gateway	192.168.10.100
DNS1 IP	192.168.10.100
DNS2 IP	
WINS IP	
Domain	
Lease Time	86400

- o **DHCP:** Check **Enable** button to activate this function or **Disable** to deactivate this service.
- o **Start IP / End IP:** Specify the range of IP addresses to be used by the DHCP server when assigning IP address to clients. The default range IP address is 192.168.2.10 to 192.168.2.70, the netmask is 255.255.255.0
- o **DNS1 IP:** Enter IP address of the first DNS server; this field is required.
- o **DNS2 IP:** Enter IP address of the second DNS server; this is optional.
- o **WINS IP:** Enter IP address of the Windows Internet Name Service (WINS) server; this is optional.

- o **Domain:** Enter the domain name for this network.
- o **Lease Time:** The IP addresses given out by the DHCP server will only be valid for the duration specified by the lease time. Increasing the time ensure client operation without interruptions, but could introduce potential conflicts. Lowering the lease time will avoid potential address conflicts, but might cause more interruptions to the client while it will acquire new IP addresses from the DHCP server. Default is **86400** seconds

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Wireless Network Expansion

The network manager can configure related wireless settings, **General Settings**, **Advanced Settings** and **WDS Settings**.

Wireless General Setup

The administrator can change the data transmission, channel and output power settings for the system. Please click on **Wireless -> General Setup** and follow the below setting.

General Setup	
MAC Address	00:22:aa:00:11:08
Band Mode	802.11b/g/n
Channel	Auto <input type="button" value="Auto Scan"/>
Tx Power	Level 9
RF(ON/OFF) Schedule	Always Run

- **MAC Address:** The MAC address of the Wireless interface is displayed here.
- **Band Mode:** Select an appropriate wireless band; bands available are 801.11b, 802.11b/g, 802.11b/g/n or 802.11n only.
- **Channel:** Select the desired channel from the drop-down list to have the access point operate on. Click **Auto Scan** to scan for the best available channel to use based on the environment.
- **Tx Power:** You can adjust the output power of the system to get the appropriate coverage for your wireless network. Specify digit numbers between 1 to 100 (the unit is %) for your environment. If you are not sure which setting to choose, then keep the default setting, **100%**.
- **RF (ON/OFF) Schedule:** Select an assigned schedule of when to have the access

point turn on. Select **Always Run** to have the access point always on.

When **Band Mode** select in **802.11a only mode**, the **HT(High Throughput)** settings should be hidden immediately.

HT Physical Mode	
TX/RX Stream	<input type="radio"/> 1 <input checked="" type="radio"/> 2
Channel BandWidth	<input type="radio"/> 20 <input checked="" type="radio"/> 20/40
Extension Channel	<input type="radio"/> Upper <input checked="" type="radio"/> Lower
MCS	Auto ▾
Short GI	<input type="radio"/> Disbale <input checked="" type="radio"/> Enable
Aggregation	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Aggregation Frames	32
Aggregation Size	50000

- **TxStream/Rx Stream:** Select the amount of transmit (TX) and Receive (RX) streams. By default, it's 2.
- **Channel Bandwidth:** The "20/40" MHz option is usually best. The other option is available for special circumstances.
- **Extensions Channel:** Select which section of channels to use for extension channels.
- **MCS:** This parameter represents transmission rate. By default (Auto) the fastest possible transmission rate will be selected. You have the option of selecting the speed if necessary. (Refer to **Appendix C. MCS Data Rate**)

Wireless Advanced Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced Setup** and follow the below setting.

Advanced Setup	
Slot Time	9 <input type="text"/> Distance <input type="text"/>
ACK Timeout	64 <input type="text"/>
Beacon Interval	100 <input type="text"/>
DTIM Interval	1 <input type="text"/>
RTS Threshlod	2346 <input type="text"/>
Short Preamble	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IGMP Snooping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Greenfield	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
WMM	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **Short Slot:** By default, it's "**Enable**" for reducing the slot time from the standard **20 microseconds** to the **9 microsecond** short slot time. Slot time is the amount of time a device waits after a collision before retransmitting a packet. Reducing the slot time decreases the overall back-off, which increases throughput. Back-off, which is a multiple of the slot time, is the random length of time a station waits before sending a packet on the LAN. For a sender and receiver own right of the channel the shorter slot time help manage shorter wait time to re-transmit from collision because of hidden wireless clients or other causes. When collision sources can be removed sooner and other senders attempting to send are listening the channel (CSMA/CA) the owner of the channel should continue ownership and finish their transmission and release the channel. Then, following ownership of the channel will be sooner for the new pair due to shorter slot time. However, when long duration of existing collision sources and shorter slot time exist the owners might experience subsequent collisions. When adjustment to longer slot time can't improve performance then RTS/CTS could supplement and help improve performance.
- **ACK Timeout:** ACK timeout is in the range of **1~255** and set in unit of **microsecond**. The default value is **32** microsecond. All data transmission in 802.11b/g request an "Acknowledgement" (ACK) send by receiving radio. The transmitter will resend the original packet if correspondent ACK failed to arrive within specific time interval, also refer to as "ACK Timeout".

ACK Timeout is adjustable due to the fact that distance between two radio links may vary in different deployment. ACK Timeout makes significant influence in performance of long distance radio link. If ACK Timeout is set too short, transmitter

will start to “Resend” packet before ACK is received, and throughputs become low due to excessively high re-transmission. ACK Timeout is best determined by distance between the radios, data rate of average environment. The Timeout value is calculated based on round-trip time of packet with a little tolerance, So, if experiencing re-transmissions or poor performance the ACK Timeout could be made longer to accommodate.

- **Beacon Interval:** Beacon Interval is in the range of **20~1024** and set in unit of *millisecond*. The default value is **100** msec.

Access Point (AP) in IEEE 802.11 will send out a special approximated 50-byte frame, called “Beacon”. Beacon is broadcast to all the stations, provides the basic information of AP such as SSID, channel, encryption keys, signal strength, time stamp, support data rate.

All the radio stations received beacon recognizes the existence of such AP, and may proceed next actions if the information from AP matches the requirement. Beacon is sent on a periodic basis, the time interval can be adjusted.

By increasing the beacon interval, you can reduce the number of beacons and associated overhead, but that will likely delay the association and roaming process because stations scanning for available access points may miss the beacons. You can decrease the beacon interval, which increases the rate of beacons. This will make the association and roaming process very responsive; however, the network will incur additional overhead and throughput will go down.

- **DTIM Interval:** The DTIM interval is in the range of **1~255**. The default is **1**.
DTIM is defined as *Delivery Traffic Indication Message*. It is used to notify the wireless stations, which support power saving mode, when to wake up to receive multicast frame. DTIM is necessary and critical in wireless environment as a mechanism to fulfill power-saving synchronization. A DTIM interval is a count of the number of beacon frames that must occur before the access point sends the buffered multicast frames. For instance, if DTIM Interval is set to 3, then the Wi-Fi clients will expect to receive a multicast frame after receiving three Beacon frame. The higher DTIM interval will help power saving and possibly decrease wireless throughput in multicast applications.
- **RTS Threshold:** TRTS Threshold is in the range of **1~2347** byte. The default is **2347** byte. The main purpose of enabling RTS by changing RTS threshold is to reduce possible collisions due to hidden wireless clients. RTS in AP will be enabled automatically if the packet size is larger than the Threshold value. By default, RTS is disabled in a normal environment supports non-jumbo frames.
- **Short Preamble:** By default, it's “*Enable*”. To *Disable* is to use Long 128-bit Preamble

Synchronization field. The preamble is used to signal "here is a train of data coming" to the receiver. The short preamble provides 72-bit Synchronization field to improve WLAN transmission efficiency with less overhead.

- **WMM:** By default, it's “*Enabled*”.
- **Signal LED Threshold:**

Signal LED Thresholds			
LED Indicator	LED1	LED2	LED3
Thresholds, RSSI	20	30	40

- **LED1:** Set the RSSI reading when LED1 will activate.
- **LED2:** Set the RSSI reading when LED2 will activate.
- **LED3:** Set the RSSI reading when LED3 will activate.

Change these settings as described here and click **Save** button to save your changes. Click **Reboot** button to activate your changes.

Wireless WMM QoS Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced**

WMM QoS					
WMM Parameters of Access Point					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	No ACK Policy bit
AC_BE(0)	4	6	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	1	3008	<input type="checkbox"/>
AC_VO(3)	2	3	1	1504	<input type="checkbox"/>
WMM Parameters of Station					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	ACM bit
AC_BE(0)	4	10	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	2	3008	<input type="checkbox"/>
AC_VO(3)	2	3	2	1504	<input type="checkbox"/>

- **WMM Parameters of Access Point** : This affects traffic flowing from the access point to the client station

Queue	Data Transmitted AP to Clients	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue

AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue
-------	-------	------	--

Configuring QoS options consists of setting parameters on existing queues for different types of wireless traffic. You can configure different minimum and maximum wait times for the transmission of packets in each queue based on the requirements of the media being sent. Queues automatically provide minimum transmission delay for Voice, Video, multimedia, and mission critical applications, and rely on best-effort parameters for traditional IP data.

As an Example, time-sensitive Voice & Video, and multimedia are given effectively higher priority for transmission (lower wait times for channel access), while other applications and traditional IP data which are less time-sensitive but often more data-intensive are expected to tolerate longer wait times.

- **Aifsn**: The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames
- **CWmin**: Minimum Contention Window. This parameter is input to the algorithm that determines the initial random back-off wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random back-off wait time is determined.
- **CWmax**: Maximum Contention Window. The value specified here in the Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random back-off value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".
- **Txop**: Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (TXOP) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
- **ACM**: Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.
- **AckPolicy**: Acknowledgment Policy, WMM defines two ACK policies: **Normal ACK** and **No ACK**. Click "Checkbox" indicates "No ACK"

Queue	Data Transmitted Clients to AP	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue

When the no acknowledgment (No ACK) policy is used, the recipient does not acknowledge received packets during wireless packet exchange. This policy is suitable in the environment where communication quality is fine and interference is weak. While the No ACK policy helps improve transmission efficiency, it can cause increased packet loss when communication quality deteriorates. This is because when this policy is used, a sender does not retransmit packets that have not been received by the recipient. When the Normal ACK policy is used, the recipient acknowledges each received unicast packet.

- **WMM Parameters of Station:** *This affects traffic flowing from the client station to the access point.*
 - **Aifsn :** The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames
 - **CWmin :** Minimum Contention Window. This parameter is input to the algorithm that determines the initial random backoff wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random backoff wait time is determined.
 - **CWmax :** Maximum Contention Window. The value specified here in the

Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".

- **Txop:** Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (Txop) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
 - **ACM:** Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.
- Click **Save** button to save your changes. Click **Reboot** button to activate your changes. The items in this page are for AP's RF advanced settings and will be applied to **all VAPs** and **WDS Links**.

Site Survey

Use this tool to scan and locate WISP Access Points and select one to associate with. Please click on **Wireless -> Site Survey**. Below depicts an example for site survey.

ESSID	MAC Address	Signal/Noise, dBm	RSSI	Signal Quality, %	Channel	Security	Select
WalkingDead	00:E0:4C:81:86:82	-29 / -95	66	100%	1	WPA2-PSK/AES	Select
TRENDnet639RMA	D8:EB:97:A5:90:EC	-41 / -95	54	100%	1	WPA-PSK/AES	Select
TrendnetSkyN	00:14:D1:C5:7D:44	-69 / -95	26	76%	1	WPA2-PSK/AES	Select
TRENDnet815_2.4GHz_3272	00:11:E0:04:96:AD	-30 / -95	65	100%	1	WPA2-PSK/AES	Select
ATT048	90:B1:34:B0:53:60	-79 / -95	16	42%	1	WPA-PSK/AES	Select
V72	D8:EB:97:BC:18:EC	-62 / -95	33	92%	1	WPA2-PSK/AES	Select
TRENDnet752_2.4GHz_0019	D0:AE:EC:C4:E3:C0	-32 / -95	63	100%	7	WPA2-PSK/AES	Select
TrendnetSkyN	00:14:D1:CF:3F:0C	-48 / -95	47	100%	11	WPA2-PSK/AES	Select

- **ESSID:** Available Extend Service Set ID of surrounding Access Points.
- **MAC Address:** MAC addresses of surrounding Access Points.
- **Signal:** Received signal strength of all found Access Points.

- **Channel:** Channel numbers used by all found Access Points.
- **Security:** Security type by all found Access Points.
- **Band:** Wireless band used by all found Access Points.
- **Network Type:** Network type used by all found Access Points.
- **Select:** Click "Select" to configure settings and associate with chosen AP.

Repeater AP Setup

The administrator can configure station profiles via this page. Please click on **Wireless -> Wireless Profile** and follow the below setting.

Security	
ESSID	Repeater AP
Enable Repeater AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Hidden SSID	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IAPP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Maximum Clients	32
Security Type	Disable

- **ESSID:** Assign Service Set ID for the wireless system.
- **Enable Repeater SSID:** Select **Enable** to broadcast the repeated signal.
- **Hidden SSID:** Select **Enable** to broadcast the access point's SSID.
- **Client Isolation:** Select **Enable** to isolate wireless clients from each other.
- **IAPP:**
- **Maximum Clients:** Enter the amount of wireless clients allowed to connect to the access point.
- **Security Type:** Select the desired security type from the drop-down list; the options are **Disable**, **WEP**, **WPA-PSK**, **WPA2-PSK**, **WPA-Enterprise**, **WPA2-Enterprise** and **WEP 802.1X**.
 - **Disable:** Data are unencrypted during transmission when this option is selected.

WEP	
Key Length	64 bits
WEP Auth Method	<input type="checkbox"/> Open System <input checked="" type="checkbox"/> Shared
Key Index	1
WEP Key 1	
WEP Key 2	
WEP Key 3	
WEP Key 4	

- **WEP Auth Method:** Enable the desire option among **OPEN** or **SHARED**
 - **Key Index:** Key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
- **WPA-PSK (or WPA2-PSK):** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

WPA General	
Cipher Suite	<input type="radio"/> AES <input checked="" type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
Key Type	<input checked="" type="radio"/> ASCII <input type="radio"/> HEX
Pre-shared Key	

- **Cipher Suite:** By default, it is **AES**. Select either AES or TKIP cipher suites
- **Group Key Update Period:** By default, it is **600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.

- **Pre-shared Key:** Enter the pre-shared key; the format shall go with the selected key type.
- **WPA-Enterprise (or WPA2-Enterprise):** The RADIUS authentication and encryption will be both enabled if this is selected.

WPA General	
Cipher Suite	<input type="radio"/> AES <input checked="" type="radio"/> TKIP
Group Key Update Period	<input type="text" value="600"/>
Master Key Update Period	<input type="text" value="83400"/>
EAP Reauth Period	<input type="text" value="3600"/>
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	<input type="text" value="1812"/>
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

- **WPA General Settings:**
 - **Cipher Suite:** By default, it is AES. Select either AES or TKIP cipher suites
 - **Group Key Update Period:** By default, it's **3600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **EAP Reauth Period:** By default, it's **3600** seconds. Set **WPA2** PMKID cache timeout period, after time out, the cached key will be deleted.
 - **Pre-Authentication:** By default, it's "Disable". To Enable is use to speed up roaming before pre-authenticating IEEE 802.1X/EAP part of the full RSN authentication and key handshake before actually associating with a new AP.
- **Radius Server Settings:**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's **1812**. The port number used to communicate with RADIUS server.

- **Shared secret:** A secret key used between system and RADIUS server. Supports 8 to 64 characters.
- **Accounting RADIUS Server:** Enable to set Account RADIUS server.
- **WEP 802.1X:** When WEP 802.1x Authentication is enabled, please refer to the following Dynamic WEP and RADIUS settings to complete configuration.

Dynamic WEP Setting	
WEP Key Length	<input checked="" type="radio"/> 64bits <input type="radio"/> 128bits
WEP Key Update Period	<input type="text" value="300"/>
EAP Reauth Period	<input type="text" value="3600"/>
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	<input type="text" value="1812"/>
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

- **Radius Server Settings:**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's **1812**. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports **8** to **64** characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.
 - **Key Index:** key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key # :** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
 - **WPA-PSK (or WPA2-PSK):** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

Wireless MAC Filter Setup

The administrator can allow or reject clients to access Repeater AP.

MAC Rules	
Action	Disable <input type="button" value="Save"/>
ACL MAC Address	
MAC Address	<input type="text"/> <input type="button" value="Add"/>

- **MAC Filter Setup:** By default, it's "**Disable**". Options are **Disable**, **Only Deny List** or **Only Allow List**.
- **MAC or Only Allow List**
 - Two ways to set MAC filter rules:
 - **Only Allow List:** The wireless clients in the "**Enable**" list will be **allowed** to access the Access Point; All others or clients in the "**Disable**" list will be **denied**.
 - **Only Deny List:** The wireless clients in the "**Enable**" list will be **denied** to access the Access Point; All others or clients in the "**Disable**" list will be **allowed**.
 - **MAC:** Enter MAC address (e.g. aa:bb:cc:00:00:0a) and click "**Add**" button, then the MAC address should display in the "**Enable**" List.

There are a maximum of **20** clients allowed in this "Enable" List. The MAC addresses of the wireless clients can be added and removed to the list using the **Add** and **Remove** buttons. Click **Apply** button to activate your changes

Create Wireless Profile

The administrator can configure station profiles via this page. Please click on **Wireless -> Wireless Profile** and follow the below setting.

- **Connection Setup:** Select the repeater connection type.

Connection Setup	
Connection Setup	<input checked="" type="radio"/> Fix <input type="radio"/> Cycle

- **Fix:** Select to have access point fixed on one profile to repeat
- **Cycle:** Select to have access point cycle through different profiles.

- **General Configuration:**

General Configuration	
MAC Address	00:22:AA:00:11:08
Profile Name	<input type="text"/>
ESSID	<input type="text"/>
Lock to AP MAC	<input type="text"/> (Optional)
Security Type	NONE <input type="button" value="v"/>

- **MAC Address:** The MAC address of the Wireless Station is displayed here.
- **Profile Name:** Set different profiles for quick connection uses.
- **ESSID:** Assign Service Set ID for the wireless system.
- **Lock to AP MAC:** This allows the station to always maintain connection to a particular AP with a specific MAC address. This is useful as sometimes there can be few identically named SSID's (AP's) with different MAC addresses. With AP lock on, the station will lock to MAC address and not roam between several Access Points with the same ESSID.
- **Security Type:** Select the desired security type from the drop-down list; the options are **Disable**, **WEP**, **WPA-PSK**, **WPA2-PSK**, **WPA-Enterprise**, **WPA2-Enterprise** and **WEP 802.1X**.
 - **Disable:** Data are unencrypted during transmission when this option is selected.

WEP	
Key Length	64 bits <input type="button" value="v"/>
WEP Auth Method	<input checked="" type="checkbox"/> Open System <input type="checkbox"/> Shared
Key Index	1 <input type="button" value="v"/>
WEP Key 1	<input type="text"/>
WEP Key 2	<input type="text"/>
WEP Key 3	<input type="text"/>
WEP Key 4	<input type="text"/>

- **WEP Auth Method:** Enable the desire option among **OPEN** or **SHARED**
 - **Key Index:** Key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.

- **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
- **WPA-PSK (or WPA2-PSK):** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

WPA General	
Cipher Suite	<input checked="" type="radio"/> AES <input type="radio"/> TKIP
Group Key Update Period	<input type="text" value="600"/>
Master Key Update Period	<input type="text" value="83400"/>
Key Type	<input checked="" type="radio"/> ASCII <input type="radio"/> HEX
Pre-shared Key	<input type="text"/>

- **Cipher Suite:** By default, it is **AES**. Select either AES or TKIP cipher suites
- **Group Key Update Period:** By default, it is **600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Pre-shared Key:** Enter the pre-shared key; the format shall go with the selected key type.

- **WPA-Enterprise (or WPA2-Enterprise):** The RADIUS authentication and encryption will be both enabled if this is selected.

WPA General	
Cipher Suite	<input checked="" type="radio"/> AES <input type="radio"/> TKIP
Group Key Update Period	<input type="text" value="600"/>
Master Key Update Period	<input type="text" value="83400"/>
EAP Reauth Period	<input type="text" value="3600"/>
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	<input type="text" value="1812"/>
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **WPA General Settings:**
 - **Cipher Suite:** By default, it is AES. Select either AES or TKIP cipher suites
 - **Group Key Update Period:** By default, it's **3600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **EAP Reauth Period:** By default, it's **3600** seconds. Set **WPA2** PMKID cache timeout period, after time out, the cached key will be deleted.
 - **Pre-Authentication:** By default, it's "Disable". To Enable is use to speed up roaming before pre-authenticating IEEE 802.1X/EAP part of the full RSN authentication and key handshake before actually associating with a new AP.
- **Radius Server Settings :**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's 1812. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports 8 to 64 characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.
- **WEP 802.1X:** When WEP 802.1x Authentication is enabled, please refer to the following Dynamic WEP and RADIUS settings to complete configuration.

Dynamic WEP Setting	
WEP Key Length	<input checked="" type="radio"/> 64bits <input type="radio"/> 128bits
WEP Key Update Period	<input type="text" value="300"/>
EAP Reauth Period	<input type="text" value="3600"/>
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	<input type="text" value="1812"/>
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

- **Radius Server Settings:**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's **1812**. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports **8** to **64** characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.
 - **Key Index:** key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
 - **WPA-PSK (or WPA2-PSK):** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

Bandwidth Control

Bandwidth control allows you to control the bandwidth going through the access point.

Bandwidth Control	
Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Mode	<input checked="" type="radio"/> Total bandwidth <input type="radio"/> Per Rule Bandwidth
Upload	<input type="text"/> kbps
Download	<input type="text"/> kbps

- **Service:** Select **Enable** to turn on bandwidth control through the access point.
- **Mode:** Select the bandwidth control mode to use through the access point.
- **Upload:** Enter **the upload bandwidth speeds**
- **Download:** Enter the download bandwidth speeds

Configure SNMP Setup

SNMP is an application-layer protocol that provides a message format for communication between SNMP managers and agents. By enabling SNMP function, the administrator can obtain the system information remotely.

Please click on **System -> SNMP Setup** and follow the below setting.

SNMP v2c	
Enable	<input type="checkbox"/>
SNMP v3	
Enable	<input checked="" type="checkbox"/>
SNMP Trap	
Enable	<input type="checkbox"/>

- **SNMP v2c Enable:** Check to enable SNMP v2c.

SNMP v2c	
Enable	<input checked="" type="checkbox"/>
ro community	<input type="text"/>
rw community	<input type="text"/>

- **ro community:** Set a community string to authorize read-only access.
- **rw community:** Set a community string to authorize read/write access.

- **SNMP v3 Enable:** Check to enable SNMP v3.
SNMPv3 supports the highest level SNMP security.

SNMP v3	
Enable	<input checked="" type="checkbox"/>
SNMP ro user	<input type="text"/>
SNMP ro password	<input type="text"/>
SNMP rw user	<input type="text"/>
SNMP rw password	<input type="text"/>

- **SNMP ro user:** Set a community string to authorize read-only access.
- **SNMP ro password:** Set a password to authorize read-only access.
- **SNMP rw user:** Set a community string to authorize read/write access.
- **SNMP rw password:** Set a password to authorize read/write access.

- **SNMP Trap:** Events such as cold start, interface up & down, and association & disassociation will report to an assigned server.

SNMP Trap	
Enable	<input checked="" type="checkbox"/>
Community	<input type="text"/>
IP 1	<input type="text"/>
IP 2	<input type="text"/>
IP 3	<input type="text"/>
IP 4	<input type="text"/>

- **Community:** Set a community string required by the remote host computer that will receive trap messages or notices send by the system.
 - **IP:** Enter the IP addresses of the remote hosts to receive trap messages.
- Click **Save** button to save changes and click **Reboot** button to activate.

Configure Time Policy

Configure time policy to apply on settings like access point Radio Schedule.

Policy 1	
Policy	Policy 1 <input type="button" value="Save_Action"/>
Schedule Rule	<input checked="" type="radio"/> On Schedule <input type="radio"/> Out of Schedule
Time Schedule	
Day Of Week	<input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat
Start From	00 : 00
End At	23 : 59 <input type="button" value="Save"/>

- **Policy:** Select the policy to configure. Click **Save Action** to save settings.
- **Schedule Rule:**
 - **On Schedule:** Select to have policy run on exact schedule
 - **Out of Schedule:** Select to have policy run outside of schedule.
- **Time Schedule:**
 - **Day of week:** Select the days of the week to apply time policy
 - **Start From:** Enter time policy start time

- o **End at:** Enter the end time of time policy

System Status

This section breaks down into subsections of *System Overview*, *Associated Clients Status*, *WDS Link Status*, *Extra Information* and *Event Log*.

System Overview

Display detailed information of *System*, *Network*, *LAN and Wireless* in the System Overview page.

- **Device Information:** Display the information of the system.

Device Information	
Mode	Repeater
Host Name	TEW-738APBO
Host Description	10dBi Outdoor PoE Access Point
Firmware Version	V1.0.19
Firmware Date	2014/04/23 09:44:51
Country	US
System Time	2014/05/05 14:49:12
System Up Time	03:58:31
ETH1 MAC	00:22:AA:00:11:07
ETH2 MAC	00:22:AA:00:11:06
Wireless MAC	00:22:AA:00:11:08

- o **Operating Mode:** The mode currently in service.
- o **Host Name:** The name of the system.
- o **Host Description:** A description of the system.
- o **Firmware Version:** The current installed firmware version.
- o **Firmware Date:** The build time of installed firmware.
- o **Device Time:** The current time of the system.
- o **System Up Time:** The time period that system has been in service since last reboot.
- o **ETH1/ETH2MAC:** Ethernet MAC address of the access point.
- o **Wireless MAC:** Wireless MAC address of the access point

- o **CPU Loading:** The CPU loading of the access point
- o **Memory Used:** Memory usage of the access point.

- **LAN Information:** Display total received and transmitted statistics on the LAN interface.

LAN Information	
Ethernet Connection Type	Static IP
IP Address	192.168.10.100
IP Netmask	255.255.255.0
IP Gateway	192.168.10.1
DNS	

- o **Ethernet Connection Type:** The connection applied on the access point.
- o **IP Address:** The management IP of system. By default, it's 192.168.2.254.
- o **IP Netmask:** The network mask. By default, it's 255.255.255.0.
- o **IP Gateway:** The gateway IP addresses and by default, it's 192.168.2.1.
- o **Primary DNS:** The primary DNS server in service.

- **Wireless Information:** Display total received and transmitted statistics on available Virtual AP.

Wireless Information	
WiFi	On
Band	802.11b/g/n
Channel	5
Current Txpower	28 dBm (630 mW)
Date Rate	Auto (300Mb/s)

- o **WiFi:** Wireless status of the access point.
- o **Band:** Operating wireless band of the access point.
- o **Channel:** Operating channel of the access point.
- o **Current Tx Power:** Transmit power of the access point.

- o **Data Rate:** Current wireless data rate of the access point.

DHCP Client

Display detailed information of the access point's DHCP server.

DHCP Server Status	
Service	Enable
Start IP	192.168.10.101
End IP	192.168.10.254
Default Gateway	192.168.10.100
DNS1	192.168.10.100
DNS2	
WINS	
Domain	
Lease Time	86400

- **Service:** Status of access point's DHCP server
- **Start IP:** Starting IP address of access point's DHCP server
- **End IP:** Last IP address used on the access point's DHCP server
- **Default Gateway:** Assigned gateway address to the access point
- **DNS1/2:** Assigned DNS to the access point's DHCP server
- **WINS:** Assigned WINS to the access point's DHCP server
- **Domain:** Domain assigned to access point
- **Lease Time:** DHCP lease time of access point's DHCP server

DHCP Client List		
IP Address	MAC Address	Expired In
-	-	-

- **DHCP Client list:** List of clients connected to the access point

Extra Information

Users could pull out information such as Route table, ARP table, MAC table, Bridge table or STP available in the drop-down list from system. The "Refresh" button is used to retrieve latest table information.

Extra Information			
Information	Route Information		
Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **Route table information:** Select "Route table information" on the drop-down list to display route table. TEW-738APBO could be used as a L2 or L3 device. It doesn't support dynamic routing protocols such as RIP or OSPF. Static routes to specific hosts, networks or default gateway are set up automatically according to the IP configuration of system's interfaces. When used as a L2 device, it could switch packets and, as L3 device, it's capable of being a gateway to route packets inward and outward.

Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **ARP table Information:** Select "ARP Table Information" on the drop-down list to display ARP table. ARP associates each IP address to a unique hardware address (MAC) of a device. It is important to have a unique IP address as final destination to switch packets to.

ARP Table Information		
IP Address	MAC Address	Interface
192.168.10.123	00:26:2d:5b:46:53	bre0

- **Bridge table information:** Select “**Bridge Table information**” on the drop-down list to display bridge table. Bridge table will show Bridge ID and STP's Status on the each Ethernet bridge and its attached interfaces, the Bridge Port should be attached to some interfaces (e.g. eth2, ra0~ra6 and wds0~wds3).

Bridge Table Information			
Bridge Port	Bridge ID	STP Enabled	Interface
LAN	8000.0022aa001106	no	eth1
			eth0
			ath0

- **Bridge MAC information:** Select “**Bridge MACs Information**” on the drop-down list to display MAC table.

Bridge MACs Table Information			
Port	MAC Address	Local	Ageing Timer
VAP0	00:14:d1:c2:da:84	no	3.17
LAN	00:22:aa:00:11:06	yes	0.00
WAN	00:22:aa:00:11:07	yes	0.00
VAP0	00:22:aa:00:11:08	yes	0.00
WAN	00:26:2d:5b:46:53	no	0.04

This table displays local MAC addresses associated with wired or wireless interfaces, but also remember non-local MAC addresses learned from wired or wireless interfaces. Ageing timers will be reset when existing MAC addresses in table are learned again or added when new MAC addresses are seen from wired or wireless interfaces as well. When time runs out for a particular entry, it will be pruned from the table. In that situation, switching packet to that particular MAC address will be dropped.

Event Log

The Event log displays system events when system is up and running. Also, it becomes very useful as a troubleshooting tool when issues are experienced in system.

Time	Facility	Severity	Message
2013-07-06 03:32:47	System	Info	Authentication successful for admin from 192.168.10.123

- **Time:** The date and time when the event occurred.
- **Facility:** It helps users to identify source of events such “System” or “User”
- **Severity:** Severity level that a specific event is associated such as “info”, “error”, “warning”, etc.
- **Message:** Description of the event.

Click **Refresh** button to renew the log, or click **Clear** button to clear all the record.

Associated Client List

List of all clients associated to the access point.

#	MAC Address	RSSI	TX/RX Rate	TX/RX SEQ	TX/RX Bytes	Connect Time	Actions
No such device							

- **MAC Address:** Display MAC address of WDS peer.
- **RSSI:** Indicate the signal strength of the respective WDS links.
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes

Remote AP status

List the current status of the remote access point.

ESSID	MAC Address	Signal/Noise	RSSI	Signal Quality, %	TX/RX Rate	Status
TRENDnet7380_2.4GHz		0 / 0	0	0%	0M / 0M	Unlinked

- **ESSID:** SSID of remote access point
- **MAC Address:** Display MAC address of WDS peer.
- **RSSI:** Indicate the signal strength of the respective WDS links.
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes
- **Status:** Display current association status of remote access point


CPE + AP Mode Configuration

When CPE+AP mode is chosen, the system can be configured as a Customer Premises Equipment (CPE). This section provides detailed explanation for users to configure in the CPE+AP mode with help of illustrations. In the CPE+AP mode, functions listed in the table below are also available from the Web-based GUI interface.

External Network Connection

Network Requirement

It can be used as an Outdoor Customer Premises Equipment (CPE) to receive and repeat wireless signal over last mile application, helping WISPs deliver wireless broadband Internet service to residents and business customers. In the CPE+AP mode, TEW-738APBO is a gateway enabled with NAT and DHCP Server functions. The wired and wireless clients connected to TEW-738APBO are in **different** subnet from those connected to Main Base Station, and, in CPE+AP mode, it **accepts** wireless connections from wireless client devices.

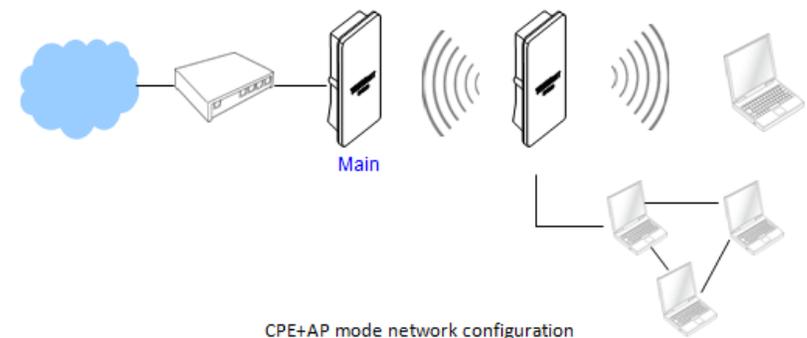

Configure CPE Setup

There are three connection types for the WAN port: **Static IP**, **Dynamic IP**, **PPPoE** and **PPTP**,

Please click on **System -> WAN** and follow the below setting.

- **Mode:** Check "Static IP", "Dynamic IP", "PPPoE" or "PPTP" to set up system WAN IP.

Internet Connection Type	
Mode	<div style="border: 1px solid black; padding: 2px;"> Dynamic IP ▼ <ul style="list-style-type: none"> Static IP <li style="background-color: #e0e0e0;">Dynamic IP PPPoE PPTP </div>

- **Static IP:** Users can manually setup the WAN IP address with a static IP provided by WISP.
 - **IP Address:** The IP address of the WAN port; default IP address is 192.168.1.254
 - **IP Netmask:** The Subnet mask of the WAN port; default Netmask is 255.255.255.0
 - **IP Gateway :** The default gateway of the WAN port; default Gateway is 192.168.1.1
- **Dynamic IP:** Please consult with WISP for correct wireless settings to associate with WISP AP before a dynamic IP, along with related IP settings including DNS can be available from DHCP server. If IP Address is not assigned, please double check with your wireless settings and ensure successful association. Also, you may go to "WAN Information" in the Overview page to click **Release** button to release IP address and click **Renew** button to renew IP address again.

Dynamic IP	
Hostname	<input type="text"/>

- **Hostname :** The Hostname of the WAN port

- **PPPoE :** To create wireless PPPoE WAN connection to a PPPoE server in network.

PPPoE	
Username	<input type="text"/>
Password	<input type="text"/>
Reconnect Mode	<input checked="" type="radio"/> Always On <input type="radio"/> On Demand <input type="radio"/> Manual
Idle Time	<input type="text" value="0"/> Minutes
MTU	<input type="text" value="1492"/>

- **User Name :** Enter User Name for PPPoE connection
- **Password :** Enter Password for PPPoE connection
- **Reconnect Mode:**
 - **Always on:** A connection to Internet is always maintained.
 - **On Demand:** A connection to Internet is made as needed.
 - **Manual:** Click the "Connect" button on "WAN Information" in the Overview page to connect to the Internet.
- **Idle Time:** Time to last before disconnecting PPPoE session when it is idle. Enter preferred Idle Time in minutes. Default is "0", indicates disabled. When Idle time is disabled, the "Reconnect Mode" will turn out "Always on"
- **MTU:** By default, it's 1492 bytes. MTU stands for Maximum Transmission Unit. Consult with WISP for a correct MTU setting.

- **PPTP:** The Point-to-Point Tunneling Protocol (PPTP) mode enables the implementation of secure multi-protocol Virtual Private Networks (VPNs) through public networks.

PPTP	
IP Address	<input type="text"/>
IP Netmask	<input type="text"/>
PPTP Server IP Address	<input type="text"/>
Username	<input type="text"/>
Password	<input type="password"/>
Reconnect Mode	<input checked="" type="radio"/> Always On <input type="radio"/> On Demand <input type="radio"/> Manual
Idle Time	<input type="text" value="0"/> Minutes
MTU	<input type="text" value="1460"/>
MPPE Encryption	<input checked="" type="checkbox"/> MPPE-40 <input type="checkbox"/> MPPE-128

- **IP Address:** The IP address of the WAN port
- **IP Netmask:** The Subnet mask of the WAN port
- **PPTP Server IP Address:** The IP address of the PPTP server
- **User Name :** Enter User Name for PPTP connection
- **Password:** Enter Password for PPTP connection
- **Reconnect Mode:**
 - **Always on:** A connection to Internet is always maintained.
 - **On Demand:** A connection to Internet is made as needed.
 - **Manual:** Click the **“Connect”** button on **“WAN Information”** in the Overview page to connect to the Internet.
- **Idle Time:** Time to last before disconnecting PPPoE session when it is idle. Enter preferred Idle Time in minutes. Default is **“0”**, indicates disabled. When Idle time is disabled, the **“Reconnect Mode”** will turn out **“Always on”**
- **MTU:** By default, it's **1460** bytes. MTU stands for Maximum Transmission Unit. Consult with WISP for a correct MTU setting.
- **MPPE Encryption:** Microsoft Point-to-Point Encryption (MPPE) encrypts data in Point-to-Point Protocol (PPP)-based dial-up connections or Point-to-Point Tunneling Protocol (PPTP) virtual private network (VPN) connections. **128-bit** key (strong) and **40-bit** key (standard) MPPE encryption schemes are supported. MPPE provides data

security for the PPTP connection that is between the VPN client and the VPN server.

- **DNS:** Check **“No Default DNS Server”** or **“Specify DNS Server IP”** radial button as desired to set up system DNS.

DNS	
DNS	<input checked="" type="radio"/> No Default DNS Server <input type="radio"/> Specify DNS Server IP
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>

- **Primary:** The IP address of the primary DNS server.
 - **Secondary:** The IP address of the secondary DNS server.
- Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Configure DDNS Setup

Dynamic DNS allows you to map domain name to dynamic IP address. Please click on **System -> DDNS Setup** and follow the below setting.

DDNS	
Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Service Provider	<input type="text" value="dyndns"/>
Hostname	<input type="text"/> - <input type="text"/>
Username	<input type="text"/>
Password	<input type="password"/>

- **Enabled:** By default, it's **“Disable”**. The mapping domain name won't change when dynamic IP changes. The beauty of it is no need to remember the dynamic WAP IP while accessing to it.
 - **Service Provider:** Select the preferred Service Provider from the drop-down list including *dyndns*, *dhs*, *ods* and *tzo*
 - **Hostname:** Host Name that you register to Dynamic-DNS service and export.
 - **User Name & Password:** User Name and Password are used to login DDNS service.
- Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Configure LAN IP

Here are the instructions to setup the local IP Address and Netmask.
Please click on **System** -> **LAN** and follow the below setting.

- **Mode:** Check either “Static IP” or “Dynamic IP” button as desired to set up the system IP of LAN port.

Ethernet Connection Type	
Mode	<input checked="" type="radio"/> Static IP <input type="radio"/> Dynamic IP
Static IP	
IP Address	<input type="text" value="192.168.10.100"/>
IP Netmask	<input type="text" value="255.255.255.0"/>
IP Gateway	<input type="text" value="192.168.10.1"/>

- **Static IP:** The administrator can manually setup the LAN IP address when static IP is available/ preferred.
 - **IP Address:** The IP address of the LAN port; default IP address is 192.168.2.254
 - **IP Netmask:** The Subnet mask of the LAN port; default Netmask is 255.255.255.0
 - **IP Gateway :** The default gateway of the LAN port; default Gateway is 192.168.2.1
- **Dynamic IP:** This configuration type is applicable when the TEW-738APBO is connected to a network with the presence of a DHCP server; all related IP information will be provided by the DHCP server automatically.

Dynamic IP	
Hostname	<input type="text"/>

- **Hostname :** The Hostname of the LAN port
- **DNS:** Check either “No Default DNS Server” or “Specify DNS Server IP” button as desired to set up the system DNS.

DNS	
DNS	<input checked="" type="radio"/> No Default DNS Server <input type="radio"/> Specify DNS Server IP
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>

- **Primary:** The IP address of the primary DNS server.
- **Secondary:** The IP address of the secondary DNS server.

802.1d Spanning Tree

802.1d Spanning Tree	
Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

The spanning tree network protocol provides a loop free topology for a bridged LAN between LAN interface and 4 WDS interfaces from wds0 to wds3. The Spanning Tree Protocol, which is also referred to as STP, is defined in the IEEE Standard 802.1d. Spanning tree always disabled on TEW-738APBO. Below Figures depict a loop for a bridged LAN between LAN and WDS link

- **DHCP Setup:** Devices connected to the system can obtain an IP address automatically when this service is enabled.

DHCP Server	
Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Start IP	<input type="text" value="192.168.10.101"/>
End IP	<input type="text" value="192.168.10.254"/>
Default Gateway	<input type="text" value="192.168.10.100"/>
DNS1 IP	<input type="text" value="192.168.10.100"/>
DNS2 IP	<input type="text"/>
WINS IP	<input type="text"/>
Domain	<input type="text"/>
Lease Time	<input type="text" value="86400"/>

- **DHCP:** Check **Enable** button to activate this function or **Disable** to deactivate this service.
- **Start IP / End IP:** Specify the range of IP addresses to be used by the DHCP server when assigning IP address to clients. The default range IP address is 192.168.2.10 to 192.168.2.70, the netmask is 255.255.255.0
- **DNS1 IP:** Enter IP address of the first DNS server; this field is required.
- **DNS2 IP:** Enter IP address of the second DNS server; this is optional.
- **WINS IP:** Enter IP address of the Windows Internet Name Service (WINS) server; this is optional.

- o **Domain:** Enter the domain name for this network.
- o **Lease Time:** The IP addresses given out by the DHCP server will only be valid for the duration specified by the lease time. Increasing the time ensure client operation without interruptions, but could introduce potential conflicts. Lowering the lease time will avoid potential address conflicts, but might cause more interruptions to the client while it will acquire new IP addresses from the DHCP server. Default is **86400** seconds

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Configure Static IP address

Assign static IP address to associated clients through the access point.

Static Lease IP	
Comment	<input type="text"/>
IP Address	<input type="text" value="192.168.10"/>
MAC Address	<input type="text"/> <input type="button" value="Add"/>

- **Comment:** Enter a note of assigned IP address
- **IP Address:** Enter the IP address to assign
- **MAC address:** Enter the client MAC address to the assigned IP address. Click Add to enter settings.

Access Point Association Wireless General Setup

The administrator can change the data transmission, channel and output power settings for the system. Please click on **Wireless -> General Setup** and follow the below setting.

General Setup	
MAC Address	00:22:aa:00:11:08
Band Mode	802.11b/g/n
Channel	Auto <input type="button" value="Auto Scan"/>
Tx Power	Level 9
RF(ON/OFF) Schedule	Always Run

- **MAC Address:** The MAC address of the Wireless interface is displayed here.
- **Band Mode:** Select an appropriate wireless band; bands available are 801.11b, 802.11b/g, 802.11b/g/n or 802.11n only.
- **Channel:** Select the desired channel from the drop-down list to have the access point operate on. Click **Auto Scan** to scan for the best available channel to use based on the environment.
- **Tx Power:** You can adjust the output power of the system to get the appropriate coverage for your wireless network. Specify digit numbers between 1 to 100 (the unit is %) for your environment. If you are not sure which setting to choose, then keep the default setting, **100%**.
- **RF (ON/OFF) Schedule:** Select an assigned schedule of when to have the access point turn on. Select **Always Run** to have the access point always on.

When **Band Mode** select in **802.11a only mode**, the **HT(High Throughput)** settings should be hidden immediately.

HT Physical Mode	
TX/RX Stream	<input type="radio"/> 1 <input checked="" type="radio"/> 2
Channel BandWidth	<input type="radio"/> 20 <input checked="" type="radio"/> 20/40
Extension Channel	<input type="radio"/> Upper <input checked="" type="radio"/> Lower
MCS	Auto ▼
Short GI	<input type="radio"/> Disbale <input checked="" type="radio"/> Enable
Aggregation	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Aggregation Frames	32
Aggregation Size	50000

- **TxStream/Rx Stream:** Select the amount of transmit (TX) and Receive (RX) streams. By default, it's 2.
- **Channel Bandwidth:** The "20/40" MHz option is usually best. The other option is available for special circumstances.
- **Extensions Channel:** Select which section of channels to use for extension channels.
- **MCS:** This parameter represents transmission rate. By default (Auto) the fastest possible transmission rate will be selected. You have the option of selecting the speed if necessary. (Refer to **Appendix C. MCS Data Rate**)

Wireless Advanced Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced Setup** and follow the below setting.

Advanced Setup	
Slot Time	9 <input type="text"/> Distance <input type="text"/>
ACK Timeout	64 <input type="text"/>
Beacon Interval	100 <input type="text"/>
DTIM Interval	1 <input type="text"/>
RTS Threshlod	2346 <input type="text"/>
Short Preamble	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IGMP Snooping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Greenfield	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
WMM	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **Short Slot :** By default, it's "**Enable**" for reducing the slot time from the standard **20 microseconds** to the **9 microsecond** short slot time. Slot time is the amount of time a device waits after a collision before retransmitting a packet. Reducing the slot time decreases the overall back-off, which increases throughput. Back-off, which is a multiple of the slot time, is the random length of time a station waits before sending a packet on the LAN. For a sender and receiver own right of the channel the shorter slot time help manage shorter wait time to re-transmit from collision because of hidden wireless clients or other causes. When collision sources can be removed sooner and other senders attempting to send are listening the channel(CSMA/CA) the owner of the channel should continue ownership and finish their transmission and release the channel. Then, following ownership of the channel will be sooner for the new pair due to shorter slot time. However, when long duration of existing collision sources and shorter slot time exist the owners might experience subsequent collisions. When adjustment to longer slot time can't improve performance then RTS/CTS could supplement and help improve performance.
- **ACK Timeout:** ACK timeout is in the range of **1~255** and set in unit of **microsecond**. The default value is **32** microsecond. All data transmission in 802.11b/g request an "Acknowledgement" (ACK) send by receiving radio. The transmitter will resend the original packet if correspondent ACK failed to arrive within specific time interval, also refer to as "ACK Timeout".

ACK Timeout is adjustable due to the fact that distance between two radio links may vary in different deployment. ACK Timeout makes significant influence in

performance of long distance radio link. If ACK Timeout is set too short, transmitter will start to "Resend" packet before ACK is received, and throughputs become low due to excessively high re-transmission. ACK Timeout is best determined by distance between the radios, data rate of average environment. The Timeout value is calculated based on round-trip time of packet with a little tolerance, So, if experiencing re-transmissions or poor performance the ACK Timeout could be made longer to accommodate.

- **Beacon Interval::** Beacon Interval is in the range of **20~1024** and set in unit of *millisecond*. The default value is **100** msec.

Access Point (AP) in IEEE 802.11 will send out a special approximated 50-byte frame, called "Beacon". Beacon is broadcast to all the stations, provides the basic information of AP such as SSID, channel, encryption keys, signal strength, time stamp, support data rate.

All the radio stations received beacon recognizes the existence of such AP, and may proceed next actions if the information from AP matches the requirement. Beacon is sent on a periodic basis, the time interval can be adjusted.

By increasing the beacon interval, you can reduce the number of beacons and associated overhead, but that will likely delay the association and roaming process because stations scanning for available access points may miss the beacons. You can decrease the beacon interval, which increases the rate of beacons. This will make the association and roaming process very responsive; however, the network will incur additional overhead and throughput will go down.

- **DTIM Interval:** The DTIM interval is in the range of **1~255**. The default is **1**.
DTIM is defined as *Delivery Traffic Indication Message*. It is used to notify the wireless stations, which support power saving mode, when to wake up to receive multicast frame. DTIM is necessary and critical in wireless environment as a mechanism to fulfill power-saving synchronization. A DTIM interval is a count of the number of beacon frames that must occur before the access point sends the buffered multicast frames. For instance, if DTIM Interval is set to 3, then the Wi-Fi clients will expect to receive a multicast frame after receiving three Beacon frame. The higher DTIM interval will help power saving and possibly decrease wireless throughput in multicast applications.
- **RTS Threshold:** TRTS Threshold is in the range of **1~2347** byte. The default is **2347** byte. The main purpose of enabling RTS by changing RTS threshold is to reduce possible collisions due to hidden wireless clients. RTS in AP will be enabled automatically if the packet size is larger than the Threshold value. By default, RTS is disabled in a normal environment supports non-jumbo frames.

- **Short Preamble:** By default, it's "**Enable**". To **Disable** is to use Long 128-bit Preamble Synchronization field. The preamble is used to signal "here is a train of data coming" to the receiver. The short preamble provides 72-bit Synchronization field to improve WLAN transmission efficiency with less overhead.
- **WMM:** By default, it's "**Enabled**".

Wireless WMM QoS Setup

To achieve optimal wireless performance, it is necessary to tweak advance setting per requirements properly, not necessary higher the better or lower.

The administrator can change the RTS threshold and fragmentation threshold settings for the system. Please click on **Wireless -> Advanced**

WMM QoS					
WMM Parameters of Access Point					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	No ACK Policy bit
AC_BE(0)	4	6	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	1	3008	<input type="checkbox"/>
AC_VO(3)	2	3	1	1504	<input type="checkbox"/>
WMM Parameters of Station					
AC Type	CWmin	CWmax	AIFS	TxOp Limit	ACM bit
AC_BE(0)	4	10	3	0	<input type="checkbox"/>
AC_BK(1)	4	10	7	0	<input type="checkbox"/>
AC_VI(2)	3	4	2	3008	<input type="checkbox"/>
AC_VO(3)	2	3	2	1504	<input type="checkbox"/>

- **WMM Parameters of Access Point :** *This affects traffic flowing from the access point to the client station*

Queue	Data Transmitted AP to Clients	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).

AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue

Queue	Data Transmitted Clients to AP	Priority	Description
AC_BK	Background.	Low	High throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).
AC_BE	Best Effort	Medium	Medium throughput and delay. Most traditional IP data is sent to this queue
AC_VI	Video	High	Minimum delay. Time-sensitive video data is automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue
AC_VO	Voice	High	Time-sensitive data like VoIP and streaming media are automatically sent to this queue

Configuring QoS options consists of setting parameters on existing queues for different types of wireless traffic. You can configure different minimum and maximum wait times for the transmission of packets in each queue based on the requirements of the media being sent. Queues automatically provide minimum transmission delay for Voice, Video, multimedia, and mission critical applications, and rely on best-effort parameters for traditional IP data.

As an Example, time-sensitive Voice & Video, and multimedia are given effectively higher priority for transmission (lower wait times for channel access), while other applications and traditional IP data which are less time-sensitive but often more data-intensive are expected to tolerate longer wait times.

- o **Aifsn**: The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames
- o **CWmin**: Minimum Contention Window. This parameter is input to the algorithm that determines the initial random back-off wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random back-off wait time is determined.
- o **CWmax**: Maximum Contention Window. The value specified here in the Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random back-off value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".
- o **Txop**: Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (TXOP) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
- o **ACM**: Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.
- o **AckPolicy**: Acknowledgment Policy, WMM defines two ACK policies: **Normal ACK** and **No ACK**. Click "**Checkbox**" indicates "**No ACK**"

When the no acknowledgment (No ACK) policy is used, the recipient does not acknowledge received packets during wireless packet exchange. This policy is suitable in the environment where communication quality is fine and interference is weak. While the No ACK policy helps improve transmission efficiency, it can cause increased packet loss when communication quality deteriorates. This is because when this policy is used, a sender does not retransmit packets that have not been received by the recipient. When the Normal ACK policy is used, the recipient acknowledges each received unicast packet.

- **WMM Parameters of Station**: This affects traffic flowing from the client station to the access point.
- o **Aifsn** : The Arbitration Inter-Frame Spacing Number specifies a wait time (in milliseconds) for data frames

- o **CWmin** : Minimum Contention Window. This parameter is input to the algorithm that determines the initial random backoff wait time ("window") for retry of a transmission. The value specified here in the Minimum Contention Window is the upper limit (in milliseconds) of a range from which the initial random backoff wait time is determined.
- o **CWmax** : Maximum Contention Window. The value specified here in the Maximum Contention Window is the upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached. Once the Maximum Contention Window size is reached, retries will continue until a maximum number of retries allowed is reached. Valid values for the "cwmax" are 1, 3, 7, 15, 31, 63, 127, 255, 511, or 1024. The value for "cwmax" must be higher than the value for "cwmin".
- o **Txop** : Transmission Opportunity is an interval of time when a WME AP has the right to initiate transmissions onto the wireless medium (WM). This value specifies (in milliseconds) the Transmission Opportunity (Txop) for AP; that is, the interval of time when the WMM AP has the right to initiate transmissions on the wireless network.
- o **ACM**: Admission Control Mandatory, ACM only takes effect on AC_VI and AC_VO. When you do not click Checkbox, it means that the ACM is controlled by the connecting AP. If you click Checkbox, it means that the Client is in charge.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes. The items in this page are for AP's RF advanced settings and will be applied to **all VAPs** and **WDS Links**.

Site Survey

Use this tool to scan and locate WISP Access Points and select one to associate with. Please click on **Wireless -> Site Survey**. Below depicts an example for site survey.

ESSID	MAC Address	Signal/Noise, dBm	RSSI	Signal Quality, %	Channel	Security	Select
WalkingDead	00:E0:4C:81:86:82	-29 / -95	66	100%	1	WPA2-PSK/AES	Select
TRENDnet639RMA	D8:EB:97:A5:90:EC	-41 / -95	54	100%	1	WPA-PSK/AES	Select
TrendnetSkyN	00:14:D1:C5:7D:44	-69 / -95	26	76%	1	WPA2-PSK/AES	Select
TRENDnet815_2.4GHz_3272	00:11:E0:04:96:AD	-30 / -95	65	100%	1	WPA2-PSK/AES	Select
ATT048	90:B1:34:B0:53:60	-79 / -95	16	42%	1	WPA-PSK/AES	Select
V72	D8:EB:97:BC:18:EC	-62 / -95	33	92%	1	WPA2-PSK/AES	Select
TRENDnet752_2.4GHz_0019	D0:AE:EC:C4:E3:C0	-32 / -95	63	100%	7	WPA2-PSK/AES	Select
TrendnetSkyN	00:14:D1:CF:3F:0C	-48 / -95	47	100%	11	WPA2-PSK/AES	Select

- **ESSID**: Available Extend Service Set ID of surrounding Access Points.
- **MAC Address**: MAC addresses of surrounding Access Points.
- **Signal**: Received signal strength of all found Access Points.
- **Channel**: Channel numbers used by all found Access Points.
- **Security**: Security type by all found Access Points.
- **Band**: Wireless band used by all found Access Points.
- **Network Type**: Network type used by all found Access Points.
- **Select**: Click "Select" to configure settings and associate with chosen AP.

Create Wireless Profile

The administrator can configure station profiles via this page. Please click on **Wireless -> Wireless Profile** and follow the below setting.

- **Connection Setup**: Select the repeater connection type.

The screenshot shows a 'Connection Setup' section with two radio buttons: 'Fix' (which is selected) and 'Cycle'.

- o **Fix**: Select to have access point fixed on one profile to repeat
- o **Cycle**: Select to have access point cycle through different profiles.

- **General Configuration**:

The screenshot shows a 'General Configuration' form with the following fields:

- MAC Address: 00:22:AA:00:11:08
- Profile Name: [Empty text box]
- ESSID: [Empty text box]
- Lock to AP MAC: [Empty text box] (Optional)
- Security Type: NONE (dropdown menu)

- **MAC Address**: The MAC address of the Wireless Station is displayed here.
- **Profile Name**: Set different profiles for quick connection uses.

- **ESSID:** Assign Service Set ID for the wireless system.
- **Lock to AP MAC:** This allows the station to always maintain connection to a particular AP with a specific MAC address. This is useful as sometimes there can be few identically named SSID's (AP's) with different MAC addresses. With AP lock on, the station will lock to MAC address and not roam between several Access Points with the same ESSID.
- **Security Type:** Select the desired security type from the drop-down list; the options are **Disable**, **WEP**, **WPA-PSK**, **WPA2-PSK**, **WPA-Enterprise**, **WPA2-Enterprise** and **WEP 802.1X**.
 - **Disable:** Data are unencrypted during transmission when this option is selected.

WEP	
Key Length	64 bits
WEP Auth Method	<input checked="" type="checkbox"/> Open System <input type="checkbox"/> Shared
Key Index	1
WEP Key 1	<input type="text"/>
WEP Key 2	<input type="text"/>
WEP Key 3	<input type="text"/>
WEP Key 4	<input type="text"/>

- **WEP Auth Method:** Enable the desire option among **OPEN** or **SHARED**
 - **Key Index:** Key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
- **WPA-PSK (or WPA2-PSK) :** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

WPA General	
Cipher Suite	<input checked="" type="radio"/> AES <input type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
Key Type	<input checked="" type="radio"/> ASCII <input type="radio"/> HEX
Pre-shared Key	<input type="text"/>

- **Cipher Suite:** By default, it is **AES**. Select either AES or TKIP cipher suites
- **Group Key Update Period:** By default, it is **600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Pre-shared Key:** Enter the pre-shared key; the format shall go with the selected key type.
- **WPA-Enterprise (or WPA2-Enterprise):** The RADIUS authentication and encryption will be both enabled if this is selected.

WPA General	
Cipher Suite	<input checked="" type="radio"/> AES <input type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
EAP Reauth Period	3600
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	1812
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **WPA General Settings:**
 - **Cipher Suite:** By default, it is AES. Select either AES or TKIP cipher suites

- **Group Key Update Period:** By default, it's **3600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **EAP Reauth Period:** By default, it's **3600** seconds. Set **WPA2** PMKID cache timeout period, after time out, the cached key will be deleted.
- **Pre-Authentication:** By default, it's "Disable". To Enable is use to speed up roaming before pre-authenticating IEEE 802.1X/EAP part of the full RSN authentication and key handshake before actually associating with a new AP.
- **Radius Server Settings :**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's 1812. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports 8 to 64 characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.
- **WEP 802.1X:** When WEP 802.1x Authentication is enabled, please refer to the following Dynamic WEP and RADIUS settings to complete configuration.

Dynamic WEP Setting	
WEP Key Length	<input checked="" type="radio"/> 64bits <input type="radio"/> 128bits
WEP Key Update Period	<input type="text" value="300"/>
EAP Reauth Period	<input type="text" value="3600"/>
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	<input type="text" value="1812"/>
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

- **Radius Server Settings:**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's **1812**. The port number used to communicate with RADIUS server.

- **Shared secret:** A secret key used between system and RADIUS server. Supports **8** to **64** characters.
- **Accounting RADIUS Server:** Enable to set Account RADIUS server.
- **Key Index:** key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
- **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
- **WPA-PSK (or WPA2-PSK):** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

AP Setup

The administrator can configure station profiles via this page. Please click on **Wireless -> Wireless Profile** and follow the below setting.

Security	
ESSID	<input type="text" value="Repeater AP"/>
Enable Repeater AP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Hidden SSID	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Client Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IAPP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Maximum Clients	<input type="text" value="32"/>
Security Type	<input type="text" value="Disable"/>

- **ESSID:** Assign Service Set ID for the wireless system.
- **Enable Repeater SSID:** Select **Enable** to broadcast the repeated signal.
- **Hidden SSID:** Select **Enable** to broadcast the access point's SSID.
- **Client Isolation:** Select **Enable** to isolate wireless clients from each other.
- **IAPP:**
- **Maximum Clients:** Enter the amount of wireless clients allowed to connect to the access point.
- **Security Type:** Select the desired security type from the drop-down list; the options are **Disable**, **WEP**, **WPA-PSK**, **WPA2-PSK**, **WPA-Enterprise**, **WPA2-Enterprise** and **WEP 802.1X**.
 - **Disable:** Data are unencrypted during transmission when this option is selected.

WEP	
Key Length	64 bits
WEP Auth Method	<input type="checkbox"/> Open System <input type="checkbox"/> Shared
Key Index	1
WEP Key 1	
WEP Key 2	
WEP Key 3	
WEP Key 4	

- **WEP Auth Method:** Enable the desire option among **OPEN** or **SHARED**
 - Key Index: Key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key #:** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
- **WPA-PSK (or WPA2-PSK) :** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

WPA General	
Cipher Suite	<input type="radio"/> AES <input checked="" type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
Key Type	<input checked="" type="radio"/> ASCII <input type="radio"/> HEX
Pre-shared Key	

- **Cipher Suite:** By default, it is **AES**. Select either AES or TKIP cipher suites
- **Group Key Update Period:** By default, it is **600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
- **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.

- **Pre-shared Key:** Enter the pre-shared key; the format shall go with the selected key type.
- **WPA-Enterprise (or WPA2-Enterprise):** The RADIUS authentication and encryption will be both enabled if this is selected.

WPA General	
Cipher Suite	<input type="radio"/> AES <input checked="" type="radio"/> TKIP
Group Key Update Period	600
Master Key Update Period	83400
EAP Reauth Period	3600
Authentication RADIUS Server	
Server IP	
Port	1812
Shared Secret	
Accounting RADIUS Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

- **WPA General Settings:**
 - **Cipher Suite:** By default, it is AES. Select either AES or TKIP cipher suites
 - **Group Key Update Period:** By default, it's **3600** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **Master Key Update Period:** By default, it is **83499** seconds. This time interval for rekeying GTK, broadcast/multicast encryption keys, in seconds. Entering the time-length is required.
 - **EAP Reauth Period:** By default, it's **3600** seconds. Set **WPA2** PMKID cache timeout period, after time out, the cached key will be deleted.
 - **Pre-Authentication:** By default, it's "Disable". To Enable is use to speed up roaming before pre-authenticating IEEE 802.1X/EAP part of the full RSN authentication and key handshake before actually associating with a new AP.
- **Radius Server Settings :**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's 1812. The port number used to communicate with RADIUS server.

- **Shared secret:** A secret key used between system and RADIUS server. Supports 8 to 64 characters.
- **Accounting RADIUS Server:** Enable to set Account RADIUS server.
- **WEP 802.1X:** When WEP 802.1x Authentication is enabled, please refer to the following Dynamic WEP and RADIUS settings to complete configuration.

Dynamic WEP Setting	
WEP Key Length	<input checked="" type="radio"/> 64bits <input type="radio"/> 128bits
WEP Key Update Period	<input type="text" value="300"/>
EAP Reauth Period	<input type="text" value="3600"/>
Authentication RADIUS Server	
Server IP	<input type="text"/>
Port	<input type="text" value="1812"/>
Shared Secret	<input type="text"/>
Accounting RADIUS Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **Radius Server Settings:**
 - **IP Address:** Enter the IP address of the Authentication RADIUS server.
 - **Port:** By default, it's **1812**. The port number used to communicate with RADIUS server.
 - **Shared secret:** A secret key used between system and RADIUS server. Supports 8 to 64 characters.
 - **Accounting RADIUS Server:** Enable to set Account RADIUS server.
 - **Key Index :** key index is used to designate the WEP key during data transmission. 4 different WEP keys can be entered at the same time, but only one is chosen.
 - **WEP Key # :** Enter **HEX** or **ASCII** format WEP key value; the system supports up to 4 sets of WEP keys.
 - **WPA-PSK (or WPA2-PSK) :** WPA (or WPA2) Algorithms, allows the system accessing the network by using the WPA-PSK protected access.

Wireless AP MAC Filter Setup

The administrator can allow or reject clients to access Repeater AP.

MAC Rules	
Action	<input type="text" value="Disable"/> <input type="button" value="Save"/>
ACL MAC Address	
MAC Address	<input type="text"/> <input type="button" value="Add"/>

- **MAC Filter Setup:** By default, it's "**Disable**". Options are **Disable**, **Only Deny List**
- **MAC or Only Allow List MAC.**
 - **Only Allow List MAC:** The wireless clients in the "**Enable**" list will be **allowed** to access the Access Point; All others or clients in the "**Disable**" list will be **denied**.
 - **Only Deny List MAC:** The wireless clients in the "**Enable**" list will be **denied** to access the Access Point; All others or clients in the "**Disable**" list will be **allowed**.
- **MAC:** Enter MAC address (e.g. aa:bb:cc:00:00:0a) and click "**Add**" button, then the MAC address should display in the "**Enable**" List.

There are a maximum of **20** clients allowed in this "Enable" List. The MAC addresses of the wireless clients can be added and removed to the list using the **Add** and **Remove** buttons. Click **Apply** button to activate your changes

Access Control DMZ

DMZ is commonly work with the NAT functionality as an alternative of Virtual Server(Port Forwarding) while wanting all ports of DMZ host visible to Internet users. Virtual Server rules have precedence over the DMZ rule. In order to use a range of ports available to access to different internal hosts Virtual Server rules are needed.

DMZ	
Service	<input type="text" value="Automatic Assignment"/>
Internal IP Address	<input type="text"/>

- **DMZ:** By default, it's "**Disable**". Check **Enable** radial button to enable DMZ.
- **IP Address:** Enter IP address of DMZ host and only one DMZ host is supported.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes.

IP Filter Setup

Allows to create deny or allow rules to filter ingress or egress packets from specific source and/or to destination IP address on wired (LAN) or Wireless (WAN) ports. Filter rules could be used to filter unicast or multicast packets on different protocols as shown in the IP Filter Setup. Important to note that IP filter rules has precedence over Virtual server rules.

Please click on **Advance -> IP Filter Setup** and follow the below setting.

IP Rules	
Source Address/Mask	<input type="text"/>
Source Port	<input type="text"/>
Destination Address/Mask	<input type="text"/>
Destination Port	<input type="text"/>
In/Out	<input checked="" type="radio"/> In <input type="radio"/> Out
Protocol	ALL ▾
Policy	<input checked="" type="radio"/> Deny <input type="radio"/> Pass
Interface	ALL ▾
Schedule	Always Run ▾

- **Source Address/Mask:** Enter desired source IP address and netmask; i.e. 192.168.2.10/32.
- **Source Port:** Enter a port or a range of ports as **start:end**; i.e. port 20:80
- **Destination Address/Mask:** Enter desired destination IP address and netmask; i.e. 192.168.1.10/32
- **Destination Port:** Enter a port or a range of ports as **start:end**; i.e. port 20:80
- **In/Out:** Applies to Ingress or egress packets
- **Protocol:** Supports **TCP**, **UDP** or **ICMP**.
- **Listen:** Click **Yes** radial button to match TCP packets only with the SYN flag.
- **Active:** **Deny** to drop and **Pass** to allow per filter rules
- **Interface:** The interface that a filter rule applies

Click "**Save**" button to add IP filter rule. Total of **20** rules maximum allowed in the IP Filter List. All rules can be edited or removed from the List. Click **Reboot** button to activate your changes.

When you create rules in the IP Filter List, the prior rules maintain higher priority. To allow limited access from a subnet to a destination network manager needs to create allow rules first and followed by deny rules. So, if you just want one IP address to access the system via telnet from your subnet, not others, the Example 1 demonstrates it, not rules in the Example 2.

- **Example 1 :** Create a higher priority rule to allow IP address 192.168.2.2 Telnet access from LAN port first, and deny Telnet access from remaining IP addresses in the same subnet.
- **Example 2 :** All Telnet access to the system from the IP addresses of subnet 192.168.2.x works with the rule 1 of Example 2. The rule 2 won't make any difference.

MAC Filter Setup

Create MAC filter rules to allow or deny unicast or multicast packets from limited number of MAC addresses. Note that MAC filter rules have precedence over IP Filter rules.

Please click on **Advance -> MAC Filter Setup** and follow the below setting.

Action	
Service	Disable ▾
MAC Address	
MAC Address	<input type="text"/> <input type="button" value="Add"/>
Schedule	Always Run ▾

- **MAC Filter Rule:** By default, it's "**Disable**". Options are **Disabled**, **Only Deny List MAC** or **Only Allow List MAC**. Click **Save** button to save your change.
Two ways to set the MAC Filter List:
 - **Only Allow List MAC:** The wireless clients in the MAC Filter List will be **allowed** to

- access to Access Point; All others will be denied.
- **Only Deny List MAC:** The wireless clients in the MAC Filter List will be **denied** to access to Access Point; All others will be allowed.
- **MAC Address:** Enter MAC address (e.g. aa:bb:cc:00:00:0a) and click **“Add”** button, then the MAC address should display in the MAC Filter List.

There are a maximum of **20** clients allowed in this MAC Filter List. The MAC addresses of the wireless clients can be added and removed to the list using the **Add** and **Delete** buttons.

Click **Reboot** button to activate your changes

Virtual Server

“Virtual Server” can also referred to as “Port Forward” as well and used interchangeably. Resources in the network can be exposed to the Internet users in a controlled manner including on-line gaming, video conferencing or others via Virtual Server setup. Don't repeat ports' usage to avoid confusion.

Suppose you want to assign ports 21-25 to one FTP, Telnet and SMTP server (A in the example), and port 80 to another (B in the example). You assign the LAN IP addresses and the ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet.

Virtual Server	
Service	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Description	<input type="text"/>
Private IP	<input type="text"/>
Protocol Type	<input checked="" type="radio"/> TCP <input type="radio"/> UDP
Private Port	<input type="text"/>
Public Port	<input type="text"/>
Schedule	Always Run ▾

- **Virtual Server:** By Default, It's **“Disable”**. Check **Enable** radial button to enable Virtual Server.
- **Description:** Enter appropriate message for resource sharing via Virtual Server.
- **Private IP:** Enter corresponding IP address of internal resource to share.
- **Protocol Type:** Select appropriate sessions, TCP or UDP, from shared host via

multiple private ports.

- **Private Port:** A port or a range of ports may be specified as **start:end**; i.e. port 20:80
- **Public Port:** A port or a range of ports may be specified as **start:end**; i.e. port 20:80 .Click **“Add”** button to add Virtual Server rule to List. Total of maximum **20** rules are allowed in this List. All rules can be edited or removed from the List. Click **Reboot** button to activate your changes.

While creating multiple Virtual Server rules, the prior rules have higher priority. The Virtual server rules have precedence over the DMZ one while both rules exist. Example 1 and 2 demonstrate proper usage of DMZ and Virtual Server rules.

- **Example 1:** All connections should be redirected to **192.168.2.12** while DMZ is enabled. Since Virtual Server rules have precedence over the DMZ rule all connections to TCP port 22 will be directed to TCP port 22 of 192.168.2.10 and remaining connections to port TCP **20~80** will be redirected to port TCP **20~80** of **192.168.2.11**
- **Example 2:** All connections should be redirected to **192.168.2.12** while DMZ is enabled. Since Virtual Server rules have precedence over the DMZ rule all other connections to TCP port **20~80** will be redirected to port **20~80** of **192.168.2.11**. The rule 2 won't take effect.

Bandwidth Control

Bandwidth control allows you to control the bandwidth going through the access point.

Bandwidth Control	
Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Mode	<input checked="" type="radio"/> Total bandwidth <input type="radio"/> Per Rule Bandwidth
Upload	<input type="text"/> kbps
Download	<input type="text"/> kbps

- **Service:** Select **Enable** to turn on bandwidth control through the access point.
- **Mode:** Select the bandwidth control mode to use through the access point.
- **Upload:** Enter **the upload bandwidth speeds**
- **Download:** Enter the download bandwidth speeds

Routing

This section allows you to configure the routing of the access point.

- **OSPF:** Select **Enable** to enable OSPF setting

OSPF Settings	
OSPF Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
RouterID	192.168.10.100 (LAN) ▼
Network(WAN)	<input checked="" type="checkbox"/> WAN Area <input type="text"/>
Network(LAN)	<input checked="" type="checkbox"/> LAN Area <input type="text"/>
	<input checked="" type="checkbox"/> Distribute RIP over OSPF

- **RouterID:** Select the ID to configure
- **Network (WAN):** Select to configure the WAN section, enter the area to assign
- **Network (LAN):** Select to configure the LAN section, enter the area to assign.
- **Distribute RIP over OSPF:** Check this option to use RIP protocol

- **RIP Settings**

RIP Settings	
RIP Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Side	<input checked="" type="checkbox"/> WAN <input type="checkbox"/> LAN
	<input checked="" type="checkbox"/> Distribute OSPF over RIP

- **RIP Service:** Select **Enable** to use RIP protocol
- **Side:** Select the network section to apply RIP.

Status

This section breaks down into subsections of **System Overview**, **Associated Clients Status**, **WDS Link Status**, **Extra Information** and **Event Log**.

System Overview

Display detailed information of **System**, **Network**, **LAN** and **Wireless** in the System Overview page.

- **Device Information:** Display the information of the system.

Device Information	
Mode	Repeater
Host Name	TEW-738APBO
Host Description	10dBi Outdoor PoE Access Point
Firmware Version	V1.0.19
Firmware Date	2014/04/23 09:44:51
Country	US
System Time	2014/05/05 14:49:12
System Up Time	03:58:31
ETH1 MAC	00:22:AA:00:11:07
ETH2 MAC	00:22:AA:00:11:06
Wireless MAC	00:22:AA:00:11:08

- **Operating Mode:** The mode currently in service.
- **Host Name:** The name of the system.
- **Host Description:** A description of the system.
- **Firmware Version:** The current installed firmware version.
- **Firmware Date:** The build time of installed firmware.
- **Device Time:** The current time of the system.
- **System Up Time:** The time period that system has been in service since last reboot.
- **ETH1/ETH2MAC:** Ethernet MAC address of the access point.
- **Wireless MAC:** Wireless MAC address of the access point
- **CPU Loading:** The CPU loading of the access point
- **Memory Used:** Memory usage of the access point.

- **LAN Information:** Display total received and transmitted statistics on the LAN interface.

LAN Information	
Ethernet Connection Type	Static IP
IP Address	192.168.10.100
IP Netmask	255.255.255.0
IP Gateway	192.168.10.1
DNS	

- **Ethernet Connection Type:** The connection applied on the access point.
- **IP Address:** The management IP of system. By default, it's 192.168.2.254.
- **IP Netmask:** The network mask. By default, it's 255.255.255.0.
- **IP Gateway:** The gateway IP addresses and by default, it's 192.168.2.1.
- **Primary DNS:** The primary DNS server in service.

- **Wireless Information:** Display total received and transmitted statistics on available Virtual AP.

Wireless Information	
WiFi	On
Band	802.11b/g/n
Channel	5
Current Txpower	28 dBm (630 mW)
Date Rate	Auto (300Mb/s)

- **WiFi:** Wireless status of the access point.
- **Band:** Operating wireless band of the access point.
- **Channel:** Operating channel of the access point.
- **Current Tx Power:** Transmit power of the access point.
- **Data Rate:** Current wireless data rate of the access point.

DHCP Client

Display detailed information of the access point's DHCP server.

DHCP Server Status	
Service	Enable
Start IP	192.168.10.101
End IP	192.168.10.254
Default Gateway	192.168.10.100
DNS1	192.168.10.100
DNS2	
WINS	
Domain	
Lease Time	86400

- **Service:** Status of access point's DHCP server
- **Start IP:** Starting IP address of access point's DHCP server
- **End IP:** Last IP address used on the access point's DHCP server
- **Default Gateway:** Assigned gateway address to the access point
- **DNS1/2:** Assigned DNS to the access point's DHCP server
- **WINS:** Assigned WINS to the access point's DHCP server
- **Domain:** Domain assigned to access point
- **Lease Time:** DHCP lease time of access point's DHCP server

DHCP Client List		
IP Address	MAC Address	Expired In
-	-	-

- **DHCP Client list:** List of clients connected to the access point

Extra Information

Users could pull out information such as Route table, ARP table, MAC table, Bridge table or STP available in the drop-down list from system. The “Refresh” button is used to retrieve latest table information.

Extra Information			
Information	Route Information		
Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **Route table information:** Select “Route table information” on the drop-down list to display route table. TEW-738APBO could be used as a L2 or L3 device. It doesn't support dynamic routing protocols such as RIP or OSPF. Static routes to specific hosts, networks or default gateway are set up automatically according to the IP configuration of system's interfaces. When used as a L2 device, it could switch packets and, as L3 device, it's capable of being a gateway to route packets inward and outward.

Route Information			
Destination	Gateway	Netmask	Interface
192.168.10.0	0.0.0.0	255.255.255.0	bre0
239.0.0.0	0.0.0.0	255.0.0.0	bre0
224.0.0.0	0.0.0.0	224.0.0.0	bre0
0.0.0.0	192.168.10.1	0.0.0.0	bre0

- **ARP table Information:** Select “ARP Table Information” on the drop-down list to display ARP table. ARP associates each IP address to a unique hardware address (MAC) of a device. It is important to have a unique IP address as final destination to switch packets to.

ARP Table Information		
IP Address	MAC Address	Interface
192.168.10.123	00:26:2d:5b:46:53	bre0

- **Bridge table information:** Select “Bridge Table information” on the drop-down list to display bridge table. Bridge table will show Bridge ID and STP's Status on the each Ethernet bridge and its attached interfaces, the Bridge Port should be attached to some interfaces (e.g. eth2, ra0~ra6 and wds0~wds3).

Bridge Table Information			
Bridge Port	Bridge ID	STP Enabled	Interface
LAN	8000.0022aa001106	no	eth1
			eth0
			ath0

- **Bridge MAC information:** Select “Bridge MACs Information” on the drop-down list to display MAC table.

Bridge MACs Table Information			
Port	MAC Address	Local	Ageing Timer
VAP0	00:14:d1:c2:da:84	no	3.17
LAN	00:22:aa:00:11:06	yes	0.00
WAN	00:22:aa:00:11:07	yes	0.00
VAP0	00:22:aa:00:11:08	yes	0.00
WAN	00:26:2d:5b:46:53	no	0.04

This table displays local MAC addresses associated with wired or wireless interfaces, but also remember non-local MAC addresses learned from wired or wireless interfaces. Ageing timers will be reset when existing MAC addresses in table are learned again or added when new MAC addresses are seen from wired or wireless interfaces as well. When time runs out for a particular entry, it will be pruned from the table. In that situation, switching packet to that particular MAC address will be dropped.

Event Log

The Event log displays system events when system is up and running. Also, it becomes very useful as a troubleshooting tool when issues are experienced in system.

Time	Facility	Severity	Message
2013-07-06 03:32:47	System	Info	Authentication successful for admin from 192.168.10.123

- **Time:** The date and time when the event occurred.
- **Facility:** It helps users to identify source of events such "System" or "User"
- **Severity:** Severity level that a specific event is associated such as "info", "error", "warning", etc.
- **Message:** Description of the event.

Click **Refresh** button to renew the log, or click **Clear** button to clear all the record.

Associated Client List

List of all clients associated to the access point.

#	MAC Address	RSSI	TX/RX Rate	TX/RX SEQ	TX/RX Bytes	Connect Time	Actions
No such device							

- **MAC Address:** Display MAC address of WDS peer.
- **RSSI:** Indicate the signal strength of the respective WDS links.
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes

Remote AP status

List the current status of the remote access point.

ESSID	MAC Address	Signal/Noise	RSSI	Signal Quality, %	TX/RX Rate	Status
TRENDnet7380_2.4GHz		0 / 0	0	0%	0M / 0M	Unlinked

- **ESSID:** SSID of remote access point
- **MAC Address:** Display MAC address of WDS peer.
- **RSSI:** Indicate the signal strength of the respective WDS links.
- **TX/RX SEQ:** Transmit and receive sequence.
- **TX/RX Bytes:** Transmit and receive bytes
- **Status:** Display current association status of remote access point

System Management

Configure Management

Administrator could specify geographical location of the system via instructions in this page. Administrator could also enter new Root and Admin passwords and allow multiple login methods.

Please click **System** -> **Management** and follow the below settings.

- **System Information**

System Information	
System Name	<input type="text" value="TEW-738APBO"/>
Description	<input type="text" value="10dBi Outdoor PoE Access Point"/>
Location	<input type="text"/>

- **System Name:** Enter a desired name or use the default one.
- **Description:** Provide description of the system.
- **Location:** Enter geographical location information of the system. It helps administrator to locate the system easier.

- **Admin Password:**

admin Password	
New admin Password	<input type="text"/>
Check admin Password	<input type="text"/>

- o **New Password** : Enter a new password if desired
- o **Check New Password**: Enter the same new password again to check.

• **Admin Login Methods:**

Login Methods	
Enable HTTP	<input checked="" type="checkbox"/> Port <input type="text" value="80"/>
Enable HTTPS	<input type="checkbox"/> Port <input type="text" value="443"/>
Enable Telnet	<input checked="" type="checkbox"/> Port <input type="text" value="23"/>
Enable SSH	<input type="checkbox"/> Port <input type="text" value="22"/> <input type="button" value="GenerateKey"/>
Host Key Footprint	<input type="text" value="None"/>

- o **Enable HTTP**: Check to select HTTP Service.
- o **HTTP Port**: The default is 80 and the range is between 1 ~ 65535.
- o **Enable HTTPS**: Check to select HTTPS Service
- o **HTTPS Port**: The default is 443 and the range is between 1 ~ 65535.
- o **Enable Telnet**: Check to select Telnet Service
- o **Telnet Port**: The default is 23 and the range is between 1 ~ 65535.
- o **Enable SSH**: Check to select SSH Service
- o **SSH Port**: The default is 22 and the range is between 1 ~ 65535.

- **Ping Watchdog**: The ping watchdog sets the TEW-738APBO Device to continuously ping a user defined IP address (it can be the internet gateway for example). If it is unable to ping under the user defined constraints, the TEW-738APBO device will automatically reboot. This option creates a kind of "fail-proof" mechanism.


Ping Watchdog is dedicated for continuous monitoring of the particular connection to remote host using the Ping tool. The Ping works by sending ICMP "echo request" packets to the target host and listening for ICMP "echo response" replies. If the defined number of replies is not received, the tool reboots the device.

Ping Watchdog	
Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IP Address To Ping	<input type="text"/>
Ping Interval	<input type="text" value="300"/> Seconds
Startup Delay	<input type="text" value="300"/> Seconds
Failure Count To Reboot	<input type="text" value="3"/>

- o **Enable Ping Watchdog**: control will enable Ping Watchdog Tool.
- o **IP Address To Ping**: specify an IP address of the target host which will be monitored by Ping Watchdog Tool.
- o **Ping Interval**: specify time interval (in seconds) between the ICMP "echo requests" are sent by the Ping Watchdog Tool. Default is **300** seconds.
- o **Startup Delay**: specify initial time delay (in seconds) until first ICMP "echo requests" are sent by the Ping Watchdog Tool. The value of Startup Delay should be at least **60** seconds as the network interface and wireless connection initialization takes considerable amount of time if the device is rebooted. Default is **300** seconds.
- o **Failure Count To Reboot**: specify the number of ICMP "echo response" replies. If the specified number of ICMP "echo response" packets is not received continuously, the Ping Watchdog Tool will reboot the device.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes

Without a valid certificate, users may encounter the following problem in IE7 when they try to access system's WMI (<https://192.168.2.254>). There will be a "Certificate Error", because the browser treats system as an illegal website.

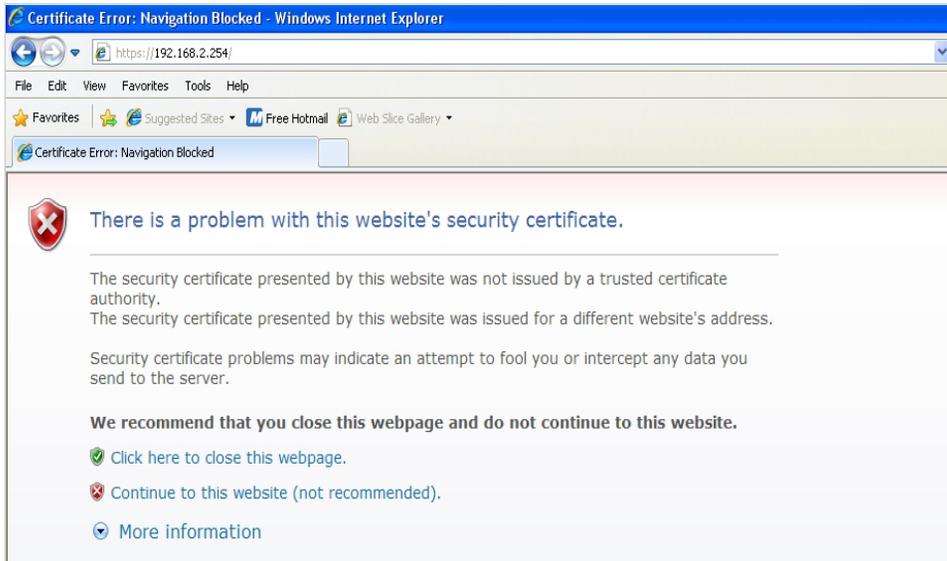

Click **“Continue to this website”** to access the system's WMI. The system's Overview page will appear.

Configure System Time

System time can be configured via this page and manual setting or via a NTP server is supported.

Please click on **System -> Time Server** and follow the below setting.

System Time	
Local Time	2013/07/01 03:39:49
Time Mode	
Mode	<input type="radio"/> NTP Server <input checked="" type="radio"/> Manual
User Setup	
Date	2014 - May - 5
Time	14 - 30 - 52 (GMT-7:00)
Set Time	<input type="button" value="Set Time"/>

- **Local Time:** Display the current system time.
- **NTP Client:** To synchronize the system time with NTP server.
 - **Enable:** Check to select NTP client.
 - **Default NTP Server:** Select the NTP Server from the drop-down list.
 - **Time Zone:** Select a desired time zone from the drop-down list.
 - **Daylight saving time:** Enable or disable Daylight saving.

Click **Save** button to save your changes. Click **Reboot** button to activate your changes.

Configure SNMP Setup

SNMP is an application-layer protocol that provides a message format for communication between SNMP managers and agents. By enabling SNMP function, the administrator can obtain the system information remotely.

Please click on **System -> SNMP Setup** and follow the below setting.

SNMP v2c	
Enable	<input type="checkbox"/>
SNMP v3	
Enable	<input checked="" type="checkbox"/>
SNMP Trap	
Enable	<input type="checkbox"/>

- **SNMP v2c Enable:** Check to enable SNMP v2c.

SNMP v2c	
Enable	<input checked="" type="checkbox"/>
ro community	<input type="text"/>
rw community	<input type="text"/>

- o **ro community:** Set a community string to authorize read-only access.
- o **rw community:** Set a community string to authorize read/write access.

- **SNMP v3 Enable:** Check to enable SNMP v3. SNMPv3 supports the highest level SNMP security.

SNMP v3	
Enable	<input checked="" type="checkbox"/>
SNMP ro user	<input type="text"/>
SNMP ro password	<input type="text"/>
SNMP rw user	<input type="text"/>
SNMP rw password	<input type="text"/>

- o **SNMP ro user:** Set a community string to authorize read-only access.
- o **SNMP ro password:** Set a password to authorize read-only access.
- o **SNMP rw user:** Set a community string to authorize read/write access.
- o **SNMP rw password:** Set a password to authorize read/write access.

- **SNMP Trap:** Events such as cold start, interface up & down, and association & disassociation will report to an assigned server.

SNMP Trap	
Enable	<input checked="" type="checkbox"/>
Community	<input type="text"/>
IP 1	<input type="text"/>
IP 2	<input type="text"/>
IP 3	<input type="text"/>
IP 4	<input type="text"/>

- o **Community:** Set a community string required by the remote host computer that

will receive trap messages or notices send by the system.

- o **IP:** Enter the IP addresses of the remote hosts to receive trap messages.

Click **Save** button to save changes and click **Reboot** button to activate.

Enable UPNP

Enable UPNP protocol on the access point.

UPNP	
Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- **Service:**
 - o **Enable:** Select to enable UPNP through the access point
 - o **Disable:** Select to disable UPNP

Backup / Restore and Reset to Factory

Backup current configuration, restore prior configuration or reset back to factory default configuration can be executed via this page.

Please click on **Utilities -> Profile Setting** and follow the below setting.

Profile Setting	
In this page, you can save your current configuration, restore a previously saved configuration, or restore all of the settings in the system to the factory (default) settings.	
Save Settings to PC	<input type="button" value="Save"/>
Load Settings From PC	<input type="button" value="Browse..."/> No file selected. <input type="button" value="Upload"/>
Reset To Factory Default	<input type="button" value="Default"/>

- **Save Settings to PC:** Click **Save** to save current access point configuration settings to a computer.
- **Load Settings from PC:** Click **Browse** button to locate a configuration file to restore, and then click **Upload** button to upload.
- **Reset To Factory Default:** Click **Default** button to reset back to the factory default settings and expect **Successful** loading message. Then, click **Reboot** button to activate.

Firmware Upgrade

Firmware is the main software image that system needs to respond to requests and to manage real time operations. Firmware upgrades are sometimes required to include new features or bugs fix. It takes around **2 minutes** to upgrade due to complexity of firmware. To upgrade system firmware, click **Browse** button to locate the new firmware, and then click **Upgrade** button to upgrade.

Firmware Information	
From time to time, the product may release new versions of the system's firmware. You can download up-to-date firmware to upgrade system.	
Firmware Version	V1.0.19
Firmware Date	2014/04/23 09:44:51
Upgrade Via Local PC	
Select File	<input type="button" value="Browse..."/> No file selected. <input type="button" value="Upgrade"/>
Upgrade Via TFTP Server	
TFTP Server IP	<input type="text"/>
File Name	<input type="text"/> <input type="button" value="Upgrade"/>
Upgrade Via HTTP URL	
URL	<input type="text"/> <input type="button" value="Upgrade"/>

- **Firmware Version:** Access point's current firmware version
- **Firmware Date:** Firmware date of access point
- **Select File:** Click **Browse** button to locate a configuration file to restore, and then click **Upgrade** button to upload.
- TFTP Server IP: Enter the IP address of the TFTP server to use for firmware upgrade
- File: Enter the location of the firmware file to use, and then click **Upgrade** button to upload.
- **URL:** Enter the URL to use to upgrade access point's firmware. Then, click **Reboot** button to activate.

Network Utility

The administrator can diagnose network connectivity via the PING and TRACEROUTE utility.


Please click on **Utilities -> Network Utility** and follow the below setting

Ping	
IP/Domain	<input type="text"/> Times <input type="text" value="5"/> <input type="button" value="Start"/>
Traceroute	
Destination Host	<input type="text"/> Max. Hops <input type="text" value="6"/> <input type="button" value="Start"/> <input type="button" value="Stop"/>
Result	
<div style="border: 1px solid black; height: 150px;"></div>	


- **Ping:** This utility will help ping other devices on the network to verify connectivity. Ping utility, using ICMP packets, detects connectivity and latency between two network nodes. As result of that, packet loss and latency time are available in the **Result** field while running the PING test.
 - **Destination IP/Domain:** Enter desired domain name, i.e. www.google.com, or IP address of the destination, and click **ping** button to proceed. The ping result will be shown in the **Result** field.
 - **Count:** By default, it's 5 and the range is from 1 to 50. It indicates number of connectivity test.
- **Traceroute:** Allows tracing the hops from the TEW-738APBO device to a selected outgoing IP address. It should be used for the finding the route taken by ICMP packets across the network to the destination host. The test is started using the **Start** button, click Stop button to stopped test
 - **Destination Host:** Specifies the Destination Host for the finding the route taken by ICMP packets across the network.
 - **MAX Hop:** Specifies the maximum number of hops(max time-to-live value) traceroute will probe.

Reboot

This function allows user to restart system with existing or most current settings when changes are made. Click **Reboot** button to proceed and take around three minutes to complete.

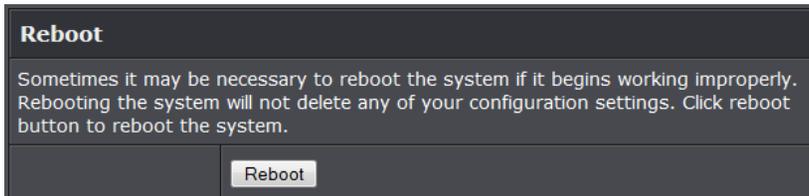


A reminder will be available for remaining time to complete. If power cycle is necessary, please wait till completion of the reboot process.

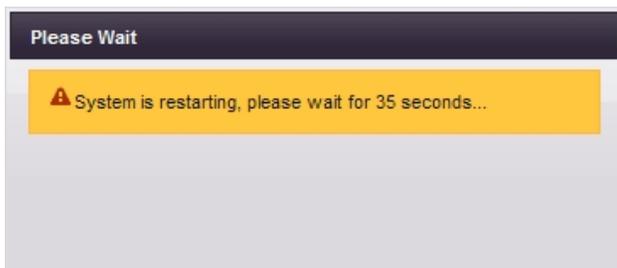


Mounting bracket installation

Package contents

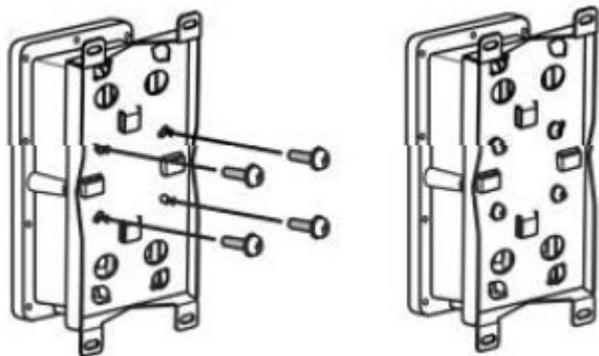


Wall mount bracket

Align the mounting triangle to the back of the access point. Securely tighten the mounting triangle by using the M5x10 screws and washers.

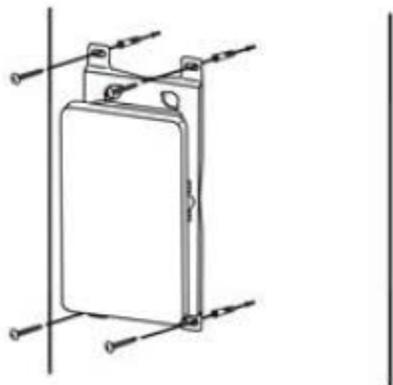

Position the provided mounting bracket to the desired location and mount as shown in the above image using the provided wood screws and plugs.

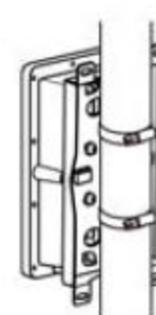Pole mount bracket


Insert and fasten the provided clamps to the pole as shown in the above image using the provided screw washers, spring washers and nuts.

Appendix


Windows TCP/IP Settings

■ Windows XP


1. Click **Start** -> **Settings** -> **Control Panel**, and then “**Control Panel**” window appears. Click on “**Network Connections**”, and then “**Network Connections**” window appears.

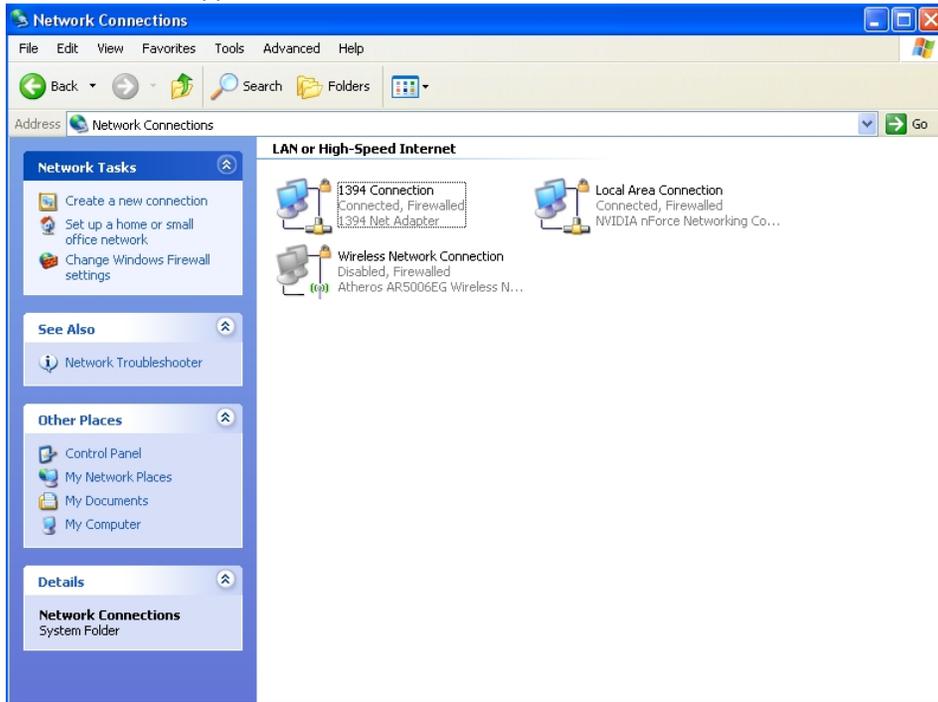

2. Click right on “**Local Area Connection**”, and select **Properties**.

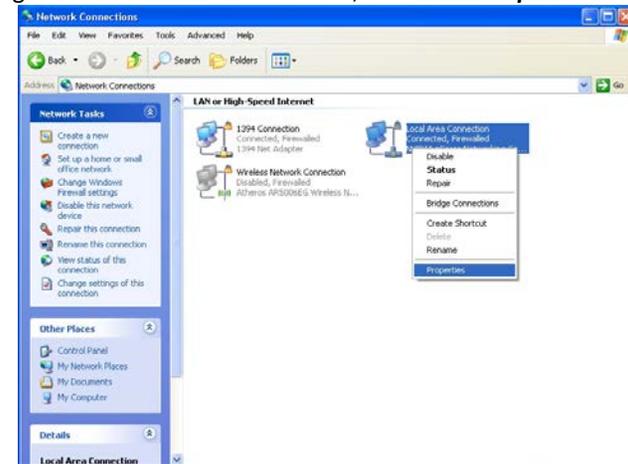


3. In “**Local Area Connection Properties**” window, select “**Internet Protocol (TCP/IP)**” and click on **Properties** button.

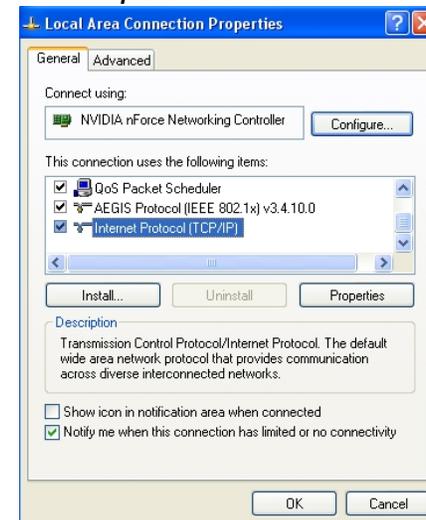


4. Select “**Use the following IP address**”, and type in **IP address : 192.168.2.100**

Subnet mask : 255.255.255.0

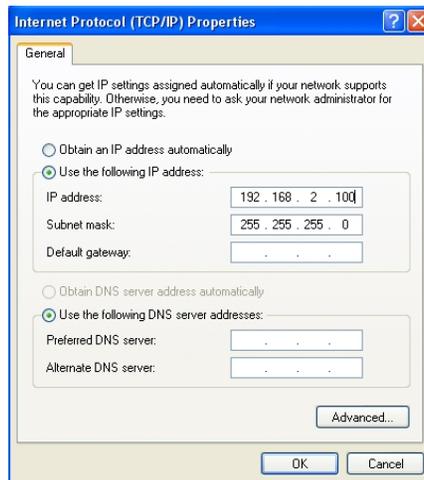


Enabling UPnP in Windows XP

1. Open the **"Add/Remove Programs"** control panel, and then click on **"Add/Remove Windows Components"** in the sidebar. Scroll down and find **"Networking Services"**, highlight it, and then click **Details**.

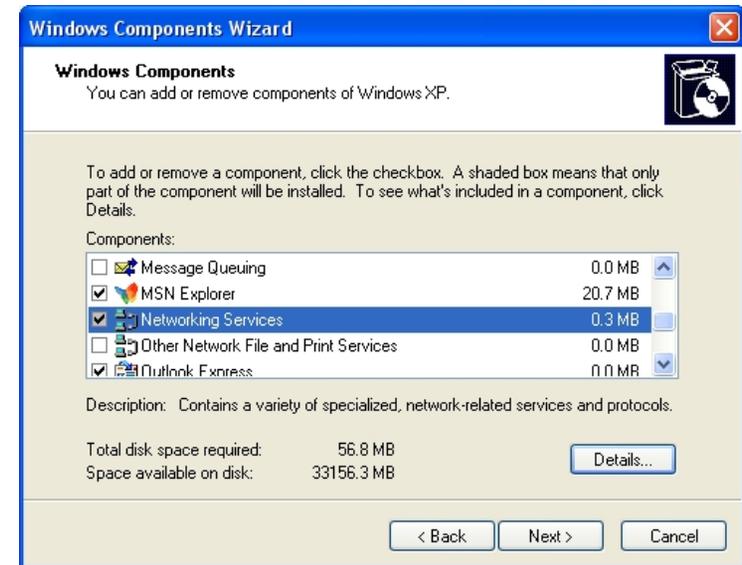

2. In the **"Networking Services"** window, ensure that the **"Internet Gateway Device"** and **"UPnP User Interface"** options are checked. If they are not, check it to enable them, as shown below, and click OK to continue.

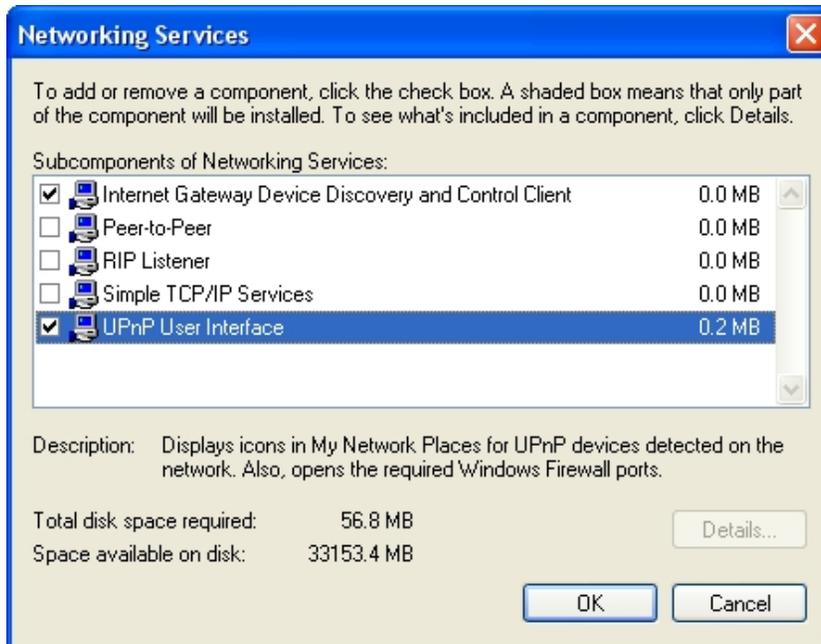

- Next, in the **Control panel**, open the **Administrative Tools** and then open **Services**. Scroll down until you find the **SSDP Discovery Interface**. If the Status is not **Started**, double-click on *SSDP Discovery Interface* to open the service properties. Change the startup type to **Automatic**, then close the properties. Now, right-click on *SSDP Discovery Services*, and choose **Start** from the pop-up menu. The SSDP Discovery Service will then be running and start each time you boot.
- After enabling UPnP and starting the SSDP Discovery Service, it may take few minutes for the **TEW-675APBO/ TEW-738APBO** to be discovered and appear in your **My Network Places**.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TEW-738APBO – 3 Years Warranty

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 year warranty.

If a product does not operate as warranted during the applicable warranty period, TRENDnet shall reserve the right, at its expense, to repair or replace the defective product or part and deliver an equivalent product or part to the customer. The repair/replacement unit's warranty continues from the original date of purchase. All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of-purchase for their return policies.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet within the applicable warranty period and providing a copy of the dated proof of the purchase. Upon proper submission of required documentation a Return Material Authorization (RMA) number will be issued. An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping from outside of the USA and Canada are responsible for return shipping fees. Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees.

WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED,

EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Some TRENDnet products include software code written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL").

Go to <http://www.trendnet.com/gpl> or <http://www.trendnet.com> Download section and look for the desired TRENDnet product to access to the GPL Code or LGPL Code. These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. Please go to <http://www.gnu.org/licenses/gpl.txt> or <http://www.gnu.org/licenses/lgpl.txt> for specific terms of each license.

2014/5/05



Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDnet's website at <http://www.trendnet.com/register>

TRENDnet
20675 Manhattan Place
Torrance, CA 90501. USA