

B4250/B4350

...  **USER'S GUIDE**



OKI

PREFACE

Every effort has been made to ensure that the information in this document is complete, accurate, and up-to-date. The manufacturer assumes no responsibility for the results of errors beyond its control. The manufacturer also cannot guarantee that changes in software and equipment made by other manufacturers and referred to in this guide will not affect the applicability of the information in it. Mention of software products manufactured by other companies does not necessarily constitute endorsement by the manufacturer.

While all reasonable efforts have been made to make this document as accurate and helpful as possible, we make no warranty of any kind, expressed or implied, as to the accuracy or completeness of the information contained herein.

The most up-to-date drivers and manuals are available from the Oki Europe website:

<http://www.okieurope.com>

Copyright © 2004. All rights reserved.

Oki and Microline are registered trademarks of Oki Electric Industry Company, Ltd.

Energy Star is a trademark of the United States Environmental Protection Agency.

Hewlett-Packard, HP, and LaserJet are registered trademarks of Hewlett-Packard Company.

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corporation.

Apple, Macintosh, Mac and Mac OS are registered trademarks of Apple Computer.

Other product names and brand names are registered trademarks or trademarks of their proprietors.



As an Energy Star Program Participant, the manufacturer has determined that this product meets the Energy Star guidelines for energy efficiency.



This product complies with the requirements of the Council Directives 89/336/EEC (EMC) and 73/23/EEC (LVD) as amended where applicable on the approximation of the laws of the member states relating to electromagnetic compatibility and low voltage.

NOTE

The PostScript Emulation feature described in this guide is only available in some countries.

CONTENTS

Preface	2
Introduction	7
Printer features.....	7
Using your printer.....	8
About this manual	9
Online usage.....	9
Printing Pages.....	10
Abbreviations used.....	11
Printer components	12
Operator panels	15
B4250, B4250n	16
Operator panel	16
LED indicators	16
Control button	17
Status Monitor	19
Menu functions	22
Printing menu settings	22
B4350, B4350n, B4350nPS.....	23
Operator panel	23
Panel elements	23
Menu functions	24
Changing the display language	31
Printing menu settings	32
Paper recommendations	33
Paper and envelope types	33
Transparencies and adhesive labels.....	34
Installing paper.....	35
Face up and face down printing.....	36
Automatic feed sequence.....	37
Printing envelopes	37
Heavyweight paper or cardstock.....	38
Paper feed, size and media setting.....	39
B4250, B4250n.....	39
B4350, B4350n, B4350nPS.....	40
Interfaces	43

Printer drivers.....	44
Windows operating systems	45
Installed options.....	45
Macintosh operating systems	46
Installed options.....	46
Operation	47
Printer settings in Windows	47
Printing preferences in Windows applications	47
Setting from Windows Control Panel.....	56
Printer settings in Macintosh.....	62
Consumables and maintenance	63
Consumable order details	63
Toner cartridge life	63
When to replace the toner cartridge	64
B4250, B4250n.....	64
B4350, B4350n, B4350nPS.....	64
Replacing the toner cartridge	64
Image drum life.....	66
When to replace the image drum.....	66
B4250, B4250n.....	66
B4350, B4350n, B4350nPS.....	66
Replacing the image drum.....	67
Resetting the drum counter	68
B4250, B4250n.....	68
B4350, B4350n, B4350nPS.....	68
Generating a cleaning page.....	68
B4250, B4250n.....	68
B4350, B4350n, B4350nPS.....	69
Cleaning the LED array.....	70
Troubleshooting.....	71
Status and error messages	71
B4250, B4250n.....	71
B4350, B4350n, B4350nPS.....	71
Paper Jams	72
Input jam.....	73
Feed jam or exit jam	73
Print quality problems	74
Software problems	76

Hardware problems	77
Installing options	78
Installation procedure	79
Specifications.....	80
General	80
Overall dimensions.....	81
Paper and tray information	82
Notes/symbols/terms	83
Index.....	84
Oki contact details	87

NOTES, CAUTIONS AND WARNINGS

NOTE

A note appears in this manual like this. A note provides additional information to supplement the main text which may help you to use and understand the product.

CAUTION!

A caution appears in this manual like this. A caution provides additional information which, if ignored, may result in equipment malfunction or damage.

WARNING!

A warning appears in this manual like this. A warning provides additional information which, if ignored, may result in a risk of personal injury.

INTRODUCTION

Congratulations on purchasing this 22 pages per minute monochrome page printer.

Your new printer is designed with a range of advanced features to give you crisp black and white pages at high speed on a wide range of print media.

For your information, a summary of the main features of your printer is given below.

PRINTER FEATURES

- …❖ Five different models to choose from: B4250, B4250n, B4350, B4350n (n denotes Network Interface Card included), B4350nPS (nPS denotes Network Interface Card and PostScript PS Level 3 emulation DIMM included)
- …❖ Memory: 16MB
- …❖ High speed printing: 22 pages per minute
- …❖ Resolution: 1200 x 600 dpi
- …❖ Paper handling: 250 sheets (80g/m²)
- …❖ Emulation: Printer Control Language PCL6, PCL5e, Epson FX, IBM ProPrinter
- …❖ Barcodes: embedded for SIDM emulations
- …❖ USB 2.0 and Parallel interfaces
- …❖ “Ask Oki” – a brand new, user-friendly function that gives a direct link from your printer driver screen (but not illustrated in this guide) to a dedicated web site specific to the exact model you are using. This is where you’ll find all the advice, assistance and support you could need to help you get the best possible results from your Oki printer.

Additionally, the following optional features are also available:

- …❖ 10/100 BASE-TX Network Interface Card: to make the B4250 and B4350 network compatible

- …◊ 16, 32, 64, 128, 256MB RAM DIMM: to extend the main memory of your printer and speed up the processing of large files
- …◊ RS232C Card: to provide serial interface capability for the B4250 and B4350
- …◊ Second paper tray: to increase your printer's paper handling capacity by 500 sheets (80g/m²)
- …◊ Multi-purpose tray: to extend the range of media your printer can accommodate (capacity 100 sheets (80g/m²) or 50 envelopes)
- …◊ One of the following can be added:
 - (a) 8MB Flash DIMM: to allow the storage of additional fonts or bar codes for the B4250, B4250n, B4350, B4350n
 - (b) 16MB Flash DIMM: to allow the storage of additional fonts or bar codes for the B4250, B4250n, B4350, B4350n
 - (c) PostScript PS level 3 DIMM: to add PostScript emulation to the B4350 or B4350n. Cannot be added in conjunction with extra flash memory. (See the section entitled "Installing Options" for full details.)

USING YOUR PRINTER

To help you get the most from your printer, the manufacturer has provided a variety of supporting materials of which this manual is one example. A summary of these materials and their purposes is given in the following chapter.

ABOUT THIS MANUAL

This manual is the user's guide (check the Oki Europe website, www.okieurope.com, for the most up-to-date version) for your printer and forms part of the overall user support listed below:

- …❖ **Quick set-up guide:** to describe how to unpack, connect and power up your printer.
- …❖ **This User's Guide:** to help you to operate your printer and make the best use of its many features. Also included are guidelines for troubleshooting and maintenance to ensure that it performs at its best. Additionally, information is provided for adding optional accessories as your printing needs evolve.
- …❖ **Installation Guides:** accompany consumable items and optional accessories to describe how to install them.
- …❖ **Online Help:** online information associated with the printer driver and Status Monitor software.

This manual has been written using more than one printer as a model and the illustrations/screenshots reflect this. What you see will be appropriate to the model you are using.

ONLINE USAGE

This manual is intended to be read on screen using an Adobe Acrobat Reader. Use the navigation and viewing tools provided in Acrobat.


You can access specific information in two ways:

- …❖ In the list of bookmarks down the left hand side of your screen, click on the topic of interest to jump to the required topic. (If the bookmarks are not available, use the Table of Contents.)
- …❖ In the list of bookmarks click on Index to jump to the Index. (If the bookmarks are not available, use the Table of Contents.) Find the term of interest in the alphabetically arranged index and click on the associated page number to jump to the page containing the subject.


PRINTING PAGES

The whole manual, Individual pages, or sections may be printed. The procedure is:

1. From the toolbar, select [File], then [Print] (or press the Ctrl + P keys).
2. Choose which pages you wish to print:
 - (a) [All pages], for the entire manual.
 - (b) [Current page] for the page at which you are looking.

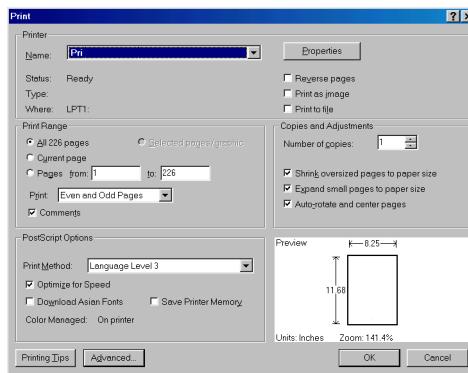

- (c) [Pages from] and [to] for the range of pages you specify by entering their page numbers.

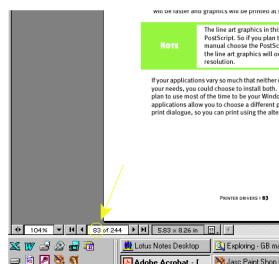

3. Click on [OK].

ABBREVIATIONS USED


The following abbreviations are used in this manual:

Abbreviation	Meaning
Ctrl	Control
dpi	dots per inch
DIMM	Dual In-line Memory Module
n	network card installed
LED	Light Emitting Diode
MFT	Manual Feed Tray
MPT	Multi-purpose Tray
NIC	Network Interface Card
PCL	Printer Control Language
PS	PostScript (emulation)
PSE	PostScript Emulation
RAM	Random Access Memory
SIDM	Serial Impact Dot Matrix


PRINTER COMPONENTS

Apart from the Operator panels, which are described in the next chapter, the B4250n, B4350, B4350n, B4350nPS printers look similar from the outside. The important components are identified in the representations below.


1. Operator panel (B4350 shown)
2. Top paper exit bin (150 sheets, face down)
3. Top cover release button
4. Top paper exit bin extension
5. Top paper exit bin extension paper guide
6. Paper tray content indicator
7. ON/OFF switch
8. Rear paper exit tray (50 sheets, face up)
9. Rear paper exit tray paper guide

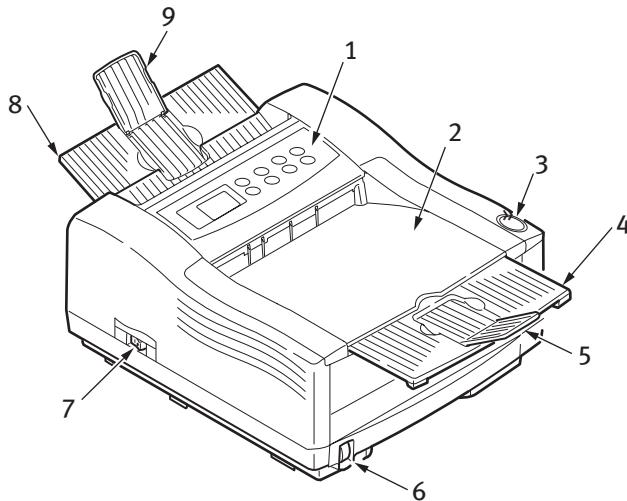

10. LED array
11. Image drum
12. Manual feed tray (single sheet) (shown in closed position)
13. Paper feed tray (250 sheets)
14. Toner cartridge
15. Fuser unit
16. Top cover

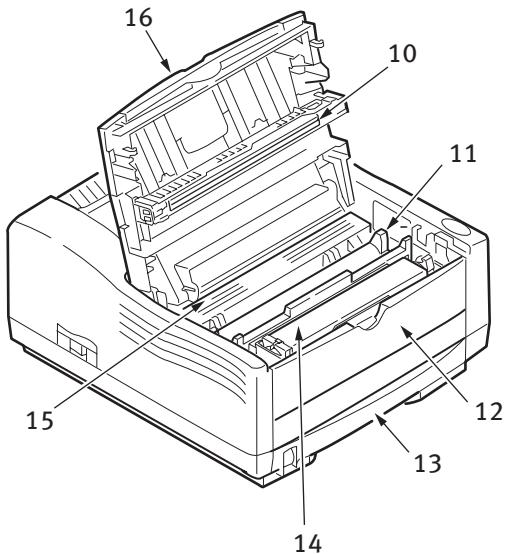

17. Power cable connection
18. Cooling fan
19. USB interface connection
20. Parallel interface connection
21. Second paper tray (optional) connection
22. Network card (standard on B4250n, B4350n, B4350nPS and optional on B4250, B4350)
23. RS232 serial interface card (optional on B4250, B4350)
24. Multipurpose tray (optional) connection

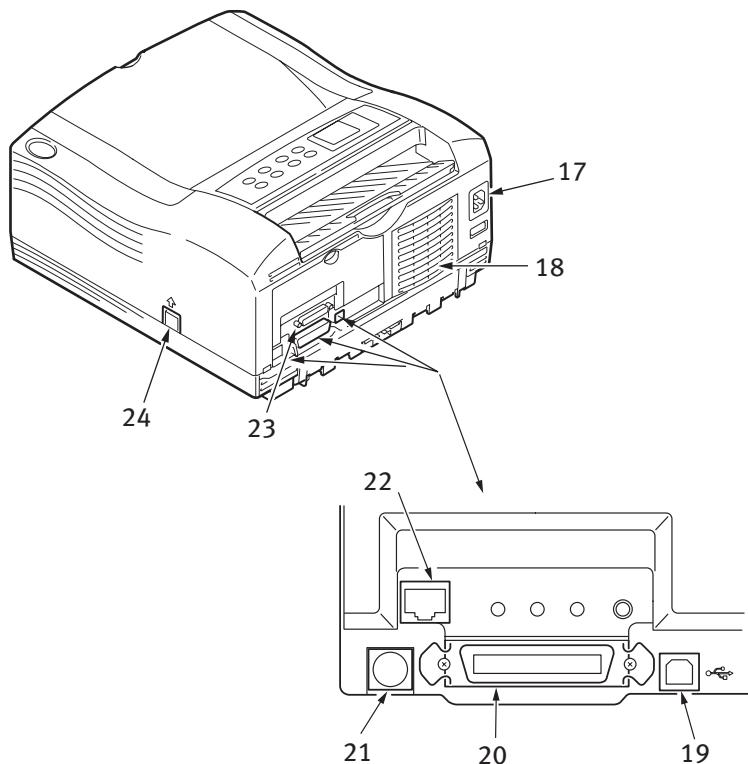

OPERATOR PANELS

This chapter describes the function of the operator panel on your printer. It is useful to describe the Status Monitor software at this point as it provides the B4250, B4250n status information and the equivalent of the menu control panel on the B4350, B4350n, B4350nPS. (See “Printer Drivers” for installation of the Status Monitor.)

B4250, B4250N

OPERATOR PANEL

The B4250, B4250n operator panel consists of 4 indicating LEDs and a control button. From left to right, the LEDs indicate Power On, Ready, Manual feed and Error.



LED INDICATORS

The LED indicators show the status of the printer and have five operating conditions as follows:

- … Indicator off
- … Indicator on
- … Flash 1 - slow blink - 1 long flash every 4 seconds
- … Flash 2 - blink - 1 flash per second
- … Flash 3 - rapid blink - 4 flashes per second.

All four LED indicators come on momentarily when power is switched on using the main power switch.

Power on LED (green)

This indicator comes on and stays on when the printer is switched on using the main power switch.

Ready LED (green)

…❖ Indicator **on** - the printer is **on-line** and ready to receive data.

…❖ Indicator **off** - the printer is **off-line** and cannot receive data.

The meaning of the indicator LEDs when they flash (x) is summarised as follows:

Flash type	Ready LED (Green)	Manual feed LED (Amber)	Error LED (Amber)	Meaning
Flash 1 – slow blink	x			The printer is data processing when printing has been suspended.
		x		The image drum requires changing or toner is low.
Flash 2 – blink	x			The printer is receiving and processing data during printing or the printer is resetting itself.
		x		The printer is requesting that manual feed is used for paper feed.
			x	There is a printing error, problem with paper or a cover open.
Flash 3 – rapid blink	x	x	x	There is a minor error with the printer.
	x	x	x	There is a major error with the printer.

CONTROL BUTTON

The primary functions of the control button are activated by pressing the switch momentarily and releasing. The primary functions are as follows:

…❖ Turning the printer off-line.

…❖ Turning the printer on-line (ready).

…❖ Resuming printing after a paper error, paper jam, print overrun, page overflow, or receiving buffer overflow.

…❖ Interrupting data processing when the printer is receiving and processing data.

- … Resuming data processing.

The secondary functions of the control button are activated after turning the printer off line, then pressing and holding the switch for at least two seconds before releasing. The secondary functions are as follows:

- … Printing the demo and menu pages.

NOTE

Demo and menu pages can also be printed using the printer Status Monitor.

- … Printing any data held in the buffer after printing has been cancelled.

The other functions of the control button are activated after turning the printer off line then pressing and holding the switch for at least five seconds before releasing. The other functions are as follows:

- … Printing a cleaning page.

NOTE

A cleaning page can also be printed using the printer Status Monitor.

- … Resetting the printer and clearing the buffer after printing has been cancelled.

NOTE

To reset the printer to the default settings of the manufacturer, the control button is pressed and held down while the printer is switched on with the main power switch. The LED indicators blink when the printer has reset to the default settings.

STATUS MONITOR

After installing the printer driver software onto your computer, the Status Monitor is then installed to indicate what is happening to the printer when it is being used. (See the chapter entitled “Printer Drivers”.) This Status Monitor is also used to control and change the various printer settings.


Using the Printer Status Monitor

Viewing the status of the printer, and viewing or changing the printer settings are carried out as follows:

1. Click on [Start], [Programs] and select the **Status Monitor**. The current printer status is shown.




2. Click on the window **maximise** button and the view will expand to include the **Printer Setup** and **Preferences** tabs.

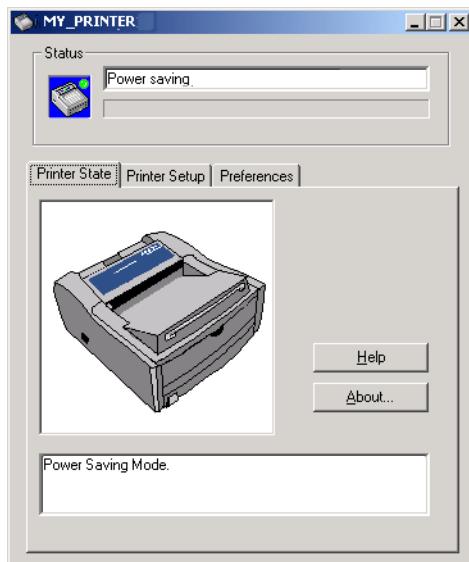

Printer Setup Tab

Selecting this tab provides access to the Printer Menu button, which, when selected, enables configuration of the printer settings via a series of tabs described in outline below. At all stages, detailed online help is provided via the **Help** button.

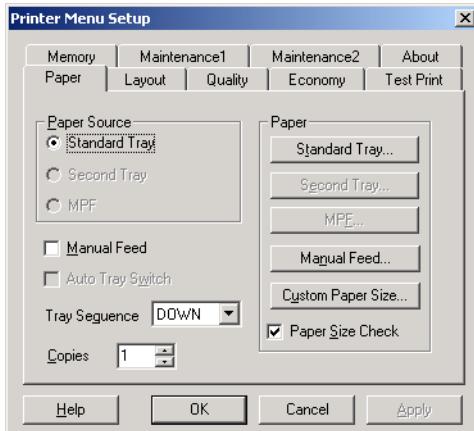


1. **Paper:** set paper size for standard tray, secondary tray, MPF and manual feed, tray sequence and default number of copies.
2. **Layout:** set paper cassette size, printer emulation, lines per page and paper orientation.
3. **Quality:** set resolution (dpi), smoothing and darkness.
4. **Economy:** set power save delay, toner save, auto eject time, manual timeout, low toner action and jam recovery.
5. **Test Print:** print demo page, printer menu setting list, a list of available fonts and clean the printer.
6. **Memory:** set raster buffer (normally set to **auto**) and confirm buffer size.
7. **Maintenance 1:** configure printer serial and parallel interfaces, clearable warning timing and reset drum counter and menu.

8. **Maintenance 2:** adjust print and page positions, settings, language, power save setting enable/disable, and select to print an error report, set tray ID.
9. **About:** about this printer.

Preferences Tab

Selecting this tab provides the means to choose the information displayed by the Status Monitor and how/when the Status Monitor appears.

The default Alert view setting ensures that the Status Monitor pops up to inform you of a condition that requires your attention e.g. toner low.

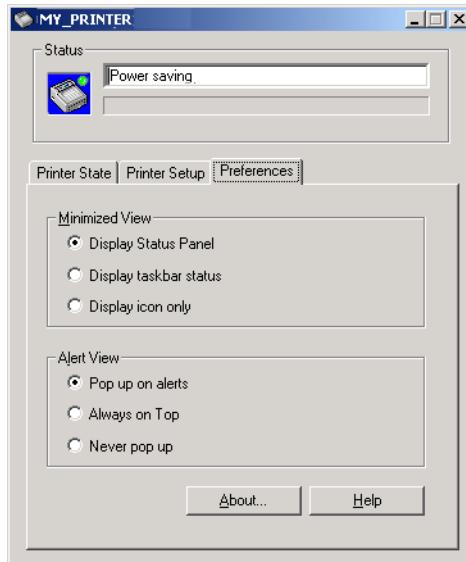

MENU FUNCTIONS

The printer menu settings made from the Status Monitor can be seen collectively on a printed Menu Map. (For details of how to print such a map, see the next section.)

It should be noted that many of these settings can be, and often are, overridden by settings made in the printer drivers. However, several of the driver settings can be left at “Printer Setting”, which will then default to the settings entered in these printer menus.

The menu functions and their default values are summarised in the table in the section entitled “Menu Functions” in the following information about the B4350, B4350n, B4350nPS printers. Changing the display language

Carry out the following instructions to change the language that is displayed in the Status Monitor.

1. Start the Status Monitor.
2. Select the Printer Setup tab.
3. On the Maintenance 2 tab, select the required language in the [Language] dropdown menu.
4. Click on [OK].

PRINTING MENU SETTINGS

The menu settings can be printed as a menu map as follows.

Using the control button

1. Press the control button to take the printer off-line.
2. Press and hold down the control button for at least two seconds, but less than five seconds.
3. The printer prints a list of the menu settings and a demo print page.


NOTE

Demo and menu pages can also be printed using the printer Status Monitor.

B4350, B4350N, B4350NPS

OPERATOR PANEL

The B4350, B4350n, B4350nPS operator panel consists of a menu driven control panel, an LCD display and a LED indicator.

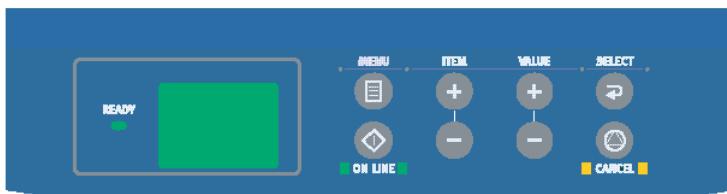

PANEL ELEMENTS

1. **Ready indicator (green).** ON - ready to receive data. FLASHING indicates processing data or error.
2. **Liquid crystal display.** (LCD) panel. Two rows of up to 8 alphanumeric digits displaying print status, menu items in menu mode and error messages.
3. **Menu button.** Press briefly to enter the MENU mode. Press briefly again to select the next menu. Press for more than 2 seconds to scroll through the different menus.
4. **Item (+) button.** Press briefly to scroll forward to the next menu item.
5. **Value (+) button.** Press briefly to scroll forward to the next value setting for each menu item.
6. **Select button.** Press briefly to select the menu, item or value indicated on the LCD panel.
7. **Cancel button.** Press to cancel a print job.
8. **Value (-) button.** Press briefly to scroll backward to the previous value setting for each menu item.

9. **Item (-) button.** Press briefly to scroll backward to the previous menu item.
10. **Online button.** Press to switch between online and offline status.

NOTE

When pressed in Menu mode, the **Online** button returns the printer to ONLINE status. When pressed with DATA PRESENT displayed, it forces the printer to print out the remaining data in the printer. Also when there is an error indicating wrong paper size, pressing the **Online** button forces the printer to print.

MENU FUNCTIONS

This section summarises the menus accessed via the menu control panel and displayed in the LCD panel. The printer menu settings can be seen collectively on a printed Menu Map. (For details of how to print such a map, see the next section.)

It should be noted that many of these settings can be, and often are, overridden by settings made in the printer drivers. However, several of the driver settings can be left at “Printer Setting”, which will then default to the settings entered in these printer menus.

Factory default settings are shown in the following tables.

Information Menu

This menu provides a quick method of listing various items stored within the printer.

INFORMATION MENU

Item	Action
PRINT MENU MAP	Execute
PRINT FILE LIST	Execute
PRINT PCL FONT	Execute
PRINT PSE FONT	Execute
PRINT IBM PPR FONT	Execute
PRINT EPSON FX FONT	Execute
DEMO1	Execute

Print menu

This menu provides adjustment of various print job related functions.

PRINT MENU		
Item	Default	Remarks
COPIES	1	
MANUAL FEED	OFF	
PAPER FEED	TRAY1	
AUTO TRAY SWITCH	OFF	No optional tray installed
	ON	When Tray2 or MPF is installed
TRAY SEQUENCE	DOWN	
PAPER SIZE CHECK	ENABLE	
RESOLUTION	600	
TONER SAVE MODE	DISABLE	
ORIENTATION	PORTRT	
LINES-PER PAGE	64LNS	
EDIT SIZE	CASSETT	

Media Menu

This menu provides adjustment to suit a wide range of print media.

MEDIA MENU		
Item	Default	Remarks
TRAY1 PAPER SIZE	A4 SIZE	
TRAY1 MEDIATYPE	PLAIN	
TRAY1 MEDIAWEIGHT	MEDIUM	
TRAY2 PAPER SIZE	A4 SIZE	When tray 2 is installed
TRAY2 MEDIATYPE	PLAIN	When tray 2 is installed
TRAY2 MEDIAWEIGHT	MEDIUM	When tray 2 is installed
MPF PAPER SIZE	DL ENV	When MPF is installed
MPF MEDIATYPE	PLAIN	When MPF is installed
MPF MEDIAWEIGHT	MEDIUM	When MPF is installed
MANUAL PAPER SIZE	A4 SIZE	
MANUAL MEDIATYPE	PLAIN	
MANUAL MEDIAWEIGHT	MEDIUM	
UNIT OF MEASURE	mm	
X DIMENSION	210 mm	
Y DIMENSION	297 mm	

System configuration menu

This menu adjusts general printer settings to suit the way you prefer to work.

SYSTEM CONFIGURATION MENU		
Item	Default	Remarks
POWER SAVE DELAY TIME	15 MIN	
EMULATION	AUTO	
PARA PROT	ASCII	When PSE is installed
USB PROT	RAW	When PSE is installed
NW PROT	RAW	When both NIC and PSE are installed
RS PROT	ASCII	When both RS232 and PSE are installed
CLEARABLE WARNING	ON	
AUTO CONTINUE	OFF	
MANUAL TIMEOUT	60 SEC	
WAIT TIMEOUT	40 SEC	
LOW TONER	CONT	
JAM RECOVERY	ON	
ERROR REPORT	OFF	
LANGUAGE	ENGLISH	

PCL emulation

This menu controls the printer's PCL emulation.

PCL MENU		
Item	Default	Remarks
FONT SOURCE	RESIDENT	
FONT No.	1000	
FONT PITCH	10.00	
FONT HGT	12.00	Not displayed in default setup
SYMBOL SET	PC-8	
A4 PRINT WIDTH	78 COL	
WHITE PAGE SKIP	OFF	
CR FUNCTION	CR	
LF FUNCTION	LF	
PRINT MARGIN	NORMAL	

PCL MENU

Item	Default	Remarks
PEN WIDTH ADJUST	ON	

PPR Emulation

This menu controls the printer's PPR emulation.

PPR MENU

Item	Default	Remarks
CHARACTER PITCH	10 CPI	
FONT CONDENSE	12 to 20	
CHARACTER SET	SET-2	
SYMBOL SET	IBM-437	
LETTER O STYLE	DISABLE	
ZERO CHARACTER	NORMAL	
LINE PITCH	6 LPI	
WHITE PAGE SKIP	OFF	
CR FUNCTION	CR	
LF FUNCTION	LF	
LINE LENGTH	80 COL	
FORM LENGTH	A4	
TOF POSITION	0.0 INCH	
LEFT MARGIN	0.0 INCH	
FIT TO LETTER	DISABLE	
TEXT HEIGHT	SAME	

FX Emulation

This menu controls the printer's FX emulation.

PPR MENU

Item	Default	Remarks
CHARACTER PITCH	10 CPI	
CHARACTER SET	SET-2	
SYMBOL SET	IBM-437	
LETTER O STYLE	DISABLE	
ZERO CHARACTER	NORMAL	
LINE PITCH	6 LPI	

PPR MENU		
Item	Default	Remarks
WHITE PAGE SKIP	OFF	
CR FUNCTION	CR	
LINE LENGTH	80 COL	
FORM LENGTH	A4	
TOF POSITION	0.0 INCH	
LEFT MARGIN	0.0 INCH	
FIT TO LETTER	DISABLE	
TEXT HEIGHT	SAME	

Parallel menu

This menu controls the operation of the printer's parallel data interface.

PARALLEL MENU		
Item	Default	Remarks
PARALLEL	ENABLE	
BI-DIRECTION	ENABLE	
ECP	ENABLE	
ACK WIDTH	NARROW	
ACK/BUSY TIMING	IN	
I-PRIME	DISABLE	
OFF REC	DISABLE	Only when PSE is installed

RS232C menu

This menu controls the operation of the printer's RS232C data interface.

RS232C MENU		
Item	Default	Remarks
RS232C	ENABLE	Only when RS232C is installed
FLOW CTL	DTR HI	Only when RS232C is installed
BAUDRATE	9600	Only when RS232C is installed
DATABITS	8 BITS	Only when RS232C is installed
PARITY	NONE	Only when RS232C is installed
MIN. BUSY	200mSEC	Only when RS232C is installed

RS232C MENU

Item	Default	Remarks
OFF REC	DISABLE	Only when both RS232C and PSE are installed

USB menu

This menu controls the operation of the printer's USB data interface.

USB MENU

Item	Default	Remarks
USB	ENABLE	
SOFT RESET	DISABLE	
SPEED	480Mbps	
OFF REC	DISABLE	Only when PSE is installed
SERIAL NUMBER	ENABLE	

Network menu

This menu controls the operation of the printer's 10Base-T/100Base-TX network interface.

NETWORK MENU

Item	Default	Remarks
TCP/IP	ENABLE	Only when NIC is installed
NETBEUI	ENABLE	Only when NIC is installed
NETWARE	ENABLE	Only when NIC is installed
ETHERTALK	ENABLE	Only when NIC is installed
FRAME TYPE	AUTO	Only when NIC is installed
IP ADDRESS SET	AUTO	Only when NIC is installed
IP ADDRESS		Only when NIC is installed
SUBNET MASK		Only when NIC is installed
GATEWAY ADDRESS		Only when NIC is installed
INITIALIZE NIC?		Only when NIC is installed
WEB/IPP	ENABLE	Only when NIC is installed
TELNET	ENABLE	Only when NIC is installed
FTP	ENABLE	Only when NIC is installed
SNMP	ENABLE	Only when NIC is installed
LAN	NORMAL	Only when NIC is installed

NETWORK MENU

Item	Default	Remarks
HUB LINK SETTING	AUTO NEGOTIATE	Only when NIC is installed

Memory menu

This menu determines how printer memory is used.

MEMORY MENU

Item	Default	Remarks
RECEIVE BUFF SIZE	AUTO	
RSRC SAV	OFF	

System adjustment menu

This menu provides fine adjustment of image position on the printed page in steps of 0.25mm.

SYSTEM ADJUSTMENT MENU

Item	Default	Remarks
X ADJUST	0.00 mm	
Y ADJUST	0.00 mm	
PCL MANUAL ID#	2	
PCL TRAY1 ID#	1	
PCL TRAY2 ID#	5	Only when Tray 2 is installed
PCL MP ID#	6	Only when MPF is installed
PLACE PAGE	CENTER	

Maintenance menu

This menu provides access to various printer maintenance functions.

MAINTENANCE MENU

Item	Default	Remarks
EEPROM RESET		
DRUM COUNT RESET		
POWER SAVE	ENABLE	
SETTINGS	0	
DARKNESS	0	

MAINTENANCE MENU

Item	Default	Remarks
CLEANING PAGE		

Usage menu

This menu is for information only, and provides an indication of total usage of the printer and the expected life left in its consumable items. This is particularly useful if you do not have a full set of replacement consumables to hand and you need to know how soon you will need them.

USAGE MENU

Item	Default	Remarks
DRUM LIFE	REMAINING %	
TONER	6K= % 2.5K= %	

CHANGING THE DISPLAY LANGUAGE

Carry out the following instructions to change the language that is displayed on the printer's LCD panel.

1. Press the **Online** button to return the printer to offline status.
2. Press the **Menu** button repeatedly until SYSTEM CONFIG MENU is displayed.
3. Press the **Select** button.
4. Press the **Item** button repeatedly until LANGUAGE is displayed.
5. Press the **Value** button repeatedly until the required language is displayed.
6. Press the **Select** button. A plus (+) appears next to the selected language.
7. Press the **Online** button when you have finished setting the display language.

PRINTING MENU SETTINGS

Current menu settings can be confirmed by printing a Menu Map.

1. Press the **Online** button to return the printer to offline status.
2. Press the **Menu** button until the INFORMATION MENU is available.
3. Press the **Item** button until the display prompts you to print the menu map.
4. Press the **Select** button to print the menu map.
5. Press the **Online** button to return the printer to online status when the menu map is printed.

PAPER RECOMMENDATIONS

For guidance on the media you can use with your printer, which input tray and which ejection method to use, see the section entitled “Paper and tray information” in the “Specifications” chapter.

PAPER AND ENVELOPE TYPES

The manufacturer of this printer recommends the following guidelines when selecting paper and envelopes for use in your printer:

- … Paper and envelopes should be stored flat and away from moisture, direct sunlight and heat sources.
- … Use a smooth finished paper such as copier or laser type paper with a Sheffield (smoothness) rating of 250 or less. If in doubt, please ask your paper supplier.
- … Use envelopes designed for use in laser type printers.
- … The use of heavily laid or textured paper will seriously impact on the life of the image drum.
- … Do not use very smooth, shiny/glossy paper.
- … Do not use heavily embossed headed paper.
- … Avoid printing on both sides and putting paper through the printer twice.
- … Avoid using paper with perforations, cut-outs and ragged edges.
- … Do not use envelopes with windows or metal clasps.
- … Do not use envelopes with self sealing flaps.
- … Avoid using damaged or curled envelopes.

TRANSPARENCIES AND ADHESIVE LABELS

The manufacturer of this printer recommends the following guidelines when selecting transparencies and adhesive labels for use in your printer:


- …❖ Always use manual feed.
- …❖ Always use rear output.
- …❖ Media must be designed for use in laser printers or photocopiers and must be able to withstand 200°C for 0.1 sec.
- …❖ Do not use media designed for use in colour laser printers and photocopiers
- …❖ Labels should cover entire carrier sheet.
- …❖ Carrier sheet or adhesive **must not** be exposed to any part of the printer.

INSTALLING PAPER

NOTE

If you are topping up the paper in a paper tray, it is recommended that you remove the remaining paper from the tray first then add the new paper stock followed by the paper you removed. This ensures that the oldest paper is used first to help prevent paper jams.

1. Remove the paper tray from the bottom of the printer and place plain paper in the tray, keeping the level of the paper in the tray below the guide arrowheads shown on the paper guides (1).

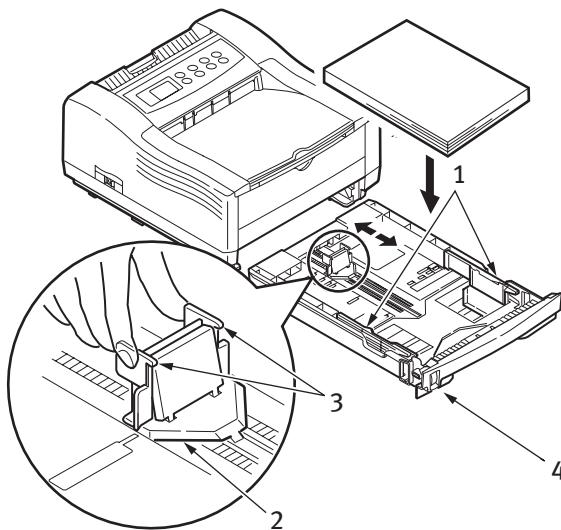

NOTE

Load letter headed paper face down and top edge towards the front of the paper tray.

2. Adjust the rear paper support (2) to the size of paper you are using by gripping the lugs (3), tilting and sliding the support forwards or backwards as necessary.
3. Adjust the paper guides (1). It is important to adjust the paper guides correctly to ensure that the paper is not skewed in the print process. Paper jams may occur if this operation is not carried out correctly.
4. Replace the tray in the printer. The paper level indicator (4) provides a visual indication of how much paper is left in the tray.

NOTE

If you have the optional second paper tray (Tray 2) and you are printing from the first (upper) tray (Tray 1), you can pull out the second (lower) tray to reload it. However, if printing from the second (lower) tray, do not pull out the first (upper) tray as this will result in a paper jam.

FACE UP AND FACE DOWN PRINTING

For face down printing, make sure the rear paper exit tray is closed (the paper exits from the top of the printer). The paper exit bin on the top of the printer stacks printed pages face down, capacity 150 sheets of weight 80 g/m². Pages printed in reading order (page 1 first) will be sorted in reading order (last page on top, facing down).

For face up printing, make sure the face up rear paper exit tray is open and the paper guide is extended if required. In this condition, paper will exit via this path, regardless of driver settings. Paper is stacked in reverse order, capacity 50 sheets of weight 80 g/m².


Always use this tray and the manual feed tray for heavyweight stocks to reduce the possibility of paper jams.

AUTOMATIC FEED SEQUENCE

With no optional feed trays installed, the Autotray function in the Print Menu is set by default to OFF and the Traysequence function is set to DOWN. Ensure that the Autotray function is set to ON (default) when you have either or both optional feed trays installed. In this way, if a tray runs out of paper, automatic feed will take place in the order Tray 1, Tray 2 (if fitted), Multipurpose feed tray (if fitted), provided that these trays are set up for identical media.

PRINTING ENVELOPES

1. Pull out the rear paper exit tray (1) until it locks and lift out the paper guide (2).

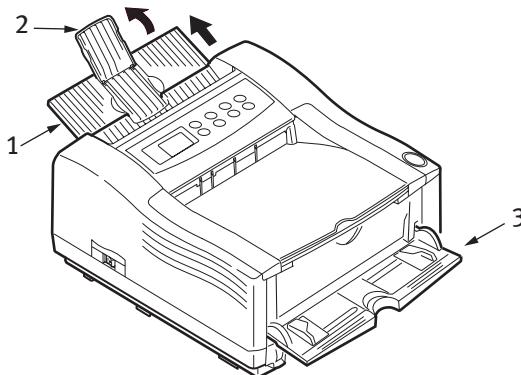

2. Pull down the manual feed tray (3) and adjust the paper guides to the width of the envelope.
3. Insert the envelope, flap down and to the left, until the printer grips it.
4. Set envelope size and landscape orientation in your software, then issue the print command.

HEAVYWEIGHT PAPER OR CARDSTOCK

The normal paper path from a main paper tray to the top output stack involves two complete U-turns. This may sometimes cause very heavyweight paper or cardstock to jam or misfeed.

Use the manual feed (multi-purpose) tray to feed this type of paper and the rear paper exit to collect printed output. This gives a nearly straight paper path through the machine and may prove more reliable in this type of application.

PAPER FEED, SIZE AND MEDIA SETTING

The process used to fuse (fix) the printed image to the paper involves a mixture of pressure and heat. Too much heat will cause lightweight paper to crease or curl and corrugations in transparencies. Too little heat will cause the image not to fuse fully into heavyweight paper.

NOTE

Although media properties can be set in the printer driver for particular jobs, when filling a tray with media it is recommended that you manually set the printer to match the media as described here.

B4250, B4250N

The print quality for different types of paper is adjusted by changing the media type as follows:

1. Start the **Status Monitor**.
2. Click on [Printer Setup] tab - [Printer Menu] button - [Paper] tab. Click on the button for the paper tray being used. Adjust the media type to the required setting and, if necessary, the paper size to the size of the paper being used.
3. Click on the [Apply] button, [Close] button then [OK] button to set the printer to the new media type and printing quality.

Printing transparencies

When printing transparencies, the manual feed must be used and the media type changed to transparencies as follows:

CAUTION!

Damage to the printer may occur if the incorrect setting is used when printing transparencies.

1. Open the manual feed on the printer and place the transparency face up between the paper guides.
2. Adjust the paper guides to the width of the transparency.

3. Start the **Status Monitor**.
4. Click on [Printer Setup] tab - [Printer Menu] button - [Paper tab] - [Manual Feed] button. Adjust the media type to Transparency and the paper size to the size of the transparency being used.
5. Click on the [Apply] button, [Close] button then [OK] button to set the printer for transparencies.

NOTE

Remember to reset the printer for normal paper after printing transparencies.

B4350, B4350N, B4350NPS

Using the control panel on your printer, you can choose:

- …❖ which paper to use
- …❖ the size of the paper you wish to use
- …❖ the weight of the paper (thickness)
- …❖ the type of paper

NOTE

- …❖ If the settings in the printer differ from those selected on your computer, the printer will not print and the LCD will display an error message.
- …❖ The following printer settings are given as a guide only. Some software applications require the paper feed, size and media settings to be selected from within the application (page setup).
- …❖ Although media properties can be set in the printer driver for particular jobs, it is recommended that when filling a tray with media you manually set the printer to match the media as described here.

Paper feed selection

The paper feed, paper size, paper weight and media type can be set manually on the printer using the control panel as follows.

1. Press the **Online** button to return the printer to offline status.
2. Press the **Menu** button repeatedly until PRINT MENU is displayed, then press the **Select** button.
3. Press the **Item** button until the required paper feed is displayed.
4. Press the **Select** button. A plus (+) appears next to the selected paper feed.

NOTE

When the AUTO TRAY SWITCH is set to ON and more than one paper tray is fitted, paper feed automatically switches to the next available paper tray, providing non-stop printing.

Paper size

Set the paper size as follows.

NOTE

- … When using paper trays, standard paper sizes are recognised automatically with CASSETTE SIZE (default setting) selected. Paper size need only be set for custom paper sizes.
- … When using the manual feed tray, the paper size has to be selected.

1. Press the **Online** button to return the printer to offline status.
2. Press the **Menu** button until PRINT MENU is displayed, then press the **Select** button.
3. Press either **Item (+)** or **(-)** button repeatedly until EDIT SIZE is displayed.
4. Press either **Value (+)** or **(-)** button until the required paper size is displayed, then press the **Select** button. A plus (+) appears next to the selected paper size.

5. Press the **Online** button to return the printer to ONLINE status.
6. Select the correct paper settings in the printer driver before printing the file.

Media type and weight

Set media type and weight as follows:

CAUTION!

If media type or media weight are not correctly set, print quality deteriorates and the fuser roller may be damaged.

1. Press the **Online** button to return the printer to offline status.
2. Press the **Menu** button until MEDIA MENU is displayed, then press the **Select** button.
3. Press the **Item (+)** or **(-)** button until MEDIA TYPE or MEDIA WEIGHT for the required tray is displayed.
4. Press the **Value (+)** or **(-)** button until the required paper type or weight is displayed, then press the **Select** button. A plus (+) appears next to the selected paper type or weight.
5. Press the **Online** button to return the printer back to online status.

Select the correct paper settings in the printer driver before printing the file.

INTERFACES

Your printer is equipped with a selection of data interfaces:

1. **Parallel** – For direct connection to a PC. This port requires a bi-directional (IEEE 1384 compliant) parallel cable.
2. **USB** – For connection to a PC running Windows 98 or above (not Windows 95 upgraded to Windows 98) or Macintosh. This port requires a cable conforming to USB version 2.0 or above.

The operation of a printer is not assured if a USB compatible device is connected concurrently with other USB-compatible machines.

When connecting multiple printers of the same type, they appear as ***** (1), ***** (2), ***** (3), etc. These numbers depend on the order of connecting or turning on each printer.

3. **Serial** – for direct connection to a device that uses serial printing (available as an option).
4. **Ethernet** – For network cable connection. This port is standard on the B4250n, B4350n and B4350nPS and optional on the B4250, B4350.

NOTE

- …❖ It is not recommended that you connect serial/USB and parallel cables to the printer simultaneously.
- …❖ Interface cables are not supplied with your printer.

If you are connecting your printer directly to a stand alone computer proceed to the chapter entitled “Printer Drivers”.

If your printer is to be installed as a network printer, please refer to the relevant section in the User’s Guide for the network interface card for further details on how to configure the network connection before installing the printer drivers.

NOTE

Administrator’s authority is required when installing a network connection.

PRINTER DRIVERS

This chapter describes how to install a printer driver on two types of operating system – Windows and Macintosh.

The printer drivers are all contained on the printer driver CD-ROM (CD1). Please refer to the readme file on this CD for the latest information on printer driver installation.

WINDOWS OPERATING SYSTEMS

1. With Windows running, insert the printer driver CD-ROM (CD1) into your CD-ROM drive.
2. If the CD does not run automatically, use [Start]-[Run...] and enter E:\setup (where E is your CD-ROM drive) in the Open field.
3. Click on [OK].
4. Click on [Driver Installation] then [Install Printer Driver] and follow the on-screen prompts to complete your printer driver installation.
5. For the B4250, B4250n only, after installing the driver(s) click on Software Utilities, select and install the Status Monitor.

NOTE

Take time to note the facilities available on the CD. For example, the Help facility briefly describes each of the Software Utilities.

INSTALLED OPTIONS

Certain options may have been installed in your printer. For those that are installed, check that they appear enabled on the Menu Map (See “Confirming current settings” in “Operator panels”).

Ensure that your options are set up in the printer driver(s) by making the appropriate settings on the Device Options tab (PCL emulation) and/or Device Settings tab (PS emulation) described in the chapter entitled “Operation”.

MACINTOSH OPERATING SYSTEMS

Please refer to the readme file on CD1 for details on installing the appropriate Macintosh drivers.

INSTALLED OPTIONS

Ensure that any installed options are enabled in the printer driver.

OPERATION

This chapter provides a broad outline of how to operate your printer from either a Windows or a Macintosh environment. In the former, while PCL emulation is available on all printer models, PS emulation is standard only on the B4350nPS model and is optional on the B4350 and B4350n models.

PRINTER SETTINGS IN WINDOWS

NOTE

The illustrations in this guide relate to Windows 2000 PCL and PS emulations – other operating system windows may appear slightly different but the principles are the same.

The operator panel controlled menus and Status Monitor controlled menus (described in the chapter entitled “Operator panels”) provide access to many options.

The Windows printer driver also contains settings for many of these items. Where items in the printer driver are the same as those in the operator panel and Status Monitor menus, and you print documents from Windows, the settings in the Windows printer driver will override those settings in the operator panel and Status Monitor menus.

PRINTING PREFERENCES IN WINDOWS APPLICATIONS


When you choose to print your document from a Windows application program a Print dialogue box appears. This dialogue usually specifies the name of the printer on which you will print your document. Next to the printer name is a **Properties** button.

When you click **Properties** a new window opens which contains a short list of the printer settings available in the driver, which you can choose for this document. The settings available from within your application are only those which you may want to change for specific applications or documents. Settings you change here will usually only last for as long as the particular application program is running.

PCL emulation

The tabs available are the **Setup Tab**, the **Job Options Tab** and the **Image Tab**.


Setup tab.

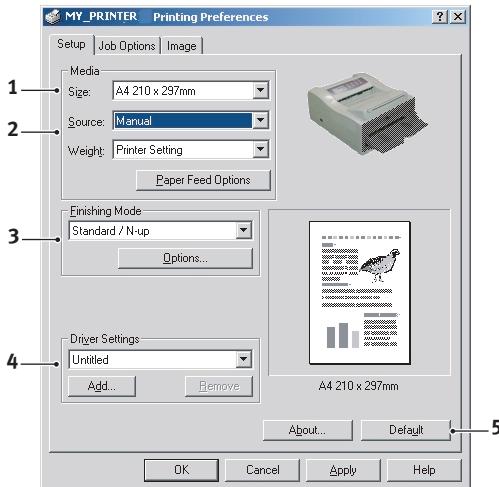

1. Paper size should be the same as the page size of your document (unless you wish to scale the printout to fit another size), and should also be the same as the size of paper you will feed into the printer.
2. You can choose the source of the paper to feed, which may be Tray 1 (the standard paper tray), Manual Feed, Tray 2 (if you have the optional second paper tray installed) or the optional multipurpose feeder. You can also click on the appropriate part of the screen graphic to select your preferred tray.
If you select manual, the Weight selection box becomes visible. You can leave the setting at Printer Setting or select as required.
3. A variety of document finishing options can be selected, such as normal one page per sheet, or N-up (where N can be 2 or 4) for printing scaled down pages at more than one page per sheet.

4. If you have changed some printing preferences before and saved them as a set, you can recall them to avoid having to set them individually each time you need them.
5. A single on-screen button restores the default settings.


Job Options tab

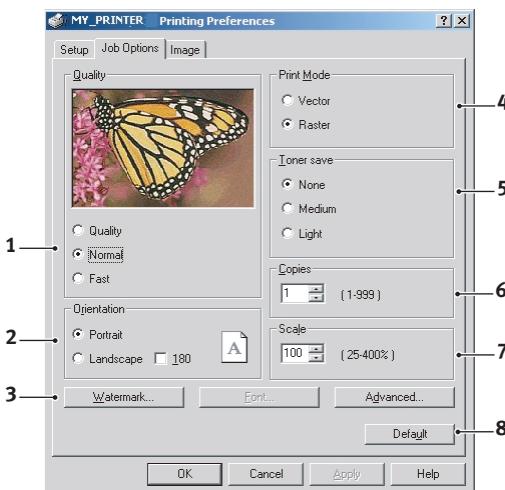

1. The output resolution of the printed page can be set as follows.
 - ...❖ The highest quality setting prints at 1200 x 600dpi. This option requires the most printer memory and takes the longest to print.
 - ...❖ The normal setting prints at 600 x 600dpi and is adequate for all but the most discerning applications.
 - ...❖ The fast setting prints at 300 x 300dpi and is suitable for draft documents, where print quality is less critical.
2. Page orientation can be set to either portrait (tall) or landscape (wide) or landscape rotated by 180 degrees.
3. You can print watermark text behind the main page image. This is useful for marking documents as draft, confidential, etc.

4. In Raster (bitmap) mode, processing of the page image is done in the computer leaving little processing for the printer to do, although the file size may be large. In Vector mode, file sizes may be smaller and so transmission over a network, for example, may be faster. These effects are more pronounced for graphics printing than for text printing.
5. You can set a degree of toner saving for particular print jobs.
6. You can select up to 999 copies to print consecutively, although you will need to top up the paper tray during such a long print run.
7. Your printed pages can be scaled to fit larger or smaller stationery.
8. A single on-screen button restores the default settings.

Image tab

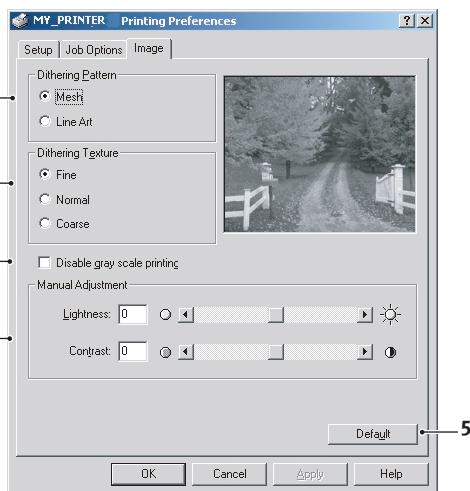


1. Dithering produces an intermediate greyscale by adjusting the combination of dots used in printing. Selecting a setting determines the degree of detail with which a graphics image will be printed. Mesh determines that a screen of dots is used for dithering while Line Art determines that an array of lines is used for dithering.
2. Select dithering texture by setting the size of dots used in the halftone screen.
3. Set this control to print greyscale effects in black without dithering.
4. You can manually adjust lightness (the higher the setting the lighter the print) and contrast (the higher the setting the greater the contrast).

PS emulation


The tabs available are the **Layout Tab**, the **Paper/Quality Tab** and the **Job Options Tab**.

Layout tab

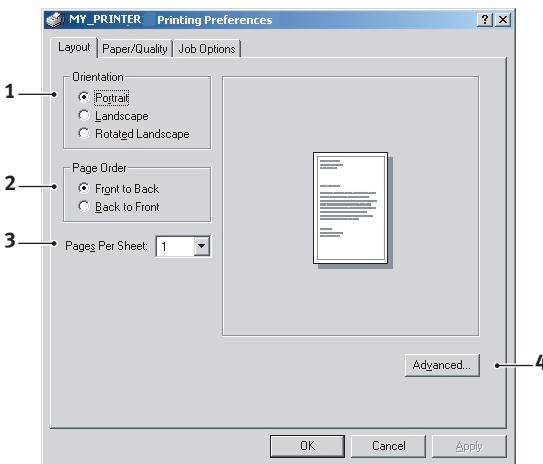


1. Page orientation can be set to portrait (tall), landscape (wide) or landscape rotated by 180 degrees.
2. Printed page order can be set as front to back or back to front of the document.
3. Set the number of pages to be printed on a single sheet.

4. Click the Advanced button to be able to set further document options as follows:

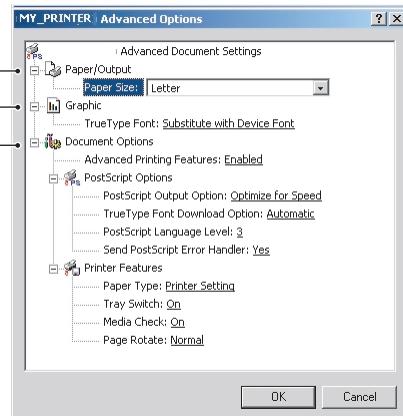


1. Select the required printed paper size.
2. You can substitute another font for TrueType Font.
3. You can set other document options as required, including PostScript options and printer features.

Paper/Quality tab

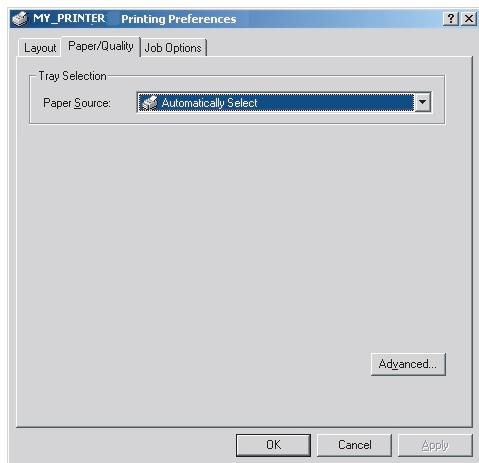

You can set the paper source or leave it as automatic selection and by using the Advanced button you have access to the same set of options as described above for the Layout Tab.

Job Options tab

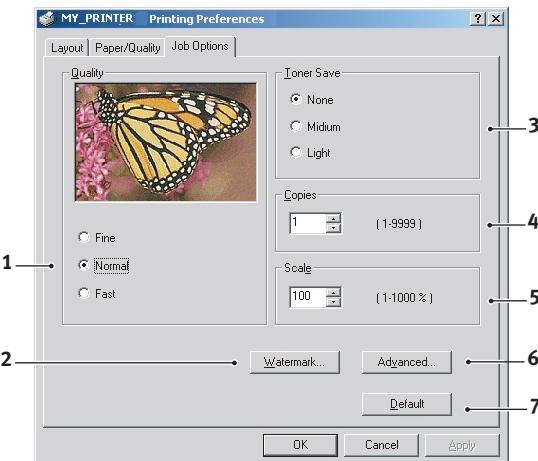

1. The output resolution of the printed page can be set as follows.
 - …❖ The highest Fine setting prints at 1200 x 600dpi. This option requires the most printer memory and takes the longest to print.
 - …❖ The Normal setting prints at 600 x 600dpi and is adequate for all but the most discerning applications.
 - …❖ The Fast setting prints at 300 x 300dpi and is suitable for draft documents, where print quality is less critical.
2. You can print watermark text behind the main page image. This is useful for marking documents as draft, confidential, etc.
3. You can set a degree of toner saving for particular print jobs.
4. You can select up to 999 copies to print consecutively, although you will need to top up the paper tray during such a long print run.
5. Your printed pages can be scaled to fit larger or smaller stationery.

6. Using the Advanced button gives you access to the facility to set mirror image printing or negative image printing.
7. A single on-screen button restores the default settings.


SETTING FROM WINDOWS CONTROL PANEL

When you open the driver properties window directly from Windows, rather than from within an application program, a somewhat more extensive range of settings is provided. Changes made here will generally affect all documents you print from Windows applications, and will be remembered from one Windows session to the next.

PCL emulation

The main tabs are the **General Tab**, **Advanced Tab** and **Device Options Tab**.

General tab

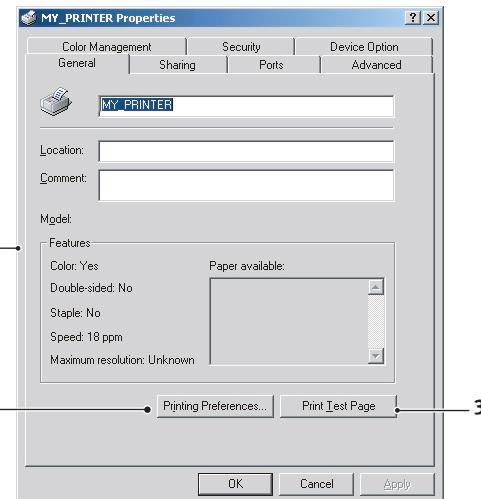


1. This area lists some of the main features of your printer, including optional items.

2. This button opens the same windows as described earlier for items which can be set from within application programs. Changes you make here, however, will become the new default settings for all Windows applications.
3. This button prints a test page to ensure that your printer is working.

NOTE

The above features are provided by the Windows 2000 operating system and will vary with other operating systems.

Advanced tab

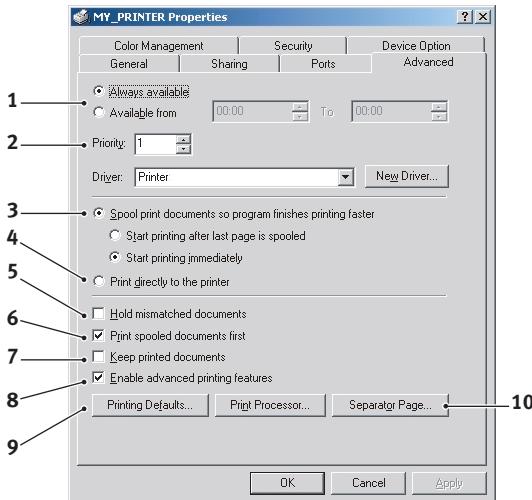

1. You can specify which times of day your printer will be available.
2. Indicates current priority, from 1 (lowest) to 99 (highest). Highest priority documents will print first.

3. Specifies that documents should be spooled (stored in a special print file) before being printed. The document is then printed in the background, allowing your application program to become available more quickly. Options follow:

This specifies that printing should not start until the last page has been spooled. If your application program needs a lot of time for further computation in the middle of printing, causing the print job to pause for more than a short period, the printer could prematurely assume that the document has finished. Selecting this option would prevent that situation, but printing will be completed a little later, as the start is delayed.

This is the opposite choice to the one above. Printing starts as soon as possible after the document begins spooling.

4. This specifies that the document should not be spooled, but printed directly. Your application will not normally be ready for further use until the print job is complete. This requires less disk space on your computer, since there is no spool file.
5. Directs the spooler to check the document setup and match it to the printer setup before sending the document to print. If a mismatch is detected, the document is held in the print queue and does not print until the printer setup is changed and the document restarted from the print queue. Mismatched documents in the queue will not prevent correctly matched documents from printing.
6. Specifies that the spooler should favour documents which have completed spooling when deciding which document to print next, even if completed documents are lower priority than documents which are still spooling. If no documents have completed spooling, the spooler will favour larger spooling documents over shorter ones. Use this option if you want to maximise printer efficiency. When this option is disabled the spooler chooses documents based only on their priority settings.
7. Specifies that the spooler should not delete documents after they are completed. This allows documents to be re submitted to the printer from the spooler instead of printing again from


the application program. If you use this option frequently it will require large amounts of disk space on your computer.

- 8. Specifies whether advanced features, such as pages per sheet, are available, depending on your printer. For normal printing keep this option enabled. If compatibility problems occur you can disable the feature. However, these advanced options may then not be available, even though the hardware might support them.
- 9. This button provides access to the same setup windows as when printing from applications. Changes made via the Windows Control Panel become the Windows default settings.
- 10. You can design and specify a separator page that prints between documents. This is particularly useful on a shared printer to help each user find their own documents in the output stack.

NOTE

The above features are provided by the Windows 2000 operating system and will vary with other operating systems.

Device Options tab

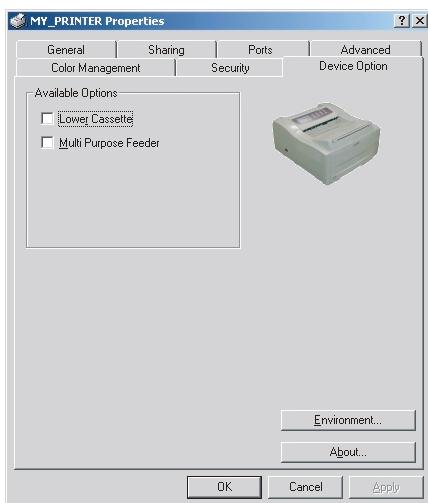


In this window you can select which optional upgrades are installed on your printer. See the chapter entitled “Installing options”.

PS emulation

The main tabs are the **General Tab**, **Advanced Tab** and **Device Settings Tab**. The General and Advanced tabs are the same as for PCL emulation described earlier.

Device Settings tab

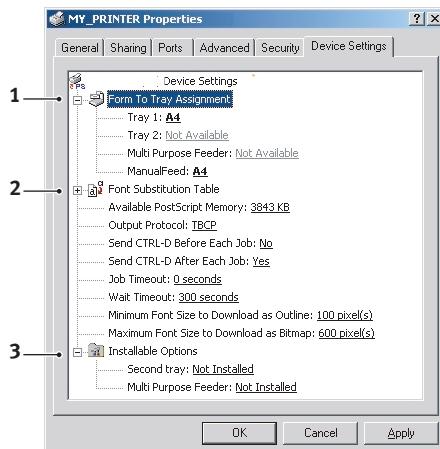

1. You can set the desired paper sizes in each of the available paper feed trays.
2. You can make a variety of font settings depending on your application.
3. You can set which optional upgrades are installed on your printer. See the chapter entitled “Installing options”.

PRINTER SETTINGS IN MACINTOSH

Refer to the readme file on the drivers CD, CD1, and the online help provided in the driver software.

CONSUMABLES AND MAINTENANCE

This section deals with the replacement of the toner cartridge and image drum and general maintenance.

CONSUMABLE ORDER DETAILS

Item	Life	Order No.
Toner	2,500 A4 @ 5%	01103402
Toner, high capacity, B4350, B4350n, B4350nPS	6,000 A4 @ 5%	01101202
Image drum	25,000 A4 pages*	42102802

* *typical for continuous printing*

Please always use genuine consumables.

TONER CARTRIDGE LIFE

How long your toner cartridge lasts depends on the print density; the percentage of the page that prints black. A typical letter has 3% to 5% print density; graphics usually have higher density. Higher print density means toner is used up faster. At 5% print density, a standard toner cartridge will print an average of 2500 pages. Remember, this is only an average: actual results may vary.

The first toner cartridge installed in a new printer has to fill the image drum reservoir and saturate the developing roller with toner. The first standard toner cartridge normally produces about 1,000 pages after installation.

WHEN TO REPLACE THE TONER CARTRIDGE

B4250, B4250N

Replace the toner cartridge after Toner Low displays in the printer Status Monitor. Also, the Error LED indicator slowly blinks when toner is low. After Toner Low displays, the printer will print about 100 more pages then display Toner Empty and stop printing. Printing will resume after a new toner cartridge has been installed.

B4350, B4350N, B4350NPS

When the toner is running low, TONER LOW is displayed in the operator panel LCD. If printing continues without replacing the toner cartridge, CHANGE TONER is displayed and printing is cancelled. Printing will resume after a new toner cartridge has been installed.

REPLACING THE TONER CARTRIDGE

It is recommended that you clean the LED array at the same time as you change the toner cartridge.

The toner used in this printer is a very fine dry powder contained in the toner cartridge.

Have a sheet of paper handy so that you have somewhere to place the used cartridge while you install the new one.

Dispose of the old cartridge responsibly, inside the pack that the new one came in. Follow any regulations, recommendations, etc., which may be in force concerning waste recycling.

If you do spill any toner powder, lightly brush it off. If this is not enough, use a cool, damp cloth to remove any residue. *Do not use hot water, and never use solvents of any kind. They will make stains permanent.*

WARNING!

If you inhale any toner or get it in your eyes, drink a little water or bathe your eyes liberally in cold water. Seek medical attention immediately.

Switch off the printer and allow the fuser to cool for about 10 minutes before opening the top cover.

1. Press the top cover release button and open the printer's top cover fully.

WARNING!

If the printer has been powered on, the fuser may be hot. This area is clearly labelled. Do not touch.

2. Pull the coloured lever on the right side of the toner cartridge towards the front of the printer to close the cartridge then remove the used toner cartridge.
3. Follow the installation instructions on or inside the box containing the new toner cartridge to install the new cartridge.
4. Gently wipe the LED array surface with the LED lens cleaner that came with the new toner cartridge or soft tissue.
5. Close the top cover and press it down to latch it closed.

IMAGE DRUM LIFE

The life of an image drum depends on a number of factors, including temperature and humidity, the type of paper used, and the number of pages per job.

The image drum should last approximately 25,000 pages continuous printing. This number is approximate because different numbers of pages are printed each time and the environmental conditions and the paper type used may vary.

WHEN TO REPLACE THE IMAGE DRUM

B4250, B4250N

When the drum reaches 90% of its life, a CHANGE DRUM message is displayed in the printer Status Monitor. Also, the Error LED indicator blinks fast when the image drum requires changing. Change the image drum when the print becomes faint or begins to deteriorate.

B4350, B4350N, B4350NPS

When the drum reaches 90% of its life, a CHANGE DRUM message is displayed in the operator panel LCD. Change the image drum when the print becomes faint or begins to deteriorate.

REPLACING THE IMAGE DRUM

It is recommended that you change the toner cartridge and clean the LED array at the same time as you change the image drum.

CAUTION!

The green image drum surface at the base of the cartridge is very delicate and light sensitive. Do not touch it and do not expose it to normal room light for more than 5 minutes. If the drum unit needs to be out of the printer for longer than this, please wrap the cartridge inside a black plastic bag to keep it away from light. Never expose the drum to direct sunlight or very bright room lighting. Always hold the image drum unit by the ends or from the top.

1. Press the cover release and open the printer's top cover fully.

WARNING!

If the printer has been powered on, the fuser may be hot. This area is clearly labelled. Do not touch.

2. Remove the used image drum and toner cartridge.
3. Follow the installation instructions on or inside the box containing the new image drum to install the new image drum.
4. Follow the installation instructions on or inside the box containing the new toner cartridge to install the new toner cartridge.
5. Gently wipe the LED array surface with the LED lens cleaner that came with the new toner cartridge or soft tissue.
6. Close the top cover and press it down to latch it closed.

RESETTING THE DRUM COUNTER

After replacing the image drum, reset the drum counter to keep a correct count of the number of pages printed on the image drum.

B4250, B4250N

1. Start the **Status Monitor** for the printer.
2. Click on Printer Setup tab - Printer Menu button - Maintenance 1 tab.
3. Click the [Reset] button next to Drum Counter, then click on the [OK] button to reset the drum counter.

B4350, B4350N, B4350NPS

1. Press the **Online** button to return the printer to offline status.
2. Press the **Menu** button repeatedly until MAINTENANCE MENU is displayed, then press the **Select** button.
3. Press the **Item** button until DRUM COUNT RESET is displayed.
4. Press the **Select** button and the Drum Counter is reset.
5. Return the printer on line by pressing the **Online** button.

GENERATING A CLEANING PAGE

If the printed page shows signs of fading, streaking or erratic marks, the problem may be cleared by generating a drum cleaning page as follows.

B4250, B4250N

Using the printer Status Monitor

1. Start the **Status Monitor** for the printer.
2. Click on [Printer Setup] tab - [Printer Menu] button - [Test Print tab] - [Cleaning] button.

3. Open the manual feed tray and insert a sheet of A4 plain paper between the paper guides, then click the [OK] button.
4. The printer grips the paper and prints a cleaning page.
5. If subsequent printing appears faded or uneven, try replacing the toner cartridge.

Using the Control button

1. Press the control button to take the printer off line.
2. Open the manual feed tray and insert a sheet of A4 plain paper between the paper guides.
3. Press and hold down the control button for at least five seconds.
4. The printer grips the paper and prints a cleaning page.
5. Return the printer on line by pressing the control button.
6. If subsequent printing appears faded or uneven, try replacing the toner cartridge.

B4350, B4350N, B4350NPS

1. Press the **Online** button to return the printer to offline status.
2. Open the manual feed tray and insert a sheet of A4 plain paper between the paper guides.
3. Press the **Menu** button repeatedly until MAINTENANCE MENU is displayed, then press the **Select** button.
4. Press the **Item** button until CLEANING PAGE is displayed.
5. Press the **Select** button.
6. The printer grips the paper and prints a cleaning page.
7. Return the printer on line by pressing the **Online** button.
8. If subsequent printing appears faded or uneven, try replacing the toner cartridge.

CLEANING THE LED ARRAY

Clean the LED array whenever a new toner cartridge is installed or if there are faded vertical areas or light printing down a page.

Wipe the LED array gently with the cleaning pad that came with the new toner cartridge or use an anti-static cleaning pad that is generally available for computer cleaning.

TROUBLESHOOTING

STATUS AND ERROR MESSAGES

Your printer has been designed to give you helpful status feedback not only during normal operation but also if a printing problem occurs so that you can take appropriate corrective action.

B4250, B4250N

Both status and error messages are displayed in your chosen language in the Status Monitor, error messages being accompanied by the appropriate flashing of the **Error** indicator. You can set the Status Monitor to pop up on your computer screen when an alert condition occurs from the Preferences tab in the Status Monitor.

B4350, B4350N, B4350NPS

The LCD on the printer operator panel provides the self-explanatory status and error messages in your chosen language. Error messages are accompanied by the Ready indicator being extinguished.

PAPER JAMS

Provided that you follow the recommendations in this guide on use of print media, and you keep the media in good condition prior to use, your printer should give years of reliable service. However, paper jams occasionally do occur, and this section explains how to clear them quickly and simply.

Jams can occur due to paper misfeeding from a paper tray or at any point on the paper path through the printer. When a jam occurs, the printer immediately stops, and the operator panel informs you of the event. If printing multiple pages (or copies), do not assume that having cleared an obvious sheet that others will not also be stopped somewhere along the path. These must also be removed in order to clear the jam fully and restore normal operation.

The printer may experience a paper jam in one of three areas.

- …◊ INPUT JAM - paper has failed to leave the selected feed tray and enter the internal paper path of the printer. A typical message indicates a paper jam and identifies the tray to check.
- …◊ FEED JAM - paper has entered the printer but failed to reach the exit. A typical message indicates a paper jam and advises you to open the top cover for access.
- …◊ EXIT JAM - paper has reached the exit but has failed to exit completely from the printer. A typical message indicates an exit jam and advises you to open the top cover for access.

INPUT JAM

1. Remove the paper tray from the printer.
2. Remove any crumpled or folded paper.
3. Remove any paper from the underside of the printer.
4. Replace the paper tray.

After successful removal of any damaged or misfed paper, the printer should continue printing.

FEED JAM OR EXIT JAM

1. Remove the tray and clear any misfed sheets as given above.
2. Open the top cover.

WARNING!

The fuser area will be hot. This area is clearly marked. Do not touch it.

CAUTION!

Never expose the image drum unit to light for more than 5 minutes. Never expose the image drum unit to direct sunlight. Always hold the image drum unit by the ends or from the top. Never touch the surface of the green drum inside the image drum unit.

3. Carefully lift out the image drum, complete with the toner cartridge. Be careful not to touch or scratch the green drum surface.
4. Remove any jammed sheets from the paper path.
5. Re-install the image drum complete with toner cartridge, ensuring that it correctly locates into the slots on each side of the printer.
6. Close the top cover and press down to latch it closed.

- The printer will warm up and commence printing when ready. The page lost through the jam will normally be reprinted.

NOTE

If the edge of the jammed paper protrudes (or can be seen) from the exit, reinstall the image drum, close the top cover and switch the printer on. Remove the jammed paper from the exit when the exit roller begins rotating after a few seconds after switching on. However, if the jammed paper cannot be removed, contact a service representative.

PRINT QUALITY PROBLEMS

Before consulting a service representative regarding a print quality problem, check the table below to see if there is a solution, or something you might have overlooked.

Symptom	Problem	Solution
Blank sheets printed.	Image drum cartridge not properly installed.	Reinstall image drum cartridge.
	Empty or missing toner cartridge.	Install new toner cartridge.
Entire page prints faintly.	Empty toner cartridge. Pages get fainter when toner is used up.	Install new toner cartridge.
	LED array is dirty.	Clean LED array.
Page has grey background.	Static electricity, generally from dry environments, causes toner to stick to background.	Change paper to a smoother laser bond or use a humidifier.
Page prints all black.	Hardware problem.	Contact service.
Page has repetitive marks.	Damaged image drum cartridge causes repetitive marks every 1.6 inches (4.06 cm) due to surface nicks and scratches.	Generate a cleaning page, repetitive marks may be temporary.
Oblong area of faint print appears on each page.	Drop out caused by using paper exposed to high humidity.	Change paper stocks, check paper storage environment or use a dehumidifier; check toner level.

Symptom	Problem	Solution
Vertical white streaking or faint areas on page.	Toner is low and does not distribute properly, or the drum is worn out.	Replace toner cartridge. Check drum and replace the drum, if necessary. Contact service.
	LED array is dirty.	Clean LED array.
Vertical black lines.	Hardware problem.	Contact service.
Fuzzy print.	LED array is dirty.	Clean LED array.
Distorted print.	Paper path, lamp assembly, or fusing unit problem.	Generate cleaning page. Contact service.
Faded print.	Toner cartridge is not correctly installed. Toner low.	Install toner cartridge correctly. Replace toner cartridge.
Smeared or blotched print.	Dirty rollers; toner dropped inside printer or image drum problem.	Replace image drum and toner. Contact service.
Printed page is light/ blurred.	Is toner low?	Replace toner cartridge.
	Is paper meant for laser printers?	Use recommended paper.
	LED array is dirty.	Clean LED array.
Bold characters and dark lines are smeared.	Toner is low.	Install new toner cartridge.
Print is darker than usual.	Darkness setting is too high.	Change darkness setting.
Pages curl excessively.	Printing on wrong side of paper.	Turn paper over in tray. (Note arrow on paper package). Install paper print side down in tray.
	Moisture in paper. Improper storage.	Avoid storing paper in areas of excessive temperature and humidity. Store paper in protective wrapping.
	High humidity.	Recommended operating humidity: 20-80%

SOFTWARE PROBLEMS

Your software (operating environment, applications and printer drivers) controls the printing process. Make sure you have selected the right driver for use with your printer. See your software documentation for more information.

Symptom	Problem	Solution
Printing is garbled.	Incorrect driver is installed.	Install an appropriate driver.
Printer's output is below rated speed.	Much of the printing delays will be caused by your application. Sometimes purely text documents will print slowly depending on the selected fonts and how they are transferred to the printer.	For maximum speed, use text in your document and use a printer resident font.
Size of top margin increases with each page printed.	Creeping text. Number of lines per page in software is not equal to number of lines per page of printer.	Many software packages assume 66 lines per page, but your printer's default is 64. Adjust software accordingly, or set LINES Per PAGE in the soft control panel to equal lines per page in your software.

HARDWARE PROBLEMS

Symptom	Problem	Solution
Graphic image prints partly on one page, partly on the next.	Insufficient printer memory for this image at this resolution.	Change the resolution, reduce the image size, or install more memory in your printer.
When you try to print nothing happens, but printer indicates it is ready to receive data.	Configuration error.	Check cable connection. If more than one printer is available, make sure your printer has been selected.
Garbage prints.	Incorrect cable configuration. Also, see Software Problems.	Check cable configuration, continuity, and length.
Printer freezes or displays error message when computer is rebooted.	Booting the computer while the printer is on can cause a communications error.	Turn printer off before rebooting computer.
Odours.	Gases are given off by forms or adhesives passing through the hot fusing unit.	Make sure the forms you use can withstand heating, and provide adequate ventilation.
Printer is on but must warm up before a job is printed.	Power Save mode is set on to conserve energy. The fuser must heat up before you can begin printing the next job.	To eliminate warm up delay, change Power Save setting

INSTALLING OPTIONS

The following options are available to extend the performance of your printer:

- …❖ 10/100 BASE-TX Network Interface Card: to make the B4250 and B4350 network compatible
- …❖ 16, 32, 64, 128, 256MB RAM DIMM: to extend the main memory of your printer and speed up the processing of large files
- …❖ RS232C Card: to provide serial interface capability for the B4250 and B4350
- …❖ Second paper tray: to increase your printer's paper handling capacity by 500 sheets (80g/m²)
- …❖ Multi-purpose tray: to extend the range of media your printer can accommodate (capacity 100 sheets (80g/m²) or 50 envelopes)
- …❖ One of the following can be added:
 - (a) 8MB Flash DIMM: to allow the storage of additional fonts or bar codes for the B4250, B4250n, B4350, B4350n
 - (b) 16MB Flash DIMM: to allow the storage of additional fonts or bar codes for the B4250, B4250n, B4350, B4350n
 - (c) PostScript PS level 3 DIMM: to add PostScript emulation to the B4350 or B4350n. Cannot be added in conjunction with extra flash memory.

The B4350 PS option is supplied as 2 DIMMs: a PS DIMM and a 16MB RAM DIMM. When fitted into a basic B4350 or B4350n (i.e. one with no memory upgrade already fitted) the PS DIMM will expand into the 16MB RAM DIMM in order to work, and the amount of memory available for general operation of the printer will therefore not change. It will remain at 16MB, which is the printer's base memory.

If you require to install a PS upgrade into a B4350 or B4350n which already has a memory upgrade installed, discard the 16MB RAM DIMM which ships with the PS option and install only the PS DIMM. The result will be that the amount of overall memory available to the printer will decrease by 16MB as the PS code expands into 16MB of RAM currently installed. For example, a user who already has 128MB installed (total memory is therefore $128+16=144$ MB) will fit only the PS DIMM and will then have 128MB of RAM left for printing.

INSTALLATION PROCEDURE

To install any of the above options, follow the detailed installation sheet that accompanies the option.


SPECIFICATIONS

GENERAL

A summary of the basic characteristics of your printer appears in the table below:

Item	Specification
Dimensions	See the following section entitled “Overall Dimensions”
Weight	9 kg approximately
Printing method	Electro-photographic printing using LEDs as light source
Print colour	Monochrome
Print speed	22 pages per minute maximum
Resolution	1200 x 600 dots per inch
Emulations	PCL6, PCL5e, Epson FX, IBM ProPrinter, Mac OS9, Mac OS X for B4250, B4250n, B4350, B4350n PCL6, PCL5e, Epson FX, IBM ProPrinter, Mac OS9, Mac OS X, PS for B4350nPS
Interfaces	Parallel port in compliance with IEEE 1284-1994 standard USB 2.0 full speed 100BASE-TX/10Base-T for B4250n, B4350n, B4350nPS Optional RS232C Serial interface
Processor	200 MHz PowerPC
Memory	16 MB expandible to 272MB
Paper sizes	A4, A5, A6, B5, Letter, Legal 13, Legal 14, Executive, Custom, Envelopes (5 types)
Paper feed	Automatic feeding via paper trays (including optional tray and optional multi-purpose feeder) Manual feeding of single sheets
Paper feed capacity at 80g/m ²	Tray 1: 250 sheets Optional Tray 2: 500 sheets Optional Multi-purpose feeder: 100 sheets
Paper output	Face up, Face down depending on paper size, type and thickness
Paper output capacity at 80g/m ²	Face up: 50 sheets Face down: 150 sheets
Monthly duty cycle	30,000 pages
Consumables	Toner cartridge, Image drum

OVERALL DIMENSIONS

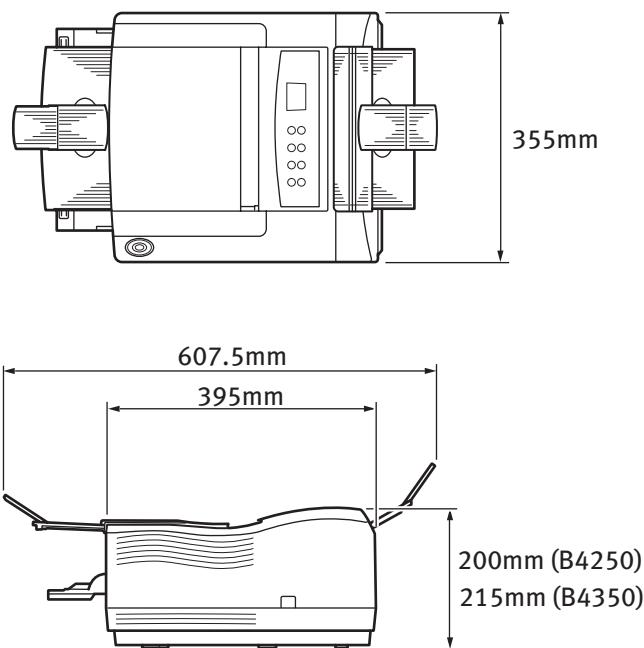

PAPER AND TRAY INFORMATION

Feed and ejection methods vary depending on the type, size and thickness of medium used. Use the chart below and the notes/symbols/terms on the following page for initial guidance. (Minor variations to settings may be necessary depending on user setup and environmental conditions.)

Paper type	Size	Weight	Feed				Ejection	
			Cassette			Method		
			T1	T2	MPF	MF	FU	FD
Plain paper	A4	L, ML, M	o	o	o	o	o	o
		MH, H	x	x	o	o	o	x
	Legal (13)	L, ML, M	o	o	x	o	o	o
		MH, H	x	x	x	o	o	x
	A6	L, ML, M	o	x	o	o	o	x
		MH, H	x	x	o	o	o	x
	Custom W: 90 – 216 L: 148 – 356	L, ML, M	o	o	o	o	o	o
		MH, H	x	x	o	o	o	x
Envelopes	Com-9 Com-10 DL C5 Monarch Custom W: 90 – 216 L: 148 – 356	–	x	x	o	o	o	x
Labels	A4 Letter	–	x	x	o	o	o	x
Transparencies	A4 Letter	–	x	x	o	o	o	x

NOTES/SYMBOLS/TERMS

Notes:

1. When an optional second paper tray is used, the original tray is referred to as Tray 1 and the optional tray as Tray 2.
2. It is not possible to use custom paper sizes with the PS emulation driver.
3. Tray 2 can accommodate paper with width of 148 to 216mm and length of 210 to 316mm.
4. Paper smaller than A5 (i.e. less than 210mm long) should be ejected face up.

Symbol/Term	Meaning
T1	Paper Tray 1
T2	Paper Tray 2 (optional)
MPF	Multipurpose Feed Tray (optional)
MF	Manual Feed Tray
FU	Face Up printing from the rear of the printer
FD	Face Down printing from the top of the printer
W, L	Width, Length in mm
L	Light paper weight: 59 - 66g/m ²
ML	Medium Light paper weight: 67 - 73g/m ²
M	Medium paper weight: 74 - 88g/m ²
MH	Medium Heavy paper weight: 89 - 104g/m ²
H	Heavy paper weight: 105 - 122g/m ²
o	Can be used
x	Cannot be used

INDEX

A

- Adhesive labels 34
- Advanced features
 - enabling or disabling 59

C

- Changing display language
 - B4250 22
 - B4350 31
- Cleaning page
 - B4250 68
 - B4350 69
- control button
 - B4250 17

D

- Display language
 - B4250 22
 - B4350 31
- Drum counter 68

E

- Envelopes
 - Printing 37
 - Types 33
- Exit paper jam 73

F

- Feed jam or exit jam 73
- Feed paper jam 73

G

- Generating a cleaning page
 - B4250 68
 - B4350 69

H

- Heavyweight paper or cardstock 38

I

- Image drum
 - Life 66
 - Replacing 66
 - Resetting counter B4250 68
 - Resetting counter B4350 68
- Input paper jam 73
- installed options
 - Macintosh 46
 - Windows 45
- Installing
 - Paper 35
- installing drivers
 - Macintosh 46
 - Windows 45
- Installing paper 35
- installing status monitor 45
- interface
 - network 43
 - parallel 43
 - serial 43
 - USB 43

L

- Labels 34
- LCD
 - B4350 23
- LED array 70
- LED indicators
 - B4250 16

M

Maintenance

Cleaning LED array 70

Cleaning page B4250 68

Cleaning page B4350 69

media settings

B4250 39

B4350 40

menu functions

B4250 22

B4350 24

menu settings

B4250 22

B4350 32

Menus

FX menu 27

Information menu 24

Maintenance menu 30

Media menu 25

Memory menu 30

Network menu 29

Parallel menu 28

PCL menu 26

PPR menu 27

Print menu 25

RS232C menu 28

System adjustment menu 30

System configuration menu 26

Usage menu 31

USB menu 29

O

operator panel

B4250 16

B4350 23

options

installing 78

P

Page orientation

setting in Windows 49, 52

Paper

Envelope types 33

Exit jam 73

Feed jam 73

feed sequence 37

Input jam 73

Installing 35

Label types 34

Paper types 33

size setting in Windows 48

Transparencies 34

tray selection in Windows 48

Paper and envelope types 33

paper and trays 82

Paper jams 72

Power on LED

B4250 16

Preferences Menu 21

Print order

face down printing 36

face up printing 36

Print quality problems 74

Print settings

how to save 49

printer components 12

Printer default settings	
Windows defaults	56
printer features	7
Printing	
Cardstock	38
Envelopes	37
Heavyweight paper	38
Label types	34
Paper & envelope types	33
Quality problems	74
Transparencies	39
Transparency types	34
Priority	
print queue priority	57
R	
Ready LED	
B4250	17
B4350	23
Resolution	
setting in Windows	49, 55
S	
Separator page	
separating print jobs on a shared printer	59
Software problems	77
specifications	
general	80
paper and trays	82
Spooling	
Windows settings	58
status & error messages	
B4250	71
B4350	71
status monitor	19
support materials	9
T	
Toner	
Cartridge life	63
how to replace	64
Replacing	64
Troubleshooting	
Hardware problems	77
Paper jams	72
Print quality problems	74
Software problems	76
U	
user's guide	
printing	10
viewing	9
W	
Watermark	
printing in Windows	49, 55

OKI CONTACT DETAILS

Oki Systems (UK) Limited

550 Dundee Road
Slough Trading Estate
Slough, SL1 4LE

Tel: 44 (0) 1753 819819
Fax: 44 (0) 1753 819899
<http://www.oki.co.uk>

Oki Systems Ireland Limited

The Square Industrial Complex
Tallaght, Dublin 24, Ireland

Tel: +353 1 4049590
Fax: +353 1 4049591
<http://www.oki.ie>

OKI Systems (Ireland) Ltd

40 Sydenham Park
Belfast, BT4 1PW

Tel: +44 44 (0)28 90 20 1110
<http://www.oki.ie>

Technical Support for all of Ireland:

Tel: +353 1 4049570
Fax: +353 1 4049555
E-mail: tech.support@oki.ie

Oki Data Corporation

4-11-22 Shibaura, Minato-ku,
Tokyo 108-8551, Japan

Tel: (81) 3 5445 6158
Fax: (81) 3 5445 6189
<http://www.okidata.co.jp>

Oki Data (Singapore) Pte. Ltd.

78 Shenton Way, #09-01,
Singapore 079120

Tel: (65) 221 3722
Fax: (65) 421 1688
<http://www.okidata.com.sg>

Oki Systems (Thailand) Ltd.

956 Udomvidhya Building 6th
Floor, Rama IV Rd., Bangkok
10500, Thailand

Tel: (662) 636 2535
Fax: (662) 636 2536
<http://www.okisysthai.com>

Oki Hong Kong Limited

Suite 1909, Tower3,
China Hong Kong City,
33 Canton Rd., Tsimshatsui,
Kowloon, Hong Kong

Tel: (852) 2736 0130
Fax: (852) 2376 3725

The IPL Group

63-85 Victoria Street
Beaconsfield NSW 2015,
Australia

Tel: (61) 2 9690 8200
Fax: (61) 2 9690 8300
<http://www.oki.com.au>

Comworth Systems Ltd.

10 Constellation Drive Mairangi
Bay, Auckland,
New Zealand

Tel: (64) 9 477 0500
Fax: (64) 9 477 0549
<http://www.comworth.co.nz>

B4250/B4350

OKI

 *OKI Network Solutions*
for a Global Society

OKI EUROPE, PART OF OKI ELECTRIC

CENTRAL HOUSE
BALFOUR ROAD, HOUNSLAW
TW3 1HY
UNITED KINGDOM
TEL +44 (0) 20 8219 2190
FAX +44 (0) 20 8219 2199

07053501 Iss.01